

NO NOISE. ONLY YOUR VOICE.

www.invisioheadsets.com

Product Information

Read all safety information below, as well as the operating instructions for the INVISIO headset and the communication terminal before use to avoid injury.

Basics

When not in use:

- Never apply pressure to the Bone Conduction Microphone (BCM).
- Keep clean and store in dry conditions.
- Keep BCM away from sharp objects.
- Always store the headset in the supplied protective case.

Handling

Do not drop, disassemble, open, crush, bend, deform, puncture, shred, microwave, incinerate, paint, or insert foreign objects into the headset. Do not expose to direct sunlight or extremely high or low temperatures for prolonged periods of time. Do not use harsh chemicals, strong detergents or solvents/corrosives to clean or submerge the product in such solutions. When not in use, keep in a safe place where it will not be bent or crushed.

Avoiding Hearing Damage

Permanent hearing loss may occur if the headset is used at high volume. Set the volume of your communication terminal to a safe level. You can adapt over time to higher volume of sound that may sound normal, but can be damaging to your hearing. If you experience ringing in your ears or muffled speech, discontinue use and have your hearing checked. The louder the volume, the less time is required before your hearing could be affected.

Health and Hygiene

In between use and before transferring a headset from one person to another, use an alcohol free antiseptic cleaning solution to clean the headset.

Cleaning

The headset should be cleaned on a regular basis, using a soft tissue or cloth containing ordinary water or a mild non-alcohol detergent. By gentle cleaning make sure the loudspeaker tube is never blocked. Always clean with disinfectant before use by other persons.

Repairing

Never attempt to repair, disassemble, or modify the headset yourself. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. The user should not attempt to service the headset beyond that described in the User Guide. All other servicing should be referred to a qualified service professional.

Disposal

Do not dispose of this product as normal household garbage at the end of its life cycle; bring it to a collection point for the recycling of electrical and electronic appliances. Please inquire at your local community administration for an authorized disposal location.

Potentially Explosive Atmospheres

Do not use the headset when in any area with potentially explosive atmosphere, unless it is certified intrinsically safe (ATEX/FM).

Limited 1-Year Warranty

INVISIO Headsets A/S warrants that this product is free from defects in design, material and workmanship that can result in malfunction of the product during normal use. The warranty period is one (1) year from the purchase date of the product.

1. The warranty is only valid under the following terms and conditions:
The warranty applies to the consumer on the original receipt from the dealer and cannot be transferred or re-assigned to another consumer.
2. When returning the product for repair or replacement proof of purchase MUST be provided.
3. During the warranty period, the product can either be repaired or replaced, and this will be based on the judgment of personnel authorized by INVISIO Headsets A/S. After replacement or repair, the product is warranted for the remaining time of the original warranty period.

This warranty does not cover defects due to:

1. Adjustments, modifications, disassembly or any alteration of the product done by personnel not authorized by INVISIO Headsets A/S.
2. Accidents, exposure to liquids and food, moisture, extreme high or low temperatures or environmental conditions. Exceptions are products specifically rated waterproof or flame retardant.
3. Misuse of the product e.g. damages to the Bone Conduction Microphone, wrongful installation, breaking covers and casing by using force, etc.
4. Conditions due to normal wear and tear when using the product e.g. rechargeable batteries have a limited lifespan and performance is gradually reduced over time. Soft Springs broken after extensive use.

There are no expressed warranties neither written nor oral other than this warranty. In no event shall INVISIO Headsets A/S or its vendors be liable for incidental or consequential damages of any nature whatsoever, including but not limited to commercial losses, Force Majeure or special contracts/deals.

The Soft Spring™ system and the Bone Conduction Microphone Technology are patents of INVISIO Headsets A/S. INVISIO Headsets A/S reserves the right without notice to make changes to specifications for existing products and to discontinue existing products.

User Guide

INVISIO®


INVISIO®

Please read before using your headset.

Product Description


This headset uses the INVISIO patented Bone Conduction Microphone (BCM) which detects sound, in the form of vibrations transmitted through the jaw bone, providing you with an outstanding freedom to communicate efficiently, even in the noisiest environments.

More information about INVISIO products, can be found at: www.invisioheadsets.com

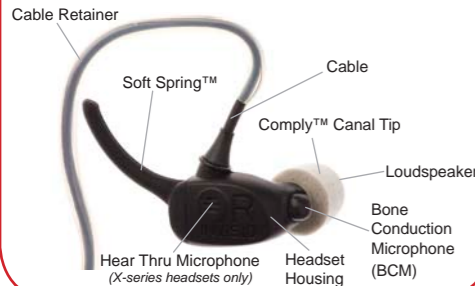

Fitting Headset

Inspect your headset for Left or Right ear usage. The instructions below are for Right ear usage. Try all 3 sizes of Comply™ Canal Tips to find the correct size and provide seal and comfort in your ear canal. They are available as spare parts and are to be exchanged regularly.

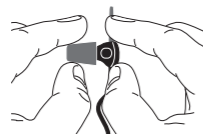

1. Screw a new Canal Tip on securely, holding the headset as shown. Roll and compress the foam into a thin round crease-free cylinder.

2. With the foam compressed, hold the headset with your thumb and first two fingers and the Soft Spring pointing upward and forward with the loudspeaker toward your ear.



3. Push the headset into your ear with a twisting motion counter clockwise until the Canal Tip is completely within the ear canal and the BCM has contact with the ear canal.



4. **The BCM must touch the ear canal and not be externally visible (behind the tragus).** Hold the headset in place for 15 - 30 seconds until the Canal Tip expands.

5. Use your index finger to push the Soft Spring into the upper bend of your ear. Place the Cable Retainer behind your ear.



Fitting Soft Spring™

The Soft Spring™ ensures a secure headset attachment and also a consistent pressure on the BCM. There are two sizes supplied with headset, 1 large and 1 small. Please try both sizes to ensure the correct fit and shorten with scissors if required.



1. The Soft Spring is fitted on the rear of the headset with the tip pointing upward towards the cable.

2. Push the Soft Spring onto the mushroom shaped holder so that it is secure.




Fitting Cable Retainer

The Cable Retainer ensures that the cable is held comfortably and securely over the ear. The Cable Retainer is pre-fitted on the headset and the following instruction is to remount the Cable Retainer.



1. Begin approximately 50mm (2 inches) from the headset.

2. Press the cable firmly into the Cable Retainer using your thumb and index finger. You may use a small stick in front of the cable to open tube.

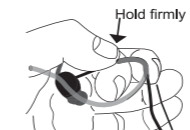


3. Hold the cable and the Cable Retainer firmly. Drag the cable into the Cable Retainer, gradually moving the fix point along the Cable Retainer.

Drag



4. Use your thumb and index finger to press the cable into the last section of the Cable Retainer.

5. Keep approximately 5 to 10mm (0.2-0.4 inch) distance from the headset to the Cable Retainer.

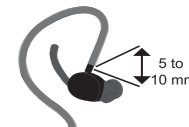

Comply Canal Tips Comply is a trademark of Hearing Components. Manufactured under Hearing Components U.S. Patent numbers 4,880,076 and 5,002,151 -and international equivalents.

© 2008 INVISIO Headsets A/S. CUP10197-1
INVISIO is a registered trademark of INVISIO Headsets A/S.
info@invisioheadsets.com - www.invisioheadsets.com