

100mm

120g双铜纸正反印刷



RIDER TRANSFORMER USER MANUAL

Thank you for your purchase of the world's first telescope vv mod--Rider Transformer! We hope you enjoy using this product and make full use of its features. Please read the user manual carefully.




The Rider Transformer Features:

- *Telescope design: This makes the device fit 18650, 18490, 18350 protected/unprotected batteries.
- *Adjustable airflow: By adjust the air flow, you can enjoy different smoking feeling, airy or tight.
- *Variable voltage: The device operates between 3.0-6.0v by 0.1 increment.
- *Regulated output: This keeps the voltage the same with each inhalation regardless of your remaining battery power.
- *On/Off button (the red one): When not in use, press it for 3 seconds, the device will turn off.
- *Short Circuit/Atomizer Protection: The device will turn off if a short circuit occurs and will not reactivate until the problem has been resolved.
- *Reverse battery Protection: Protects against reverse battery installation
- *Battery Monitoring, over-discharge protection: The Rider Transformer monitors the battery voltage and automatically turns off when the battery is discharged.
- *Low power warning : LCD will blink 10 times to warn that inner battery is low power ,need to recharge .
- *Atomizer resistance Monitoring: You can see what resistance your atomizer is.
- *510/ego fitting: fit most 510, ego atomizers.
- *Can drive 1.0-5.0ohm atomizers: The device works with both low and high resistance atomizers.
- *Vent hole: A hole on the bottom of the device for added safety and allow heat to dissipate from the battery, do not cover.

180mm



How to Operate The Rider Transformer

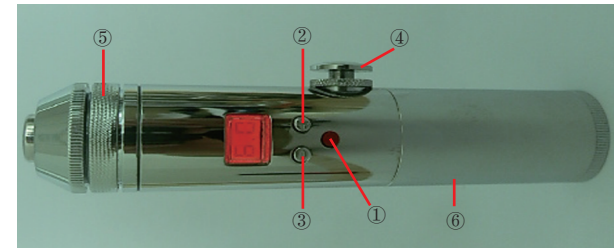

1, Power lock button:

- Hold this button for 5 seconds to lock the battery, and again for 5 seconds to turn on.
- Click this button 5 times in 3 seconds, the LCD will display the battery voltage.

2, "+" button: Press this button to increase the voltage by 0.1v increment in the LCD. Once the voltage display reaches 6.0v the display will cycle back to 3.0v.

3, "-" button: Press this button to decrease the voltage by 0.1v decrement. Once reached 3.0v, it will cycle back to 6.0v.

4, The activation button:

- Hold this button, and inhale the atomizer to enjoy vaping. When hold it over 10s, the device will shut off, release and hold it, it will active again.
- Clicking 5 times in 3 seconds, the LCD will display the atomizers resistance.

5, Air valve: Screw the air valve clock wise, less air will come into the atomizer when inhale. screw it anticlockwise, more airy will run into the atomizer.

6, Telescope: Screw it anticlockwise to adjust a proper room for 18650, 18490, 18350 protected/unprotected batteries.

WARNING:

- * The Lithium batteries may vent if exposed to extreme temperatures. Do not discard it in open fires.
- * Never use your Rider Robust device in high humidity conditions like bathrooms, as water saturation can be hazardous.
- * If you are carrying the device in your pocket, it is best practice to switch off and unscrew the atomizer.

**KEEP YOUR RIDER TRANSFORMER DEVICE AND ACCESSORIES
IN SAFE PLACE AND OUT OF REACH OF CHILDREN!**

