


salontech™

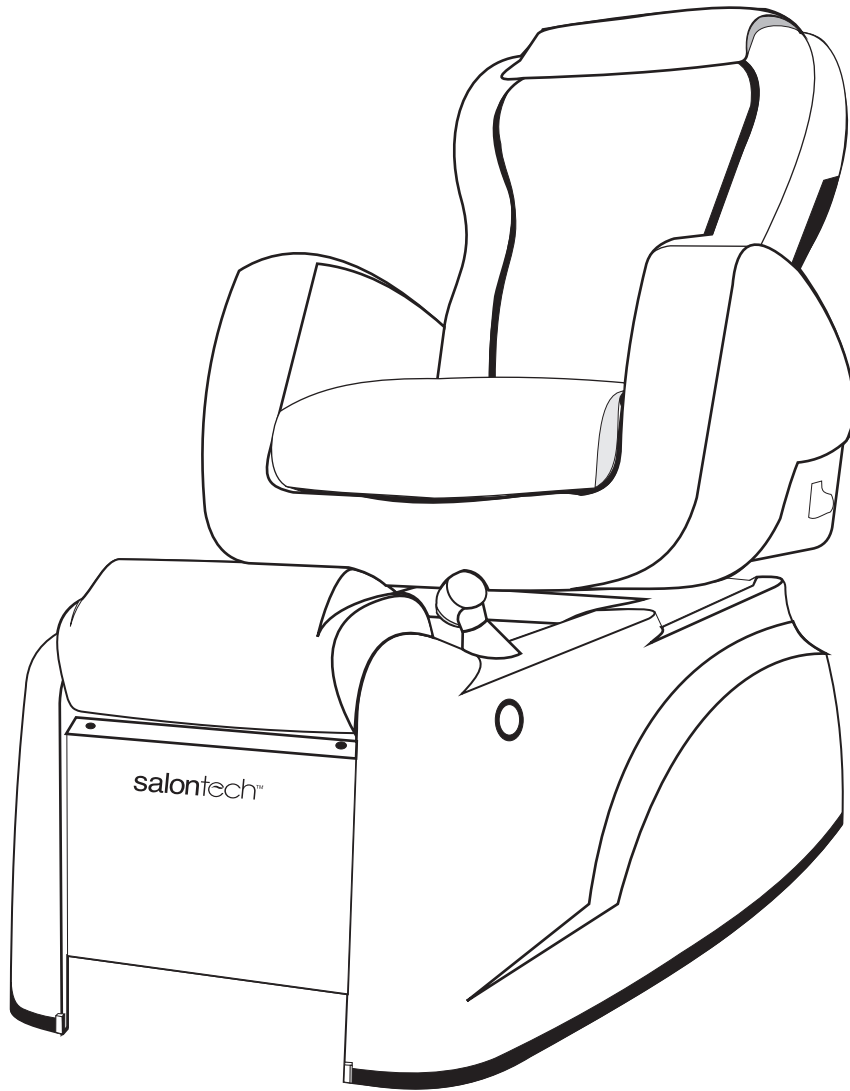

Pedi **Joy**

Whirlpool Pedicure Spa
Manual



Thank you for choosing **salontech™**, the leading manufacturer well known worldwide for its innovation and design in pedicure spas. **salontech™** takes pride in bringing you quality products that meet today's demand for safety and service. The *Pedi Joy* Whirlpool Pedicure Spa has been designed for dependability, and to benefit all with a health conscious clientele.

PLEASE TAKE TIME TO READ THIS MANUAL THOROUGHLY BEFORE USE. If you have any questions or problems with your pedicure spa, please contact our Customer Service and Technical support at 516-484-4937, Monday thru Friday 9AM - 5PM, or email us at info@salontech.com

Important requirements

salontech™ Requires that you contact your local, licensed plumber and licensed electrician to install your new spa. Installation **MUST** be in compliance with all local and state building codes. Your pedicure spa can not operate efficiently or safely unless it is provided with adequate electrical power, sufficient water pressure, proper water temperature, and required drainage capabilities. Contact your local building inspector for information and local code compliance procedure that need to be followed when having your new pedicure spa installed. Subsequent inspections and approvals that may be required are the responsibility of the purchaser.

Shipment Inspection

Examine the components immediately upon arrival to make sure no damages to the pedicure spa base and chair during the shipment. It is very important that you notify the driver directly on the face of the freight bill or bill of lading of any damage. Failure to note damage on the bill of lading may prevent any claims you may have against the carrier.

If concealed or damage is found, you **MUST** notify the carrier at once and request an inspection. You do so at your own risk and expense. **DO NOT DISCARD THE SHIPPING CARTON** until you give the carrier a clear receipt of goods that have been damaged in transit.

Precaution

- Do not stand in the basin of the spa.
- Excessive water temperature is dangerous and should be checked before use. Maximum water Temperature should not exceed 150F (65C).
- Always enter and exit the spa slowly and carefully.
- Never bring or operate any electrical device near pedicure spa.
- The unit has a weight capacity of 250 pounds.

Health Warning

Individuals whose feet or legs are inflamed or have open wounds should not be allowed to use the pedicure spa at any time. The technician should advise clients to consult their physician before using the spa if there is any sign of fungal infection, swelling, fracture, or persistent pain. In some cases diabetics may experience improved circulation in their feet, but should first consult their physician prior to receiving a pedicure.

If the client experiences any pain or discomfort, discontinue the use of the pedicure spa immediately.

salontech™

Pedi Joy Whirlpool Pedicure Spa

IMPORTANT INFORMATION


Serial Number: _____

Order Number: _____

Installed by: _____

Installation date: _____

Chair Serial Number _____

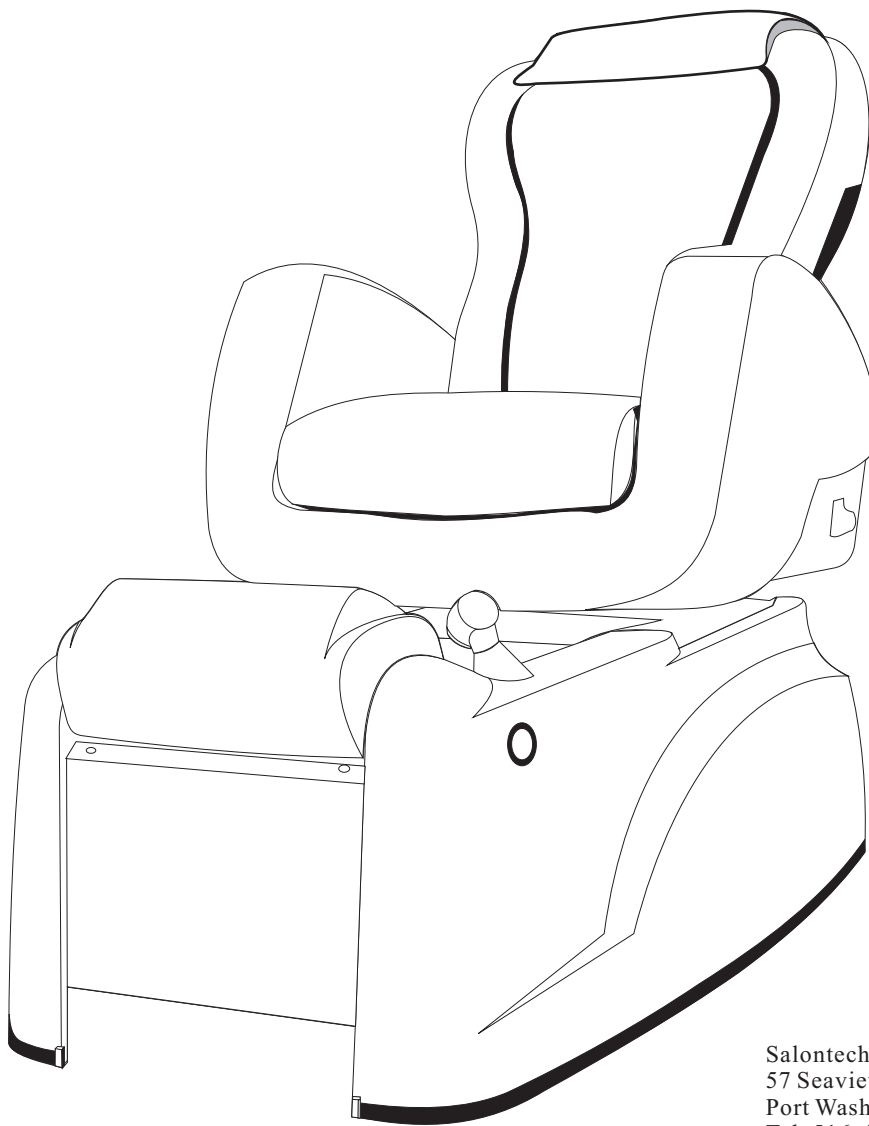

Salontech LLC
57 Seaview Blvd.
Port Washington, NY 11050
Tel: 516-484-4937
Fax: 516-484-4938
www.salontech.com
info@salontech.com



Important Considerations

Electrical Service

A 110V, 60 Hz, 15 Amp GFCI protected grounded circuit must be used to supply power to each individual pedicure spa.

Water Supply

All plumbing connections must conform to local codes.

Water supply to the spa should be provided with adequate water pressure and water temperature.

Water pressure

To fill the basin correctly up to level, Normal water pressure of 30 to 80 P.S.I is required.

Water temperature

The hot water supply temperature must not exceed 140°. Adjust your hot water accordingly. For hot and cold water supply fittings and drain fittings location, see below diagram .Carefully connect the water supply line to the appropriate fittings located on the rear of the pedicure spa.

Back flow Preventive Device

All pedicure spas are pre-installed with Dual Back flow Preventive Device for the following state; CA, AZ, NV, OR, WA, and NE

Specification

Back flow preventive device for faucet: Vacuum Breaker comply with ANSI/NSF - 61-2000, ASMB A112.18.1-2000, ASSE 1014 and CSA standard - B125.98.


ANSI/ASME A112.18.3M (performance requirements for back flow preventive device and systems in plumbing fixture fittings) is applicable to plumbing fixture fittings with outlets not protected by an air gap. Included in the possible range of applications are fittings with hose connected outlets, fitting with pull out spout, hand held showers, shampoo fittings and deck mounted fittings. ASME A112.18.3M is now referenced in ASME A112.18.1M (plumbing fixture fittings) and CSA B125. Back flow preventive devices are listed to both standards with the Canadian standard association, IAPMO and UL.

ANSI - American National Institute, ASME - American Society of Mechanical Engineers, CSA - Canadian Standard Association IAPMO - International Association of Plumbing and Mechanical Officials, UL - Underwriters Laboratory

Drain Facilities

The pedicure spa Drain must meet local plumbing codes. **Check valve for Drain (not Provided) Must be installed by a licensed plumber.**


PLUMBING CONNECTIONS

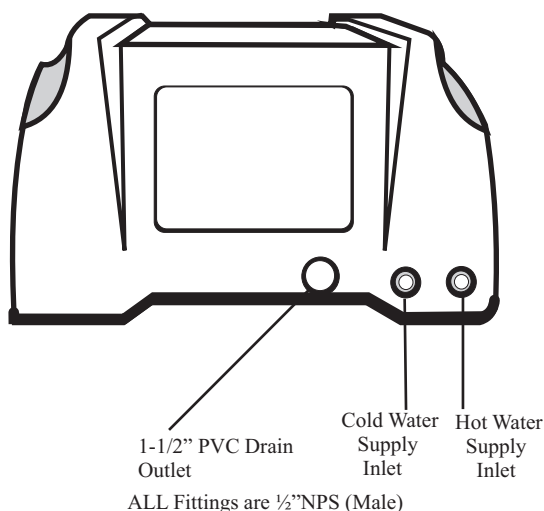

Back of the pedicure spa

Caution


Please DO NOT lift or move the Spa with faucet handle

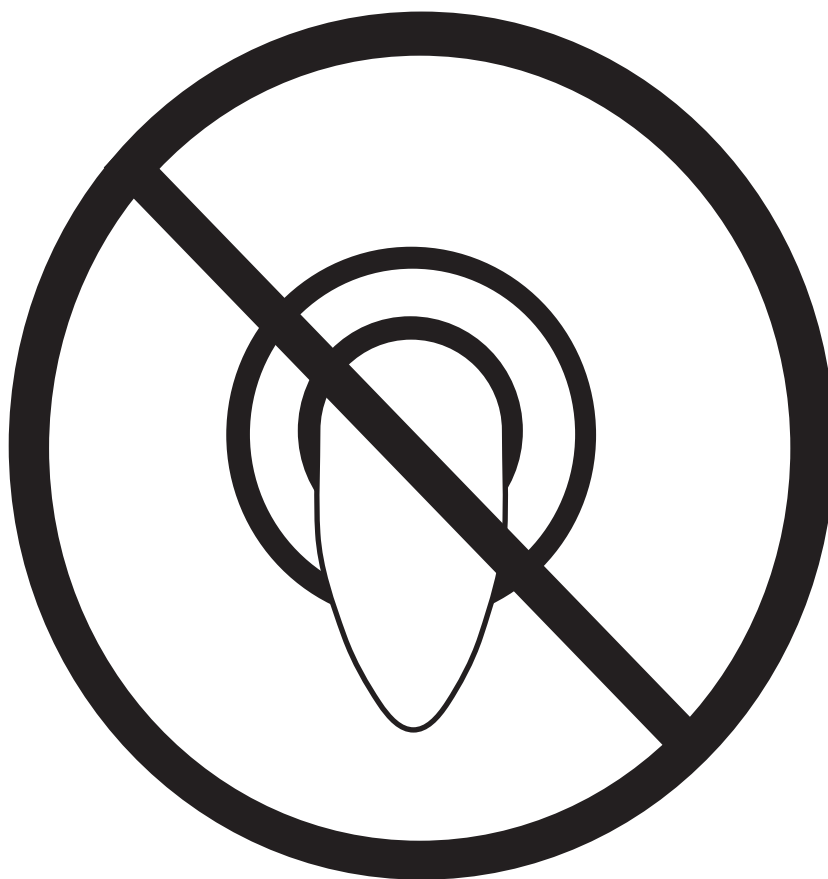

Warranty will be null and void.

Pedi Joy

Identifying components

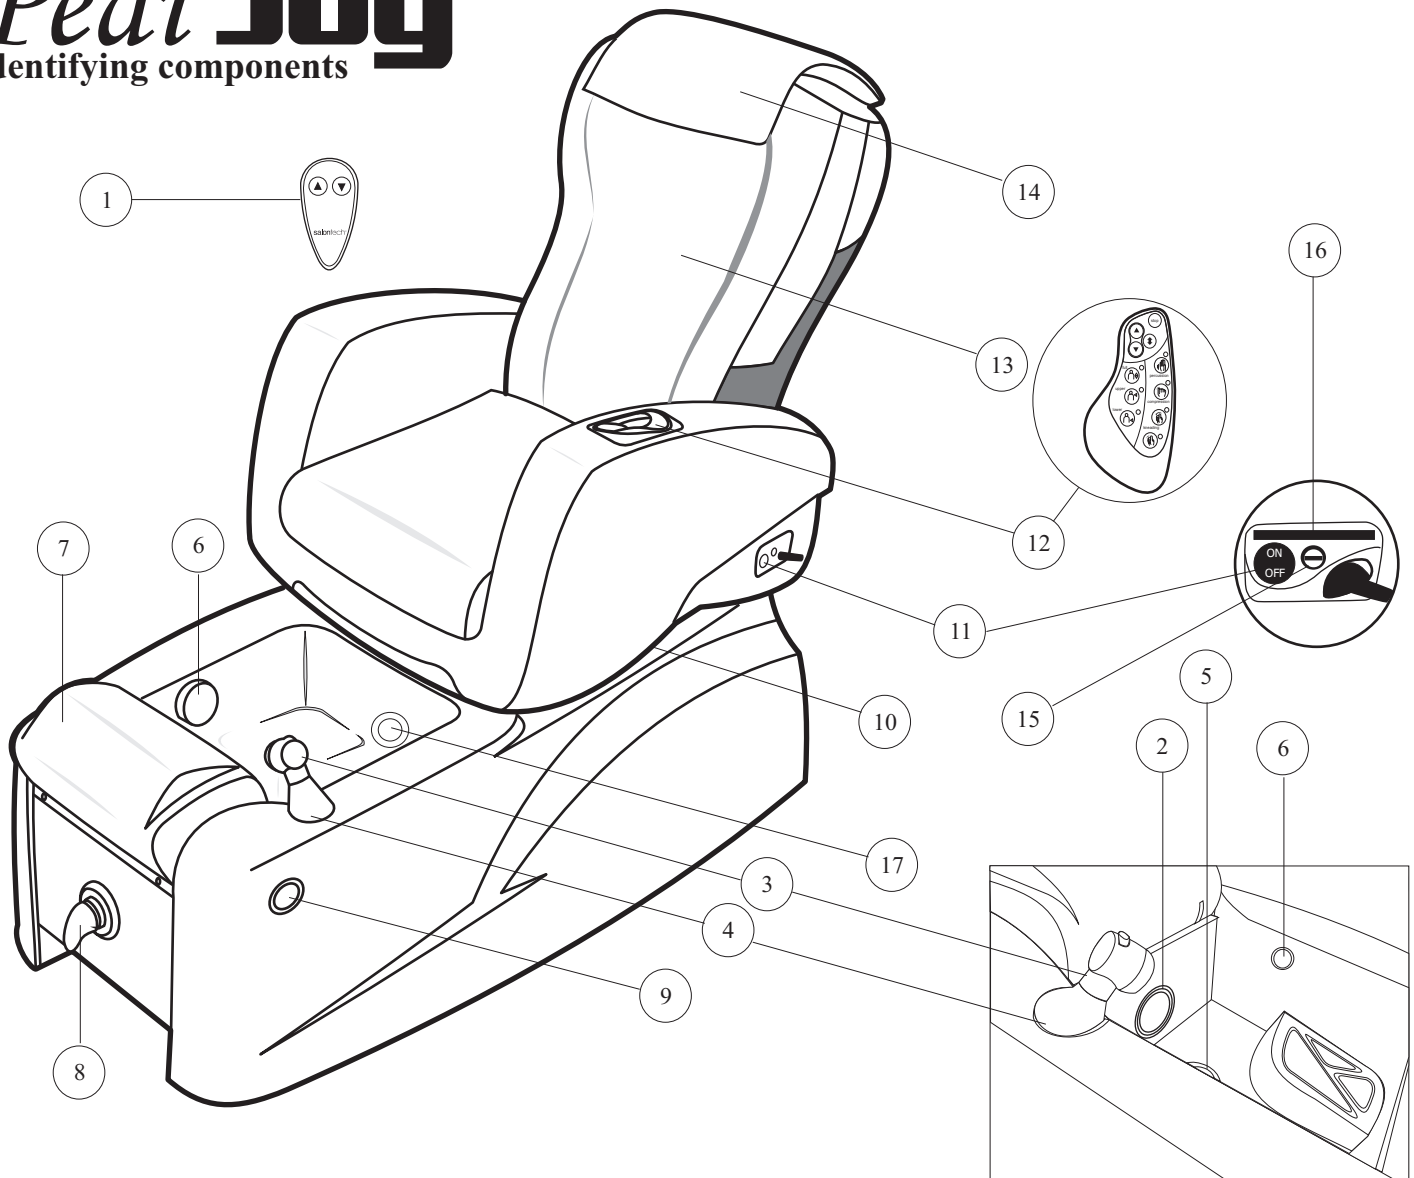

Components



- | | |
|---|---|
| 1 - AUTO SLIDER REMOTE CONTROL (AUTOMATIC SLIDER) | 11 - MASSAGE MAIN ON/OFF SWITCH |
| 2 - CLEAN PIPELESS JET / CLEAN JET COVER | 12 - MASSAGE AND BUILT IN RECLINER REMOTE CONTROL |
| 3 - SHOWER SPRAYER | 13 - BACKREST |
| 4 - SHOWER STAND | 14 - HEAD PILLOW |
| 5 - DRAIN PLUG | 15 - FUSE FOR MASSAGE SYSTEM |
| 6 - OVERHEAD WASTE KNOB | 16 - I-JOY CHAIR SERIAL NUMBER |
| 7 - ADJUSTABLE FOOTREST | 17 - LED LIGHT SYSTEM |
| 8 - FAUCET | |
| 9 - ON/OFF WHIRLPOOL AIR ACTIVATE BUTTON | |
| 10 - MANUAL SLIDER LEVER (MANUAL SLIDER) | |

Due to continuous improvements on all our products, specification, characteristics, packing, color, designs re subject to change without notice

Pedi Joy

Specification (PipeLess Clean Jet System)

Dual Clean Pipeless System
with Adjustable air control system for powerful whirlpool action

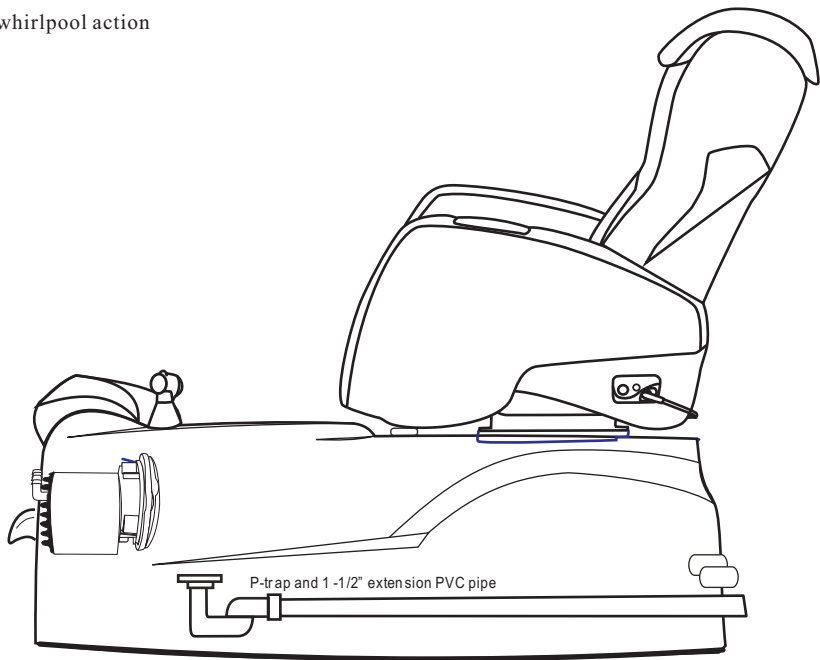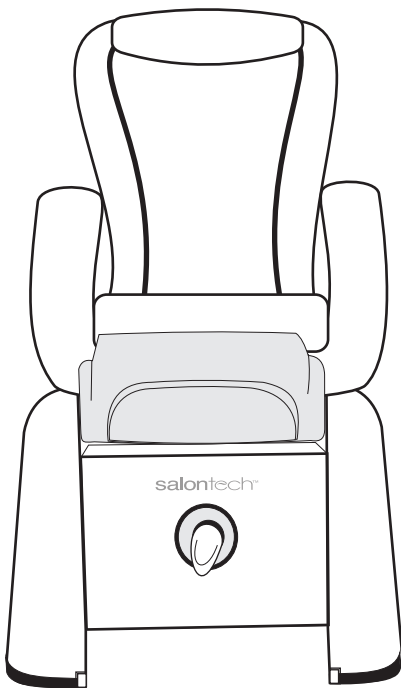


Specification (PipeLess Clean Jet System)

Dimension & Weight	Pedi-Joy (Base unit)	58"L x 32"W x 21"H Shipping Wt. 130 Lbs
	Pedi-Joy (Chair)	52"L x 32"W x 21"H Shipping Wt. 115 Lbs.
	Stool	20"L x 12"W x 17"H Shipping Wt. 18 Lbs
Capacity of Tub		4.25 US Gallon
Switch		On/off Air Activate switch
Whirlpool	Clean Jet	Hydro therapeutic clean pipeless system with dual directional flow system
	Air Control	Air induction system
Power Source	Motor	115V 1.25 Amp
	Discharge Pump (optional)	115V. 3.2 Amp. 60Hz
	Massage System	110V-120V 60Hz 90W 5Amp
Plumbing Source	Hot Water	½ inch (fitting pre-installed)
	Cold Water	½ inch (fitting pre-installed)
	Drain	1-1/2 inch (see plumbing instruction)
Warranty	Unit	One Year (see warranty)
	Optional Item	180 days

Due to continuous improvements on all our products, specification, characteristics, packing, color, designs are subject to change without notice.

Pedi Joy

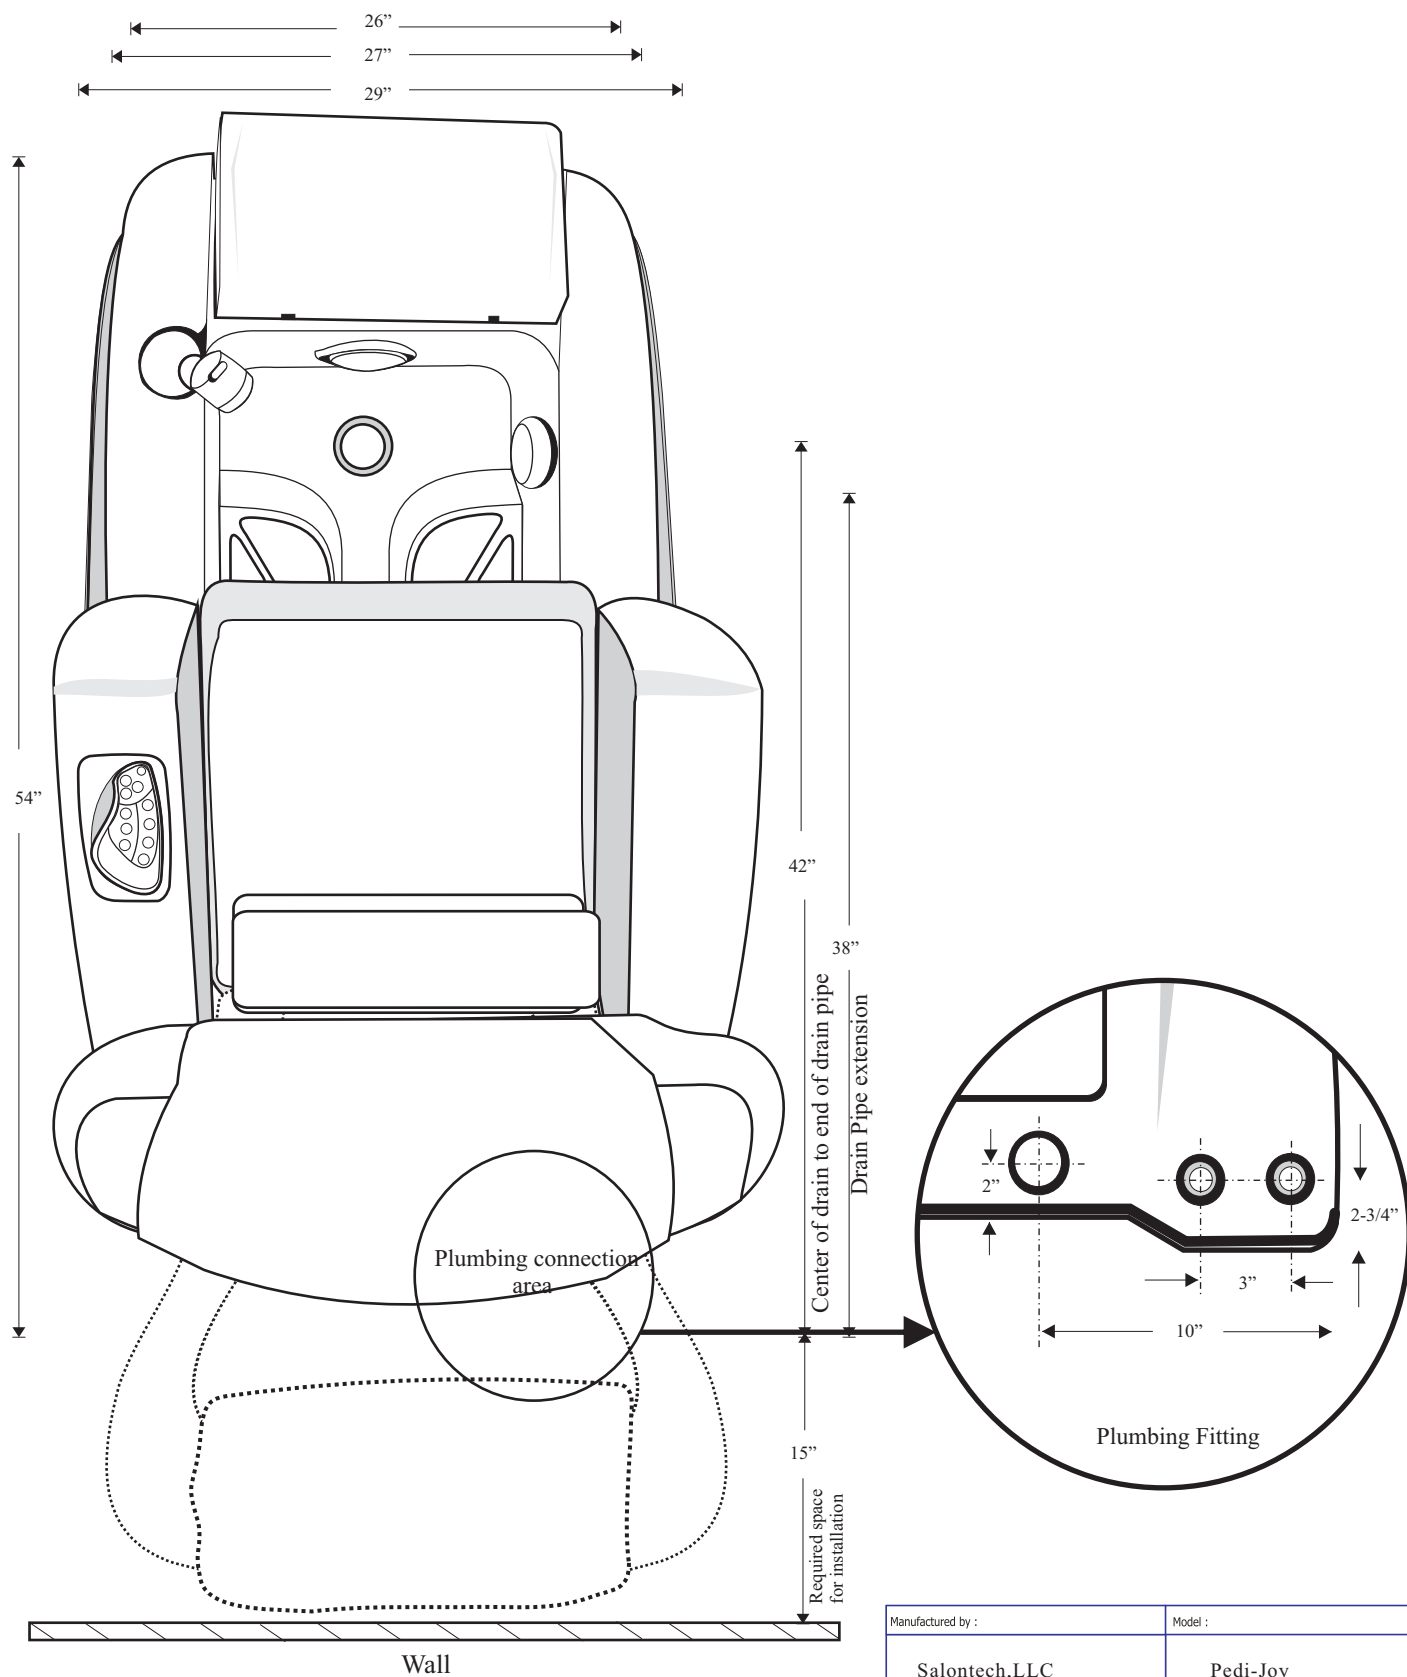

Manufactured by :	Model :
Salontech,LLC	Pedi-Joy
Dimensions:	Prepared by :
Top / Rear view	Salontech,LLC

Installation Specifications Summary

Warning: Failure to comply with federal, state or local codes and ordinances will result in warranty being null and void.


As stated, the pedicure spa installation must comply with all plumbing and electrical codes. A licensed plumber and licensed electrician must complete the applicable connections of the pedicure spa.

Location and support


Select a level location. The floor structure beneath the pedicure spa must be capable of supporting the occupied pedicure spa.

For the seat back to fully recline, the pedicure spa base must be mounted 15 inches from the wall as shown below:


How to use adjustable footrest

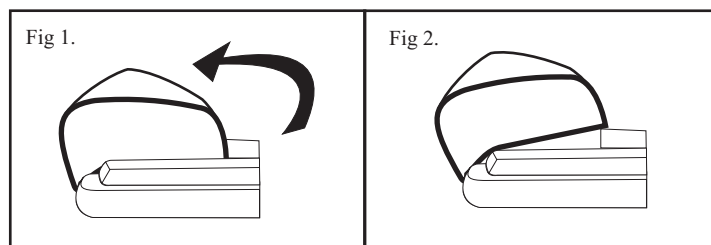

Place left hand on the back of the footrest and gently pull up toward to front as shown Fig.2

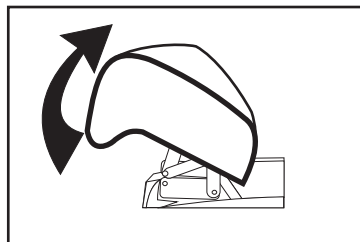

And place right hand on the front of the footrest, gently pull up for desirable height and use locking lever to secure the footrest.

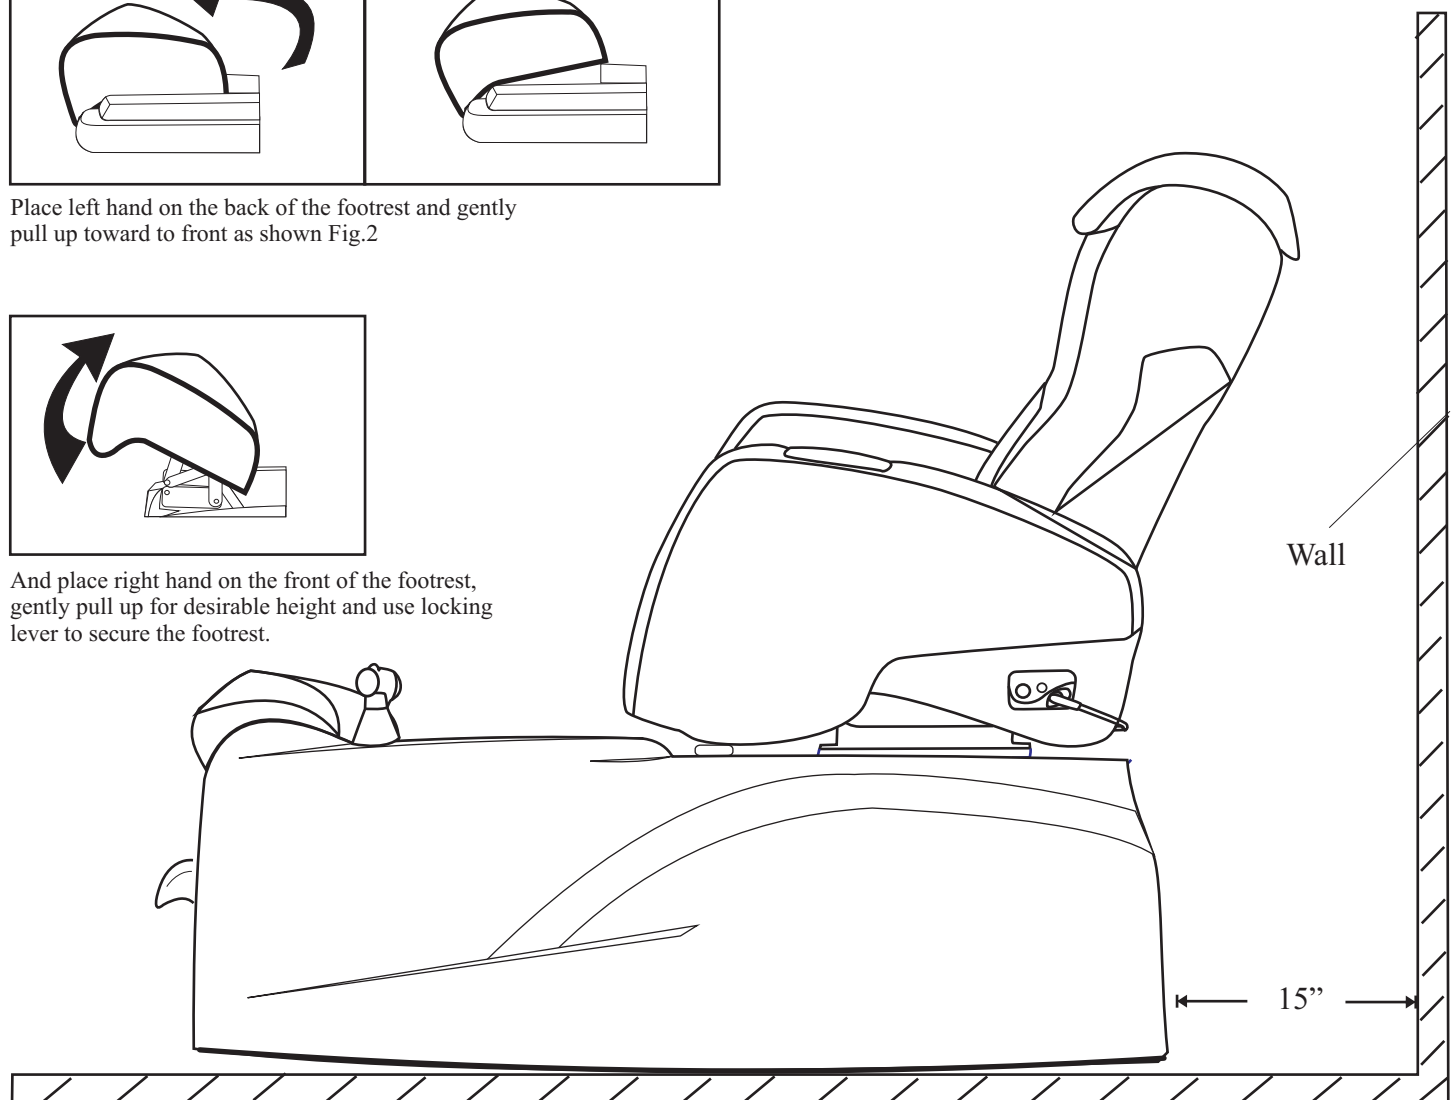


Due to continuous improvements on all our products, specification, characteristics, packing, color, designs are subject to change without notice.

Pedi Joy


Note:
The requirement for the vacuum breaker varies from state to state and province to province, Please consult with the licensed plumber.

Note: Plumber must utilize hot & cold water valves


Floor Drain

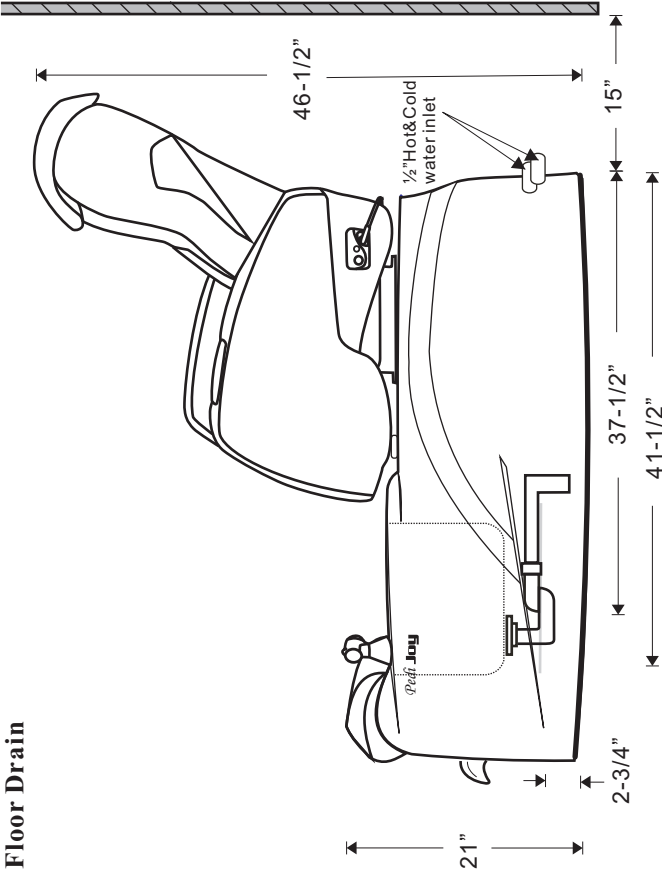

Power Drain
Manufacturer installation recommended

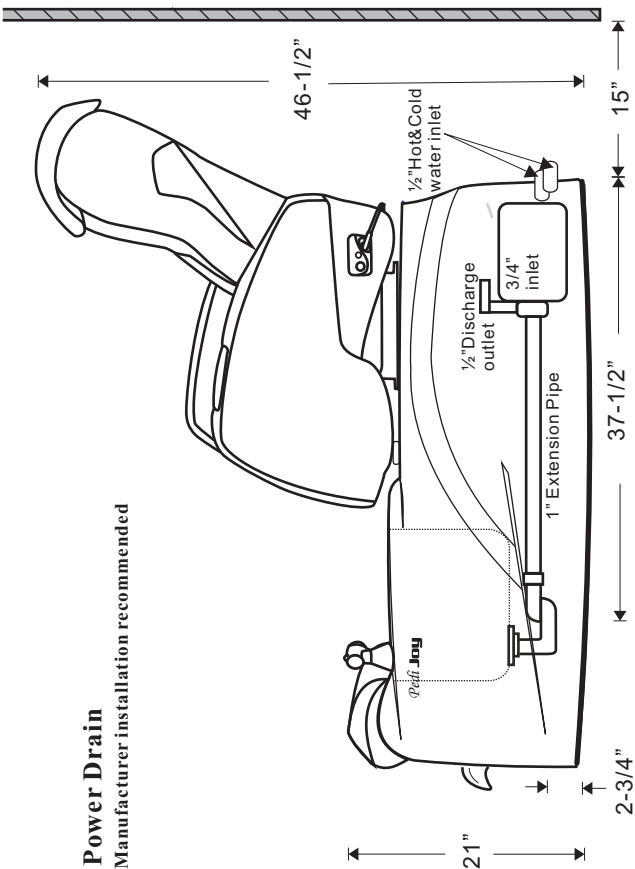

Wall Drain



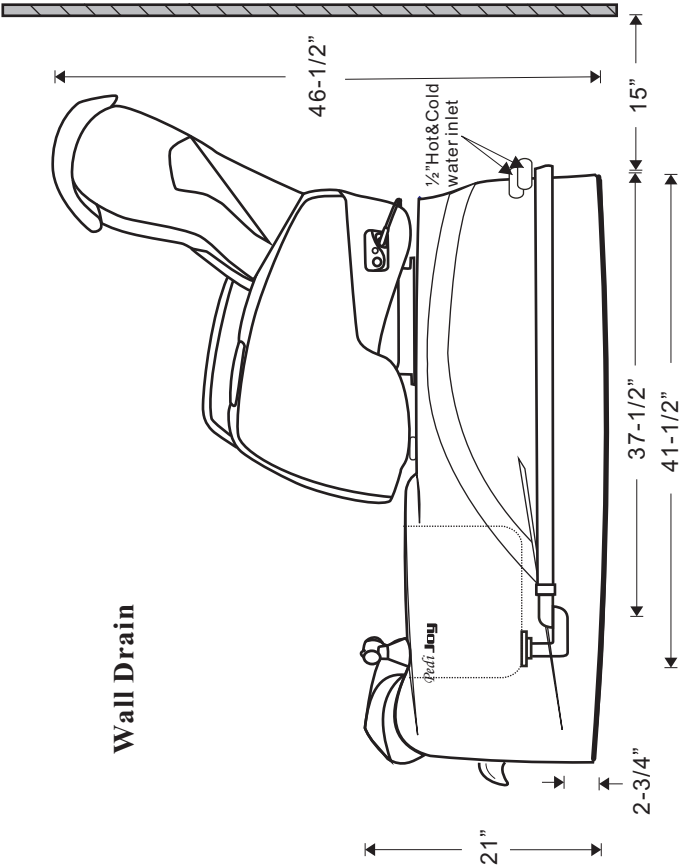


Pedi Joy

Back Flow Preventive Device

The back flow preventive device will not be mandated for us to install, But it is an optional item. If your state requires back flow preventive device on the pedicure unit, you MUST specify in your order. We recommended to pre-install by MFG.

The specification, back flow preventive device description, requirement and certificate numbers are as indicated below.

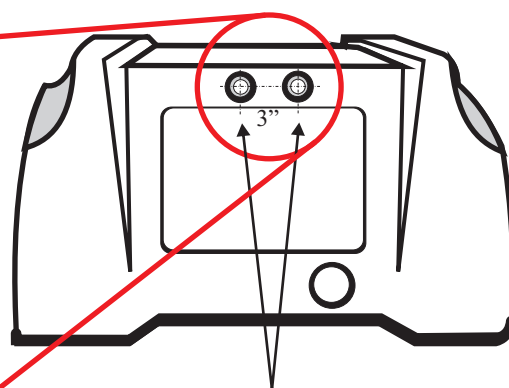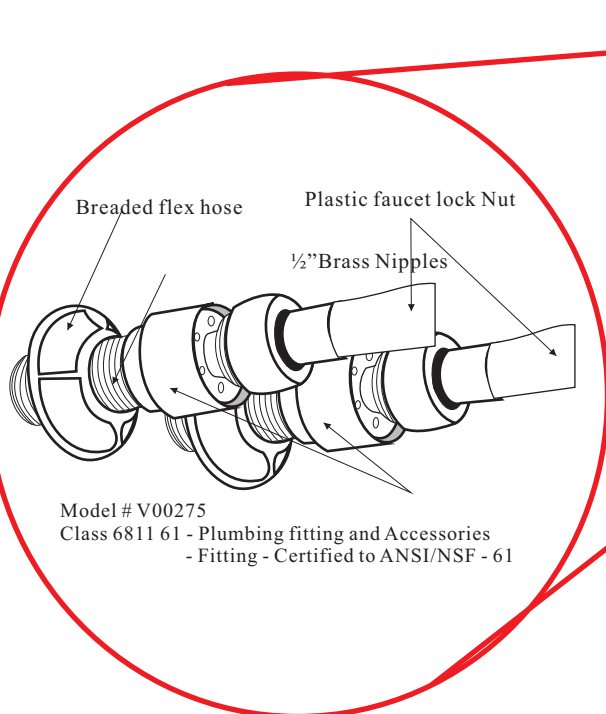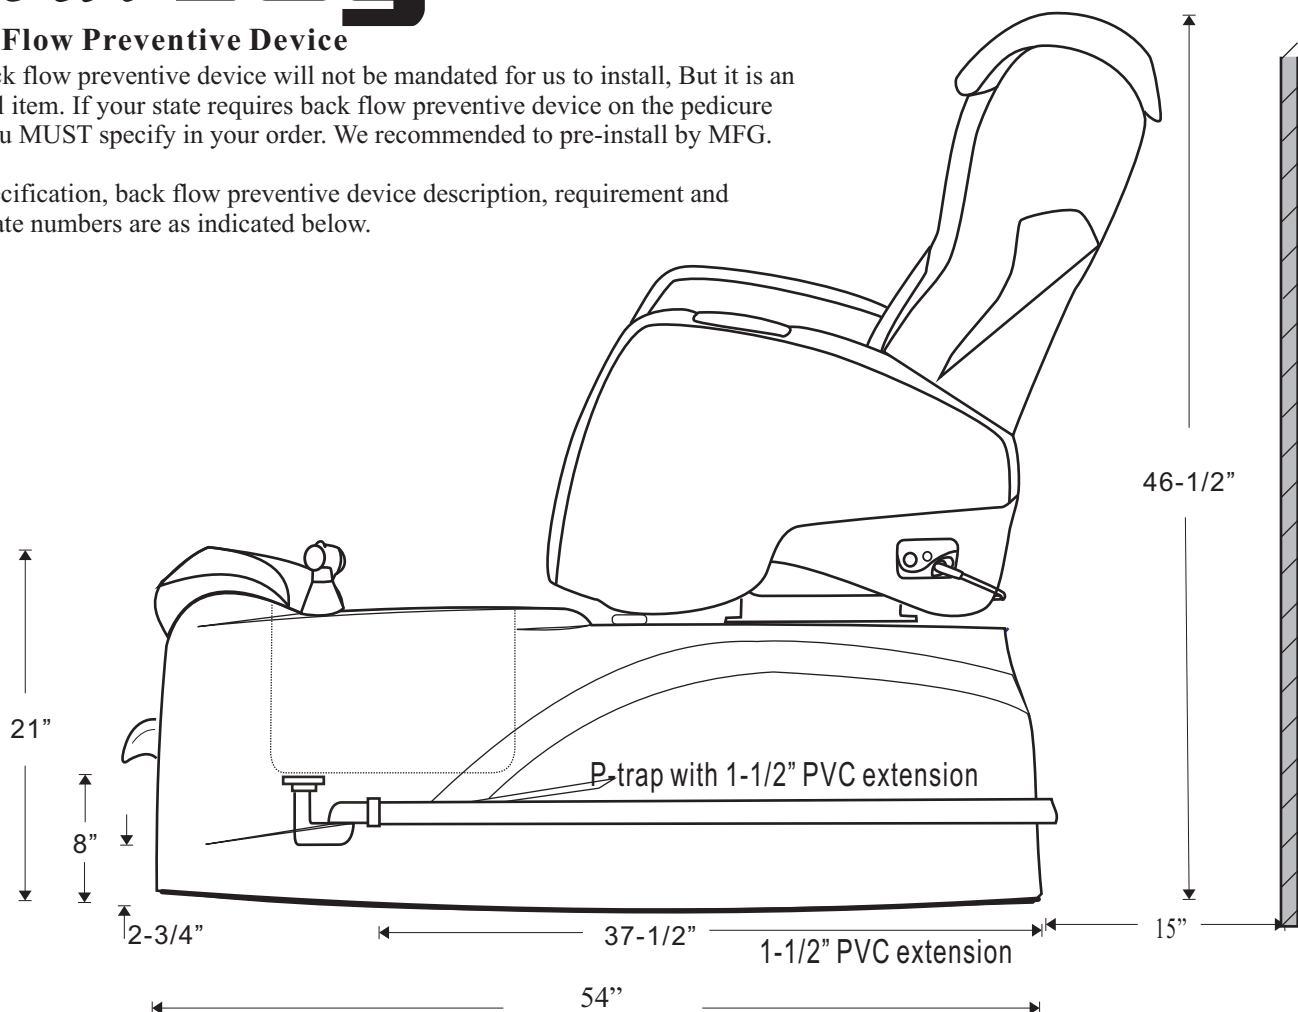

Back Flow Preventive Device Requirement

ANSI/NSF - 61 -2000
ASME A112.18.1-2000
ASSE 1014

Back Flow Preventive Device located in front of the hot / Cold water inlet 2" above the water level of the tub.

Massage System

Important Safety Instructions

Warning: To reduce risk of burns, fire, electric shock or injury;

Read all instructions before using; burns will result from improper use, never remove cover other than authorized from the manufacturer.

Close supervision is necessary when unit is used by, on, or near children, and disabled people. Use this unit only for its intended use as described in this manual. Do not use any attachment/s not recommended by the MFG.

- Keep the cord away from heated surfaces.
- Do not use outdoors.
- Do not operate where aerosol products are being used or where oxygen is being administered.
- Never operate this unit if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. To disconnect, press power button to turn off, then remove plug from outlet.
- Take a break every 30 minutes of operation.
- Do not place any heavy object on the chair and do not let children play with it.

Your massage chair is simple to operate using the handheld controller included with your chair. Before you use your chair, we recommend that you familiarize yourself with the remote control and the basic massage functions.

Basic Operating Instructions

Massage System Instructions

POWER LED will be Green when main switch **ON**,
Stop / Auto Park Stops all massage function and parks the
massage roller in its highest position


Pre-Program

- FULL:** A continuous 15 minute program consisting of a series of combined functions for entire back.
- Upper:** A continuous 15 minute program consisting of a series of combined functions for back upper portion.
- Lower:** A continuous 15 minute program consisting of a series of combined functions for back lower portion.

Recliner

- Minus Button** - Move back seat upward.
- Plus Button** - Move back seat to recline.

All pre program starts with rolling mechanism and combination of rolling and kneading, compression, percussion in that sequence.

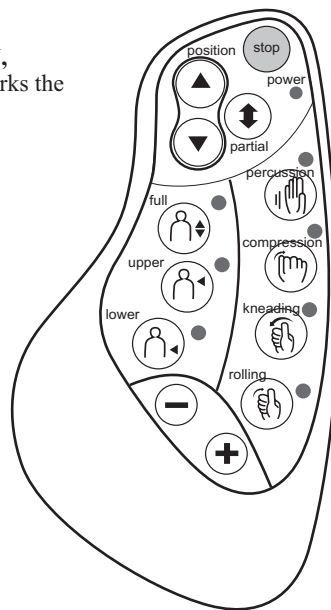

Manual

- Position** ▲ Moves the massage rollers up the backrest.
▼ Moves the massage rollers down the backrest.

Partial: Press kneading or compression and then Partial to have a partial stroke up/down 3.

Selective Functions


Rolling - Push to start the massage rollers rolling up/down.

Kneading - Press to start the kneading massage at any given point. Press positioning button for desire position. Or press rolling with Kneading combine, it'll move up/down continuously with kneading.

Compression - Press to start the compression massage at any given position. Press positioning button for desire position. Or press rolling with compression combine, it'll move up/down continuously with compression.

Percussion - Press to start the percussion massage at Any given position. Press positioning button to move desire position.


Chair assembly

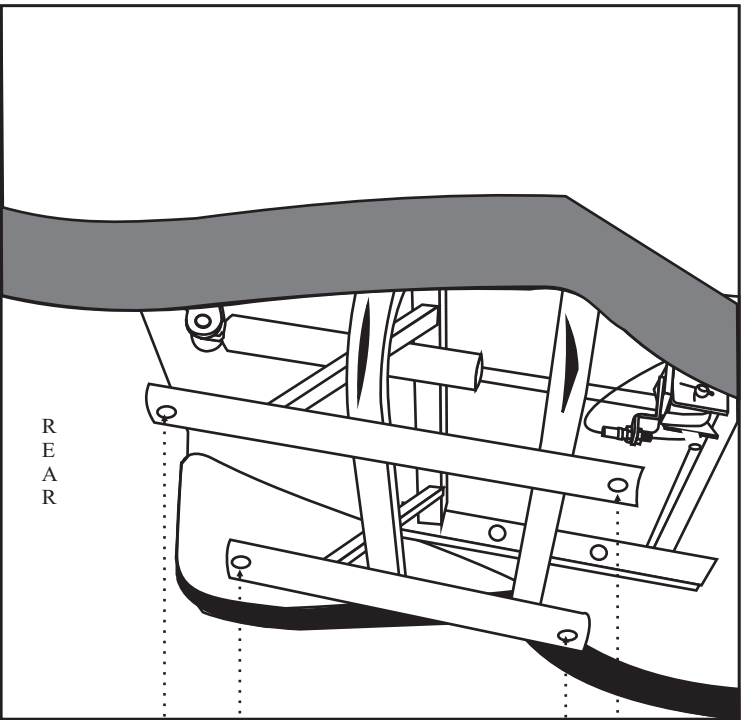

Tool Required
13 mm rachet
Vise Grip plier


Bottom view (Chair)

Align rear of the hole onto the swivel and tighten one at a time.

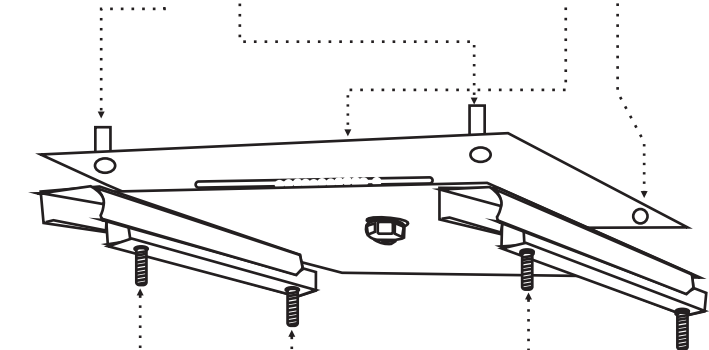

Swivel

Pre-install swivel to the base.

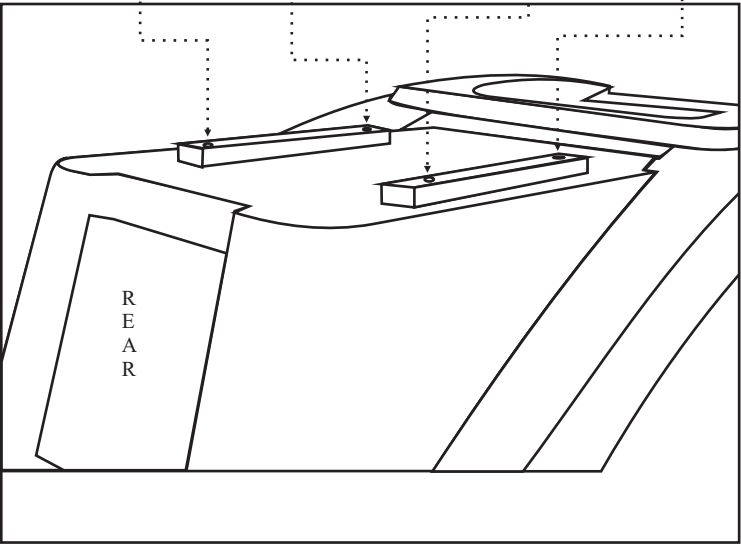

Base (Body)

Base with spacer for reinforcement and support swivel as well as chair.

Maintenance

Suction

It is important to keep the suction screen from any blockage or obstructions at all times, due to they may reduce the whirlpool action and may cause damage to the pump.

To Clean: Take off suction screen by removing two screws and clean with soft brush while immersed in disinfectant.

After each customer (Standard Jet System Users)

1. Drain completely and remove residual debris from basin.
2. Clean the surfaces and basin with mild detergent, rinse with fresh water.
3. Disinfect with an EPA-registered disinfectant with bactericidal, Fungicidal, and virucidal activity used according to MFG recommendation.
4. Wipe the pedicure spa dry with clean cloth.

After each customer (Standard System Users)

1. Drain completely and remove debris from the basin.
2. Spray disinfectant on the basin and flush out with fresh water.
3. Remove (*see clean jet system*) and immerse jet cover into disinfectant for 5 minutes.
4. Placing jet cover (*see clean jet system*) and please follow direction.

Daily (Standard Users & Clean Jet System Users)

Manufacturer requires that the pedicure spa be thoroughly cleaned at the end of the day in following manner.

1. Remove the intake suction screen. All debris trapped on or behind the screen must be removed. The Suction screen and the suction inlet must be free of debris.
2. Before placing the screen, The screen must be immersed with EPA - Registered disinfectant.
3. Flush out the whirlpool with low foaming detergent and warm water for 10 minutes.
4. With fresh water, EPA - registered cleanser for 5 minutes.
5. Rinse with fresh water.

Weekly (Standard users & Pipless System users)

1. Fill the basin Hot water up to its level.
2. Add 3 to 4 table spoons of a low foaming agent and 1 to 2 table spoon of powder bleach.
3. Run whirlpool for 5 minutes.
4. Stop whirlpool and sit for 5 to 7 minutes.
5. Open Air control and whirlpool for 5 minutes.
6. Drain completely.
7. Fill the basin with warm water up to its level.
8. Apply EPA-registered disinfectant according to its direction.
9. Run whirlpool for 5 minutes.
10. Drain completely.
11. Wipe out excessive water with soft cloth.
12. Repeat step 7 to 10, If necessary.


Pedi Joy

Clean Jet System - Clean Jet System users

Maintenance


Keep the screen of the jet inlet free of debris. Any blockage of the screen reduces the whirlpool action and may cause damage to the jet motor.

Disassemble

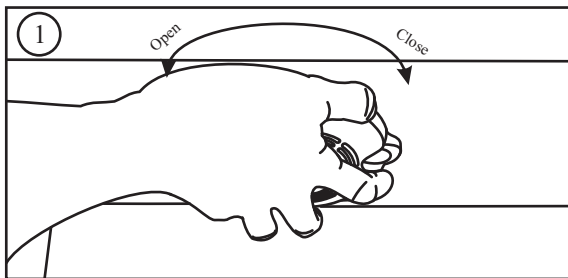

To Open



1. Hold the Jet cover as shown left.
2. Gently rotate to left to open.
3. Pull gently outward.
4. Clean jet component, Remove all debris from jet cover and locking mechanism.
5. Clean all debris inner side of the jet as shown below left.
6. All jet cover must be remove and follow the cleaning instruction.

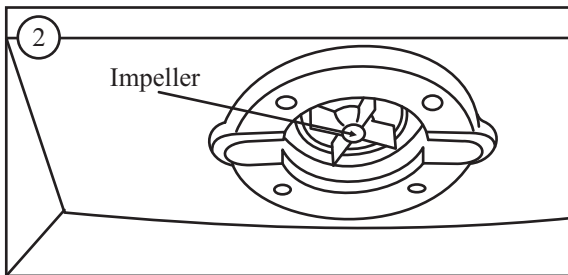


Assemble

1. Place Jet cover over the housing at two o'clock position.
2. Push in gently.
3. As push in to the housing rotate to right to close.

Clean Jet Pipeless System

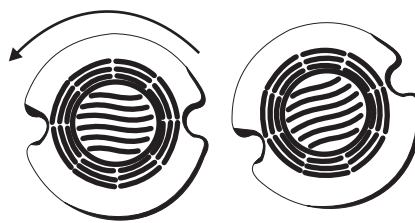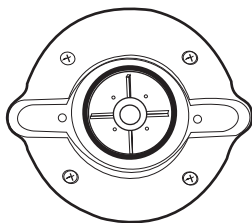

To Open

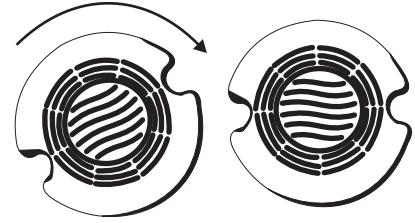

To Close




Warning

Individuals whose feet or legs are inflamed or have open wounds should not be allowed to use the pedicure spa at any time. The technician should advise clients to consult their physician before using the spa if there is any sign of fungal infection, swelling, fracture, or persistent pain. In some cases diabetics may experience improve circulation in their feet, but should first consult their physician prior to receiving a pedicure.

DO NOT USE abrasive pads or cleaner/s that will scratch or dull the FRP surface or the metal accessories.

Failure to follow these cleaning instructions may result in voiding warranty coverage!



Chair Maintenance

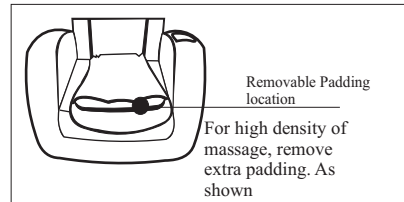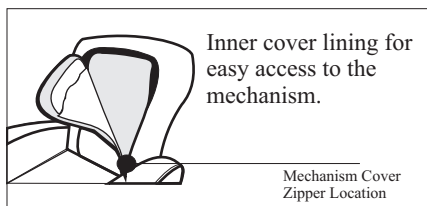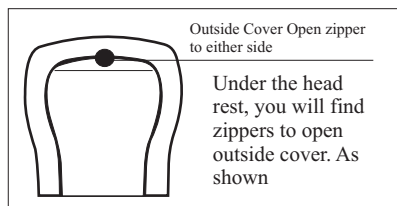

Note: Always clear passage of the up/down movement.


- 1- As shown, Lubrication is MUST be applied quarterly.
- 2- Check loose wire on limited switch.
- 3- Do not lubricated excessively.
- 4- No debris on moving track or the main shaft.

Massage sensor replacement

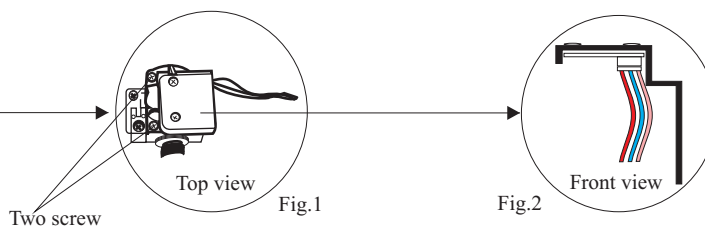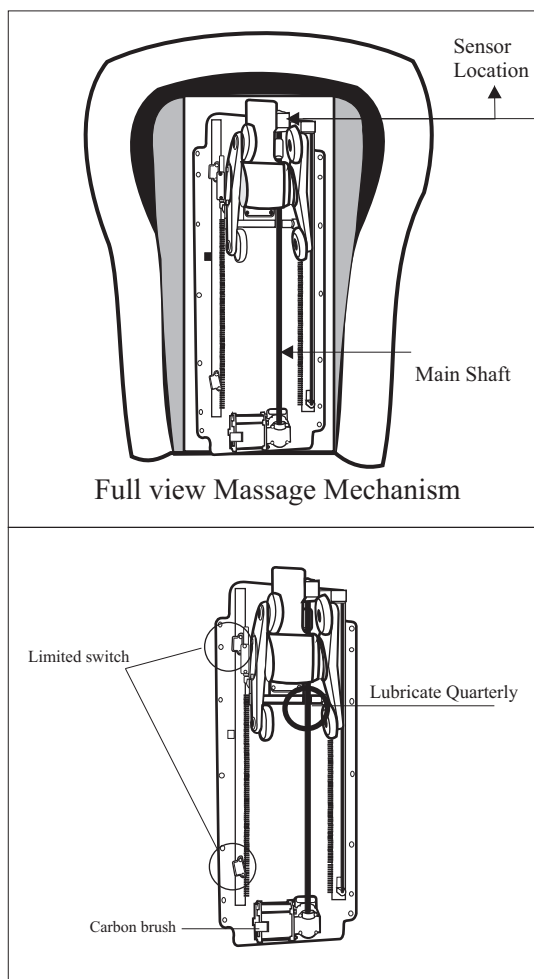

- 1- Move down roller by pressing full mode on the remote Control and turn off on the chair main switch (fig.3).
- 2- Remove two screws as shown fig.1
- 3- Gently pull out the PC board (fig.2)
- 4- And gently pull out wire receptacle (fig.2)

****Reverse the process for replacing the massage sensor****

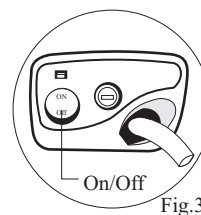

Cautions

To Reduce the potential risk of fire, electrical shock or injury :


1. All electrical wiring (both installation and repair) must be done by a licensed electrician and in accordance with local and state ordinances.
2. No modifications, addition or deletions should be made to the pump without MFG approval.
3. Before starting motor, fill the tub with water to the level recommended by MFG. Never run dry.
4. Motor have built in automatic reset overload protector that guards against damage from mechanical or electrical problems such as low voltage, locked pump or similar abnormal conditions. Remember, if the timer device is still on, these motor will restart automatically - as soon as they cool down.
5. Do not relocate pump without prior approval from manufacturer.

Warning

- To reduce the risk of injury, DO NOT permit children to use this product unless they are closely supervised at all time.
- To reduce the electric shock, replace damage cord immediately, and DO NOT use extension cord to connect unit to electric supply.


TROUBLE SHOOTING

SYMPTOMS	PROBABLE CAUSES	RECOMMENDED ACTION
Will not turn on	No power to motor	Check switch and circuit breaker / connection
Pump runs slow	Note wired required voltage	Correction voltage from power source
Pump humms	Particle stuck in the impeller	Clean out impeller / check terminal connection
Pump humms but will not turn	Pump jammed	If unable to turn, please send for repair
Noisy pump	Particle in the pump	Remove debris in the volute
Pump leaks	Loose union Worn seal	Tighten union Replace shaft seal
Pump cavitation	Air from jets getting in suction	Direct directional flow fitting away from suction
Pump runs but no jet action	Air lock	Turn on and off the pump up to 10 times / take out air by opening the union and bleed out the air. Tighten union after air is out.

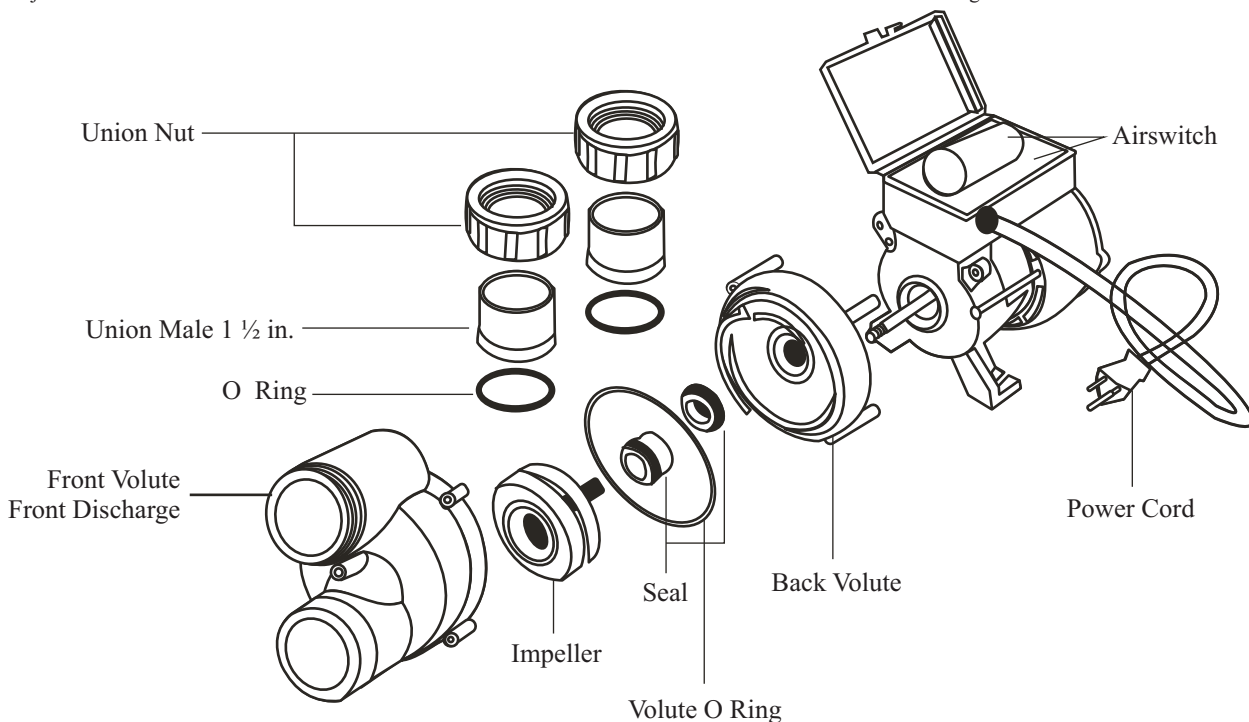

Pedi Joy

Discharge Pump

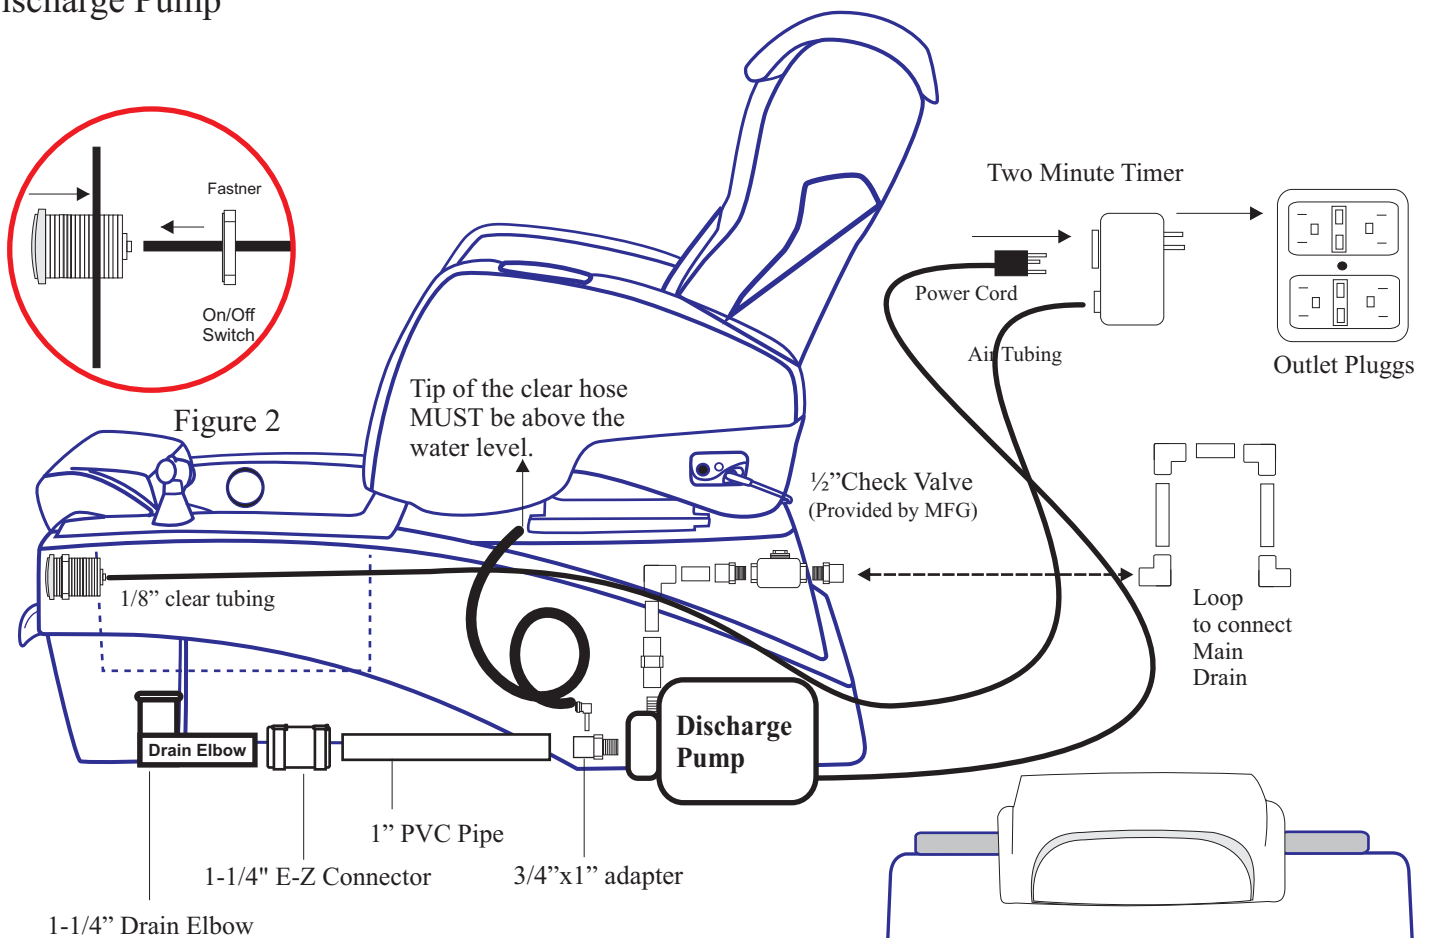

Installation Instruction


1. Make a hole (size 1-3/8") for the On/Off switch as shown (see fig 1). Pre-drill required.
2. Placed a 1/8" clear hose into the rear of the switch and on/off switch into the hole.
3. The discharge pump kit is made to fit onto the pedicure unit. (see fig 2)
4. Connect E-Z connector onto the drain elbow.
5. Plug discharge pump outlet into the two minute timer outlet
6. Plug two minute timer into the wall outlet.
7. It is very important that tip of the clear tub remain above the water Level with one loop as shown.

**** Please cut to fit 1" Flex hose to your size****

Operation Instruction

Please! DO NOT run dry

1. Turn to open drain plug.
2. Press On/Off switch to activate timer.
3. At any time, water drain completely from the basin. Press On/Off switch to stop or built in two minute timer.

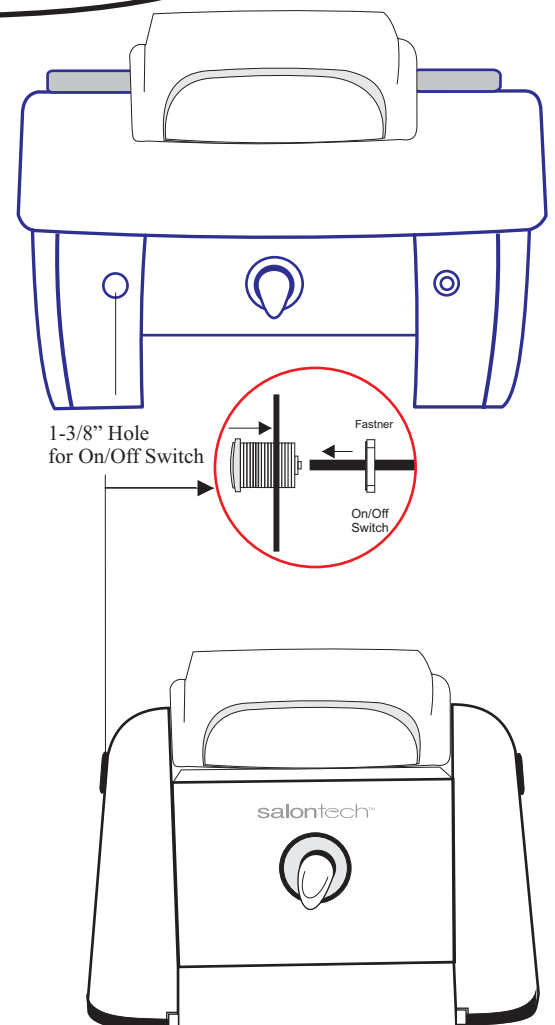

Warranty Form

Customer MUST fill in blank and return to us with sale receipt in order to obtain warranty service.
The sales receipt MUST indicate the purchase date and distributor.

Return Address: Salontech LLC
57 Seaview Blvd.
Port Washington NY 11050
T: 516.484.4937
F: 516.484.4938

E-mail: info@salontech.com
Web : www.salontech.com

salontech™

Model: **Spa Joy** Standard PipeLess
Pedi Joy PipeLess

Date of Purchase: _____

Place of Purchase: _____

QTY / Color: _____ / _____

Please have all information available, when requesting service. If We do not receive warranty for with copy of sales receipt within 15 days from the purchase date, We have the right to nullify and void the warranty without notifying the customer.

No distributor or other person has any authority to bind **salontech™** to change or add this warranty or its products.
salontech™ is not responsible for such warranties or representations.

Customer Information

Salon Name: _____

Telephone#: _____ Alt. Tel: _____

Contact Name: _____

Address : _____

Are you interest in purchasing additional equipments in near future?

If so, how many? _____

Comment on equipment:

SALONTECH LIMITED WARRANTY

salontech™ Manufactures the **PediJoy**, Whirlpool Pedicure Spa with the highest standards for quality materials , which UL listed components and highest workmanship for duration of the warranty period, which duration begins on the date of purchase by the customer (end-user). Each customer is responsible for maintaining, proof of purchase (invoice) and to initiate the warranty. The customer **MUST** send in warranty card in the manual booklet. Read and fill out (warranty form) carefully and return to salontech™ within 15 days from purchase.

Warranty period

- * All components: One (1) year from date of shipment.
- * All optional items: 180 days from date of shipment.

If salontech™ receives defective product notice during the applicable warranty period, salontech™ shall either repair or replace the defective parts at salontech's option. Replacement product (part) may be either new or equivalent in performance. **NO CONSEQUENTIAL, INCIDENTAL, OR CONTINGENT DAMAGE WILL BE ALLOWED WHATSOEVER.** This warranty is null and void if the spa is remove from its place of initial installation, or is not in accordance with federal, State or local codes and ordinances. Furthermore, This warranty does not apply if th spa has been subject to misapplication, improper installation or maintenance, negligence, improper cleaning or other circumstances beyond salontech's control.

Not Covered

1. Damage to pump parts and/or motor parts due to obstruction in plumbing, etc.
2. Staining , fading or discoloration pf surfaces due to exposure and/or the use of harmful cleaning Agents or chemical.
3. Staining, fading or discoloration caused by improper or poor water additives not related to maintenance of proper water.
4. Malfunctions or damage caused by improper installation; including NOT meeting local and state Plumbing, electrical, and building codes.
5. Staining, fading or discoloration of the pleather chair and urethane footrest.
6. Damage resulting from standing in basin.
7. Freight damage, misuse, neglect, accident, natural disaster, and abuse.
8. Unauthorized repairs.

Should service be required for any reason or any question on our product/s, Please contact

salontech™

Technical support

57 Seaview Blvd.

Port Washington NY 11050

T:516-484-4937 F: 516-484-4938

E-mail: info@salontech.com / web: www.salontech.com

No distributor or other person has any authority to bind salontech™ to change or add this warranty or its products. salontech™ is not responsible for such warranties or representations.

Due to continuous improvements on all our products, specifications, characteristics, packing, color, designs are subject to change without notice.