
Step 3 – Install and charge battery

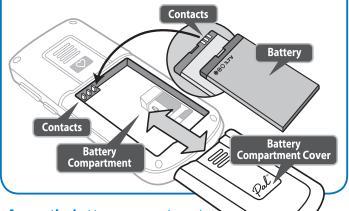

Access the battery compartment

by sliding the battery compartment cover from the phone back as shown above.

Install the battery by ensuring that the contacts on the battery and battery compartment are engaged. Replace the battery compartment cover as shown above. Make sure that it snaps securely into place.

Start the battery charging process by inserting the "plug-tip" of the AC Power cord into the charging port (11) of the phone. Plug the AC Power Adapter into a 110V electrical outlet. Charging time is approximately 2-3 hours.

The battery indication on the phone LCD will begin to "blink." If the phone is powered off, the LCD will display "charging."

When charging is complete the battery indicator will stop "blinking."



Press/Hold the Power Key again to turn **OFF** the phone.

Make a call

Three methods for making a call.

- I) Phonebook Find the number you want to dial, and press Dial Key.
- Call Register Enter the list of missed calls, received calls or dialed calls, and then choose the number, and press Dial Key.
- 3) Manual In idle mode, input the number by pressing the numeric keys, then press the Dial Key.

Receive a call

On incoming calls, the ring will be a sound, or the phone will vibrate. Press **Dial Key** to answer, or press **Reject** (M3 key) to refuse call. You can also receive the call by selecting **"Option"** (M1 key), or by pressing the **"Dial"** key.

Note: To use Boost Button, Press/Hold for (I) one second.

Main Menu Phonebook User profiles Messages Settings OK Back

Menu Navigation



Scroll through the menu listings by pressing the **UP/DOWN Arrow Key.**

Select menu options (OK, Back, etc.) by pressing the **MI** or **M3 Memory Keys.**

clarity.

Clarity, a Division of Plantronics, Inc. 6131 Preservation Drive, Chattanooga, TN 37416

Tel:800-426-3738Fax: 800-325-8871E-mail:claritycs@plantronics.comWebsite:ClarityProducts.com

©2012 Clarity, a Division of Plantronics, Inc. All Rights Reserved. Clarity, Clarity Pal, and Smart for Seniors are trademarks or registered trademarks of Plantronics, Inc. Printed in China

Мо

Quick Setup Guide

SMART FOR SENIORS™

Clarity Paľ Amplified Mobile Phone







Thanks for choosing the Clarity Pal[™] mobile phone

More than just a mobile phone, this is mobile peace of mind. The Clarity Pal[™] mobile phone gives you the freedom to stay connected with the ones you love, and know that help is available wherever you go^{*}


- Designed especially for seniors on-the-go. Only 5 inches in length and one-half inch in thickness. Easily fits in your pocket or purse.
- Clarity Power[™] technology amplifies incoming sound and is Hearing Aid compatible.
- Full-keypad features large buttons for viewing and easy dialing.
- Prominently located Emergency Button for quick access.
- See User's Manual at ClarityProducts.com/Pal for more features.

*Requires cell phone service.

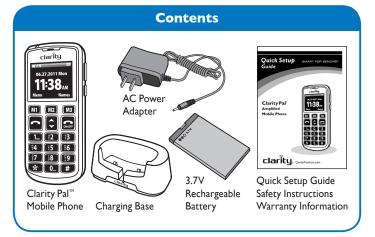

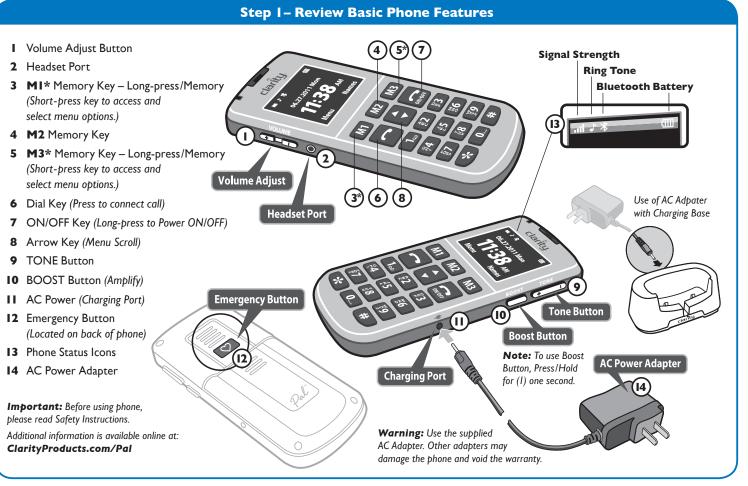

Step 2 – Install SIM card

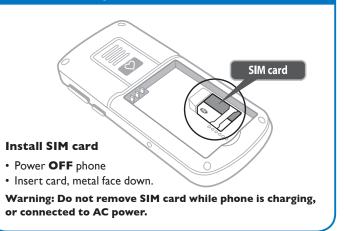

Install SIM card and connect to a network

A network provider (of your choice) will provide you with a SIM card that is key for entering the GSM network and their particular network.

First install the SIM card, then battery. (See STEP 3 for battery installation instructions.) Once SIM card and battery are installed, power-on the phone. The phone will begin searching for a registered network, or other available networks. Once connected, the name of network supplier will show on the LCD.

If the LCD prompts **"Emergency Call Only"**, it means you are out of the network service area. However, you may still make emergency calls according to signal strength.