

Harsh Environment Case

User's Instructions

Stylistic LT

These instructions provide details on using the FMWCC39 harsh environment case (HEC). The HEC provides added protection for your Stylistic LT when it is being used, transported, or stored. Note the following when using the harsh environment case:

- To avoid overheating, suspend the pen tablet when charging the battery pack while the pen tablet is in the case.
- To prevent scratches, a screen protector should be installed on the display window of the HEC. Two screen protectors are provided with the HEC. Additional screen protectors can be obtained using order number FMWSP8 (12-pack).
- If your Stylistic LT will be used both with and without the HEC, any screen protector on the pen tablet can be left in place. However, if the pen tablet will be used only in the HEC, any screen protector on the pen tablet should be removed for better viewing.
- If you use a pen tether, attach it to one of the D-rings on the back of the case.

Installing the Pen Tablet in the Case

Pull up the Velcro® flap, unzip the HEC, and lay it open flat, as shown in Figure 1.

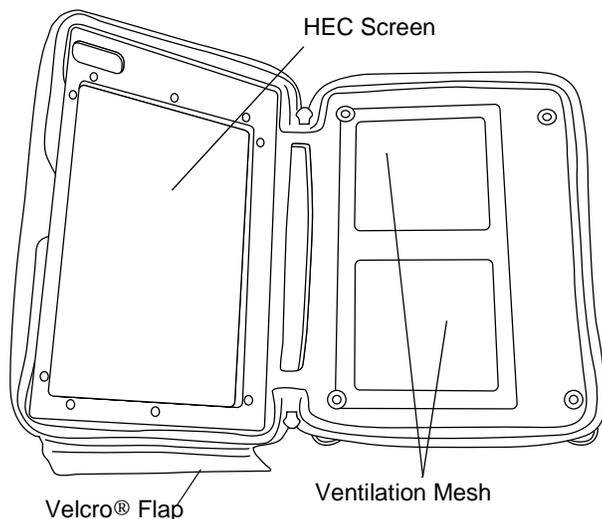


Figure 1. Empty Stylistic LT HEC

Position the Stylistic LT over the ventilation mesh as shown in Figure 2. Zip the wraparound zipper and resecure the Velcro® flap.

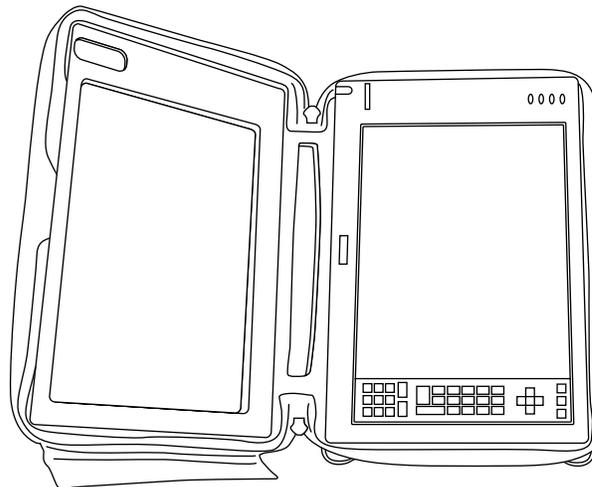


Figure 2. Stylistic LT in HEC

Once the system is installed in the HEC, you can either store the pen in the system pen holder or it can be stored in the pen holder at the top of the HEC, as shown in Figure 3.

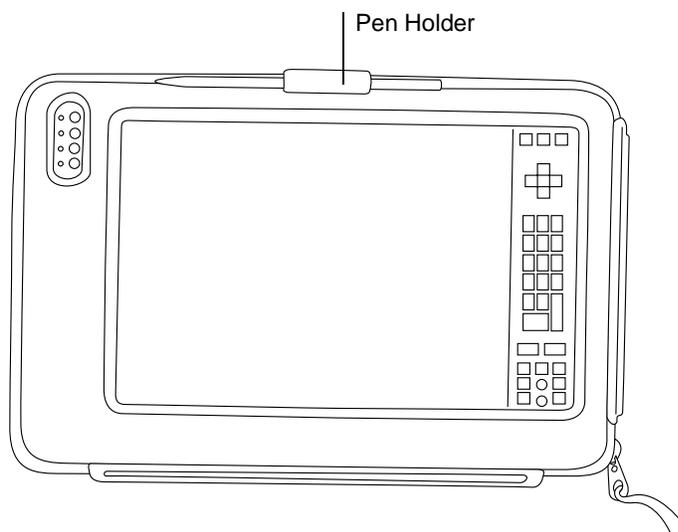


Figure 3. Enclosed Stylistic LT

Installing a Screen Protector

1. To ensure good adhesion, clean the exterior surface of the HEC window with a soft cotton cloth dampened with denatured alcohol before installing the screen protector.

Note: Using denatured alcohol to clean the window may result in streaking when it dries. If streaking occurs, gently buff the surface with a clean, soft cloth.

- For installation on the harsh environment case (HEC), remove the edge from the screen protector, as shown in Figure 4.

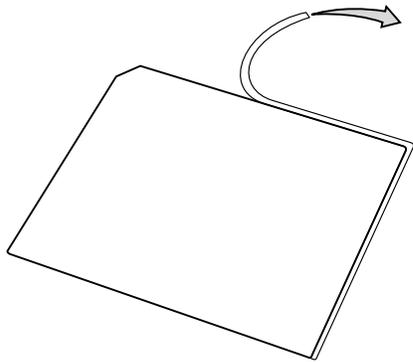


Figure 4. Removing Screen Protector Edge Strip

- Peel the protective film from the adhesive side of screen protector as shown in Figure 5.

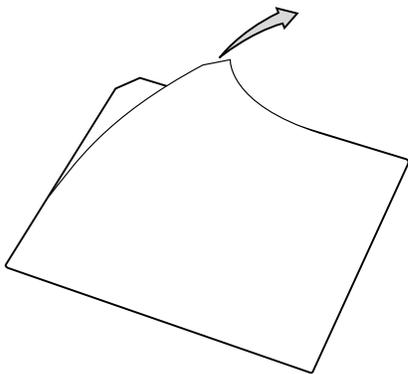


Figure 5. Removing Adhesive Backing

- Apply the screen protector with the adhesive side down and the notch in the lower left corner as shown in Figure 6. Apply pressure along the edges of the screen protector with your finger. (Avoid lifting the screen protector from the display window after it is installed. The adhesive requires 48 hours to cure completely.

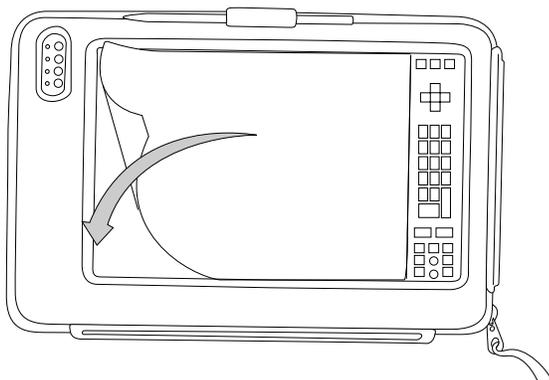


Figure 6. Applying the Screen Protector

- Remove the protective film from the top surface of the screen protector as shown in Figure 7.

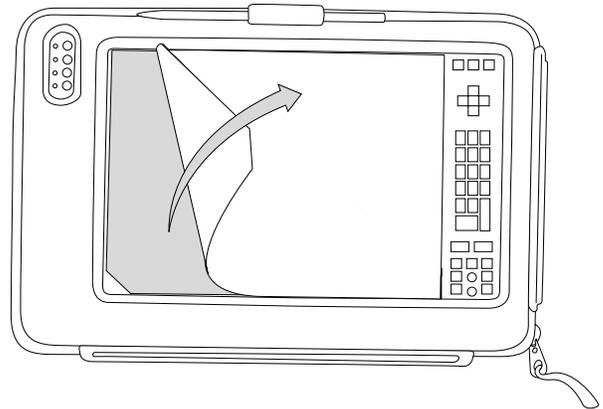


Figure 7. Peeling the Protective Film

- Wipe the exposed surface of the screen protector with a clean dry cloth to remove any tacky residue left behind by the protective film. If necessary, clean the surface of the HEC window with a soft cotton cloth dampened with denatured alcohol to remove the residue.

Adjusting the handstraps

The handstrap assembly on the rear of the HEC can be adjusted to provide a more comfortable fit. The handstrap consists of two parts: a strap and a cushion (see Figure 8). To adjust the handstraps, peel apart the two sides of each handstrap cushion; they are secured with Velcro®. Pull the nylon strap away from the cushion and adjust it to the proper fit. Resecure the strap and close the cushion.

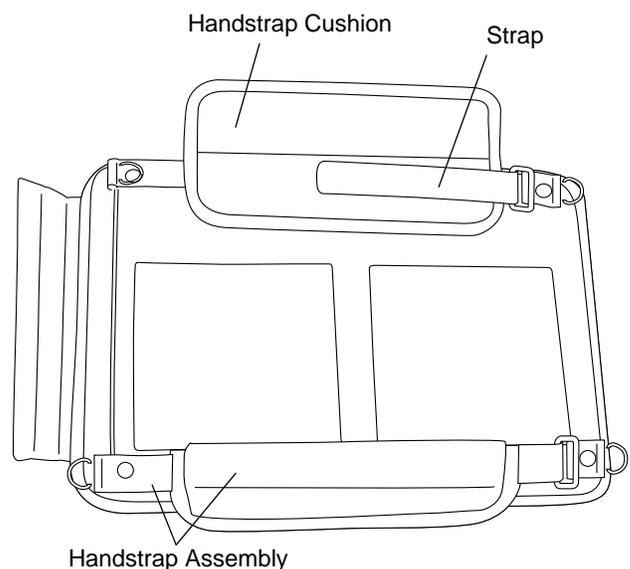


Figure 8. HEC Handstrap Assembly