


PARABODY®

661101 LEG PRESS ADAPTER KIT

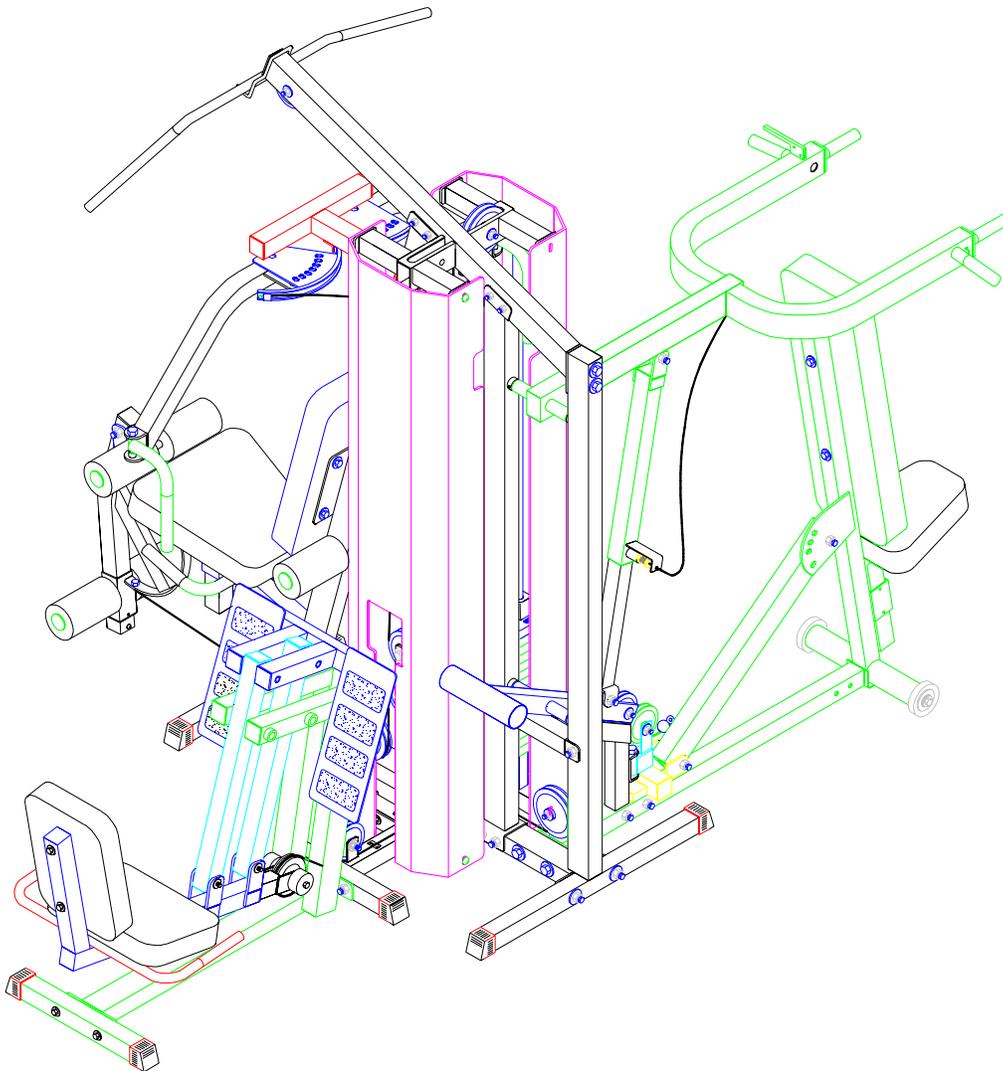

ASSEMBLY INSTRUCTIONS

IMPORTANT NOTES

Please note:

- * Thank you for purchasing the 661101 Leg Press Adapter Kit. Please read these instructions thoroughly and keep them for future reference. This product must be assembled on a flat, level surface to assure its proper function.
- * We recommend cleaning your product (pads and frame) on a regular basis, using warm soapy water. Touch-up paint can be purchased from your Parabody customer service representative at (800) 328-9714.

There is a risk assumed by individuals who use this type of equipment. To minimize risk, please follow these rules:


1. Inspect equipment daily. Tighten all loose connections and replace worn parts immediately. Failure to do so may result in serious injury.
2. Do not allow minors or children to play on or around this equipment.
3. Exercise with care to avoid injury.
4. If unsure of proper use of equipment, call your local Parabody distributor or call the Parabody customer service department at (800) 328-9714.

Tools Required for Assembly


- * Rubber mallet or hammer
- * 3/4" wrench
- * 9/16" wrench
- * Ratchet with 3/4" and 9/16" sockets
- * 7/32" Allen wrench
- * Adjustable wrench
- * Tape measure

Bolt Length Ruler

NOTE: BOLT LENGTH IS MEASURED FROM THE UNDERSIDE OF THE HEAD OF THE BOLT.

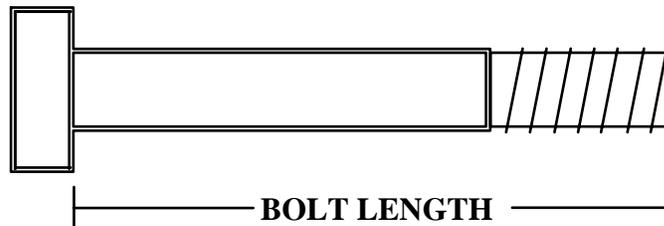

BOLT LENGTH RULER:



PARTS LIST

| KEY | PART # | DESCRIPTION | QTY | KEY | PART # | DESCRIPTION | QTY |
|-----|---------|-----------------------|-----|-----|---------|-------------------|-----|
| 1 | 6747708 | FRONT LEG | 1 | 9 | 3102701 | 3/8" HEX NUT | 2 |
| 2 | 3116201 | 3-1/2" PULLEY | 2 | 10 | 3102501 | 3/8" WASHER | 3 |
| 3 | 3108102 | QUICK DISCONNECT LINK | 1 | 11 | 3102802 | 3/8" LOCKNUT | 2 |
| 4 | 6427101 | KEYHOLE CLEVIS | 1 | 12 | 3102502 | 1/2" WASHER | 4 |
| 5 | 3118701 | 2" PULLEY | 1 | 13 | 3102801 | 1/2" LOCKNUT | 4 |
| 6 | 3201501 | SWIVEL SNAP | 1 | 14 | 3102902 | 3/8 X 2-1/4" BOLT | 2 |
| 7 | 6271801 | 72" ELASTIC CORD | 1 | 15 | 3102910 | 1/2 X 3" BOLT | 4 |
| 8 | 6747901 | LEG PRESS CABLE | 1 | 16 | 3102909 | 3/8 X 1" | 1 |

NOTE: The LEG PRESS ATTACHMENT (100101) must be assembled before connecting it to the PARABODY 660101 HOME GYM


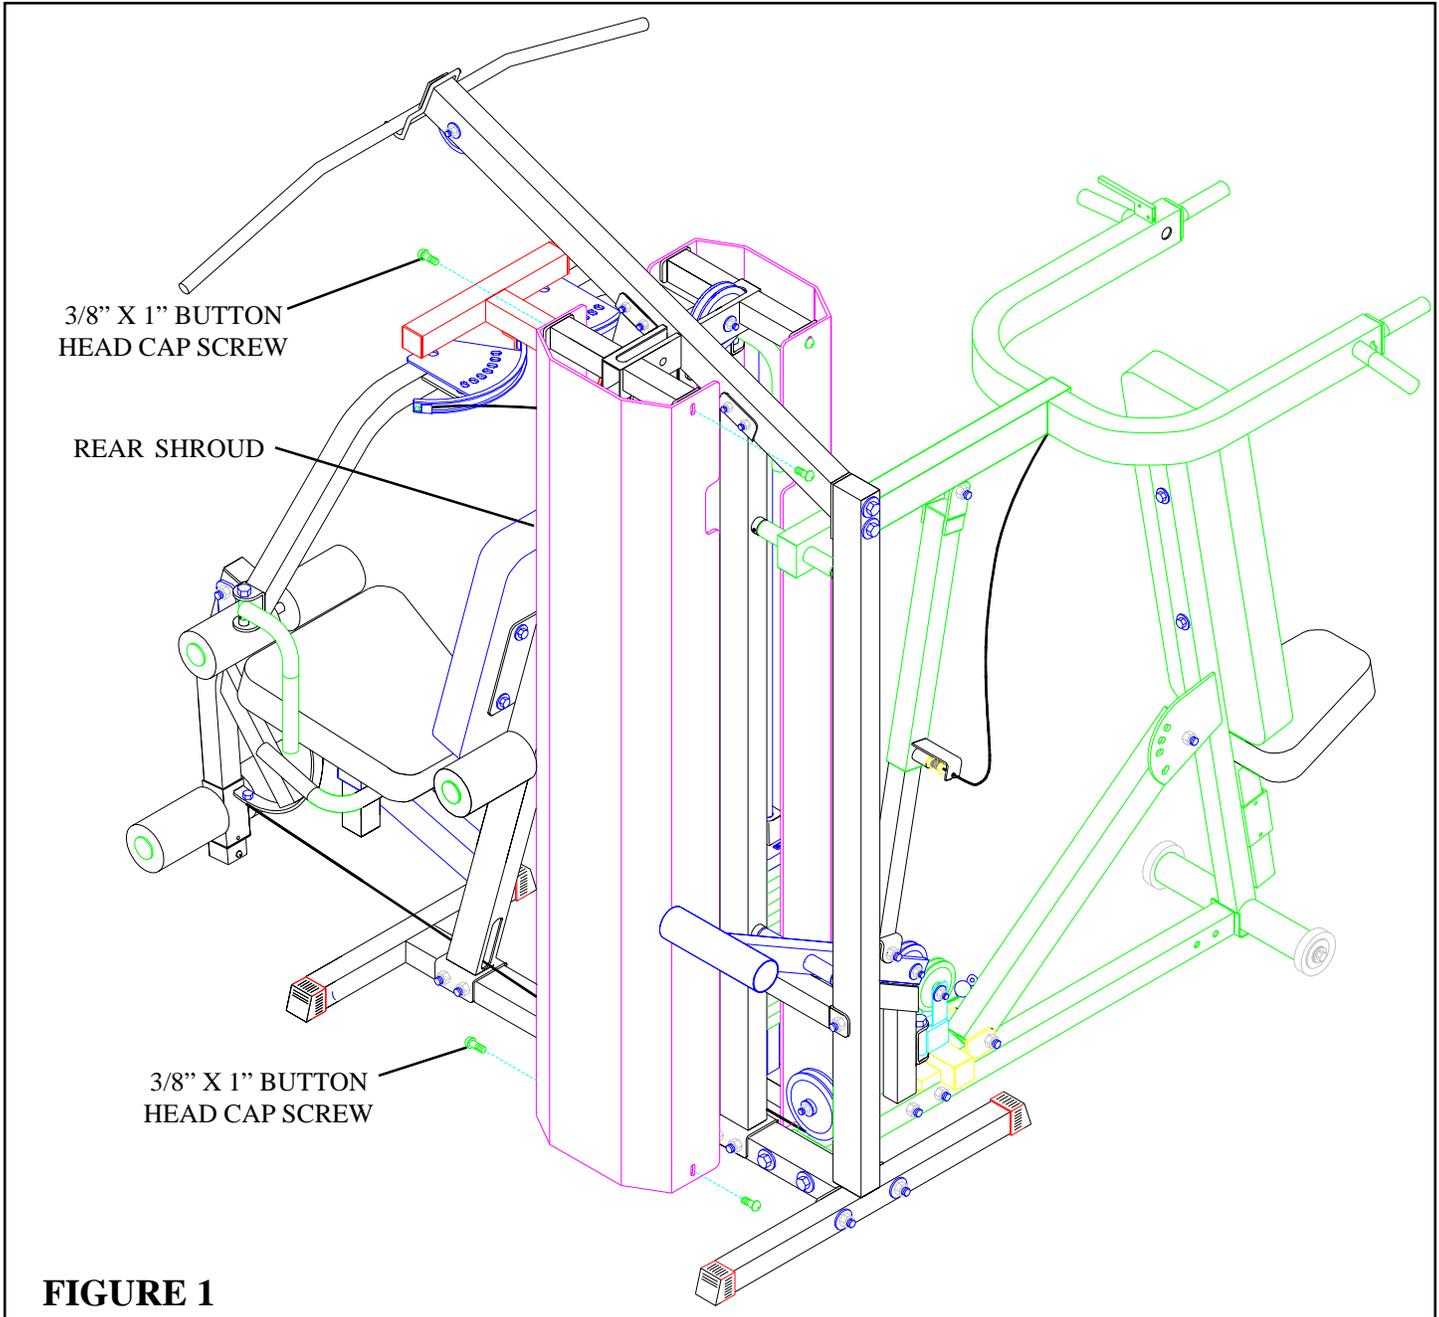


FIGURE 1

STEP 1

- **REMOVE** the four 3/8" X 1" BUTTON HEAD CAP SCREWS from the rear SHROUD. Remove the SHROUD from the 660101 HOME GYM. See FIGURE 1.

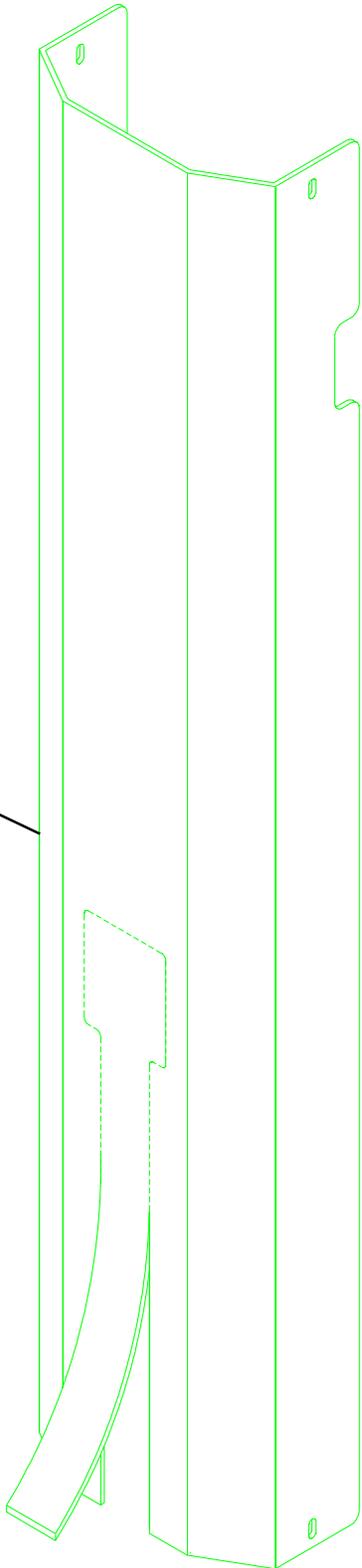


REAR
SHROUD

FIGURE 2

STEP 2

- If the 663101 SECOND STACK OPTION is not installed, the rear SHROUD opening must be removed. Apply pressure to the bottom of the SHROUD where the “V” groove is and carefully remove the weight stack opening on the SHROUD as shown in FIGURE 2.

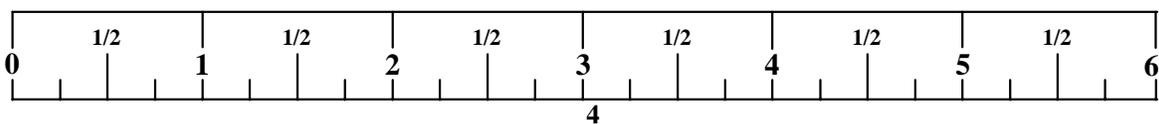


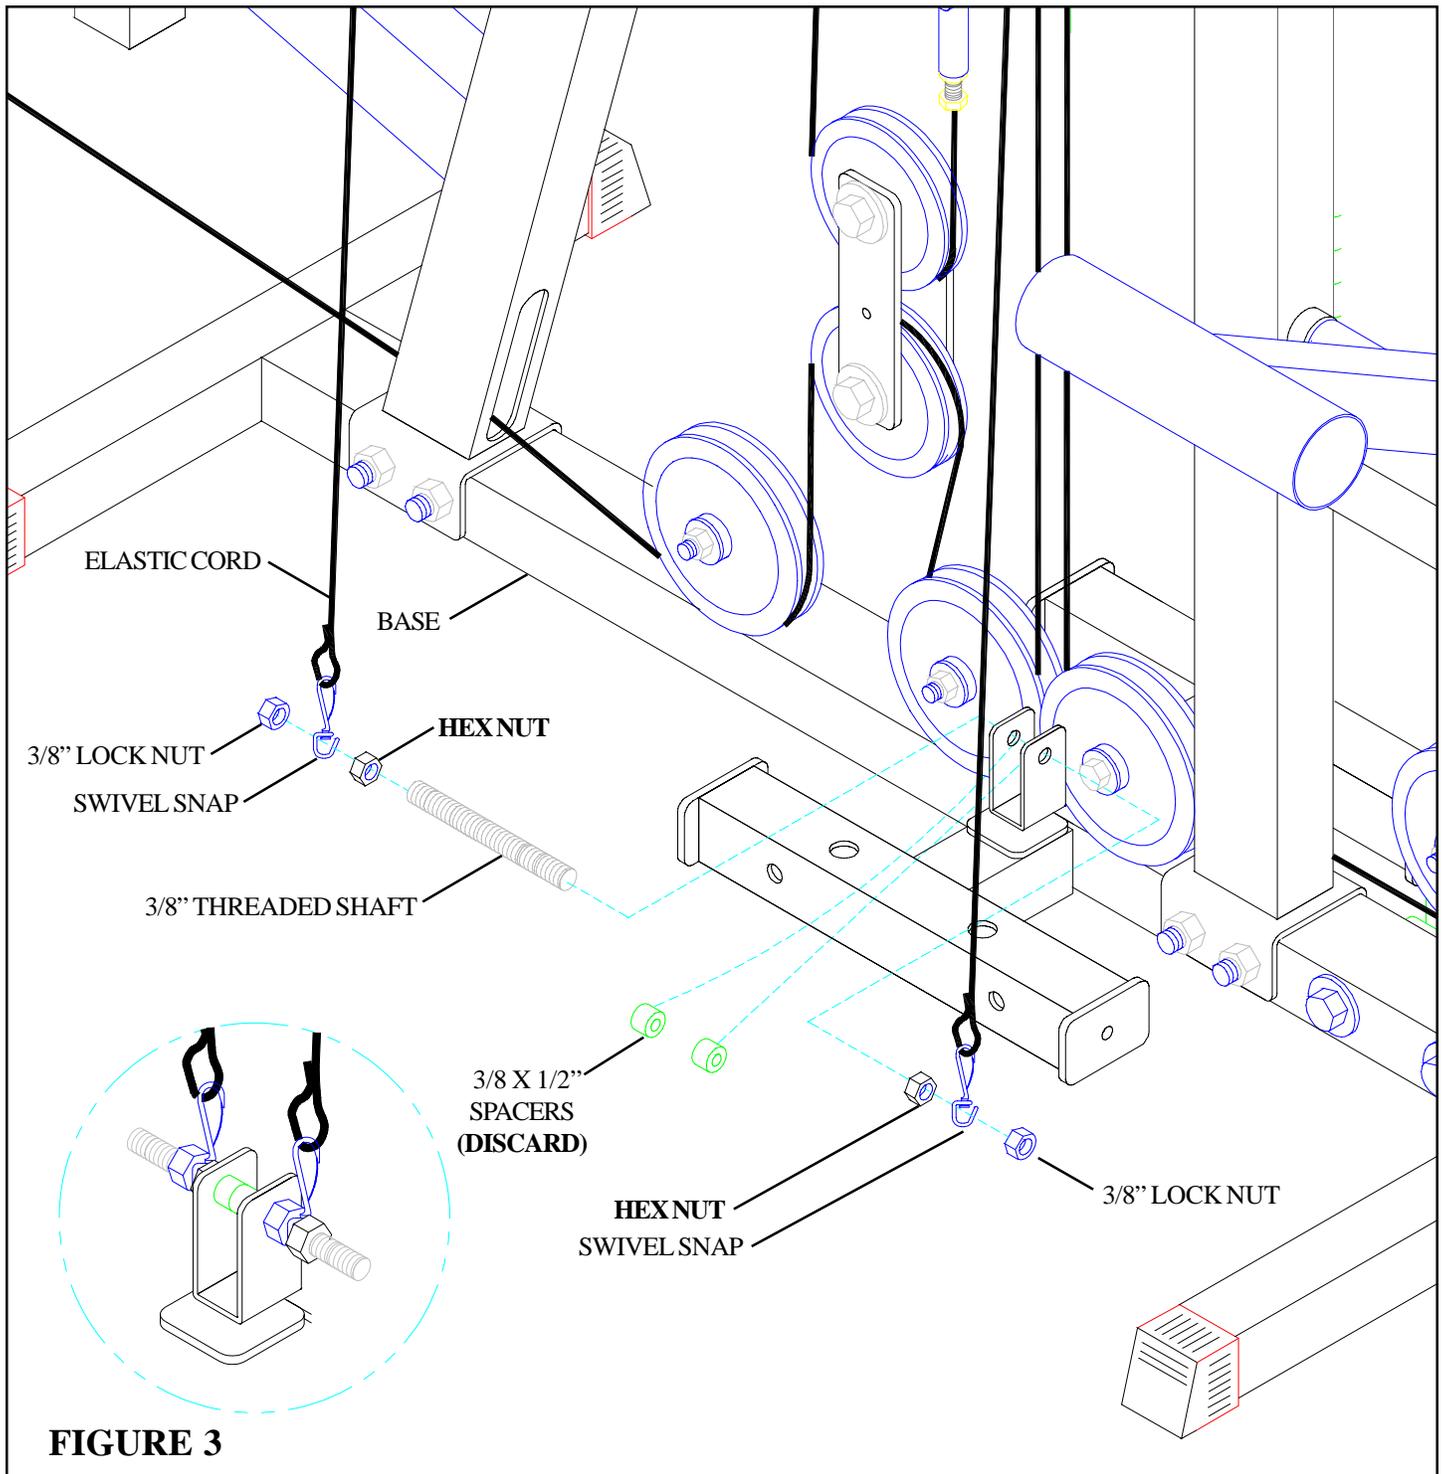


FIGURE 3

STEP 3

- Remove two 3/8" LOCK NUTS, two 3/8" HEX NUTS, two SWIVEL SNAP (keep elastic cords attached), two 3/8 X 1/2" SPACERS, and one 3/8" THREADED SHAFT from the bracket on the BASE as shown in FIGURE 3.
- Discard the two 3/8 X 1/2" SPACERS.

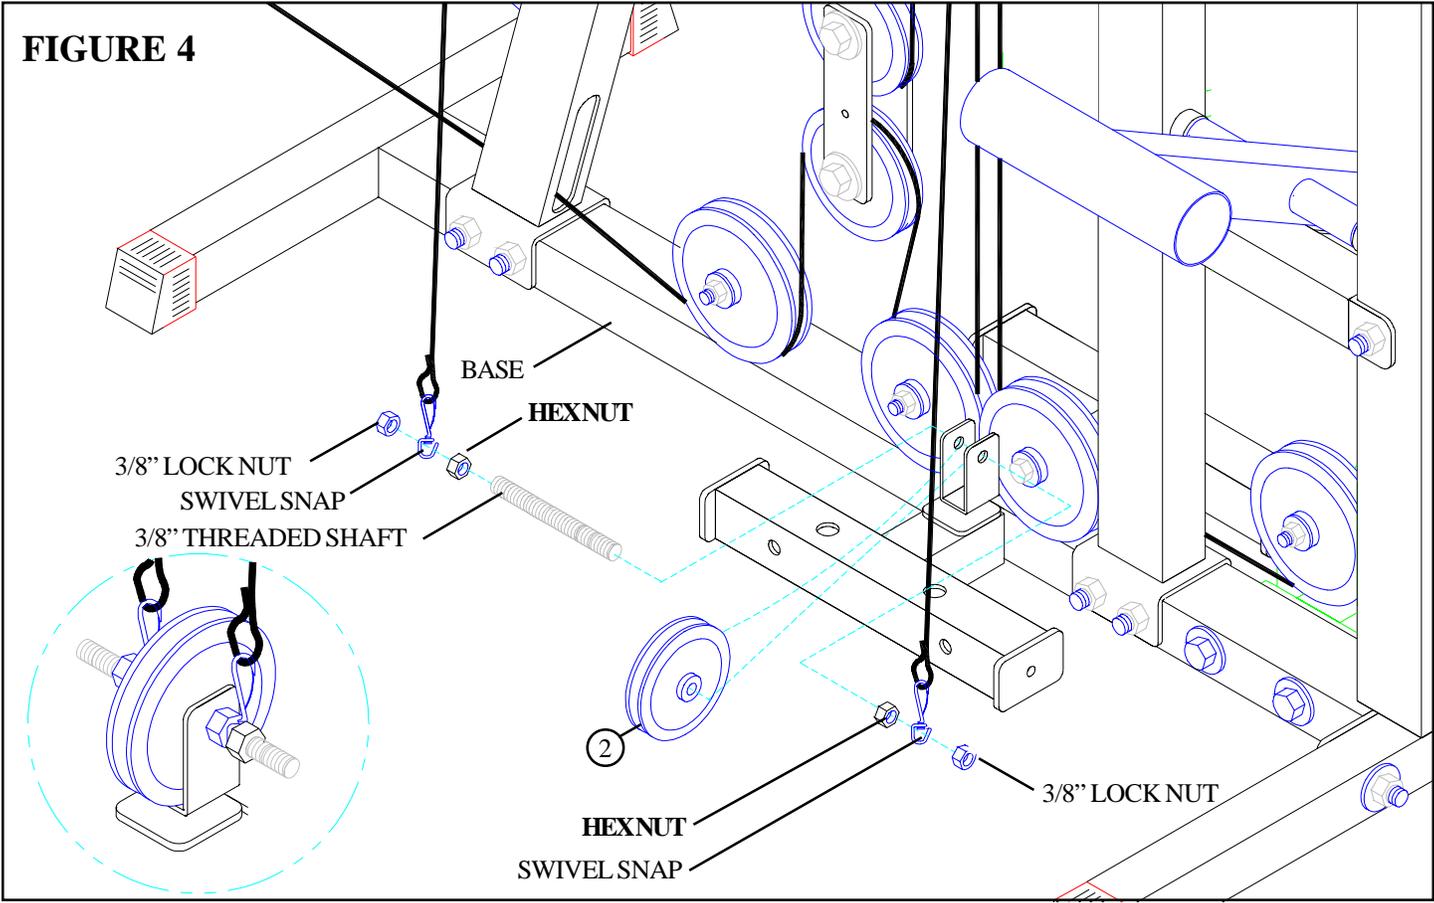

STEP 4

- Assemble the two previously removed 3/8" HEX NUTS, two previously removed SWIVEL SNAPS, one 3-1/2" PULLEY (2), and two previously removed 3/8" LOCK NUTS to the previously removed 3/8" THREADED SHAFT as shown in FIGURE 4.

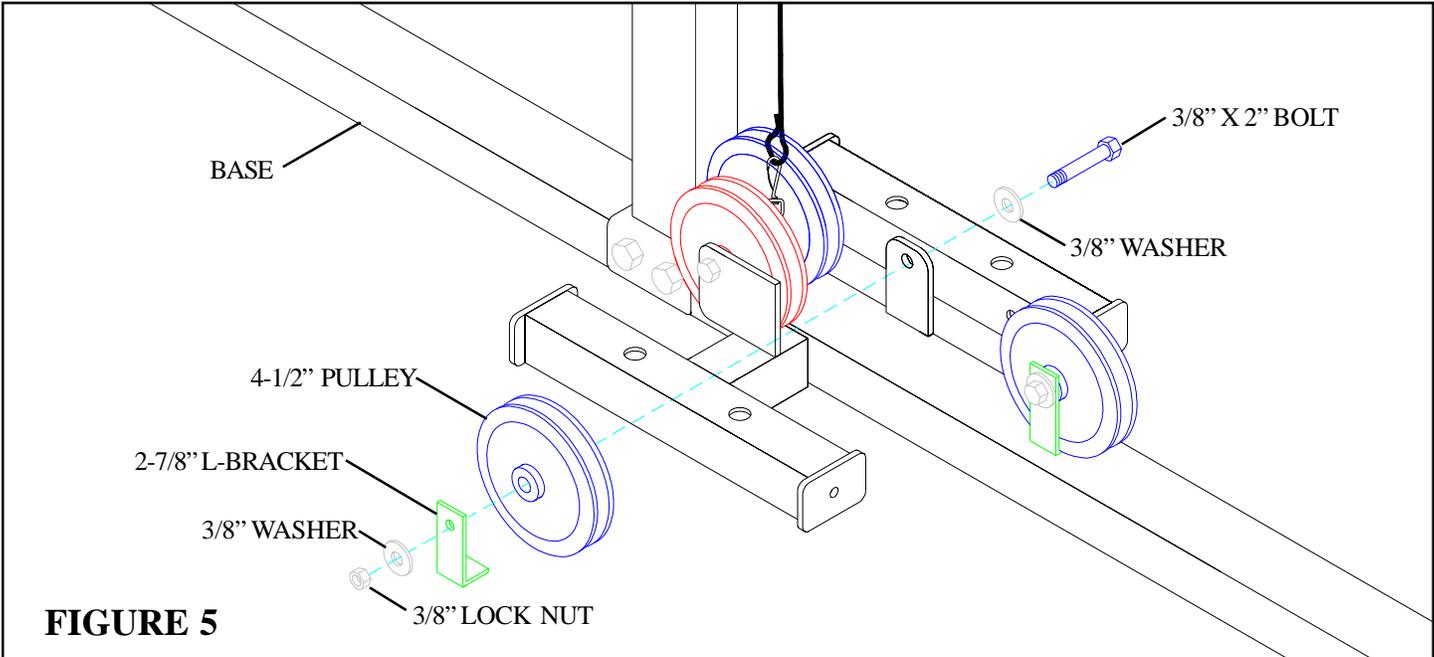



FIGURE 5

STEP 5

- Remove one 3/8 X 2" BOLT, two 3/8" WASHERS, one 2-7/8" L-BRACKET, one 4-1/2" PULLEY, and one 3/8" LOCK NUT from the upper flat on the BASE as shown in FIGURE 5.



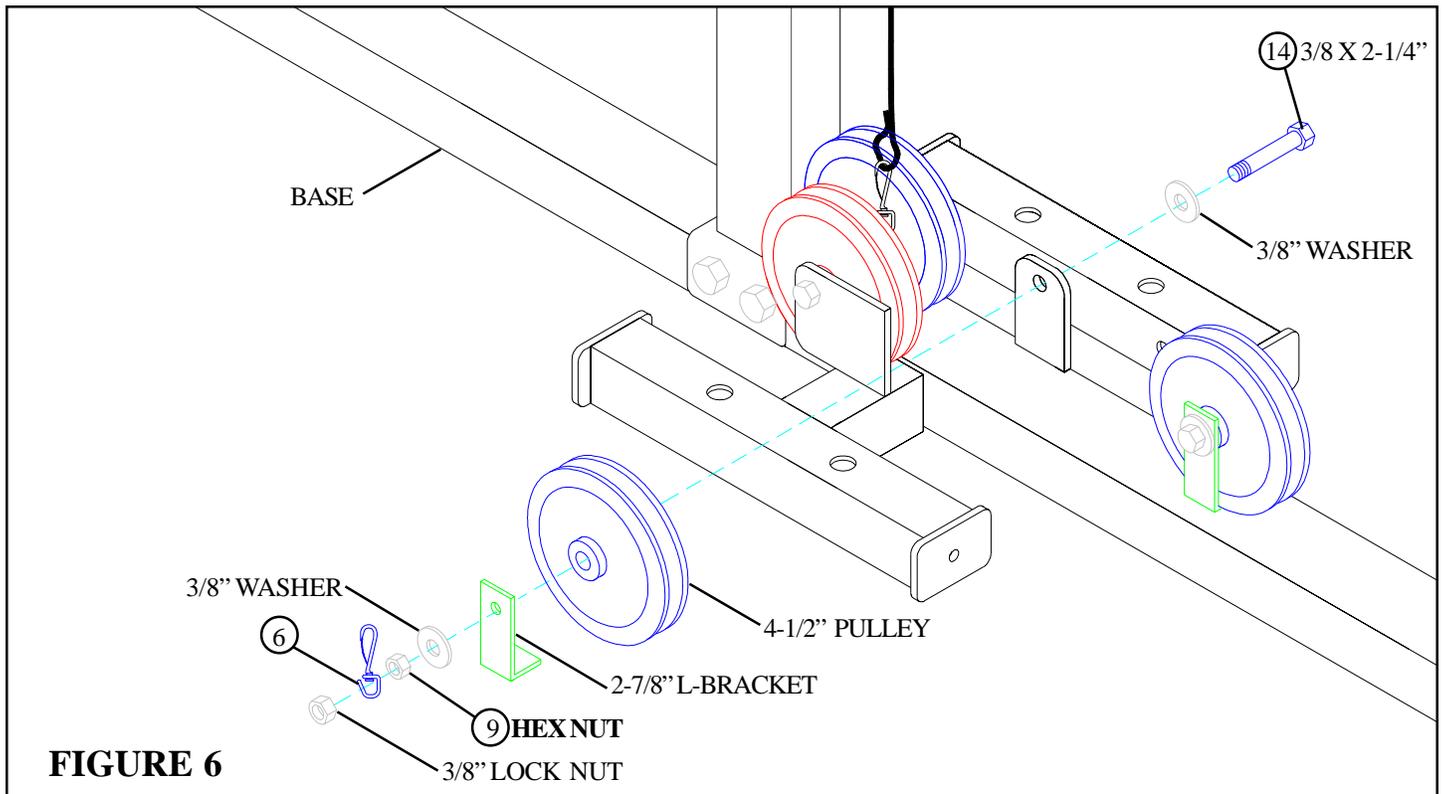
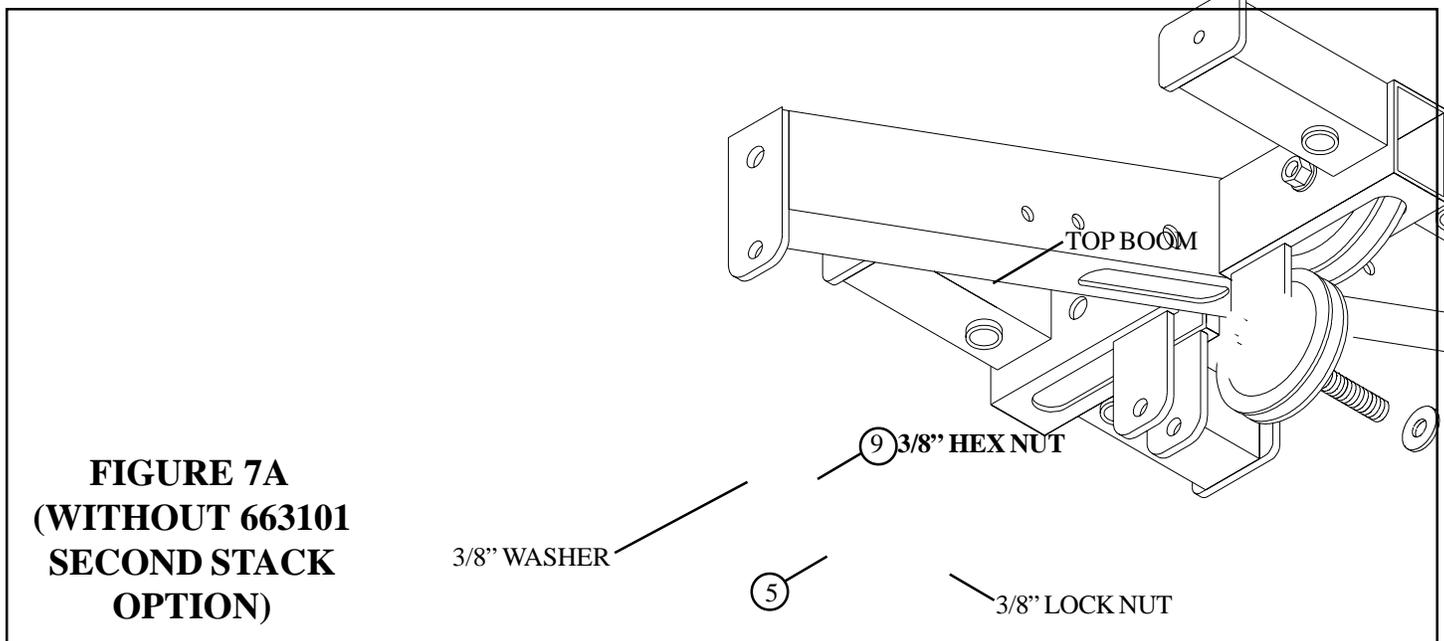


FIGURE 6

STEP 6


- **SECURELY** assemble the previously removed 4-1/2" PULLEY to the BASE using one 3/8 X 2-1/4" BOLT (14), two previously removed 3/8" WASHERS, one previously removed 2-7/8" L-BRACKET, one SWIVEL SNAP (6), one 3/8" HEX NUT (9), and one previously removed 3/8" LOCK NUT. See FIGURE 6.



**FIGURE 7A
(WITHOUT 663101
SECOND STACK
OPTION)**

STEP 7A

- If the 663101 SECOND STACK OPTION is installed follow STEP 7B .
- Remove one 3/8" WASHER and one 3/8" LOCK NUT from the 3/8" THREADED SHAFT on the TOP BOOM.
- **SECURELY** assemble one 2" PULLEY (5) to the 3/8" THREADED SHAFT on the TOP BOOM using one previously installed 3/8" WASHER, one 3/8" HEX NUT (9) and one previously installed 3/8" LOCK NUT as shown in FIGURE 7A.


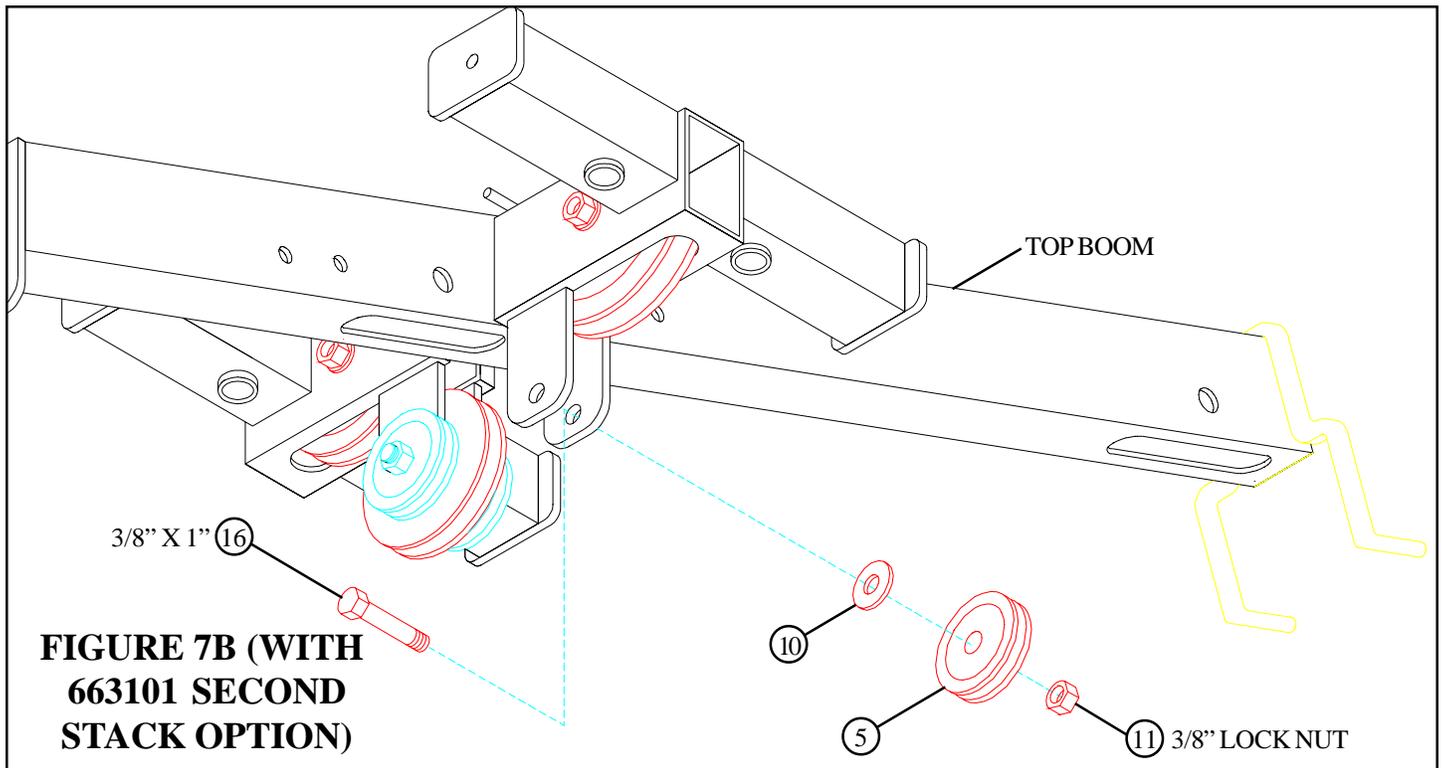



STEP 7B

- If the 663101 SECOND STACK OPTION is **NOT** installed proceed to STEP 8 .
- **SECURELY** assemble one 3/8 X 1" BOLT (16), one 3/8" WASHER (10), one 2" PULLEY (5) and one 3/8" LOCK NUT (11) to the bracket on the TOP BOOM as shown in FIGURE 7B.

STEP 8


- **SECURELY** attach one 3-1/2" PULLEY (2) to the FRONT LEG (1) using one 3/8 X 2-1/4" BOLT (14), two 3/8" WASHERS (10), and one 3/8" LOCK NUT (11). See FIGURE 8.
- Attach the open end of PRESS LINK CABLE (8) to the QUICK DISCONNECT LINK (3). See FIGURE 8.
- **SECURELY** tighten the QUICK DISCONNECT (3) to the tab on the FRONT LEG (1) as shown in FIGURE 8.

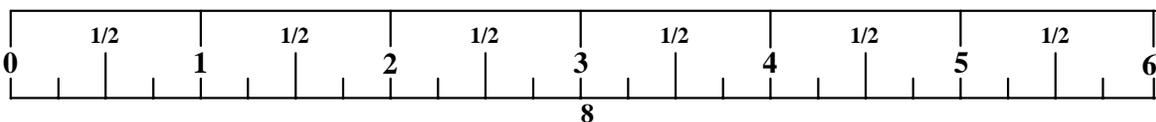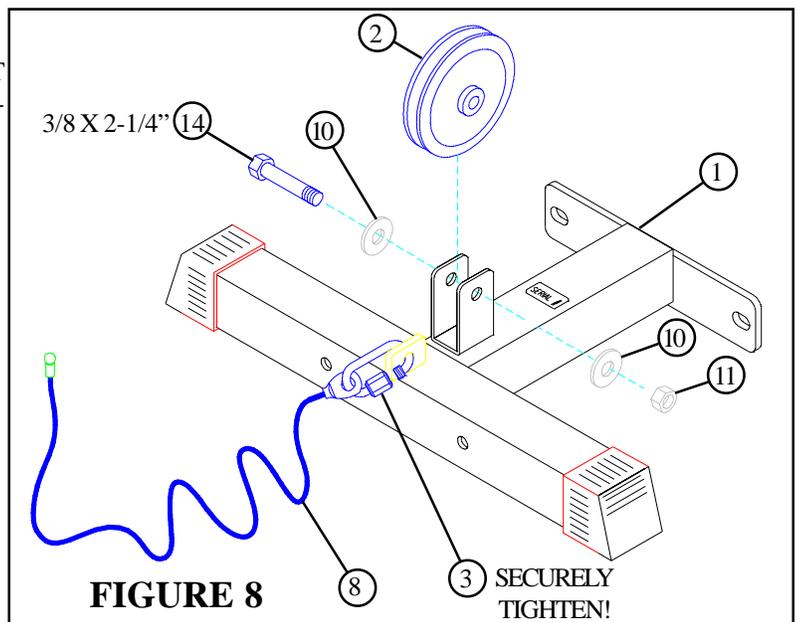

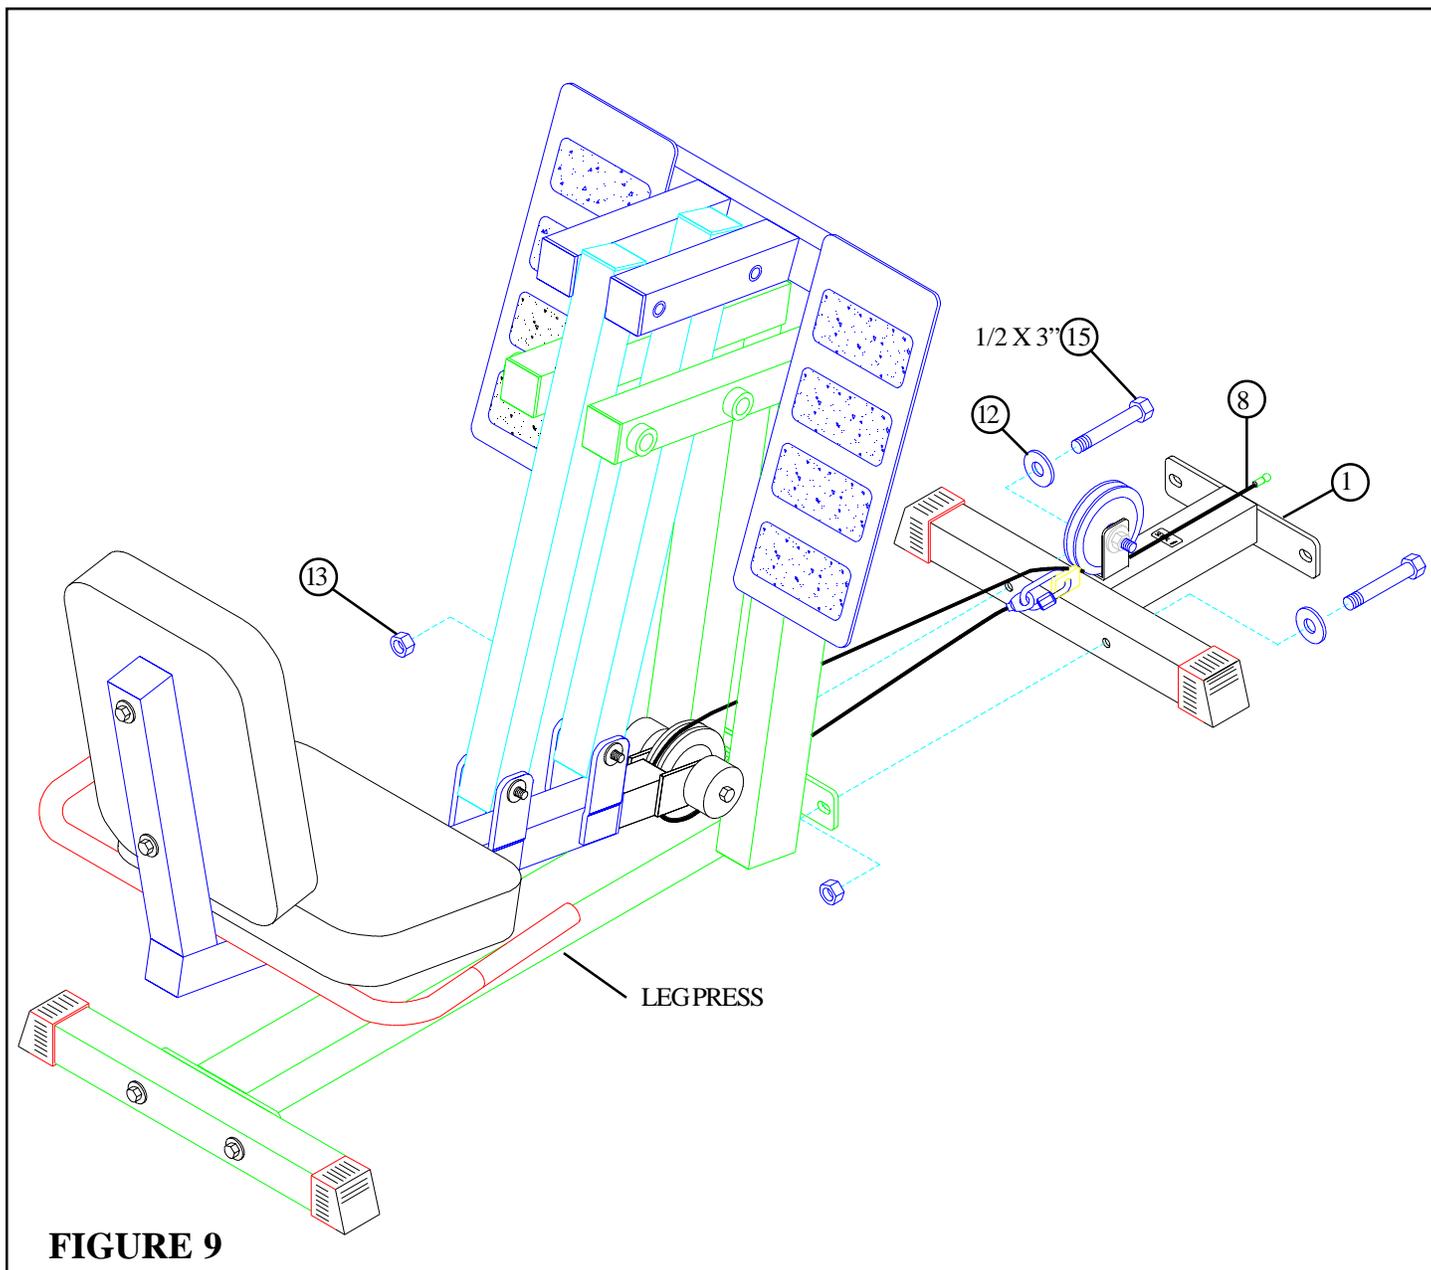


STEP 9


- **SECURELY** attach the LEG PRESS to the FRONT LEG (1) using two 1/2" X 3" BOLTS (15), two 1/2" WASHERS (12), and two 1/2" LOCK NUTS (13). See FIGURE 9.
- Route LEG PRESS CABLE (8) around the 3-1/2" PULLEY on the LEG PRESS and **UNDER** the 3-1/2" PULLEY on the FRONT LEG (1) as shown in FIGURE 9.

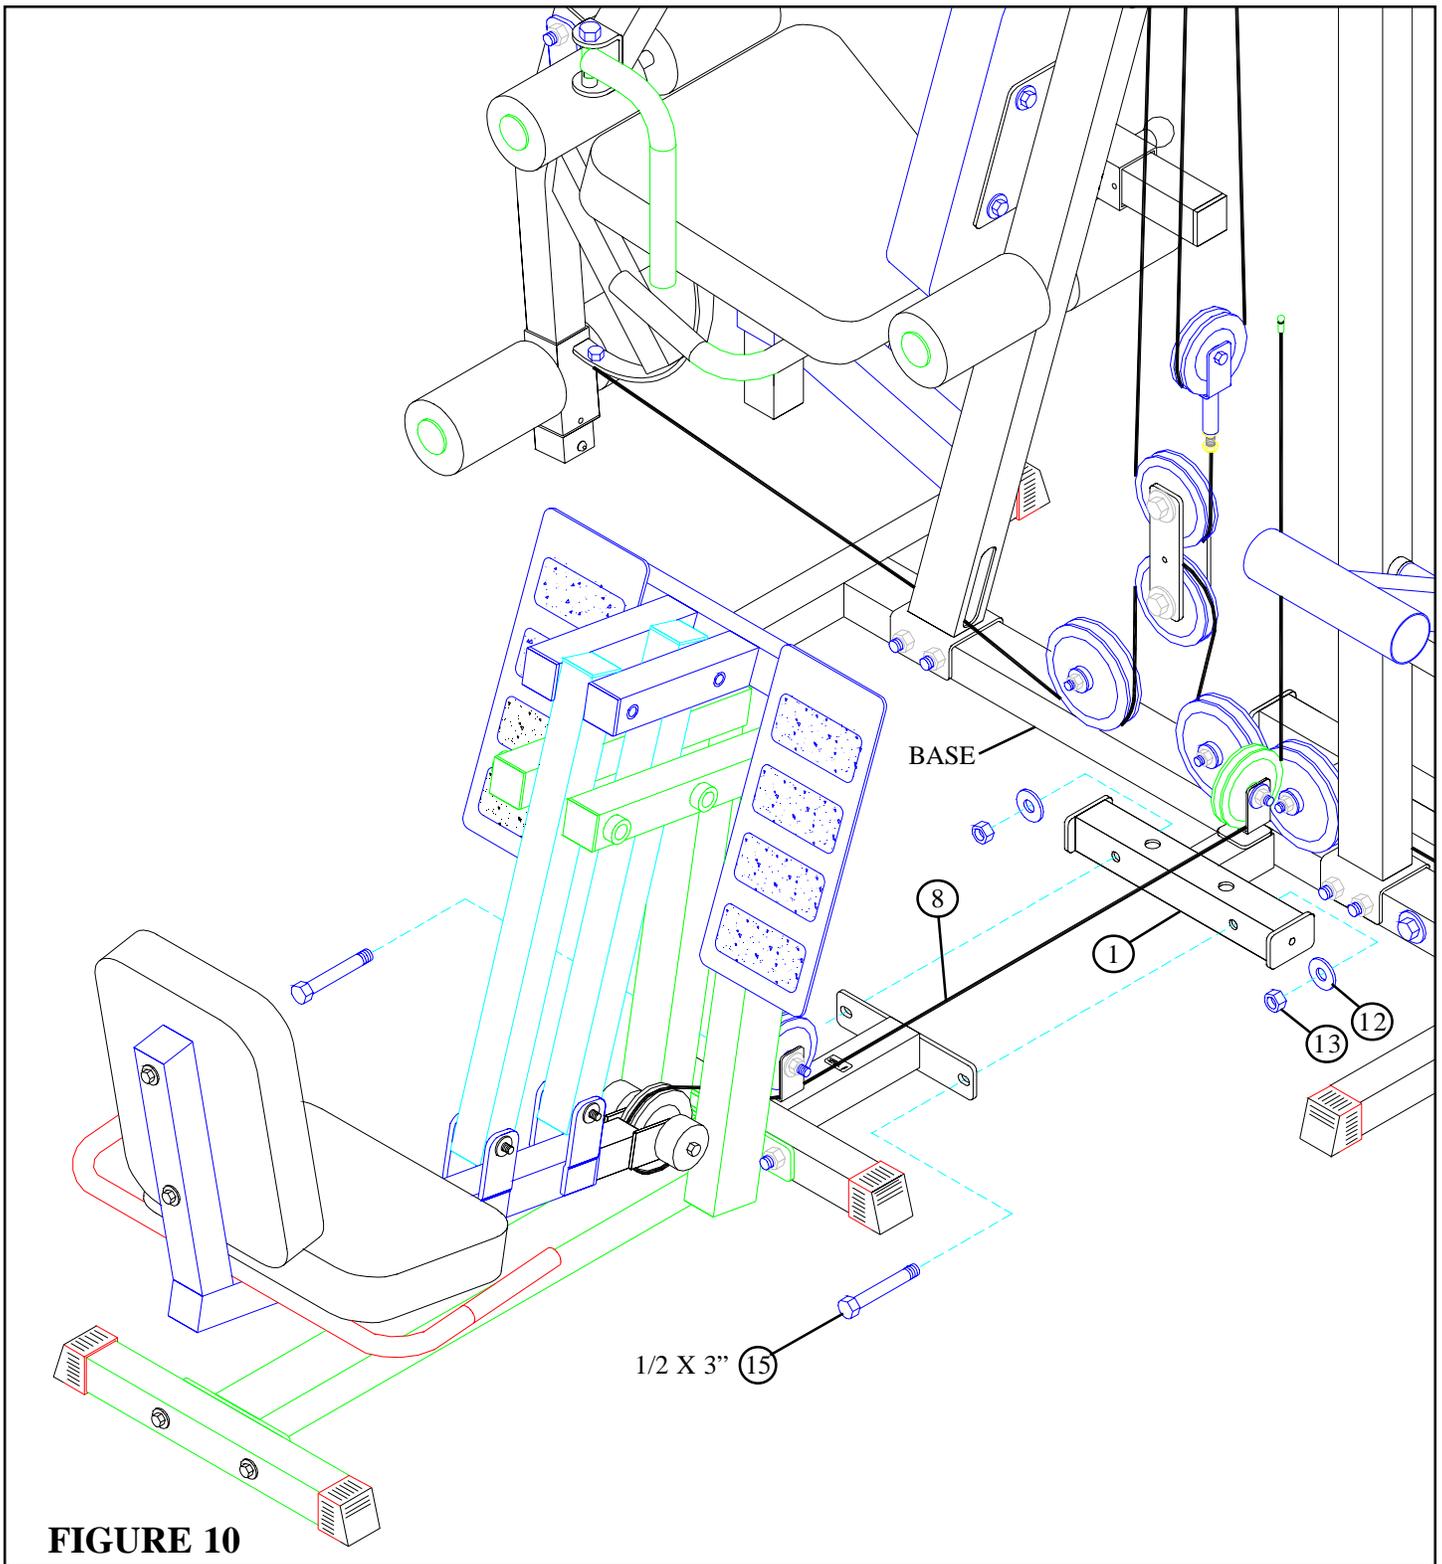

STEP 10

- **SECURELY** attach the FRONT LEG (1) to 660 BASE using two 1/2 X 3" BOLTS (15), two 1/2" WASHERS (12) and two 1/2" LOCK NUTS (13). See FIGURE 10.
- Route LEG PRESS CABLE (8) under the 3-1/2" PULLEY on the 425 BASE as shown in FIGURE 10.

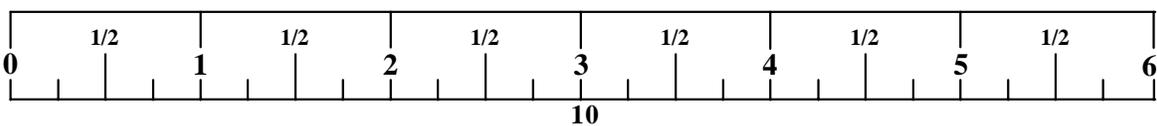

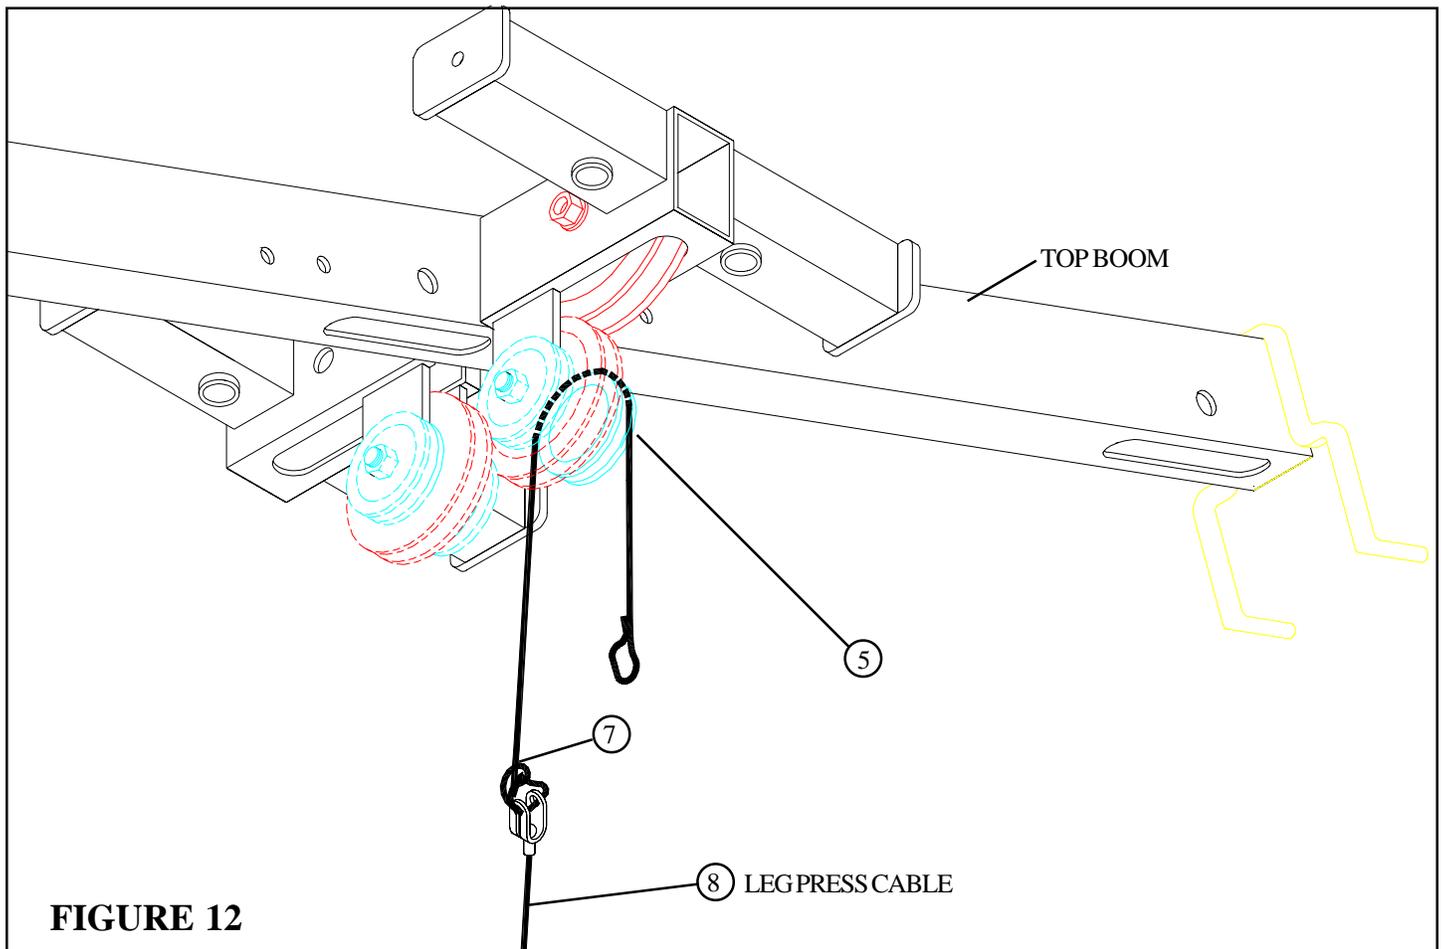


STEP 12

- Assemble the 72" ELASTIC CORD (7) from the LEG PRESS CABLE (8) around the 2" PULLEY (5) in the TOP BOOM as shown in FIGURE 12.

STEP 13

- Assemble the ELASTIC CORD(7) from the LEG PRESS CABLE to the corresponding SWIVEL SNAP (6) on the BASE as shown in FIGURE 13.

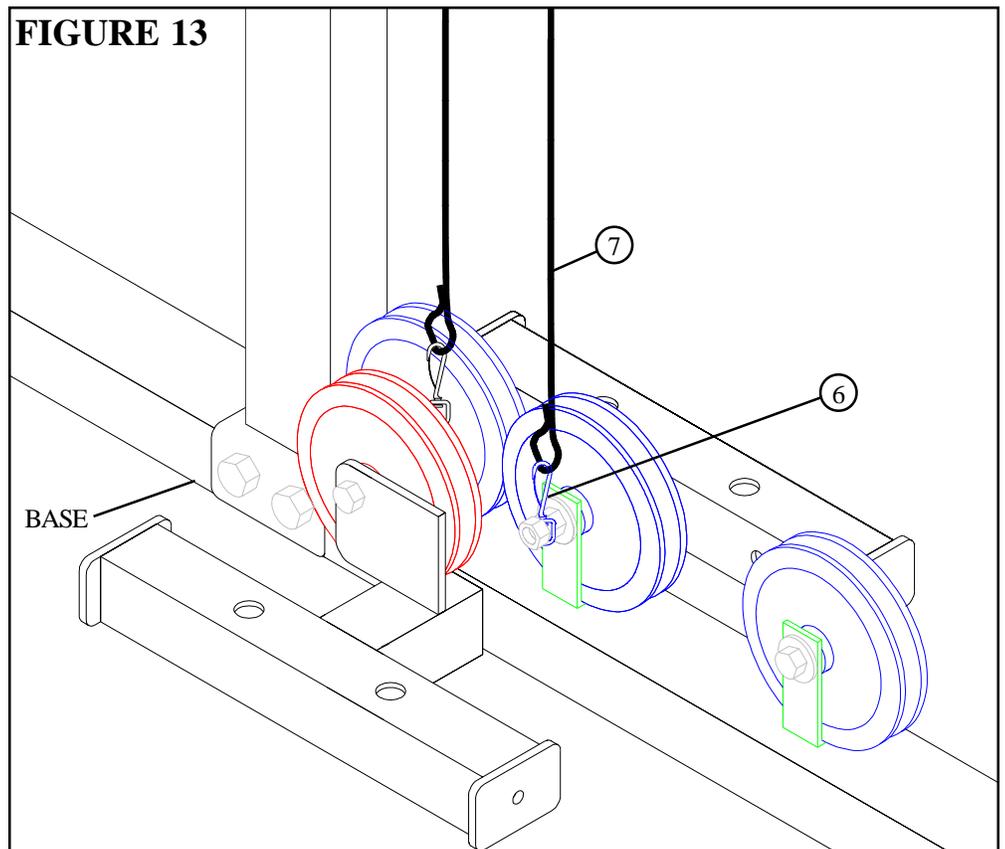

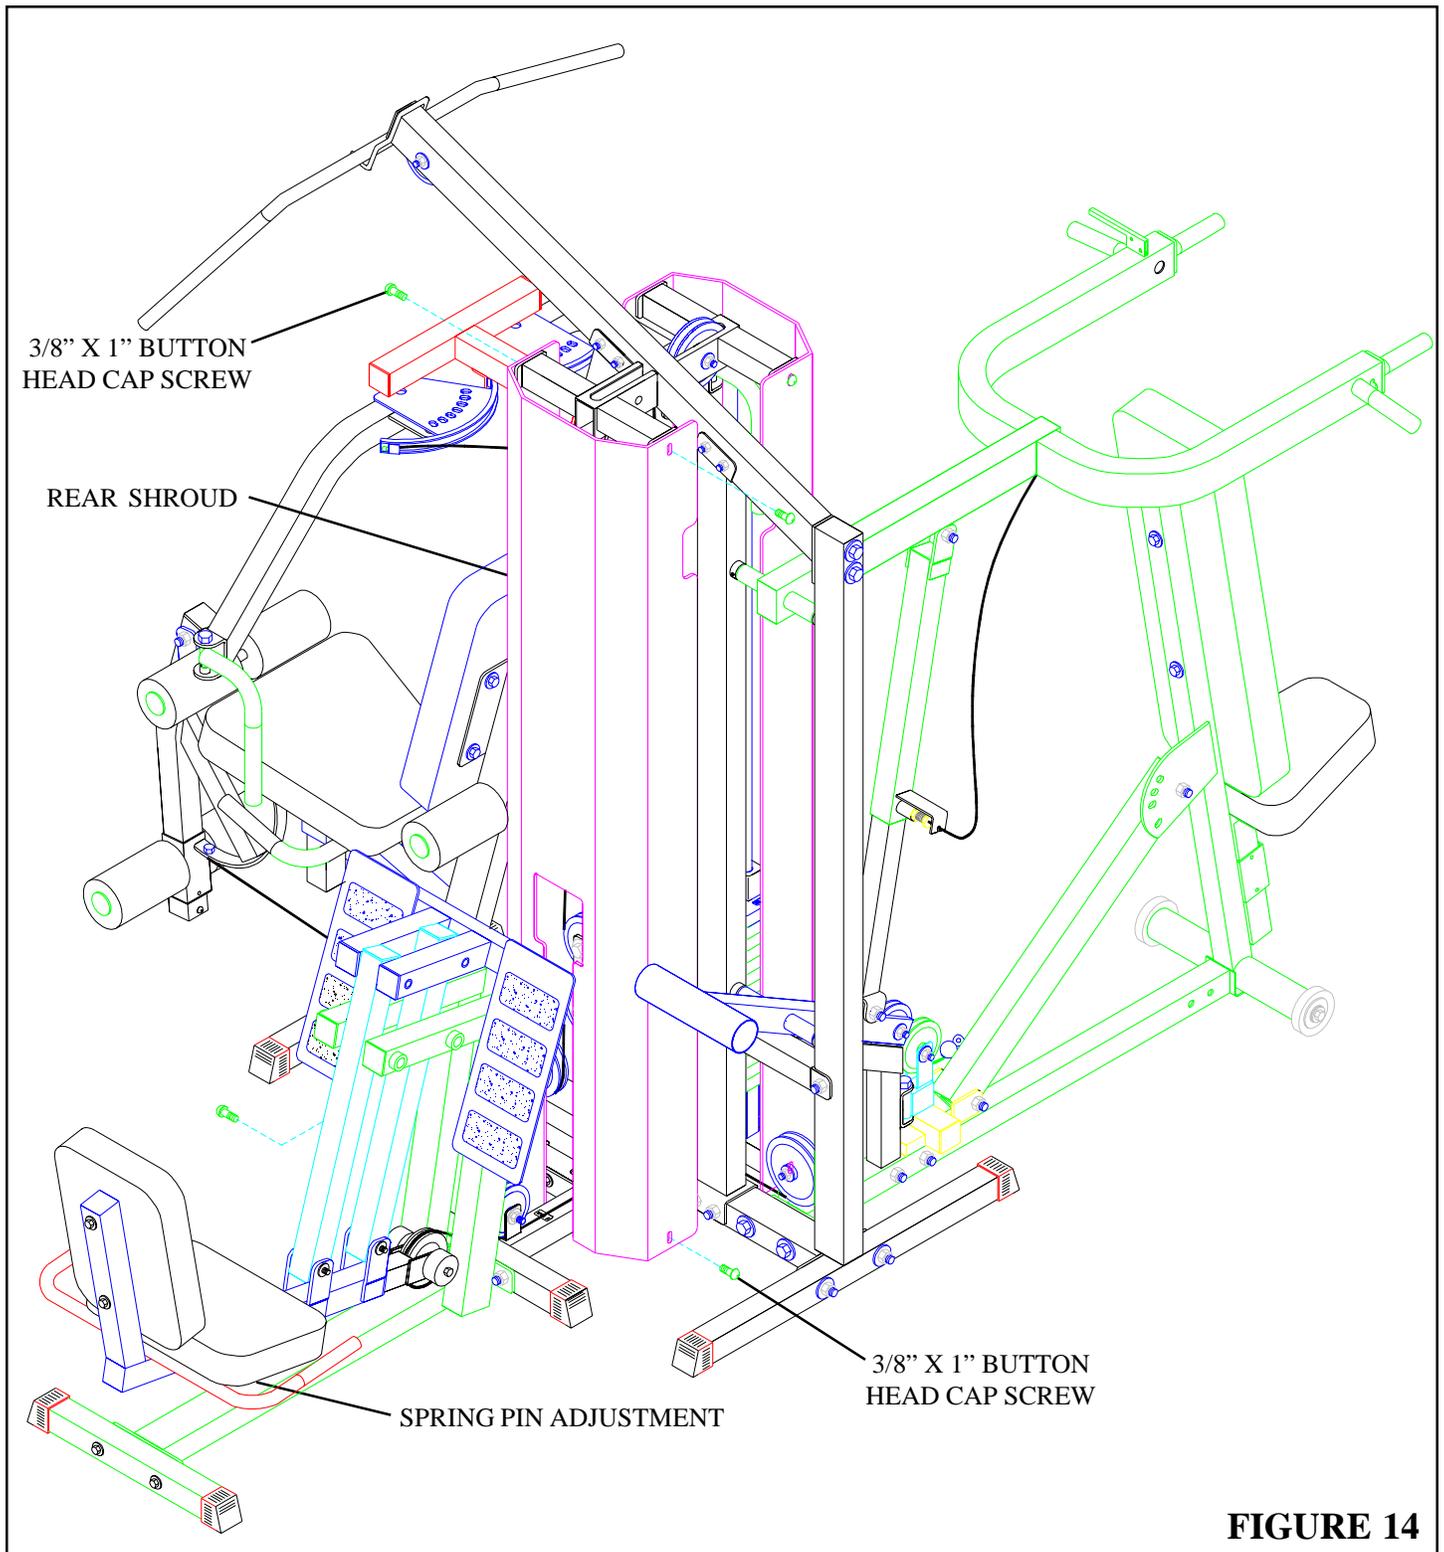


FIGURE 14

STEP 14

- **SECURELY** attach the four previously removed 3/8 X 1" BUTTON HEAD CAPSCREWS to the rear SHROUD. See FIGURE 14.
- The 100 LEG PRESS is equipped with a spring pin adjustment to accommodate different sized users and allow easy entry and exit from the machine. To use, you must slightly push against the foot plates to take tension off the pin.

Thank you for purchasing the Parabody 661101 Leg Press Adapter Kit. If unsure of proper use of equipment, call your local Parabody distributor or call the Parabody customer service department at (800) 328-9714.