


- Manual Instalación y Uso Plato Soft
- GB Soft Shower Tray Installation and User Guide

SOFT by Baños 10

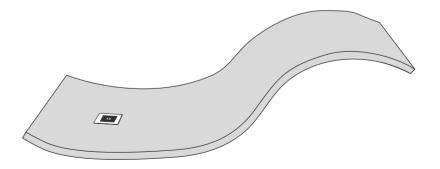

NºGarantia / Guaranteen Number :

Bañoslo

Ctra. Viver- Pto. Burriana, Km. 58'4 (tramo Vila-real - Onda) - P. O. Box 27 12200 ONDA (Castellón) España Tels.: 964 62 63 00 - 964 62 69 40 Fax: 964 62 60 09

http://www.banos10.com e-mail: banos10@banos10.com

SERVICIO DE ASISTENCIA TÉCNICA

902 360 708 sat@banos10.com

CE BAÑOS 10 S.L. CTRA. VILLAREAL-ONDA Km 12,6 12200 ONDA 11 UNE-EN 14527:2006 Platos de ducha de uso doméstico



- 1- GENERAL CONDITIONS
- 2- PRODUCT FEATURES
- **3- GUARANTEE**
- 4- DIMENSIONS
- **5- SUPPLIED ELEMENTS**
- 6- REQUIRED ELEMENTS FOR INSTALLATION
- 7- SHOWER-TRAY PRE-INSTALLATION
- 8- THINGS TO CONSIDER BEFORE INSTALLATION
- 9- OPTIONS OF INSTALLATION
- **10- SHOWER-TRAY INSTALLATION**
- 11- CLEANING, MAINTENANCE AND DURABILITY
- 12- WARNING

GENERAL CONDITIONS

Soft shower trays are made with a flexible and resistant material. The shower trays are non-sliding and have a treatment that prevents the proliferation of bacteria.

All our products have been manufactured with a strictly quality control. Baños 10 guarantee their products and components against any lack of conformity when the use of them and installation have been made correstly. The company won't be responsible of the inconveniences caused by an incorrect or inadequate use of the products, so guarantee will never cover the expenses of substitution of shower screens, tile or whatever element that shouls be replace by this wrong use or bad installation.

For a correct instalation, use and maintenance read carrefully this guide.

This product has been developed with the colaboration of Bayer Material Science.



3 GUARANTEE

Rañost

Dear Customer,

From Baños 10 we thank you for the confidence placed in us by purchasing one of our products and hope to provide an excellent service for many years.

As manufacturers and makers of the product you purchased, we are convinced of the excellent quality of it, and hope that does not need any technical intervention for a long time. However, if you require a visit or advice from our service center, both inside and outside the warranty period, we are available on the phone 902 360 708. Also, for any product-related query, please contact us by phone or email at sat@banos10.com.

GENERAL SCOPE

Baños 10, S.L. guarantees, as manufacturer to the buyer and/or user all rights under the law 23/2003 of July 10, in consumer goods sales.

It also guarantees to the buyer and/or user of the device whose data is contained in the Warranty Document, repair the equipment if it has sustained damage due to a defect in material or workmanship, provided it is intended for private use and that has been handled properly and in accordance with instructions for assembly, connection, commissioning and management. These repairs will be free including the cost of spare parts, works and displacement of technical staff to the user address presenting purchase documents and guarantee.

This warranty applies to the minimum guarantee that we offer as a producer.

IMPORTANT

To qualify for this guarantee, is essential to demonstrate to Baños 10 Official Service the date of product receipt. So, it is only necessary to show the INVOICE, receipt or the delivery note whichever is later of invoice or receipt date. So, keep your invoice or sales receipt attached with this document.



Inus



TERMS AND CONDITIONS

The deadline for claiming the conformity by the consumer is 24 months from the delivery time. In case of non-conformity, the consumer may choose between repair or replacement unless it is impossible or disproportionate. The deadline to inform Baños 10, SL any non-compliance is two months since the buyer or user had knowledge of it.

This warranty extends to the purchaser or user, provided it is duly supported by original invoice or sales receipt and delivery note. Read the user manual before using the product.

EXCLUSION OF WARRANTIES

Warranty excludes damage caused as a result of:

- Damage during transportation and / or handling the installation.
- Force majeure for all atmospheric or geological.

• Deficiency of electrical supply either by excess or defect.

• Chemical or electrochemical reactions, in combination with the material and / or water, such as those caused by spilled liquids or materials on the product, water hardness and / or excess of lime, excess humidity.

• Improper installation, not in accordance with local regulations and the manual supplied with the right editor.

• intervention or manipulation by unauthorized staff or not covered by the Official Service Baños 10, S.L., although such intervention is or has been only partial.

• Damage caused by electrical work, plumbing, masonry, carpentry, etc., Made to install the device in user's home.

• Handling of information contained in an invoice, purchase receipt or other document of the warranty.

• Usage not in accordance with manufacturer's instructions or unrelated to the purpose of the product.

• Abnormal use of the product in general.

The Warranty DOES NOT cover regular maintenance of the product such as general cleaning and all those cracks resulting from improper use or forced use of the product components.


The warranty DOES NOT cover labor costs resulting from the withdrawal of the product for repair and / or maintenance.

These conditions apply to products purchased in Spain. These guarantee conditions also apply to products taken out of Spain, if they have the technical requirements (such as voltage, frequency, etc.) of country concerned and where Baños 10, S.L. have an authorized service center in the country. For products purchased outside of Spain will apply the warranty issued by our distributor in the country concerned.

TECHNICAL SUPPORT (SAT.) BAÑOS 10 TEL. 902 360 708 FAX 964 626 415 E-mail sat@banos10.com

4 DIMENSIONS

Baños 10

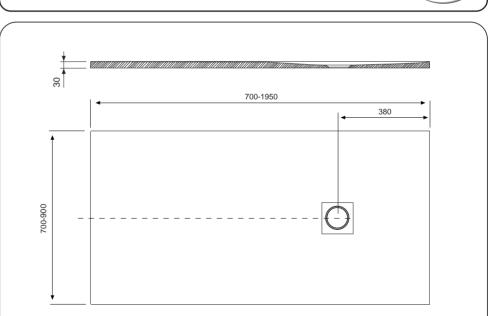

The dimensions of the shower trays have a tolerance of + /- 2,5mm.




30 1950-2050 430 200-900 30 910-2050 430 910-1000


The dimensions of the shower trays have a tolerance of + /- 2,5mm.

5 SUPPLIED ELEMENTS

Baños (

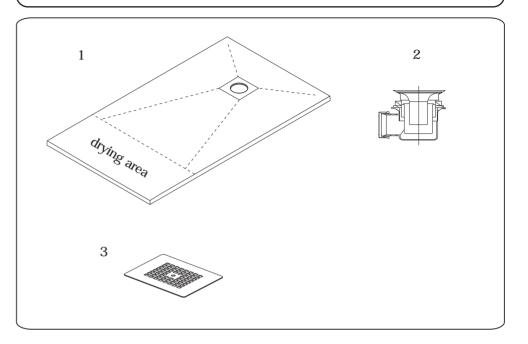


Baños](

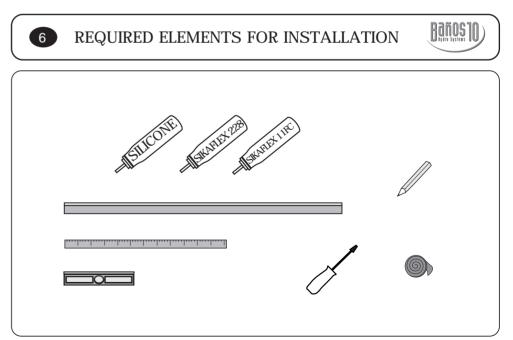

SHOWER TRAY PRE-INSTALLATION

7

8

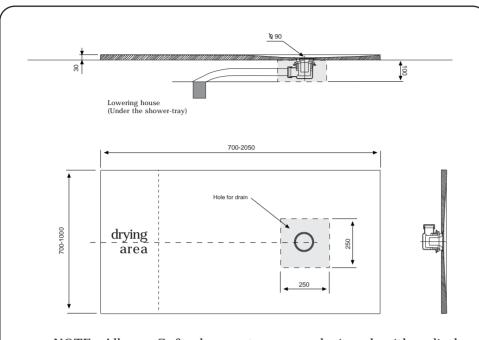

Rañoslí

Baños1

NOTE: All our Soft shower trays are designed with a light inclinaction (not normalized) from 1400 where starts the drying area.


THINGS TO CONSIDER BEFORE INSTALLATION

Aspects to be considered before installing the shower tray:

- The shower tray has to drainage correctly.
- There are no imperfections or damages on its surface.
- The features of the product about to install are correct (aspect, color, etc.)

WARNING: In case of detection of abnormalties or deficiencies DON'T INSTALL and contact the distributor to inform of the situation.



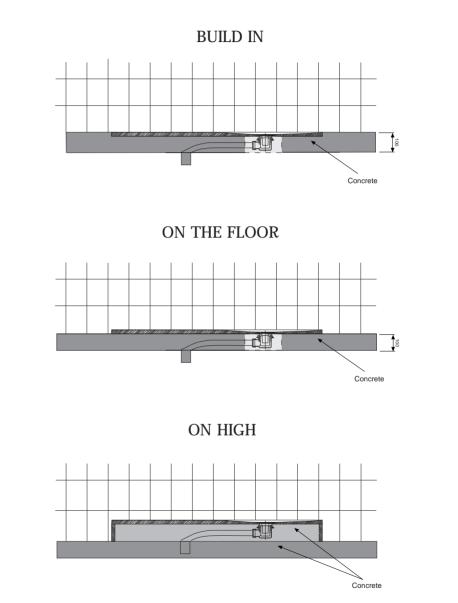

NOTE: On high installation the shower-tray has to be installed on a leveled and smooth surface too. This surface have to cover all the shower-tray's surface.



SHOWER-TRAY INSTALLATION



For a perfect installation of the shower-tray the floor must be $\ensuremath{\mathsf{PERFECTLY}}$ LEVELED.

The base must be ready with a solid and continuous concrete and never only with sand.

A hole must be made on the floor in order to set the drain pipe (see the installation).

You have to do also a hole or channel on the floor to pass the pipes from lowering house till the drain's pipe of the shower-tray.

10.2: Assembly of the drain pipe.

Put the drain's pipe on the floor in its definitive position. Connect it with the lowering house.

Check that drain-pipe hasn't water leaks and all elements don't stand out of the holes because the shower-tray wouldn't seat correctly.

WARNING: It's very important to get a slope from the drain's pipe to the lowering house to guarantee the drainage.

WARNING: It's recommended to test the drain pipe before putting the shower-tray in the correct location.

10.3: Setting of shower-tray.


Take out the shower-tray from the packaging, use the cardboard to protect the shower-tray during the installation. Use a masking tape to fix the carboard.

Put around the surface where the shower tray will be installed a line of Sikaflex, includying the angles between the walls and the shower tray. It will prevent that the water takes out from the shower tray.


> WARNING: The assembly and installation of the shower tray must be made with polyurethane mastic, never with cementitious or rigid adhesives (Baños 10 recommend Sikaflex 228 and Sikaflex 11FC).

Put the shower-tray in the definitely position to check if the drain pipe and the hole's shower-tray match up. If the hole and the drain pipe don't match up you have to change the position drain pipe.

Put a layer of Sikaflex 11FC around the perimeter. The higth of the layer has to be minimum 3 cm.

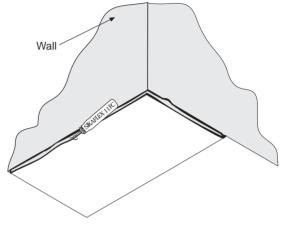


Apply a thin and uniform layer of flexible polyurethanemastic to secure the fixing of the shower tray.

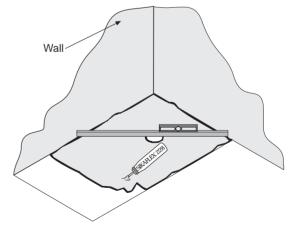


NOTE: The useful life of the polyure thane mastic is 40minutes. The adherence isn't guarented after this time.




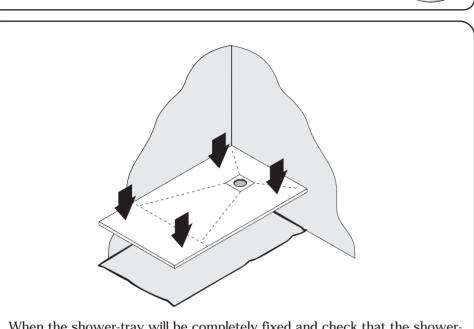

łdňos

When the shower-tray will be completely fixed and check that the shower-tray works in a correct use, you can tiling the walles of the bath.

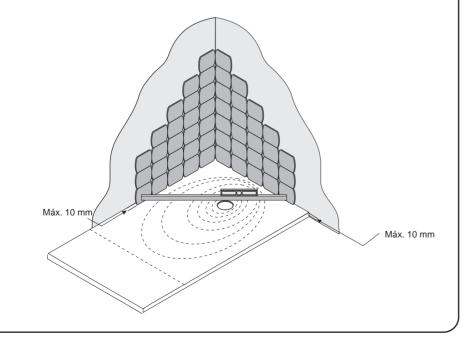

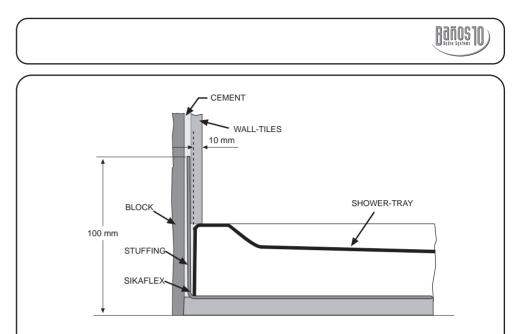

NOTE: Don't put the shower-tray more than 10mm. inside the wall between both sides. In this case, we will avoid problems with the shower-screen.

Adjust the shower-tray, check that it is leveled (in the lurching and tilting directions) and that it works correctly.

Between the shower-tray and the ground <code>musn`t</code> be air to fixed the shower-tray perfectly.

Take out the cardboard protector, fill the space between the wall and the shower-tray with Sikaflex 11FC, then silicone around the shower-tray with neutral flexible silicon (non acetic) and clean the silicon rests.

Once the shower-tray is in the right position, put the grill.

The shower-tray has to be fixed and leveled, otherwise the screen's doors won't slide properly.


You can use the shower-tray one day after installation, when silicone and sikaflex get totally dried.

Check that the shower-tray is installed and works correctly before tiling the rest of the bathroom.

Máx. 10 mm Lurching direction

Raños

WARNING: Baños 10 doesn't responsabilize of the cut and incorrect manipulation of the shower-tray by the user. The perfect sealing of the product is only guaranteed if the cut is made at Baños 10. Any outer cut nullify the product warranty.

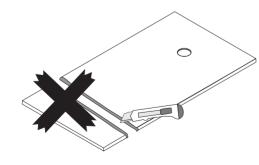


WARNING: Be careful with the sharp elements!



* Shower-trays whose measure are lower to 1000:

The shower-trays whose measure are lower to 1000 in length have to be installed with their "cutted" part builted-in the wall. The shower screen couldn't be installed if it doesn't happens (see the associated drawing).

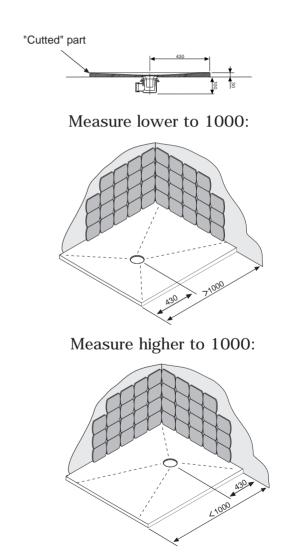



CLEANING, MAINTENANCE AND DURABILITY



If concrete or some other materials are in contact with the shower-tray, use water and soap to clean the joints. Avoid to rub directly.


For usual cleaning is enough to wash out with water and dry off.

For a exhaustive cleaning use a soft cloth with neutral liquid not abrasive. In case of dirtiness or calcareous silt, clean with soapu wrater or anti-lime product. Rinse with tepid water and dry off.

The Soft shower-trays don't need any specific maintenance.

In this following chart we specify the results of durability caused by the frequent chemical agents used in the bathroom.

DOMESTIC AGENTS	DEGRADATION
Bleach	24h (5)
"Salfumán"	4h (1)
"Don Limpio"	24h (3)
"Viakal"	24h (4+)
Vinegar	24h (2)
Ammonia	24h (4)
"KH-7"	24h (5)
"Cilit Bang"	24h (5)
Acetone	1 min. (1)
Isopropanol	5min. (5)
Tint of dark hair	5min. (2)
Tint of normal hair	5min. (2)
Lacquer of dark nails	5min. (3)
Lacquer of clear nails	1h (5)
Oxygenated water	24h (3)
"Betadine"	1 min. (3)

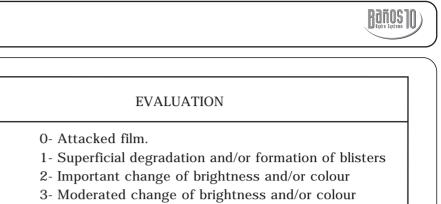

- 4- Slight change of brightness and/or colour, only visible from certain inspection.
- 5- Without evident changes

12 WARNING



Once the shower-tray will be installed if you check a default or a drilling on the external surface of the shower-tray you have to contact immidiately with the assistant technical support of Baños 10.

The shower-tray will be momentarily disably to avoid bigger damages.