



Email: techsupport@norgenbiotek.com

Cells and Tissue DNA Isolation Kit **Product # 53100**

Product Insert

Norgen's Cells and Tissue DNA Isolation Kit is designed for the rapid preparation of genomic DNA from cultured cells as well as various tissue samples and urine. Purification is based on spin column chromatography as the separation matrix. Norgen's columns bind DNA under optimized salt concentrations and release the bound DNA under low salt and slightly alkali conditions. The purified genomic DNA is fully digestible with all restriction enzymes tested, and is completely compatible with PCR and Southern Blot analysis.

The Cells and Tissue DNA Isolation Kit allows for the isolation of genomic DNA from various types of animal tissues or cell samples. The genomic DNA is preferentially purified from other cellular proteinaceous components. Typical yields of genomic DNA will vary depending on the sample being processed. Preparation time for a single sample is approximately 60 minutes, and each kit contains sufficient materials for 50 preparations.

Kit Components

Component	Product # 53100 (50 samples)
Lysis Buffer B	20 mL
Solution WN	18 mL
Wash Solution A	18 mL
Elution Buffer B	30 mL
Proteinase K	1.2 mL
Spin Columns	50
Collection Tubes	50
Elution tubes (1.7 mL)	50
Product Insert	1

Advantages

- Isolate genomic DNA from cultured cells as well as various tissue types
- Fast and easy processing using a rapid spin-column format
- Isolate high quality genomic DNA
- Recovered genomic DNA is compatible with various downstream applications

Storage Conditions and Product Stability

All solutions should be kept tightly sealed and stored at room temperature. These reagents should remain stable for at least 1 year in their unopened containers. The kit contains a ready-touse Proteinase K solution, which is dissolved in a specially prepared storage buffer. The Proteinase K is stable for up to 1 year after delivery when stored at room temperature. To prolong the lifetime of Proteinase K, storage at 2-8°C is recommended.

Precautions and Disclaimers

This kit is designed for research purposes only. It is not intended for diagnostic use. Ensure that a suitable lab coat, disposable gloves and protective goggles are worn when working with chemicals. For more information, please consult the appropriate Material Safety Data Sheets (MSDSs). These are available as convenient PDF files online at www.norgenbiotek.com.

The Lysis Buffer B and Solution WN contain quanidinium salts, and should be handled with care. Guanidinium salts form highly reactive compounds when combined with bleach, thus care must be taken to properly dispose of any of these solutions.

Customer-Supplied Reagents and Equipment

- · Benchtop microcentrifuge
- Micropipettors
- 2 mL microcentrifuge tubes
- Nuclease-free water
- Phosphate buffered saline (PBS)
- 96 100% ethanol
- 56°C waterbath or incubator
- Cell Disruption Tools such as mortar and pestle, rotor-stator homogenizer
- Syringe with a 22G needle
- RNase A (optional)
- Lysozyme (400 mg/mL) (Required only for lysate preparation from Urine Bacterial Cells)

Procedure

All centrifugation steps are carried out in a benchtop microcentrifuge. Various speeds are required for different steps, so please check your microcentrifuge specifications to ensure that it is capable of the proper speeds. All centrifugation steps are performed at room temperature. The correct rpm can be calculated using the formula:

RPM =
$$\sqrt{\frac{RCF}{(1.118 \times 10^{-5}) (r)}}$$

where RCF = required gravitational acceleration (relative centrifugal force in units of g); r = radius of the rotor in cm; and RPM = the number of revolutions per minute required to achieve the necessary g-force.


Section 1. Preparation of Lysate From Various Cell Types

Notes Prior to Use:

- The steps for preparing the lysate are different depending on the starting material (Section 1). However, the subsequent steps are the same in all cases (Section 2).
- Please ensure that the correct procedure for preparing the lysate from your starting material is followed.
- A variable speed centrifuge should be used for maximum kit performance. If a variable speed centrifuge is not available a fixed speed centrifuge can be used, however reduced yields may be observed.
- Ensure that all solutions are at room temperature prior to use, and that no precipitates have formed. If necessary, warm the solutions and mix well until the solutions become clear again.
- Prepare a working concentration of the Solution WN by adding 24 mL of 96 100 % ethanol (provided by the user) to the supplied bottle containing the concentrated Wash Solution I. This will give a final volume of 42 mL. The label on the bottle has a box that may be checked to indicate that the ethanol has been added.
- Prepare a working concentration of the Wash Solution A by adding 42 mL of 96 100 % ethanol (provided by the user) to the supplied bottle containing the concentrated Wash Solution II. This will give a final volume of 60 mL. The label on the bottle has a box that may be checked to indicate that the ethanol has been added.
- Preheat a water bath or heating block to 56°C.
- Always vortex the Proteinase K before use.
- For Lysate Preparation from Urine Bacterial Cells: Prepare a 400 mg/mL stock solution (approximately 1.7 x10⁷ units/mL) of lysozyme as per supplier's instructions.

Flow Chart

Procedure for Purifying Genomic DNA using Norgen's Cells and Tissue DNA Isolation Kit

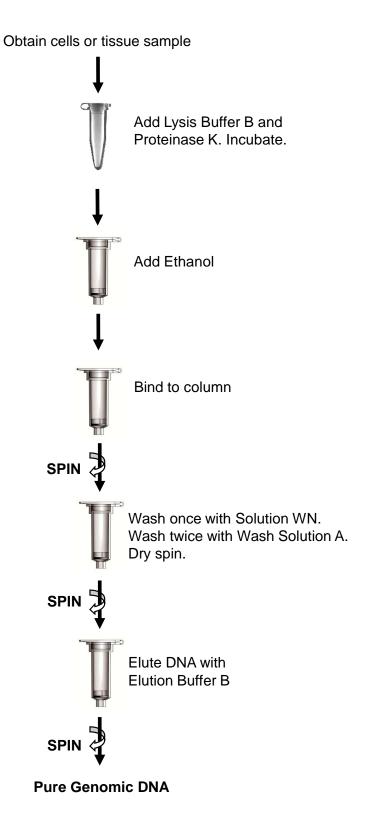

1A. Lysate Preparation from Animal Tissues

Notes Prior to Use

- Fresh or frozen tissues may be used for the procedure. Tissues should be immediately frozen and stored at -20°C or -70°C. Tissues may be stored at -70°C for several months.
- It is recommended that no more than 20 mg of tissue be used, in order to prevent clogging of the column.

1A. Lysate Preparation from Animal Tissues

- a. Excise up to 20 mg of tissue sample. Either frozen or fresh tissue may be used.
- **b.** Homogenize the sample into a fine powder in liquid nitrogen using a mortar and pestle, then transfer into a nuclease-free microfuge tube.
- c. Add 300 μ L of the Lysis Buffer B to the tissue sample.

Note: The sample can also be homogenized using tools such as a rotor-stator homogenizer or a microfuge-size pestle in the provided Lysis Solution. Ensure efficient homogenization to enhance tissue lysis and reduce the risk of column clogging.

- **d.** Use a syringe with a 22G needle to further homogenize the lysate by passing through the needle 10 times.
- e. Add 20 μL of **Proteinase K** (vortex before use) to the lysate. Mix well by gentle vortexing.
- **f.** Incubate at 56°C for 1 hour.

Note: Incubation times may fluctuate between 45 minutes to over 2 hours depending on the type of tissue being lysed. Lysis is considered complete when a relatively clear lysate is obtained.

g. Add 300 μL of nuclease-free water. Mix by vortexing.

Optional RNase A Treatment:

If RNA-free genomic DNA is required, add the equivalent of 10 KUnitz of RNase A (not to exceed 20 μ L) to the lysate. Mix well and incubate at 37°C for 15 minutes.

- **h.** Add 170 μ L of 96 100% ethanol. Mix by vortexing.
- i. Proceed to Step 2: Binding to Column.

1B. Lysate Preparation from Cultured Animal Cells

Notes Prior to Use

- Cells grown in suspension or monolayer may be used.
 - The maximum recommended input of cells is 3 x 10⁶. A hemocytometer can be used in conjunction with a microscope to count the number of cells. As a general guideline, a confluent 3.5 cm plate of HeLa cells will contain 10⁶ cells.
 - Cell pellets can be stored at -70°C for later use or used directly in the procedure.
 Determine the number of cells present before freezing.
 - Frozen cell pellets should not be subjected to repeated cycles of freeze and thaw prior to beginning the protocol.

1B(i). Cell Lysate Preparation from Cells Growing in a Monolayer

- **a.** Detach cells by standard trypsinization method or cell scraper. Transfer an appropriate amount to a 1.5 mL microfuge tube (not provided). The maximum recommended input of cells is 3 x 10⁶.
- **b.** Collect cells by centrifugation at no more than 200 x g (~2,000 RPM) for 10 minutes. Discard the supernatant
- **c.** Add 100 μ L of phosphate buffered saline (PBS) to the cell pellet. Mix by gentle vortexing.

- **d.** Add 20 μL of **Proteinase K** (vortex before use) to the lysate.
- e. Add 300 μL of Lysis Buffer B. Mix well by vortexing.
- f. Incubate at 56°C for 20 minutes.

Optional RNase A Treatment:

If RNA-free genomic DNA is required, add the equivalent of 10 KUnitz of RNase A (not to exceed 20 μ L) to the lysate. Mix well and incubate at 37°C for 15 minutes.

- g. Add 250 μ L of 96 100% ethanol. Mix by vortexing.
- **h.** Proceed to Step 2: Binding to Column.

1B (ii). Cell Lysate Preparation from Cells Growing in Suspension and Lifted Cells

- **a.** Transfer an appropriate amount of cells to a 1.5 mL microfuge tube (not provided). The maximum recommended input of cells is 3 x 10⁶.
- **b.** Collect cells by centrifugation at no more than 200 x g (~2,000 RPM) for 10 minutes. Discard the supernatant.
- c. Add 100 µL of phosphate buffered saline (PBS) to the cell pellet. Mix by gentle vortexing.
- d. Add 20 μ L of **Proteinase K** (vortex before use) to the lysate.
- e. Add 300 μL of Lysis Buffer B. Mix well by vortexing.
- **f.** Incubate at 56°C for 20 minutes.

Optional RNase A Treatment:

If RNA-free genomic DNA is required, add the equivalent of 10 KUnitz of RNase A (not to exceed 20 μ L) to the lysate. Mix well and incubate at 37°C for 15 minutes.

- g. Add 250 μ L of 96 100% ethanol. Mix by vortexing.
- h. Proceed to Step 2: Binding to Column.

1C. Lysate Preparation for Viral DNA

Notes Prior to Use

- For the isolation of integrated viral DNA, follow Section **1A** if the starting material is animal tissue and follow Section **1B** if the starting material is cell culture.
- For the isolation of DNA from free viral particles, follow the protocol provided below.
- Up to 150 μL of viral suspension can be processed.
- Fresh samples are recommended. Frozen samples may be used, however the yield of genomic DNA may be decreased.

1C. Lysate Preparation for Viral DNA

- **a.** To a 1.5 mL microfuge tube (not provided), add 20 μ L of **Proteinase K** (vortex before use).
- **b.** Transfer up to 150 μL of viral suspension to the tube.
- c. Add 300 µL of Lysis Buffer B. Mix well by vortexing.
- **d.** Incubate at 56°C for 1 hour.

Note: Incubation times may fluctuate between 45 minutes to over 2 hours depending on the type of cell being lysed. Lysis is considered complete when a relatively clear lysate is obtained.

Optional RNase A treatment:

If RNA-free genomic DNA is required, add the equivalent of 10 KUnitz of RNase A (not to exceed 20 μ L) to the lysate. Mix well and incubate at 37°C for 15 minutes.

- e. Add 250 µL of 96 100% ethanol. Mix by vortexing.
- f. Proceed to Step 2: Binding to Column.

1D. Lysate Preparation from Urine Exfoliated Cells

Notes Prior to Use

- It is recommended that no more than 50 mL of urine be used for each column.
- It is recommended that at least 1 mL of urine is used for each isolation.

1D. Lysate Preparation from Urine Exfoliated Cells

a. Transfer 1 - 1.5 mL of urine to a microcentrifuge tube and centrifuge at 2,000 RPM for 5 minutes to pellet the cells. Pour off the supernatant carefully so as not to disturb or dislodge the cell pellet.

Note: For urine samples larger than 1.5 mL a swinging bucket centrifuge can be used to pellet the cells at 2,000 RPM for 5 minutes. The maximum input of urine is 50 mL or 1 x 10⁶ cells per column. We recommend that the cell count be determined using standard cytological methods.

- **b.** Add 100 μ L of phosphate buffered saline (PBS) to the cell pellet. Resuspend the cells by gentle vortexing.
- c. Add 300 μ L of the Lysis Buffer B and 20 μ L of Proteinase K (always vortex before use) to the cell suspension. Mix well by gentle vortexing and incubate at 55°C for 15 minutes.

Optional RNase A Treatment:

If RNA-free genomic DNA is required, add the equivalent of 10 KUnitz of RNase A (not to exceed 20 μ L) to the lysate. Mix well and incubate at 37°C for 15 minutes.

- **d.** Add 250 μL of 96 100% ethanol. Mix by vortexing.
- e. Proceed to Step 2: Binding to Column.

1E. Lysate Preparation from Urine Bacterial Cells

Notes Prior to Use

- It is recommended that no more than 50 mL of urine be used for each column.
- It is recommended that at least 1 mL of urine is used for each isolation.

1E. Lysate Preparation from Urine Bacterial Cells

a. Transfer 1 - 1.5 mL of urine to a microcentrifuge tube and centrifuge at 14,000 RPM for 3 minutes to pellet the cells. Pour off the supernatant carefully so as not to disturb or dislodge the cell pellet.

Note: For urine samples larger than 1.5 mL a swinging bucket centrifuge can be used to pellet the cells at 3,000 x g for 5 minutes. The maximum input of urine is 50 mL.

- **b.** Add 100 μ L of phosphate buffered saline (PBS) to the cell pellet. Resuspend the cells by gentle vortexing.
- c. Add 300 μ L of the Lysis Buffer B, 12 μ L of previously prepared lysozyme stock solution and 20 μ L of Proteinase K (always vortex before use) to the cell suspension. Mix well by gentle vortexing and incubate at 55°C for 30 minutes.

Optional RNase A Treatment:

If RNA-free genomic DNA is required, add the equivalent of 10 KUnitz of RNase A (not to exceed 20 μ L) to the lysate. Mix well and incubate at 37°C for 15 minutes.

- **d.** Add 250 μ L of 96 100% ethanol. Mix by vortexing.
- e. Proceed to Step 2: Binding to Column.

Section 2. Genomic DNA Purification from All Types of Lysate

Note: The remaining steps of the procedure for the purification of genomic DNA are the same from this point forward for all the different types of lysate.

2. Binding to Column

a. Assemble a **Spin Column** with a provided collection tube. Apply up to 750 μ L of the mixture to the spin column assembly. Cap the column, and centrifuge the unit for 2 minutes at 5,200 x g (~ 8,000 RPM).

Note: Ensure the entire lysate volume has passed through into the collection tube by inspecting the column. If the entire lysate volume has not passed, spin at $14,000 \times g$ (~14,000 RPM) for 2 minutes.

- **b.** After centrifugation, discard the flowthrough, and reassemble the spin column with its collection tube.
- c. Repeat Step 2a and Step 2b until all the lysate mixture has passed through the column

3. Washing Bound DNA

a. Apply 500 μ L of **Solution WN** (ensure ethanol was added) to the column and centrifuge for 1 minute at 6,000 x g (~8,000 RPM). Discard the flowthrough and reassemble the spin column with its collection tube.

Note: Ensure the entire wash solution has passed through into the collection tube by inspecting the column. If the entire wash volume has not passed, spin for an additional minute.

- **b.** Apply 500 μ L of **Wash Solution A** (ensure ethanol was added) to the column and centrifuge for 1 minute at 14,000 x g (~14,000 RPM). Discard the flowthrough and reassemble the spin column with its collection tube.
- c. Wash column another time by adding 500 μ L of **Wash Solution A** and centrifuging for 1 minute at 14,000 x g (~14,000 RPM). Discard the flowthrough and reassemble the spin column with its collection tube.
- **d.** Spin the column for 2 minutes in order to thoroughly dry the column at 14,000 x g (~14,000 RPM). Discard the collection tube.

4. Elution of Clean DNA

- **a.** Place the column into a provided 1.7 mL elution tube.
- **b.** Add 200 µL of **Elution Buffer B** to the column.
- **c.** Incubate at room temperature for 1 minute.
- **d.** Centrifuge for 1 minute at 6,000 x g (~8,000 RPM)

(Optional): An additional elution may be performed if desired by repeating steps **4a – 4d**. Collect second elution into a new microcentrifuge tube. The yield can be improved by an additional 20-30% when this second elution is performed.

5. Storage of DNA

The purified DNA sample may be stored at 4°C for a few days. It is recommended that samples be placed at –20°C for long term storage.

Troubleshooting Guide

Problem	Possible Cause	Solution and Explanation
The mini spin column is clogged	The sample is too large	Do not exceed the recommended amount of starting materials. The amount of starting material may need to be decreased if the column shows clogging below the recommended levels. Clogging can also be alleviated by increasing the g-force and/or centrifuging for a longer period of time until the lysate passes through the column.
The lysate is very gelatinous prior to loading onto the column	The lysate solution mixture is not homogeneous	To ensure a homogeneous solution, vortex for 10-15 seconds before applying the lysate to the spin column.
	Maximum number of cells or amount of tissue exceeds kit specifications	Refer to specifications to determine if amount of starting material falls within kit specifications.
The yield of genomic DNA is low	Improper storage of samples	Tissue samples and cell pellets may be frozen and stored at -20°C or -70°C. Repeated freezing and thawing of stored samples should be avoided, as this may lead to decreased yields of DNA.
	Incomplete lysis of cells	Ensure efficient homogenization of tissue samples and extend the incubation time of Proteinase K digestion or reduce the amount of tissue or cells used for lysis.
The genomic DNA is sheared	The genomic DNA was handled improperly	Pipetting steps should be handled as gently as possible. Reduce vortexing times during mixing steps (no more than 10-15 seconds).
	Improper storage of sample	Repeated freezing and thawing of stored samples should be avoided as this may lead to decreased DNA size.
	The sample is old	Sheared DNA may be obtained from old tissue or cell samples. Fresh samples are recommended for maximum genomic DNA yield
DNA does not perform well in downstream applications.	DNA was not washed with the provided solutions	Ensure the column was washed once with Wash Solution WN and twice with Wash Solution A.
	Ethanol carryover	Ensure that the dry spin under the Column Wash procedure is performed, in order to remove traces of ethanol prior to elution. Ethanol is known to interfere with many downstream applications.

Related Products	Product #
Lysozyme (1 gram)	41800
Lysozyme (5 grams)	41805
HighRanger 1kb DNA Ladder	11900
UltraRanger 1kb DNA Ladder	12100
Bacterial Genomic DNA Isolation Kit	17900
Blood DNA Isolation Mini Kit	46300

Technical Support

Contact our Technical Support Team between the hours of 8:30 and 5:30 (Eastern Standard Time) at (905) 227-8848 or Toll Free at 1-866-667-4362.

Technical support can also be obtained from our website (www.norgenbiotek.com) or through email at techsupport@norgenbiotek.com.

3430 Schmon Parkway, Thorold, ON Canada L2V 4Y6 Phone: (905) 227-8848 Fax: (905) 227-1061 Toll Free in North America: 1-866-667-4362