

2360 Boswell Road  
Chula Vista, CA 91914  
Phone 619.216.1444  
Fax 619.216.1474  
E-Mail tech@explorerprocomp.com



## **PRO COMP SUSPENSION**

---

**Suspension Systems that Work!**

**PN# 61239  
2003-2008 Dodge  
RAM Cummins  
2500/3500 4WD  
(Except PowerWagon)  
Steering Box  
Brace Kit**

This document contains very important information that includes warranty information and instructions for resolving problems you may encounter. Please keep it in the vehicle as a permanent record.

<b>Part #</b>	<b>Description</b>	<b>Qty.</b>
94-8148	STEERING BOX STABILIZER BAR	1
90-4336	BEARING ASSEMBLY	1
90-4335	SECTOR SHAFT NUT EXTENSION	1
90-6796	HARDWARE PACK: Stabilizer Bar	1
	12mm-1.75 X 40mm 10.9 HEX BOLT	2
	12mm FLAT WASHER	2
	12mm SPLIT LOCK WASHER	2
	10mm-1.50 X 35mm 10.9 FLANGE HEX BOLT	4
	10mm FLAT WASHER	4

*NOTE: All part images may vary from catalog and instructions.*

### **RECOMMENDED PRO COMP SHOCKS**

#### **Front:**

#### **Rear:**

**03-08 Ram 2500/3500 4WD:**

**924553, MX6139**

**927543, MX6098**

### **Optional Equipment Available from your Pro Comp Distributor!**

56708/56708MX	Dodge 1500 Mega Cab/ 2500 4wd 6" Coil Spring Lift kit
56712MXR	2.75MXR Reservoir Shock Upgrade Kit
56711	Long Arm Upgrade Kit
56120	Double Shock Hoop Kit
72501B	Traction Bars: Crew Cab
72098B	Traction Bar Mounting Kit: Crew Cab
219838	Dual Steering Stabilizer Kit
50328	U-bolt kit for vehicles w/ Dana 80 rear axle.

**Check out our outstanding selection of Pro Comp tires to  
compliment your new installation!**

## Introduction:


- ♦ This installation requires a professional mechanic!
- ♦ We recommend that you have access to a factory service manual for your vehicle to assist in the disassembly and reassembly of your vehicle. It contains a wealth of detailed information.
- ♦ Prior to installation, carefully inspect the vehicle's steering and driveline systems paying close attention to the tie rod ends, ball joints, wheel bearing preload, pitman and idler arm. Additionally, check steering-to-frame and suspension-to-frame attaching points for stress cracks. The overall vehicle must be in excellent working condition. Repair or replace all worn or damaged parts!
- ♦ Read the instructions carefully and study the illustrations before attempting installation! You may save yourself a lot of extra work.
- ♦ Check the parts and hardware against the parts list to assure that your kit is complete. Separating parts according to the areas where they will be used and placing the hardware with the brackets before you begin will save installation time.
- ♦ Check the special equipment list and ensure the availability of these tools.
- ♦ Secure and properly block vehicle prior to beginning installation.
- ♦ ALWAYS wear safety glasses when using power tools or working under the vehicle!
- ♦ Use caution when cutting is required under the vehicle. The factory undercoating is flammable. Take appropriate precautions. Have a fire extinguisher close at hand.
- ♦ Foot pound torque readings are listed on the Torque Specifications chart at the end of the instructions. These are to be used unless specifically directed otherwise. Apply thread lock retaining compound where specified.
- ♦ **Please note that while every effort is made to ensure that the installation of your Pro Comp lift kit is a positive experience, variations in construction and assembly in the vehicle manufacturing process will virtually ensure that some parts may seem difficult to install. Additionally, the current trend in manufacturing of vehicles results in a frame that is highly flexible and may shift slightly on disassembly prior to installation. The use of pry bars and tapered punches for alignment is considered normal and usually does not indicate a faulty product. However, if you are uncertain about some aspect of the installation process, please feel free to call our tech support department at the number listed on the cover page. We do not recommend that you modify the Pro Comp parts in any way as this will void any warranty expressed or implied by the Pro Comp Suspension company.**

## INSTALLATION INSTRUCTIONS:


1. Ensure that your work space is of adequate size and the work surface is level. Place the vehicle in neutral. Place your floor jack under the front axle and raise vehicle. Place jack stands under the frame rails behind the front wheel wells and lower the frame onto the stands. Remove the jack and place the vehicle back in gear, set the emergency brake, and place blocks both in front of and behind the rear wheels. Remove the wheels.
2. Remove any skid plates or debris shields from the bottom of the vehicle.



3. Carefully, unbolt the sway bar mounts from the frame. Be sure to support the sway bar so it doesn't swing down.

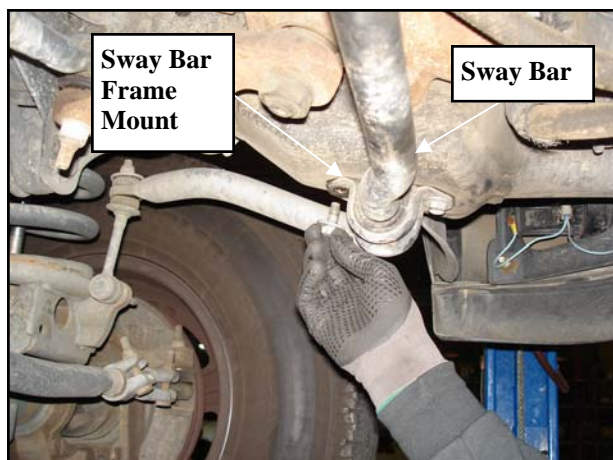

4. Carefully lower the sway bar and allow it to hang against the crossover.

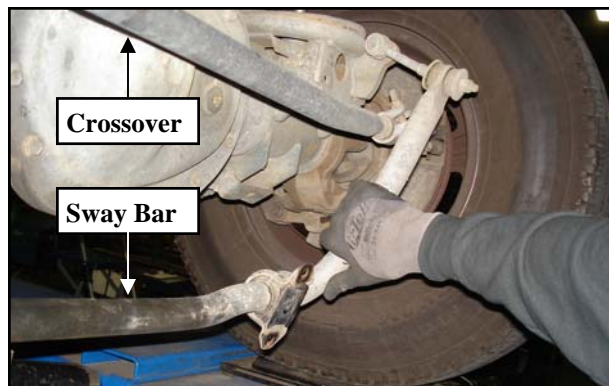

5. Loosen and remove the OE sector shaft nut and lock washer from the sector shaft.




6. Install the supplied sector shaft nut extension (90-4335) and the previously removed OE lock washer.




7. Torque the newly installed sector shaft nut extension (90-4335) to 180 ft./lbs. Be sure to use thread locker on the nut.
8. Install the steering box stabilizer bar (94-8184) and the OE sway bar frame




mounts to the original sway bar frame mounting holes. Secure using the supplied **10mm X 35mm** bolts and hardware.

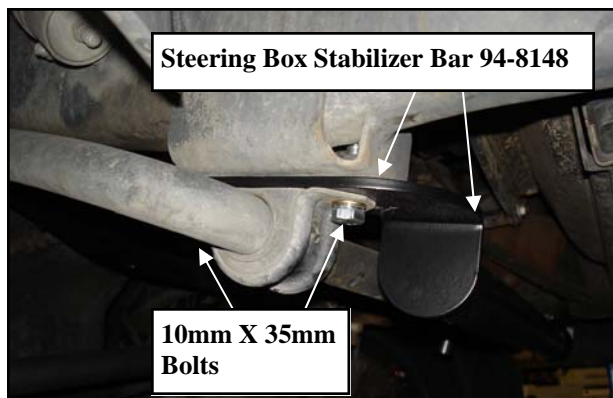

9. Apply anti-seize compound to the outside of the sector shaft nut extension (**90-4335**).

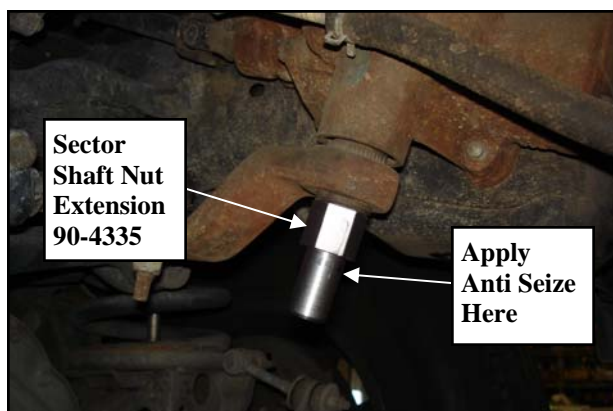


10. Insert the **12mm X 40mm** bolts through the top of the steering box stabilizer bar (**94-8184**). Install the bearing assembly (**90-4336**) onto the sector shaft extension nut (**90-4335**) and **12mm** bolts. Secure using the **12mm** washers and nuts.

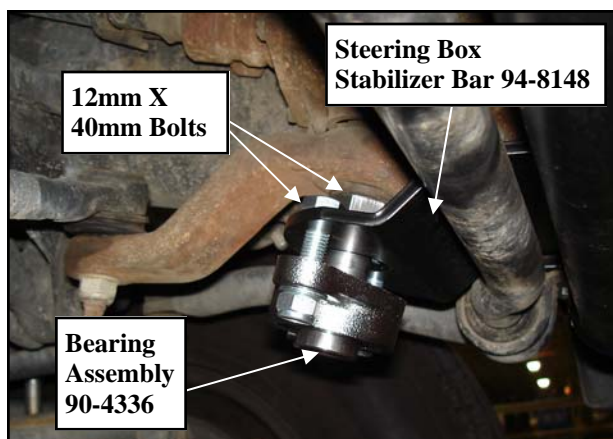

11. Tighten the hardware so it is snug. Torque the **10mm** sway bar mounting to **40** ft./lbs.


**NOTE:** Make sure the inner bearing surface is able to rotate on the sector shaft.

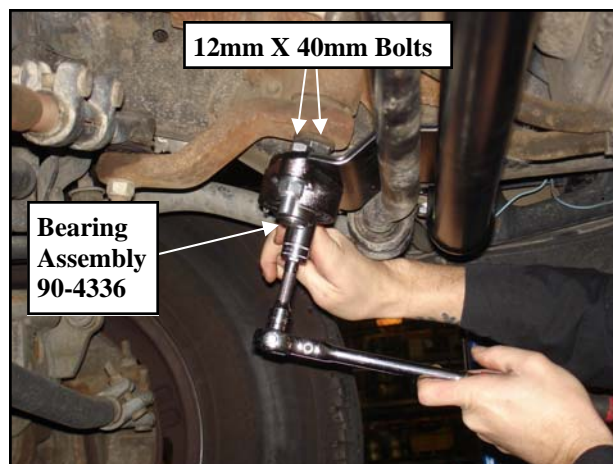

12. Torque the **12mm** bearing assembly hardware to **86** ft./lbs.

13. Install the set screws and tighten.

**NOTE:** Be sure to apply thread locking compound to the set screws.

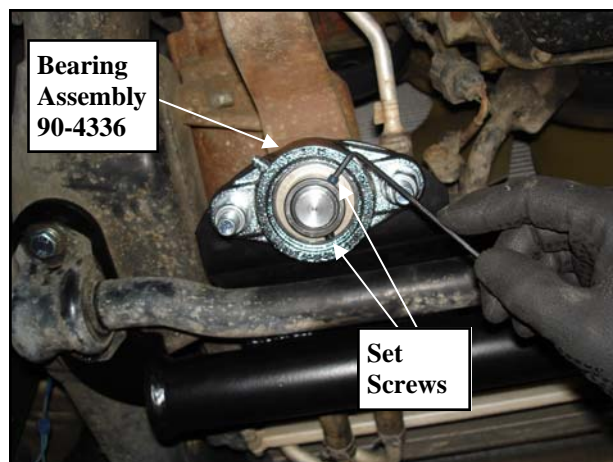

13. Make sure the Zerk fitting is properly installed and tightened. Apply grease using a grease gun.
14. Now would also be a good time to inspect the rear shocks for damage or fluid leakage. Replace if necessary.

***NOTE: For improved performance  
Pro Comp rear shocks are recommended.  
See the chart on page 2 for applications.***


15. After 100 miles recheck for proper torque on all newly installed hardware.



16. Recheck all hardware for tightness after off road use. 😊

Use this only as a guide for hardware without a called out torque specification in the instruction manual.


Bolt Torque and ID						
Decimal System			Metric System			
All Torques in Ft. Lbs. Maximums						
Bolt Size	Grade 5	Grade 8	Bolt Size	Class 9.8	Class 10.9	Class 12.9
5/16	15	20	M6	5	9	12
3/8	30	45	M8	18	23	27
7/16	45	60	M10	32	45	50
1/2	65	90	M12	55	75	90
9/16	95	130	M14	85	120	145
5/8	135	175	M16	130	165	210
3/4	185	280	M18	170	240	290

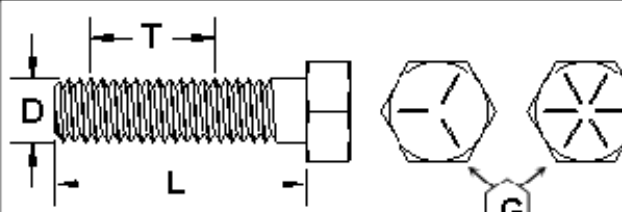

1/2-13x1.75 HHCS      **Grade 5    Grade 8**  
(No. of Marks + 2)

D   T   L   X

G = Grade (Bolt Strength)  
D = Nominal Diameter (Inches)  
T = Thread Count (Threads per Inch)  
L = Length (Inches)  
X = Description (Hex Head Cap Screw)

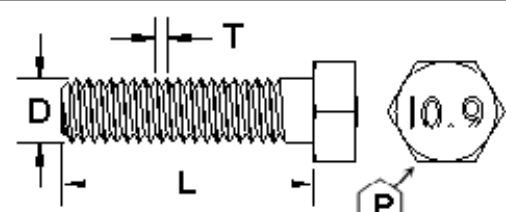

M12-1.25x50 HHCS

D   T   L   X

P = Property Class (Bolt Strength)  
D = Nominal Diameter (Millimeters)  
T = Thread Pitch (Thread Width, mm)  
L = Length (Millimeters)  
X = Description (Hex Head Cap Screw)

### **Notice to Owner operator, Dealer and Installer:**

Vehicles that have been enhanced for off-road performance often have unique handling characteristics due to the higher center of gravity and larger tires. This vehicle may handle, react and stop differently than many passenger cars or unmodified vehicles, both on and off-road. You must drive your vehicle safely! Extreme care should always be taken to prevent vehicle rollover or loss of control, which can result in serious injury or even death. Always avoid sudden sharp turns or abrupt maneuvers and allow more time and distance for braking! Pro Comp reminds you to fasten your seat belts at all times and reduce speed! We will gladly answer any questions concerning the design, function, maintenance and correct use of our products.

### **Please make sure your Dealer/Installer explains and delivers all warning notices, warranty forms and instruction sheets included with Pro Comp product.**

Application listings in this catalog have been carefully fit checked for each model and year denoted. However, Pro Comp reserves the right to update as necessary, without notice, and will not be held responsible for misprints, changes or variations made by vehicle manufacturers. Please call when in question regarding new model year, vehicles not listed by specific body or chassis styles or vehicles not originally distributed in the USA.

**Please note that certain mechanical aspects of any suspension lift product may accelerate ordinary wear of original equipment components.** Further, installation of certain Pro Comp products may void the vehicle's factory warranty as it pertains to certain covered parts; it is the consumer's responsibility to check with their local dealer for warranty coverage before installation of the lift.

### **Warranty and Return policy:**

Pro Comp warrants its full line of products to be free from defects in workmanship and materials. Pro Comp's obligation under this warranty is limited to repair or replacement, at Pro Comp's option, of the defective product. Any and all costs of removal, installation, freight or incidental or consequential damages are expressly excluded from this warranty. Pro Comp is not responsible for damages and / or warranty of other vehicle parts related or non-related to the installation of Pro Comp product. A consumer who makes the decision to modify his vehicle with aftermarket components of any kind will assume all risk and responsibility for potential damages incurred as a result of their chosen modifications. Warranty coverage does not include consumer opinions regarding ride comfort, fitment and design. Warranty claims can be made directly with Pro Comp or at any factory authorized Pro Comp dealer.

**IMPORTANT!** To validate the warranty on this purchase please be sure to mail in the warranty card.

### **Claims not covered under warranty-**

- Parts subject to normal wear, this includes bushings, bump stops, ball joints, tie rod ends and heim joints
  - Discontinued products at Pro Comp's discretion
- Bent or dented product
- Finish after 90 days
- Leaf or coil springs used without proper bump stops
- Light bulbs
- Products with evident damage caused by abrasion or contact with other items
- Damage caused as a result of not following recommendations or requirements called out in the installation manuals
- Products used in applications other than listed in Pro Comp's catalog
- Components or accessories used in conjunction with other manufacturer's systems
- Tire & Wheel Warranty as per Pro Competition Tire Company policy
- Warranty claims without "Proof of Purchase"
- Pro Comp Pro Runner coil over shocks are considered a serviceable shock with a one-year warranty against leakage only. Rebuild service and replacement parts will be available and sold separately by Pro Comp. Contact Pro Comp for specific service charges.
- Pro Comp accepts no responsibility for any altered product, improper installation, lack of or improper maintenance, or improper use of our products.

E-Mail: [tech@explorerprocomp.com](mailto:tech@explorerprocomp.com)  
Website: [www.explorerprocomp.com](http://www.explorerprocomp.com)  
Fax: (619) 216-1474  
Ph: (619) 216-1444

**PLACE**  
**WARRANTY REGISTRATION**  
**NUMBER**  
**HERE:** \_\_\_\_\_