

SPARC T4-1B Server Module

Product Notes



Part No.: E22737-03
December 2011

Copyright © 2011, Oracle and/or its affiliates. All rights reserved.

This software and related documentation are provided under a license agreement containing restrictions on use and disclosure and are protected by intellectual property laws. Except as expressly permitted in your license agreement or allowed by law, you may not use, copy, reproduce, translate, broadcast, modify, license, transmit, distribute, exhibit, perform, publish, or display any part, in any form, or by any means. Reverse engineering, disassembly, or decompilation of this software, unless required by law for interoperability, is prohibited.

The information contained herein is subject to change without notice and is not warranted to be error-free. If you find any errors, please report them to us in writing.

If this is software or related software documentation that is delivered to the U.S. Government or anyone licensing it on behalf of the U.S. Government, the following notice is applicable:

U.S. GOVERNMENT RIGHTS Programs, software, databases, and related documentation and technical data delivered to U.S. Government customers are "commercial computer software" or "commercial technical data" pursuant to the applicable Federal Acquisition Regulation and agency-specific supplemental regulations. As such, the use, duplication, disclosure, modification, and adaptation shall be subject to the restrictions and license terms set forth in the applicable Government contract, and, to the extent applicable by the terms of the Government contract, the additional rights set forth in FAR 52.227-19, Commercial Computer Software License (December 2007). Oracle America, Inc., 500 Oracle Parkway, Redwood City, CA 94065.

This software or hardware is developed for general use in a variety of information management applications. It is not developed or intended for use in any inherently dangerous applications, including applications which may create a risk of personal injury. If you use this software or hardware in dangerous applications, then you shall be responsible to take all appropriate fail-safe, backup, redundancy, and other measures to ensure its safe use. Oracle Corporation and its affiliates disclaim any liability for any damages caused by use of this software or hardware in dangerous applications.

Oracle and Java are registered trademarks of Oracle and/or its affiliates. Other names may be trademarks of their respective owners.

Intel and Intel Xeon are trademarks or registered trademarks of Intel Corporation. All SPARC trademarks are used under license and are trademarks or registered trademarks of SPARC International, Inc. AMD, Opteron, the AMD logo, and the AMD Opteron logo are trademarks or registered trademarks of Advanced Micro Devices. UNIX is a registered trademark of The Open Group.

This software or hardware and documentation may provide access to or information on content, products, and services from third parties. Oracle Corporation and its affiliates are not responsible for and expressly disclaim all warranties of any kind with respect to third-party content, products, and services. Oracle Corporation and its affiliates will not be responsible for any loss, costs, or damages incurred due to your access to or use of third-party content, products, or services.

Copyright © 2011, Oracle et/ou ses affiliés. Tous droits réservés.

Ce logiciel et la documentation qui l'accompagne sont protégés par les lois sur la propriété intellectuelle. Ils sont concédés sous licence et soumis à des restrictions d'utilisation et de divulgation. Sauf disposition de votre contrat de licence ou de la loi, vous ne pouvez pas copier, reproduire, traduire, diffuser, modifier, breveter, transmettre, distribuer, exposer, exécuter, publier ou afficher le logiciel, même partiellement, sous quelque forme et par quelque procédé que ce soit. Par ailleurs, il est interdit de procéder à toute ingénierie inverse du logiciel, de le désassembler ou de le décompiler, excepté à des fins d'interopérabilité avec des logiciels tiers ou tel que prescrit par la loi.

Les informations fournies dans ce document sont susceptibles de modification sans préavis. Par ailleurs, Oracle Corporation ne garantit pas qu'elles soient exemptes d'erreurs et vous invite, le cas échéant, à lui en faire part par écrit.

Si ce logiciel, ou la documentation qui l'accompagne, est concédé sous licence au Gouvernement des Etats-Unis, ou à toute entité qui délivre la licence de ce logiciel ou l'utilise pour le compte du Gouvernement des Etats-Unis, la notice suivante s'applique :

U.S. GOVERNMENT RIGHTS. Programs, software, databases, and related documentation and technical data delivered to U.S. Government customers are "commercial computer software" or "commercial technical data" pursuant to the applicable Federal Acquisition Regulation and agency-specific supplemental regulations. As such, the use, duplication, disclosure, modification, and adaptation shall be subject to the restrictions and license terms set forth in the applicable Government contract, and, to the extent applicable by the terms of the Government contract, the additional rights set forth in FAR 52.227-19, Commercial Computer Software License (December 2007). Oracle America, Inc., 500 Oracle Parkway, Redwood City, CA 94065.

Ce logiciel ou matériel a été développé pour un usage général dans le cadre d'applications de gestion des informations. Ce logiciel ou matériel n'est pas conçu ni n'est destiné à être utilisé dans des applications à risque, notamment dans des applications pouvant causer des dommages corporels. Si vous utilisez ce logiciel ou matériel dans le cadre d'applications dangereuses, il est de votre responsabilité de prendre toutes les mesures de secours, de sauvegarde, de redondance et autres mesures nécessaires à son utilisation dans des conditions optimales de sécurité. Oracle Corporation et ses affiliés déclinent toute responsabilité quant aux dommages causés par l'utilisation de ce logiciel ou matériel pour ce type d'applications.

Oracle et Java sont des marques déposées d'Oracle Corporation et/ou de ses affiliés. Tout autre nom mentionné peut correspondre à des marques appartenant à d'autres propriétaires qu'Oracle.

Intel et Intel Xeon sont des marques ou des marques déposées d'Intel Corporation. Toutes les marques SPARC sont utilisées sous licence et sont des marques ou des marques déposées de SPARC International, Inc. AMD, Opteron, le logo AMD et le logo AMD Opteron sont des marques ou des marques déposées d'Advanced Micro Devices. UNIX est une marque déposée d'The Open Group.

Ce logiciel ou matériel et la documentation qui l'accompagne peuvent fournir des informations ou des liens donnant accès à des contenus, des produits et des services émanant de tiers. Oracle Corporation et ses affiliés déclinent toute responsabilité ou garantie expresse quant aux contenus, produits ou services émanant de tiers. En aucun cas, Oracle Corporation et ses affiliés ne sauraient être tenus pour responsables des pertes subies, des coûts occasionnés ou des dommages causés par l'accès à des contenus, produits ou services tiers, ou à leur utilisation.



Contents

Using This Documentation vii

1. Late-Breaking Information 1

Supported Chassis 1

▼ Identify Your Chassis Version 2

Supported Hardware Components 3

Preinstalled Software 4

Supported Versions of the OS, Firmware, and Software 5

Required Patches and Package Updates 6

Oracle Solaris 11 OS Package Updates 6

Oracle Solaris 10 OS Patches 6

▼ Obtain Patches 7

Important Firmware Upgrade Required Prior to Mixing SAS-1 and SAS-2 Components 8

Identifying Drive Logical Device Names and Physical Locations 8

▼ Correlate WWN Device Names With Physical Locations (diskinfo Command) 9

▼ Correlate WWN Device Names With Physical Locations (probe-scsi-all Command) 10

Oracle Solaris Jumpstart WWN Syntax 11

Interactive Installation Example 12

2. Known Product Issues 15

Hardware Issues 15

Sun Type 6 Keyboards are Not Supported by SPARC T4 Series Servers 15

PSH Might Not Clear a Retired Cache Line on a Replaced Motherboard (CR 7031216) 15

2-Meter USB Cable Length Limit (7048419) 16

Uncorrectable L2 Cache Errors are Sometimes Reported as Core Faults Without Any Cache Line Retirement (CR 7071237 and CR 7071974) 16

During a Reboot After an Unrecoverable Hardware Error, CPUs Might Not Start (CR 7075336) 16

Blue LED on Drive Does Not Light When the Drive is Ready to Remove (CR 7082700) 17

Firmware, OS, and Other Software Issues 17

`fault.memory.memlink-uc` Fault Did Not Cause Panic as Stated by System Message (CR 6940599) 17

Timestamp for an Oracle ILOM Fault/Critical Event Might Be off by One Hour (CR 6943957) 18

`e1000g` Driver Generates Spurious `ereports` When Installing Oracle Solaris OS Over a Sun PCIe Dual Gigabit Ethernet Adapter (CR 6958011) 18

When `diag-switch?` Is Set to `true`, Oracle Solaris OS Fails to Update the EEPROM for Automatic Rebooting (CR 6982060) 19

`sas2ircu` Message That RAID Volume Sizes Other Than MAX Are Not Supported (CR 6983210) 20

Fault Management Sometimes Sends Resolved Cases to the SP (CR 6983432) 20

Units Used to Define the MIB Power Management Time Limit are Reported in Seconds (CR 6993008) 22

Spurious Interrupt Message in System Console When Using Oracle VTS (CR 7038266) 22

Intermittent Link Training Timeout Displayed During Power Cycles (CR 7043201) 22

The <code>cfgadm</code> Command Might Fail on SG-SAS6-REM-Z or SGX-SAS6-REM-Z HBAs	
(CR 7044759)	23
Message From <code>cpustat</code> Refers to Processor Documentation Incorrectly	
(CR 7046898)	23
<code>reboot disk</code> Command Occasionally Fails When <code>disk</code> Argument Picks Up Extra Characters	
(CR 7050975)	24
PCIe Correctable Errors Might Be Reported	
(CR 7051331)	24
Watchdog Timeouts Seen With Heavy Workloads and Maximum Memory Configurations	
(CR 7083001)	25
<code>ereport.fm.fmd.module</code> Generated During a Reboot of an SDIO Domain	
(CR 7085231)	26
Oracle VTS <code>dtlbtest</code> Hangs When CPU Threading Mode is Set to <code>max-ipc</code>	
(CR 7094158)	27

Using This Documentation

This document provides important and late-breaking information for Oracle’s SPARC T4-1B server module.

- “Related Documentation” on page vii
- “Feedback” on page viii
- “Support and Accessibility” on page viii

Related Documentation

Documentation	Links
All Oracle products	http://www.oracle.com/documentation
SPARC T4-1B server module	http://www.oracle.com/pls/topic/lookup?ctx=SPARCT4-1B
Sun Blade 6000 modular system	http://www.oracle.com/pls/topic/lookup?ctx=sb6000
Oracle Integrated Lights Out Manager (Oracle ILOM) 3.0	http://www.oracle.com/technetwork/documentation/sys-mgmt-networking-190072.html
Oracle Solaris OS and other system software	http://www.oracle.com/technetwork/indexes/documentation/#sys_sw
Oracle VTS software	http://www.oracle.com/pls/topic/lookup?ctx=E19719-01
SAS-1/SAS-2 compatibility	http://www.oracle.com/pls/topic/lookup?ctx=E22513_01

Feedback

Provide feedback on this documentation at:

<http://www.oracle.com/goto/docfeedback>

Support and Accessibility

Description	Links
Access electronic support through My Oracle Support	http://support.oracle.com For hearing impaired: http://www.oracle.com/accessibility/support.html
Learn about Oracle's commitment to accessibility	http://www.oracle.com/us/corporate/accessibility/index.html

Late-Breaking Information

These sections provide important information and late-breaking news about the server module:

- [“Supported Chassis” on page 1](#)
- [“Supported Hardware Components” on page 3](#)
- [“Preinstalled Software” on page 4](#)
- [“Supported Versions of the OS, Firmware, and Software” on page 5](#)
- [“Required Patches and Package Updates” on page 6](#)
- [“Important Firmware Upgrade Required Prior to Mixing SAS-1 and SAS-2 Components” on page 8](#)
- [“Identifying Drive Logical Device Names and Physical Locations” on page 8](#)

Supported Chassis

Several versions of the Sun Blade 6000 modular system have been available. The latest two versions support SAS-1 and SAS-2 modular components.

Gen2-capable PCIe EMs and NEMs connected to this server module through the chassis run at Gen2 speeds. Gen1-capable devices run at Gen1 speeds.

This server module is supported in the following chassis models:


- Latest model (A90-D) Sun Blade 6000 modular system – Requires CMM software release 4.0 or later.

- Previous model (A90-B) Sun Blade 6000 modular system – Requires CMM software release 3.3 or later. This server module is only supported in this modular system with these modular components:
 - SPARC T3-1B server module
 - Sun Blade T6320 server module
 - Sun Blade T6340 server module
 - Sun Blade X6270 M2 server module
 - Sun Blade X6270 server module
 - Sun Blade X6275 M2 server module
 - Sun Blade Storage Module M2

To determine your chassis version, see [“Identify Your Chassis Version”](#) on page 2.

▼ Identify Your Chassis Version

- View the CMM on the rear of the modular system (chassis).

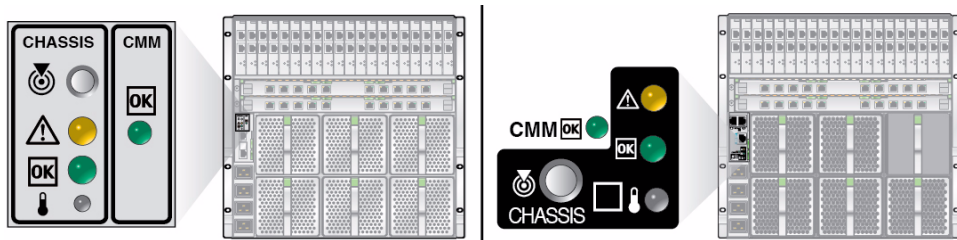

- Left – CMM on the previous model (A90-B) chassis
- Right – CMM on the latest model (A90-D) chassis

For more details about the chassis, refer to the Sun Blade 6000 modular system documentation.

Supported Hardware Components

Hardware Component	Description
NEMs	
NEM 7100091 or 7011713 – Sun Blade 6000 Virtualized 40 GbE NEM	Requires: <ul style="list-style-type: none"> • For 1GbE connectivity – no FEM required. • For 10GbE connectivity – FEM 7100283 or 7100633. • For SAS2 storage connectivity – REM SG- or SGX- SAS6-REM-Z This NEM’s documentation is at: http://www.oracle.com/pls/topic/lookup?ctx=E21077-01
NEM 2073A – Sun Blade 6000 Ethernet Switched Network Express Module 24p 10GbE NEM	Requires: <ul style="list-style-type: none"> • For 10GbE network connectivity – FEM 4871A-Z. • For storage connectivity – REM SG-SAS6-REM-Z. This NEM’s documentation is at: http://www.oracle.com/pls/topic/lookup?ctx=E19285-01
NEM 4338A – Sun Blade 6000 Virtualized Multi-Fabric 10GbE M2 NEM	Requires: <ul style="list-style-type: none"> • For 1GbE connectivity – no FEM required. • For 10GbE connectivity – FEM 7100283 or 7100633. • For SAS2 storage connectivity – REM SG- or SGX- SAS6-REM-Z. This NEM’s documentation is at: http://www.oracle.com/pls/topic/lookup?ctx=E19530-01
NEM 4250A – Sun Blade 6000 Network Express Module 10-port 1 GbE Pass-Through NEM	Provides GbE connectivity – no FEM required.
REMs	
REM SG(X)-SAS6-REM-Z – Sun StorageTek 6 Gb SAS REM HBA	Prior to installation, update firmware on SAS-1 components. See “Important Firmware Upgrade Required Prior to Mixing SAS-1 and SAS-2 Components” on page 8. This REM’s documentation is at: http://www.oracle.com/pls/topic/lookup?ctx=E19946-01
FEMs	
FEM 7100283 or 7100633 – PCI-E Pass-Through FEM	Supported.
FEM X4871A-Z – Sun Dual 10GbE PCIe 2.0 FEM	Supported. This FEM’s documentation is at: http://www.oracle.com/pls/topic/lookup?ctx=E19539-01

Preinstalled Software

Software	Location	Function
One of the following: <ul style="list-style-type: none">• Oracle Solaris 11 OS• Oracle Solaris 10 8/11 OS Note - Mandatory package updates and patches are not preinstalled. You must obtain and install them before you put the server module into production. See “Required Patches and Package Updates” on page 6.	On ZFS with the root partition (/) on drive 0, slice 0	OS.
Oracle VM Server for SPARC 2.1	/opt/SUNWldm	Manages logical domains.
Electronic Prognostics (EP) 1.2	/opt/ep	Provides early warning of the potential for specific FRU faults.
Oracle VTS 7.0 PS11	/usr/sunvts	Provides hardware validation tests.

The preinstalled OS is ready to be configured at the appropriate point when you first apply power to the server. Review [“Required Patches and Package Updates”](#) on page 6 to find out if the preinstalled OS requires package updates.

You can reinstall the OS and install patches instead of using the preinstalled OS. See [“Supported Versions of the OS, Firmware, and Software”](#) on page 5.

Refer to the Oracle Solaris documentation for instructions on installing and configuring the Oracle Solaris OS.

Supported Versions of the OS, Firmware, and Software

Software	Supported Versions
Host OS	<ul style="list-style-type: none">• Oracle Solaris 11 OS• Oracle Solaris 10 8/11 OS (requires mandatory patches).• Oracle Solaris 10 9/10 OS (requires patches)• Oracle Solaris 10 10/09 OS (requires patches) <p>For OS patch and package update information, see “Required Patches and Package Updates” on page 6.</p> <p>For information about the preinstalled OS, see “Preinstalled Software” on page 4.</p>
System firmware	8.1.2.b (or later) (includes Oracle ILOM 3.0).
Oracle VM Server for SPARC (LDoms)	2.1 plus patches. The patches are included and preinstalled on the preinstalled OS.
Oracle Electronic Prognostics (EP)	1.2 This software provides early warning of the potential for specific FRU faults.
Oracle VTS	<ul style="list-style-type: none">• 7.0 PS11 (minimum)• 7.0 PS12• 7.0 PS13 <p>Note - For the most reliable test coverage of the various modular components in the chassis, use Oracle VTS 7.0 PS12 or higher.</p>

Required Patches and Package Updates

If you use the preinstalled OS, or if you reinstall the OS on the server module, you might need to install certain patches or package updates before you put the server module into production.

Note – Oracle Solaris 11 OS uses package updates rather than patches.

Oracle Solaris 11 OS Package Updates

No package updates are required at this time to use Oracle Solaris 11 OS with this server.

You should install an Oracle Solaris 11 Support Repository Update (SRU), if one is available. Use the `pkg` command or the package manager GUI to download any available SRU from: <https://pkg.oracle.com/solaris/support>

Oracle Solaris 10 OS Patches

TABLE 1-1 Oracle Solaris 10 8/11 OS Required Patches

Installation Order	OS or Patch
1	Oracle Solaris 10 8/11 OS
2	These mandatory patches: <ul style="list-style-type: none">• 147440-04 (or higher)• 147149-01 (or higher)• 147153-01 (or higher)• 147707-01 (or higher)• 147159-03 (or higher)
3	Recommended OS Patchset Solaris 10 SPARC

TABLE 1-2 Oracle Solaris 10 9/10 OS and Oracle Solaris 10 10/09 OS Required Patches

Installation Order	OS or Patch
1	Oracle Solaris 10 9/10 OS or Oracle Solaris 10 10/09 OS
2	Solaris 10 8/11 Patch Bundle (13058415)
3	These mandatory patches: <ul style="list-style-type: none">• 147440-04 (or higher)• 147149-01 (or higher)• 147153-01 (or higher)• 147707-01 (or higher)• 147159-03 (or higher)
4	Recommended OS Patchset Solaris 10 SPARC

Note – For current information about required patches and updates for optional hardware and software, refer to the documentation for each product.

▼ Obtain Patches

1. Sign into My Oracle Support:

<http://support.oracle.com>

2. Select the Patches & Updates tab.

3. Search for a patch using the Patch Search panel.

When searching for a patch using the Patch Name or Number field, you must specify the complete name or number of the patch. For example:

- Solaris 10 8/11 Patch Bundle
- 13058415
- 147159-03

To search using a patch number without the revision number (two last digits), use % in place of the revision number. For example:

14159-%

4. Once you locate the patch, access the README and download the patch from the site.

The patch README provides the patch installation instructions.

Important Firmware Upgrade Required Prior to Mixing SAS-1 and SAS-2 Components

Before you insert a SAS-2 component into the chassis, you must upgrade the firmware of your SAS-1 components (SAS-1 NEMs and storage modules) to a firmware version that supports SAS-1/SAS-2 coexistence.

At a minimum, all SAS expanders for SAS-1 NEMs and Sun Blade 6000 storage modules must be upgraded to firmware revision 5.04.03 (or later). This firmware revision enables SAS-1/SAS-2 devices to coexist in the Sun Blade 6000 modular system chassis. Using older firmware revisions might result in SAS-2 devices hanging.

Refer to the *SAS-1/SAS-2 Compatibility Upgrade Guide* for details. This guide is available at:

http://www.oracle.com/pls/topic/lookup?ctx=E22513_01

Identifying Drive Logical Device Names and Physical Locations

The Oracle Solaris OS now uses the worldwide number (WWN) in place of the target ID field (*tn*) in drive logical device names for SAS-2 storage controllers.

This change affects how you correlate a drive's logical name with the drive's physical location.

These points are key to understanding the impact of this change:

- Before the change to using WWNs, drives were known to the OS by a logical name such as `c0t0d0`. This logical name mapped to the drive's physical location.

With the change, the device identifier for drives now has this form: `cntWWNdn`, where *WWN* is a unique hexadecimal value.

An example of a logical device name is:

`c0t5000C50033438DBBd0`

This WWN value does not map in a predictable way to the physical location of the drive.

- The OBP and the OS use different WWN numbers to identify a drive. This is explained further in [“Correlate WWN Device Names With Physical Locations \(diskinfo Command\)”](#) on page 9.
- Here are some examples of situations when you must correlate a logical device name with a drive’s physical location:
 - When downloading the OS over a network, you must specify the logical device name of the drive in slot 0 (the default boot device). In addition, if you use Oracle Solaris Jumpstart, you must use a specific WWN syntax. See [“Oracle Solaris Jumpstart WWN Syntax”](#) on page 11.
 - If you run the `format` command, you must select one of the logical device names presented. To ensure you select the correct drive, you must correlate a logical device name with the physical drive.
 - If you view a system message that lists a drive’s logical device name, you might need to identify the slot in which the drive is installed.

To correlate drive logical device names with physical locations or the other way around:

- From the Oracle Solaris 10 8/10 OS, use the `diskinfo` command. See [“Correlate WWN Device Names With Physical Locations \(diskinfo Command\)”](#) on page 9.
- At the OBP ok prompt, use the `probe-scsi-all` command. See [“Correlate WWN Device Names With Physical Locations \(probe-scsi-all Command\)”](#) on page 10.

▼ Correlate WWN Device Names With Physical Locations (diskinfo Command)

The `diskinfo` command, a new disk and slot identification utility, was introduced in Oracle Solaris 10 8/11 OS and in the kernel patch 144500-19 (or later).

If you do not have access to the OS, for example, if the server module is not booted, see [“Correlate WWN Device Names With Physical Locations \(probe-scsi-all Command\)”](#) on page 10.

If your OS does not provide the `diskinfo` command, refer to the *SPARC and Netra SPARC T4 Series Servers Administration Guide* for alternative methods.

1. Log into the OS.

2. Type:

```
# diskinfo -a
```

```
Enclosure path:          1114BD0ACC-physical-hba-0
```

```
Chassis Serial Number: 1114BD0ACC-physical-hba-0
Chassis Model:         ORCL, SPARC-T4-1B
```

Label	Disk name	Vendor	Product	Vers
/SYS/HDD0	c0t5000C50033438DBBd0	SEAGATE	ST930003SSUN300G	0B70
/SYS/HDD1	c0t5000C50005C15803d0	SEAGATE	ST930003SSUN300G	0468

3. Use the output under the Label and Disk Name columns to correlate a drive's physical location with its corresponding logical device name.

For this server module:

- /SYS/HDD0 represents a drive in slot 0.
- /SYS/HDD1 represents a drive in slot 1.

In this example, the drive installed in slot 0 has a logical device name of c0t5000C50033438DBBd0.

Note – The `diskinfo` command provides a variety of disk information depending on the command options you specify. For more information, type `diskinfo -h` and refer to the `diskinfo(1M)` man page.

▼ Correlate WWN Device Names With Physical Locations (probe-scsi-all Command)

If you have access to the OS, you might be able to use the `diskinfo` command instead. See [“Correlate WWN Device Names With Physical Locations \(diskinfo Command\)”](#) on page 9.

1. At the ok prompt, type:

```
{0} ok probe-scsi-all
/pci@400/pci@1/pci@0/pci@c/LSI,sas@0 <===== SAS Controller

FCode Version 1.00.54, MPT Version 2.00, Firmware Version
5.00.17.00

Target 9
Unit 0 Disk SEAGATE ST930003SSUN300G 0B70 585937500 Blocks,
300 GB
SASDeviceName 5000c50033438dbb SASAddress 5000c50033438db9
PhyNum 0 <=HD,slot 0
Target b
```

```

Unit 0   Disk   SEAGATE   ST930003SSUN300G 0468   585937500 Blocks,
300 GB
SASDeviceName 5000c50005c15803   SASAddress 5000c50005c15801
PhyNum 1 <=HD,slot 1
Target c
Unit 0   Encl Serv device   SUN           NEM Hydra II SOL 0308
SASAddress 5080020000bb193d   PhyNum 24

/pci@400/pci@1/pci@0/pci@0/pci@0/usb@0,2/hub@3/storage@2
Unit 0   Removable Read Only device   AMI           Virtual CDROM   1.00

```

2. In output, look for the following disk identifiers:

- LSI, sas@0 – Controller (REM) on the server module.
- SASDeviceName – WWN that the Oracle Solaris OS recognizes.
- SASAddress – WWN that the OBP references.
- PhyNum – Physical slot that the drive occupies.

3. Use the values in the output to construct the resulting Oracle Solaris logical device name as expressed by *cntndn*.

This example is based on the previous output:

- *cn* = c0
n is the SAS controller number, 0 in this example.
- *tn* = t5000c50033438dbb
n is the SASDeviceName value.
- *dn* = d0
n is 0 for all embedded SCSI devices.

The resulting logical device name is c0t5000c50033438dbbd0.

Oracle Solaris Jumpstart WWN Syntax

The Oracle Solaris syntax requires all WWN alpha characters to be capitalized.

Note – Only the WWN portion of the logical device name requires capitalized alpha characters. The c0 and d0 portion are not capitalized.

This Jumpstart profile example shows how to use the WWN syntax when installing the OS on a specific drive.

```
#
install_type flash_install
boot_device c0t5000C50033438DBBd0 preserve

archive_location nfs
129.148.94.249:/export/install/media/solaris/builds/s10u9/flash/test.flar

# Disk layouts
#
partitioning explicit
filesys rootdisk.s0      free /
filesys rootdisk.s1      8192 swap
```

Interactive Installation Example

In an interactive installation, you are asked to specify one or more drives as the targets for the OS installation. This step ensures that sufficient storage capacity is provided for the installation. Specify the drive with the WWN value that corresponds to the drive on which you want to install the software.

These WWN values are illustrated in the following interactive example. The drive selected as the installation target is located in drive slot 0, the default boot location.

Note – If you prefer to use some other disk, specify it instead of the one in HDD slot 0.

_ Select Disks _

On this screen you must select the disks for installing Solaris software. Start by looking at the Suggested Minimum field; this value is the approximate space needed to install the software you've selected. Keep selecting disks until the Total Selected value exceeds the Suggested Minimum value.

NOTE: ** denotes current boot disk

Disk Device	Available Space
=====	
[] c0t5000C50005C15803d0	286090 MB
[X] c0t5000C50033438DBBd0	286090 MB (F4 to edit)

Total Selected: 286090 MB

Suggested Minimum: 5032 MB

Esc-2_Continue F3_Go Back F4_Edit F5_Exit F6_Help

Note – You might need to label new and replacement drives using the format utility before you can install the OS on the drives.

Known Product Issues

These sections describe known issues for the server module:

- [“Hardware Issues” on page 15](#)
 - [“Firmware, OS, and Other Software Issues” on page 17](#)
-

Hardware Issues

These are the known hardware issues and workarounds.

Sun Type 6 Keyboards are Not Supported by SPARC T4 Series Servers

Sun Type 6 keyboards cannot be used with SPARC T4 series servers.

PSH Might Not Clear a Retired Cache Line on a Replaced Motherboard (CR 7031216)

When the enclosure is replaced to repair faulty cache on the motherboard, PSH might not clear the cache on the replacement. The cache line remains disabled.

Workaround: Manually clear the disabled cache line by typing these commands:

#	fmadm repaired	<i>fmri</i>		<i>label</i>
#	fmadm replaced	<i>fmri</i>		<i>label</i>

2-Meter USB Cable Length Limit (7048419)

The server module has three USB ports:

- Port 1 and 2, accessible through a dongle that is attached to the front UCP connector.
- Port 5, located on the rear of the motherboard (intended for a USB flash drive).

Workaround: If you connect USB devices to ports 1 or 2, ensure that the cable does not exceed 2 meters (approximately 6.5 feet).

Uncorrectable L2 Cache Errors are Sometimes Reported as Core Faults Without Any Cache Line Retirement (CR 7071237 and CR 7071974)

When a processor cache line encounters an uncorrectable error, the fault manager should retire the cache line that is involved in the error. However, the fault manager might not succeed in retiring the faulty cache line and instead report the entire core or processor as faulted.

Workaround: Schedule a replacement of the enclosure (motherboard). For additional information about this issue, search for message ID SUN4V-8002-WY at the Oracle support site: <http://support.oracle.com>.

During a Reboot After an Unrecoverable Hardware Error, CPUs Might Not Start (CR 7075336)

In rare cases, a server or sever module might experience a serious problem that results in a panic. When the server or server module is rebooted, a number of CPUs might not start even though the CPUs are not faulty.

Here is an example of the type of error displayed:

```
rebooting...
Resetting...

ERROR: 63 CPUs in MD did not start
```

Workaround: Log into Oracle ILOM on the SP and power cycle the host:

```
-> stop /SYS  
Are you sure you want to stop /SYS (y/n)? y  
Stopping /SYS  
-> start /SYS  
Are you sure you want to start /SYS (y/n) ? y  
Starting /SYS
```

Blue LED on Drive Does Not Light When the Drive is Ready to Remove (CR 7082700)

When you attempt to unconfigure a drive for removal, the drive's blue LED, which indicates the drive is ready for removal, might not light. This situation occurs after you replace a drive in a slot with a drive that has a different WWID.

Workaround: If you inserted a drive after booting the server, reboot the server for the blue LED to work properly.

Firmware, OS, and Other Software Issues

The following notes describe known issues for the firmware, OS, and other software.

`fault.memory.memlink-uc` Fault Did Not Cause Panic as Stated by System Message (CR 6940599)

When a `fault.memory.memlink-uc` interconnect fault is detected, the server should shut down to protect memory integrity. On intermittent occasions, this fault has been reported during boot operations without the server shutting down.

Although this irregular behavior might indicate that the system was able to recover from the memory link error and restore a healthy boot-up state, the safest course is to power down then power up the server.

Recovery Action: Log into Oracle ILOM on the SP power cycle the host:

```
-> stop /SYS
Are you sure you want to stop /SYS (y/n)? y
Stopping /SYS
-> start /SYS
Are you sure you want to start /SYS (y/n) ? y
Starting /SYS
```

Timestamp for an Oracle ILOM Fault/Critical Event Might Be off by One Hour (CR 6943957)

The timestamp reported in an email generated in an Oracle ILOM fault/critical event might be one hour later than the timestamp recorded in the event log.

Workaround: Check the timestamp recorded in the event log. If that timestamp does not match the timestamp reported in the email, use the event log time.

e1000g Driver Generates Spurious ereports When Installing Oracle Solaris OS Over a Sun PCIe Dual Gigabit Ethernet Adapter (CR 6958011)

When installing the Oracle Solaris OS on domains controlled through Sun PCIe Dual Gigabit Ethernet (UTP or MMF) adapters, the e1000g driver might generate false error reports on the static direct I/O (SDIO) and primary domains. For example:

```
date time ereport.io.pciex.tl.ca nvlist version: 0
          ena = 0x298a9f62243802
ena = 0x298a9f62243802
detector = (embedded nvlist)
nvlist version: 0
scheme = dev
device-path = /pci@400/pci@1
(end detector)

class = ereport.io.pciex.tl.ca
dev-status = 0x2
ue-status = 0x8000
ue-severity = 0x62030
adv-ctl = 0xf
source-id = 0x600
```

```
source-valid = 1
__ttl = 0x1
__tod = 0x4c058b2e 0x1e8813a0
```

Workaround: You can safely ignore these ereports.

When diag-switch? Is Set to true, Oracle Solaris OS Fails to Update the EEPROM for Automatic Rebooting (CR 6982060)

When installing the Oracle Solaris OS while the OBP `diag-switch?` parameter is set to `true`, the OS installer fails to update the `bootdevice` parameter with the new device path where the OS was installed. Therefore, this new device path will not be used during the subsequent automatic system reboots.

Under these conditions, the server displays these error message and you are unable to reboot from the device:

```
Installing boot information
- Installing boot blocks (cctxdxsx)
- Installing boot blocks (/dev/rdisk/cctxdxsx)
- Updating system firmware for automatic rebooting
WARNING: Could not update system for automatic rebooting
```

On previous servers and server modules, the OBP `diag-device` parameter used to set the new device path to the boot device when the `diag-switch?` parameter was set to `true`. On SPARC T4 servers and server modules, the `diag-device` parameter is no longer supported and the Oracle Solaris OS installer warns that setting the OBP `boot-device` parameter is not possible.

Workaround: From the Oracle ILOM prompt, set the OBP `diag-switch?` parameter to `false`:

```
-> set /HOST/bootmode script="setenv diag-switch? false"
```

Alternatively, you can set this parameter at the OBP `ok` prompt:

```
ok setenv diag-switch? false
```

sas2ircu Message That RAID Volume Sizes Other Than MAX Are Not Supported (CR 6983210)

If you attempt to create a RAID volume smaller than MAX, the following series of messages is returned:

```
You are about to create an IR volume.
```

```
WARNING: Proceeding with this operation may cause data loss or data  
corruption. Are you sure you want to proceed (YES/NO)? yes
```

```
WARNING: Volume created with size other than 'MAX' is not supported.  
Do you want to continue with volume creation (YES/NO)? n
```

```
SAS2IRCU: you must answer "YES" or "yes" to proceed; operation aborted!
```

```
SAS2IRCU: Error executing command CREATE.
```

RAID volumes smaller than MAX are not supported. However, if you want to create a volume below MAX size for nonproduction use, the software allows you to do so. This situation is not clear from the message.

Workaround: Ignore the messages and answer **yes** for the question “Do you want to continue with volume creation (YES/NO)?”.

Fault Management Sometimes Sends Resolved Cases to the SP (CR 6983432)

Previously diagnosed and repaired PSH faults from the host reappear in Oracle ILOM when the host reboots. An incorrect report of a PSH-diagnosed fault appears in the Oracle ILOM CLI and web interface, and the fault LED illuminates.

You can identify this issue by checking to see if the same PSH fault was also reported from the host. If the fault was reported *only* by Oracle ILOM and not from the host, it is probably an example of this issue.

Recovery Action: Use the Oracle ILOM diagnostic and repair tools to identify the error condition and correct it. This example illustrates how to diagnose and repair a PSH fault diagnosed by the host. This example is based on the Oracle ILOM fault management shell. You could instead use the Oracle ILOM CLI or web interface to accomplish the same results.

1. Display the fault information.

```
faultmgmtsp> fmadm faulty
-----
Time                UUID                                msgid              Severity
-----
2011-09-16/15:38:19 af875d87-433e-6bf7-cb53-c3d665e8cd09 SUN4V-8002-6E Major

Fault class : fault.cpu.generic-sparc.strand

FRU          : /SYS/MB
               (Part Number: 7015272)
               (Serial Number: 465769T+1130Y6004M)

Description  : A fault has been diagnosed by the Host Operating System.

Response     : The service required LED on the chassis and on the affected
               FRU may be illuminated.

Impact       : No SP impact. Check the Host OS for more information.

Action       : The administrator should review the fault on the Host OS.
               Please refer to the Details section of the Knowledge Article
               for additional information.
```

2. Check for faults on the host.

```
# fmadm fault
#                               <-- Host displays no faults
```

3. Verify that the fault shown by Oracle ILOM was repaired on the host.

```
# fmdump
TIME                UUID                                SUNW-MSG-ID
Sep 16 08:38:19.5582 af875d87-433e-6bf7-cb53-c3d665e8cd09 SUN4V-8002-6E
Sep 16 08:40:47.8191 af875d87-433e-6bf7-cb53-c3d665e8cd09 FMD-8000-4M Repaired
Sep 16 08:40:47.8446 af875d87-433e-6bf7-cb53-c3d665e8cd09 FMD-8000-6U Resolved
#
```

4. Flush the previously faulty component from the host resource cache.

```
# fmadm flush /SYS/MB
fmadm: flushed resource history for /SYS/MB
#
```

5. Repair the fault in Oracle ILOM.

```
faultmgmtsp> fmadm repair /SYS/MB  
faultmgmtsp> fmadm faulty  
No faults found  
faultmgmtsp>
```

Units Used to Define the MIB Power Management Time Limit are Reported in Seconds (CR 6993008)

The MIB should report the `sunHwCtrlPowerMgmtBudgetTimelimit` in milliseconds, but the value displayed is in seconds.

Workaround: Understand that the value reported for `sunHwCtrlPowerMgmtBudgetTimelimit` is in seconds.

Spurious Interrupt Message in System Console When Using Oracle VTS (CR 7038266)

During normal operation and when running the Oracle VTS system exerciser, you might see this message in the system console:

```
date time hostname px: [ID 781074 kern.warning] WARNING: px0: spurious  
interrupt from ino 0x3,0x02,or 0x04
```

Workaround: You can safely ignore this message.

Intermittent Link Training Timeout Displayed During Power Cycles (CR 7043201)

On occasion during a power cycle, the server module might display the following warning message:

```
[CPU 0:0:0] NOTICE: MCU0: Link init failed: TS0 Timeout
```

The server module automatically retries the training sequence operation without error.

Workaround: You can safely ignore this message.

The `cfgadm` Command Might Fail on SG-SAS6-REM-Z or SGX-SAS6-REM-Z HBAs (CR 7044759)

The `cfgadm` command might fail on SG-SAS6-REM-Z or SGX-SAS6-REM-Z HBA devices.

```
# cfgadm -c unconfigure Slot1
cfgadm: Component system is busy, try again: unconfigure failed
WARNING: (pcieb2): failed to detach driver for the device
(mpt_sas9) in the Connection Slot1
WARNING: (pcieb2): failed to detach driver for the device
(mpt_sas9) in the Connection Slot1
```

Workaround: Disable the fault management daemon before running the `cfgadm unconfigure` command.

```
# svcadm disable fmd
# ps -ef |grep fmd
...
# cfgadm -c unconfigure PCI-EM0
```

After completing the `cfadm` task, re-enable the fault management daemon:

```
# svcadm enable fmd
```

Message From `cpustat` Refers to Processor Documentation Incorrectly (CR 7046898)

A message displayed by the `cpustat` command says:

```
See the "SPARC T4 User's Manual" for descriptions of these events.
Documentation for Sun processors can be found at:
http://www.sun.com/processors/manuals
```

The document and website listed in this message are not available.

reboot disk Command Occasionally Fails When disk Argument Picks Up Extra Characters (CR 7050975)

When running the `reboot disk` command, extraneous characters are occasionally added to the `disk` argument before it reaches the OBP. This situation results in a failure to boot.

Recovery Action: Repeat the boot request.

PCIe Correctable Errors Might Be Reported (CR 7051331)

In rare cases, PCIe Gen2 devices in the server module might report I/O errors that are identified and reported by predictive self-healing (PSH). For example:

TIME	EVENT-ID	MSG-ID	SEVERITY
Aug 10 13:03:23	a7d43aeb-61ca-626a-f47b-c05635f2cf5a	PCIEX-8000-KP	Major
Host : dt214-154			
Platform : ORCL,SPARC-T3-1B Chassis_id :			
Product_sn :			
Fault class : fault.io.pciex.device-interr-corr 67%			
fault.io.pciex.bus-linkerr-corr 33%			
Affects : dev:///pci@400/pci@1/pci@0/pci@c			
dev:///pci@400/pci@1/pci@0/pci@c/pci@0			
faulted but still in service			
FRU : "/SYS/MB" (hc://:product-id=ORCL,SPARC-T3-1B:product-sn=			
1052NND107:server-id=dt214-154:chassis-id=0000000-0000000000:serial=1005LCB-			
1052D9008K:part=541-424304:revision=50/chassis=0/motherboard=0) 67%			
"FEM0" (hc://:product-id=ORCL,SPARC-T3-1B:product-sn=			
1052NND107:server-id=dt214-154:chassis-id=0000000-0000000000/chassis=			
0/motherboard=0/hostbridge=0/pciexrc=0/pciexbus=1/pciexdev=0/pciexfn=			
0/pciexbus=2/pciexdev=12/pciexfn=0/pciexbus=62/pciexdev=0) 33%			
faulty			
Description : Too many recovered bus errors have been detected, which indicates			
a problem with the specified bus or with the specified			
transmitting device. This may degrade into an unrecoverable			
fault.			
Refer to http://sun.com/msg/PCIEX-8000-KP for more information.			

Response	: One or more device instances may be disabled
Impact	: Loss of services provided by the device instances associated with this fault
Action	: If a plug-in card is involved check for badly-seated cards or bent pins. Otherwise schedule a repair procedure to replace the affected device. Use <code>fmadm faulty</code> to identify the device or contact Sun for support.

These errors might be an indication of a faulty or incorrectly seated PCI EM. Or these errors might be erroneous.

Workaround: Ensure that the PCI EM is properly seated and functioning. If the errors continue, apply the Oracle Solaris 10 8/11 OS patch 147705-01 (or higher).

Watchdog Timeouts Seen With Heavy Workloads and Maximum Memory Configurations (CR 7083001)

With certain unusual heavy workloads, especially where a highly processor-intensive workload is bound to cpu 0, the host might appear to suddenly reset back to OBP without any sign of there having been a crash or a panic. The Oracle ILOM event log contains a host watchdog expired entry. The problem is more likely to occur on systems with full memory configurations.

If you see this sort of sudden reset, display the SP event log using this command from the Oracle ILOM CLI:

```
-> show /SP/logs/event/list
```

If you see an entry labeled `Host watchdog expired`, you are experiencing this issue.

Workaround: Contact your authorized service provider to see if a fix is available.

There are two ways you can work around this issue:

- You can extend the watchdog period by adding this entry to the Oracle Solaris `/etc/system` file:

```
set watchdog_timeout = 60000
```

This extends the watchdog timeout period to 1 minute (60000 milliseconds).

- In extreme cases, you can disable the watchdog timeout altogether by adding this entry to the `/etc/system` file:

```
set watchdog_enabled = 0
```

Whenever you modify the `/etc/system` file you must reboot the system for the changes to take effect.

If you do not want to reboot the system immediately after editing `/etc/system`, you can apply an additional temporary workaround that takes effect immediately. To apply this temporary workaround, as root type:

```
# psrset -c -F 0
```

This command creates a temporary processor set containing only CPU 0, preventing application workloads from using this processor and preventing this issue from occurring.

Note – If any threads were bound to CPU 0, they will be unbound.

This temporary processor set is removed on the next operating system reboot, at which point the `/etc/system` file workaround takes effect.

ereport.fm.fmd.module Generated During a Reboot of an SDIO Domain (CR 7085231)

The server module might generate an `ereport.fm.fmd.module` message during a reboot of an SDIO domain. This ereport indicates that an error occurred on one of the `fmd` modules but the `fmdump` command does not display a valid message (`msg`).

For example:

```
# fmdump -eV -c ereport.fm.fmd.module
TIME                               CLASS
Sep 27 2011 06:27:19.954801492 ereport.fm.fmd.module
nvlist version: 0
    version = 0x0
    class = ereport.fm.fmd.module
    detector = (embedded nvlist)
    nvlist version: 0
        version = 0x0
        scheme = fmd
```

```

        authority = (embedded nvlist)
        nvlist version: 0
            version = 0x0
            product-id = ORCL,SPARC-T4-1B
            server-id = c193-133
        (end authority)

        mod-name = etm
        mod-version = 1.2
    (end detector)

    ena = 0x425fc9b065404001
    msg = cannot open write-only transport <===
    __ttl = 0x1
    __tod = 0x4e81cf37 0x38e91d54

```

Workaround: You can safely ignore `ereport.fm.fmd.module` ereports.

Oracle VTS `dtlbtest` Hangs When CPU Threading Mode is Set to `max-ipc` (CR 7094158)

This issue is fixed in Oracle VTS 7.0 PS13.

The Oracle VTS processor test called `dtlbtest` hangs when Oracle VM for SPARC `max-ipc` threading mode is set. This issue is not specific to any processor type, and happens when both the following cases are true:

- Only one CPU or strand per core is enabled or online.
- The total number of online CPU per strand is less than or equal to 128.

Workaround: Do one of the following:

- Update to Oracle VTS 7.0 PS13
- Do not run the Oracle VTS `dtlbtest` with the Oracle VM for SPARC threading mode set to `max-ipc` mode.

