

# DSO Option Card

**For Digidesign VENUE Stage Rack**

## **Digidesign**

2001 Junipero Serra Boulevard  
Daly City, CA 94014-3886 USA  
tel: 650-731-6300  
fax: 650-731-6399

### **Technical Support (USA)**

tel: 650-731-6100  
fax: 650-731-6375

### **Product Information (USA)**

tel: 650-731-6102  
tel: 800-333-2137

### **International Offices**

Visit the Digidesign Website  
for contact information

### **Website**

[www.digidesign.com](http://www.digidesign.com)



**digidesign**

## Legal Notices

This guide is copyrighted ©2008 by Digidesign, a division of Avid Technology, Inc. (hereafter "Digidesign"), with all rights reserved. Under copyright laws, this guide may not be duplicated in whole or in part without the written consent of Digidesign.

003, 003 Rack, 96 I/O, 96i I/O, 192 Digital I/O, 192 I/O, 888|24 I/O, 882|20 I/O, 1622 I/O, 24-Bit ADAT Bridge I/O, AudioSuite, Avid, Avid DNA, Avid Mojo, Avid Unity, Avid Unity ISIS, Avid Unity MediaNetwork, Avid Xpress, AVoption, AVoption|V10, Beat Detective, Bruno, Command|8, Control|24, D-Command, D-Control, D-Fi, D-fx, D-Show, DAE, Digi 002, Digi 002 Rack, DigiBase, DigiDelivery, Digidesign, Digidesign Audio Engine, Digidesign Intelligent Noise Reduction, Digidesign TDM Bus, DigiDrive, DigiRack, DigiTest, DigiTranslator, DINR, DV Toolkit, EditPack, Impact, Interplay, M-Audio, MachineControl, Maxim, Mbox, MediaComposer, MIDI I/O, MIX, MultiShell, OMF, OMF Interchange, PRE, ProControl, Pro Tools M-Powered, Pro Tools, Pro Tools|HD, Pro Tools LE, QuickPunch, Reel Tape, Reso, Reverb One, ReVibe, RTAS, Smack!, SoundReplacer, Sound Designer II, Strike, Structure, SYNC HD, SYNC I/O, Synchronic, TL Space, Velvet, X-Form and Xpand! are trademarks or registered trademarks of Digidesign and/or Avid Technology, Inc. All other trademarks are the property of their respective owners.

Product features, specifications, system requirements, and availability are subject to change without notice.

9321-58647-00 REV A 03/08

Comments or suggestions regarding our documentation?  
email: techpubs@digidesign.com

## Communications and Safety Regulation Information

### Compliance Statement

This model Digidesign DSO Option Card complies with the following standards regulating interference and EMC:

- FCC Part 15 Class B
- EN 55103-1 E3
- EN 55103-2 E3
- AS/NZS 3548 Class B
- CISPR 22 Class B

## Radio and Television Interference

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

### DECLARATION OF CONFORMITY

We Digidesign,

2001 Junipero Serra Boulevard, Suite 200

Daly City, CA 94014 USA

tel: 650-731-6300

declare under our sole responsibility that the product

DSO Option Card

complies with Part 15 of FCC Rules.

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### Communication Statement

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try and correct the interference by one or more of the following measures:

- Reorient or locate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Digidesign

DSO Option Card



**Tested To Comply  
with FCC Standards**

**FOR HOME OR OFFICE USE**

Any modifications to the unit, unless expressly approved by Digidesign, could void the user's authority to operate the equipment.

### Canadian Compliance Statement:

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

## Australian Compliance



## European Compliance



# Contents

<b>Chapter 1. Overview</b> .....	1
DSO Card Components .....	1
DSO Card Capabilities and Features .....	1
Conventions Used in This Guide .....	2
<b>Chapter 2. Installing Option Cards</b> .....	3
Installing Option Cards in the Stage Rack .....	3
Confirming Installation .....	5
<b>Chapter 3. Specifications</b> .....	7
Audio and Electrical Specifications .....	7
LEDs .....	7



# Chapter 1: Overview

The DSO (Digital Stage Output) card provides eight channels of digital outputs to your Digidesign® VENUE system. The eight digital outputs are available via four two-channel AES/EBU XLR connectors along with an ADAT optical interface, providing simultaneous output to both connector types.

The DSO card is installed in the Stage Rack. Up to six DSO cards may be installed in the Stage Rack, providing a total of 48 channels of digital outputs.

For DSO card installation instructions, see Chapter 2, “Installing Option Cards.”

---

## DSO Card Components

The DSO card package includes the following items:

- DSO card
- Mounting screws
- Digidesign Registration Information Card

---

## DSO Card Capabilities and Features

- Eight channels of digital outputs via four two-channel AES/EBU XLR3-male connectors
- Eight channels of ADAT optical digital outputs via one ADAT TOSLINK connector
- Simultaneous output to both AES/EBU outputs and ADAT optical output
- Automatic muting for system protection
- Signal and Mute LEDs for each AES/EBU channel pair



DSO Card

---

## Conventions Used in This Guide

All Digidesign guides use the following conventions to indicate menu choices and key commands in D-Show and Pro Tools:

Convention	Action
File > Save Session	In Pro Tools, choose Save Session from the File menu
Options > System Config	In the D-Show software screen, click Options to display the Options page, then click the System Config tab.
Ctrl+N	Hold down the Control key and press the N key
Ctrl-click	Hold down the Control key and click the mouse button

The following symbols are used to highlight important information:



*User Tips are helpful hints for getting the most from your D-Show system.*



*Important Notices include information that could affect data or performance.*



*Shortcuts show you useful keyboard or mouse shortcuts.*



*Cross References point to related sections in the D-Show or Pro Tools Guides.*

# Chapter 2: Installing Option Cards

This chapter provides instructions for installing option cards in a Stage Rack. The following option cards can be installed in a Stage Rack:

**SRI Stage Rack Input Card** Provides eight analog mic/line inputs.


**DSI Digital Stage Input Card** Provides eight digital inputs.

**SRO Stage Rack Output Card** Provides eight analog line outputs.

**DSO Digital Stage Output Card** Provides eight digital outputs.

**ANO A-Net Output Card** Provides 16 channels of outputs to Aviom® Pro16™ personal mixers and devices.

Installation is the same regardless of the type of Stage Rack option card, with the exception of the ANO A-Net card. Up to six input cards of either type can be installed in slots A–F, and up to six DSO or SRO output cards of either type can be installed in slots G–M.

 For information on installing and using the ANO A-Net card, see the A-Net Output Card Guide.


## Installing Option Cards in the Stage Rack

Stage Rack option cards are installed in the Stage Rack and connected to a ribbon cable in the Stage Rack.

### To install an SRI, SRO, DSI or DSO card:

- 1 Shut down your system.
- 2 Power down your Stage Rack.
- 3 Disconnect all cables from the Stage Rack.

**4** Remove the Stage Rack's back panel cover by unscrewing its mounting screws (#1 Phillips).

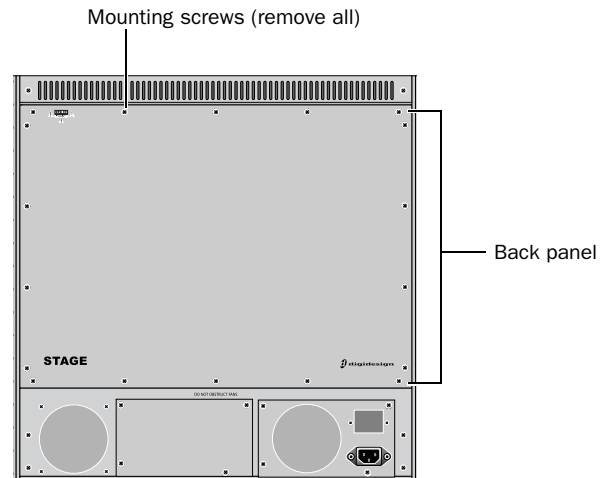

Stage Rack main back panel


**5** On the front panel of the Stage Rack, locate the slot where you want to install the option card.

**Input Cards** SRI or DSI cards may be installed in slots A–F only.

**Output Cards** SRO or DSO cards may be installed in slots G–M only.


Up to six input cards of either type can be installed in slots A–F, and up to six output cards of either type can be installed in slots G–M.

**6** Remove the card slot cover by removing the four screws holding it in place. Keep the screws nearby for securing the option card to the Stage Rack later.

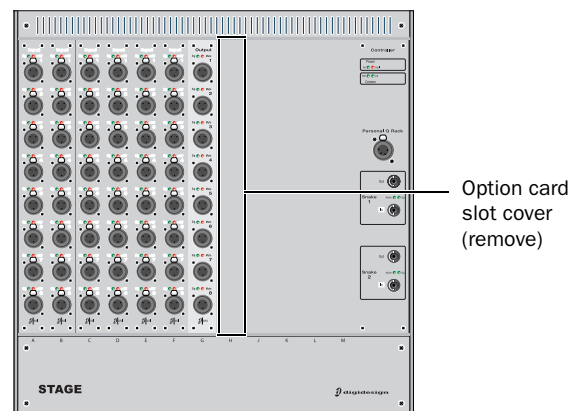


Stage Rack front panel

**7** Remove the option card from its packing material. Hold the card by its edges.

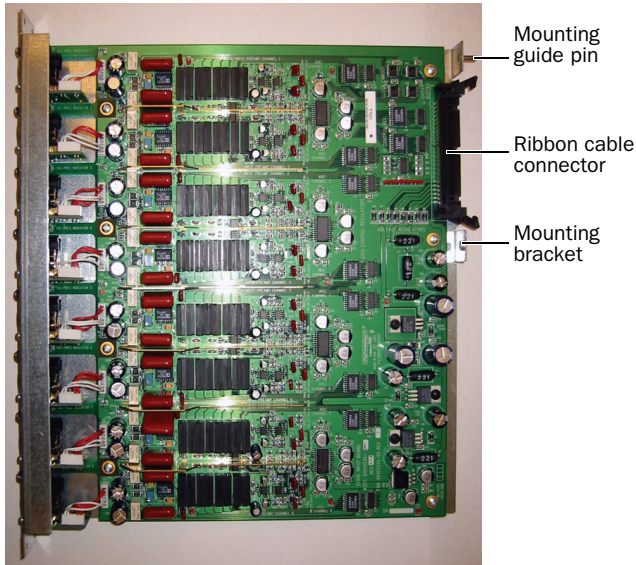


*Stage Rack option card showing brackets and connector*

**8** Gently slide the option card into the option card slot. Use two hands, one to guide the card from the back of the Stage Rack, and the other to push the card in from the front of the Stage Rack. Align the guide pin at the top rear of the card with the corresponding hole in the back of the Stage Rack chassis.

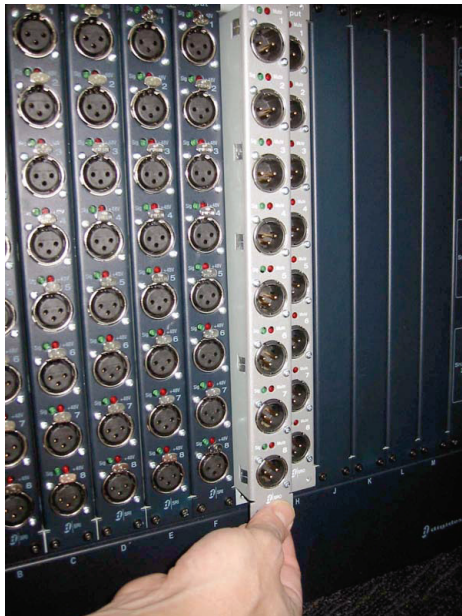

*Installing a Stage Rack option card in the Stage Rack (SRO card shown)*

**9** When the option card is seated in its slot, secure it to the Stage Rack chassis from the back of the Stage Rack with a provided mounting screw.

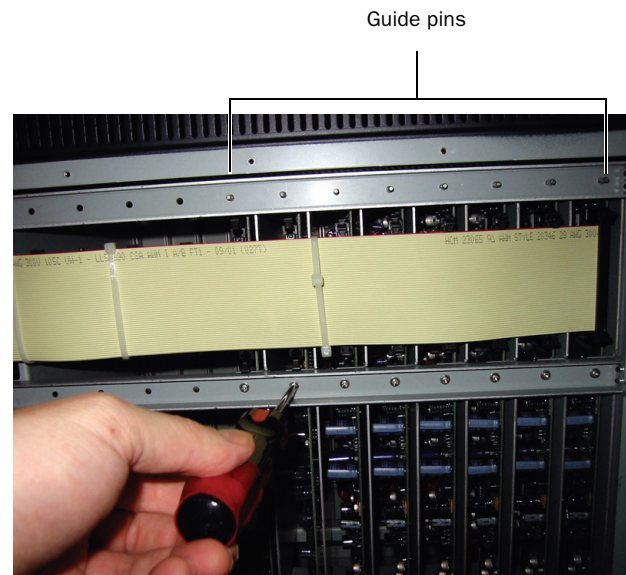

*Securing a Stage Rack option card to the Stage Rack chassis*


**10** Secure the option card to the front panel of the Stage Rack using four provided mounting screws.



*Securing a Stage Rack option card to the Stage Rack front panel*



**11** Connect the option card to its corresponding ribbon cable connector. Make sure the pins are oriented correctly. Secure the connection by moving the retaining clips on each side of the connector in ward. Check to make sure the cable is connected securely.

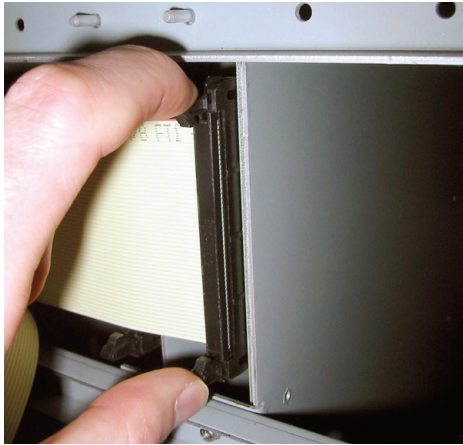

Connecting a Stage Rack option card to the Stage Rack ribbon cable

---


## Confirming Installation

After you have installed an option card, you should confirm that you have installed it properly. You can confirm installation by checking your system hardware status.


### To complete and confirm installation:

- 1 Reattach the Stage Rack's back panel.
- 2 Reconnect the power, Snake cable, and any audio cables to the Stage Rack.
- 3 Turn on your VENUE system.
- 4 Go to the Options page and click the Devices tab to view your system hardware status. The newly installed option card should appear in the Stage Rack graphic.

The newly installed option card's inputs or outputs should also become available in the corresponding "Stage" tab in the Patchbay.

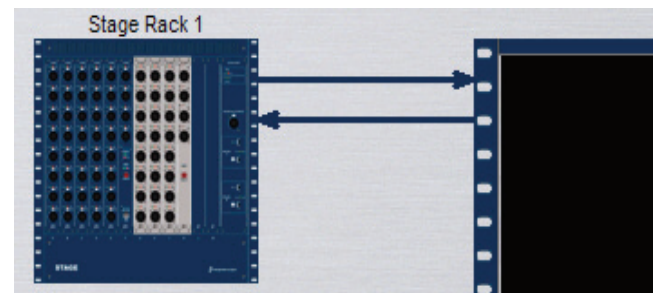

Detail of Devices page indicating presence of a DSO card

 For more information on configuring and routing your VENUE system inputs and outputs, see the *D-Show Guide*.



# Chapter 3: Specifications

---

## Audio and Electrical Specifications

### DSO Digital Outputs

Parameter	Specifications	Limit	Units	Condition/ Comment
Connector (x4)	XLR3-Male			
Format	AES3 (AES/EBU)			
Word length	24		bit	
Impedance	110		ohm	
Level	~3.6		Vpp	max, i.e., +/- 1.8V
Sample rate	48		kHz	No sample rate conversion
Channel status info	Pro Audio 48k, no emphasis			
Dithering	No			

### DSO ADAT Digital Output

Parameter	Specifications	Limit	Units	Condition/ Comment
Connector (x1)	TOSLINK Optical			
Format	ADAT			8 Channel
Word length	24		bit	
Sample rates	48		kHz	No sample rate conversion
Dithering	No			

---

## LEDs

### Signal LEDs (AES 1/2-7/8)

One green and one red Signal LED per output pair indicate output signal status as follows:

#### Sig LEDs

Sig LEDs	Indicates
Red	Hardware mute (automatically during power up and power down, or via Mute all Stage Output action)
Green	Signal present