

// FREeCOM

USER MANUAL



MOBILE DRIVE II

EXTERNAL MOBILE HARD DRIVE / 2.5" / USB 2.0

Dear user!

Thank you for choosing the **Freecom Mobile Drive II** as an external hard drive. For optimal use and performance we advise you to read this manual carefully before using this product.

Freecom Technologies • Germany
www.freecom.com

Contents of the box

Please check the contents of the box; the following items should be included:

- external Freecom Mobile Drive II*
- Data cable (USB 2.0)
- Manual, safety manual and application software pre-installed on the hard drive
- Quick Install Guide

* Operation without power pack possible, power supply occurs over the USB port.

When the power provided by the USB port is not sufficient, visit www.freecom.com/support for an optional AC adapter.

Warning!

All rights reserved. The products named in this manual are only used for identification purposes and may be trademarks or registered trademarks of the respective companies. This device was designed for home or office use.

Warning! This device is equipment complying with EN55022 class A. This equipment can cause radio disturbances in a residential area. If this is the case, the user has to take appropriate measures and assume all responsibility and costs for. It may not be used near or with any life-sustaining systems.

Freecom cannot be made liable for any damages, loss of data or damage following thereof -whatsoever (including, without limitation, damages for loss of business profits, business interruption, loss of business information, or other pecuniary loss) arising out of the use of or inability to use this Freecom product, even if Freecom has been advised of the possibility of such damages.

We reserve the right to upgrade our products in keeping with technological advances.

User manual

General Information	page	4
Precautionary measures.....	page	5
Freecom Mobile Drive II	page	6

Chapter 1:

Hardware Installation	page	7
-----------------------------	------	---

Chapter 2:

Driver Installation	page	7
---------------------------	------	---

Chapter 3:

Installation of the application software	page	8
--	------	---

Chapter 4:

Freecom Hard Drive Protection Tool	page	10
--	------	----

Chapter 5:

Using Freecom Turbo USB 2.0 (only PC)	page	19
---	------	----

Chapter 6:

Partitioning your Freecom Mobile Drive II	page	20
---	------	----

General Information

The following hardware and software requirements must be fulfilled to ensure trouble-free operation.

System requirements

In order to use the Freecom Mobile Drive II, following components are needed:

PC:

- Intel Pentium III / AMD Duron 900 MHz or higher
- 256 MB RAM (Vista: 512 MB RAM) or higher
- Available USB 2.0 or USB 1.1 port*
- Internet connection for online warranty registration and software updates and downloads
- Operating system: Windows 2000, Windows XP, Windows Vista

Mac:

- PowerPC G3/G4/G5, Mac Book Pro or Intel Mac
- 256 MB RAM or higher
- Available USB 2.0 or USB 1.1 port*
- Internet connection for online warranty registration and software updates and downloads
- Operating system: Mac OS X v10.4 or higher

* To achieve optimal performance from the Freecom Mobile Drive II your PC should be equipped with an USB 2.0 port.

Precautionary measures

To ensure that your Freecom Mobile Drive II functions properly, please take note of the following precautions. If these are not followed, you may void your warranty and damage the Freecom Mobile Drive II.

- Safely remove the Freecom Mobile Drive II via your operating system (the "unplug or eject hardware" option in the Windows taskbar) before disconnecting the USB cable or power cable and before switching off the device. Failing to do so may result in data loss.
- Do not drop the Freecom Mobile Drive II or expose it to other kinds of sudden mechanical shocks as this may result in data loss and damage to the Freecom Mobile Drive II.
- Do not use the Freecom Mobile Drive II when the ambient temperature is below 10°C or above 35°C.
- If the Freecom Mobile Drive II is moved from a cool environment to a warmer environment, please allow the drive to acclimatize to the ambient temperature before operating the device. Failing to do so may lead to condensation within the drive enclosure, which in turn may cause the drive to malfunction.
- Do not place liquids or drinks on the Freecom Mobile Drive II. When liquids are spilled and get in contact with the electronics within the drive enclosure, it will damage the drive and will cause the drive to malfunction.
- Do not use the Freecom Mobile Drive II in a dusty environment. Dust inside the enclosure may damage the internal electronics and result in drive malfunction.
- Opening the Freecom Mobile Drive II will void the warranty.
- Since USB 2.0 is backwards compatible with USB 1.1, the Freecom Mobile Drive II can be connected to all USB ports. When connected to a USB 1.1 port, however, the performance (data transfer rate) of the Freecom Mobile Drive II will be much lower than when the drive is connected to a USB 2.0 port.



On some computers it might occur that the USB port does not deliver enough power to the Mobile Drive II. In that case, you need to use an external power supply.

For safety reasons you must only use Freecom's Power Supply Part.No. 30921. Don't use any other power supply!

Freecom Mobile Drive II

The hi-speed data transfer through the USB 2.0 interface makes it ideally suitable for data-storage, file sharing, backup, archiving, audio playback and all applications that need fast file access.

For your convenience, the Freecom Mobile Drive II has been partitioned (1 partition) and pre-formatted (FAT32 file system). The FAT32 format ensures maximum interchangeability of the Freecom Mobile Drive II between different computers. Should you choose to format the Freecom Mobile Drive II in another file system (e.g. NTFS), please be aware of possible problems when connecting the Freecom Mobile Drive II to another computer than the one you used for formatting.

Chapter 1: Hardware Installation



1. Connect the USB cable to the Freecom Mobile Drive II.



2. Plug the cable into the USB port on your computer.

Since USB 2.0 is backwards compatible with USB 1.1, the Freecom Mobile Drive II can be connected to all USB ports. When connected to a USB 1.1 port, however, the performance (data transfer rate) of the Freecom Mobile Drive II will be much lower than when the drive is connected to a USB 2.0 port.

On some computers it might occur that the USB port does not deliver enough power to the Mobile Drive II. In that case, you need to use an external power supply.

For safety reasons you must only use Freecom's Power Supply Part.No. 30921. Don't use any other power supply!

Chapter 2: Driver Installation

Under Windows 2000 / XP / Vista and Mac OS X a separate Freecom driver is not required. The drivers will be installed automatically by the operating system after plugging in the Freecom Mobile Drive II into the USB port of the computer.

Chapter 3: Installation of the application software

3.1 Installation software PC

1. Click on "StartPC.exe" in the main directory of the hard drive. The Freecom start menu opens.



2. Click on "Software Installation" -> "NTI Shadow", "NTI Ripper" or other software. The installation starts now. Follow the instructions on the screen, confirm with "Next" in order to continue with the installation.

3.1.1 Saving Freecom data

The user manuals and complementary software (when applicable) are pre-loaded onto the hard drive. We recommend that you save these files to your computer ("My Documents"/"Freecom"), to always have a backup of these files in case you (accidentally) reformat the drive or delete these files from the drive.

Saving these files from the external hard drive to your computer is easy:

1. Click on the button „Save Freecom files“.
2. All provided data on the Freecom hard drive will be saved to the folder "Freecom" in "My Documents".



3.2 Installation software Mac

1. Click on "Start MAC" in the main directory of the hard drive. The Freecom start menu opens.



2. Click on "Install NTI Shadow". The installation starts now. Follow the instructions on the screen, confirm with "Next" in order to continue with the installation.

3.2.1 Saving Freecom data

The user manuals and complementary software (when applicable) are pre-loaded onto the hard drive. We recommend that you save these files to your computer ("Documents"/"Freecom"), to always have a backup of these files in case you (accidentally) reformat the drive or delete these files from the drive.

Saving these files from the external hard drive to your computer is easy:

1. Click on the button "Save Freecom files".
2. All provided data on the Freecom hard drive will be saved to the folder "Freecom" in "Documents".



Chapter 4: Freecom Hard Drive Protection Tool

4.1 Using the Freecom Hard Drive Protection Tool (PC)


Your Freecom Mobile Drive II is equipped with a password protection feature. This provides the best possible protection. Your data is always protected, even if the internal hard drive is taken out of the enclosure and connected to a computer, you still will not be able to access the data.

If your PC is shut down or sent to hibernation, we recommend to completely disconnecting the Mobile Drive II from your PC in order to reactivate the password protection. Some PCs keep USB devices supplied with power when being in hibernation mode, therefore you remain logged in with your password.


4.1.1 Configuring the password protection

1. Connect your Freecom Mobile Drive II to your PC. A Hard Disk Drive (“FRECOMHDD”) and a Virtual CD-ROM Drive (“Password”) will appear in “My Computer”.

The Virtual CD-ROM Drive is an undeletable partition on your Mobile Drive II on which the Freecom Hard Drive Protection software is stored. This ensures that you always have the password protection application available when needed, it can not be accidentally deleted.

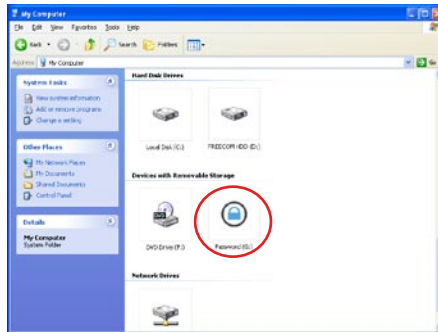

2. If the virtual CD-ROM drive does not automatically open after the hard drive has been connected, double-click on the virtual CD ROM drive icon (“Password”) to open it.

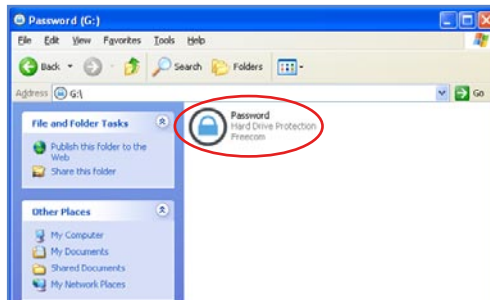

- Double-click on the „Password.exe“ symbol to run the Freecom Hard Drive Protection software. The Hard Drive Protection Wizard will open. Click “Next” to proceed.



- Enter a password. This password will be required to access the protected partition. Confirm the password in the second field and click “Next”.



- Your hard drive is now protected with a password. Click “Finish” to exit the wizard.



Accessing the password-encrypted hard drive

1. Open the virtual CD-ROM Drive and double-click on "Password.exe". The Freecom Hard Drive Protection tool opens.
2. Enter your password and click "Finish". Your password-protected hard drive will now be accessible in "My Computer".



I lost my password, what can I do now?

If you lose your password, you will not be able to access your data anymore. The only way to continue using your Mobile Drive II is to erase and format the hard drive.


Attention! When erasing and formatting the hard drive, all data previously stored on the drive will be erased. All data on the drive will be deleted!

Follow these steps to erase and format your hard drive:

1. Run "Password.exe" from the virtual CD-ROM Drive.




- Click on “Lost your password?” and confirm that you want to start the “Erase and Format Hard Disk Wizard”.

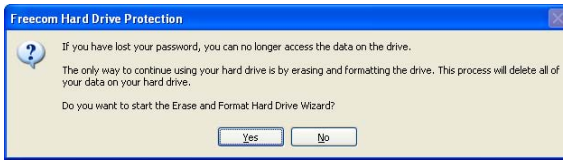

- To continue, you have to confirm that all data on your hard disk will be deleted. Click on “Next” to continue.



- In a final step, you have to confirm once again that you want to erase and format the hard disk. Clicking on “Yes” in this step will irreversibly delete all your data. This might take up to two hours.

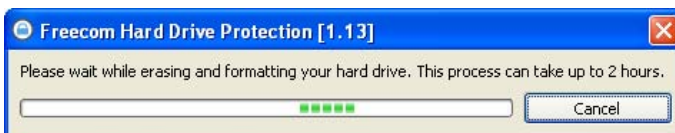


Removing the password encryption

It is possible to remove the password protection feature, meaning that the data on the drive will always be visible when you connect the drive.


1. Make sure you already run the “Password.exe” to have access to your protected data.
2. Once you have access to your protected data, run the “Password.exe” again and select “Remove password protection”. Click on “Next” to continue.



3. Enter your password and click on “Next”.

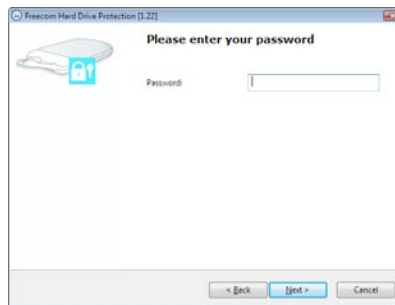

4. The password protection will now be removed and you will always have access to your data.

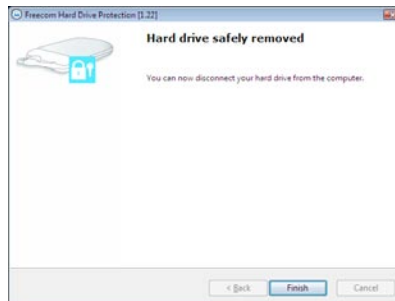

4.2 Using the Freecom Hard Drive Protection Tool (Mac)

Your Freecom Mobile Drive II is equipped with a password protection feature. This provides the best possible protection. Your data is always protected, even if the internal hard drive is taken out of the enclosure and connected to a computer, you still will not be able to access the data.

If your Mac is shut down or sent to hibernation, we recommend to completely disconnecting the Mobile Drive II from your Mac in order to reactivate the password protection. Some Macs keep USB devices supplied with power when being in hibernation mode, therefore you remain logged in with your password.


4.2.1 Configuring the password protection

1. Connect your Freecom Mobile Drive II to your Mac. A Hard Disk Drive ("FREECOM HDD") and a Virtual CD-ROM Drive ("Password") will appear.

The Virtual CD-ROM Drive is an undeletable partition on your Mobile Drive II on which the Freecom Hard Drive Protection software is stored. This ensures that you always have the password protection application available when needed, it can not be accidentally deleted.



2. Open the CD-ROM drive and double-click on "Password".

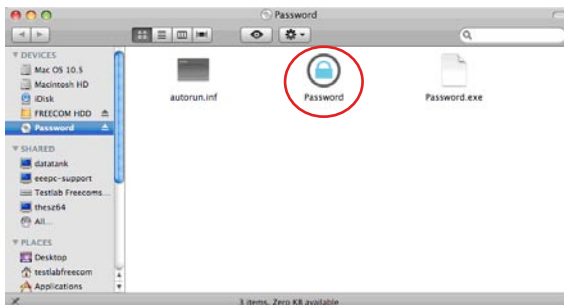


3. Enter a password. This password will be required to access the protected partition. Confirm the password in the second field and click on "OK".



Accessing the password-encrypted hard disk

1. Connect your Freecom Mobile Drive II to your Mac. A window will open, stating that the inserted disk is not readable. Click on "Ignore".

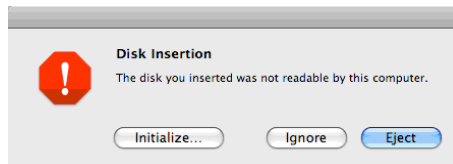

2. Run "Password" from the CD-ROM drive. You will be prompted to enter your password to access the hard drive. Enter your password and click on "OK". You will have full access to your Mobile Drive II now.



I lost my password, what can I do now?

If you lose your password, you will not be able to access your data anymore. The only way to continue using your Mobile Drive II is to erase and format the hard drive.

Attention! When erasing and formatting the hard drive, all data previously stored on the drive will be erased. All data on the drive will be deleted!

Follow these steps to erase and format your hard drive:

1. Run "Password" from the virtual CD-ROM Drive and click on "Lost password". You will be asked if you want to erase and format your hard drive. Click on "Continue".



2. Check the box to confirm that all data on your hard disk will be deleted and click on "Erase". Your hard disk will be erased and formatted, this might take up to two hours.



Removing the password encryption

It is possible to remove the password protection feature, meaning that the data on the drive will always be visible when you connect the drive.

1. Make sure you already run "Password" to have access to your protected data.
2. Once you have access to your protected data, run "Password" again and select "Remove password protection".



3. Enter your password and click on "OK".
4. The password protection will now be removed and you will always have access to your data.



Chapter 5: Using Freecom Turbo USB 2.0 (only PC)

By installing the Turbo USB 2.0 driver for your Mobile Drive II, the data transfer rate can be significantly increased (up to 40% faster transfer speed compared to standard High-Speed USB).

Enabling the Turbo USB 2.0 driver

1. Connect the Freecom Mobile Drive II to your PC.
2. Run "Start.exe" from your Mobile Drive II and go to Software Installation -> Freecom Turbo USB 2.0.
3. The Freecom Turbo USB 2.0 Wizard will open.



4. Check the drive and click on "Configure" to enable the Turbo USB2.0 driver for the Freecom Mobile Drive II.



Disabling the Turbo USB 2.0 driver

1. Connect the Freecom Mobile Drive II to your PC.
2. Run "Start.exe" from your Mobile Drive II and go to Software Installation -> Freecom Turbo USB 2.0.
3. The Freecom Turbo USB 2.0 Wizard will open. Uncheck the drive and click on "Configure" to disable the Freecom Turbo USB 2.0 driver for the Freecom Mobile Drive II.

Chapter 6: Partitioning your Freecom Mobile Drive II

6.1 General information

Your Freecom Mobile Drive II was partitioned and formatted to provide you with the maximum available capacity and compatibility. FAT32 was chosen as file system to assure that you will be able to read your files on any PC. It is recommended not to change the current configuration of your Freecom Mobile Drive II.

For some users another file system might fit better for their needs. This manual describes current limitations of most common file systems and Instructions to enable you to adapt the Freecom Mobile Drive II to your needs.

6.2 File System features

Please refer to the tables below for an overview:

File systems supported by different operating systems

File system / Operating system	FAT	FAT32	NTFS	HFS+
Windows 2000	yes	yes	yes	no
Windows XP / Vista	yes	yes	yes	no
Mac OS X	yes	yes	yes (only read)	yes

Maximum size of a partition

File system / Operating system	FAT	FAT32	NTFS	HFS+
Windows 2000	4 GB*	32 GB	16 TB	-
Windows XP / Vista	4 GB*	32 GB	16 TB	-
Mac OS X 10.1.x	-	128 GB	-	2 TB
Mac OS X 10.2.x	-	128 GB	-	8 TB
Mac OS X 10.3.x	-	(> 128 GB)	-	16 TB
Mac OS X 10.4.x	-	(> 128 GB)	-	16 TB
Mac OS X 10.5.x	-	(> 128 GB)	-	16 TB

* FAT partitions larger than 2 GB can only be administrated by Windows 2000 / XP / Vista.

Example for different partitions with different file systems on one Freecom Mobile Drive II

Total size of Freecom Mobile Drive II \ File system	NTFS	FAT32
320 GB	300 GB	20 GB

Note: On NTFS formatted hard disks can only be written under Windows 2000 / XP / Vista. Under MacOSX data can only be read.

The example above is a good solution for Windows 2000 / XP / Vista users who sometimes exchange data with Macs.

For storing the data under Windows 2000 / XP / Vista both partitions can be used. As the NTFS file system can only be read by Mac data to be used on these operating systems must be stored on the FAT32 partition.

Please follow the steps below to adapt the Mobile Drive II for your needs.

6.3 Partitioning your Mobile Drive II under Windows 2000 / XP / Vista


6.3.1 Deleting a partition on the Freecom Mobile Drive II

1. Click with the right mouse button on the "My Computer" icon on your desktop.
2. Select the option "Manage".
3. Select the option "Storage" -> "Disk Management".
4. Choose your external Mobile Drive II and right-click on the partition.
5. Select "Delete Partition" and confirm by clicking on "Yes". The partition will be deleted now.


6.3.2 Creating a partition on the Freecom Mobile Drive II

The following steps will guide you through the process of creating partitions on your Freecom Mobile Drive II. After this procedure your Mobile Drive II will be ready for use and it will be allocated a drive letter.

1. Click with the right mouse button on the "My Computer" icon on your desktop.
2. Select the option "Manage".
3. Select the option "Storage" -> "Disk Management".
4. Choose the hard disk, which is "unallocated". Ensure that the entire drive is "unallocated".

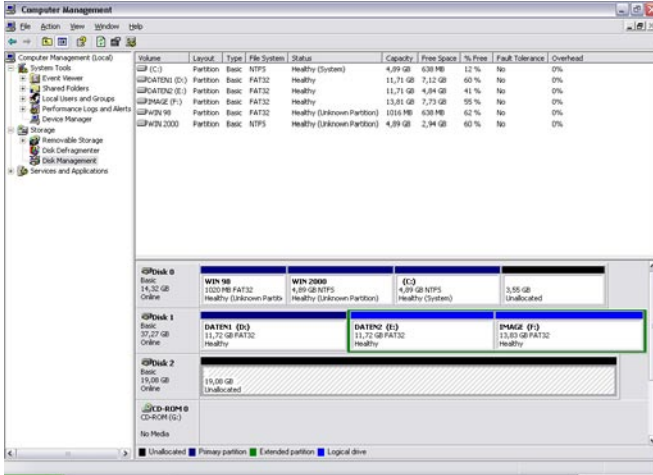

5. Click with the right mouse button on the "unallocated" area and select the option "New Partition" (Windows 2000: "Create Partition Wizard"). The "New Partition Wizard" opens. Click on "Next".

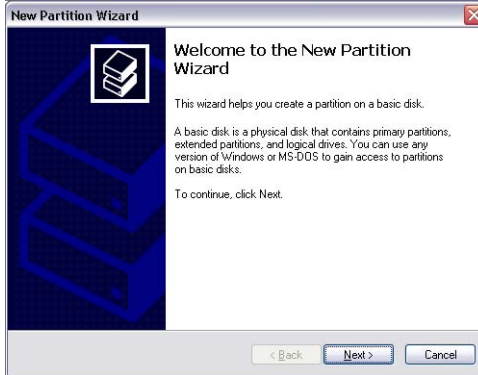

6. Select "Primary partition" and click on "Next".



7. Now you can adjust the size of your partition. Click on "Next" if only one partition is to be created. See next chapter (Creating two or more partitions on the Freecom Mobile Drive II under Windows 2000 / XP / Vista) how to create more than one partition.




8. Assign a drive letter to your hard disk. Normally you can use the default options. Click on "Next".

9. Select the formatting option "Format this partition with the following settings". Choose either "FAT32" or "NTFS", the "Allocation unit size" should remain on "Default". Finally select "Perform a quick format" and click on "Next".



10. Click on "Finish" to complete the partitioning of your Freecom Mobile Drive II. Your Freecom Mobile Drive II will be formatted now and is ready-to-use afterwards.

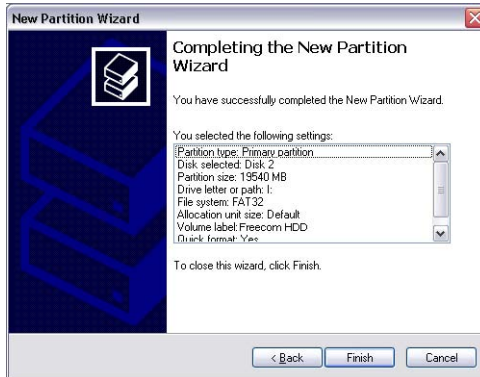

6.3.3 Creating two or more partitions on the Freecom Mobile Drive II under Windows 2000 / XP / Vista



1. Repeat the steps from the previous chapter (Creating a partition on the Freecom Mobile Drive II under Windows 2000 / XP / Vista) for creating the first partition.
2. Click with the right mouse button on the "My Computer" icon on your desktop.
3. Select the option "Manage".
4. Select the option "Storage" -> "Disk Management".
5. Right-click on the unallocated space of your Freecom Mobile Drive II and select the option "New partition" (Windows 2000: "Create partition"). The "New Partition Wizard" (Windows 2000: "Create Partition Wizard") opens. Click on "Next".
6. Select "Extended partition" and click on "Next".




7. Now you can adjust the size of your partition. Enter the size and click on "Next".



- Click on "Finish" to create the "Extended partition". The unallocated space now changed to "Free space".

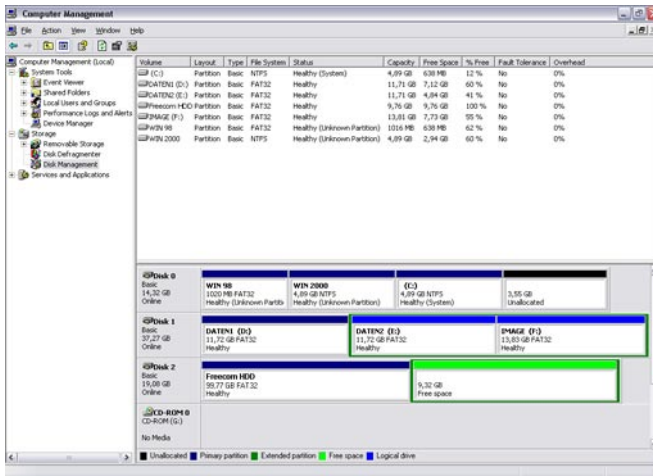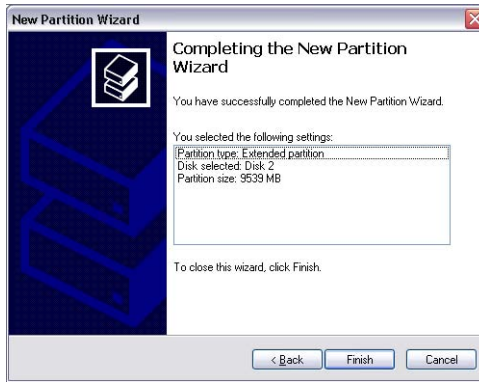

- Right-click on "Free Space" and select "New Logical Drive" (Windows 2000: "Create Logical Drive"). The "New Partition Wizard" (Windows 2000: "Create Partition Wizard") opens. Click on "Next".

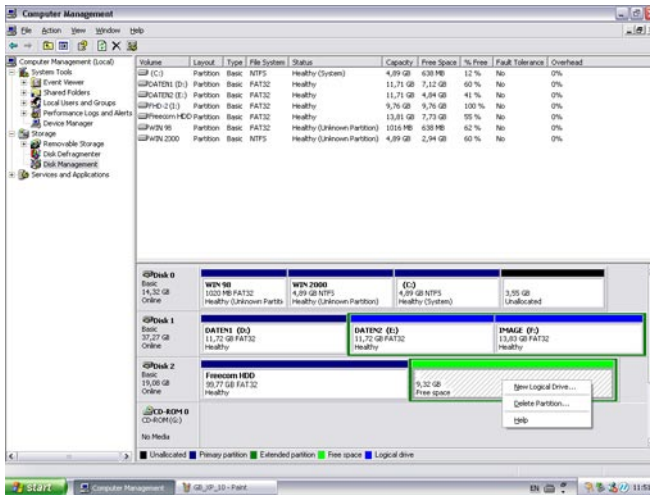


- "Logical drive" is already selected. Click on "Next".
- Specify the partition size and click on "Next".
- Assign a drive letter and click on "Next".
- Select the formatting option "Format this partition with the following settings". Choose either "FAT32" or "NTFS", the "Allocation unit size" should remain on "Default". Finally select "Perform a quick format" and click on "Next".
- Click on "Finish" to complete partitioning. Your partition will be formatted now and is ready-to-use.


Note: If you select NTFS as file system, the data of your Mobile Drive II can be read only under Mac OS X. There is no possibility to write data.

6.4 Partitioning your Freecom Mobile Drive II under Mac OS X

1. Open the "Disk Utility". This can be found in "Applications" → "Utilities".
2. Click on the tab "Partition".

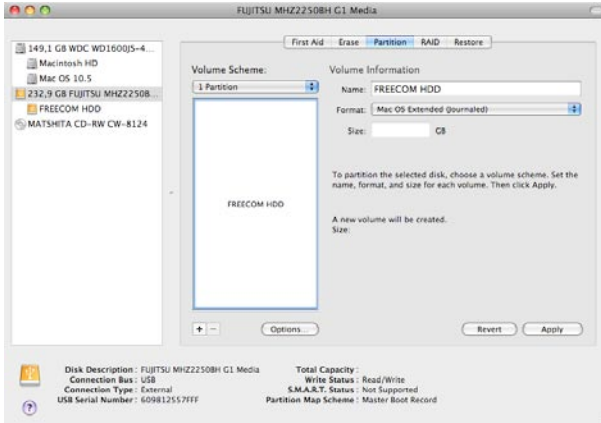

Here you can setup the partition settings and partition the drive according to your settings (e.g. Mac OS Extended). Detailed information how to use the Disk Utility can be found in the help:

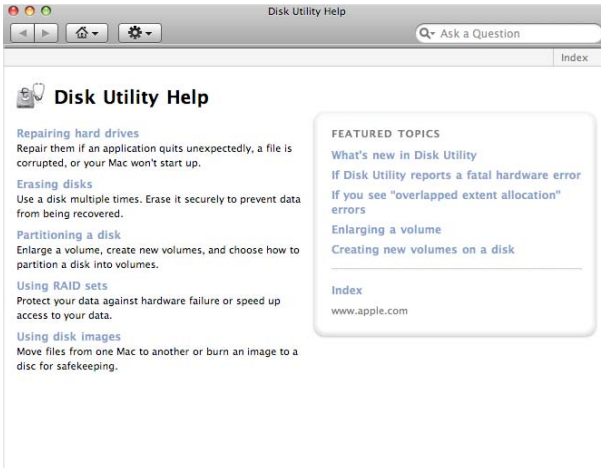

WARRANTY

(valid in Europe/Turkey only)

We thank you for purchasing this Freecom product and hope you will enjoy using it. In order to avoid unnecessary inconvenience on your part, we suggest reading the quick install guide, instruction manual and any additional electronic and or printed manuals. When problems occur we have a database with Frequently Asked Questions (FAQ) on our Freecom website (www.freecom.com), please check this site before you contact the helpdesk.

Your Guarantee

All Freecom products come with unlimited technical phone and web support. By this Guarantee, Freecom warrants their products to be free from defects in material and workmanship for a period listed below from the date of its original purchase. If during this period of guarantee the product proves defective due to improper materials or workmanship, Freecom will, without charge for labour or parts, at its sole discretion, repair or replace the product or its defective parts upon the terms and conditions set out below.

Conditions

This guarantee will be granted only when the original invoice or sales receipt (indicating the date of purchase, product and serial number) is presented together with the defective product and a Freecom RMA number received from the Freecom Website or given by a Freecom Service Center. Freecom reserves the right to refuse the free-of-charge guarantee services when the date of purchase of the product cannot be proven. This guarantee will not apply if the RMA number is missing, the serial number on the product has been altered, removed or made illegible.

This guarantee covers only the hardware components packaged with the product. This guarantee covers none of the following: (a) any consumable supplied with the product, such as media or batteries; (b) damage to or loss of any software programs, data or removable storage media; (c) any damage resulting from adaptations, changes or adjustments, which may have been made to the product, without the prior written consent of Freecom; (d) attempted repair by any party other than authorized by Freecom and (e) accidents, lightning, water, fire or any other such cause beyond the reasonable control of Freecom.

With respect to all services provided, Freecom is not responsible for any damage to or loss of any programs, data or other information stored on any media or any part of any product serviced. Freecom is not liable for the consequence of business loss in case of system failure. Be sure to exclude all parts not covered by this guarantee prior to returning the product to Freecom. Freecom is not liable for any loss or damage to these items. If during the repair of the product the contents of the hard drive are altered, deleted or in any way modified, Freecom is not liable whatsoever.

Repair parts and replacement products will be provided on an exchange basis and will be either new, equivalent to new or reconditioned. All replaced parts and products become the property of Freecom. The period of guarantee for any product or part repaired or replaced in warranty shall be the balance of the original guarantee. Repairs or replacements on product or parts out of warranty carry **6 (six)** months guarantee.

