

GE  
Security

# User Manual

Picture Perfect v4 Guard Tours





Picture Perfect 4.0 Guard Tours  
**User Manual**



**Copyright** Copyright © 2006, GE Security Inc. All rights reserved.

This document may not be copied or otherwise reproduced, in whole or in part, except as specifically permitted under US and international copyright law, without the prior written consent from GE.

Document number/460203007A (March 2006).

**Disclaimer** THE INFORMATION IN THIS DOCUMENT IS SUBJECT TO CHANGE WITHOUT NOTICE. GE ASSUMES NO RESPONSIBILITY FOR INACCURACIES OR OMISSIONS AND SPECIFICALLY DISCLAIMS ANY LIABILITIES, LOSSES, OR RISKS, PERSONAL OR OTHERWISE, INCURRED AS A CONSEQUENCE, DIRECTLY OR INDIRECTLY, OF THE USE OR APPLICATION OF ANY OF THE CONTENTS OF THIS DOCUMENT. FOR THE LATEST DOCUMENTATION, CONTACT YOUR LOCAL SUPPLIER OR VISIT US ONLINE AT [WWW.GESECURITY.COM](http://WWW.GESECURITY.COM).

This publication may contain examples of screen captures and reports used in daily operations. Examples may include fictitious names of individuals and companies. Any similarity to names and addresses of actual businesses or persons is entirely coincidental.

**Trademarks and patents** GE and the GE monogram are registered trademarks of General Electric. Picture\_Perfect product and logo are trademarks of GE Security.

Other trade names used in this document may be trademarks or registered trademarks of the manufacturers or vendors of the respective products.

**Intended use** Use this product only for the purpose it was designed for; refer to the data sheet and user documentation. For the latest product information, contact your local supplier or visit us online at [www.gesecurity.com](http://www.gesecurity.com).

# Contents

	<b>Figures</b> .....	<b>v</b>
	<b>Preface</b> .....	<b>vii</b>
	Conventions used in this document .....	vii
	Safety terms and symbols .....	vii
<b>Chapter 1.</b>	<b>Installation</b> .....	<b>1</b>
	<b>Introduction</b> .....	<b>2</b>
	<b>Installation overview</b> .....	<b>2</b>
	<b>Installing Guard Tours</b> .....	<b>3</b>
	Enterprise Installation .....	7
<b>Chapter 2.</b>	<b>Tour setup and configuration</b> .....	<b>9</b>
	<b>Configuring Picture Perfect</b> .....	<b>10</b>
	<b>Badge Setup</b> .....	<b>12</b>
	<b>Parameters Setup</b> .....	<b>13</b>
	<b>Input Point Setup</b> .....	<b>14</b>
	<b>Operators Setup for Guard Tour Notice</b> .....	<b>15</b>
	<b>Alarms Setup</b> .....	<b>16</b>
	<b>Tour Definition Setup</b> .....	<b>17</b>
	<b>Point Definition Setup</b> .....	<b>19</b>
	<b>Exception Codes Setup</b> .....	<b>21</b>
<b>Chapter 3.</b>	<b>Guard Tours operations</b> .....	<b>23</b>
	<b>Tour Functions</b> .....	<b>24</b>
	Start Tour .....	24
	Stop Tour .....	25
	Suspend Tour .....	26
	Resume Tour .....	27
	<b>Monitoring Tour Progress</b> .....	<b>28</b>
	Tour Monitor .....	28
	Alarm Monitor .....	30
	<b>Guard Tours Reports</b> .....	<b>31</b>
	Picture Perfect SQL Reports .....	31
	Tour History Reports .....	31
	Running a Tour Report .....	32
<b>Chapter 4.</b>	<b>Administrative functions</b> .....	<b>33</b>
	<b>Guard Tours Tables Backup</b> .....	<b>34</b>
	<b>Guard Tours Schedule Backup</b> .....	<b>37</b>
	<b>Guard Tours History Archive</b> .....	<b>38</b>

<b>Chapter 5. Troubleshooting and support .....</b>	<b>39</b>
<b>Contacting technical support.....</b>	<b>40</b>
Online publication library .....	40

# Figures

Figure 1.	Facility Permissions Profile form .....	10
Figure 2.	Permissions form.....	11
Figure 3.	Tours User Interface.....	11
Figure 4.	Personnel Form: Badge Manager .....	12
Figure 5.	Parameters Form .....	13
Figure 6.	Inputs form.....	14
Figure 7.	Operators form.....	15
Figure 8.	Alarms form .....	16
Figure 9.	Tour Definition form .....	17
Figure 10.	Point Definition Form.....	19
Figure 11.	Exception Codes form .....	21
Figure 12.	Start Tour form .....	24
Figure 13.	Start Tour message .....	24
Figure 14.	Multiple Tours message .....	25
Figure 15.	Sample Error message.....	25
Figure 16.	Tour Functions form: Stop.....	25
Figure 17.	Stop Tour message.....	26
Figure 18.	Tour Functions Form: Suspend .....	26
Figure 19.	Suspended Tour message.....	27
Figure 20.	Resume Tour Functions form .....	27
Figure 21.	Resumed Tour message .....	28
Figure 22.	Tour Monitor .....	28
Figure 23.	Tour Monitor Function messages.....	29
Figure 24.	Tour Monitor - Tour Point Hit messages.....	30
Figure 25.	Alarm Monitor - Sample Alarm Alerts .....	30
Figure 26.	SQL Tour Point Report .....	31
Figure 27.	Tour Query - History form .....	32
Figure 28.	Guard Tours Backup form.....	34
Figure 29.	Insert Diskette or Tape.....	35
Figure 30.	Select Disk File .....	35
Figure 31.	Successful Backup .....	36
Figure 32.	Guard Tours Backup Events form.....	37
Figure 33.	Guard Tours Archive form.....	38





## Preface

This manual describes the optional Picture Perfect Guard Tours package, which requires that the `base` Picture Perfect system be previously installed and operational.

Read these instructions and all ancillary documentation entirely before installing or operating this product. The most current versions of this and related documentation may be found on our website. Refer to [Online publication library](#) on page 40 for instructions on accessing our online publication library.

**Note:** A qualified service person, complying with all applicable codes, should perform all required hardware installation.

## Conventions used in this document

The following conventions are used in this document:

<b>Bold</b>	Menu items and buttons.
<i>Italic</i>	Emphasis of an instruction or point; special terms.
	File names, path names, windows, panes, tabs, fields, variables, and other GUI elements.
	Titles of books and various documents.
<i>Blue italic</i>	(Electronic version.) Hyperlinks to cross-references, related topics, and URL addresses.
Monospace	Text that displays on the computer screen.
	Programming or coding sequences.

## Safety terms and symbols

These terms may appear in this manual:



**CAUTION:** *Cautions* identify conditions or practices that may result in damage to the equipment or other property.



**WARNING:** *Warnings* identify conditions or practices that could result in equipment damage or serious personal injury.



# Chapter 1 Installation

This chapter covers the background information needed to successfully install your Picture Perfect Guard Tours package.

In this chapter:

- Introduction*..... 2
- Installation overview*..... 2
- Installing Guard Tours* ..... 3

## Introduction

A guard tour is an inspection of your facility made by a security officer at specified intervals. The officer stops at pre-determined tour points along the way, where he swipes a tour badge in a reader or turns a key in a key station; so the system can track his progress. Each time the officer reads a badge or turns his key in the station, a tour point is “hit.”

A facility uses Guard Tours to monitor the progress of a security officer as they tour the facility premises, and to obtain hardcopy reports that show a tour history.

The Guard Tours package supports random and sequential tours. Readers, as well as Digital Inputs (DIs), can be used for tour points. **It is recommended**, however, that the last point should be defined as a reader on a tour where both readers and DI inputs are used.

A tour can only be started by a system operator using the Tour Functions user interface (UI). A tour can end automatically when the security officer hits all the points assigned to the tour, or at the expiration of the time assigned for the duration of the tour. A tour can also be ended using the user interface.

The system alerts the system operator when: (1) an officer changes his pre-determined tour route, (2) he arrives late at a tour point, or (3) he arrives early at a tour point. An alarm message can be generated if any one of the tour alert conditions occurs. Each time a tour alert message is displayed, it identifies the tour point where the alert condition occurred.

## Installation overview

Guard Tours can be installed in a Standalone, Redundant or Enterprise Picture Perfect environment.

On a Standalone system, the Guard Tours software can be installed at the same time the Picture Perfect system is being installed, or any time later. To install Guard Tours at the same time that the base Picture Perfect system is being installed, follow the installation instructions in the *Picture Perfect 4.0 Installation Manual*.

When installed in a Redundant environment, the backup host will track the progress of tours along with the primary host, but will not issue alarms or generate tour history as these functions are performed by the primary host. If a failover should occur during the progress of a tour, the backup host will become the primary host and will continue the tour, performing any required alarm generation or tour history logging functions. The tour package must be installed on both the primary and backup host on a Redundant Picture Perfect system.

When installed in a Picture Perfect Enterprise environment, the software automatically detects that it is being installed on a Picture Perfect subhost and will then install the necessary files on the Picture Perfect Enterprise host. After installation is complete, Guard Tours can be installed on other subhosts if desired. You do not need to install Guard Tours on the Enterprise host. The tour history generated from the subhosts is swept to the Enterprise host which, as a result, contains all of the tour history transactions from all of the subhosts. Each subhost runs Guard Tours individually, but the tour history is kept globally on the Enterprise host from which this information can be archived and history reports can be run.

## Installing Guard Tours

To install Picture Perfect Guard Tours after the base system has been installed, do the following:

1. Log in to the system as `root`.
2. From a command prompt, open a terminal window.
3. Type the following to shut down Picture Perfect:

```
. /cas/bin/profile Enter
rc.pperf -k Enter
```

4. Insert the Picture Perfect CD into the CD-ROM drive.
5. The CD mounts automatically.

[Linux](#)

Mount the CD by typing:

```
mntCD Enter
```

If this command is not found, type:

```
mount -v cdrfs -o ro /dev/cd0 /mnt Enter
```

6. To display a list of installation options, type:

[Linux](#)

```
/media/cdrom/INSTALL -o Enter
```

[AIX](#)

```
/mnt/INSTALL -o Enter
```

Messages similar to the following will display.

The following BASE\_OPTIONS product(s) are available:

Prod #	Name and Descriptions
0	base Picture Perfect Base package
1	EIF Picture Perfect External Interface package
2	graph Graphics Monitoring and Control package
3	image Picture Perfect Imaging package
4	impexp Picture Perfect Import/Export package
5	netlan Picture Perfect Network System - Host package
6	pprs Picture Perfect Redundant System package
7	subhost Picture Perfect Network System - Subhost package
8	tours Picture Perfect Guard Tours package

Enter product number(s), separated by ',' to select, 'q' to quit:


7. To select the Picture Perfect Guard Tours package, select the appropriate number for the tours product and press **Enter**.

Your package selection will now be displayed, and you will be asked to confirm:

You have selected the following product(s):


```
8      tours      Picture Perfect Guard Tours package
```

Is this correct (y/n)? [y]

8. To make a different selection, type `n`, and you will be returned to [step 7](#) of this section, where you will be prompted again for your selection. To continue the installation, type `y`, or press  to accept the default (`y`).


The installation will begin, and messages similar to the following will appear on the screen:

```
Installing tours...
Picture Perfect Multi-package Installation - 3.0 02/10/05
Copyright (C) 1991 thru 2005 GE Security
Installing from image in /mnt/cdrom/pp ...
798 blocks
Do you want to install the Picture Perfect TOURS Package (y/n)? [y]
```

9. Type `y` and press  to confirm that you want to install the Picture Perfect Guard Tours package.

You will see messages similar to the following:

```
Checking if need to save nls or help files...
Picture Perfect NLS Text Save - 3.0 1/16/05
Copyright (C) 1994-2005 GE Security
Tue Jan 21 11:53:15 EST 2005
This package has no nls or help files to save...
-----
                Picture Perfect TOURS Installation - Version 3.0 01/12/05
                Copyright (C) 1989 thru 2005 GE Security
-----
Starting the Informix database.. Done
Extracting files from media...
108 blocks
The files have been read from the media.
The Guard Tours System Installation Procedure.
The installation performs the following steps:
    1. Ensures that the Picture Perfect base system is installed.
    2. Determine if there is adequate disk space.
    3. Creates the necessary database space.
    4. Loads the Guard Tours Software.
    5. Creates the necessary database tables.
When this script asks you questions, a default answer is shown in brackets next to
the question. To use the default answer, press <Enter> in response to the question.
Otherwise, type one of the other suggested responses.
([n] means 'no'; and [y] means 'yes'.)
Continue the installation (y/n)? [y]
```

10. Type `y` and/or press  to continue or `n` to abort the installation.

The following messages will be displayed as part of the installation process:

```
Verifying that Picture Perfect base system is installed... OK.
Checking for free space in '/cas' filesystem.
Reading Guard Tours files from media.
This may take several minutes...
Extracting files from media...
199 blocks
The files have been read from the media.
Calculating free space on /cas...
The following parameters can be adjusted as needed:
```

```
Number of tours expected
Number of tour history transactions before archiving
The TOUR DEFINITION table can grow from 100 to 110 records.
Is this acceptable (y/n)? [y]
```

11. If the Tour Definition table sizing is acceptable, skip to [step 14](#).

If you wish to increase or decrease the initial or maximum size of the tour definition table, type `n` and press return. You will be prompted to:


```
Enter the initial number of records:
```

12. Type the number of tour definition records you expect to input immediately after installing Picture Perfect. Do not include commas in this number. You will be prompted to:

```
Enter the maximum number of records:
```

13. Type the maximum number of tour definition records you expect to have on the system after Picture Perfect is in full operation. (You should consider the growth potential of the system and your company's future needs when calculating this number, and plan accordingly.)

```
The TOUR DEFINITION table can grow from 100 to 200 records.
Is this acceptable? (y/n)
```


14. Confirm the Tour Definition sizing by typing `y` and pressing .

The following message will display.

```
The TOUR HISTORY table is fixed at 1000 records.
Is this acceptable (y/n)? [y]
```

The Tour History table size should be based on the expected number of tour transactions per day, multiplied by the number of days of online badge transactions you require.

15. If the Tour History table sizing is acceptable, skip to [step 17](#).

If you wish to increase or decrease the initial or maximum size of the tour definition table, type `n` and press .

You will be prompted to:

```
Enter the initial number of records:
```

16. Type the initial size of the Tour History table. Do *not* include commas in this number.

```
The TOUR HISTORY table is fixed at 1000 records.
```

Is this acceptable? (y/n)

17. Confirm the Tour History sizing by typing `y` and pressing `Enter`.

If your system has sufficient available disk space to hold the database you described, it will display the following chart and create the database. If it does *not* have enough free space, you will be prompted to go back and re-adjust the numbers you have entered to reduce the total size of the database.

```
Database Partition sizes:
-----
Guard Tour database .....: 1 Megabytes
Free disk space .....: 384 Megabytes
Creating tourdbs with size 1 Mbytes.
Creating Guard Tours database tables.
tour_definition           table created
tour_exception            table created
tour_point                table created
tour_history              table created
tour_histape              table created
Loading table descriptions.
Loaded 148 tables from dictionary.
TABLE SUMMARY FOR 'tour' PACKAGE:
-----
Total tables created =      5
Total table errors=        0
Total table already exists= 0
-----
Total transactions=        5
Creating Tour History tmp table.
Updating System Config with Tour History size.
Creating PPSQL Tour report tables.
Adding PPSQL anhd History Tour reports.
Adding Timer Manager to the database.
Adding Tour Manager to the database.
Adding INACTIVE alarm to the database.
Adding POINT DISABLED alarm to the database.
Adding NOT A TOUR POINT alarm to the database.
Updating database statistics, please wait...
statistics updated
```

At this point, if you are installing on a Picture Perfect Enterprise subhost, additional messages will be displayed. Skip to [Enterprise Installation](#) on page 7.

Otherwise, messages similar to the following will display as the system files are updated.

```
The Guard Tours package has been successfully installed.
Checking if need to update nls files...
Picture Perfect NLS Check - 2.0 01/16/03
Copyright (C) 1997-2005 GE Security
Tue Jan 21 11:51:12 EST 2005
Updating nls files...
Picture Perfect NLS Text Update - 2.0 01/16/03
Copyright (C) 1994-2005 GE Security
Tue Jan 21 11:51:12 EST 2005
```



The INSTALlation has completed.  
The system needs to be rebooted for the changes to take effect.  
Reboot the system (y/n)? [y]

Picture Perfect Guard Tours package is installed. Reboot your system and continue to *Chapter 2 Tour setup and configuration*.

## Enterprise Installation

In a Picture Perfect Enterprise environment Guard Tours is installed on the subhosts, not on the Enterprise host. The software automatically detects that it is being installed on a Picture Perfect subhost and will then install the necessary files on the Picture Perfect Enterprise host resulting in the following additional messages.

```
<<<Picture Perfect Subhost detected>>>
Preparing to install Guard tours package on network
host fr2. The network host installation requires that I-Star is running on both the
network host fr2 and subhost olive, and that the
/root/.rhosts and /etc/hosts files on the Network host contains the following
entries respectively:
/root/.rhosts file contains the entry 'olive root'
/etc/hosts file contains the entry '192.9.200.70 olive'
Checking for I-Star on fr2 and olive... OK.
Checking for remote shell access on network host fr2... OK.

Verifying that Picture Perfect base system is installed... OK.
Checking for free space in '/cas' filesystem.
```

### AIX

If the installation is in an AIX Enterprise environment, messages similar to the following will also appear:

```
The following parameters can be adjusted as needed:
    Number of tours expected
    Number of tour history transactions before archiving
The TOUR DEFINITION table can grow from 100 to 200 records.
Is this acceptable? (y/n) y
The TOUR HISTORY table is fixed at 1000 records.
Is this acceptable? (y/n) y

Checking for existing chunks in /dev/rdisk/c0b0t6d0se.
Database Partition sizes on network host fr2
-----
Database Partition Size      65 Megabytes
Database Partition Used      0 Megabytes
Database Partition Free      65 Megabytes
Creating tourdb's with size 20480 Kilobytes.
Updating Database dictionary for Tour History on network host fr2.
Creating Tour History tables on network host fr2...
tour_history                  table created
tour_histape                   table created
Loading table descriptions.
Loaded 103 tables from dictionary.
TABLE SUMMARY FOR 'tour' PACKAGE:
-----
Total tables created          = 2
```

```
Total table errors          = 0
Total table already exists = 0
-----
Total transactions          = 2
Updating System Config with Tour History size on network host fr2...
Adding Tour History Refresher to the database on network host fr2...
Adding History Tour reports on network host fr2...
Updating database statistics on network host fr2, please wait...
statistics updated
The Guard Tours package has been successfully installed.
```

If you are installing on additional subhosts, the host files will be detected, and a message similar to the following will display:

```
The Guard Tours Package is already installed on the network host fr2. Adding Tour
History Refresher to the database on network host fr2...
The Guard Tours installation has completed successfully.
```

# Chapter 2 Tour setup and configuration

In order to start a tour, it must first be defined in the system. All of the tour points must be identified and assigned to a specific tour. This section deals with tour setup and configuration.

In this chapter:

- Configuring Picture Perfect* ..... 10
- Badge Setup* ..... 12
- Parameters Setup* ..... 13
- Input Point Setup* ..... 14
- Operators Setup for Guard Tour Notice* ..... 15
- Alarms Setup* ..... 16
- Tour Definition Setup* ..... 17
- Point Definition Setup* ..... 19
- Exception Codes Setup* ..... 21


## Configuring Picture Perfect

Prior to running the Guard Tours package, the page and control level permissions of the Permissions record must be updated to include Guard Tours.

To update permissions:

1. Log in to Picture Perfect as `install`.
2. From the primary navigation Control menu, select Operators, then click the Facility Permissions Profile tab.
3. Click Find to locate the appropriate Facility Permissions Profile record, for example: All Facility Permissions.

Figure 1. Facility Permissions Profile form

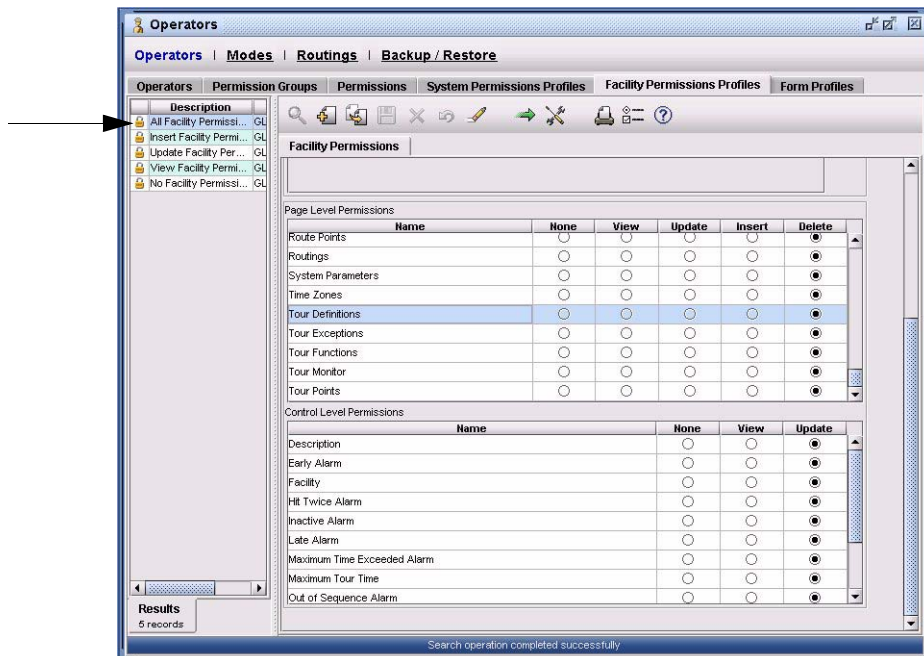


4. Under Page Level Permissions, set the following permissions to Delete:
  - Tour Definitions
  - Tour Exceptions
  - Tour Functions
  - Tour Monitor
  - Tour Points
5. For each of these pages (Tour Definitions, Tour Exceptions, Tour Functions, Tour Monitor, and Tour Points), set the Control Level Permissions to Update.

**Note:** You may set up different operator access levels on these screens, since they each perform a different function. The first three screens (Tour Definition, Exception Codes, and Point Definition) are used to initially define and set up a tour. Consequently, a System Administrator should be permitted to perform these operations. The fourth screen (Tour Functions) allows the operator to Start, Stop, Suspend, or Resume a tour. This option is only used during normal tour operations.


6. Click **Save**.
7. Click the **Permissions** tab.

Figure 2. Permissions form

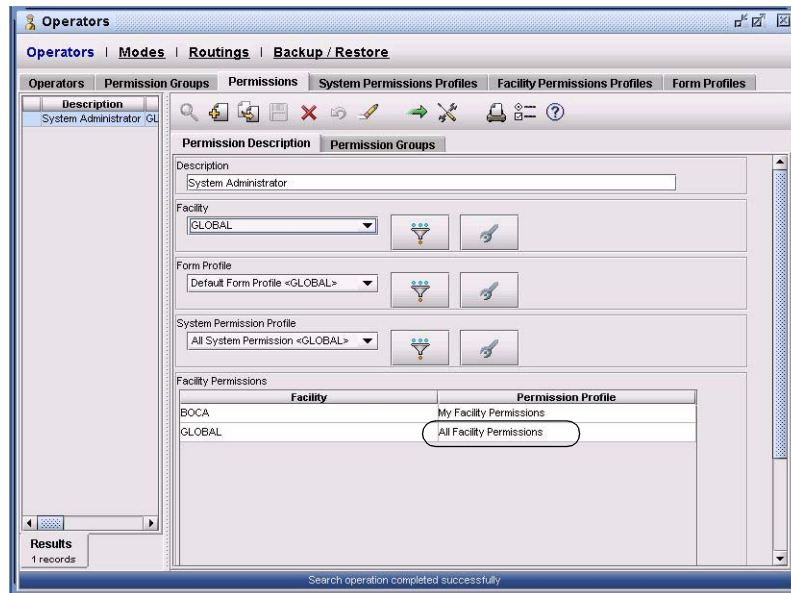

8. Click **Find** to locate the appropriate Permissions record, for example: System Administrator.
9. Assign the Facility Permission Profile defined in [step 3](#) through [step 6](#) to this Permission for each facility required.
10. Click **Save**.
11. To begin using Guard Tours, select **Tours** from the primary navigation **Packages** menu.

Figure 3. Tours User Interface

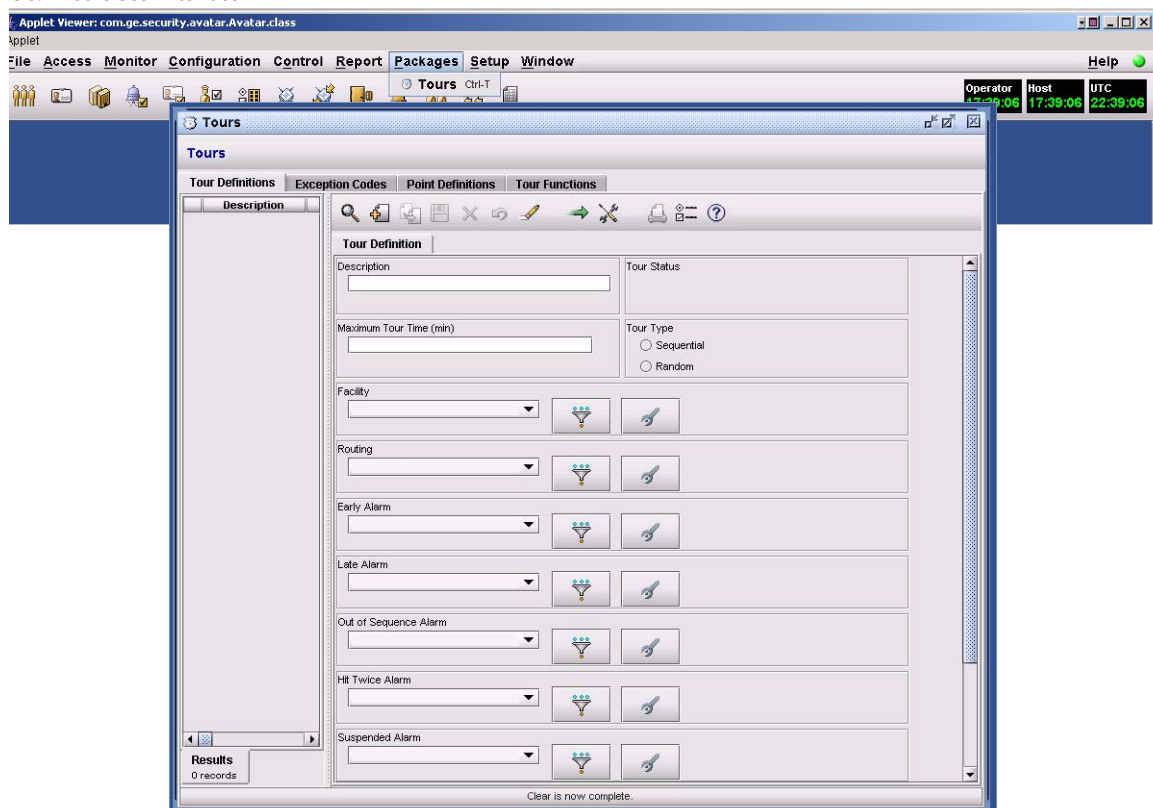

## Badge Setup


A guard tour can only be started by a tour-type badge that has been defined on the Badges screen as tour-type. Tour-type badges are displayed in the selection list for the Start option in the Tour Functions screen. If your facility uses readers as tour points, the badge that starts a tour must be used to generate a point hit at the reader. It should be noted that a tour-type badge does not unlock a door when it is presented to a reader. It simply generates a guard tour-type transaction, which is processed by the system. A tour-type badge can only be used in a normal, non-keypad, single-badge reader, and the reader does not require additional setup for use with a tour-type badge.

To set up a tour-type badge:

1. From the primary navigation **Access** menu, select **People**, then the **Personnel** tab.
2. Click the **Badge Manager** tab and enter the necessary badge information for a guard tour-type badge. It is not necessary to assign categories, since a tour-type badge cannot unlock a door.
3. On the **Options** tab, select the **Tour Badge** option.
4. Save the Personnel record.

Repeat these steps for all the tour-type badges in your system. See [Figure 4](#) for an example of a Personnel screen.

Figure 4. Personnel Form: Badge Manager

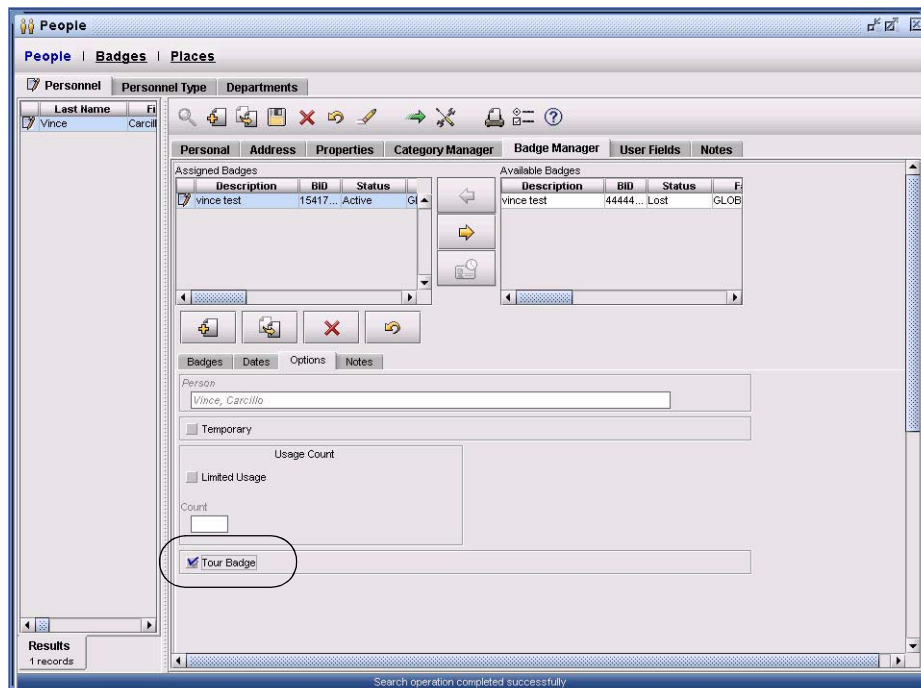


## Parameters Setup

Tour History Size is determined at software installation. This size indicates the number of tour history records that will be inserted into the Tour History table before an archive is required.

To view this setting, from the primary navigation **Setup** menu, select **System Parameters**, then click the **History** tab.

**Note:** This number must be consistent with the size selected at the time of installation. Attempting to change the size at this point will involve changing the physical size of your database. Contact a GE Security customer support representative prior to changing this value.

Figure 5. Parameters Form

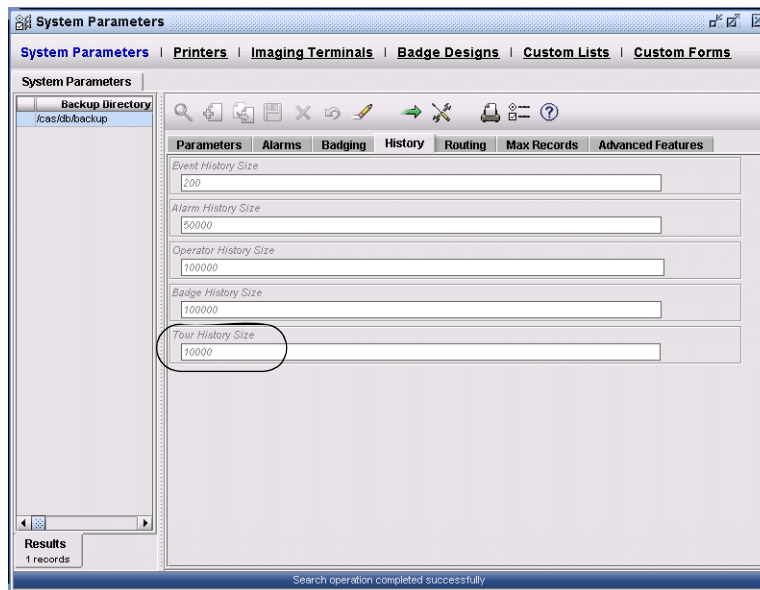

The screenshot displays the 'System Parameters' configuration window. The 'History' tab is selected, showing several history size fields: Event History Size (200), Alarm History Size (50000), Operator History Size (100000), Badge History Size (100000), and Tour History Size (10000). The 'Tour History Size' field is circled in red. The interface includes a navigation menu at the top with options like 'System Parameters', 'Printers', 'Imaging Terminals', 'Badge Designs', 'Custom Lists', and 'Custom Forms'. A 'Backup Directory' field is visible on the left. At the bottom, a 'Results' section shows '1 records' and a status message 'Search operation completed successfully'.

## Input Point Setup

If your facility uses digital inputs as tour points, they must be specified as tour point inputs prior to being assigned to a tour.

1. From the primary navigation **Configuration** menu, select **Inputs/Outputs**, then the **Inputs** tab. Define the inputs to be used as tour points by selecting the appropriate **Tour** radio button. Do not assign an input group to the input unless you want to trigger an output group when this point is hit.
2. Set the routing to **None** since all tour transactions use the routing assigned on the Tour Definition form.

**Note:** Tour Point inputs cannot be assigned as door inputs or exit buttons; they are only used for Guard Tour points.

*Figure 6* shows an example of an Inputs screen.

Figure 6. Inputs form

The screenshot displays the 'Inputs / Outputs' configuration window. The 'Inputs' tab is active, showing a list of input groups on the left and a detailed configuration form on the right. The configuration form includes fields for Description, Facility, Input Group, Input type (Normal, Tour, Elevator), Input Enabled, Normally Closed, On to Off Delay Time, and Off to On Delay Time. The 'Board Address' section includes Board, Address, and Micro fields. A status bar at the bottom indicates 'Save operation completed successfully'.

Input Group	Description	Facility	Input Group	Input	Input Enabled	Normally Closed	On to Off Delay Time	Off to On Delay Time	Board	Address	Micro
9-1-16 Tour DI	9-1-16 Tour DI	GLOBAL	BADGE HISTORY OVERFLOW <G...>	<input checked="" type="radio"/> Tour	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	0	0	1	16	MICRO 9 (SCHMINN BUILDING) <...>



## Operators Setup for Guard Tour Notice

A message can be generated to notify an operator when a suspended tour is automatically resumed. In order for an operator to receive notification that a tour is resumed, the operator record must be configured to receive such a notice.

To configure the operator record to receive a Guard Tour notification:

1. Select **Control, Operators** to bring up the Operators form as shown in *Figure 7*
2. Click **Receive System Notifications**.

Figure 7. Operators form

The screenshot shows the 'Operators' form in a software application. The form is divided into two main sections: a list of operators on the left and a detailed configuration form for the selected operator on the right.

**Operators List (Left):**

User Name	Employee Id
Systems Admin...	0000
michaelf	4444
franch1	8888
Vince	0004
View Only Oper...	12211

**Operator Configuration Form (Right):**

**Operators**

User Name: Systems Administrator

Employee Id: 0000

Login Id: install

Locale: English in the United States

Time Zone: HOST <GLOBAL>

Facility: GLOBAL

Permission: System Administrator <GLOBAL>

Receive Alarm Alert

Receive Reset Alarm Alert

Receive System Notifications

Idle Session Time

Results: 5 records

Search operation completed successfully

## Alarms Setup

A tour point can generate an alarm when certain alert conditions occur. A separate alarm Description must be assigned and defined on the Alarms form (*Figure 8*) for each tour alert to be reported. These alarm descriptions are included in the various alarm list boxes on the Tour Definition form.

Two specific alarm descriptions are added to the Picture Perfect alarm database at installation time: Point On Inactive Tour and Disabled Point Alarm. Alarm instructions cannot be assigned to these alarms; therefore, if responses are required on the Picture Perfect Alarm Monitor for these alarms, they must be entered by the operator.

Figure 8. Alarms form

Description	Pri
POINT ON INACTIVE TOUR	
NOT A TOUR POINT	
TOUR SUSPENDED	

**Alarm Description** Instructions

Description: TOUR SUSPENDED

Facility: GLOBAL

Priority: 1

Route Definition:

Alarm Routing: MONITOR AND HISTORY <GLOB...

Online:  No  Yes

Inhibit Schedule Changes:  No  Yes

Immediate Reset Input:  No  Yes

Immediate Dial Required:  No  Yes

Reset Outputs:  Auto Reset Outputs  Manual Reset Outputs  Duration Reset Outputs

Color Picker: Change Colors

Color Sample: Sample alarm text (Background: Red, Foreground: White)

Results: 3 records

Save operation completed successfully

## Tour Definition Setup

Each tour must be defined in the system. *Figure 9* shows a sample of a Tour Definition form.

Figure 9. Tour Definition form

The screenshot shows a software window titled "Tours" with a tabbed interface. The "Tour Definitions" tab is selected, displaying a list of tours on the left and a detailed form for the selected "NIGHTLY TOUR". The form includes fields for "Description" (NIGHTLY TOUR), "Maximum Tour Time (min)" (15), "Facility" (GLOBAL), "Routing" (MONITOR AND HISTORY <GLOB...), and "Tour Status" (Inactive). There are also radio buttons for "Tour Type" (Sequential selected, Random unselected) and several alarm type dropdown menus (Early Alarm, Late Alarm, Out of Sequence Alarm, Hit Twice Alarm, Suspended Alarm, Inactive Alarm). A status bar at the bottom indicates "Save operation completed successfully".

Complete the Tour Definition screen with the following information:

- **Description** - a tour description. It is recommended that the tour type (random or sequential) be included in the tour description.
- **Tour Status** - this is a display-only field. It shows the current status of a tour. Statuses are: Inactive (default), Active, Suspended, and Resumed. The form must be re-displayed for it to reflect the current status.
- **Maximum Tour Time** - maximum number of minutes that a tour is allowed to last. When the maximum time is reached, a tour is ended automatically.
- **Tour Type** - either **Sequential** or **Random**. A Sequential tour is a tour where the order of points that are hit must be in a defined sequence. Each point is assigned a sequence number which indicates its position within a tour. A sequential tour ends when all of its points are hit in sequence. A Random tour is a tour where all of its points do not need to be hit in a particular order. Every time this tour is executed, the order of points hit can vary. A Random tour ends automatically when all of its tour points have been hit.
- **Facility** - Click the Facility button to display the facilities picklist. Tour alarms and activity messages are generated using the facility of the Tour Definition. The facility acts as a filter for these messages to

the Tour Monitor and as a result, the operator will only see the messages and alarms for the facilities to which he has access. For more information on Facilities, see the *Picture Perfect 4.0 User Manual*.

- **Routing** - assigned routing for a tour selected from previously-defined Picture Perfect routings. As a tour is executed, progress messages are generated: start of tour, points hit, stop tour, suspend, and resume. The messages can be routed in any combination or to all of the following: the Picture Perfect Tour Monitor, the Tour History log, and/or the printer.
- **Tour Alerts** - alarms that may be generated as a result of certain alert conditions. Each tour must have a separate alarm defined for each one of the conditions that you wish to report. Part of the alarm description should include a tour description, as well as the alert condition. The alarm routings are defined on the Alarms screen for each alarm.

Tour routing is not used for routing tour alerts. Since the alerts are treated as Picture Perfect alarms, they are logged to the Alarm History table, not Tour History. Transactions generated as a result of point hits that trigger the alerts are logged to Tour History. The Alarm Monitor location field contains the tour point description. Times for early and late alarms are assigned to tour points on the Point Definition screen. The tour alert conditions are described as follows:

- **Early Alarm** - generated when a guard reaches a tour point prior to the early time scheduled for this point. For Random tours, the early time assigned to the first point is used for all points.
- **Late Alarm** - generated when a guard reaches a tour point after the late time for that point has expired. For Random tours, a tour description is displayed in the location field on the Alarm Monitor, since it is not possible to determine which point should be hit next. For Random tours, late time assigned to the first point is used for all points.
- **Out of Sequence Alarm** - generated when a point is not hit in a pre-determined sequence. This alert applies only to Sequential tours.
- **Hit Twice Alarm** - generated when a point has been hit a second time.
- **Suspended Alarm** - generated when a point is hit on a Suspended tour.
- **Inactive Alarm** - generated when a point is hit on an inactive tour. This alarm is added to the Picture Perfect alarm database at installation time; therefore, it is not necessary for it to be added by the operator.
- **Maximum Time Exceeded Alarm** - generated when the maximum time assigned to a tour has expired, and a tour has not ended. The Alarm Monitor location field contains the tour description.

## Point Definition Setup

Once a tour is defined, tour points can be assigned. Tour points consist of readers or inputs. Each input used in a tour must first be defined as a tour point. Inputs and readers can be defined on multiple tours. A sample of a Point Definition screen is shown in [Figure 10](#). Certain rules apply when starting subsequent tours that contain duplicate points. These rules will be covered in the Tour Functions section in [Chapter 3 Guard Tours operations](#).

Figure 10. Point Definition Form

The Point Definition screen contains the following fields:

- **Tour** - From the drop-down list, select the tour to which the tour point is to be assigned.
- **Facility** - Click Facility to display the facilities list box. This field reflects the facility to which this record is assigned. Because Tour alarms and activity messages are generated using the facility of the Tour Definition, be sure to assign this record to the same facility as the Tour Definition. The facility acts as a filter for these messages to the Tour Monitor and as a result, the operator will only see the messages and alarms for the facilities to which he has access. For more information on Facilities, see the *Picture Perfect 4.0 User Manual*.
- **Point Status** - this is a display-only field that shows the current status of a point, HIT or NOT HIT (default). When a point is physically HIT, its status changes to HIT. For points that are Digital Inputs (DI), a HIT is registered only when the input state is set. A DI must be reset so that it does not remain in the set (HIT) state. For points which are readers, a tour badge read registers a point hit. The status of tour points is reset to NOT HIT at the start of a tour to which this point is assigned. The form must be re-displayed for it to reflect the current point status.
- **Point State** - each point that is to be counted in a tour must be enabled. A point can be enabled after the tour is active only if the enabled point is not the first point on that tour. Any subsequent point

following the first point can be enabled after the tour has been started. However, enabling the first point while the tour is already active will take effect the next time the tour is run. Points that are disabled prior to starting a tour will not be included in the total point count for that tour. Points can also be disabled after a tour is active. This applies to points that have not yet been hit. If the status of a point is HIT, disabling this point will take effect the next time the tour is run.

- **Point Type: Reader or Input** - Each tour point must be either a Reader or Input. Only tour-type inputs can be selected as tour points.
- **Sequence Number** - a number assigned to a point in a Sequential tour, indicating the order in which a point must be hit in order for it to be counted as a valid hit. If you need to insert a point between two previously defined sequence numbers, the system will ask you to re-sequence the existing points. The new point will be inserted in the correct sequence position, and the rest of the points will be re-sequenced. It is not necessary to assign sequence numbers for points on Random tours.
- **Early Time** - shortest interval of time (in minutes) needed to reach a tour point from the point immediately before it. If the current point is hit before the early time, an early alert can be generated. As stated previously in the Tour Definition section for Random tours, an early time for the first point is used for all subsequent points.
- **Late Time** - longest interval of time (in minutes) needed to reach a tour point. If the current point is not hit before the late time expires, a late alert can be generated. As stated previously in the Tour Definition section for Random tours, a late time used for the first point is used for all subsequent points. A late alert on a Random tour indicates the tour for which a late alert was generated, but not the point description.

## Exception Codes Setup

An operator enters an Exception Code to explain why a tour is being suspended, resumed, or stopped. (See *Tour Functions* on page 24.) Exception Codes explain the guard's actions during a tour run, and the system operator's actions at the terminal, so that a security supervisor can review and analyze the tour history. See *Figure 11* for a sample of a tour Exception Code definition.

Figure 11. Exception Codes form

The screenshot displays a software window titled "Tours" with a tabbed interface. The "Exception Codes" tab is active, showing a form titled "?form.ExceptionCodes?". The form contains two main input fields: "Description" with the text "AREA UNDER CONSTRUCTION" and "Facility" with a dropdown menu set to "GLOBAL". Below the form, a "Results" section indicates "1 records". At the bottom of the window, a status bar reads "Search operation completed successfully".





# Chapter 3    Guard Tours operations

This chapter describes the different functions and activities involved in Guard Tours operations.

In this chapter:


- Tour Functions* ..... 24
- Monitoring Tour Progress.* ..... 28
- Guard Tours Reports.* ..... 31

## Tour Functions

### Start Tour

Guard tours are started by opening the Tour Functions form (*Figure 12*) and clicking Execute. After a tour is started, its status is changed to Active on the Tour Definition screen.

Figure 12. Start Tour form

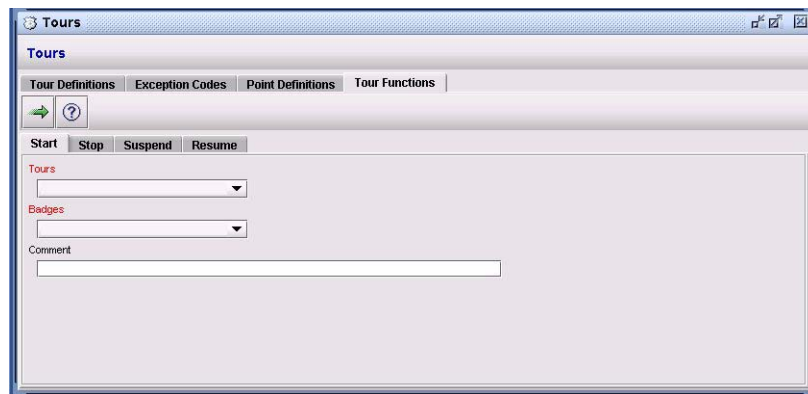

To start a tour, you must provide the following information:


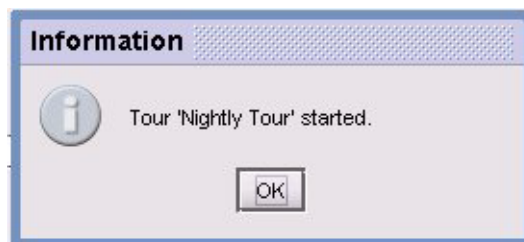
1. Click the **Tours** drop-down list to display all inactive tours. Select the tour you want to start.
2. Click the **Badges** drop-down list to display all tour type badges. Select the badge that will perform the tour.
3. The **Comment** field is an optional field, used to enter further identification for the officer executing the tour.
4. Press **Execute**  to start the selected tour. A notice, as shown in *Figure 13*, is displayed to indicate that a tour has been started. A **Start Tour** message is routed based on the assigned tour routing.

Figure 13. Start Tour message



Multiple tours with the same inputs defined as tour points cannot be active at the same time. A warning message (*Figure 14*) is displayed if a tour that is being started contains an input that is also found on another active tour. A reader, however, is allowed to exist as a tour point on multiple active tours. A tour with all disabled points cannot be started; although a tour will be allowed to start with some disabled points. *Figure 15* shows a sample error message.

Figure 14. Multiple Tours message

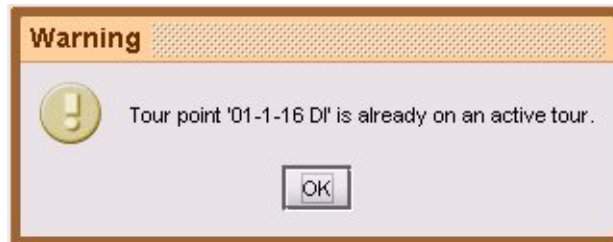



Figure 15. Sample Error message



## Stop Tour

When an operator wants to end a tour manually, use the Stop function on the Tour Functions screen as shown in [Figure 16](#). When a tour is stopped, its status is changed to Inactive on the Tour Definition screen.

Figure 16. Tour Functions form: Stop

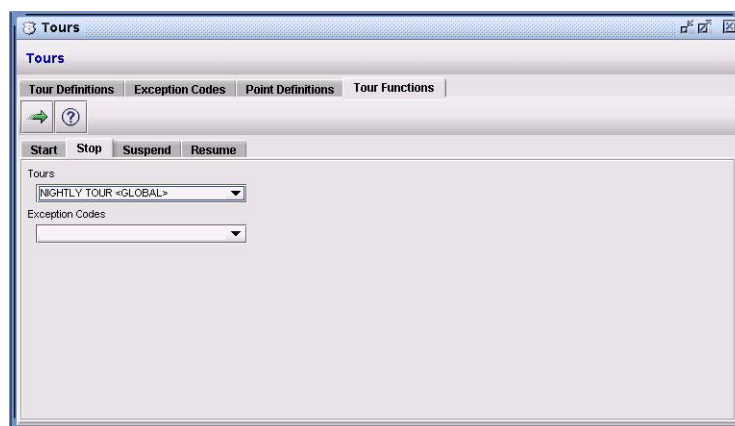

To stop a tour, you must provide the following information:

1. Click the **Tours** drop-down list to display all active or resumed tours. Select the tour you want to terminate.


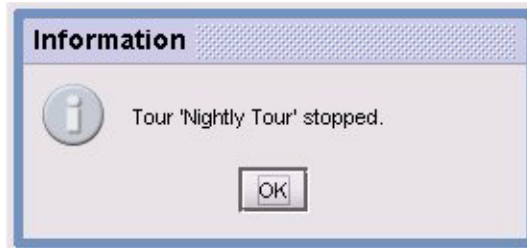
- Optional: If you want to specify a reason for stopping this tour, click the **Exception Codes** drop-down list to display all Exception Code descriptions. Select an Exception Code description that describes why this tour is terminated.
- Click **Execute**  to stop the selected tour. A screen, as shown in [Figure 17](#), indicates that the tour is stopped.


Figure 17. Stop Tour message



## Suspend Tour

Should a tour need to be suspended while in progress, an operator may do so for a specified period of time, or indefinitely. When a tour is suspended for a specified period of time, the tour resumes automatically when the time expires. No operator input is required. On the other hand, if a tour is suspended indefinitely, only an operator can resume the tour. [Figure 18](#) shows a sample screen of a tour that has been suspended for a specified period of time. Any points hit on a suspended tour will generate a suspended alert if it is defined on the Tour Definition for the tour.

Figure 18. Tour Functions Form: Suspend

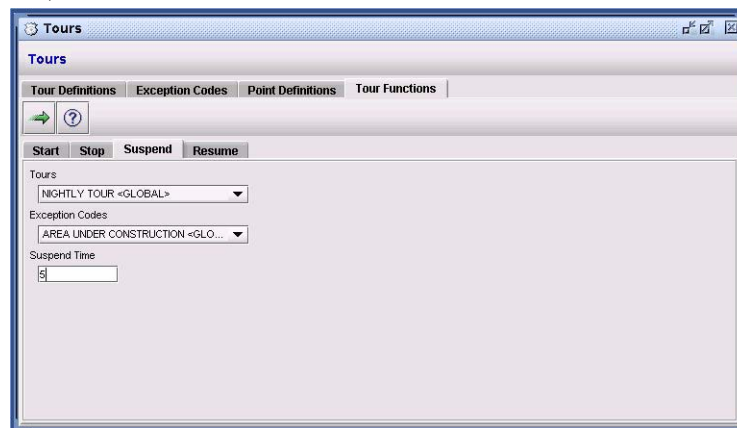

When a tour is suspended, its status is changed to Suspended on the Tour Definition form.

To suspend a tour, provide the following information:

- Click the **Tours** drop-down list to display all active or resumed tours. Select the tour that you want to suspend.
- Optional:** If you want to specify a reason for suspending this tour, select the **Exception Codes** drop-down list to display all Exception Code descriptions. Select an exception code that describes why this tour is to be suspended.


3. In the **Suspend Time** field, enter the number of minutes for which the tour is to be suspended. If this field is left blank, the tour will be suspended indefinitely.
4. Click **Execute**  to suspend the tour. A message, as shown in [Figure 19](#), is displayed to indicate that the selected tour is suspended.


Figure 19. Suspended Tour message



## Resume Tour

A tour that has been suspended indefinitely can be restarted only by using the Resume option on the Tour Functions screen, and only tours with a suspended status can be resumed. When a tour is resumed, its status is changed to Resumed in the Tour Definition screen. [Figure 20](#) shows a sample screen of a tour that has been resumed.


Figure 20. Resume Tour Functions form

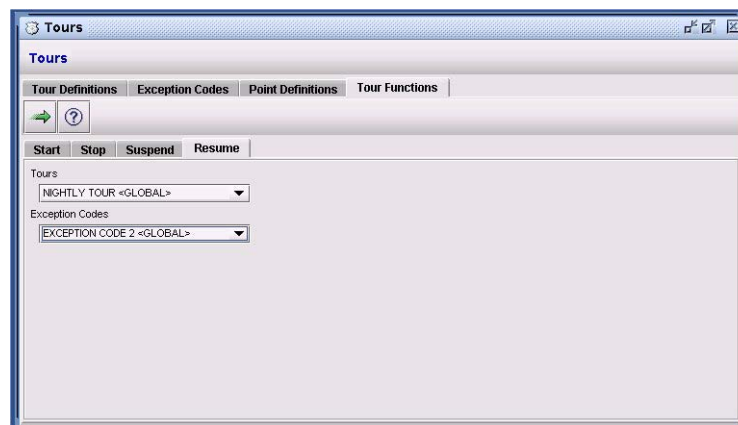

To resume a tour, you must provide the following information:

1. Click the **Tours** drop-down list to display all suspended tours. Select the tour that you want to resume.
2. **Optional:** If you want to specify a reason for resuming this tour, click the **Exception Codes** drop-down list to display all exception code descriptions. Select an Exception Code that describes why this tour is to be resumed.
3. Press **Execute** to resume the tour. A message, as shown in [Figure 21](#), is displayed to indicate that the selected tour has been resumed.

Figure 21. Resumed Tour message

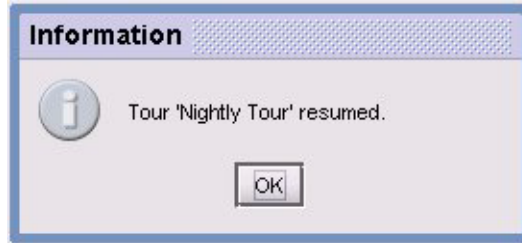

## Monitoring Tour Progress


Tour progress can be monitored by an operator using the Picture Perfect Tour Monitor and Alarm Monitor. Tour transactions such as tour Start, Stop, Suspend, Resume, and tour point hits can be displayed on the Tour Monitor. Tour alerts that are processed as alarms are displayed on the Alarm Monitor.

### Tour Monitor

From the primary navigation **Monitors** menu, select **Tour Monitor**. See [Figure 22](#)

**Note:** Tour activity messages are generated using the facility of the **Tour Definition**. The facility acts as a filter for these messages to the **Tour Monitor** and as a result, the operator will only see the messages and alarms for the facilities to which he has access. For more information on Facilities, see the *Picture Perfect 4.0 User Manual*.

Figure 22. Tour Monitor

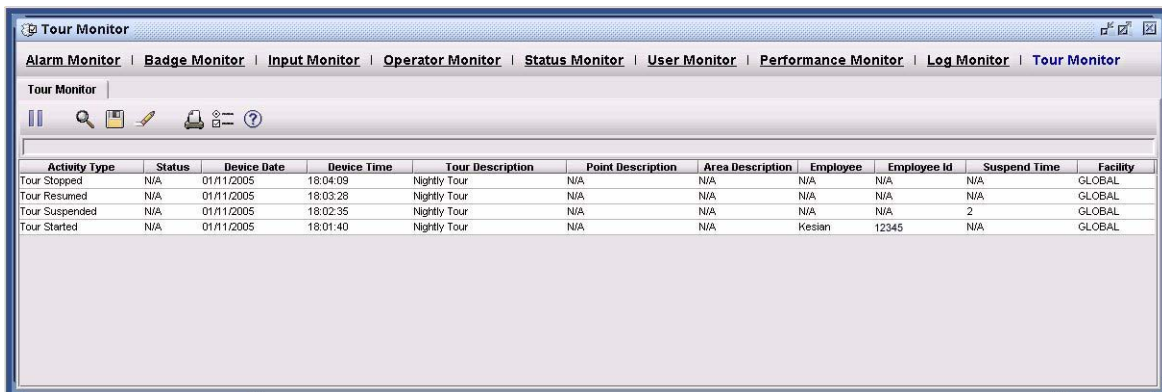

### Tour Functions Messages

Tour function messages indicate if a tour was started, stopped, suspended, or resumed. A Tour Started activity type message indicates which tour is started, date/time stamp, and the last name of the guard assigned to the badge that started the tour. A Tour Suspended activity type message indicates which tour is suspended, the time period of the suspension, or if it was suspended indefinitely. A Tour Resumed activity type message indicates which tour is resumed and whether the tour was resumed automatically or by an operator. A Tour Stopped activity type message also indicates which tour was ended and if a tour was ended automatically or using a user

interface. *Figure 23* shows sample messages for each tour activity type. In this example, the tour was resumed and ended by an operator.

Figure 23. Tour Monitor Function messages

The screenshot shows the 'Tour Monitor' window with a menu bar containing: Alarm Monitor, Badge Monitor, Input Monitor, Operator Monitor, Status Monitor, User Monitor, Performance Monitor, Log Monitor, and Tour Monitor. Below the menu is a toolbar with icons for search, print, and help. The main area contains a table with the following data:

Activity Type	Status	Device Date	Device Time	Tour Description	Point Description	Area Description	Employee	Employee Id	Suspend Time	Facility
Tour Stopped	N/A	01/11/2005	18:04:09	Nightly Tour	N/A	N/A	N/A	N/A	N/A	GLOBAL
Tour Resumed	N/A	01/11/2005	18:03:28	Nightly Tour	N/A	N/A	N/A	N/A	N/A	GLOBAL
Tour Suspended	N/A	01/11/2005	18:02:35	Nightly Tour	N/A	N/A	N/A	N/A	2	GLOBAL
Tour Started	N/A	01/11/2005	18:01:40	Nightly Tour	N/A	N/A	Kesian	12345	N/A	GLOBAL

If the tour had been resumed or stopped automatically, the date/time stamp would have been followed by the word Automatically.

### Tour Points Hit Messages

When a tour point is hit, a message is generated to indicate the status of the hit. If the point hit does not fall into any of the alert conditions, the status for that hit is indicated as OK. If any of the alert conditions apply to the hit, the status is indicated as ERR and an alert is generated. For each point hit, whether it is OK or ERR, the following information is provided:

- Activity TypeStatus - OK or ERR
- Date/Time stamp
- Tour Description
- Point Description

If the point hit is a reader, the following additional information is displayed:

- Area Description
- Employee
- Employee ID
- Suspend Time
- Facility

See *Figure 24* for a sample screen of tour point hit messages that will be displayed on the Tour Monitor during the execution of a tour.

Figure 24. Tour Monitor - Tour Point Hit messages

Activity Type	Status	Device Date	Device Time	Tour Description	Point Description	Area Description	Employee	Employee Id	Suspend Time	Facility
Tour Digital Input	ERROR	01/12/2005	17:34:09	INACTIVE TOUR	01-1-16 DI	N/A	N/A	N/A	N/A	GLOBAL
Tour Automatically Ended	N/A	01/12/2005	17:34:08	Nightly Tour	N/A	N/A	N/A	N/A	N/A	GLOBAL
Tour Digital Input	OK	01/12/2005	17:34:08	Nightly Tour	01-1-16 DI	N/A	N/A	N/A	N/A	GLOBAL
Tour Digital Input	ERROR	01/12/2005	17:33:09	Nightly Tour	01-1-16 DI	N/A	N/A	N/A	N/A	GLOBAL
Tour Badge Input	OK	01/12/2005	17:32:07	Nightly Tour	01-1-00 READER	AREA	PK Kesian	123456	N/A	GLOBAL
Tour Badge Input	ERROR	01/12/2005	17:31:16	Nightly Tour	01-1-00 READER	AREA	PK Kesian	123456	N/A	GLOBAL
Tour Started	N/A	01/12/2005	17:31:01	Nightly Tour	N/A	N/A	Kesian	N/A	N/A	GLOBAL
Tour Badge Input	ERROR	01/12/2005	17:30:26	INACTIVE TOUR	01-1-00 READER	AREA	PK Kesian	123456	N/A	GLOBAL

**Note:** If a point is hit on an inactive tour, the tour description field states "Inactive Tour" in the logging message and a tour alert is generated.

## Alarm Monitor

All guard tour alerts are treated as Picture Perfect alarms that can be routed to the Picture Perfect Alarm Monitor. Each alarm message shows the type of alert generated and its location. In most cases, the Location field shows the tour point where the alert occurred. However, for Random tours, Late Alerts will display a tour description in the Location field. Use the responses and messages configured for the base Picture Perfect system to respond to alarm alerts. See [Figure 25](#) for sample alarm alerts.

**Note:** Tour alarm messages are generated using the facility of the Tour Definition. The facility acts as a filter for these messages to the Alarm Monitor and as a result, the operator will only see the messages and alarms for the facilities to which he has access. For more information on Facilities, see the *Picture Perfect 4.0 User Manual*.

Figure 25. Alarm Monitor - Sample Alarm Alerts

Priority	Alarm Description	Location	Condition	Input State	Device Date	Device Time	Proc State	Facility	Count
1	POINT ON INACTIVE TOUR	01-1-00 READER	Alarm	N/A	01/13/2005	11:40:26	Active	GLOBAL	1
1	TOUR: EARLY ALARM	01-1-00 READER	Alarm	N/A	01/13/2005	11:42:03	Active	GLOBAL	1
1	TOUR: LATE ALARM	01-1-00 READER	Alarm	N/A	01/13/2005	11:43:45	Active	GLOBAL	1
1	TOUR: OUT OF SEQUENCE ALARM		Alarm	N/A	01/13/2005	11:44:50	Active	GLOBAL	1
1	TOUR: MAX TIME EXCEEDED ALARM	NIGHTLY TOUR	Alarm	N/A	01/13/2005	11:46:46	Active	GLOBAL	1




## Guard Tours Reports

The Guard Tours package is installed with sample reports. You can customize your reports to suit your facility's needs.

### Picture Perfect SQL Reports

The PPSQL reports deal with the configuration of the Guard Tours package. The pre-defined reports included with the package are: Tour Definition, Tour Point, and Tour Point Variable. These reports provide information about the tour and points setup. If you prefer, you can customize the PPSQL reports by setting up only the information appropriate for your location to appear in the report. See [Figure 26](#) for a Tour Point SQL report form.

Figure 26. SQL Tour Point Report

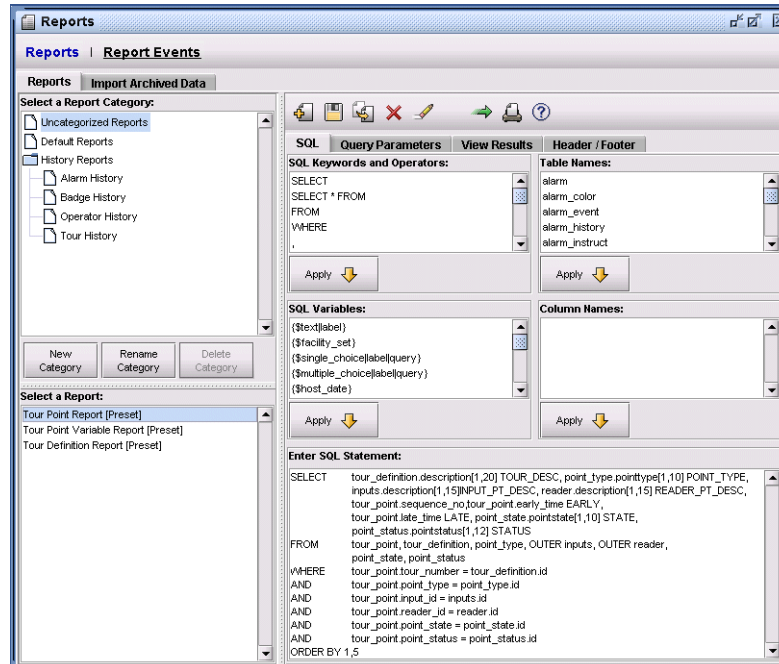

The screenshot shows the 'Reports' application window with the 'Report Events' tab selected. The interface is divided into several sections:

- Select a Report Category:** A tree view showing 'Uncategorized Reports', 'Default Reports', 'History Reports', 'Alarm History', 'Badge History', 'Operator History', and 'Tour History'.
- Select a Report:** A list of preset reports: 'Tour Point Report [Preset]', 'Tour Point Variable Report [Preset]', and 'Tour Definition Report [Preset]'. The 'Tour Point Report [Preset]' is selected.
- SQL Keywords and Operators:** A text area containing the SQL query: 


```
SELECT * FROM  
FROM  
WHERE
```
- Table Names:** A list of table names: 'alarm', 'alarm\_color', 'alarm\_event', 'alarm\_history', and 'alarm\_instruct'.
- SQL Variables:** A list of variables: '(\$text|label)', '(\$facility\_set)', '(\$single\_choice|label|query)', '(\$multiple\_choice|label|query)', and '(\$host\_date)'. The '(\$single\_choice|label|query)' variable is selected.
- Column Names:** An empty text area.
- Enter SQL Statement:** A large text area containing a complex SQL query: 

```
SELECT tour_definition.description[1,20] TOUR_DESC, point_type.pointtype[1,10] POINT_TYPE,  
inputs.description[1,15]INPUT_PT_DESC, reader.description[1,15] READER_PT_DESC,  
tour_point.sequence_no tour_point_early_time EARLY,  
tour_point.late_time LATE, point_status.pointstate[1,10] STATE,  
point_status.pointstatus[1,12] STATUS  
FROM tour_point, tour_definition, point_type, OUTER inputs, OUTER reader,  
point_state, point_status  
WHERE tour_point.tour_number = tour_definition.id  
AND tour_point.point_type = point_type.id  
AND tour_point.input_id = inputs.id  
AND tour_point.reader_id = reader.id  
AND tour_point.point_state = point_state.id  
AND tour_point.point_status = point_status.id  
ORDER BY 1,5
```

### Tour History Reports




The Tour History reports provide a historical account of the progress of a tour. The report has its own query window where you can select the type of information you want from the Tour History table. The rules for selection in the query window follow the existing Picture Perfect History Report guidelines. Two reports are provided with the package: Tour History Report and Tour History Archive Report. See [Figure 27](#) for a Tour History Query form.

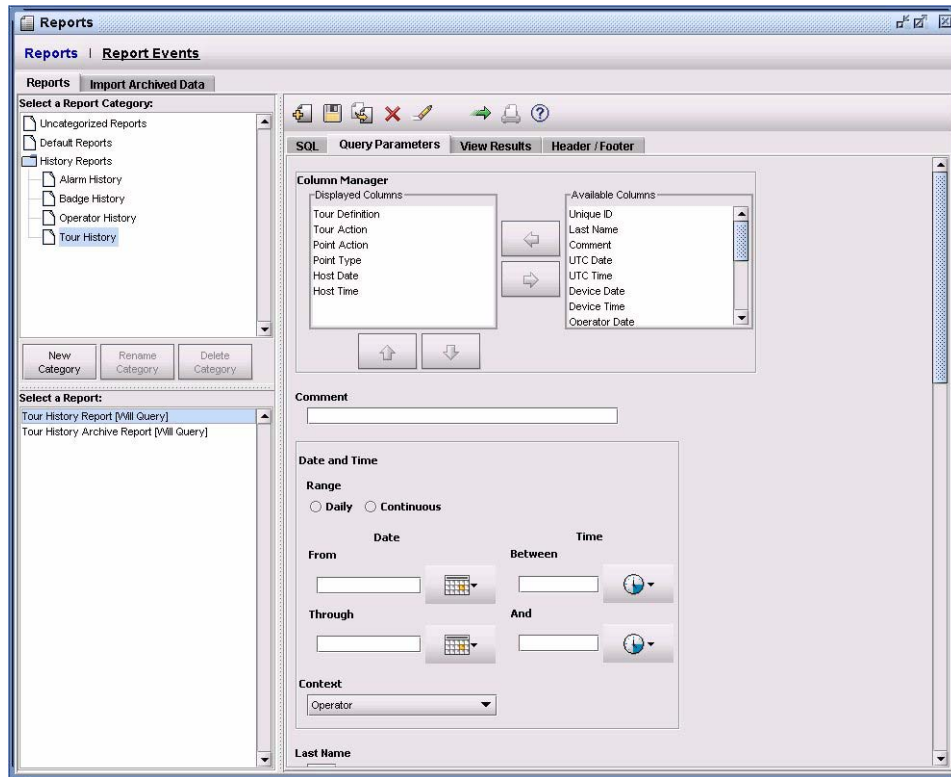Figure 27. Tour Query - History form



## Running a Tour Report

To run a Tour History report:

1. From the **Reports** menu, select the **Reports** menu item, then click the **Reports** tab.
2. From the **Select a Report Category** list pane, select the category for the type of report you are running, for example: **History Reports**, then click **Tour History**. The **Select a Report** list pane displays all existing reports.
3. To open an existing report, select it from the **Select a Report** list pane, then from the toolbar, click **Run**  .
4. If you are running a History report, the **Query Parameters** window displays where you can enter the desired criteria for your report. Enter the criteria and click **Submit**.
5. From the **View Results** tab, click **Print**  to display the Print Preview page. From this window you may **Save to pdf** or **Print** to your local printer.
6. Click **Save**  . This icon will not be available if all required information is not entered or if you do not have the required permissions for the form.

# Chapter 4 Administrative functions

This chapter describes administrative tasks normally performed by the system administrator.

In this chapter:

- Guard Tours Tables Backup* ..... 34
- Guard Tours Schedule Backup* ..... 37
- Guard Tours History Archive* ..... 38


## Guard Tours Tables Backup


Tour Definitions, Exception Code Descriptions, and Point Definitions are stored in database tables. These definition tables must be periodically backed up to disk or tape by selecting Guard Tours from the Control, Backup screen as illustrated in *Figure 28*. Guard Tour history can also be backed up; however, you can only use this backup to restore the history. The Guard Tours History backup cannot be used for running history reports. A history report can run only from history data obtained using the Archive option.

To perform a Guard Tours definition tables backup, follow these steps:

1. From the primary navigation **Control** menu, select **Backup Restore**, then click the **Backup** tab.


Figure 28. Guard Tours Backup form

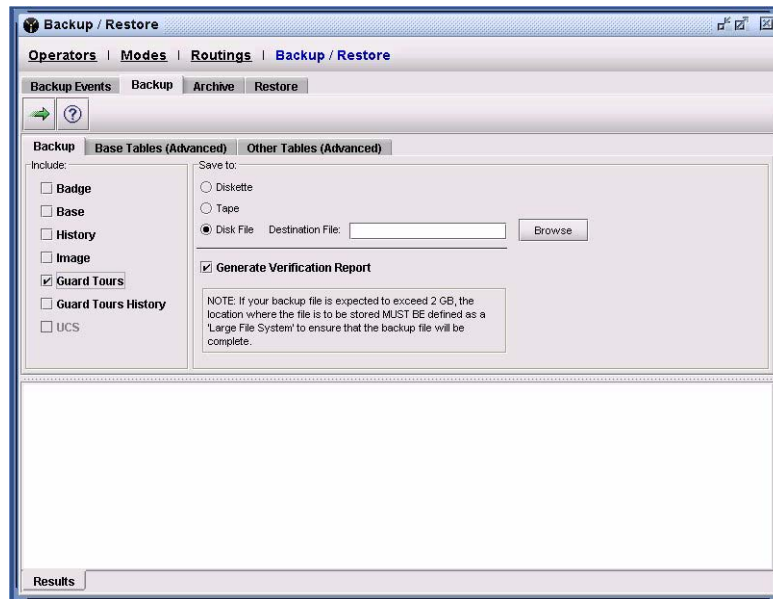

2. Under **Include:**, select **Guard Tours** or if you want to back up history, select **Guard Tours History**.
3. Under **Save to:**, select the media type: **Diskette**, **Tape**, or **Disk File**.
4. Click **Execute**  to start the backup process.


If you chose to backup to Diskette or Tape, a dialog similar to the following will display.

Figure 29. Insert Diskette or Tape

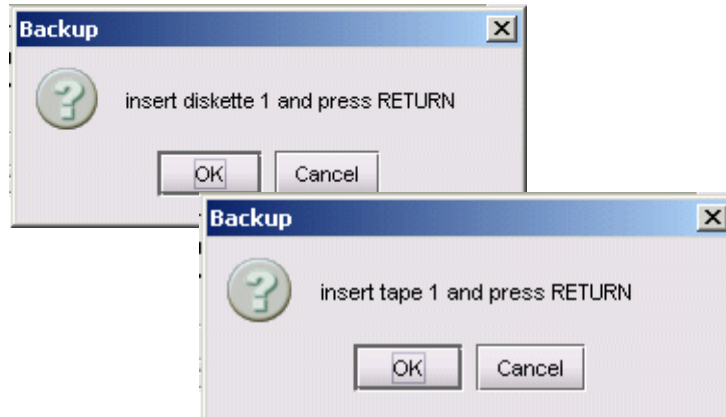

If you chose to back up to Disk File, a dialog similar to the following will display.

Figure 30. Select Disk File

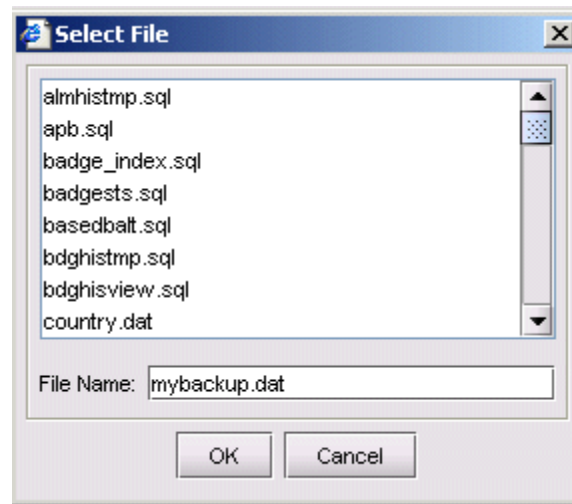


1. If backing up to diskette or tape, make sure that your backup media is write-enabled. If backing up to disk file, make sure there is adequate space in the location where the file is to be stored.

When you have inserted the diskette or tape, or selected the disk file, click **Ok** to start the backup.

If you need to cancel the backup while it is in progress, click **Cancel**.

2. Upon successful completion, click **Ok**. If the backup was not successful, make sure that the media is write-enabled. If it is, make sure that the media is not damaged.

Figure 31. Successful Backup

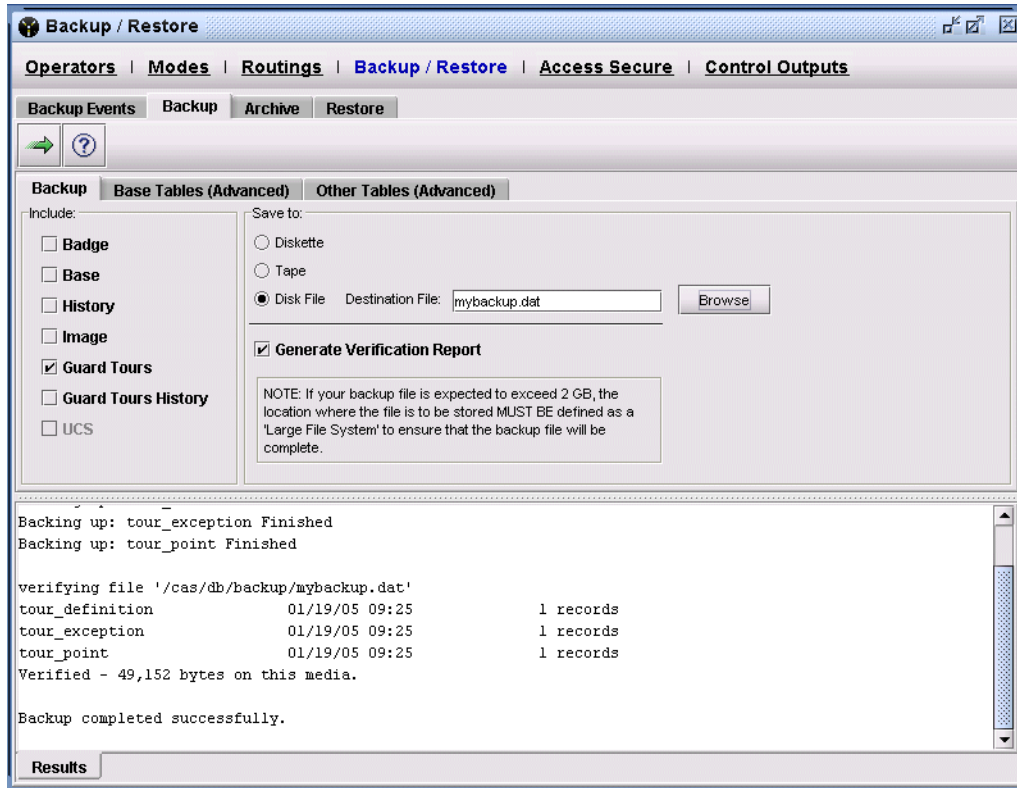

## Guard Tours Schedule Backup

A Guard Tours system backup can be scheduled using the Backup Events form (*Figure 32*).

Figure 32. Guard Tours Backup Events form

The screenshot shows a software interface for scheduling a backup. The window is titled "Backup / Restore" and has a navigation bar with "Operators", "Modes", "Routings", and "Backup / Restore". The "Backup / Restore" menu is open, showing "Backup Events", "Backup", "Archive", and "Restore". The "Backup Events" tab is selected. The form includes a "Description" field, a "Facility" dropdown, a "Backup Type" section with checkboxes for "Badge", "Base", "History", "Image", "Guard Tours" (checked), and "Tour History". The "Time" section has a time input field set to "22:00:00" and a dropdown arrow, with checkboxes for days of the week: "Sunday", "Monday", "Tuesday", "Wednesday", "Thursday", "Friday" (checked), and "Saturday". The "Media Type" section has radio buttons for "Tape", "Diskette", and "Disk File" (selected). A "Filename" text field and a "Browse" button are also present. A "Results" section at the bottom left shows "0 records".


To schedule a backup, follow these steps:

1. From the primary navigation **Control** menu, select **Backup Restore**, then select the **Backup Events** tab.
2. Type a description of the backup event, up to 30 alphanumeric characters long; for example Weekly Tour Database.
3. Click Facility to display the facilities list box. This field reflects the facility to which this record is assigned.
4. Select the day of week and the time for the backup to occur.
5. Select method to be used (Diskette, Tape, or Disk File) for the backup. If you are backing up to a Disk File, enter a file name.
6. Select the **Guard Tours** toggle button, and save the record.

## Guard Tours History Archive


A Guard Tours history must be archived when the current history table's transaction capacity is reached. If selected, an Archive Notice will be displayed advising the operator that it is time to archive.

To perform an archive, follow these steps:

1. From the primary navigation **Control** menu, select **Backup Restore**, then select the **Archive** tab.
2. Select **Tour**.
3. Select method to be used (Diskette, Tape, or Disk File) for the backup. If you are backing up to a Disk File, enter a file name.
4. Press **Execute**  to start the archive process.

See [Figure 33](#) for a sample of the **Guard Tours Archive** form.

Figure 33. Guard Tours Archive form

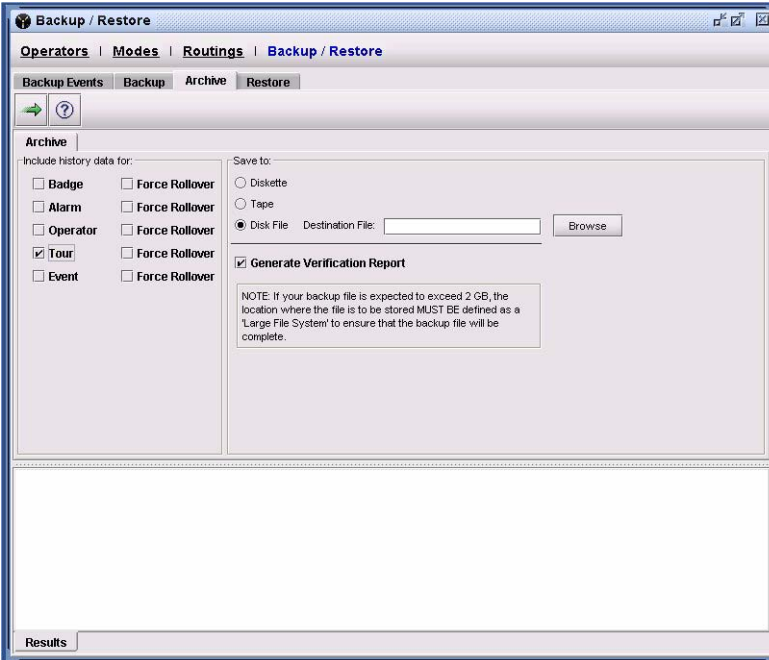

The Force Rollover feature is activated when at least one prior archive has been done. If you choose the Force Rollover feature, current history data will be archived; even though the tour history capacity has not yet been reached.



# Chapter 5 Troubleshooting and support

This section provides information to help you diagnose and solve various problems that may arise while configuring or using your GE product and offers technical support contacts in case you need assistance.

In this chapter:

*Contacting technical support* ..... 40

## Contacting technical support

For assistance installing, operating, maintaining, and troubleshooting this product, refer to this document and any other documentation provided. If you still have questions, you may contact technical support and/or pre-sales.

For pre-sales and technical support assistance, we provide customers with several options (see *Table 1*). Our support phone number is available Monday through Friday, 8 a.m. to 7 p.m. Eastern Time. Protection plans are available for extended coverage.

Table 1. Pre-sales and support contact information

	Pre-sales	Technical support
Phone:	1 800 428 2733	1 888 GE SECURITY (437 3287)
Fax:	561 998 6160	561 998 6224
E-mail:	None	rs-bctsupport@ge.com

**Note:** Be ready at the equipment before calling for technical support.

## Online publication library

Another great resource for assistance with your GE product is our online publication library, available to all of our customers. To access the library, go to our website at the following location:

<http://www.gesecurity.com>

In the **Tools** area at the top, click the *Publication Library* link. After you register and log on, you may search through our online library for the documentation you need.<sup>1</sup>

---

1. Many GE documents are provided as PDFs (portable document format). To read these documents, you will need Adobe Acrobat Reader, which can be downloaded free from Adobe's website at [www.adobe.com](http://www.adobe.com).

# Customer Survey

**Title of this book:** Picture Perfect 4.0 Guard Tours User Manual

## My overall rating of this book:

- |                                    |                                       |
|------------------------------------|---------------------------------------|
| <input type="checkbox"/> Excellent | <input type="checkbox"/> Satisfactory |
| <input type="checkbox"/> Very good | <input type="checkbox"/> Fair         |
| <input type="checkbox"/> Good      | <input type="checkbox"/> Poor         |

## What I liked most about this book:

---

---

---

---

---

---

---

---

## What I would change, add, delete, etc. in future editions of this book:

---

---

---

---

---

---

---

---

## Please return this form to:

Attn: Technical Writing  
GE Security  
791 Park of Commerce Blvd. Suite 100  
Boca Raton, FL 33487

or e-mail your comments to:

bctdocs@ge.com