

## ***Shuttle LX1 User's Manual***

A compact (69mm x 50mm) Xilinx Spartan-6 FMC Carrier with high-speed USB 2.0 interface and 1 Gb DDR2 SDRAM.

The Shuttle LX1 is a compact USB 2.0 FPGA integration module featuring the Xilinx Spartan-6 FPGA, 1 Gb (64 Mx16-bit) DDR2 SDRAM, high-efficiency switching power supplies, and a single FMC-LPC (FPGA mezzanine connector, low pin count) expansion connector. The high-speed USB 2.0 interface provides fast configuration downloads and PC-FPGA communication as well as easy access with our popular FrontPanel application and SDK.

Software, documentation, samples, and related materials are

Copyright © 2011-2015 Opal Kelly Incorporated.

Opal Kelly Incorporated  
Portland, Oregon  
<http://www.opalkelly.com>

All rights reserved. Unauthorized duplication, in whole or part, of this document by any means except for brief excerpts in published reviews is prohibited without the express written permission of Opal Kelly Incorporated.

Opal Kelly, the Opal Kelly Logo, and FrontPanel are trademarks of Opal Kelly Incorporated.

Linux is a registered trademark of Linus Torvalds. Microsoft and Windows are both registered trademarks of Microsoft Corporation. All other trademarks referenced herein are the property of their respective owners and no trademark rights to the same are claimed.

Revision History:

<b>Date</b>	<b>Description</b>
20111017	Initial release.
20120207	Added JTAG connection diagram and references in FMC pinout.
20130430	Removed text that said power could be delivered through expansion connector.
20130523	Added text to clarify power delivery option from the FMC peripheral.
20140331	Replace pin list tables with reference to Pins.
20150303	Added additional information about Pins.

<b>Introducing the Shuttle LX1</b> . . . . .	<b>5</b>
PCB Footprint . . . . .	5
Functional Block Diagram . . . . .	6
FPGA . . . . .	6
Power Supply . . . . .	6
DC Power Connector . . . . .	7
Powering via FMC Connector . . . . .	7
High-Speed USB 2.0 Interface . . . . .	7
On-board Peripherals . . . . .	7
128-MByte Word-Wide DDR2 Synchronous DRAM . . . . .	7
LEDs . . . . .	7
FMC Expansion Connector . . . . .	7
FrontPanel Support . . . . .	8
Programmer's Interface . . . . .	8
<b>Applying the Shuttle LX1</b> . . . . .	<b>9</b>
Powering the Shuttle LX1 . . . . .	9
Power Budget . . . . .	9
Example XEM6006-LX16 FPGA Power Consumption . . . . .	10
Supply Heat Dissipation (IMPORTANT!!) . . . . .	10
Host Interface . . . . .	11
LEDs . . . . .	11
DDR2 SDRAM . . . . .	11
Clock Configuration (Source Synchronous) . . . . .	12
Memory Controller Blocks . . . . .	12
MIG Settings . . . . .	12
JTAG (JP1) . . . . .	13
FMC Expansion Connector (P3) . . . . .	13
PCB Design Recommendations . . . . .	14
Setting I/O Voltages . . . . .	14
Considerations for Differential Signals . . . . .	14
FMC System Controller . . . . .	15
FMC Geographical Address . . . . .	16
Adjustable Voltage . . . . .	16
Startup Modes . . . . .	16
Pins . . . . .	17
Toolbar . . . . .	17
Pin Lists . . . . .	17
Filters . . . . .	18
Search . . . . .	18
Export (PDF, CSV, Constraints Files) . . . . .	18
Peripherals . . . . .	18
The User Lead In and User Lead Out sections allow you to add custom payloads (your own constraints) that will be added to the exported constraints file. Additional timing constraints or comments can be added here. . . . .	19
. . . . .	19

FMC Compatibility Checklist . . . . . 20  
Shuttle LX1 Mechanical Drawing . . . . . 21

# *Introducing the Shuttle LX1*

---


The Shuttle LX1 is a compact FPGA board featuring the Xilinx Spartan-6 FPGA and high-speed USB 2.0 connectivity. Designed as a full-featured integration system, the Shuttle LX1 provides access to up to 78 I/O pins on its 484-pin Spartan-6 device and has a 128-MiByte DDR2 SDRAM available to the FPGA. The Shuttle LX1 is designed for medium-sized FPGA designs with a wide variety of external interface requirements.

Note: The Shuttle LX1 is also known as the XEM6006 and the names may be used interchangeably.

## **PCB Footprint**

A mechanical drawing of the Shuttle LX1 is shown at the end of this manual. The PCB is 69mm x 50mm with four mounting holes (M2 metric screws) spaced as shown in the figure. These mounting holes are electrically isolated from all signals on the Shuttle LX1. Two additional mounting holes are available for mechanical mating to the FMC module per the Vita-57 specification. The two connectors (USB and DC power) overhang the PCB by approximately 4mm in order to accommodate mounting within an enclosure.

## Functional Block Diagram

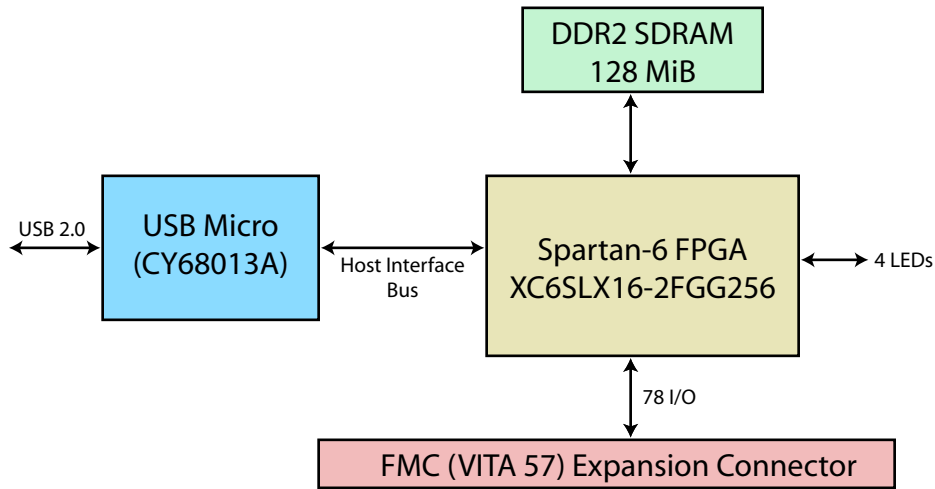

## FPGA

The off-the-shelf Shuttle LX1 has the LX16 FPGA density. Two additional densities are compatible with the Shuttle LX1 design and are available for quantity orders. The table below lists some of the differences between the two devices. Please consult the Xilinx documentation for a more thorough comparison.

Feature	XEM6006-LX16	XEM6006-LX25
FPGA	XC6SLX16-2FGG256C	XC6SLX25-2FGG256C
Slice Count	2,278	3,758
Flip-Flops	18,224	30,064
Distributed RAM	136 Kib	229 Kib
Block RAM	576 Kib	936 Kib
DSP Slices	32	38
Clock Management Tiles	2	2

## Power Supply

The Shuttle LX1 is designed to be operated from a 5-volt power source supplied through the DC power jack on the device (or, optionally, through the FMC connector). This provides power for the following power supplies:

- 3-A, 3.3-v switching regulator
- 1-A, 1.8-v switching regulator
- 1-A, 1.2-v low-dropout linear regulator
- 2-A, Adjustable voltage switching regulator for FMC  $V_{ADJ}$
- 0.9-v low-dropout linear regulator for DDR2 termination voltage

## DC Power Connector

The DC power connector on the Shuttle LX1 is part number PJ-102AH from CUI, Inc. It is a standard "cannon-style" 2.1mm / 5.5mm jack. The outer ring is connected to DGND. The center pin is connected to +VDC.

## Powering via FMC Connector

**Note: Read this section carefully before applying this technique. This technique is not part of the FMC standard so will not work with other FMC carriers.**

The Shuttle LX1 has been designed to accept power (+5VDC only) via the FMC connector with a small modification. To power from the FMC peripheral, you will need to install a 0  $\Omega$  resistor at location R23, located on the reverse side of the PCB under the FMC connector. This will electrically connect +VDC on the DC power connector to +12P0V pins C35 and C37 on the FMC connector.

With this resistor in place, you may apply +5VDC (NOT 12v as is indicated by the FMC naming for these pins) to power the Shuttle LX1 from the FMC peripheral.

## High-Speed USB 2.0 Interface

The Shuttle LX1 uses a Cypress CY7C68013A FX2LP USB microcontroller to make the XEM a USB 2.0 peripheral. As a USB peripheral, the XEM is instantly recognized as a plug and play peripheral on millions of PCs. More importantly, FPGA downloads to the XEM happen blazingly fast, virtual instruments under FrontPanel update quickly, and data transfers are much faster than the parallel port interfaces common on many FPGA experimentation boards.

## On-board Peripherals

The Shuttle LX1 is designed to compactly support a large number of applications with a small number of on-board peripherals. These peripherals are listed below.

### 128-MByte Word-Wide DDR2 Synchronous DRAM

The XEM also includes a 128-MiByte DDR2 SDRAM with a full 16-bit word-wide interface to the FPGA. This SDRAM is attached exclusively to the FPGA and does not share any pins with the expansion connector. The maximum clock rate of the SDRAM is 333 MHz. With the -2 speed grade of the Spartan-6, the maximum clock rate is 312.5 MHz for a supported peak memory bandwidth of 10 Gb/s.

The DDR2 SDRAM is a Micron MT47H64M16HR-3:H (or compatible).

### LEDs

Four LEDs are available for general use as debug outputs.

## FMC Expansion Connector

FMC (FPGA Mezzanine Connector) is the common name for the VITA 57 specification which describes a common connector design to interface large pin-counts to devices with configurable I/O such as an FPGA. The specification is available for purchase through the VITA website:

<http://www.vita.com/fmc.html>

The Shuttle LX1 specifically supports the LPC (low pin-count) version of the specification. For details on supported FMC features, please see the FMC Feature Support section.

FMC connectors are manufactured by Samtec. The FMC connector on the Shuttle LX1 is the Samtec ASP-134603-01. The mating connector which would appear on an FMC module is the Samtec ASP-134604-01. These are both surface-mount pin-field-array style connectors. The connectors ship with a solder plug on each connector which melts during reflow to the solder paste spread on the bare board for assembly. Connector contact is solid and insertion and removal forces are relatively small. High frequency performance is up to 9.5 GHz in single-ended operation and to 10.5 GHz in differential operation.

## FrontPanel Support

The Shuttle LX1 is fully supported by Opal Kelly's FrontPanel Application. FrontPanel augments the limited peripheral support with a host of PC-based virtual instruments such as LEDs, hex displays, pushbuttons, toggle buttons, and so on. Essentially, this makes your PC a reconfigurable I/O board and adds tremendous value to the Shuttle LX1 as a device evaluation platform, general-purpose experimentation, or prototyping system.

### Programmer's Interface

In addition to complete support within FrontPanel, the Shuttle LX1 is also fully supported by the FrontPanel SDK, a powerful C++ class library available to Windows, Mac OS X, and Linux programmers allowing you to easily interface your own software to the XEM.

In addition to the C++ library, wrappers have been written for C#, Java, and Python making the API available under those languages as well. The Opal Kelly community has also successfully used our API from within third-party environments such as Matlab and LabVIEW.

Complete documentation and several sample programs are installed with FrontPanel.



# *Applying the Shuttle LX1*

---

## Powering the Shuttle LX1

The Shuttle LX1 requires that this supply be clean, filtered, and within the range of 4.5v to 5.5v. This supply must be delivered through the power connector on-board.

### Power Budget

The table below can help you determine your power budget for each supply rail on the Shuttle LX1. All values are highly dependent on the application, speed, usage, and so on. Entries we have made are based on typical values presented in component datasheets or approximations based on Xilinx power estimator results. Shaded boxes represent unconnected rails to a particular component. Empty boxes represent data that the user must provide based on power estimates.

The user may also need to adjust parameters we have already estimated (such as FPGA  $V_{CC0}$  values) where appropriate.

Note that  $V_{ADJ}$  is provided to the FMC as a programmable voltage selected by an EEPROM present on the peripheral module. The maximum current available to this device is two amps. 3.3v is also provided to the FMC mezzanine module with some current consumed on the Shuttle LX1 by the USB interface, the FPGA's  $V_{CCAUX}$  supply, and the DDR2 termination voltage regulator.

Component(s)	1.2v	1.8v	3.3v	V <sub>ADJ</sub> (2 Amp)
USB 2.0			280 mW	
DDR2		600 mW	250 mW	
FPGA V <sub>CCINT</sub>				
FPGA V <sub>CCAUX</sub>			250 mW	
FPGA V <sub>CC01</sub> (DDR2), est.		250 mW		
FPGA V <sub>CC02</sub> (USB), est.			100 mW	
FPGA V <sub>CC00,3</sub>				
FMC Mezzanine Module				
<b>Total:</b>				
<b>Available:</b>	1,200 mW	1,800 mW	9,900 mW	

### Example XEM6006-LX16 FPGA Power Consumption

XPower Estimator version 12.3 was used to compute the following power estimates for the V<sub>CCINT</sub> supply. These are simply estimates; your design requirements may vary considerably. The numbers below indicate approximately 70% to 80% utilization.

Component	Parameters	V <sub>CCINT</sub>
Clock	150 MHz GCLK - 7,200 fanout	42 mW
Clock	100 MHz GCLK - 7,200 fanout	28 mW
Logic (DFF)	150 MHz, 7,200 DFFs	39 mW
Logic (DFF)	100 MHz, 7,200 DFFs	24 mW
Logic (LUT)	150 MHz, 3,600 Combinatorial, 100 SR, 100 RAM	32 mW
Logic (LUT)	100 MHz, 3,600 Combinatorial, 100 SR, 100 RAM	21 mW
BRAM	18-bit, 12 @ 150 MHz, 12 @ 100 MHz	15 mW
DSP	150 MHz, 25 slices	14 mW
MCB	150 MHz	85 mW
Misc.	DCM, PLL, etc.	50 mW
	<b>Total:</b>	350 mW
	<b>Available:</b>	1,200 mW

### Supply Heat Dissipation (IMPORTANT!!)

Due to the limited area available on the small form-factor of the Shuttle LX1 and the density of logic provided, heat dissipation may be a concern. This depends entirely on the end application and cannot be predicted in advance by Opal Kelly. Heat sinks may be required on any of the devices on the Shuttle LX1. Of primary focus should be the FPGA (U5) and SDRAM (U6). Although the switching supplies are high-efficiency, they are very compact and consume a small amount of PCB area for the current they can provide.

If you plan to put the Shuttle LX1 in an enclosure, be sure to consider heat dissipation in your design.

## Host Interface

There are 26 pins that connect the on-board USB microcontroller to the FPGA. These pins comprise the host interface on the FPGA and are used for configuration downloads. After configuration, these pins are used to allow FrontPanel communication with the FPGA.

If the FrontPanel okHost module is instantiated in your design, you must map the interface pins to specific pin locations using Xilinx LOC constraints. This may be done using the Xilinx constraints editor or specifying the constraints manually in a text file. Please see the sample projects included with your FrontPanel installation for examples.

## LEDs

In addition to the power LED, there are four LEDs attached to the FPGA. Each is wired directly to the FPGA according to the mapping table below.

The LED anodes are connected to a pull-up resistor to +3.3VDD and the cathodes wired directly to the FPGA on Bank 2 with a bank I/O voltage of 3.3v. To turn ON an LED, the FPGA pin should be brought low. To turn OFF an LED, the FPGA pin should be at logic '1'.

LED	FPGA Pin
D2	M12
D3	L10
D4	M9
D5	T3

## DDR2 SDRAM

The Micron DDR2 SDRAM is connected exclusively to the 1.8-v I/O on Bank 1 of the FPGA. The following tables list these connections.

DDR2 Pin	FPGA Pin
CK	G12
$\overline{CK}$	H11
CKE	D14
$\overline{CS}$	F12
$\overline{RAS}$	J13
$\overline{CAS}$	K14
$\overline{WE}$	E15
LDQS	N14
$\overline{LDQS}$	N16
UDQS	R14
$\overline{UDQS}$	T15
LDM	K11
UDM	K12
ODT	H14
A0	H15
A1	H16
A2	F16
A3	H13
A4	C16
A5	J11
A6	J12
A7	F15
A8	F13

DDR2 Pin	FPGA Pin
A9	F14
A10	C15
A11	G11
A12	D16
BA0	G14
BA1	G16
BA2	E16
D0	L14
D1	L16
D2	M15
D3	M16
D4	J14
D5	J16
D6	K15
D7	K16
D8	P15
D9	P16
D10	R15
D11	R16
D12	T14
D13	T13
D14	R12
D15	T12

### Clock Configuration (Source Synchronous)

The DDR2 clocking is designed to be source-synchronous from the FPGA. This means that the FPGA sends the clock signal directly to the SDRAM along with control and data signals, allowing very good synchronization between clock and data.

### Memory Controller Blocks

Spartan-6 has integrated memory control blocks to communicate with the external DDR2 memory on the Shuttle LX1. This is instantiated using the Xilinx Core Generator (memory interface generator, or MIG) to create a suitable memory controller for your design. You should read and become familiar with the DDR2 SDRAM datasheet as well as MIG and the core datasheet. Although MIG can save a tremendous amount of development time, understanding all this information is critical to building a working DDR2 memory interface.

The XEM6006 provides 1.2v as  $V_{CCINT}$ . According to the memory controller block documentation, the Spartan-6, -2 speed grade can operate memory to 312.5 MHz with this internal voltage.


### MIG Settings

The following are the settings used to generate the MIG core for our RAMTester sample using Xilinx Core Generator. These settings were used with ISE 12.2 and MIG 2.3. Note that settings may be slightly different for different versions of ISE or MIG.

Frequency	312.5 MHz	
Memory Type	Component	
Memory Part	MT47H64M16XX-3 (1Gb, x16)	
Data Width	16	
Enable DQS Enable	CHECKED	
High-temp self-refresh	DISABLED	
Output drive strength	Reducedstrength	
RTT(nominal)	50 ohms	[default]
DCI for DQ/DQS	CHECKED	
DCI for address/control	CHECKED	
ZIO pin	L12	
RZQ pin	E13	
Calibrated Input Selection	Yes	
Class for address/control	Class II	
Debug signals	Your option	
System clock	Single-ended	

## JTAG (JP1)

The JTAG connections on the FPGA and FMC connector are wired to JP1 as shown in the diagram below. This connector is not populated by default, but may be populated with Molex 87831-1420 or equivalent (2-mm, 14-position shrouded connector). The Molex part is compatible with the Xilinx JTAG cable.

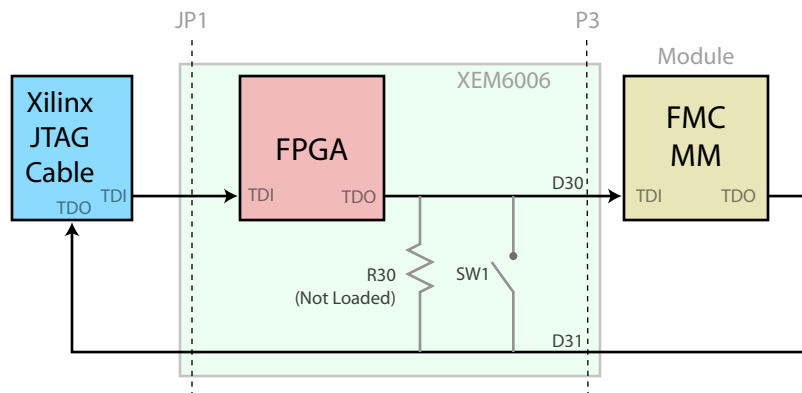

The FMC module is designed to complete the JTAG chain. However, if a module is not present or it does not properly complete the chain, the chain may be bypassed using SW1. Additionally, a 0-Ω resistor may be installed at R30 to bypass the chain.

## FMC Expansion Connector (P3)

Opal Kelly Pins is an interactive online reference for the expansion connectors on all Opal Kelly FPGA integration modules. It provides additional information on pin capabilities, pin characteristics, and PCB routing. Additionally, Pins provides a tool for generating constraint files for place and route tools. Pins can be found at the URL below.



<http://www.opalkelly.com/pins>

The FMC expansion connector (P3) is a Samtec ASP-134603-01, FMC LPC carrier connector. It is the specified connector the LPC versions of the FMC / VITA 57 specification and is compatible with the corresponding LPC mezzanine connector, Samtec ASP-134604-01.

The ASP-134603-01 is a 0.5-mm pitch pin grid array connector. In raw form, it is a terminal assembly whereby each pin has a solder plug at the board-side base. The PCB footprint is specified by the appropriate Samtec documentation and is similar to a BGA device footprint with surface-mount pads. The solder plug is designed to melt just like BGA solder balls and attach the terminals to the PCB. Despite the high pin-count, this connector has low insertion and removal forces, provides good connectivity, and very good high-frequency performance.

## PCB Design Recommendations

Opal Kelly suggests following manufacturer's recommendations for all footprint and assembly guidelines when designing your own FMC mezzanine modules. However, the following remarks may prove helpful.

Samtec suggests using a 6-mil solder stencil when assembling boards with the FMC connectors. Assembly of other components with fine geometry such as QFN packages may benefit from the more standard 5-mil solder stencil. In this case, Opal Kelly has had good success in expanding the FMC stencil apertures from their specified round aperture to a 0.037-inch square aperture with 0.003-inch rounded corners. The increase in paste application from aperture makes up for the reduced paste volume from the thinner stencil.

## Setting I/O Voltages

The FMC specification is designed to allow the FMC mezzanine module to determine the interface voltage by communicating the desired  $V_{ADJ}$  voltage at start-up. This is done by programming the desired settings into a small I<sup>2</sup>C EEPROM following the IPMI specification with details in the FMC specification. Opal Kelly provides an online tool for generating compliant EEPROM binaries at the following URL:

<http://www.opalkelly.com/tools/FMCEepromGenerator>

If an EEPROM on-board is not available or desired, the FMC system controller on the Shuttle LX1 provides a manual mode to override this type of  $V_{ADJ}$  specification. To configure these modes, Opal Kelly provides an executable tool called `fmconfig` and FPGA configuration bitfile. Please see the `fmconfig` sample in the FrontPanel SDK for usage information.

## Considerations for Differential Signals

The Shuttle LX1 PCB layout and routing has been designed with several applications in mind, including applications requiring the use of differential (LVDS) pairs. Please refer to the Xilinx Spartan-6 datasheet for details on using differential I/O standards with the Spartan-6 FPGA.

Note: LVDS output on the Spartan-6 is restricted to banks 0 and 2. LVDS input is available on all banks. For more information, please refer to the *Spartan-6 FPGA SelectIO Resources User Guide* from Xilinx.

## FPGA I/O Bank Voltages

In order to use differential I/O standards with the Spartan-6, you must set the VCCO voltages for the appropriate banks to 2.5v according to the Xilinx Spartan-6 datasheet. Please see the section above entitled "Setting I/O Voltages" for details.

## Characteristic Impedance


The characteristic impedance of all routes from the FPGA to the expansion connector is approximately 50-Ω.

## Differential Pair Lengths

In many cases, it is desirable that the route lengths of a differential pair be matched within some specification. Care has been taken to route differential pairs on the FPGA to adjacent pins on the expansion connectors whenever possible. We have also included the lengths of the board routes for these connections to help you equalize lengths in your final application. Due to space constraints, some pairs are better matched than others.

## FMC System Controller

The FMC specification provides for a system controller to communicate over the I<sup>2</sup>C signals to a small EEPROM on the mezzanine device for identification and settings such as V<sub>ADJ</sub> voltage. On the Shuttle LX1, this system controller role is served by a small microcontroller as shown in the diagram below.

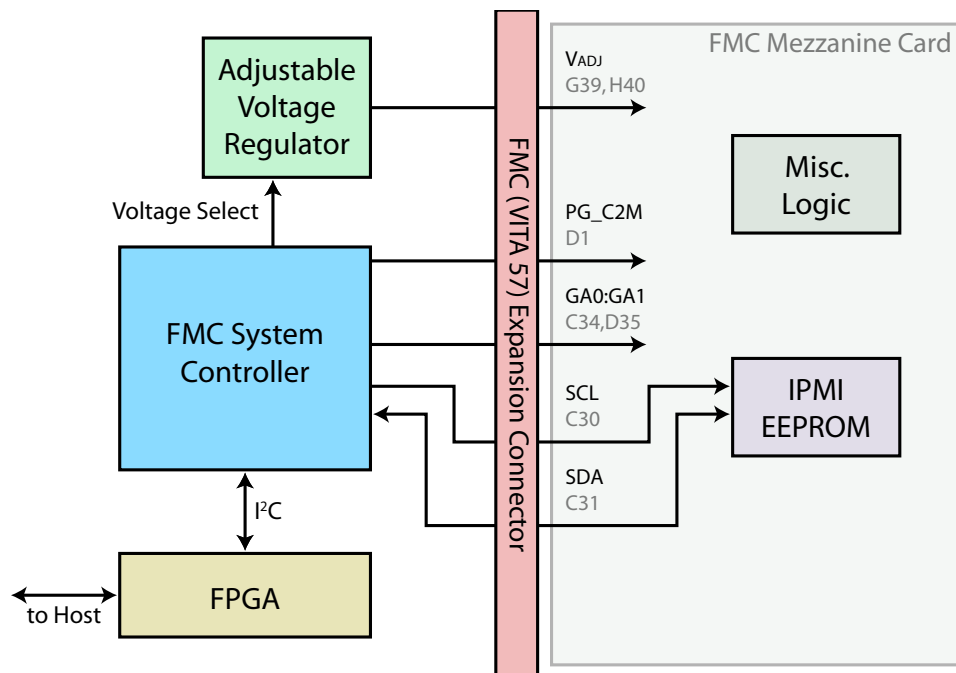

The system controller manages four items:

- FMC Geographical Address (GA1:GA0)
- Switching regulator to set the adjustable voltage level (V<sub>ADJ</sub>)
- FMC Power Good signal (PG\_C2M) to mezzanine device
- Although not part of the FMC specification, the Shuttle LX1 also provides access to other I<sup>2</sup>C devices that may be on the mezzanine device.

## FMC Geographical Address

The FMC Geographical Address is two pins (GA1:GA0) that are typically used by a mezzanine device to determine which FMC connector on a carrier it is attached to. The Shuttle LX1 has only one FMC connector and therefore the default geographical address is 00. This default may be changed using the FlashLoader sample.

Some mezzanine cards may attach other devices to the I<sup>2</sup>C bus and address them through the system controller, using the geographical address as a chip-select. This is not strictly in adherence with the FMC specification, but the Shuttle LX1 allows it by providing I<sup>2</sup>C commands to set the geographical address dynamically.

## Adjustable Voltage

FMC specifies that V<sub>ADJ</sub> be adjustable using a “personality” EEPROM installed on the mezzanine board. This EEPROM should contain an IPMI-formatted personality which informs the system controller what voltage to use.

To make things simple and obviate the need for a full IPMI-formatted EEPROM on the mezzanine board, the Shuttle LX1 system controller allows the user to configure the V<sub>ADJ</sub> voltage applied using the FlashLoader sample.

## Startup Modes

The system controller has three modes of startup operation. The user can set the startup mode using the FlashLoader sample.

### Automatic

In this mode, the system controller boots and looks for an IPMI-formatted EEPROM attached to the FMC bus. If an FMC device is not attached or an IPMI-formatted EEPROM is not found, the system controller disables the adjustable voltage regulator and does not power V<sub>ADJ</sub>.

The boot sequence in this mode is as follows:

- Set GA1:GA0 according to internal non-volatile settings.
- If a mezzanine board is not attached, disable V<sub>ADJ</sub> and STOP.
- If an IPMI-formatted EEPROM is not attached, disable V<sub>ADJ</sub> and STOP.
- Load V<sub>ADJ</sub> settings from the mezzanine board's EEPROM and set V<sub>ADJ</sub>.
- Enter command processing mode to allow I<sup>2</sup>C communication pass-through as well as geographical address manipulation.

### Manual

When the Manual startup mode is selected, the system controller will ignore the existence of an EEPROM on the FMC bus and use the settings stored in an internal non-volatile memory to set V<sub>ADJ</sub> and the FMC Geographical Address.

The boot sequence in this mode is as follows:

- Set GA1:GA0 according to internal non-volatile settings.
- If a mezzanine board is not attached, disable V<sub>ADJ</sub> and STOP.
- Set V<sub>ADJ</sub> according to internal non-volatile settings.



- Enter command processing mode to allow I<sup>2</sup>C communication pass-through as well as geographical address manipulation.

### Fallback [Default]

The Fallback startup mode is a combination of Automatic and Manual modes and allows the system controller to look for an IPMI-formatted EEPROM for FMC settings. If found, those settings are applied. If not found, the settings stored in an internal non-volatile memory are used.

The boot sequence in this mode is as follows:

- Set GA1:GA0 according to internal non-volatile settings.
- If a mezzanine board is not attached, disable V<sub>ADJ</sub> and STOP.
- If an IPMI-formatted EEPROM is not attached, proceed with Manual startup procedure.
- Load V<sub>ADJ</sub> settings from the mezzanine board's EEPROM and set V<sub>ADJ</sub>.
- Enter command processing mode to allow I<sup>2</sup>C communication pass-through as well as geographical address manipulation.

## Pins


Opal Kelly Pins is an interactive online reference for the expansion connectors on all Opal Kelly FPGA integration modules. It provides additional information on pin capabilities, pin characteristics, and PCB routing. Additionally, Pins provides a tool for generating constraint files for place and route tools. Pins can be found at the URL below.



<http://www.opalkelly.com/pins>

### Toolbar

The toolbar at the top of a Pins product page has a number of features. Explore a bit; you won't break it.

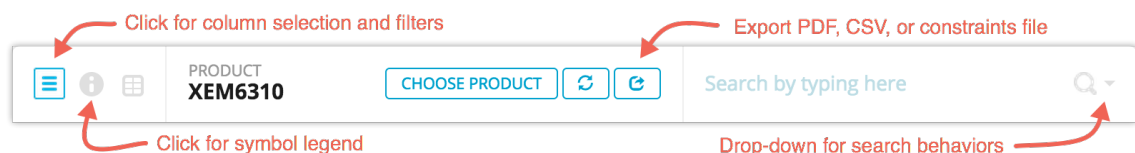

### Pin Lists

As the primary reference for Opal Kelly integration module expansion connectors, Pin Lists contain a comprehensive table of the FPGA-to-Connector data including connector pin, FPGA pin, signal description, routed length (when applicable), breakout board pin mapping, FPGA I/O bank, and other properties.

By default, not all data columns are visible. Click on the “Toggle Filters” icon at the top-left to select which columns to show. Depending on the specific module, several additional columns may be shown. The data in these columns is always exported when you export the pin list to CSV.

The screenshot shows the product page for XEM6310. At the top, there are navigation icons, the product name 'PRODUCT XEM6310', a 'CHOOSE PRODUCT' button, and a search bar. Below this is a 'DISPLAY OPTIONS' section with a 'Reset filters' link and a row of filter buttons for Connector, Power, Ground, I/O Power, I/O, I/O Bank, JTAG, Clock, and FPGA Clock In, each with a '- all -' dropdown. A 'TABLE LAYOUT' section allows rearranging columns. The main table has columns for Connector, Pin, FPGA Pin, Description, Length (mm), I/O BANK, BRK6110, EVB1005, and PROPERTIES. The table content is as follows:

Connector	Pin	FPGA Pin	Description	Length (mm)	BRK6110
JP2	1		DGND		JP1A-1
JP2	2	+3.3VDD	+3.3VDD		JP1A-2
JP2	3	Vbatt	VBATT		
JP2	4	+3.3VDD	+3.3VDD		JP1A-4
JP2	5		JTAG_TCK		JP3-6
JP2	6	+3.3VDD	+3.3VDD		JP1A-6
JP2	7		JTAG_TMS		JP3-4

### Filters

You can hide or show the additional information associated with each signal by clicking on the icon at the top left (“Toggle Filters”). Use these filters to limit the visible pin listing to particular subsets of signals you are interested in.

### Search

You can search the pin list using the search entry at the top-right. Click on the magnifying glass drop-down to adjust the function of the search to one of:

- Highlight - Highlights search results only.
- Hide Matching - Hides rows where search matches are found.
- Show Only Matching - Shows only rows where a search match is found.

### Export (PDF, CSV, Constraints Files)

The export button near the search entry allows you to export the pin list in several formats. PDFs can be viewed or printed. CSV can be loaded into a spreadsheet application or manipulated with scripts. Constraints files can be used as inputs to Xilinx and Altera synthesis and mapping tools.

The constraints files include additional mapping information for other peripherals on the module such as memory, clock oscillators, and LEDs.

### Peripherals

A Pins Peripheral is a project definition where you can enter your top-level HDL design nets to have Pins generate a complete constraint file for you.

When you create a Peripheral, you will select a target integration module. The Peripheral is paired to this module so that the design parameters match the features and expansion capabilities of the module.

L38P_0	25.099	0	JP2B-63	SDATA	pix_sdata	IOSTANDARD=LVCMOS33	
L37P_GCLK13_0	20.996	0	JP2B-64			IOSTANDARD=LVCMOS33	
L38N_VREF_0	22.706	0	JP2B-65			IOSTANDARD=LVCMOS33	
L37N_GCLK12_0	20.055	0	JP2B-66			IOSTANDARD=LVCMOS33	
L51P_0	25.362	0	JP2B-67			IOSTANDARD=LVCMOS33	
L50P_0	21.102	0	JP2B-68			IOSTANDARD=LVCMOS33	
L51N_0	23.293	0	JP2B-69	RESET	pix_reset	IOSTANDARD=LVCMOS33	
L50N_0	19.964	0	JP2B-70	PIX6	pix_data[6]	IOSTANDARD=LVCMOS33	

ENTER VALUE FOR DESIGN NET

## Specifying Net Names

The Pin List view for a Peripheral includes three additional, editable columns:

- Design Net - The name of the signal as it appears in your top-level HDL.
- Constraints - Text that is inserted into the constraints file for that signal.
- Comment - Additional comment text that is added to the constraints file.

These additional data are merged with the default Pin List constraints file prior to export. The result is a constraints file complete with net names that can be used with your FPGA development flow.

## Export Features

Enable the specific module features you would like to appear in the exported constraints file. When a feature is enabled, Pins will export the constraints appropriate to that feature such as pin locations. When a feature is disabled, Pins will skip that portion.

The User Lead In and User Lead Out sections allow you to add custom payloads (your own constraints) that will be added to the exported constraints file. Additional timing constraints or comments can be added here.

**Constraint file template**    Default

---

**Output filename**   

**Export features**




- Lead In
- FrontPanel
- FrontPanel Timing
- System Clock
- Reset
- User Lead In [Add payload](#)
- LEDs
- FPGA Flash
- DDR2
- User Lead Out [Add payload](#)

## FMC Compatibility Checklist

The specifications below are intended to help you determine compatibility between a specific FMC device and the Shuttle LX1 FMC carrier.

Feature / Specification	Shuttle LX1 Support
FMC LPC pins available	LA[33:0]_P and LA[33:0]_N LA[16:0] are on FPGA bank 0 LA[33:17] are on FPGA bank 3
FMC HPC pins available	HPC not supported
Bank LA signaling standard support	See Xilinx Spartan-6 SelectIO User Guide LVDS <i>input-only</i> for LA[16:0] on Bank 0 LVDS input and output for LA[33:17] on Bank 3
3P3V current available	Approximately 2.8A available to module
12PV0 current available	User-supplied via TP10, if required
VADJ ranges allowed	0.8, 1.2, 1.25, 1.5, 1.8, 2.5, 3.3
VADJ current available	2A
JTAG clock speed	0 MHz to 33 MHz
Data line trace lengths for skew matching	LA[33:0], CLK[1:0] matched to within 1mm
CLK bank connections	CLK[1:0] are connected to GCLKs on Bank 3
Source-synchronous clocking for _CC pins	LA[0, 1, 17, 18] are connected to GCLKs

# Shuttle LX1 Mechanical Drawing

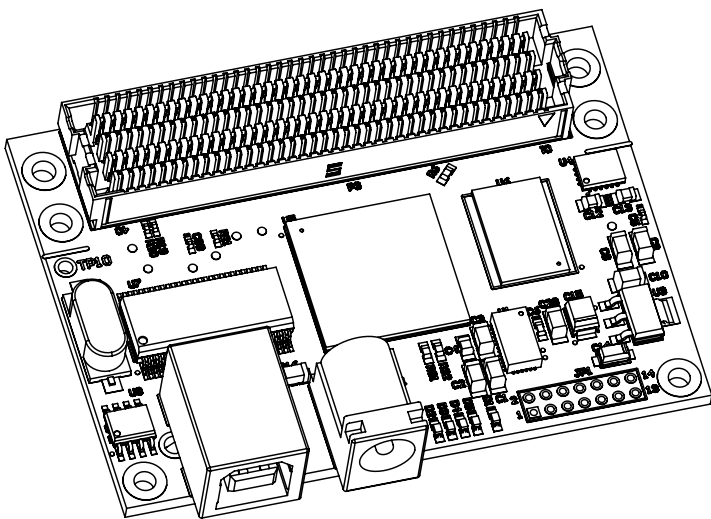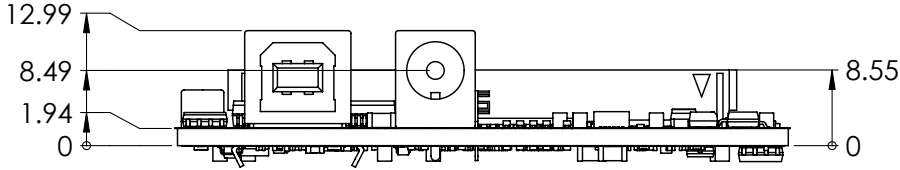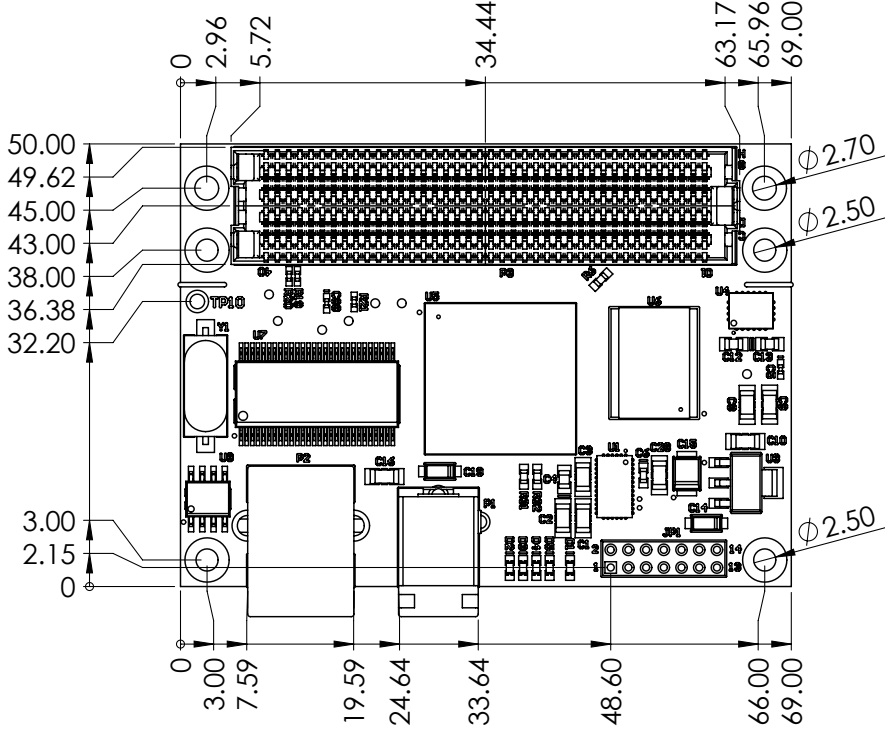

All dimensions in mm