




# USER'S MANUAL

ITEM# GT00761  
NYPD Motor Bike

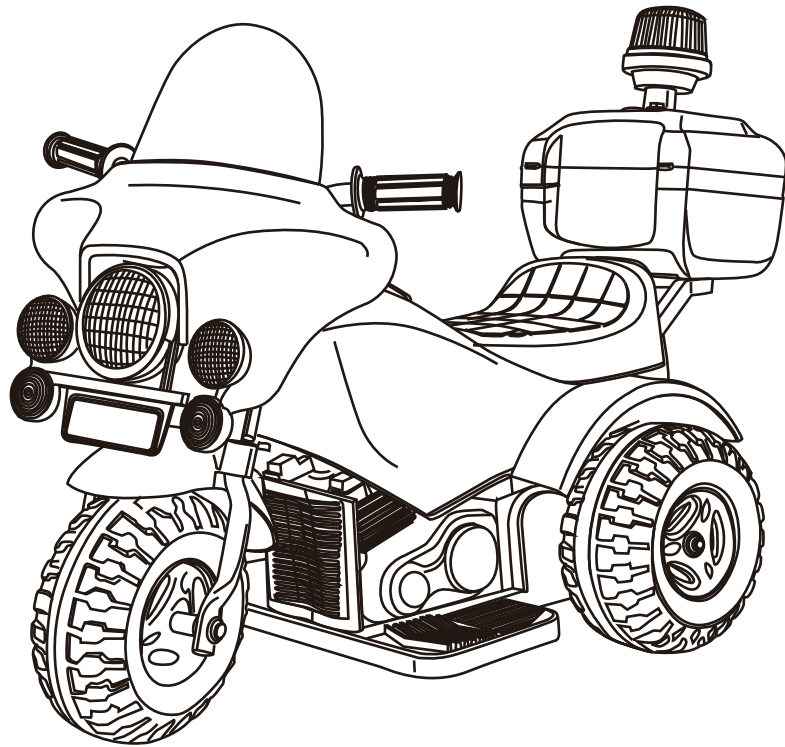

Illustrations are representative only, design and style may vary.  
Please carefully read this manual before use and keep for future reference.

All New York City logos and marks depicted herein are property of the City of New York and may not be reproduced without prior written consent. © 2014. City of New York. All rights reserved. Used under license.



Customer Service:  
1-855-GIGGOTY (1-855-444-4689)  
customerservice@giggotoys.com

## ASSEMBLY INSTRUCTIONS

### WARNING:


Assembly should be performed by adults only. Never allow children to play with the small parts or the plastic bag the vehicle is placed in. Injury may occur. Small parts could be a choking hazard! Polybags could be a suffocation hazard to small children. Dispose of these bags in appropriate refuse container.

### TECHNICAL DATA


Speed: 2 MPH, 2.5 km/hr  
 Battery: 6V4AH sealed dry cell battery  
 Time for charging: 8 – 12 hours  
 Ages: 2 – 4  
 Load Max capacity: 66 pounds/ 30 kgs.  
 Charger: Input 120 - 240Volt, depending on local voltage; Output – DC 6.5V500mA or 8.5V1000mA  
 Life of Battery: Approximately 200 hours, 300 charges. Depending on usage.  
 Working time: About 40 to 90 minutes, depending on rider, road surface and whether battery was fully charged.  
 Functions: Forward, backward, stop, working headlight. Police sound and flashing light.




### PARTS LIST

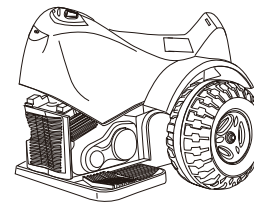

Vehicle body

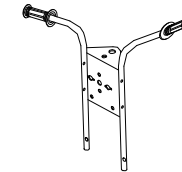

Handlebar Assembly

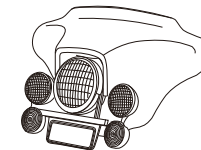

Header set




Box holder



Storage Box




Seat



Front Wheel



Wheel Covers



Top Light




Front Fender



Windshield



Charger

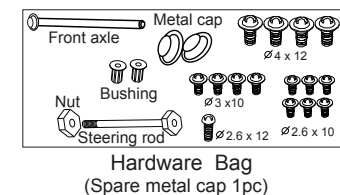


# ASSEMBLY OF VEHICLE

Tools Needed (not included):


1 Phillips head screwdriver, small hammer, a block of wood and one adjustable wrench.

**Note:** Some steps below may come partially assembled from factory.


1. Locate the windshield, header set and three long screws (2.6 x 10). Line up the windshield with the header set. Once the windshield is lined up, insert the three long screws. Tighten the screws securely, being careful not to over tighten and crack the windshield.

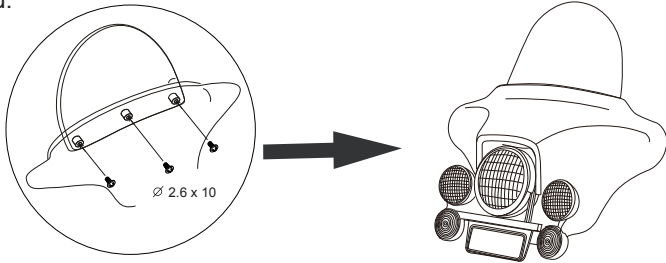


2. Line up the header set with the (2) two holes on the handlebar assembly. Make sure the header set is level with the handlebars. Using two long screws (3 x 10) attach the header set to the handlebar assembly. Make sure the screws are tightened securely. **Caution:** the light wire must be pulled out through the hole of the handlebar assembly.

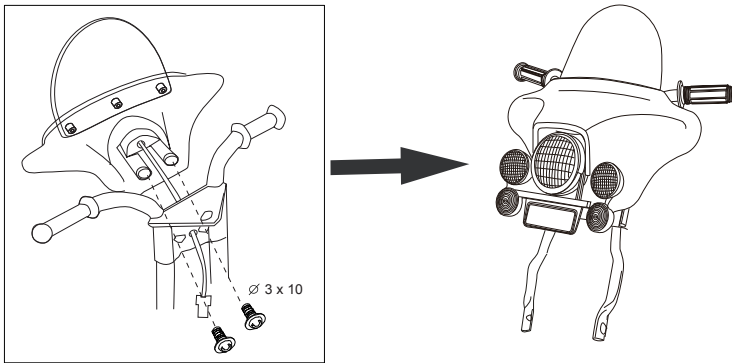


3. Snap front fender (front facing out) to the front flat side of the handlebar. Align the hole in the fender with the hole on the back of the handlebar assembly.

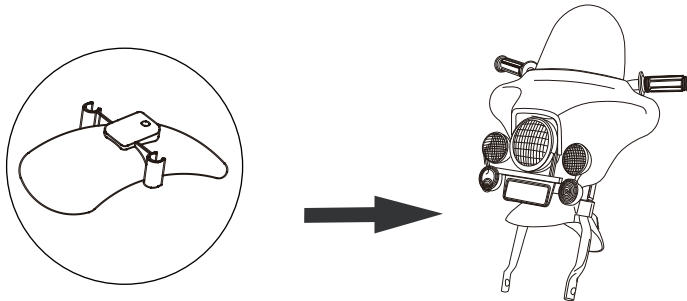


4. Align the hole in the handlebars with the hole in the vehicle body. Once aligned, insert the long bolt completely through the vehicle body. Press down on the bolt and turn. This will thread the bolt through the handlebar assembly and on to the nut on the front fender. After the bolt is threaded through the nut in the fender, tighten the bolt securely.

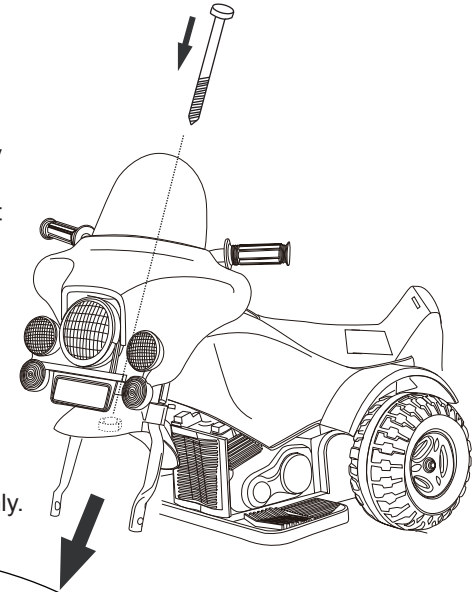


5. Place one (1) wheel cover on each side of the front wheel and push together firmly.

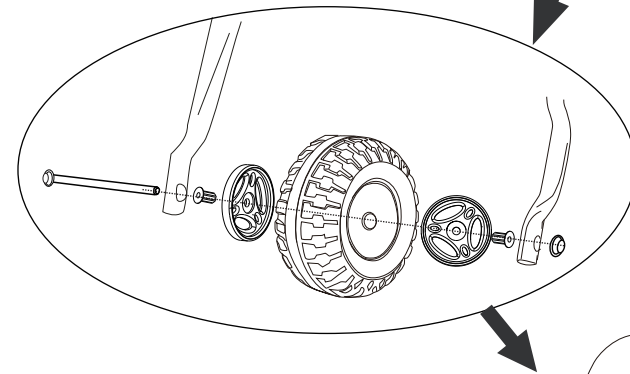



6. Insert the front axle through the lower left fork of the handlebar assembly. Next, place a bushing on the axle and continue to push the axle through the front wheel. As the axle exits the wheel place another bushing on the axle, then continue through the fork. Finally, secure the front wheel by tapping the metal cap onto the end of the axle with a hammer. It is helpful to use a piece of tape to hold the cap in place. For safety, hold a block of wood on the opposite end of the axle while tapping the metal cap with a small hammer.

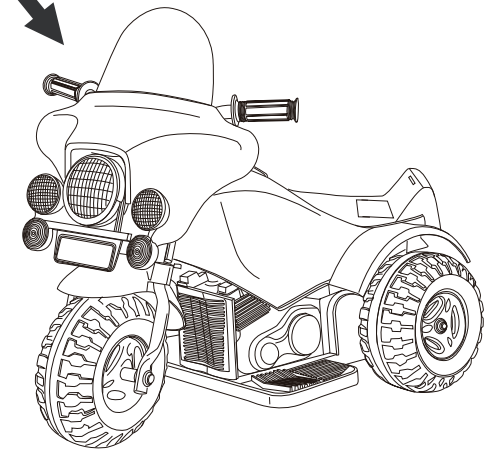

7. Connect the two (2) plugs for the top light. Next, line up the holes in the top part of the storage box with those in the lower part. From the storage box insert the two (3 x 10) screws. Tighten securely.

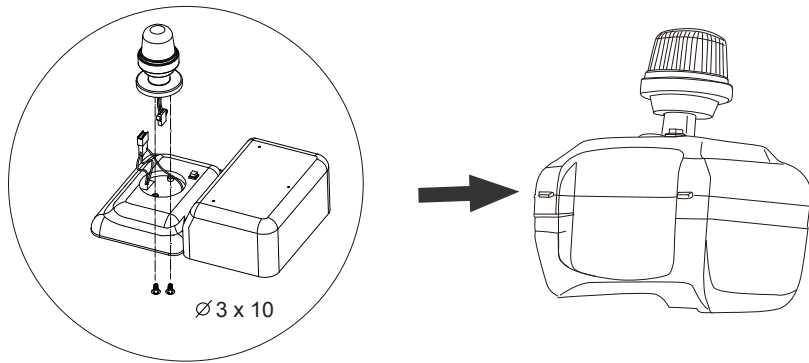

8. Locate the bottom of the storage box and box holder. Line up the three holes on the storage box bottom with the holes in the box holder. Using the three (2.6 x 10) screws secure storage box bottom to the holder.

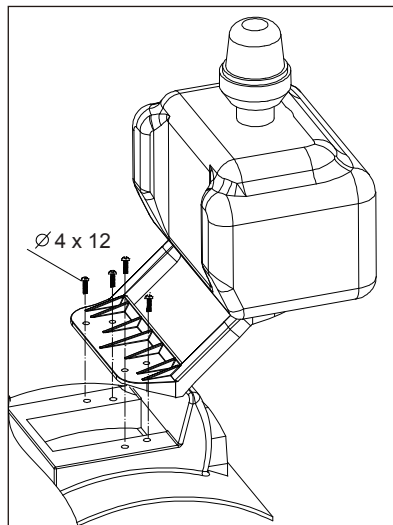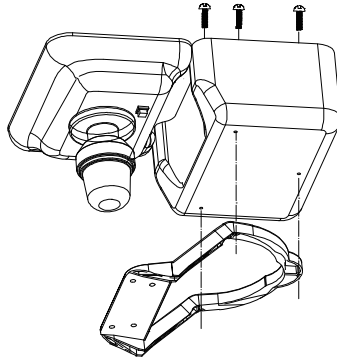

9. Align the holes in the box holder with the holes in the rear part of the vehicle body. Using the four (4 x 12) screws, secure box holder to the vehicle.

10. Installing the battery for the police sound and light  
 A. Locate the battery compartment in the upper part of the storage box, push and remove the battery cover. Install two (2) 1.5V (AA) size alkaline batteries (not included) as instructed (+ to + and - to -).  
 B. After checking the buttons for the correct operation of the police sound and lights, reinstall the battery cover.


**Caution:** Do not mix old and new batteries together when in use..  
 Do not mix rechargeable batteries and alkaline batteries.  
 Do not dispose of used battery in fire or water, to avoid hazard and pollution of environment. Do not try to recharge standard batteries.

11. Plug the front light wire into the wire coming from the vehicle body.
12. Connecting the battery.  
**Note:** Make sure the battery is connected before you install the seat.  
 Connect the BLACK wire to the BLACK terminal; connect the RED wire to the RED terminal.

13. Installing the seat  
 Remove the screw on the hole of the screw in the rear of the vehicle body. Snap the tab at the front of seat into the location at the rear of the gas tank, then insert the tab on the back of the seat into the hole of the screw in the rear of the vehicle body. Using a screwdriver secure the seat with screw.

## CHARGING THE BATTERY

1. Before first use, remove the seat and attach the wires to battery terminals. Always Red to Red and Black to Black.
2. The vehicle charging jack is on the back bottom of the body. Plug the charger into the jack.
3. Insert the charger plug into a wall outlet. After 8 - 12 hours vehicle should be fully charged. Unplug the charger from the wall outlet and disconnect the charger from the jack on the vehicle.

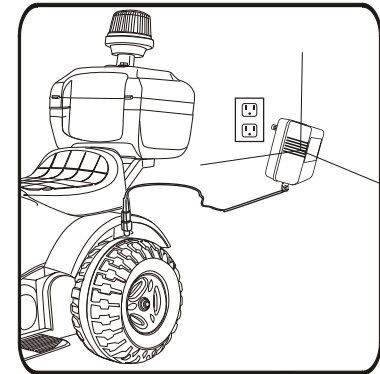

## REPLACING BATTERY

1. Unscrew and remove the seat to expose the battery compartment.
2. Unplug the battery connectors and remove the exhausted battery from the battery compartment.
3. Put the new battery into the battery compartment as specifically designed.
4. To charge the new battery refer to "charging the battery"
5. Dispose of the exhausted battery in an appropriate waste collection center.

You can help protect the environment! Please remember to respect local regulations: Turn in the non-working electrical equipment to an appropriate waste disposal center.

## RECHARGING PRECAUTIONS AND WARNING

1. The charger is not a toy. The battery should be charged by adults only.
2. Do not allow children to play with the charger or to recharge the battery.
3. Before the first use, you should fully charge the battery for 8 -12 hours. Do not charge the battery for more than 15 hours to avoid overheating the charger.
4. To recharge the battery, plug the charger into vehicle then into household wall outlet, the battery will begin charging. After the battery is fully charged, unplug the charger from the battery and wall outlet.
5. It is normal for the charger to feel warm during charging, but if the charger feels very hot, stop charging and check the battery and charger for damage.
6. When the vehicle begins to run slowly, recharge the battery.
7. To lengthen the life of the battery, always recharge the battery before storing and at least every three months thereafter.
8. Use only battery and charger of the same type as recommended by the manufacturer.
9. Do not connect the battery terminals together or the vehicle will short circuit.
10. If charger should be examined regularly for damage to the cord, plug and other parts. If any damage is found, charger should be repaired or replaced immediately.
11. Do not use a damaged charger.

### IMPORTANT:

To prolong battery life, you must recharge the battery after each use. You must also charge your battery if it has not been used for 30 days or more.

### CAUTION:

1. The battery compartment is located under the seat. Remove the seat to check the battery terminals and wire connections.
2. Please note never try to connect Red to Black or Black to Red or a short circuit will occur!
3. For long term storage, disconnect the wires from the battery terminals. Do not store battery in extreme temperatures.

## OPERATION

1. To change the direction of the vehicle, set the direction switch to:
  - "Forward" position, step on the accelerator, the vehicle moves forward,
  - "Reverse" position, step on the accelerator, the vehicle moves in reverse.
  - Middle position "Neutral", step on the accelerator, the vehicle will not move.
2. Headlight comes on when vehicle is moving forward.
3. On the storage box, press the sound/light button down. It will stay depressed. Once down, your child will hear police sounds and see flashing light. To turn the police sound and lights off, simply press button again.

## OVERLOAD PROTECTION

This vehicle ( battery) is equipped with an auto - recovery device. If the vehicle is overloaded, operated incorrectly, or power current is greater than the electrical system is designed to accept, the device will shut off power automatically. The vehicle will stop working. After (2) two minutes, the device will reset itself and the vehicle will work normally.

### WARNING:

NEVER change the direction by pressing the Forward/Backward switch while the vehicle is moving. You must always come to a stop before changing direction.

### IMPORTANT!

- Adults should read this manual carefully before allowing a child to use the vehicle. Vehicle should be assembled by an adult.
- Child should always be supervised by an adult when operating the vehicle.
- Do not overload, maximum weight 66LBS/30kgs.
- Only 1 child should ride on this vehicle at a time.
- Do not operate vehicle on sandy, muddy, or rugged surfaces to avoid damage to the vehicle.
- Do not ride the vehicle in dangerous places such as busy streets, roads, or highways.
- Never ride in hilly areas or on steep slopes.
- Never ride the toy near swimming pools or other bodies of water.
- Never ride in the dark or in dimly lit areas.
- Use the toy only on flat surfaces, such as inside your house, sidewalks, or playground.
- Use only battery recommended by the manufacturer.
- Use only charger specified by the manufacturer.
- Do not clean the vehicle while the charger is attached.
- Clean the vehicle only with a damp cloth—never submerge vehicle in water or spray vehicle with water from a hose.
- Dispose of all batteries and non-working electrical equipment in appropriate waste disposal centers.

## ELECTRICAL AND ELECTRONIC EQUIPMENT THAT ARE SUPPLIED WITH BATTERIES (INCLUDING INTERNAL BATTERIES)

### WEEE Directive & Product Disposal

At the end of its serviceable life, this product should not be treated as household or general waste. It should be handed over to the applicable collection center for the recycling of electrical and electronic equipment.



Internal / Supplied Batteries

Notice to customers

This symbol on the battery indicates that the battery is to be collected separately.

**The following applies only to users in European countries.**

This battery is designed for separate collection at an appropriate collection center.

Do not dispose of as household waste.


For more information, contact the retailer or local authorities in charge of waste management.

# TROUBLE SHOOTING

1. If the vehicle fails to move.
  - Make sure the direction switch is not set to the middle position.
  - Make sure the battery wires are connected properly.
  - Recharge battery, if necessary.
  - Check to see if overload,relay triped.
  - Check the battery. If it is damaged or exhausted, replace it.
2. If the vehicle runs slowly: Recharge the battery.
3. If the battery cannot be recharged: Battery or charger may need to be replaced.
4. If the headlight does not work, check to see if the wires are loose.
5. If the vehicle still fails to operate,  
contact our customer service center at the number below.

 **WARNING:**  
Protective equipment should be worn,Not to be used in traffic!

 **WARNING:**  
CHOKING HAZARD - Small parts not for children under 3 years !

 **WARNING:**

TO REDUCE THE RISK OF INJURY, ADULT SUPERVISION IS REQUIRED. NEVER USE IN ROADWAYS,NEAR MOTOR VEHICLES,ON OR NEAR STEEP INCLINES OR STEPS, SWIMMING POOLS OR OTHER BODIES OF WATER;USE THE TOY ONLY ON FLAT SURFACES, SUCH AS INSIDE YOUR HOUSE, SIDEWALKS, OR PLAYGROUND. ALWAYS WEAR SHOES, AND NEVER ALLOW MORE THAN 1 RIDER.



Customer Service:  
1-855-GIGGOTY (1-855-444-4689)  
customerservice@giggotoys.com