

Quick Installation Guide for IMAGO camera models:

ICN-11P1 NW 2.8

ICN-11P1 NW 2.8 W

ICN-31P1 NW 2.8

ICN-31P1 NW 2.8 W

Thank you for purchasing the Imago IP Camera. For its correct installation, follow this short instruction and user manual. You will thus contribute to the smooth operation and long life of the camera. If you have any questions during the installation or use of the product, contact the technical support of your supplier.

Package contents

- Camera
- Camera bracket
- Drill template
- Set of wall plugs (ø 6 mm) and screws
- Ethernet cable
- CD with recording software iVMS-4200, Camera Installation Wizard



Fig. 1: Package contents

Notice

- The camera should be stored in a dry environment
- Do not turn on the camera and do not work with voltage in a humid environment
- Do not install cameras in a high humidity environment
- Do not install your camera on unstable or vibrating surfaces or brackets
- To remove the camera housing, use the included tools
- Do not use excessive force during the installation – you might damage the device
- If water gets into the camera, immediately disconnect it from the network and voltage supply
- Do not touch the camera during a thunderstorm
- Do not insert any objects in the camera
- Do not perform any other mechanical modifications than those listed in this guide or user manual
- Do not replace / adjust components on the printed circuit board and wiring of connectors
- Do not use the camera with signs of damage or defects and/or with damaged cables
- Do not repair your camera yourself; in case of failure, contact the supplier of your camera
- Clean the camera with a cloth dampened with water - do not use chemicals, avoid abrasive materials when cleaning; to clean lenses use a clean dry cloth designed specifically for cleaning lenses and photo equipment
- Connect the camera using the UTP or STP cable category 5 or higher, with the RJ-45 connector
- The manufacturer is not liable for damages that were caused by unusual or unforeseeable circumstances and the force majeure
- Do not throw the camera in the trash; after the end of life of the equipment it is necessary to dispose of the product according to your applicable local law. Use the collection points for WEEE in your area, ensuring the environmentally friendly disposal or return the product to a vendor of electrical equipment

The physical installation of the camera

- The camera can be mounted on horizontal surfaces and vertical structures (ceilings, walls, etc.) Choose a location to install the camera
- Use a template to drill the mounting holes. When installing the camera on a brick structure, drill the wall plug holes of $\varnothing$ 6 mm and insert the wall plugs into the holes.
- Dismantle the camera bracket into 3 parts by unscrewing the leg of the bracket from its base - see Fig. 2
- Use the attached screws to fix the bracket base to the surface
- Assemble the bracket and tighten it by screwing the leg of the bracket
- Screw the camera to the leg of the bracket and secure it against turning by tightening the white plastic nut toward the camera - see Fig. 3 and Fig. 4
- On the leg of the bracket unscrew the 2-wing plastic nut, point the camera as desired and re-tighten the nut
- No need to focus the camera as it has been focused by the manufacturer
- Check the direction of the camera in a Web browser (see the next chapter) or adjust its direction - avoid the Sun in the camera view
- Connect the camera to a data switch using the UTP or STP cable with the RJ-45 end - the camera is powered via PoE - Power over Ethernet according to IEEE 802.3af standard; for power only use elements that meet this international standard
- If you do not have Power over Ethernet available, you can use the power adapter with the 12VDC/1A output (not included)



Fig. 2: Dismantled camera bracket



Fig. 3 Mounting the camera to the bracket



Fig. 4 Mounting the camera to the bracket

The first access to the camera

- After connecting the camera to the power supply and the data network the camera can be accessed via a web browser; the camera starts about 60 seconds.
- The default setting of the camera:
 - **IP address:** 192.0.0.64 (DHCP Client enabled)
 - **User name:** admin
 - **Password:** 12345
- The camera can be found on the network using the application of the recording software iVMS-4200 on the attached CD or can be downloaded at www.imago-video.com
- Run the installation file from the CD (as a standard iVMS-4200.exe), accept the license agreement and follow the instructions on the screen
- After installation run the software iVMS-4200 Client and log in - default login data:
 - User name: admin
 - Password: choose your own password when logging-in for the first time
- After logging in, use the "Settings" menu on the top bar and select the "Device Management"
- In the application a panel opens for configuring the devices managed by the recording software iVMS-4200
- In the upper left part click on the tab "Server" and select "DVR, IPC, Encoder" from the list
- In the bottom right part you will now see the available cameras on the network ("Online Device") - see Fig. 5

- Double click on the found camera to open setting basic network parameters of the camera according to the configuration of your network environment, enter the password for the user "admin" set in the camera, and save by pressing the "Confirm" button
- Open a Web browser and enter the IP address of the camera
- Enter the login data and click on the "Login" button
- After the first login you will be prompted to download and install the WebComponents addition that provides the stream display in browsers.
- Save the file (typically WebComponents.exe), close the browser, run the downloaded installation file and follow the on-screen instructions. After installation is complete, open the web browser again with the camera's IP address and enter login information. Now you can view the live image from the camera.

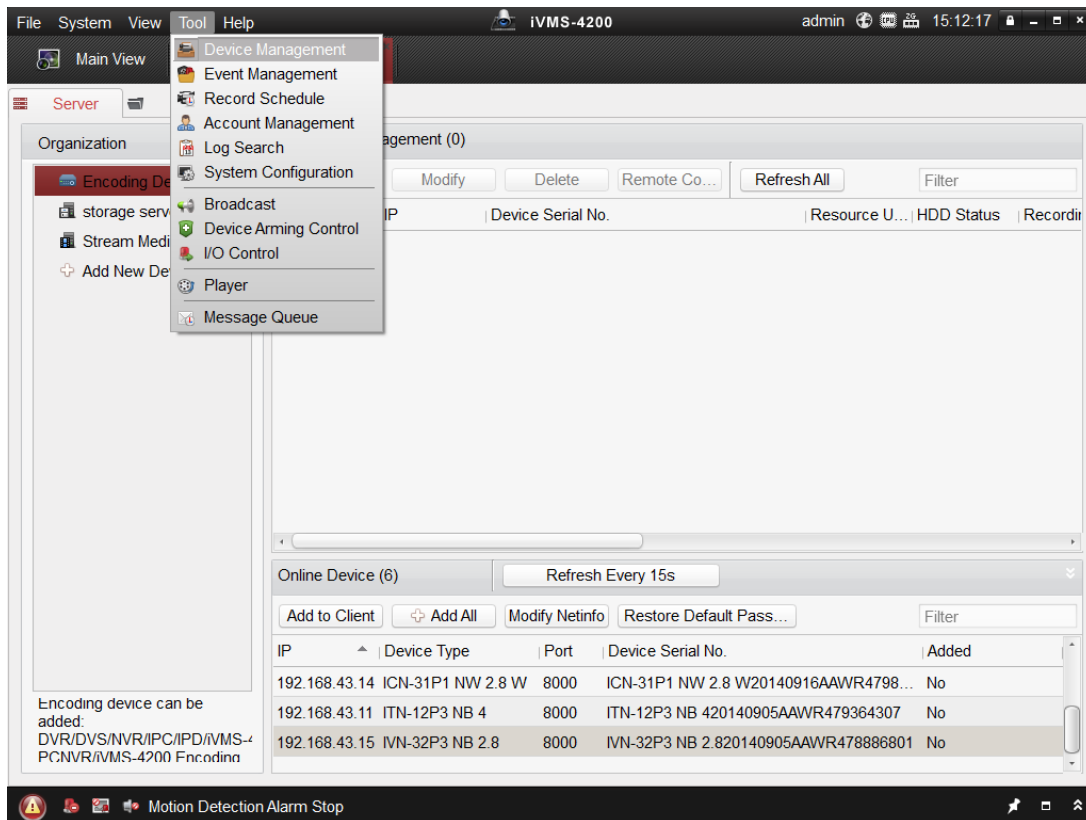


Fig. 5: Software iVMS-4200 – searching for camera in the network

Restoring the factory settings

- Disconnect the camera from the power supply
- Press and hold the "Reset" button which is located on the back of the camera
- Keep the button pressed and connect the camera to power supply
- Hold the reset button for at least 10 seconds and then release it
- After a while the camera will start with default parameters

We hope that you will be satisfied with the product. For general questions please contact your direct vendor.