

# F18 SERIES

# Service and Installation Manual

Please read this manual completely before attempting to install or operate this equipment! Notify carrier of damage! Inspect all components immediately. See page 2.











Refrigerated Work Tables, Salad Tables & Freezer Bases



Effective Date December 2007

# **Contents**

SERIAL NUMBER LOCATION	2
RECEIVING & INSPECTING	2
SPECIFICATIONS	3-5
INSTALLATION	6
OPERATION	6
CARE AND CLEANING	7
PRESSURE CONTROL SETTINGS	7
CONDENSING UNIT ASSEMBLY	8-9
MULLION COIL ASSEMBLY (REFRIGERATED).	10
MULLION COIL ASSEMBLY (FREEZER)	11
DRAWER ASSEMBLY: LOW PROFILE REFR, 2	& 3 HIGH12
CARTRIDGE STYLE DRAWER SYSTEMS	
DOOR ASSEMBLY: LOW PROFILE	
DOOR ASSEMBLY: MARK 7	15
LOUVERED DOOR ASSEMBLY	15
REPLACEMENT PARTS LISTS	16-19
WIRING DIAGRAMS	20
TROUBLESHOOTING REFERENCE CHART	21
WARRANTIES	22-23
AUTHORIZED PARTS DEPOTS	(back cover)

# **Serial Number Location**

The serial number on all self-contained F18 Series refrigerated work tables and freezer bases is located on the electrical specifications tag affixed inside the compressor section next to the pressure control.

On remote refrigerated bases with doors, the tag is inside the unit on the coil side. On remote refrigerated bases with drawers, the tag is affixed to the drawer divider. On remote freezer bases, the tag is located on the inside back of the unit.

Always have the serial number of your unit available when calling for parts or service. A complete list of authorized Delfield parts depots is shown on the back cover of this manual.

©2007 The Delfield Company. All rights reserved. Reproduction without written permission is prohibited. "Delfield" is a registered trademark of The Delfield Company.

# Receiving and Inspecting the Equipment

Even though most equipment is shipped crated, care should be taken during unloading so the equipment is not damaged while being moved into the building.

- 1. Visually inspect the exterior of the package an skid or container. Any damage should be noted and reported to the delivering carrier immediately.
- If damaged, open and inspect the contents with the carrier.
- In the event that the exterior is not damaged, yet upon opening, there is concealed damage to the equipment notify the carrier. Notification should be made verbally as well as in written form.
- Request an inspection of the concealed equipment.
   This should be done within 10 days from receipt of the equipment.
- 5. Check the lower portion of the unit to be sure legs or casters are not bent.

- Also open the compressor compartment housing and visually inspect the refrigeration package. Be sure lines are secure and base is still intact.
- 7. Freight carriers can supply the necessary forms upon request.
- Retain all crating material until an inspection has been made or waived.

### **Uncrating the Equipment**

First cut and remove the banding from around the crate. Remove the front of the crate material, use of some tools will be required. If the unit is on legs remove the top of the crate as well and lift the unit off the skid. If the unit is on casters it can be "rolled" off the skid.



Speci	fications							
MODEL NUMBER	# OF DOORS	STORAGE CU. FT.	SHELF AREA SQ. FT.	RECOMMENDED HORSE POWER	VOLTS/HERTZ/ PHASE	AMPS	BTU LOAD	EVAP. CAP. BTU/°TD
Remote Refr	igerated Work Tables	S						
F18WR31	(1) 19"	6.99	2.56	1/5	115/60/1	3.0	383	120
F18WR39	(1) 27"	9.77	3.95	1/5	115/60/1	3.0	465	120
F18WR44	(2) 19"	11.52	5.12	1/5	115/60/1	3.0	605	120
F18WR52	(1) 19" & (1) 27"	14.31	6.51	1/5	115/60/1	3.0	686	120
F18WR60	(2) 27"	18.85	7.90	1/4	115/60/1	3.0	768	120
F18WR70	(2) 32"	20.59	9.64	1/4	115/60/1	3.0	869	120
F18WR79	(2) 27" & (1) 19"	23.05	10.29	1/4	115/60/1	6.0	1050	240
F18WR87	(3) 27"	25.83	11.85	1/4	115/60/1	6.0	1131	240
MODEL NUMBER	# OF DOORS	STORAGE CU. FT.	SHELF AREA SQ. FT.	HORSE POWER	VOLTS/HERTZ/ PHASE	AMPS	BTU LOAD	BTU SYSTEM
Self-Contain	ed Refrigerated Worl	k Tables						
F18WC39	(1) 19"	6.99	2.56	1/5	115/60/1	8.0	383	1462
F18WC47	(1) 27"	9.77	3.95	1/5	115/60/1	8.0	465	1462
F18WC52	(2) 19"	11.52	5.12	1/5	115/60/1	8.0	605	1462
F18WC60	(1) 19" & (1) 27"	14.31	6.51	1/5	115/60/1	8.0	686	1462
F18WC68	(2) 27"	18.85	7.90	1/4	115/60/1	10.0	768	1462
F18WC78	(2) 32"	20.59	9.64	1/4	115/60/1	10.0	869	1994
F18WC87	(2) 27" & (1) 19"	23.05	10.29	1/4	115/60/1	10.0	1050	
F18WC95	(3) 27"	25.83	11.85	1/4	115/60/1	10.0	1131	2261
A 5-15P NEN	AA plug is used on se	elf-contained ur	iits					
MODEL NUMBER	# OF DOORS	STORAGE CU. FT.	# OF PANS	RECOMMENDED HORSE POWER	VOLTS/HERTZ/ PHASE	AMPS	BTU DESIGN BASE/RAIL	EVAP. CAP. BTU/°TD BASE/RAIL
Remote Refr	rigerated Mega Top S	alad Tables						
F18MR31A	(1) 19"	4.11	6	1/4	115/60/1	3.0	280/265	120/12
F18MR44A	(2) 19"	6.94	6	1/4	115/60/1	3.0	444/265	120/12
F18MR44D	(2) 19"	6.94	12	1/4	115/60/1	3.0	444/529	120/22
F18MR52A	(1) 19" & (1) 27"	8.69	6	1/3	115/60/1	3.0	515/265	120/12
F18MR52D	(1) 19" & (1) 27"	8.69	12	1/3	115/60/1	3.0	515/529	120/22
F18MR52E	(1) 19" & (1) 27"	8.69	18	1/3	115/60/1	3.0	515/794	120/31
MODEL NUMBER	# 0F DOORS	STORAGE CU. FT.	# OF PANS	HORSE POWER	VOLTS/HERTZ/ PHASE	AMPS	BTU DESIGN BASE/RAIL	BTU SYSTEM CAP. BASE/RAIL
Self-Contain	ed Refrigerated Meg	a Top Salad Ta	bles					
F18MC39A	(1) 19"	4.11	6	1/4	115/60/1	10.0	280/265	1903/925
F18MC39D	(1) 19"	4.11	12	1/4	115/60/1	10.0	280/529	1903/1156
F18MC52A	(2) 19"	6.94	6	1/4	115/60/1	10.0	444/265	1903/925
F18MC52D	(2) 19"	6.94	12	1/4	115/60/1	10.0	444/529	1903/1156
F18MC52E	(2) 19"	6.94	18	1/4	115/60/1	10.0	444/794	1903/1321
F18MC60A	(1) 19" & (1) 27"	8.69	6	1/4	115/60/1	10.0	515/265	2314/864
F18MC60D	(1) 19" & (1) 27"	8.69	12	1/4	115/60/1	10.0	515/529	2314/1141
F18MC60E	(1) 19" & (1) 27"	8.69	18	1/4	115/60/1	10.0	515/794	2314/1361
F18MC60F	(1) 19" & (1) 27"	8.69	24	1/4	115/60/1	10.0	515/1058	2314/1540
A 5-15P NEN	1A plug is used on se	elt-contained ur	nits					



Speci	fications								
MODEL	# OF		SHELF AREA	# OF	RECOMMENDED	VOLTS/HERTZ/		BTU DESIGN	EVAP. CAP.
NUMBER	DOORS		SQ. FT.	PANS	HORSE POWER	PHASE	AMPS	BASE/RAIL	BTU/°TD
Remote Ref	rigerated Salad Top 1	Tables -							
F18SR31A	(1) 19"		2.56	6	1/4	115/60/1	3.0	280/265	120
F18SR44A	(2) 19"		5.12	6	1/4	115/60/1	3.0	491/441	120
F18SR44B	(2) 19"		5.12	8	1/4	115/60/1	3.0	491/441	120
F18SR44C	(2) 19"		5.12	10	1/4	115/60/1	3.0	491/441	120
F18SR52A	(1) 19" & (1) 27"		6.51	6	1/4	115/60/1	3.0	532/529	120
F18\$R52B	(1) 19" & (1) 27"		6.51	8	1/4	115/60/1	3.0	532/529	120
F18SR52C	(1) 19" & (1) 27"		6.51	10	1/4	115/60/1	3.0	532/529	120
F18SR52D	(1) 19" & (1) 27"		6.51	12	1/4	115/60/1	3.0	532/529	120
MODEL NUMBER	# OF DOORS		SHELF AREA SQ. FT.	# OF PANS	HORSE POWER	VOLTS/HERTZ/ PHASE	AMPS	BTU DESIGN BASE/RAIL	BTU SYSTEM CAP. BASE/RAIL
	ned Refrigerated Sala	d Top Tabl							
F18SC39A	(1) 19"		2.56	6	1/4	115/60/1	10.0	280/265	1903/745
F18SC39B	(1) 19"		2.56	8	1/4	115/60/1	10.0	280/353	1903/867
F18SC52A	(2) 19"		5.12	6	1/4	115/60/1	10.0	444/265	1903/745
F18SC52B	(2) 19"		5.12	8	1/4	115/60/1	10.0	444/353	1903/867
F18SC52C	(2) 19"		5.12	10	1/4	115/60/1	10.0	444/441	1903/971
F18SC52D	(2) 19"		5.12	12	1/4	115/60/1	10.0	444/529	1903/1061
F18SC60A	(2) 19" & (1) 27"		6.51	6	1/4	115/60/1	10.0	515/265	2314/667
F18SC60B	(2) 19" & (1) 27"		6.51	8	1/4	115/60/1	10.0	515/353	2314/798
F18SC60C	(2) 19" & (1) 27"		6.51	10	1/4	115/60/1	10.0	515/441	2314/916
F18SC60D	(2) 19" & (1) 27"	olf contains	6.51	12	1/4	115/60/1	10.0	515/529	2314/1023
A 5-15P NEI	MA plug is used on so	en-comanic	eu umis						
MODEL NUMBER	# OF DOORS	STORAGE CU. FT.	SHELF AREA SQ. FT.	# OF PANS	RECOMMENDED HORSE POWER	VOLTS/HERTZ/ PHASE	AMPS	BTU DESIGN LOAD BASE/RAIL	EVAP. CAP. BTU/°TD
Remote Refi	rigerated Reduced He	eight Rail							
F18DR44	(2) 19"	9.49	5.12	10	1/4	115/60/1	3.0	547/441	120/19
F18DR52	(1) 19" & (1) 27"	11.81	6.51	12	1/3	115/60/1	3.0	625/529	120/23
F18DR60	(2) 27"	14.14	7.9	16	1/3	115/60/1	5.0	703/617	120/26
F18DR70	(2) 32"	17.05	9.64	18	1/2	115/60/1	5.0	800/794	120/32
F18DR79	(1) 19" & (2) 27"	18.68	10.29	18	1/2	115/60/1	5.0	962/882	240/36
F18DR87	(3) 27"	21.30	11.85	22	3/4	115/60/1	5.0	1032/970	240/39
MODEL NUMBER	# OF DOORS	STORAGE CU. FT.	SHELF AREA SQ. FT.	# OF PANS	HORSE POWER	VOLTS/HERTZ/ PHASE	AMPS	BTU LOAD BASE/RAIL	BTU SYSTEM CAP. BASE/RAIL
Self-Contain	ed Refrigerated Redu	iced Heigh	t Rail						
F18DC52	(2) 19"	9.49	5.12	12	1/4	115/60/1	10.0	547/529	1903/1061
F18DC60	(1) 19" & (1) 27"	11.81	6.51	14	1/3	115/60/1	12.0	625/617	2314/1121
F18DC68	(2) 27"	14.14	7.9	18	1/3	115/60/1	12.0	703/794	2314/1544
F18DC82	(2) 32"	17.05	9.64	20	1/2	115/60/1	14.0	800/882	3097/1648
F18DC91	(1) 19" & (2) 27"	18.68	10.29	22	1/2	115/60/1	14.0	962/1058	3807/1839
F18DC99	(3) 27"	21.30	11.85	24	3/4	115/60/1	16.0	1032/1147	5286/2191
A 5-15P NEN	/IA plug is used on F1	18RC52, F1	8RC60 & F18	RC68 . A	5-20P NEMA plu	ug is used on ,	F18RC8	2, F18RC91, &	F18RC99.



Cnoois	fications								
Speci	fications								
MODEL NUMBER	# 0F DOORS	STORAGE CU. FT.	SHELF AREA SQ. FT.	# OF PANS	RECOMMENDE HORSE POWER		AMPS	BTU DESIGN LOAD BASE/RAIL	EVAP. CAP. BTU/°TD
Remote Refr	igerated Reduced He	eight Rail							
F18RR44	(2) 19"	9.49	5.12	10	1/4	115/60/1	3.0	547/441	120/19
F18RR52	(1) 19" & (1) 27"	11.81	6.51	12	1/3	115/60/1	3.0	625/529	120/23
F18RR60	(2) 27"	14.14	7.9	16	1/3	115/60/1	5.0	703/617	120/26
F18RR70	(2) 32"	17.05	9.64	18	1/2	115/60/1	5.0	800/794	120/32
F18RR79	(1) 19" & (2) 27"	18.68	10.29	18	1/2	115/60/1	5.0	962/882	240/36
F18RR87	(3) 27"	21.30	11.85	22	3/4	115/60/1	5.0	1032/970	240/39
MODEL NUMBER	# OF DOORS	STORAGE CU. FT.	SHELF AREA SQ. FT.	# OF PANS	HORSE POWER	VOLTS/HERTZ/ R PHASE	AMPS	BTU LOAD BASE/RAIL	BTU SYSTEM CAP. BASE/RAIL
Self-Contain	ed Refrigerated Redu	ıced Height	Rail						
F18RC52	(2) 19"	9.49	5.12	12	1/4	115/60/1	10.0	547/529	1903/1061
F18RC60	(1) 19" & (1) 27"	11.81	6.51	14	1/3	115/60/1	12.0	625/617	2314/1121
F18RC68	(2) 27"	14.14	7.9	18	1/3	115/60/1	12.0	703/794	2314/1544
F18RC82	(2) 32"	17.05	9.64	20	1/2	115/60/1	14.0	800/882	3097/1648
F18RC91	(1) 19" & (2) 27"	18.68	10.29	22	1/2	115/60/1	14.0	962/1058	3807/1839
F18RC99	(3) 27"	21.30	11.85	24	3/4	115/60/1	16.0	1032/1147	5286/2191
A 5-15P NEW	1A plug is used on F1	8RC52, F18	BRC60 & F18R	C68 . <i>I</i>	A 5-20P NEMA	plug is used on	, F18RC8	2, F18RC91, &	F18RC99.
MODEL NUMBER	# OF DOORS	STORAGE CU. FT.	SHELF AR SQ. FT.		COMMENDED DRSE POWER	VOLTS/HERTZ/ PHASE	AMPS	BTU LOAD	EVAP. CAP. BTU/°TD
Remote Free	zer Base								
F18FR35	(1) 19"	5.58	2.56		1/3	115/60/1	10.0	943	160
F18FR50	(2) 19"	12.21	5.12		1/2	115/60/1	10.0	1471	160
F18FR58	(1) 19" & (1) 27"	15	6.51		3/4	115/60/1	10.0	1844	160
F18FR66	(2) 27"	17.79	7.9		3/4	115/60/1	10.0	2020	160
F18FR76	(2) 32"	21.28	9.64		3/4	115/60/1	10.0	2437	160
MODEL NUMBER	# OF DOORS	STORAGE CU. FT.	SHELF AR SQ. FT.		ORSE POWER	VOLTS/HERTZ/ PHASE	AMPS	BTU LOAD	EVAP. CAP. BTU/°TD
Self-Contain	ed Freezer Base								
F18FC43	(1) 19"	5.58	2.56		1/3	115/60/1	10.0	943	1558
F18FC62	(2) 19"	12.21	5.12		1/2	115/60/1	12.0	1471	1776
F18FC70	(1) 19" & (1) 27"	15	6.51		3/4	115/60/1	16.0	1647	2713
F18FC78	(2) 27"	17.79	7.9		3/4	115/60/1	16.0	1824	2713
F18FC88	(2) 32"	21.28	9.64		3/4	115/60/1	16.0	2045	2713
A 5-15P NEW	1A plug is used on F1	8FC43 & F1	18FC62. A 5-2	OP NEI	/IA plug is use	d on F18FC70, F	18FC78 &	F18FC88.	



# Installation

#### Location

Be sure the location chosen has a floor strong enough to support the total weight of the cabinet and contents. A fully loaded 72" long model may weigh as much as 1500 pounds! Reinforce the floor as necessary to provide for maximum loading.

It is very important to allow for proper air flow, both inside and outside.

Avoid hot corners and locations near stoves, ovens and other pieces of cooking equipment.



It is recommended that the unit be installed no closer than 1" from any wall. Do not install the unit near any combustible material or object affected by heat or moisture.

Leveling

A level cabinet looks better and will perform better because the drain pan will drain properly, the doors will line up with the frames properly, and the cabinet will not be subject to undue strain.

A unit on legs will have an adjustable bullet foot on each leg, adjust each for a level unit. A unit on casters will not be adjustable. Be sure the unit is on a level floor, make necessary changes to the floor for proper level.

Lock all front casters to ensure the stability of the unit.

### **Plumbing**

Self-contained models are standard with a condensate evaporator. If, for some reason a unit does not have a condensate evaporator, or if the evaporator fails, the unit's drain must have an outlet to an appropriate drainage area or container. A refrigerated rail will have a 1" drain which will need to be run to an appropriate floor drain or container. The drain will be stubbed to the bottom of the machine compartment. Either run drain to a floor drain or add a valve to the base of the machine compartment and drain the rail to a container when convenient. The LiquiTec option will NOT have a drain available.



Moisture collecting from improper drainage can create a slippery surface on the floor and a hazard to employees. It is the owner's and operator's responsibility to provide a container or outlet for drainage.

### **Electrical connection**

Refer to the amperage data on pages 3-5, the serial tag, your local code or the National Electrical Code to be sure the unit is connected to the proper power source. A protected circuit of the correct voltage and amperage must be run for connection of the line cord, or permanent connection of the unit.

Self-contained units with a cord and plug have an ON/OFF switch located directly behind the louvered panel covering the compressor section. Simply turn the switch to **ON** to begin operation.



The power switch must be turned to OFF and the unit disconnected from the power source whenever performing service or maintenance functions.

Never operate the unit without the louvered panel in place!

If electrical receptacles are to be mounted in the unit's backsplash, they must be wired independently from the existing unit wiring.

# Operation

After turning the **ON/OFF** switch to **ON** the unit's compressor will begin operating. Delfield refrigerated bases are designed to maintain an operational temperature of 36°F to 40°F. Temperature in the salad top and refrigerated rail opening is 33°F to 41°F with pans recessed 3" on a standard wrapped refrigerated rail or flush with the LiquiTec option at 86°F ambient room temperature. Freezer bases are designed to maintain an operational temperature of 0°F.



Do not place hot pans on/against the blue ABS liner. Do not throw items into the storage area. Failure to heed these recommendations could result in damage to the interior of the cabinet or to the blower coil.

Overloading the storage area, restricting the air flow, and continuous opening and closing of the doors and drawers will hamper the units ability to maintain operational temperature.

### Refrigerated rail units

Product in the rail should be removed to the refrigerated base



at the end of the day. This allows you to turn the rail off at night to save energy and the rail will have time to defrost as needed. It also helps maintain product quality. The standard wrapped refrigerated units are controlled by the pressure control which

is set to maintain the proper rail temperature an on/off switch is also provided for the rail and is required to be shut off at night. The rail switch shuts off the rail only. With a LiquiTec rail a thermostat is provided to maintain rail temperature as well as the rail on/off switch. The LiquiTec rail is required to be shut off at night as well to allow for defrosting. To ensure product quality in the rail it is recommended that product be rotated every four hours.



If adding any item to the unit, be sure to keep in mind the location of the refrigeration lines on wrapped rail units. A refrigeration leak in a rail DANGER is extremely difficult and costly to repair. In some

cases it cannot be repaired at all.



# **Care and Cleaning**

### Cleaning the cabinet

The interior and exterior can be cleaned using soap and warm water. If this is not sufficient, try ammonia and water or nonabrasive liquid cleaner. When cleaning the exterior, always rub with the "grain" of the stainless steel to avoid marring the finish. Do not use an abrasive cleaner because it will scratch the stainless steel and plastic.

The interior of the cabinet should be cleaned daily with a nonabrasive cleaner and a nonabrasive pad. If necessary, a mild abrasive may be used on the interior of the pans only. Never use steel wool. No drains are provided with rails, after defrosting water will accumulate in the rail. This will need to be cleaned out thoroughly before restarting the rail as it will freeze and severely reduce the efficiency of the rail.

### Cleaning the condenser

In order to maintain proper refrigeration performance, the condenser fins must be cleaned of dust, dirt and grease regularly. It is recommended that this be done at least every three months. If conditions

are such that the condenser is totally blocked in three months, the frequency of cleaning should be increased. Clean the condenser with a vacuum cleaner or stiff brush. If extremely dirty, a commercially available condenser cleaner may be required.

### Cleaning door gaskets

Door gaskets should be cleaned as required to maintain their ability to seal properly. Do not use sharp tools or knives to scrape the bellows as this may tear the gasket and eliminate its ability to seal. A soft bristle brush and solution of soap and water should be all that is required to keep the gaskets clean. Do not use full strength degreasing agents on the gasket because they could cause the gasket to become brittle and crack.



Consistent cleaning of the coil will enhance the operation of the unit by reducing energy consumption as well as extend the life of the compressor.

### Preventing blower coil corrosion

To help prevent corrosion of the blower coil, store all acidic items, such as pickles and tomatoes, in sealable containers. Immediately wipe up all spills of items.

# Pressure Control Settings

Factory recommended low-pressure control settings are:

**HFC-404A** refrigerators: 85# cut-in and 65# cut-out to

maintain approximate interior temperature of 38°F. Differential setting of 20#.

HFC-404A freezers: 32# cut-in and 8# cut-out to

maintain approximate interior temperature of 0°F to 5°F. Differential setting of 24#.


### HFC-404A refrigerators with LiquiTec Rail:

20# cut-in and 10# cut-out to Differential setting of 10# Temperature control for LiquiTec Rail, 25°F cut in and

18°F cut-out.




Pressure control settings are measured in pounds, not fahrenheit.

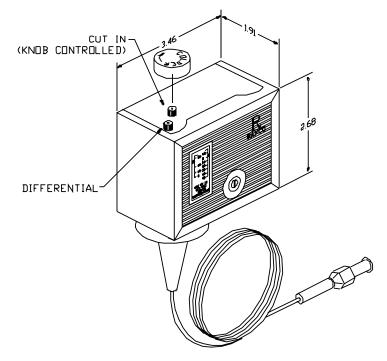



# **Coil Assembly - refrigerators**

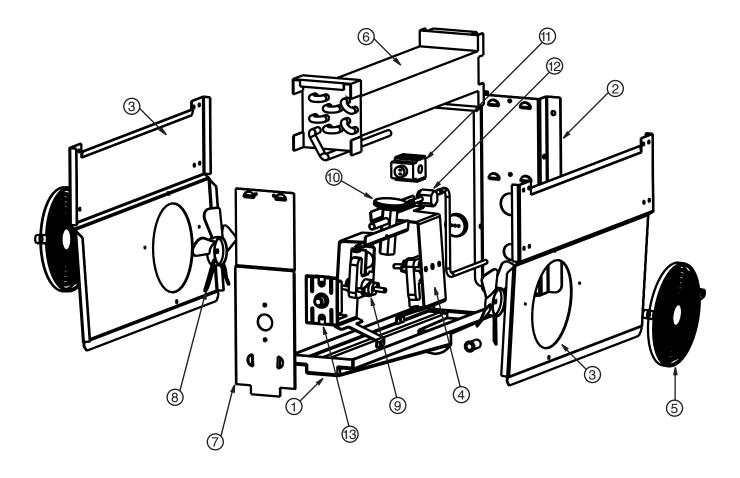

KEY	DELFIELD Part#	DESCRIPTION
1	PMK00036	pan, drip, evap. coil, refg.
2	AMK00012	coil back
3	AMK00011	coil side
4	SMK00285	bracket, mounting, fan, evap, coil
5	3516173	guard, fan, 6.38" dia., lexan
6	3516095	coil, evap.
7	AMK00013	coil front
8	3516172	blade, fan 5.56, CCW, lexan, clear
9	2162691	motor, fan, 115V
10	3516273	valve, expansion, 1/4, hi, R-404A
11	3516103	solenoid coil
12	3516102	solenoid valve
13	2194536	thermostat

### XMK00107 EVAPORATOR COIL ASSEMBLY

 $\operatorname{\textsc{Coil}}$  assembly is standard with above parts, less solenoid  $\operatorname{\textsc{coil}}$  , solenoid valve and thermostat.

Unit: F18WC

### XMK00108 EVAPORATOR COIL ASSEMBLY


Coil assembly is standard with above parts less the thermostat. Unit: F18DC91 & 99; F18DR79 & 97; F18RC91 & 99; F18WR79 & 87

#### XMK00109 EVAPORATOR COIL ASSEMBLY

Coil assembly is standard with above parts less the thermostat. Unit: all other refrigeration units, except those listed for XMK00107. This assembly is also used in conjunction with units listed for XMK00108.



# Mullion Coil Assembly: Freezers

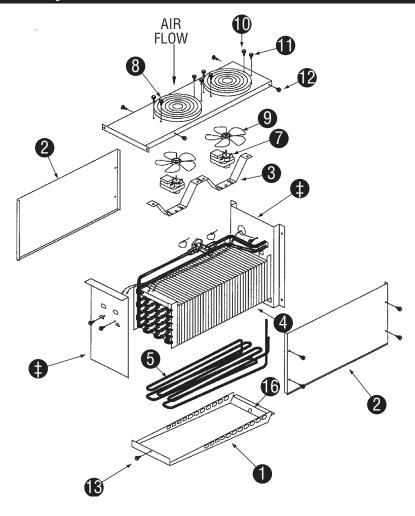


KEY	DELFIELD Part#	DESCRIPTION			
1	SMK00162	pan, drip, freezer mullion coil			
‡	AMK00004	back, evap housing			
2	AMK00002	side, evap. hsng., LH			
3	AMK00005	bracket, fan motor, blower coil			
4	3516073	coil, evap., freezer			
5	2194034	heater, defrost			
‡	AMK00000	front, evap housing			
6	2183310	harness, coil, freezer, male			
7	2162691	motor, fan, 115V, 50/60			
8	3516173	guard, fan, 6.38" dia, lexan			
9	3516172	blade, fan, 5.56, CCW, lexan			
10	9321353	screw, #10x0.50			
11	9321353	screw, machine, #10			
12	9321238	screw, #8x.75			
13	9321131	screw #10 x .50			
14	3516271	valve, expansion, 1/4, low, R-4040A			
15	2194046	control, limit, fan delay/defrst (not shown)			
16	Need to order dri	Need to order drip pan to get 1" s/s drain (not shown)			

Used on: F18FC and F18FR


NOTE: Non-numbered items with "‡" not sold separately — available only with complete assembly — XMK00061.




Low Profile Refrigerated Drawer Assembly (32" Shown)

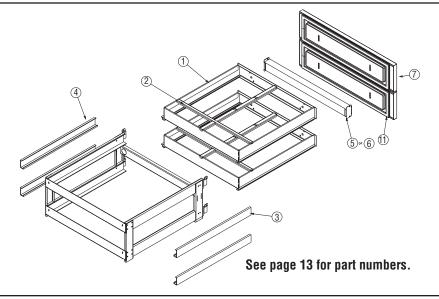

2 High-Mark 7 Refrigerated Drawer Assembly (32" Shown)

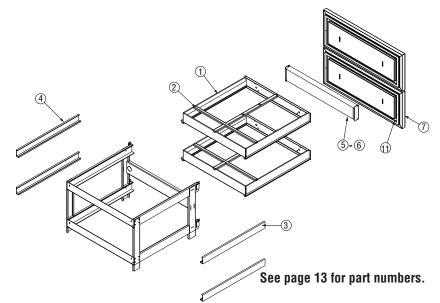

3 High-Mark 7 Refrigerated Drawer Assembly (32" Shown)

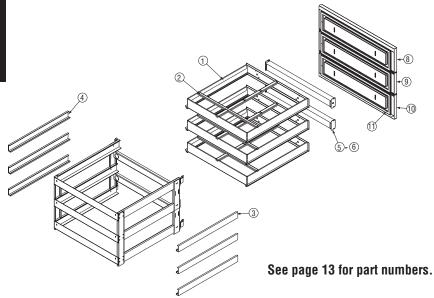



# **Cartridge Style Drawer Systems**

See page 12 for blow-out model diagram.

	Refrigerator *Cartridge assy	Freezer *Cartridge assy	Cartridge only (no fronts, no m	1 Drawer box Jullions)	2 Divider Bar(s)	3 Intermediate Left Track	4 Intermediate Right Track
32" lo profile	000-aew-0030	000-aew-003a	RF700100	000-333-0034	264-018-0032, 264-018-0034	3234504	3234492
27" lo profile	000-aew-0031	000-aew-003b	RF700101	000-333-0035	264-018-0033	3234517	3234509
24" lo profile	000-aew-0032	000-aew-003c	RF700102	000-333-0036	264-018-0036, 264-018-0037	3234504	3234492
19" lo profile	000-aew-0033	000-aew-003d	RF700103	000-333-0037	**264-018-0038	3234504	3234492
32" 3 high mk7	000-aew-0034	000-aew-003e	RF700104	000-333-0034	264-018-0032, 264-018-0034	3234504	3234492
27" 3 high mk7	000-aew-0035	000-aew-003f	RF700105	000-333-0035	264-018-0033	3234517	3234509
24" 3 high mk7	000-aew-0036	000-aew-003g	RF700106	000-333-0036	264-018-0036, 264-018-0037	3234504	3234492
19" 3 high mk7	000-aew-0037	000-aew-003h	RF700107	000-333-0037	**264-018-0038	3234504	3234492
32" 2 high mk7	000-aew-0038	000-aew-003i	RF700108	000-333-0034	264-018-0032, 264-018-0034	3234504	3234492
27" 2 high mk7	000-aew-0039	000-aew-003j	RF700109	000-333-0035	264-018-0033	3234517	3234509
24" 2 high mk7	000-aew-0040	000-aew-003k	RF700110	000-333-0036	264-018-0036, 264-018-0037	3234504	3234492
19" 2 high mk7	000-aew-0041	000-aew-003l	RF700111	000-333-0037	**264-018-0038	3234504	3234492


	5	6	7	8	9	10	11
	Refrigerator Mullion	Freezer Mullion	Drawer front assy	Drawer front assy, top	Drawer front assy, middle	Drawer front assy, bottom	Gasket
32" low profile	000-315-0033	000-315-003b	000-328-0033	na	na	na	1701197
27" low profile	000-315-0032	000-315-003a	000-328-0032	na	na	na	1701196
24" low profile	000-315-0031	000-315-0039	000-328-0031	na	na	na	1701195
19" low profile	000-315-0030	000-315-0038	000-328-0030	na	na	na	1701194
32" 3 high mk7	000-315-0033	000-315-003b	na	000-328-0037	000-328-0033	000-328-003b	1701197
27" 3 high mk7	000-315-0032	000-315-003a	na	000-328-0036	000-328-0032	000-328-003a	1701196
24" 3 high mk7	000-315-0031	000-315-0039	na	000-328-0035	000-328-0031	000-328-0039	1701195
19" 3 high mk7	000-315-0030	000-315-0038	na	000-328-0034	000-328-0030	000-328-0038	1701194
32" 2 high mk7	000-315-0037	000-315-003f	000-327-0033	na	na	na	1701193
27" 2 high mk7	000-315-0036	000-315-003e	000-327-0032	na	na	na	1701192
24" 2 high mk7	000-315-0035	000-315-003d	000-327-0031	na	na	na	1701191
19" 2 high mk7	000-315-0034	000-315-003c	000-327-0030	na	na	na	1701190

<sup>\*</sup>Complete cartridge assembly includes: cartridge, drawer boxes, drawer fronts, and mullion.



<sup>\*\*264-018-0038:</sup> Divider bar can also be used in all drawer boxes for 1/6 size pan applications.

# **Door Assembly: Low Profile**

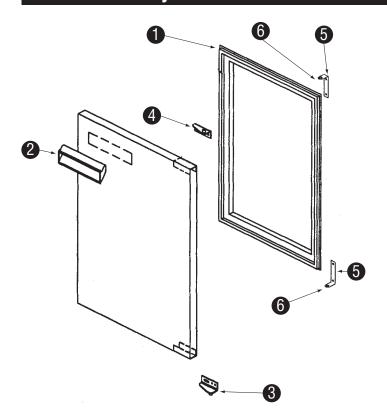


Low	Profile	
KEY	DELFIELI Part#	DESCRIPTION
	XMK00005	complete door assy. 19", 18.75" x 15.72"
	XMK00006	complete door assy. 24", 23.75" x 15.72"
	XMK00007	complete door assy. 27", 26.75" x 15.72"
1	1701187	gasket, door, 19"
	1701188	gasket, door 24"
	1701189	gasket, door, 27"
2		handle, snap-in, 7" (not replaceable)
3	3234214	hinge, door, top/LH, bottom/RH
4	3234218	hinge, door, top/RH, bottom/LH
5	3234391	hinge, door, L-shaped
6	9321107	bushing, nylon, hinge pin

Used on: F18SC, F18SR, F18MC & F18MR

NOTE: Indicate if door is left or right hinged when ordering.



# Door Assembly: Mark 7

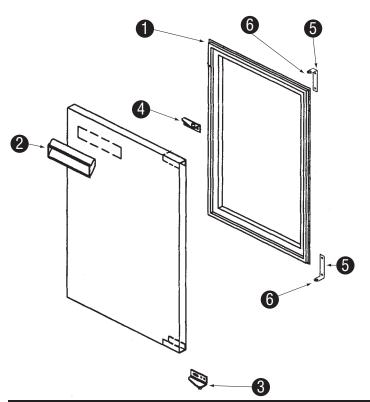


Mark	7	
KEY	DELFIELD Part#	DESCRIPTION
	XMK00001	complete door assy. 19", 18.75" x 25.72"
	XMK00002	complee door assy. 24", 23.75" x 25.72"
	XMK00003	complete door assy. 27", 26.75" x 25.72"
	XMK00004	complete door assy. 32", 31.75" x 25.72"
1	1701183	gasket, door, 19"
	1701184	gasket, door 24"
	1701185	gasket, door, 27"
	1701186	gasket, door, 32"
2	3234255	handle, snap-in, 7"
3	3234072	hinge, door, top/LH, bottom/RH
4	3234073	hinge, door, top/RH, bottom/LH
5	3234391	hinge, door, L-shaped
6	9321107	bushing, nylon, hinge pin

Used on: F18WR, F18WC, F18FC, F18FR, F18DR, F18RC & F18RR

NOTE: Indicate if door is left or right hinged when ordering.

# **Louvered Door Assembly**

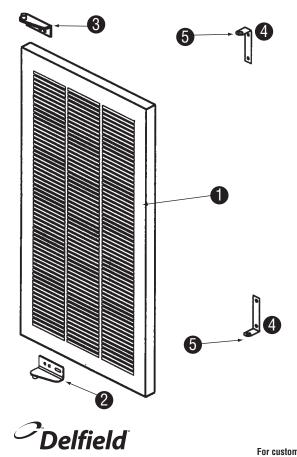

KEY	DELFIELD Part#	DESCRIPTION
	XMK00118	complete louvered door assembly, 14"
	XMK00120	complete louvered door assembly, 18"
1	SMK00507	front, door, 14"
	SMK00446	front, door, 18"
2	3234073	hinge, door, top/RH, bottom/LH
3	3234072	hinge, door, top/LH, bottom/RH
4	3234391	hinge, door, L-shaped
5	9321107	bushing, nylon, hinge pin
6	SMK00771	bracket, magnetic catch (not shown)
7	3234156	catch, magnetic, snap-in (not shown)
8	3234191	strike, steel (not shown)

Used on: F18SC, F18SR, F18MC, F18MR, F18DC, F18DR, F18RC & F18RR

KEY	DELFIELD Part#	DESCRIPTION
NOT SHOWN	l - Clip on style louver	
	SMK00039	13.94" x 26.34"
	SMK00041	17.94" x 26.34"

Used on: F18FC, F18WR,

# **PARTS LISTING**

For component parts: Condensing units - see page 8 Evaporator assy. - see pages 10-11 Door and drawer assy. - see 12 thru 15.

#### F18DC SERIES STANDARD PARTS

1701000 Cutting Board Pin Cap 2183348 Cord/plug assembly 2190154 On/Off Switch 2193927 Low pressure control 3234266 Pan cover hinge - right 3234282 Pan cover hinge D left 3234290 Support shelf plastic 3234392 Double hinge pan cover 3234645 Leg 3516135 Thermometer 3516101 Filter dryer 3516225 Expansion valve - Rail 9321041 Acorn Nut for pan cover hinge 9321132 Dog point stud 9321136 Cutting Board Pin 9321374 Salad pan cover pin hinge

# ADDITIONAL PARTS

000-402-0045 Removable hinged 12 pan cover XMK00001 19" Door Assembly XMK00109 Evaporator Coil Assembly XMK00118 Complete Louver Assembly 3977984 Wire shelf

#### F18DC60

000-402-003T Removable hinged 6 pan cover 000-402-003X Removable hinged 8 pan cover SMK00776 Center divider bar XMK00001 19" Door Assembly XMK00003 27" Door Assembly XMK00109 Evaporator Coil Assembly XMK00118 Complete Louver Assembly 3977984 Wire shelf 19" 3978014 Wire shelf 27"

#### F18DC68

000-402-003X Removable hinged 8 pan cover XMK00003 27" Door Assembly XMK00109 Evaporator Coil Assembly XMK00118 Complete Louver Assembly 3234392 Double hinge pan cover 3978014 Wire shelf 27"

#### F18DC72

000-402-003X Removable hinged 8 pan cover 000-402-0041 Removable hinged 10 pan cover XMK00003 27" Door Assembly XMK00109 Evaporator Coil Assembly XMK00120 Complete Louver Assembly 3978014 Wire shelf 27"

#### F18DC82

SMK00776 Center divider bar 000-402-0041 Removable hinged 10 pan cover XMK00004 32" Door Assembly XMK00109 Evaporator Coil Assembly XMK00120 Complete Louver Assembly 3977983 Wire shelf 32"

#### F18DC91

000-402-0041 Removable hinged 10 pan cover 000-402-0045 Removable hinged 12 pan cover XMK00001 19" Door Assembly XMK00003 27" Door Assembly XMK00108 Evaporator Coil assy. W/ Solenoid XMK00109 Evaporator Coil Assembly XMK00120 Complete Louver Assembly 3977984 Wire shelf 19" 3978014 Wire Shelf 27"

#### F18DC99

SMK00776 Center divider bar 000-402-0045 Removable hinged 12 pan cover XMK00003 27" Door Assembly XMK00108 Evaporator Coil assy. W/ Solenoid XMK00109 Evaporator Coil Assembly XMK00120 Complete Louver Assembly 3978014 Wire Shelf 27"

#### F18DR SERIES STANDARD PARTS

1701000 Cutting board pin

2190154 Rocker switch

2194201 Rail Thermostat

3234282 Left end pan cover hinge

3234266 Right end pan cover hinge
3234392 Double (center) hinge pan cover
3234290 Plastic support shelf
3234645 Leg
3516101 Filter dryer
3516102 Solenoid valve
3516135 Thermometer
3516225 Expansion valve (rail)
9321041 Acorn Nut for Salad pan Cover pin
9321132 Long dog-point stud
9321136 Cutting board pin
9321374 Salad pan cover pin hinge

#### ADDITIONAL PARTS F18DR44

000-402-0041 Removable hinged 12 pan cover XMK00001 19" Door Assembly XMK00009 Evaporator Coil Assembly 3977984 19" Wire Shelf

#### F18DR52

000-402-0045 Removable hinged 12 pan cover XMK00001 19" Door Assembly XMK00003 27" Door Assembly XMK00109 Evaporator Coil Assembly 3977984 19" Wire shelf 3978014 27" Wire Shelf

#### F18DR60

SMK000776 Center divider bar 000-402-003T Removable hinged 6 pan cover 000-402-003X Removable hinged 8 pan cover XMK00003 27" Door Assembly XMK00109 Evaporator Coil Assembly 3978014 Wire shelf 27"

#### F18DR70

000-402-003X Removable hinged 8 pan cover XMK00004 32" Door Assembly XMK00109 Evaporator Coil Assembly 3977983 Wire shelf 32"

#### F18DR79

SMK00776 Center divider bar 000-402-0041 Removable hinged 10 pan cover XMK00001 19" Door Assembly XMK00003 27" Door Assembly XMK00108 Evaporator Coil Assembly w/solenoid XMK00109 Evaporator Coil Assembly 3977984 19" wire shelf 3978014 27" wire shelf

#### F18DR87

SMK00776 Center divider bar 000-402-0041 Removable hinged 10 pan cover 000-402-0045 Removable hinged 12 pan cover XMK00003 27" Door Assembly XMK00108 Evaporator Coil Assembly w/solenoid XMK00109 Evaporator Coil Assembly 3977984 Wire shelf 19" 3978014 Wire Shelf 27"

#### F18FC SERIES STANDARD PARTS

XMK00061 Coil assembly freezer
XMK00065 Evap. condensate pan and heater
2193927 Low pressure control
2194046 Fan delay/defrost control limit
2194199 Heating cond. evap. element
2194151 Defrost timer
2194235 Heater safety switch
3234290 Plastic support shelf
3234645 Leg
3516101 Filter dryer
3516135 Thermometer
9321040 Spot stud
9321132 Long dog-point stud

# ADDITIONAL PARTS F18FC43 SERIES

SMK00039 Clip on Louver XMK00001 19" Door Assembly 2183348 Cord plug assy. 3977984 Shelf 19"

#### F18FC62 SERIES

SMK00039 Louver Assembly XMK00001 19" Door Assembly 2183348 Cord plug assy. 3977984 19" Wire shelf

#### F18FC70 SERIES

SMK00041 Louver Door Assembly XMK00001 19" Door Assembly XMK00003 27" Door Assembly 2183347 Cord/Plug Assembly 3977984 19" Wire shelf 3978014 27" Wire shelf

#### F18FC78 SERIES

SMK00041 Louver Assembly XMK00003 27" Door Assembly 2183347 Cord/Plug Assembly 3978014 Wire shelf



#### F18FC88 SERIES

SMK00041 Louver Assembly XMK00004 32" Door Assembly 2183347 Cord/Plug Assembly 3977983 Wire shelf

#### F18FR SERIES STANDARD PARTS

XMK00061 Coil assembly freezer 2194046 Fan delay/defrost control limit 2194151 Defrost timer 2194235 Heater safety switch 3234290 Plastic support shelf 3234645 Leg 3516135 Thermometer 9321040 Spot stud 9321132 Long dog-point stud

#### ADDITIONAL PARTS F18FR35 and F18FR50 SERIES

XMK00001 Door Assembly 3977984 19" Wire shelf

#### F18FR58 Series

XMK00001 19" Door Assembly XMK00003 27" Door Assembly 3977984 19" Wire shelf 3978014 27" Wire shelf

#### F18FR66 SERIES

XMK00004 32" Door Assembly 3977983 32" Wire shelf

#### F18FR76 SERIES

XMK00004 32" Door Assembly 3977983 32" Wire Shelf

#### F18MC SERIES STANDARD PARTS

XMK00005 19" Lo Profile Door Assembly XMK00109 Evaporator Coil Assembly XMK00118 Louver Assembly 2183348 Cord/plug assy. 2190154 On/Off Switch 2193927 Low pressure control 3234266 Right end pan cover hinge 3234282 Left end pan cover hinge 3234392 Double (center) hinge pan cover 3234645 Leg 3516101 Filter dryer 3516135 Thermometer 9321041 Chrome plated acorn nut 9321136 Holding for cutting board pin 9321374 Salad pan cover pin hinge

#### **ADDITIONAL PARTS** F18MC39A Series

000-402-003G 6 Pan Cover XMK00005 19" Lo Profile Door Assembly

### F18MC39D Series

000-402-003I 12 Pan Cover XMK00005 19" Lo Profile Door Assembly

### F18MC52A Series

000-402-003G 6 Pan Cover XMK00005 19" Lo Profile Door Assembly

#### F18MC52D Series

000-402-003I 12 Pan Cover XMK00005 19" Lo Profile Door Assembly

#### F18MC52E Series

00-402-003K 18 Pan Cover XMK00005 19" Lo Profile Door Assembly

#### F18MC60A Series

000-402-003G 6 Pan Cover XMK00005 19" Lo Profile Door Assembly XMK00007 Đ 32" Door Assembly

#### F18MC60D Series

XMK00005 19" Lo Profile Door Assembly XMK00007 Đ 32" Door Assembly 000-402-003I 12 Pan Cover

#### F18MC60E Series

000-402-003K 18 Pan Cover XMK00005 19" Lo Profile Door Assembly XMK00007 D 32" Lo Profile Door Assembly

#### F18MR SERIES STANDARD PARTS

XMK00109 Evaporator Coil Assembly 1701000 Cutting board pin cap 2190154 On/Off switch 2194201 Thermostat rail 3234266 Right end pan cover hinge 3234282 Left end pan cover hinge 3234392 Double (Center) cover hinge 3234645 Leg 3516135 Thermometer 3516225 Expansion valve 9321136 Holding for cutting board pin 9321374 Salad pan cover pin hinge 9321041 Chrome plated acorn nut ADDITIONAL PARTS F18MR31A & F18MR44A

000-402-003G 6 Pan Cover

XMK00005 19" Lo Profile Door Assembly

#### F18MR44D

000-402-003I 12-pan hinged removable cover XMK00005 19" Lo Profile Door Assembly

#### F18MR52A & F18MR52D

000-402-003G Hinged Removable 6 pan Cover XMK00005 19" Lo Profile Door Assembly XMK00007 27" Lo Profile Door Assembly

#### F18MR52E

000-402-003K 18-pan hinged removable cover XMK00005 19" Lo Profile Door Assembly XMK00007 27" Lo Profile Door Assembly

#### **F18RC SERIES** STANDARD PARTS

1701000 Cutting board pin 2190154 On/Off switch 2193927 Pressure control 3234266 Right pan cover end hinge 3234282 Left pan cover end hinge 3234290 Plastic plug shelf support 3234392 Double (Center) cover hinge 3234645 Leg 3516101 Filter dryer 3516135 Hanging 4" thermometer 3516225 Expansion valve 9321040 Stud spot 9321041 Chrome plated acorn nut 9321132 Long stud dog-point 9321136 Holding for cutting board pin 9321374 Salad pan cover pin hinge

### **ADDITIONAL PARTS**

#### F18RC52

000-402-0045 Hinged Removable Cover XMK00001 19" Door Assembly XMK00109 Evaporator Coil Assembly XMK00118 Louver Assembly 2183348 Cord/plug assembly 3977984 Wire shelf 19"

#### F18RC60

000-402-003X 8-pan hinged removable cover 000-402-003T 6-pan hinged removable cover SMK00776 Center divider bar XMK00001 19" Door Assembly XMK00003 27" Door Assembly XMK00109 Evaporator Assembly XMK00118 Louver Assembly 2183348 Cord/plug assembly 3977984 19" Wire Shelf 3978014 27" Wire Shelf

#### F18RC68

000-402-003X 8-pan hinged removable cover 000-402-003T 6-pan hinged removable cover SMK00776 Center divider bar XMK00003 27" Door Assembly XMK00109 Evaporator Assembly XMK00118 Louver Assembly 2183348 Cord/plug assembly 3978014 27" Wire Shelf

#### F18RC72

000-402-0041 10-pan hinged removable cover 000-402-003X 8-pan hinged removable cover XMK00003 27" Door Assembly XMK00109 Evaporator Assembly XMK00120 Louver Assembly 2183347 Cord/Plug Assembly 3978014 27" Wire Shelf

000-402-0041 10-pan hinged removable cover XMK00004 32" Door Assembly XMK00109 Evaporator Assembly XMK00120 Louver Assembly 2183347 Cord/Plug Assembly 3977983 32" Wire Shelf



#### F18 Series Service and Installation Manual

#### F18RC91

000-402-0041 10-pan hinged removable cover 000-402-0045 12-pan hinged removable cover XMK00003 27" Door Assembly XMK00108 Evaporator Assembly XMK00109 Evaporator Assembly XMK00120 Louver Assembly 2183347 Cord/Plug Assembly 3978014 27" Wire Shelf

#### F18RR SERIES STANDARD PARTS

1701000 Cutting board pin
2190154 Rocker switch
3234266 Right end pan cover hinge
3234282 Left end pan cover hinge
3234290 Plastic plug shelf support
3234292 Double pan cover hinge
3234645 Leg
3516103 Solenoid coil spade term.
3516102 Solenoid valve
3516135 Hanging 4" thermometer
9321040 Stud spot
9321041 Acorn Nut for Pan cover hinge
9321132 Long stud dog-point
9321374 Salad pan cover hinge pin

XMK00109 Evaporator Coil Assembly

#### ADDITIONAL PARTS F18RR44 SERIES

000-402-0041 Removable 10-pan hinged cover XMK00001 19" Door Assembly XMK00109 Evaporator Coil Assembly 2194201 Rail Thermostat 3977984 Wire shelf 19"

#### F18RR52 SERIES

000-402-0045 Removable 12-pan hinged cover XMK00001 Door assembly 19" XMK00003 Door assembly 27" 2194201 Rail Thermostat 3977984 Wire shelf 19" 3978014 Wire shelf 27"

#### F18RR60 SERIES

000-402-003X Removable 8-pan hinged cover SMK00776 Center divider bar XMK00003 27" door assy. 3978014 27" Wire Shelf

#### F18SC SERIES STANDARD PARTS

XMK00109 Coil assembly solenoid
XMK00118 Louver Assembly
1701000 Cutting board pin
2190154 on/off switch
2194201 Rail Thermostat
2194536 Thermostat
3234266 Right pan cover end hinge
3234282 Left end pan cover hinge
3234392 Double (Center) pan hinge
3234645 Leg
3516135 Hanging 4" thermometer
3516225 Expansion valve
9321041 Chrome plated acorn nut
9321136 Holding for cutting board pin
9321374 Salad pan cover pin hinge

### ADDITIONAL PARTS

#### F18SC39A SERIES

000-402-003T Removable 6-pan hinged cover XMK00005 19" Lo Profile Door Assembly

#### F18SC39B, F18SC52B

000-402-003X Removable 8 pan cover XMK00005 19" Lo Profile Door Assembly

#### F18SC52A, SERIES

000-402-003T Removable 6-pan hinged cover XMK00005 19" Lo Profile Door Assembly

#### F18SC52C SERIES

000-402-0041 Removable 10-pan hinged cover XMK00005 19" Lo Profile Door Assembly

#### F18SC52D SERIES

000-402-0045 Removable 12-pan hinged cover XMK00005 19" Lo Profile Door Assembly

#### F18SC60A SERIES

000-402-003T Removable 6-pan hinged cover XMK00005 19" Lo Profile Door Assembly XMK00007 27" Lo Profile Door assembly

#### F18SC60B SERIES

000-402-003T Removable 6-pan hinged cover XMK00005 19" Lo Profile door assembly XMK00007 27" Lo profile door assembly

#### F18SC60C SERIES

000-402-003T Removable 6-pan hinged cover XMK00005 19" Lo Profile Door Assembly XMK00007 27" Lo profile door assembly

#### F18SC60D SERIES

000-402-003T Removable 6-pan hinged cover XMK00005 19" Lo Profile Door Assembly XMK00007 27" Lo profile door assembly

#### F18SR SERIES STANDARD PARTS

XMK00109 Coil assembly solenoid 1701000 Cutting board pin 2183348 Cord/plug assembly 2190154 On/Off Switch 2193927 Pressure control 3234266 Right pan cover end hinge 3234282 Left end pan cover hinge 3234392 Double (Center) pan cover hinge 3234645 Leg 3516135 Hanging 4" thermometer 3516225 Expansion valve 9321041 Chrome plated acorn nut 9321136 Holding for cutting board pin 9321374 Salad pan cover pin hinge

#### ADDITIONAL PARTS F18SR31A & F18SR44A SERIES

000-402-003T Removable 6-pan hinged cover XMK00005 19" Lo Profile Door Assembly

#### F18SR44B SERIES

000-402-003X Removable 8 pan hinged cover XMK00005 19" Lo Profile Door Assembly

#### F18SR44C SERIES

000-402-0041 Removable 10 pan hinged cover XMK00005 19" Lo Profile Door Assembly

#### F18SR52A SERIES

000-402-003T Removable 6-pan hinged cover XMK00005 19" Lo Profile Door Assembly XMK00007 27" Lo Profile Door Assembly

#### F18SR52B SERIES

000-402-003X Removable 8 pan hinged cover XMK00005 19" Lo Profile Door Assembly XMK00007 27" Lo Profile Door Assembly

#### F18SR52C SERIES

000-402-0041 Removable 10 pan hinged cover XMK00005 19" Lo Profile Door Assembly XMK00007 27" Lo Profile Door Assembly

#### F18SR52D SERIES

000-402-0045 Removable 12 pan hinged cover XMK00005 19" Lo Profile Door Assembly XMK00007 27" Lo Profile Door Assembly

#### F18WC SERIES STANDARD PARTS

SMK00039 Louver
XMK00107 Evaporator Coil Assembly
1701000 Cutting board pin
2183348 Cord/plug assembly
2193927 Pressure control
3234290 Plastic plug shelf support
3234645 Leg
3516135 Hanging 4" thermometer
9321041 Chrome plated acorn nut
9321132 Long stud dog-point
9321136 Holding for cutting board pin
9321374 Salad pan cover pin hinge

# ADDITIONAL PARTS F18WC39 SERIES

SMK00039 Louver Assembly XMK00001 Door assembly 19" 3977984 19" Wire Shelf

#### F18WC47 SERIES

SMK00039 Louver Assembly XMK00003 Door assembly 27" 3978014 27" Wire Shelf

#### F18WC52 SERIES

SMK00039 Louver Assembly XMK00001 Door assembly 19" 3977984 19" Wire Shelf

#### F18WC60 SERIES

SMK00039 Louver Assembly XMK00001 Door assembly 19" XMK00003 Door assembly 27" 3977984 19" Wire Shelf 3978014 27" Wore Shelf

#### F18WC68 SERIES

SMK00039 Louver Assembly XMK00003 Door assembly 27" 3978014 Wire Shelf 27"



#### F18WC78 SERIES

SMK00039 Louver Assembly XMK00004 Door assembly 32" 3977983 32" Wire Shelf

#### F18WC87 SERIES

SMK00039 Louver Assembly XMK00001 Door assembly 19" XMK00003 Door assembly 27" 3977984 19" Wire Shelf 3978014 27" Wire Shelf

#### F18WC95 SERIES

SMK00039 Louver Assembly XMK00003 Door assembly 27" 3978014 27" Wire Shelf

#### F18WR SERIES STANDARD PARTS

1701000 Cutting board pin 3234290 Plastic plug shelf support 3234645 Leg 3516135 Hanging 4" thermometer 9321040 Stud spot 9321041 Chrome plated acorn nut 9321132 Long stud dog-point 9321136 Holding for cutting board pin 9321374 Salad pan cover pin hinge

# ADDITIONAL PARTS F18WR31 SERIES

XMK00001 Door assembly 19" XMK00109 Evaporator Coil Assembly 3977984 Wire shelf 19"

#### F18WR39 SERIES

XMK00003 Door assembly 27" XMK00109 Evaporator Coil Assembly 3978014 Wire shelf 27"

#### F18WR44 SERIES

XMK00001 Door assembly 19" XMK00109 Evaporator Coil Assembly 3977984 Wire shelf 19"

### F18WR52 SERIES

XMK00001 Door assembly 19" XMK00003 Door assembly 27" XMK00109 Evaporator Coil Assembly 3977984 Wire shelf 19" 3978014 Wire Shelf 27"

### F18WR60 SERIES

XMK00003 Door assembly 27" XMK00109 Evaporator Coil Assembly 3978014 Wire shelf 27"

#### F18WR70 SERIES

XMK00004 Door assembly 32" XMK00109 Evaporator Coil Assembly 3977983 Wire shelf 32"

#### F18WR79 SERIES

XMK00001 Door assembly 19" XMK00003 Door assembly 27" XMK00108 Evaporator Coil Assembly 3977984 Wire Shelf 19" 3978014 Wire Shelf 27"


#### F18WR87 SERIES

XMK00003 Door assembly 27" 3978014 Wire Shelf 27"




# Wiring Diagram: Refrigerated Base Work Tables

### **F18WC**

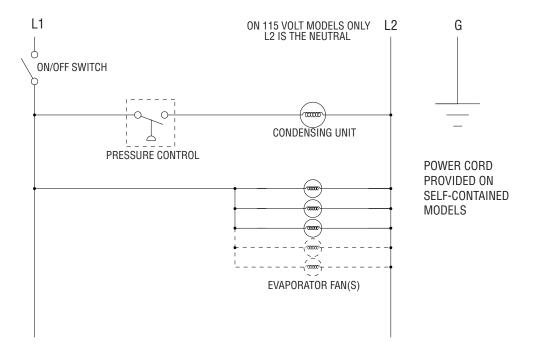

# Wiring Diagram: Refrigerated Base & Reduced Rail Tables


### F18MC, F18SC, F18BC & F18RC

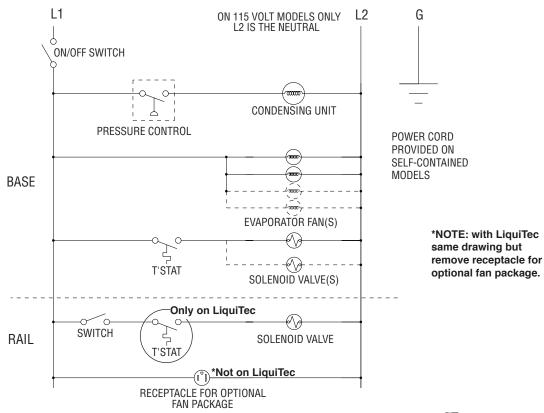



# Wiring Diagram: Freezer Base Work Tables

# F18FC

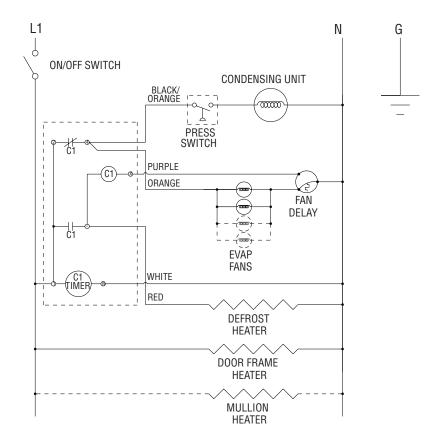



#### Standard One Year Warranty (one year parts, 90 days labor)

The Delfield Company ("Delfield") warrants to the Original Purchaser of the Delfield product (herein called the "Unit") that such Unit, and all parts thereof, will be free from defects in material and workmanship under normal use and service for a period of one (1) year from the date of shipment of the Unit to the Original Purchaser or, if the Original Purchaser returns the warranty card completely filled out including the date of installation within thirty (30) days of receipt of the Unit, one (1) year from the date of installation. During this one year warranty period, Delfield will repair or replace any defective part or portion there of returned to Delfield by the Original Purchaser which Delfield determines was defective due to faulty material or workmanship. The Original purchaser will pay all labor, crating, freight and related costs incurred in the removal of the Unit of defective component and shipment to Delfield, except that during a period of either ninety (90) days from the date of shipment of the Unit to the Original Purchaser or, if the Original Purchaser returns the warranty card completely filled out including the date of installation within thirty (30) days of receipt of the Unit, ninety (90) days from the date of installation Delfield will pay all related labor costs. Delfield will pay the return costs if the Unit or part thereof was defec-

The term "Original Purchaser" as used herein means that person, firm, association, or corporation for whom the Unit was originally installed.

This warranty does not apply to any Unit or part thereof that has been subjected to misuse, neglect, alteration, or accident, such as accidental damage to the exterior finish, operated contrary to the recommendations specified by Delfield; or repaired or altered by anyone other than Delfield in any way so as to, in Delfield's sole judgement, affect its quality or efficiency. This warranty does not apply to any Unit that has been moved from the location where it was originally installed. This warranty also does not cover the refrigerator drier or the light bulbs used in the Unit. The warranty is subject to the user's normal maintenance and care responsibility as set forth in the Service and Installation Manual, such as cleaning the condenser coil, and is in lieu of all other obligations of Delfield. Delfield neither assumes, nor authorizes any other person to assume for Delfield, any other liability in connection with Delfield's products.

Removal or defacement of the original Serial Number or Model Number from any Unit shall be deemed to release Delfield from all obligations hereunder or any other obligations, express or implied.

Parts furnished by suppliers to Delfield are guaranteed by Delfield only to the extent of the original manufacturer's express warranty to Delfield. Failure of the Original Purchaser to receive such manufacturer's express warranty to Delfield. Failure of the Original Purchaser to receive such manufacturers warranty shall in no way create any warranty, expressed or implied, or any other obligation or liability on Delfield's part in respect thereof.

If shipment of a replacement part is requested prior to the arrival in the Delfield factory of the part claimed to be defective, the Original Purchaser must accept delivery of the replacement part of a C.O.D. basis, with credit being issued after the part has been received and inspected at Delfield's plant and determined by Delfield to be within this warranty.

Under no condition does this warranty give the Original Purchaser the right to replace the defective Unit with a complete Unit of the same manufacturer or of another make. Unless authorized by Delfield in writing, this warranty does not permit the replacement of any part, including the motor-compressor, to be made with the part of another make or manufacturer.

No claims can be made under this warranty for spoilage of any products for any reason, including system failure.

The installation contractor shall be responsible for building access, entrance and field conditions to insure sufficient clearance to allow any hood(s), vent(s), or Unit(s) if necessary, to be brought into the building. Delfield will not be responsible for structural changes or damages incurred during installation of the Unit or any exhaust system.

Delfield shall not be liable in any manner for any default or delay in performance hereunder caused by or resulting from any contingency beyond Delfield's control, including, but not limited to, war, governmental restrictions or restraints, strike, lockouts, injunctions, fire, flood, acts of nature, short or reduced supply of raw materials, or discontinuance of the parts by the original part manufacturer.

Except as provided in any Additional Four Year Protection Plan, if applicable, and the Service Labor Contract, if applicable, the foregoing is exclusive and in lieu of all other warranties, whether written or oral, express or implied. This warranty supersedes and excludes any prior oral or written representations or warranties. Delfield expressly disclaims any implied warranties of merchantability, fitness for a particular purpose of compliance with any law, treaty, rule or regulation relating to the discharge of substances into the environment. The sole and exclusive remedies of any person relating to the Unit, and the full liability of Delfield for any breach of this warranty, will be as provided in this warranty.

Other than this Delfield Standard One Year Limited Warranty, any applicable Delfield Additional Four Year Protection Plan or applicable Delfield Service Labor Contract, the Original Purchaser agrees and acknowledges that no other warranties are offered or provided in connection with or for the unit or any other part thereof.

In no event will Delfield be liable for special, incidental or consequential damages, or for damages in the nature of penalties.



### Additional Four Year Protection Plan (for Motor-Compressor only)

Delfield Model#	Serial #	Installation Date

In addition to the Standard One Year Warranty on the Motor-Compressor contained in the above listed Delfield product (the "Unit"), The Delfield Company ("Delfield") also agrees to repair, or exchange with similar or interchangeable parts in design and capacity at Delfield's option, the defective Motor-Compressor contained in the Unit (the "Motor-Compressor). or any part thereof, for the Original Purchaser only, at any time during the four (4) years following the initial one (1) year period commencing on the date of installation for the Original Purchaser. Failure of the Original Purchaser to register the registration card containing the Original Purchasers name, address, date of installation, model number and serial number of the Unit containing the Motor-Compressor within 30 days from the date of installation shall void this warranty. This additional warranty is only available if the Motor-Compressor is inoperative due to defects in material or factory workmanship, as determined by Delfield in its sole judgement and discretion. The Original Purchaser shall be responsible for returning the defective Motor-Compressor to Delfield prepaid, F.O.B. at the address shown on the back cover of this manual.

The term "Original Purchaser" as used herein means that person, firm, association, or corporation for whom the Unit was originally installed.

The term "Motor-Compressor" as used herein does not include unit base, air or water cooled condenser, receiver, electrical accessories such as relay, capacitors, refrigerant controls, or condenser fan/motor assembly. This warranty does not cover labor charges incidental to the replacement of parts. This warranty further does not include any equipment to which said condensing unit is connected, such as cooling coils, temperature controls or refrigerant metering devices. This warranty shall be void if the Motor-Compressor, in Delfield's sole judgement, has been subjected to misuse, neglect, alteration or accident, operated contrary to the recommendations specified by the Unit manufacturer, repaired or altered by anyone other than Delfield in any way so as, in Delfield's sole judgment, to affect its quality or efficiency or if the serial number has been altered, defaced or removed. This Warranty does not apply to a Motor-Compressor in any Unit that has been moved from the location where it was originally installed. The addition of methyl chloride to the condensing unit or refrigeration system shall void this warranty.

#### **General Conditions**

Delfield shall not be liable in any manner for any default or delay in performance hereunder caused by or resulting from any contingency beyond Delfield's control, including, but not limited to, war, governmental restrictions or restraints, strike, lockouts, injunctions, fire, flood, acts of nature, short or reduced supply of raw materials, or discontinuance of any part or the Motor-Compressor by the unit manufacturer.

Replacement of a defective Motor-Compressor is limited to one (1) Motor-Compressor by us during the four (4) year period. Delfield shall replace the Motor-Compressor at no charge.

This warranty does not give the Original Purchaser of the Motor-Compressor the right to purchase a complete replacement Motor-Compressor of the same make or of another make. It further does not permit the replacement to be made with a Motor-Compressor of another kind unless authorized by Delfield. In the event Delfield authorizes the Original Purchaser to purchase a replacement Motor-Compressor locally, only the wholesale cost of the Motor-Compressor is refundable.


Expressly excluded from this warranty are damages resulting from spoilage of goods.

Except as provided in any applicable Standard One Year Limited Warranty or applicable Service Labor Contract, the foregoing is exclusive and in lieu of all other warranties, whether written or oral, express or implied. This Warranty supersedes and excludes any prior oral or written representations or warranties. Delfield expressly disclaims any implied warranties of merchantability, fitness for a particular purpose or compliance with any law, treaty, rule or regulation relating to the Motor-Compressor, and the full liability of Delfield for any breach of this warranty, will be as provided in this warranty.

Other than any applicable Delfield Standard One year Limited Warranty, this Delfield Additional Four Year Protection Plan and any applicable Delfield Service Labor Contract, the Original Purchaser agrees and acknowledges that no other warranties are offered or provided in connection with or for the Motor-Compressor or any part thereof.

In no event will Delfield be liable for special, incidental or consequential damages, or for damages in the nature of penalties.



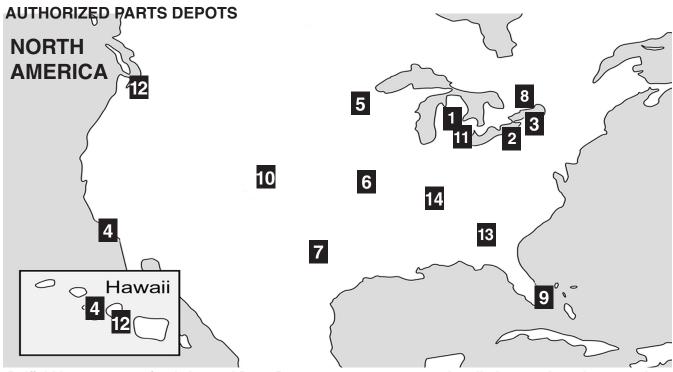

### Delfield has 14 conveniently located Parts Depots to ensure parts are handled promptly and accurately.

#### 1) The Delfield Company

980 South Isabella Road Mt. Pleasant, MI 48858 800.733.8829 989.773.7981 989.773.3210 FAX custom parts direct from Delfield

#### 2) A.I.S. Commercial Parts & Service

1816 West 26th Street Erie, PA 16508-1149 800.332.3732 814.456.3732 814.452.4843 FAX serves: MD, NJ, OH, PA, VA, WV

#### 3) Appliance Installation Service

1336 Main Street Buffalo, NY 14209 800.722.1252 716.884.7425 716.884.0410 FAX serves: CT, DC, DE, MA, MD, ME, NH, NJ, NY, PA, RI, VA, VT, WV

#### 4) Barker's Food Machinery

5367 2nd Street Irwindale, CA 91706 800. 258.6999 626.960.9390 626.337.4541 FAX serves: AZ, CA, HI, NV, OR

#### 5) Contract Ice

14450 Ewing Ave S. #100 Burnsville, MN 55306 800.422.2823 952.894.4427 952.894.2164 FAX serves: IA, MN, MT, ND, SD, WI

#### 6) E.M.C.O. Sales & Distributors

3909 St. Timothy Lane St. Ann, MO 63074 800.972.7670 314.427.7477 314. 427.8190 FAX serves: AR, IA, IL, KS, KY, MO, NE, OK, TX, NM, LA

#### 7) STOVE PARTS SUPPLY/GCS SERVICE

2120 Solona St. PO Box 14009 Fort Worth, TX 76117-0009 1.800.433.1804 toll free 1.800.272.7358 fax serves: AR. LA. NM. OK. TX

### 8) Garland Group

1177 Kamato Road Mississauga, Ontario L4W1X4 800.427.6668 800.361.7745 FAX serves: Canada

#### 9) Global Parts and Supplies

2920 N.W. 109th Avenue Miami, FL 33172 305 994.9994 305.994.9992 FAX International parts depot

#### 10) Hawkins Commercial Appl. Serv.

3000 S. Wyandot Englewood, CO 80110 (800) 624-2117 (303) 7618861 FAX

serves: AZ, CO, KS, NE, NM, OK, UT, WY

#### 11) MicroDine, Inc.

44792 Helm Plymouth, MI 48170 888.828.4454 734.451.2043 734.451.3215 FAX serves: MI, IN, WI, OH

#### 12) Performance Refrigeration Parts

9923 S.W. 178th St. Vashon, WA 98070 888.872.2465 206-463-1772 206.463.4431 FAX serves: AK, HI, ID, MT, OR, WA

#### 13) Southeastern Restaurant Services

2200 Norcross Parkway, Suite 210 Atlanta, GA 30071 800.235.6516 770.446.6177 770.446.3157 FAX serves: FL, GA, MS, NC, SC, VA

#### 14) T.M.A.

2916 Sidco Drive Nashville, TN 37204 615.726.0351 800.737.0351 615.259.4100 FAX serves: TN, AL

