

Manufactured By ROBAND AUSTRALIA PTY LTD



OPERATING INSTRUCTIONS

DRINK MIXERS

Models: DM21W, DM21R, DM21B, DM21C

Includes

International models: ...-UK and ...-F

Special Features:

- Cup activated switch
- Stainless steel mixing shaft and beaters
- ♦ 6600 RPM motor

CE

These instructions cover the models of ROBAND® Drink Mixers Assemblies only. Although there are slight variances between models, the installation, operation, care and maintenance procedure is the same for all.

Roband[®] Australia is a wholly Australian owned company and has been manufacturing quality commercial catering equipment for the food service industry for more than 50 years. Roband products are engineered and manufactured to the highest standards to provide functionality, reliability and durability, and our quality products are exported world-wide.

Included in the comprehensive Roband[®] range are Toasters, Fryers, Milkshake Mixers, Rotisseries, Food Display Cabinets and much more.

Roband[®] Australia also acts as the Australian agents for Vitamix[®] Blenders, Noaw[®] Meat Slicers, Ryno[®] Stainless Benching, Ceado Juicers, Förje[®] Cookware, RobalecTM Soup/Rice Warmers, Robatherm Urns, Austheat[®] Fryers, Dipo Induction & Autofry Machines. Roband also has its own line of commercial cookware and cutlery under the Robinox[®] brand name.

For a complete set of brochures please contact your nearest authorised dealer or contact Roband directly at our head office.

Roband Head Office Sydney, Australia					
Roband Australia Pty Ltd		Tel:	+61 2 9971 1788		
1 Inman Road		Fax:	+61 2 9971 1336		
Dee Why NSW 2099		Email:	sales@roband.com.au		
AUSTRALIA		Web:	www.roband.com.au		
International Agents					
	For additional agents ple	ease email F	Head Office		
Cyprus:	United Catering Equipment Supplies Ph: +357 777 777 24	Singapore:	Jelco Private Ltd Ph: +655 611 988		
Fiji:	Hotel Equipment Ltd Ph: +679 672 0666	Switzer- land:	Burgi Infra Grill Ph: +41 418 554 552		
Hong Kong:	Chung Wah Kitchen Machine Ltd Ph: +852 2334 5411	Thailand:	Seven Five Distributors Co Ltd Ph: +662 866 5858		
Malaysia:	Allied Food Equipment Ph: +603 9133 5833	United Arab Emirates:	Boncafe Middle East LLC +9714 282 8742		
Maldives:	Radiant Heat Maldives Pty Ltd Ph: +960 333 4845	United Arab Emirates:	Nisa Trading LLC +9714 396 6132		
New Zealand:	Roband New Zealand Ph: +649 274 1354	United Kingdom:	Metcalfe Catering Equipment Ph +44 1766 830 456		
Noumea:	Comptoir Materiel Professionnel Ph: +687 28 50 43	USA:	Condon & Fisher International Ph: +1 508 361 9226		
Noumea:	CHR Import Ph: +687 92 83 79				
Papua New Guinea:	Brian Bell & Company Pty Ltd Ph: +675 325 5411				

© Copyright 2013 - Roband® Australia Pty Ltd

All rights reserved. No part of this work may be reproduced or copied in any form or by any means, electronic or mechanical, including photocopying or posting to a website, without the written permission of the publisher. The material contained within this document is intended entirely for instructional purposes.



CONTENTS

INTRODUCTION	1
GENERAL PRECAUTIONS	1
PACKAGING	2
COMPLIANCE	2
INSTALLATION	3
OPERATION	4
OPERATIONAL TIPS	5
GENERAL SAFETY	6
CLEANING, CARE & MAINTENANCE	6
TROUBLESHOOTING	7
SPECIFICATIONS	7
EXPLODED DIAGRAM	8
CIRCUIT DIAGRAM	g
EC DECLARATION OF CONFORMITY	11
WARRANTY	12

INTRODUCTION

Congratulations on your purchase of this quality ROBAND® product. With proper care and management your new purchase will give you years of trouble free service.

By reading these instructions carefully you can ensure that this machine is used and maintained properly, helping your new investment to perform well for you now, and to continue performing in the many years to come.

GENERAL PRECAUTIONS

This machine must only be operated by qualified person(s) who are fully versed in the operating and safety instructions described in this manual. Servicepersons should be instructed to familiarise themselves with any and all safety instructions described in this manual prior to commencement of any maintenance or service.

In the case of new personnel, training is to be provided in advance. These machines should not be operated by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning the safe use of the appliance by a person responsible for their safety.

When moving the mixer, only hold or lift it by the body itself. **Do not carry or move the mixer by holding the motor spindle or the motor housing**. The motor spindle is aligned with a tolerance of 0.025mm before leaving the factory to ensure trouble free mixing and long motor bearing life.

The performance of this unit cannot be guaranteed for operational use outside its design parameters.

The machine should be disconnected from all power before cleaning.

Roband will accept no liability if;

Non-authorised personnel have tampered with the machine.

The instructions in this manual have not been followed correctly.

Non-original spare parts are used.

The machine is not cleaned correctly, with the right product.

There is any damage to the unit.

The machine has been modified in any way.



PACKAGING

All care is taken when packing and Roband ensures that every unit is functional and undamaged at the time of packaging.

The Package of this Drink Mixer should include:

- 1. One Drink Mixer (appropriate model)
- 2. One Stainless Steel Mixing Cup
- 3. This Manual

Any damage to the machine as a result of freight must be reported to the Freight Company and to the agent responsible for the despatch of said unit within 24 hours of receipt. No claims will be accepted or entertained after this period.







COMPLIANCE

C-Tick:

Roband® products have been designed and manufactured to comply with any and all specifications set out by the Australian Communications Authority (ACA) in regards to Electromagnetic Compatibility. As testament to such compliance these units bear the C-Tick symbol.

For further information contact the Australian Communications Authority, PO Box 13112, Law Courts, Melbourne VIC 8010.

CE:

Roband® products bearing the CE compliance mark have been designed and manufactured to comply with European Standards and Directives. A copy of the CE Declaration of Conformity is located at the back of these instructions.

ACSS (Advance Control Safety System) – Australia Only:

The ACSS framework is a stringent and specific set of voluntary requirements aimed at the electrical safety, reliability and longevity of equipment used in the foodservice industry.

The ACSS framework has been developed as both a guide to the engineering and development of products as well as a guarantee to consumers that Roband equipment bearing this mark not only meets the requirements of the Australian Standards, they exceed them.

A unit bearing the ACSS mark is your guarantee that you are purchasing a machine built to far exceed the Australian standards (and most International Standards). The unit has been designed to be safer, particularly from an electrical aspect, and last longer than similar units on the market today.



INSTALLATION

Remove all the packaging materials and tape, as well as any protective plastic from the machine. Clean off any glue residue left over from the protective plastic or tape using methylated spirit.

Place the mixer on a firm, level surface in the required position.

The DM21W, DM21R, DM21B & DM21C models plug into a standard, single phase, 10A Australian (Type I) power point.

The "-UK" models plug into a standard 13A United Kingdom (Type G) power point.

The "-F" models plug into a standard 16A European (Type E or F) power point .


We recommend the use of an RCD (Residual Current Device) rated at not less than 30mA for circuit protection when using these units.



OPERATION

The mixer plugs into a standard, single phase, 10 Amp Power point. On the top of the mixer is an ON OFF / Speed control switch.

The unit is operated by a combination of two mechanisms; the control switch and the activating "switch rod". Select the desired setting on the Control Switch by pressing the switch to either the "I" position (low speed) or the "II" position (high speed).

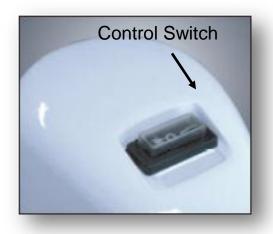

Placing the rim of the supplied mixing cup or a standard size 710mL (24 Fl.oz.) milk shake cup behind the top cup retainer (switch rod) and resting the bottom of the cup on the cup support will then start the mixing action.

It is the vertical movement of the "switch rod" (also known as the Actuator) that activates the mixing beater. Please note that it is important to ensure the cup rim is hooked behind the point of the shaft so that the cup will not slip off the actuating rod. (see picture)

After the desired mixing duration, remove the cup by first lifting it then pulling it down and away from the motor spindle. The mixer is designed for a fluid volume of 180ml to 210ml. Increasing this volume could cause spillage, which may migrate into the switch, leading to possible electrical problems.

If small cups are to be used they will not be tall enough to activate the microswitch. In this case a "collar" is required for the mixing process. (Please contact your supplier for information on obtaining a collar if required). Be very cautious when using a Collar, as these tend to dent



easily. A dent in a collar can make a sharp point on the bottom edge, which can chip the paint on the unit if it falls off the cup.



OPERATIONAL TIPS

MAKING A THICK, FROTHY SHAKE

For best results with the new Saturn Beater[®], set the Control switch to "I" (Low speed). On low speed, the specially designed Saturn Beater will pull even



more air into the milk and create a smoother, creamier drink using smaller volumes of ingredients.


Using an internationally registered design engineered to maximise the aeration of milkshakes and thickshakes, the Saturn Beater represents the best technology available in milkshake preparation. This deceptively simple component ensures that profits are maximised by getting more volume with less milk.

Notes to user: These units are not blenders and will not make thickshakes from chunks of frozen ice cream. If ice cream is used it is common for the beater to bite into the ice cream and drag it around, leaving a large amount unblended and increasing the chances of spillage. To make a thick shake it is required that **softserve** or somewhat melted ice cream be used.

An important tip to remember is that the colder the milk used, the thicker the shake. Additionally, Light milk and Skim milk will froth more than full-cream milk.

ALTERNATE MIXING HEAD

While we recommend using the Saturn beater, we have included the parts for an alternate mixing head for those customers who feel they would get better results with a more typical beater assembly. On the right is a picture of how the parts are assembled on the mixer shaft.

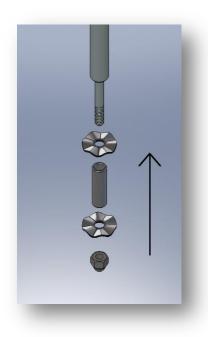



✓ SAFETY ✓

GENERAL SAFETY

This machine contains no user-serviceable parts. Roband Australia, one of our agents, or a similarly qualified person(s) should carry out any and all repairs.



Steel cutting processes such as those used in the construction of this machine result in sharp edges. Whilst any such edges are removed to the best of our ability it is always wise to take care when contacting any edge.

Do not remove any cover panels that may be on the product.

Do not use anything other than a recommended cup or collar to activate the switch.

It may be possible to actuate the switch while cleaning, for this reason we advise that you turn of the power to the mixer before commencing cleaning.



Never place your hand or any other object into the cup while in yzard operation.

CLEANING, CARE & MAINTENANCE

Clean the motor spindle by placing warm water in the cup and then mixing. The rest of the machine can be cleaned after first switching off the speed control switch then disconnecting the power cord from the wall socket. The mixer can then be wiped down with a warm damp cloth. Pay particular attention to keeping the area around the switch rod and the switch rod itself clean. Do not immerse mixer in water. Keep the motor spindle, where it enters the motor housing, and the activating switch free from milk, flavouring and other drink residue. Do not use a water jet system for cleaning this appliance.

NEVER USE CHLORIDE BASED CLEANERS or "Sanitizers" on these machines. The Chloride ions will damage the bodies, resulting in oxidation of the aluminium and lifting/"bubbling" of the paint.

The Drink Mixer should be cleaned after each use.

Do not under any circumstances immerse the mixer in water.

Some cleaning agents can damage stainless steel and painted surfaces, usually through prolonged use. For this reason we recommend cleaning with soapy water. Any damage to the unit through the use of harsh or improper cleaning agents is entirely the responsibility of the user.



TROUBLESHOOTING

If the Drink Mixer does not function, please check the following points before calling for service.

- ✓ The machine is plugged in correctly and the power switched on.
- ✓ The IEC plug is pushed firmly into its socket relocating the unit or cumulative vibrations may cause the socket to become loose – turn the machine on its side and push the IEC inlet plug firmly into the socket inside the base.
- ✓ The on off / speed control switch has been activated.
- ✓ The power point is not faulty.
- ✓ The cup actuates the switch correctly
- ✓ Select the alternative speed setting.


SPECIFICATIONS

All DM21 Models			
Power source	220-240 Volts AC		
Power	180 Watts		
Nominal Dimensions			
Width	210mm		
Height	490mm		
Depth	225mm		

Constant research and development may necessitate specification changes at any time

ROBAND[®]
A U S T R A L I A PTYLTD


EXPLODED DIAGRAM

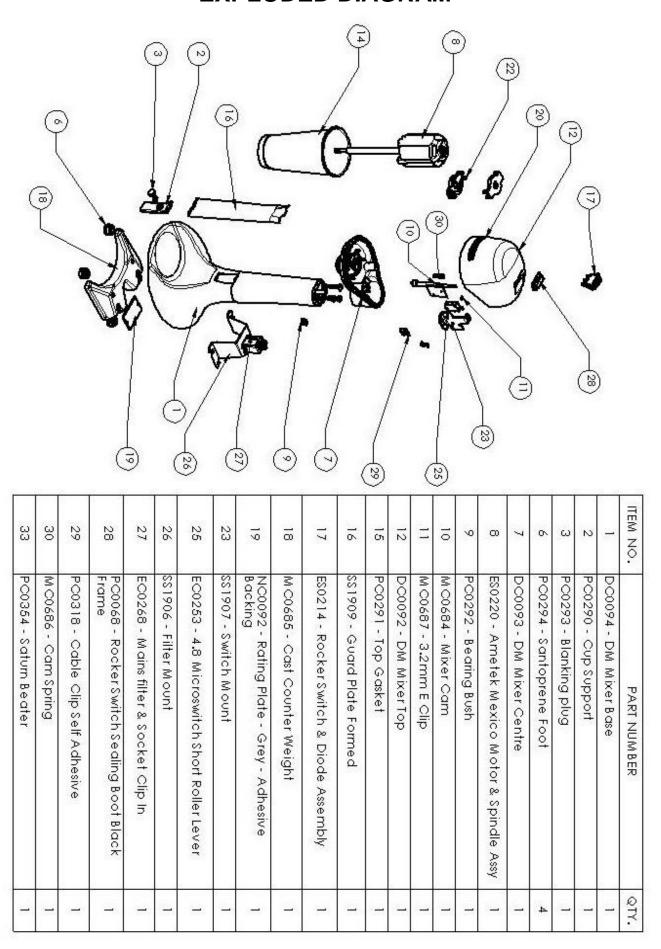



CIRCUIT DIAGRAM

MODEL: DM21W, DM21R, DM21B

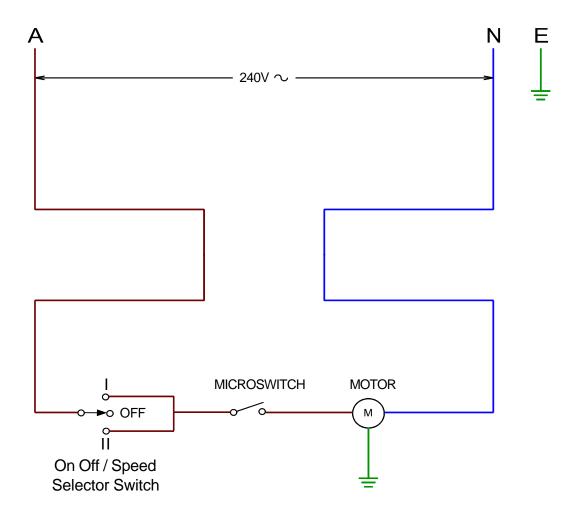

NOTE: This circuit diagram has been provided for reference and to assist qualified service and repair agents only. Under no circumstances should persons not suitably qualified attempt repairs to any electrical equipment.

NOTES		
This page is intentionally left blank. Please note your favourite settings here.		



EC DECLARATION OF CONFORMITY

	Roband Australia 1 Inman Rd
Manufacturer	Cromer
	NSW, 2099
	Australia
Model Type	Drink Mixers
Description	Milkshake Mixer
Date of first CE Marking	1 st March 2008
Specific Models	DM21W, DM21B, DM21R, DM21C

STANDARDS:

This machine is designed in compliance with

- Machinery Directive 2006/42/EC
- Low Voltage Directive 2006/95/EC
- EMC Directive 89/336/EEC including amendments to 93/68/EEC
- WEEE Directive 2002/96/EC (WEEE)
- Restriction of Hazardous Substances in Electrical and Electronic Equipment 2002/95/EC (RoHS)
- EN60335.1 Household and similar Electrical Appliances
- EN60335-2-48 Commercial Electric Toasters and Grillers
- EN55014.2: 1997 Electromagnetic compatibility. Requirements for household appliances, electric tools and similar apparatus. Immunity.

ENVIRONMENTAL:

Page: 11

This product is designed in order to contribute as little as possible to the quantity and noxious nature of waste and risk of pollution or other environmental contamination.

Packaging materials used in this machine are designed to be recyclable.

DECLARATION

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above-mentioned standard(s).

Roband Australia has appointed Valera Ltd as our EU Authorised Representative of: 5-7 The Glade Business Centre, Eastern Ave, West Thurrock, Essex, RM203FH, UK. Tel: 08 45 270 4321 Fax: 0845 270 4323 E-Mail: info@valera.co.uk

Signature of Authorised Person: Date: 14th March 2008

Print Name: Gordon Thorpe Position: Director of Engineering



WARRANTY

Every care is taken to ensure that no defective equipment leaves our factory and all goods manufactured by us are guaranteed against faulty workmanship and materials for a period of 12 months from the date of purchase. Glass, lamps and Teflon coatings are **NOT** included in this warranty. Generally, all goods claimed under this warranty must be returned to the factory or an authorised service agent, freight prepaid, for inspection. Any part deemed to be defective will be replaced, however, no claims will be entertained for parts damaged in transport, misused or modified in any way without our approval. For machines that are not considered to be portable (e.g. food bars, rotisseries, large hotplates and some bain maries), on site warranty service will be provided in capital city metropolitan areas only. In all other locations, the customer is responsible for all travelling time/service call costs and payment for this will be required prior to the commencement of the repair. The labour costs to actually repair the fault will be met by this company.

This company reserves the right to reject a claim for warranty if it is not completely satisfied with the circumstances under which it occurred and any costs incurred for false claims or faults due to incorrect usage etc. are the responsibility of the claimant. Under no circumstances shall Roband Australia Pty Ltd or any subsidiary company or Agent be liable for loss of profit or damage to other equipment and property.

Generally, authorised service agents are located in all areas, which have authorised distribution dealers. For the name of your nearest Australian authorised service agent please contact:

ROBAND AUSTRALIA PTY LTD

1800 268 848 (for Australian Residents) +61 2 9971 1788 Fax: +61 2 9971 1336

	101 2 001 1 1700 1 071 1000		
Email:	Warranty@roband.com.au		
All other countries please contact your selling agent.			
Please complete the following details and keep this card in a safe place.			
NAME			
ADDRESS			
MODEL No:	_SERIAL No:DATE PURCHASE		
NAME OF DEALER.			

PLEASE RETAIN THIS SECTION FOR YOUR RECORDS DO NOT POST ROBAND AUSTRALIA PTY LTD




Warranty Number:

Phone:

Page: 12


OTHER LEADING PRODUCTS AVAILABLE:

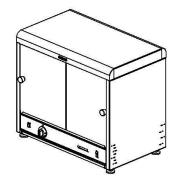

 $\pi\text{-PLUS}$ PIE & FOOD WARMERS




DRINK MIXERS

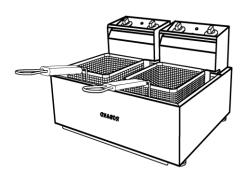


HIGH PERFORMANCE DEEP FRYERS



VITAMIX BLENDERS

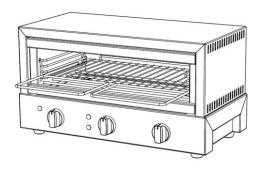

GRILLMAX TOASTERS

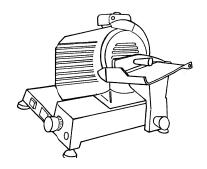

NOAW Slicers

Manufactured/Imported in Australia by:



Authorised Distributor/Agent

