



at&t

Your world. Delivered.

System Installation Guide

AT&T SB67030 Deskset

AT&T SB67010 PSTN Gateway



Contents

Contents.....	2
Parts List	3
System Installation Overview	4
Deskset Installation	5
Deskset Reset.	9
Gateway Installation	10
Gateway Indicators.	14
Configuration	14
Gateway Reset	15
Web User Interface (WEBUI) Overview.....	16
System Basic Settings	17
Ring Groups	18
Auto Attendant Overview	19
Recording User Name	19
Auto Attendant Configuration.	20
Opening Menu Selection	21
Creating Auto Attendant Menus.	22
Auto Attendant Voice Prompts.	24
System Directory	25
Extension Basic Settings	26
Product Registration	27

Parts List

Figure 1 illustrates the AT&T SB67010 PSTN Gateway parts.

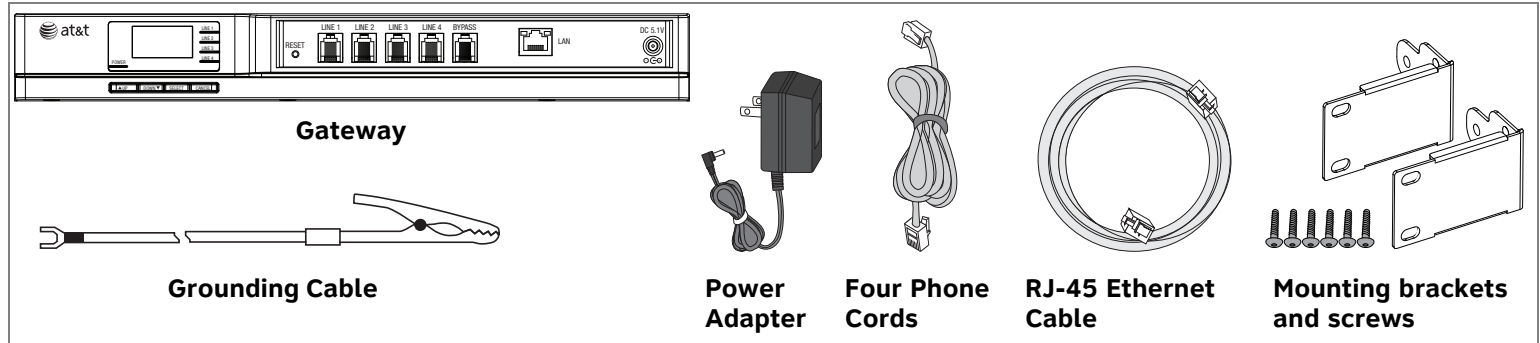


Figure 1. Gateway Parts List

Figure 2 illustrates the AT&T SB67030 Deskset parts.

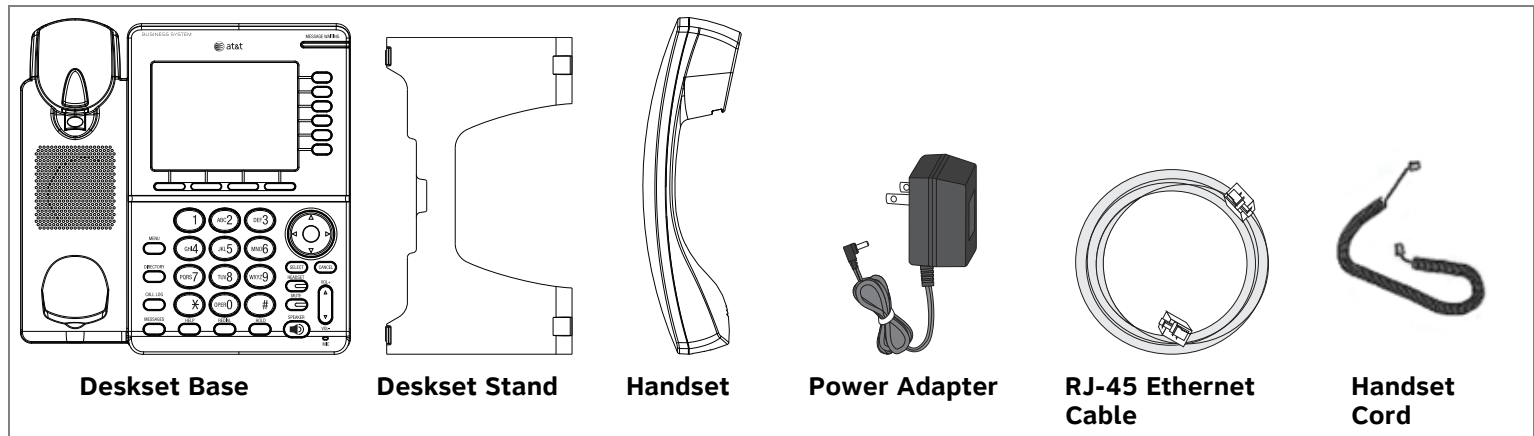


Figure 2. Deskset Parts List

System Installation Overview

The instructions in this guide assume that you install one Deskset before installing the Gateway. The Gateway designates that Deskset as Extension 200. Figure 3 illustrates the minimum components needed to make the system work.



NOTE: The system uses a Local Area Network (LAN) for system communication. It uses Public Switched Telephone Network (PSTN) phone lines for outside calls.

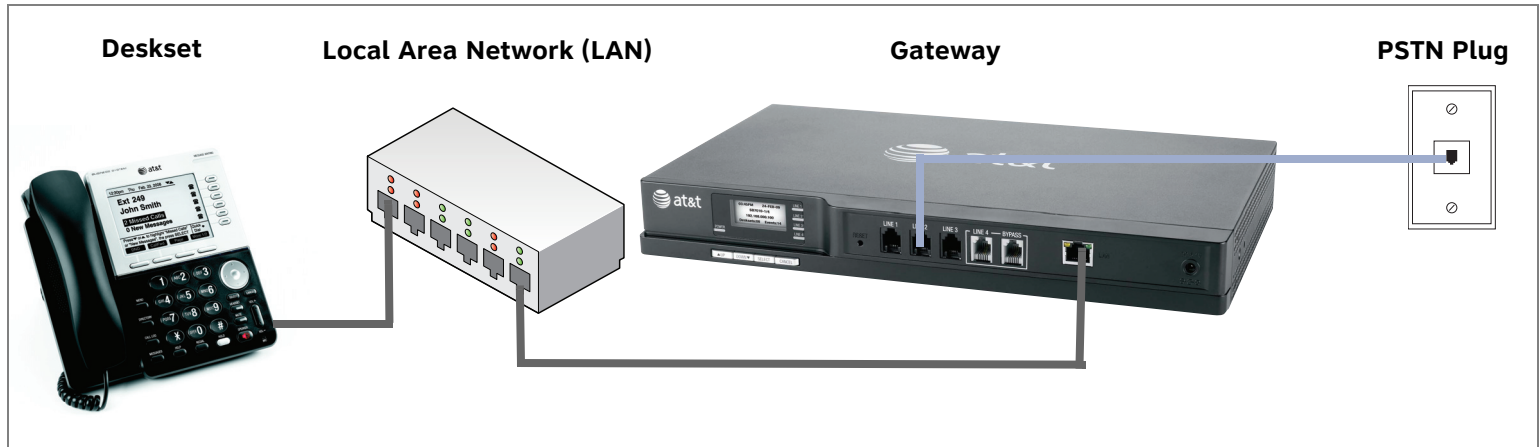


Figure 3. Simplified System




NOTE: You can register AT&T TL7600 Cordless Headsets and AT&T SB67040 Cordless Accessory Handsets to up to five Desksets.



To integrate the Headset into the system, use the “AT&T TL7600 Cordless Headset User’s Guide” on the CD that came with this product, rather than the manual that is packaged with the Headset.

Deskset Installation

Install the SB67030 Deskset on a desktop or mount it on a wall. The desktop setup requires the Deskset Stand and provides two positions, Option 1 at 45° and Option 2 at 60°. If you use Option 2, rotate the Handset tab as explained in "To rotate the Handset tab for wall and Deskset Option 2 installation:" on page 8.

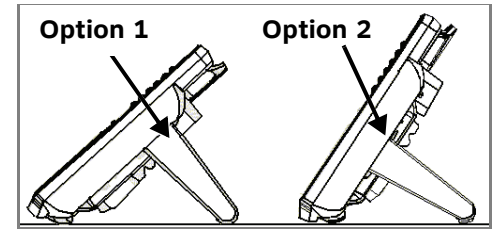

► To attach the Deskset stand:

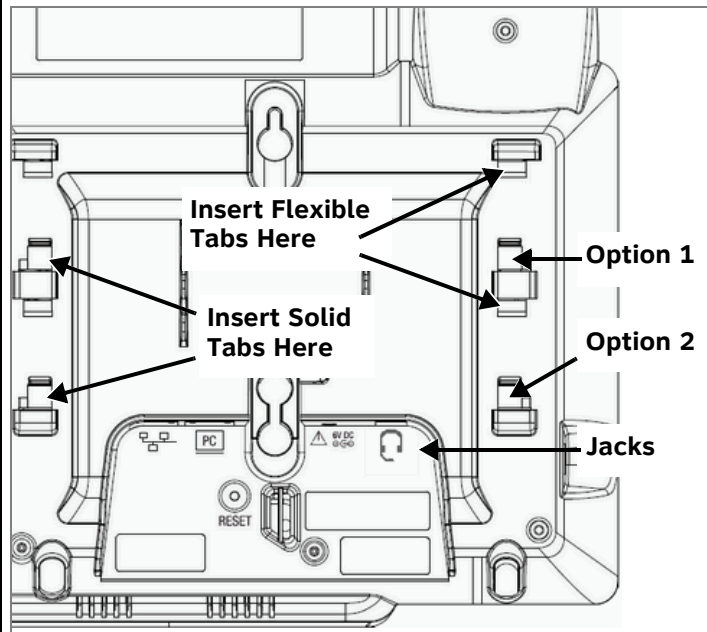


Figure 4. Deskset Stand Installation

1. Place the Deskset on a flat surface with the power and network jacks facing you, as illustrated in Figure 4.

2. Locate the flexible tab side, illustrated in Figure 5. Rotate the stand so that the flexible tabs are away from you.

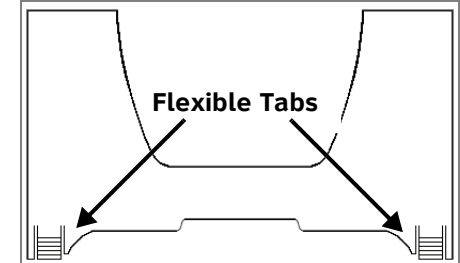


Figure 5. Deskset Stand Tabs

3. Insert the solid tabs into the Option 1 or Option 2 slots on the base shown in Figure 4.
4. Rotate the stand away from you until it rests against the base and you hear a click as it locks into place.

▶ **To connect the RJ-45 Ethernet cable to the Deskset:**

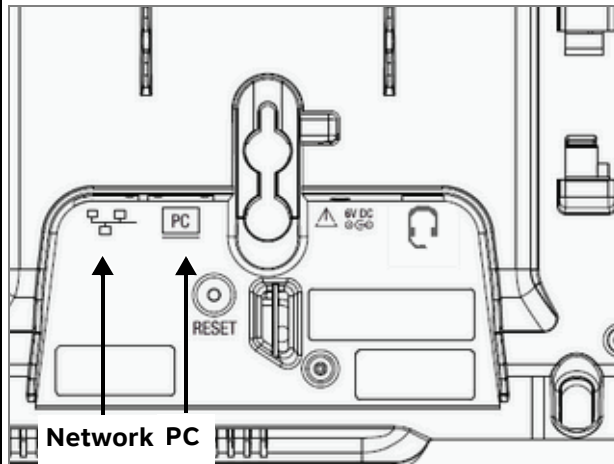


Figure 6. Network Connections

▶ **With a PC connected to the network**

1. Unplug the RJ-45 Ethernet cable from your computer.
2. Plug that RJ-45 Ethernet cable into the Network jack on the back of the Deskset indicated in Figure 6.
3. Plug another RJ-45 Ethernet cable into the PC jack on the Deskset indicated in Figure 6.
4. Plug the other end of that RJ-45 Ethernet cable into your computer.

▶ **Without a PC connected to the network:**

Plug an RJ-45 Ethernet network cable into the Network jack on the back of the Deskset, indicated in Figure 6, and plug the other end into the Ethernet wall jack.

▶ **To connect power:**

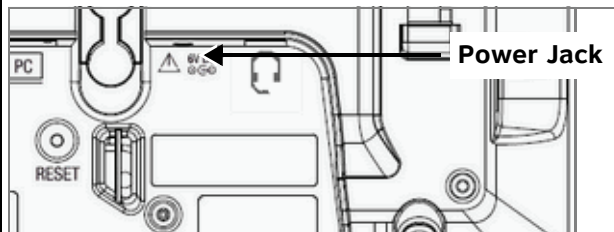


Figure 7. Power Connector

1. Plug the power adapter into the DC Power jack on the back of the Deskset, as indicated in Figure 7.
2. Plug the power adapter into an outlet not controlled by a wall switch. The display screen illuminates within about a minute.



CAUTION: *To help prevent the loss of system data during power outages, plug the AC power plug into an Uninterruptible Power Supply (UPS).*

▶ **To connect the corded Handset and an optional corded headset:**

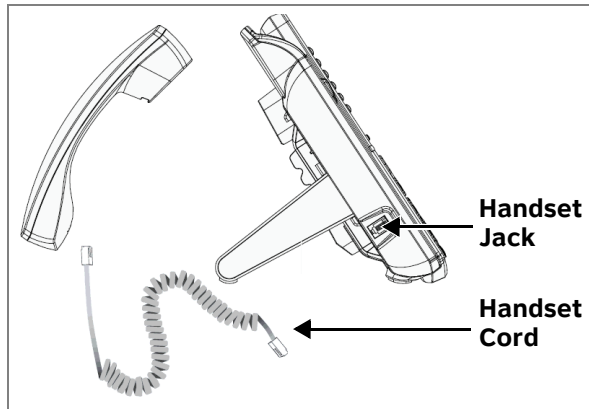


Figure 8. Handset Plug

▶ **Connect a corded handset:**

1. Plug the coiled end of the handset cord into the handset jack on the left side of the telephone, as shown in Figure 8.
2. Plug the 5-inch straight end of the handset cord into the handset, then hang up.

▶ **Connect an optional corded headset:**

1. Plug an optional corded headset into the RJ9 connector indicated in Figure 9.
2. Press **HEADSET** to use the corded headset.

The corded headset takes precedence over the cordless headset.

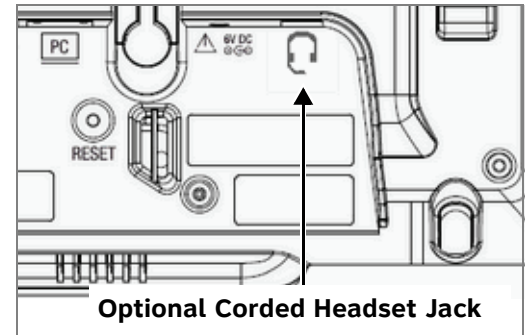


Figure 9. Optional Headset Install



CAUTION: Do not plug the corded headset into the jack for the corded handset.

► **To rotate the Handset tab for wall and Deskset Option 2 installation:**

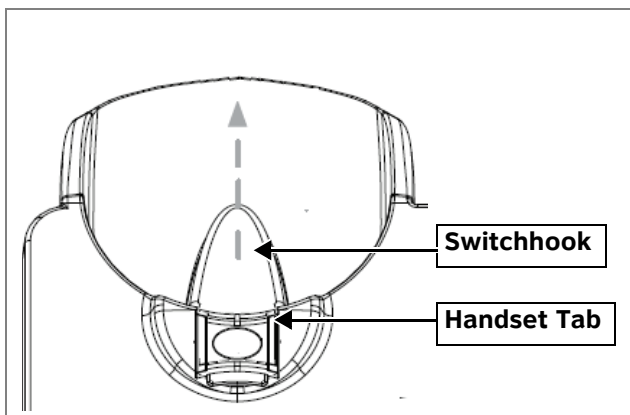


Figure 10. Handset Tab

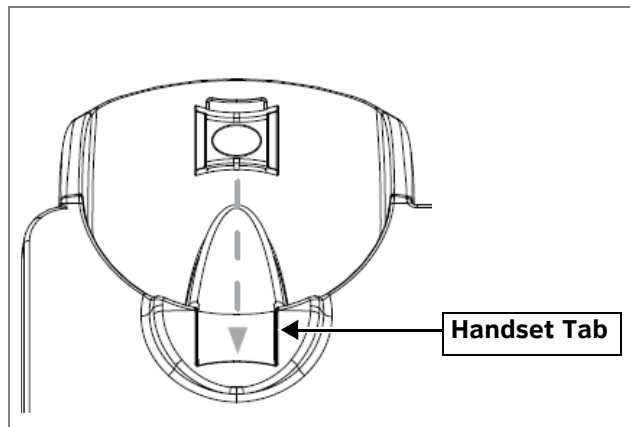


Figure 11. Replace Handset Tab

1. Press the Switchhook and slide the Handset Tab toward the top of the base, as shown in Figure 10.
2. Rotate the Handset Tab 180°, as shown in Figure 12.
3. Replace the Handset Tab back on the base, as shown in Figure 11.

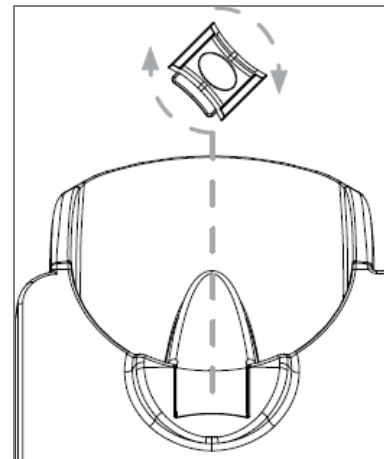


Figure 12. Handset Tab Rotation

Deskset Reset

Press the **RESET** button shown in Figure 13 by inserting a pen or paper clip into the hole and applying pressure to the button.

- Pressing the **RESET** button for less than five seconds reboots the Deskset (your user settings are unaffected).
- Pressing the **RESET** button for more than five seconds resets the Deskset to factory defaults and clears the system configuration (your user settings, Personal directory list, and the extension number). This is a complete reset, unlike the **Restore Default Settings** option in **Admin Settings** on the Deskset.

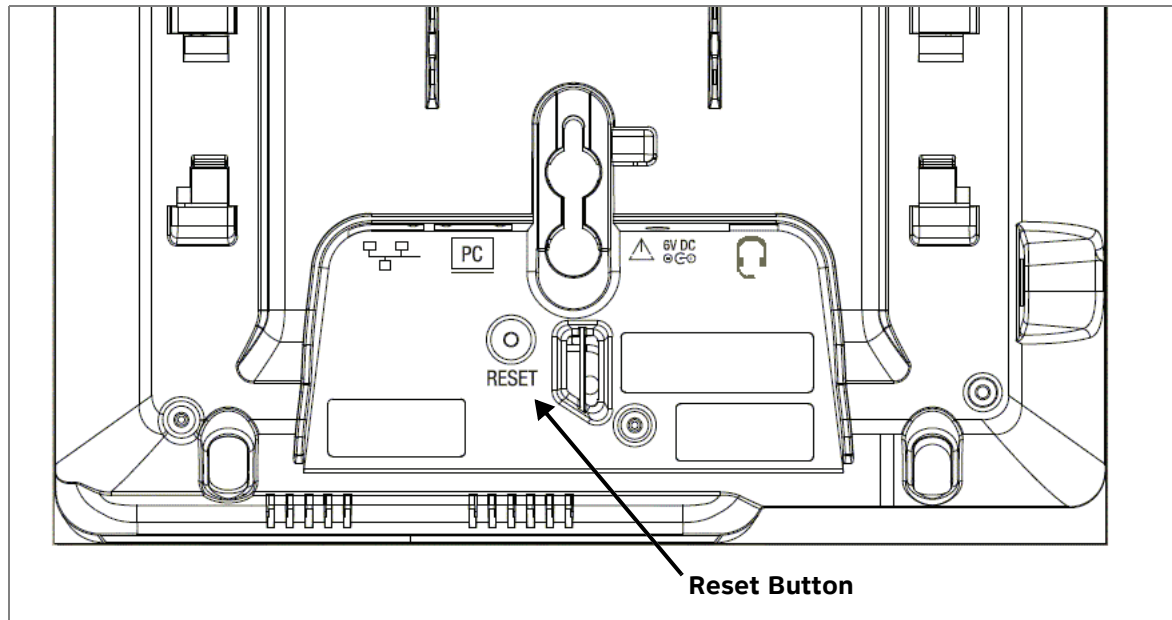


Figure 13. Deskset Reset Button

Gateway Installation

The system requires at least one Gateway for receiving or making external calls. You can place the Gateway on a table top or mount it into a standard 19" metal rack. The Gateway must be installed within three feet of the building ground point. Install each Gateway using the following instructions.

▶ To mount the Gateway into a standard 19" rack:

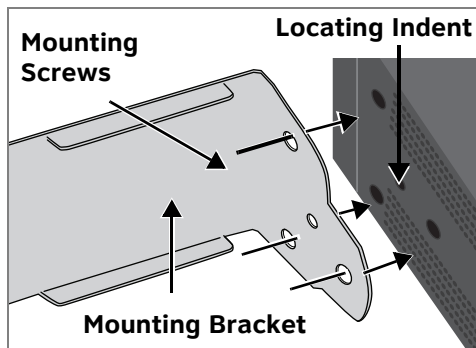


Figure 14. Rack-mount Bracket



Figure 15. Rack Installation

1. Remove the two Gateway mounting brackets and six screws from the packing tissue.
2. Position the right bracket at the front of the chassis, as shown in Figure 14.
3. Place the bracket on the chassis so that the locating indent on the bracket matches the indent on the chassis. This ensures that the screw holes are aligned.
4. Insert each of the three screws into the holes indicated in Figure 16 and tighten securely. Repeat the process for the left bracket.
5. Position the Gateway into the 19" metal rack, as shown in Figure 15.
6. Insert the top mounting screw (not included) in one side and turn it several turns to establish support. Repeat for the other side.
7. Tighten the screws.

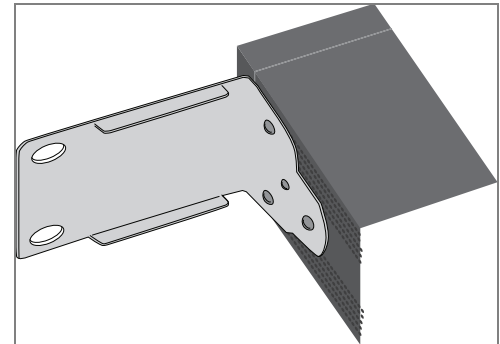


Figure 16. Bracket Installed

► **To install the Gateway:**

1. Connect the Gateway to Earth ground:

- a. Locate the Gateway within three feet (91.44 centimeters) of the building ground point, usually located at the electrical breaker box.



WARNING: *If you are unsure about the location of the building ground point or how to ground the Gateway, contact the facilities manager.*

- b. Loosen the screw retaining the silver grounding terminal on the back of the Gateway shown in Figure 17.

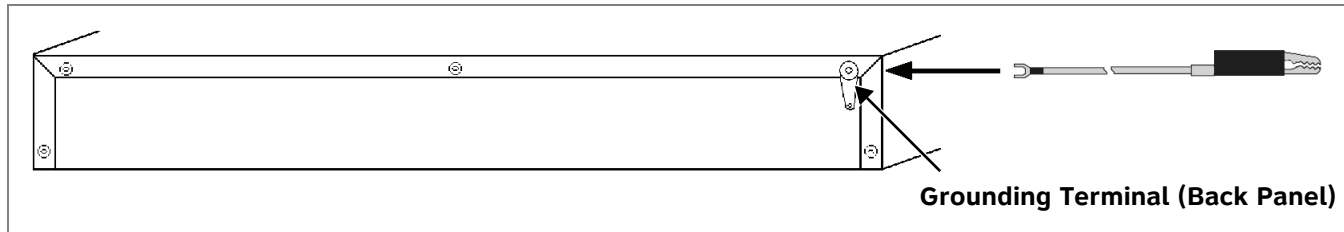


Figure 17. Gateway Grounding

- c. Insert the spade/fork end of the grounding cable under the grounding terminal.
- d. Tighten the screw.
- e. Connect the alligator clip end of the grounding cable to the building ground point.
2. Plug the AC plug into an electrical outlet not controlled by a wall switch and the DC plug into the DC5.1V jack, shown in Figure 18 "Gateway Installation" on page 12. Wait up to one minute until the screen lights up.



CAUTION: *To help prevent the loss of system data during power outages, plug the AC power plug into an Uninterruptible Power Supply (UPS).*

► **To install the Gateway: (Continued)**

3. Plug an RJ-45 Ethernet cable into the RJ-45 Ethernet port marked LAN. Plug the other end of the RJ-45 Ethernet cable into your office LAN.



CAUTION: Some DHCP servers have default settings that limit the number of IP addresses. Each Deskset, Gateway, and personal computer needs an IP address. Confirm that the IP range of your DHCP server is sufficient to accommodate all of your devices. Consult the IT department or the person that installed this system if you need help checking the DHCP server.

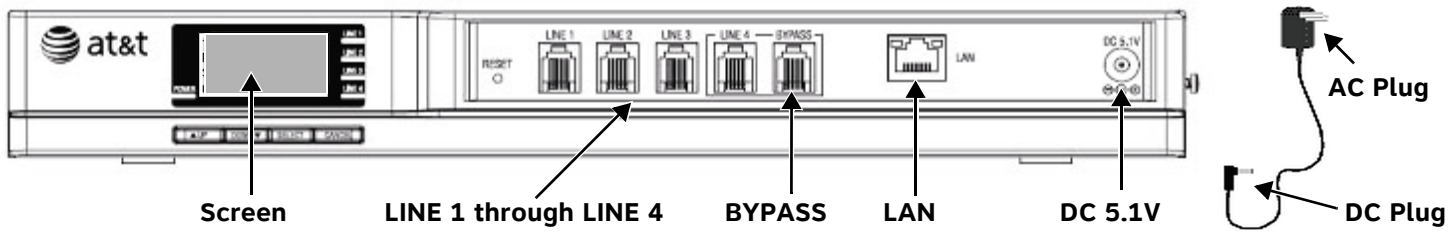


Figure 18. Gateway Installation

The Gateway Power-up Initialization sequence follows:

- About 20 seconds after turning on power to the Gateway, the POWER LED turns on, and the Initializing message displays on the screen a few seconds later.
- When the Gateway connects to the network, the message screen displays the **Synchronizing** screen to indicate that the Gateway is in the process of detecting and synchronizing with other devices on the network.
- Once the Gateway has successfully finished synchronizing with the rest of the system, the Idle screen updates with the time, date and the IP Address.



NOTE: The time and date may not be correct. See “System Basic Settings” on page 17 for information on setting the time and day.

▶ **To install the Gateway: (Continued)**

4. Remove the plastic covers from the PSTN (telephone) ports that will be used, marked **LINE 1** through **LINE 4**, and the **BYPASS** jack.



CAUTION: *If you subscribe to Digital Subscriber Line (DSL) high-speed Internet service through your telephone line, you must plug each DSL telephone line into a DSL filter. Then plug the DSL filter into the telephone wall jack, as shown in Figure 19.*

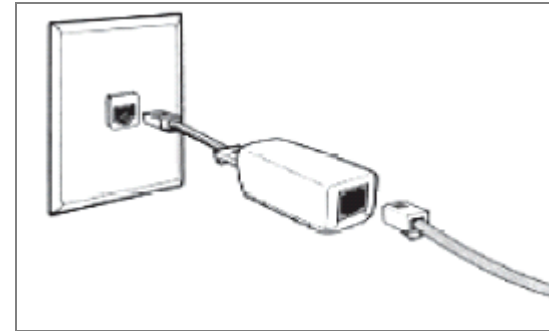


Figure 19. DSL Connection

5. Plug up to four telephone lines from the wall jacks into the Gateway. The line LEDs will blink for up to 15 seconds during initialization.



NOTE: For communication during power outages, plug an analog telephone into the **BYPASS** jack and a PSTN line into Line 4.



NOTE: When your installation is complete, back up the Deskset settings.



See “Backup and Restore Settings” in the “SB67010 PSTN Gateway, SB67030 Deskset System Administrator’s Guide”.



NOTE: For customer service or product information, contact the installer at the number on the cover of this guide. If your installer is unavailable, visit our website at **www.telephones.att.com** or call **1 (888) 916-2007**. In Canada dial **1 (888) 883-2474**.

Gateway Indicators

Figure 20 provides an illustration of the Gateway display and indicators.

Line LEDs indicate the following status for each PSTN line:

Red	Disconnected
Off	Connected
Green steady	In use
Green flashing quickly	Ringing

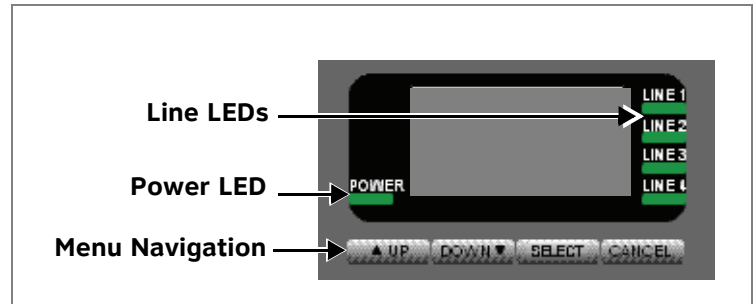


Figure 20. Gateway Indicators and Controls

Configuration

The Gateway searches for a Dynamic Host Configuration Protocol (DHCP) server and automatically assigns the IP address and configures the system. You can use either the Gateway menu or the WEBUI for configuration. This document describes using the WEBUI starting on page 16, which is more convenient.



Refer to the “SB67010 PSTN Gateway, SB67030 Deskset System Administrator’s Guide” for information on configuration using the Gateway menu.



CAUTION: AT&T does not recommend using a Static IP. Contact the installer at the number on the cover of this guide if static IP editing is required.

Gateway Reset

Press the **RESET** button shown in Figure 21 by inserting a pen or paper clip into the hole and applying pressure to the button.

- Pressing the **RESET** button for less than five seconds reboots the Gateway (your system settings are unaffected).
- Pressing the **RESET** button for more than five seconds resets the Gateway to factory defaults and clears the system configuration (Auto Attendant settings, Ring Groups, Hold message, and System Directory).

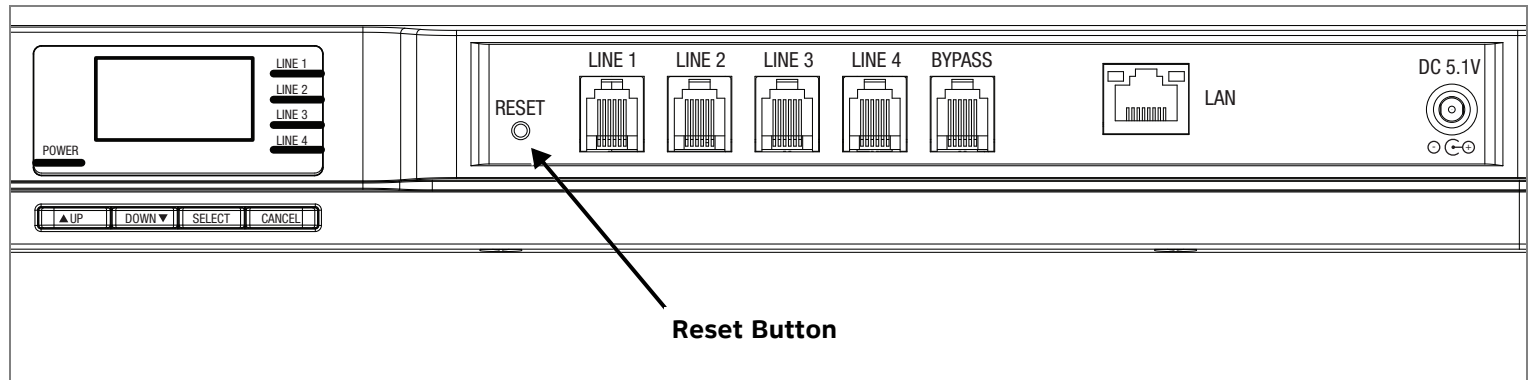


Figure 21. Gateway Reset Button

Web User Interface (WEBUI) Overview

Once a Gateway and at least one Deskset are connected to the LAN, you can use the Web User Interface (WEBUI) to administer the system. Only one person should log in as System Administrator at a time to prevent accidentally overwriting and losing intended changes.

► To access the Browser Interface:

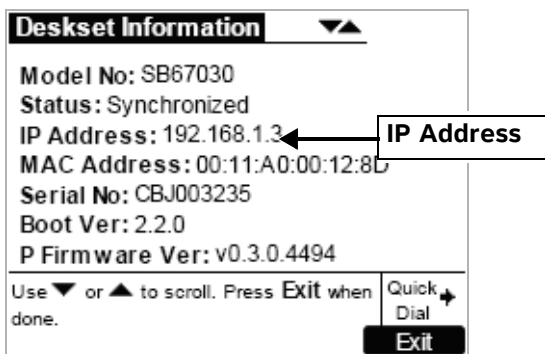


Figure 22. Deskset Information Screen

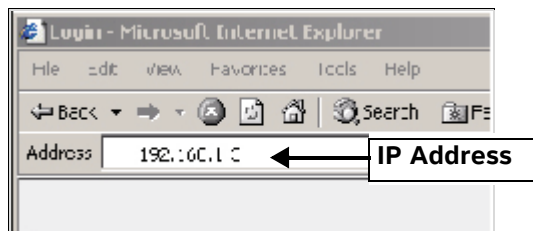


Figure 23. Browser Entry

1. On your Deskset, click **MENU**.
2. To display the **Deskset Information** screen shown in Figure 22, press **4** on the dial pad.
3. Find your IP Address on the **Deskset Information** screen.
4. Open a browser on a PC on the same network as the Deskset. AT&T recommends Internet Explorer 6 or higher for best performance.
5. Type the Deskset IP address in the address bar, as shown in Figure 23, and press **ENTER**. The Browser displays a login screen, as shown in Figure 24.
6. Enter **admin** in the **Login Name:** field and **12345** in the **Password** field, then click **Login**. You may change your User ID and password once you are logged in.

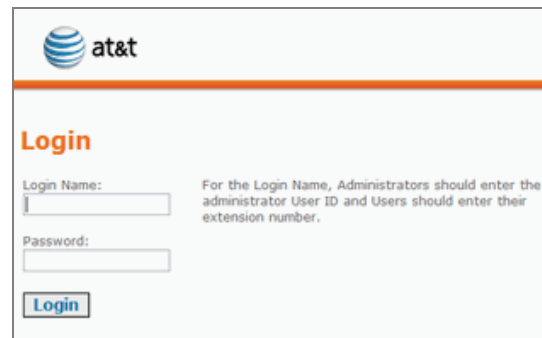


Figure 24. Login

System Basic Settings

► To view or modify the system basic settings:

System Basic Settings

Administrator Account:

Administrator User ID:

Administrator Password:

Operator Extension:

Assign Operator *0* Extension:

Telephone Line To Telephone Line Call Timer:

Maximum Call Duration:

System Time/Date Options:

Set Time by NTP Server

NTP Server:

Default

Custom Time Server:

Time Zone:

Daylight Savings Time: Yes No

Manual

Hour Min Am/Pm Month Day Year

Time Zone:

Daylight Savings Time: Yes No

Figure 25. System Basic Settings Menu

1. To access the **System Basic Settings** menu as shown in Figure 25, click **Basic Settings** in the left navigation menu.

■ Optional: Change the **Administrator User ID** and/or **Administrator Password**.

- Optional: Any Deskset can be designated as the operator station. Incoming calls are forwarded to the operator station if the caller presses **0** (zero) while in the Auto Attendant.
- Optional: The Telephone Line To Telephone Line Call Timer allows you to limit the duration of calls forwarded to outside lines, which occupy two phone lines. The administrator controls whether calls are allowed to be forwarded to outside lines.



See the “SB67010 PSTN Gateway, SB67030 Deskset System Administrator’s Guide” for more information on these settings.

2. Click the **Set Time by NTP Server** button:

AT&T recommends that the Desksets get the time and date they display from the online NTP server, although there are other choices on this screen:


- a. The system defaults to **Set Time by NTP Server**.
- b. Select your time zone from the **Time Zone** drop-down menu.
- c. Click the **Yes** or **No** button for **Daylight Savings Time**.

3. Click .

Ring Groups

Extensions can be grouped together to form up to 10 ring groups. For example, all extensions in the sales department could be defined as a ring group. You cannot call a ring group internally. To forward incoming calls to a particular ring group, use the Auto Attendant (see “Creating Auto Attendant Menus” on page 22). When the call is forwarded, all extensions assigned to the group ring. Designate one extension in the Ring Group to record a voicemail message when no phones in the ring group answer a call.

► To change the Ring Group settings:

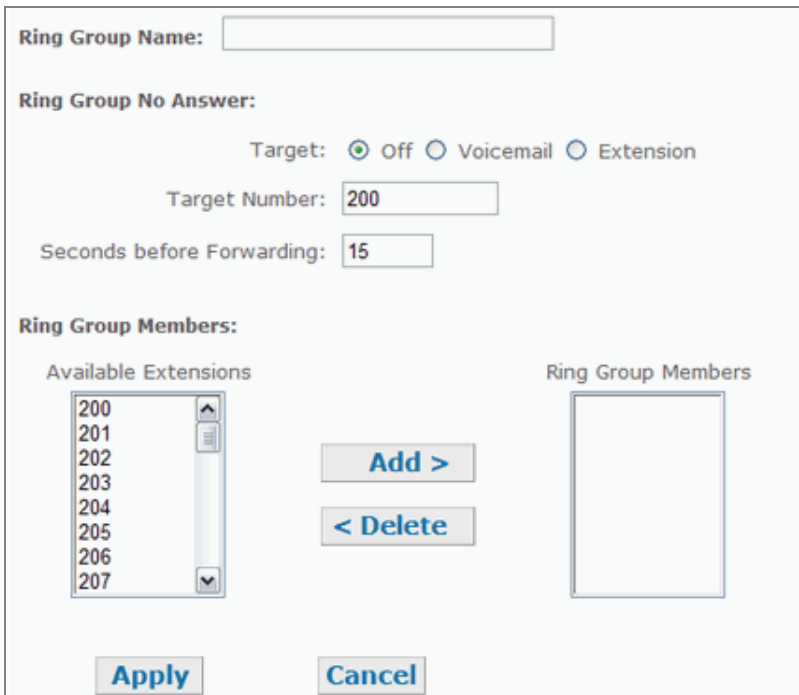

The screenshot shows the 'Ring Group Settings' configuration page. It includes the following fields and controls:

- Ring Group Name:** An empty text input field.
- Ring Group No Answer:**
 - Target:** Radio buttons for 'Off' (selected), 'Voicemail', and 'Extension'.
 - Target Number:** A text input field containing '200'.
 - Seconds before Forwarding:** A text input field containing '15'.
- Ring Group Members:**
 - Available Extensions:** A list box containing the numbers 200, 201, 202, 203, 204, 205, 206, and 207.
 - Ring Group Members:** An empty list box.
 - Buttons:** 'Add >' and '< Delete' buttons are positioned between the two list boxes. 'Apply' and 'Cancel' buttons are at the bottom.

Figure 26. Ring Group Settings

1. Click **System Settings** in the left navigation menu and then click **Ring Groups**.
2. To name a new ring group and add extensions to the group, click **Create New Ring Group** to display the screen shown in Figure 26. Fill in the desired fields on that screen.
3. To add extensions to the group, highlight the extensions in the **Available Extensions** box and click **Add >**.
4. When you are done, click **Apply**. The new ring group appears on the Ring Groups Summary page.

Auto Attendant Overview

Use the Auto Attendant to automatically answer incoming calls. Depending on your system setup, your callers hear an opening menu providing instructions that allow them to use a touch-tone® telephone to reach the appropriate person, ring group, Company Directory, or operator. This menu can be different at different times of the day (day, night, and lunch). If you disable the Auto Attendant, all incoming calls ring only at the operator extension, which defaults to Extension 200.

Here is an example of what callers might hear when they call during the day:

“This is the Widget Company. If you know your party's extension, dial it now. For a list of salespeople, press 1. For customer service, press 3. To hear a recording of our hours, press 9. To hear our company directory, press 0.”

Recording User Name

To have the system announce a user's name to callers accessing the Company Directory, each user's name must be recorded for every Deskset in the system. If no name is recorded, the system announces the extension number. To record the name at each Deskset:

1. Press **MENU**.
2. Press **2 (User Settings)**.
3. Press **4 (Name Recording)**.
4. Press **2 (Play/Rec Personal Name)**.
5. Press **Record** and speak the user's name into the telephone microphone and then press **Stop**.
6. Press **Exit**.
7. Press **Save**.

Callers can use the dial pad to “spell” the users' names as they have been entered in the Display Name fields on “Extension Basic Settings” on page 26.

Auto Attendant Configuration

► To set up the Auto Attendant Timing:

Auto Attendant General Settings

Enable Auto Attendant:

- Scheduled (Day and Night menu are scheduled as defined below)
- Manual Lunch Menu ▼
- Off (All calls to Operator)

Figure 27. Auto Attendant Menu

Schedule for Day/Night Menus:

	Day Start	Night Start
Mon	⋮ ▼ 00 ▼ AM ▼	07 ▼ 00 ▼ PM ▼
Tue	07 ▼ 00 ▼ AM ▼	07 ▼ 00 ▼ PM ▼
Wed	07 ▼ 00 ▼ AM ▼	01 ▼ 00 ▼ PM ▼
Thu	07 ▼ 00 ▼ AM ▼	07 ▼ 00 ▼ PM ▼
Fri	07 ▼ 00 ▼ AM ▼	07 ▼ 00 ▼ PM ▼

Figure 28. Set Schedule

1. Click **Auto Attendant** in the left navigation menu.
2. To set whether the system or the operator answers the phone and to set the times for different opening messages to callers, locate **Enable Auto Attendant:** shown in Figure 27 and click one of the following buttons:
 - To automatically change the message with the time of day, select the **Scheduled** button. You cannot automatically set or schedule Lunch mode.
 - a. Set the start times for day and night modes for each day of the week, or accept the default times at the bottom portion of the screen shown in Figure 28. Click on the drop-down boxes to adjust the time. Minutes are set in five-minute increments. Selecting the three dots shown in the hour drop-down box (...) extends the previous mode.
 - b. Select the menu you created for that time from the appropriate **Opening Menu Selection**. See “Creating Auto Attendant Menus” on page 22.

▶ **To set up the Auto Attendant Timing: (Continued)**


- To immediately change to a different time mode, click the **Manual** button.
 - a. To choose a mode, click on the drop-down list beside this option and select **Day Menu**, **Night Menu** or **Lunch Menu**. The default is **Day Menu**.
 - b. Select the menu you created for that time from the appropriate **Opening Menu Selection**.
 - c. Select the **Off** button to direct calls to the operator station instead of the Auto Attendant.
3. To save the settings, click **Apply** .

Opening Menu Selection

When the Auto Attendant answers an incoming call, the callers hear the opening menu. If you have not created custom opening menus (see “Creating Auto Attendant Menus” on page 22), the opening menu for each mode is set to the default menu, as shown in Figure 29. The default prompt is: “Enter the extension number or enter 0 for the operator”.

1. Once an opening menu has been created, go to **Opening Menu Selection** and choose the menu for that time from the drop-down box.
2. A custom menu can be selected, regardless of the intended mode (day, lunch, or night).

You can also create other menus that callers can choose by pressing dial keys on their phone. For instance, callers might choose to access a menu announcing your hours of operation.

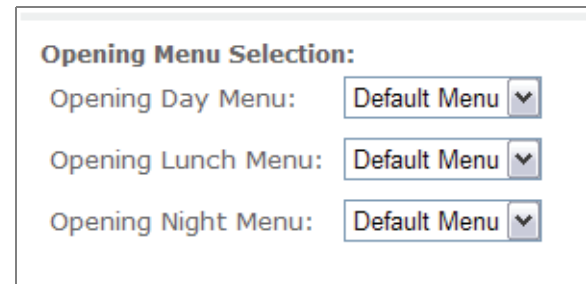

Opening Menu Selection:

Opening Day Menu: Default Menu ▼

Opening Lunch Menu: Default Menu ▼

Opening Night Menu: Default Menu ▼

Figure 29. Opening Menu Selection

Creating Auto Attendant Menu

Menus consist of a combination of recordings that callers hear and lists of actions they can take. To create the menu, plan what you want callers to be able to do. Write down the first announcement you want your callers to hear during daytime calls.

Use the Auto Attendant Menu Editor to provide your callers with choices by creating menus. Access the Auto Attendant Menu Editor from **Auto Attendant/Menu** in the navigation menu on the left.

► **To create a menu:**

Auto Attendant Menu Editor

Select Menu to Edit:

Menu Name:

Voice Prompt:

Enable Direct Dial: On Off

Enable Operator: On Off

Press 1: Press 2:

Press 3: Press 4:

1. Click **Menu** under **Auto Attendant** in the left navigation menu to access the Auto Attendant Menu Editor shown in Figure 30.
2. Create a **Menu Name**. For the announcement for the Opening menu that callers hear during the day, you could use “day” as the menu name.
3. To create a recording, click .
4. Follow the procedure on the Auto Attendant Voice Prompts screen shown in “Auto Attendant Voice Prompts” on page 24.

Figure 30. Auto Attendant Menu Editor - Part 1

You can create actions using the **Menus** selection under **Auto Attendant** in the navigation menu on the left.

▶ **To add actions to menus:**

Press 1: <input type="text" value="None"/>	Press 2: <input type="text" value="None"/>
Press 3: <input type="text" value="None"/>	Press 4: <input type="text" value="None"/>
Press 5: <input type="text" value="None"/>	Press 6: <input type="text" value="None"/>
Press 7: <input type="text" value="None"/>	Press 8: <input type="text" value="None"/>
Press 9: <input type="text" value="None"/>	Press 0: <input type="text" value="None"/>
Press #: <input type="text" value="None"/>	Press #: <input type="text" value="None"/>

Figure 31. Auto Attendant Menu Editor - Part 2

Example: For our example on page 19, the menu name could be “day”. At the **Press 1** drop-down menu, choose “sales team” from the menus that you have created. At the **Press 3** drop-down menu, choose a ring group that you have created. From the menus that you created, choose “hours” from the drop-down menu next to **Press 9**, and make sure that **Direct Dial** and **Operator** are enabled.

- Allow callers to dial users’ extensions directly by selecting the **Enable Direct Dial On** button shown in Figure 30 “Auto Attendant Menu Editor - Part 1” on page 22. Callers will not be able to press **2** for other actions.
- Allow callers to press **0** (zero) to reach the operator, (defaulting to Extension 200) by selecting the **Enable Operator On** button. Callers will not be able to press **0** for other actions.
- Choose from the drop-down menus next to the **Press #** boxes shown in Figure 31 to define the result of a caller’s dial pad selection.
 - Choose Directory for the Company Directory. Users can create name recordings at their Desksets. See “Recording User Name” on page 19.
 - Choose to replay a menu, or go to the previous or opening menu.
 - Choose another menu you have created.
 - Choose to call a ring group.

Create as many actions as you wish. Be sure to click when done. To choose your opening menu and to set the timing for your Auto Attendant, click **Auto Attendant** and then **General Settings**.

Auto Attendant Voice Prompts

1. Select the extension to be used for the recording:

200

2. OPTIONAL - Use the box on the right to write a script for your recording.
3. When you are ready to start recording, press the Start Recording button. Remember to come back to this page and press Save.
4. The extension selected will begin ringing. Pick up the handset to begin the prompt recording session. Follow the voice instructions given through the handset.
5. After you've completed recording the prompt, hang up the handset.
6. Now press the Save Recording button to save the new voice prompt.
7. If at any time you wish to cancel the recording, hang up the handset and press the Cancel button.

Script Editor

Start Recording

Save Recording

Cancel

Figure 32. Auto Attendant Voice Prompts Menu

Auto Attendant Voice Prompts

Figure 32 shows the Auto Attendant Voice Prompts menu. This menu provides instructions for recording voice prompts and a Script Editor for writing your prompts.

Identify an extension from which to record the announcement so you can use the telephone microphone for recording. When the extension rings, lift the corded handset, and follow the recorded instructions.

When you are done recording, press **5**, hang up, and click **Save Recording** to save the recording. You will return to the **Auto Attendant Menu Editor** so that you can add actions to the menu.

Here is an example of an opening daytime announcement:

"This is the Widget Company. If you know your party's extension, dial it now. For a list of salespeople, press 1. For customer service, press 3. To hear a recording of our hours, press 9. To hear our directory, press 0."

That would be the "day" announcement which could be part of the **Opening Day Menu**.

Then if the caller presses **1**, they may hear, "For North America Press **1**, For Asia, Press **3**." When you record this menu, you might want to call it the "sales team" menu, which would be used in the **Opening Day Menu**.

System Directory

Create a list of phone numbers (referred to as System list on the Deskset) that people at your business frequently call. These numbers are available to all of the extensions.



See the “AT&T SB67030 Deskset User’s Guide” for more information on entering and using System Directory numbers.

► To set up the System Directory:

System Directory

Add New Entry

Delete Selected Entries

Sort Last Name

<input type="checkbox"/>	Charlie Johnson	888-883-2445	[Edit]
<input type="checkbox"/>	Mary Williams	888-722-7702	[Edit]
<input type="checkbox"/>	Robert Brown	888-490-2005	[Edit]
<input type="checkbox"/>	Linda Miller	800-222-3111	[Edit]

Figure 33. System Directory

Edit System Directory Entry

First Name:

Last Name:

Phone Number:

Apply

Cancel

Figure 34. Edit System Directory

1. Click **System Directory** in the left navigation menu to display the menu shown in Figure 33.
2. Click **Add New Entry**.
3. Complete the form shown in Figure 34 with the information indicated. For outside phone numbers enter a **9** first.
4. Click **Apply** to save the entry. The System Directory menu appears with the entry added.

Extension Basic Settings

The Extension Basic Settings menu displays the settings for an individual extension.



For information about the items on the screens that are not described here, see “Extension Basic Settings” in the “SB67010 PSTN Gateway, SB67030 Deskset System Administrator’s Guide”.

► To set the Phone Settings - Basic Settings:

Basic Settings

Select Extension: 208

Display Name:
First Name: Angela
Last Name: Martin

Change Extension Number to: 208
Please make sure the extension is not in use before changing the extension number.

Call Forward / Transfer to Line: Off On

Call Forward No Answer Settings:
Call Forwarding: Off On
Target Type: Voicemail
 Extension
 Telephone Line

Extension Number: 208
Telephone Number:

Seconds before Forwarding: 15 Seconds

Web/Voice Mail Pass Code: 201185

Figure 35. Basic Phone Settings

1. Click **Phone Settings** in the left navigation menu.
2. Select an extension from the **Select Extension** drop-down menu to display the menu shown in Figure 35.
3. **Display Name:** displays the name for the current extension.
 - Enter a new name into the **First Name:** and **Last Name:** fields and select .
4. To change the **Call Forward No Answer Settings:**
 - a. Select **On** or **Off** from the **Call Forward:** buttons.
 - b. Select either **Voicemail**, **Extension**, or **Telephone Line** (outside number) as the **Target Type:**
 - c. Enter the outside phone number if **Telephone Line** has been selected as the **Target Type:**
 - d. Enter a delay in seconds.
5. **Optional:** Enter 4 to 6 digits to create a voicemail pass code for this extension.
6. Click .

Product Registration

In order to keep your system up to date with the latest upgrades and ensure timely warranty support, it is extremely important to register your system. You can register you system online at <http://telephones.att.com/sb67030>.

► **To obtain the MAC address and register your product:**

System Information

The following devices are registered in this site:

Desk Phones: 40
Gateways: 1
Lines: 0

For detailed information regarding this site, press the button below. The report could take up to 10 seconds to generate.

[Detailed Site Information](#)

Device Type	Ext/Line Numbers	Mac Address	Model	Connected
Deskset	200	00:11:A0:09:F1:9D	SB67030	Y
Deskset	201	00:11:A0:09:F4:FB	SB67030	Y
Deskset	202	00:11:A0:09:F2:14	SB67030	N

1. Perform “To access the Browser Interface:” on page 16.
2. Click [Detailed Site Information](#) to display the MAC address table shown in Figure 36.
3. Open a new tab in the browser and navigate to the <http://telephones.att.com/sb67030> website.
4. Complete the form. To enter the MAC address, copy the information from the **System Information** screen and paste it into the **System Registration** form.
5. When the form is complete, click [Register Product](#).

Figure 36. Site Information



NOTE: When your installation is complete, back up the Deskset settings.



See “Backup and Restore Settings” in the “SB67010 PSTN Gateway, SB67030 Deskset System Administrator’s Guide”.



www.telephones.att.com

© 2009 Advanced American Telephones. All Rights Reserved. AT&T, the AT&T logo and the slogan "Your world. Delivered." are trademarks of AT&T Intellectual Property licensed to Advanced American Telephones, San Antonio, TX 78219.
Printed in China Issue 4.0 11/09