

**INSTRUCTION
MANUAL**

DAY AND NIGHT COLOR CAMERA

MODEL HDC518



CLOVER
Electronics USA

Copyright © 2007 Clover Electronics U.S.A. All Rights Reserved.

PRECAUTIONS

- To avoid electrical shock, do not open the case of this product.
- Operate this product using only the supplied AC Power supply.
- Do not overload electrical outlets or extension cords; this can result in fire or electric shock.
- Keep this product away from strong magnetic fields.
- Do not expose this product in direct sunlight or strong reflected rays.
- Refer servicing to qualified personnel only.
- Do not change or modify this product, the warranty will be voided.

FEATURES




- Weatherproof (IP67)
- 1/3" Sony Super HAD CCD
- High Resolution 560 TV Lines
- Rugged Steel Construction
- Total 86 Infrared LEDs with a CDS sensor
- Up to 120' IR range (depends on scene reflection)
- 6 mm Fixed Lens
- Attached Universal Mounting Bracket and 100' cable
- DC12V Power Source

INSTALLATION

1. Attach the mounting bracket base ring① to the wall or ceiling, wherever you want to install the camera. Locate a wall stud or ceiling joist and secure the bracket base ring using the supplied screws. Attach the mounting bracket② to the base ring① and secure them using the supplied screws.
2. Lock the mounting bracket with the locking ring③.
3. Turn the pivot locking screw④ with the provided hex-head wrench counter-clockwise to set the desired angle of camera toward objects and turn it clockwise to secure. It can be used for wall-mount or ceiling-mount application depending on setting this pivot locking screw.
4. Loosen the locking screw⑤ with the provided hex-head wrench and turn the camera clockwise or counter-clockwise to upright images on the screen and turn it clockwise to secure.
5. Connect the one end of 100' cable (supplied) to the Din jack of 5' cable attached to the camera. Make sure that two arrows on the top of them should be aimed at each other. Connect the other end (BNC or RCA) of cable to the video devices such as

DVR, monitor/TV. Plug the provided AC adapter to the DC jack (red) of the end of 100' cable.

6. Sun-visor[®]: Pull forward or backward to avoid the sunlight or other lighting sources.

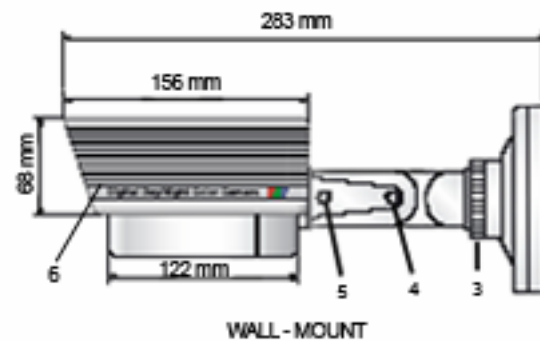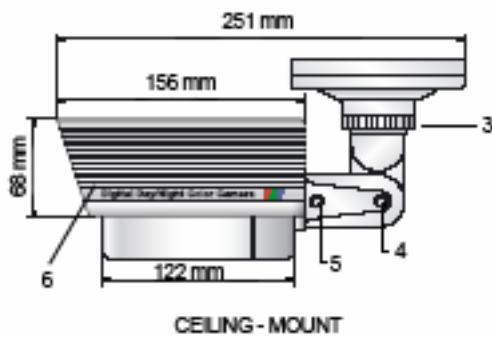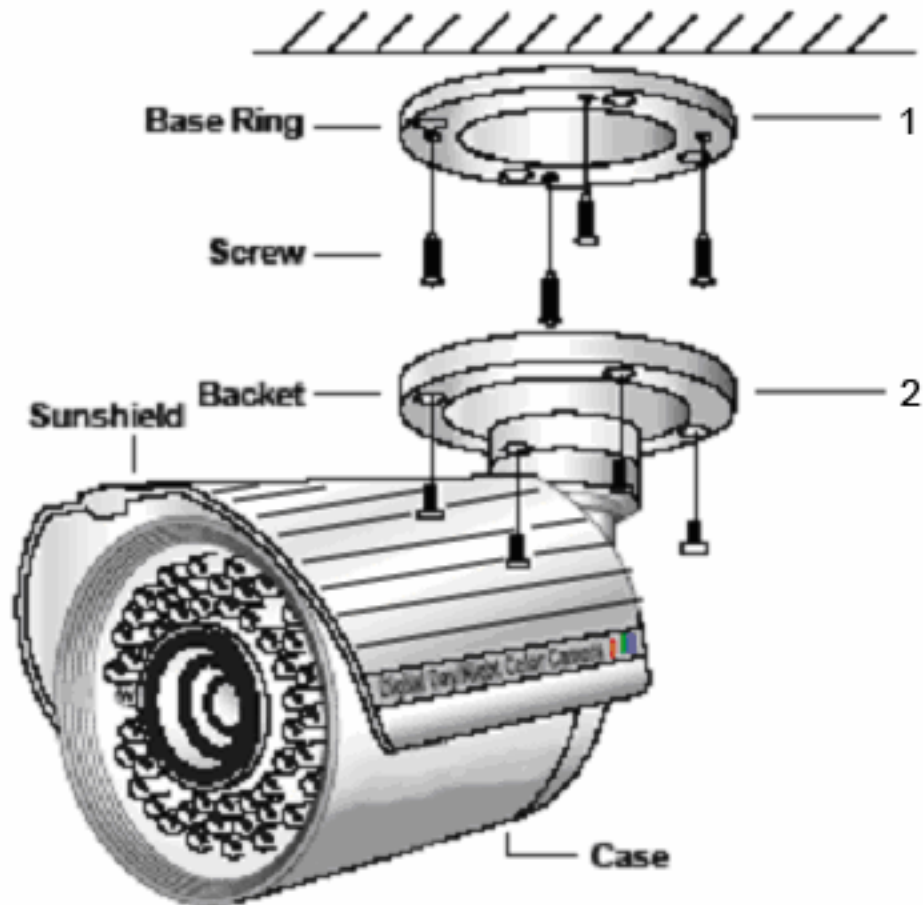

Note:

- **Apply the provided AC adapter only.**
- **The total length of cable must not exceed 200' including extension cable.**

TROUBLE SHOOTING

If the camera does not function properly, check the following points before contacting the service center.

Troubles	Remedies
No video	Check the AC adapter and video cable between the camera and a monitor
The image on the screen is dark	Check the brightness control on the monitor
The image on the screen is dim	Check if the lens is stained. If dirty, clean it with soft and clean cloth
The camera is not working properly, and the surface of the camera case is hot	Check if you have connected the provided AC adapter
The contrast on the screen is too weak	Adjust the contrast feature of the monitor. If the camera is exposed under too strong light, change the position
The image on the screen flickers	Does the camera face to directly to the sunlight or fluorescent light? Change the camera position
Picture rolls and jumps, scrambled picture	Improper V-hold control. Setting on your monitor
Picture smaller than screen	House current may be too low

SPECIFICATIONS

- | | |
|-------------------------|--------------------------------------|
| • Image sensor | 1/3" Sony Super HAD CCD, 811H x 508V |
| • Effective pixels | 768H x 494V |
| • Scanning system | 525 lines, 2:1 interlace |
| • Horizontal resolution | 560 TV lines |
| • Shutter speed | Auto, Manual (1/60 to 1/120,000 sec) |
| • Sync. System | Internal |
| • S/N ratio | more than 50db (AGC off) |
| • Minimum illumination | 0.01 Lux @F1.2 |
| • Video output | Composite 1.0Vp-p @75 Ω |

- | | |
|---------------------------|------------------|
| • AGC | Auto |
| • Digital Noise Reduction | Auto |
| • White balance | Auto |
| • Lens | 6mm fixed lens |
| • Current consumption | 650mA Max @DC15V |
| • Power supply | DC 15V, 1.5A |
| • Operating temperature | -10°C to 50°C |
| • Dimensions | 93Ø x 230(L) mm |
| • Weight | 2.9 Lbs |

LIMITED 2 YEAR WARRANTY

This warranty gives the original purchaser specific legal rights and you may also have other rights, which vary from state to state. If our products do not function because of any defect in material or workmanship, we will repair free of charges for 2 years on parts and labor from the date of original purchase. This warranty does not cover modification, abuse, incidental or consequential damages unless the state of owner's residence specially prohibits limitations on incidental or consequential damages.

HOW TO OBTAIN FACTORY SERVICE

1. Original purchaser must fill out a warranty card and mail it to the factory with model number, serial number and the date of purchase.
2. We will repair or replace, and return to the owner the system under this limited warranty.
3. Please pack the system carefully and securely using the original packing materials, and send it prepaid and insured to: 13073 E. 166th St, Cerritos, CA 90703.
4. Please include a check for \$25.00 to cover the cost of return postage and handling. If the system is returned within the warranty period, please include a proof of purchase. If the system is out of warranty, you will receive an estimate of the repair cost for your approval before repair work will be begun.

AVAILABLE ACCESSORIES

- | | |
|---------|---|
| CDR4010 | Stand-alone 4 CH Digital Video Recorder (DVR). |
| CDR4170 | Stand-alone 4 CH Digital Video Recorder (DVR). |
| CDR1610 | Stand-alone 16 CH Digital Video Recorder (DVR). |
| CDR0850 | Stand-alone 8 CH Digital Video Recorder (DVR). |
| CA100H | 100' 6pin Din Extension cable. |

PACKAGE INCLUDES

1-Day & Night Color Camera
1-100' 6pin Din Cable
1-UL Approved AC Adapter
1-BNC to RCA Adapter
1-Hardware Accessories Kit
1-Instruction Manual
1-Warranty Registration Card