

TOSHIBA

FILE NO. 020-200012

SERVICE MANUAL

COLOR TELEVISION

NONSP Chassis

50A60, 50A50

(TAC0050)

(TAC0051)

55A60, 61A60

(TAC0052)

(TAC0053)

TABLE OF CONTENTS

CHAPTER 1 GENERAL ADJUSTMENTS

SAFETY INSTRUCTIONS	3
CRT ASSEMBLY REPLACEMENT AND MOUNTING	4
PICTURE TUBE COMPONENTS ADJUSTMENT	6
REPLACEMENT OF THE CRT	8
SERVICE MODE	9
ELECTRICAL ADJUSTMENT	11
CONVERGENCE ADJUSTMENT	13
SCREEN AND MIRROR ALIGNMENTS	15
CIRCUIT CHECKS	16

CHAPTER 2 SPECIFIC INFORMATIONS

SETTING & ADJUSTING DATA	17
LOCATION OF CONTROLS	18
PROGRAMMING CHANNEL MEMORY	20
CIRCUIT BLOCK DIAGRAM	21
MECHANICAL DISASSEMBLY	23
CHASSIS REPLACEMENT PARTS LIST	25
PC BOARDS BOTTOM VIEW	41
TERMINAL VIEW OF TRANSISTORS	51
SPECIFICATIONS	53
APPENDIX:	
CIRCUIT DIAGRAM	

CHAPTER 1 GENERAL ADJUSTMENTS

SAFETY INSTRUCTIONS

WARNING: BEFORE SERVICING THIS CHASSIS, READ THE "X-RAY RADIATION PRECAUTION", "SAFETY PRECAUTION" AND "PRODUCT SAFETY NOTICE" INSTRUCTIONS BELOW.

X-RAY RADIATION PRECAUTION

1. Excessive high voltage can produce potentially hazardous X-RAY RADIATION. To avoid such hazards, the high voltage must not be above the specified limit. The nominal value of the high voltage of this receiver is (A) kV at zero beam current (minimum brightness) under a 120V AC power source. The high voltage must not, under any circumstances, exceed (B) kV.

Refer to table-1 for high voltage (A), (B).
(See SETTING & ADJUSTING DATA on page 17)

Each time a receiver requires servicing, the high voltage should be checked following the HIGH VOLTAGE CHECK procedure in this manual. It is recommended that the reading of the high voltage be recorded as a part of the service record. It is important to use an accurate and reliable high voltage meter.


2. This receiver is equipped with a Fail Safe (FS) circuit which prevents the receiver from producing an excessively high voltage even if the B+ voltage increases abnormally. Each time the receiver is serviced, the FS circuit must be checked to determine that the circuit is properly functioning, following the FS CIRCUIT CHECK procedure in this manual.
3. The only source of X-RAY RADIATION in this TV receiver is the picture tube. For continued X-RAY RADIATION protection, the replacement tube must be exactly the same type tube as specified in the parts list.
4. Some part in this receiver have special safety-related characteristics for X-RAY RADIATION protection. For continued safety, parts replacement should be undertaken only after referring to the PRODUCT SAFETY NOTICE below.

SAFETY PRECAUTION

WARNING : Service should not be attempted by anyone unfamiliar with the necessary precautions on this receiver. The following are the necessary precautions to be observed before servicing this chassis.

1. An isolation Transformer should be connected in the power line between the receiver and the AC line before any service is performed on the receiver.
2. Always discharge the picture tube anode to the CRT conductive coating before handling the picture tube. The picture tube is highly evacuated and if broken, glass fragments will be violently expelled. Use shatter proof goggles and keep picture tube away from the unprotected body while handling.
3. When replacing a chassis in the cabinet, always be certain that all the protective devices are put back in place, such as; non-metallic control knobs, insulating covers, shields, isolation resistor-capacitor network etc.
4. Before returning the set to the customer, always perform an AC leakage current check on the exposed metallic parts of the cabinet, such as antennas, terminals, screwheads, metal overlays, control shafts etc. to be sure the set is safe to operate without danger of electrical shock. Plug the AC line cord directly into a 120V AC outlet (do not use a line isolation transformer during this check). Use an AC voltmeter having 5000 ohms per volt or more sensitivity in the following manner:

Connect a 1500 ohm 10 watt resistor, paralleled by a 0.15 μ F, AC type capacitor, between a known good earth ground (water pipe, conduit, etc.) and the exposed metallic parts, one at a time. Measure the AC voltage across the combination of 1500 ohm resistor and 0.15 μ F capacitor. Reverse the AC plug at the AC outlet and repeat AC voltage measurements for each exposed metallic part. Voltage measured must not exceed 0.3 volts rms. This corresponds to 0.2 milliamp. AC. Any value exceeding this limit constitutes a potential shock hazard and must be corrected immediately.

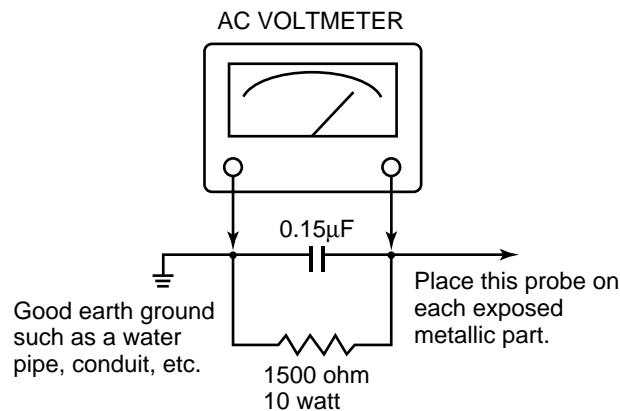


PRODUCT SAFETY NOTICE

Many electrical and mechanical parts in this chassis have special safety-related characteristics. These characteristics are often passed unnoticed by a visual inspection and the protection afforded by them cannot necessarily be obtained by using replacement components rated for higher voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in this manual and its supplements; electrical components having such features are identified by the international hazard symbols on the schematic diagram and the parts list.


Before replacing any of these components, read the parts list in this manual carefully. The use of substitute replacement parts which do not have the same safety characteristics as specified in the parts list may create shock, fire, X-ray radiation or other hazards.

CRT ASSEMBLY REPLACEMENT AND MOUNTING


CAUTION : DO NOT LOOSEN THE HEX HEAD BOLTS WITH SPRINGS (12 PCS), BECAUSE THOSE ARE FOR SEALING OF CRT COOLANT.

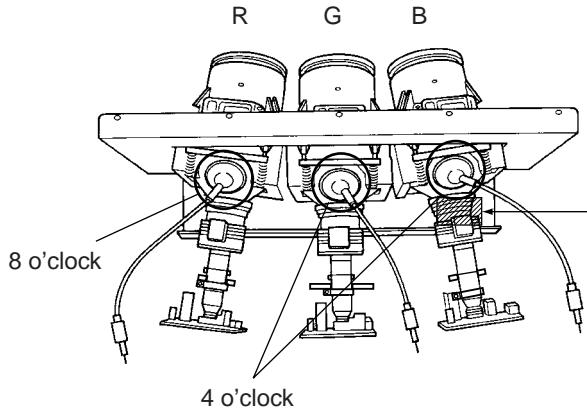

Attention Serviceman

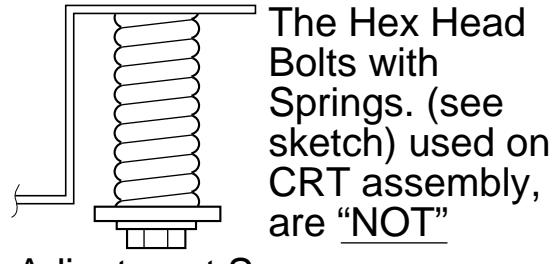

DO NOT LOOSEN-FLUID LEAKAGE WILL OCCUR.

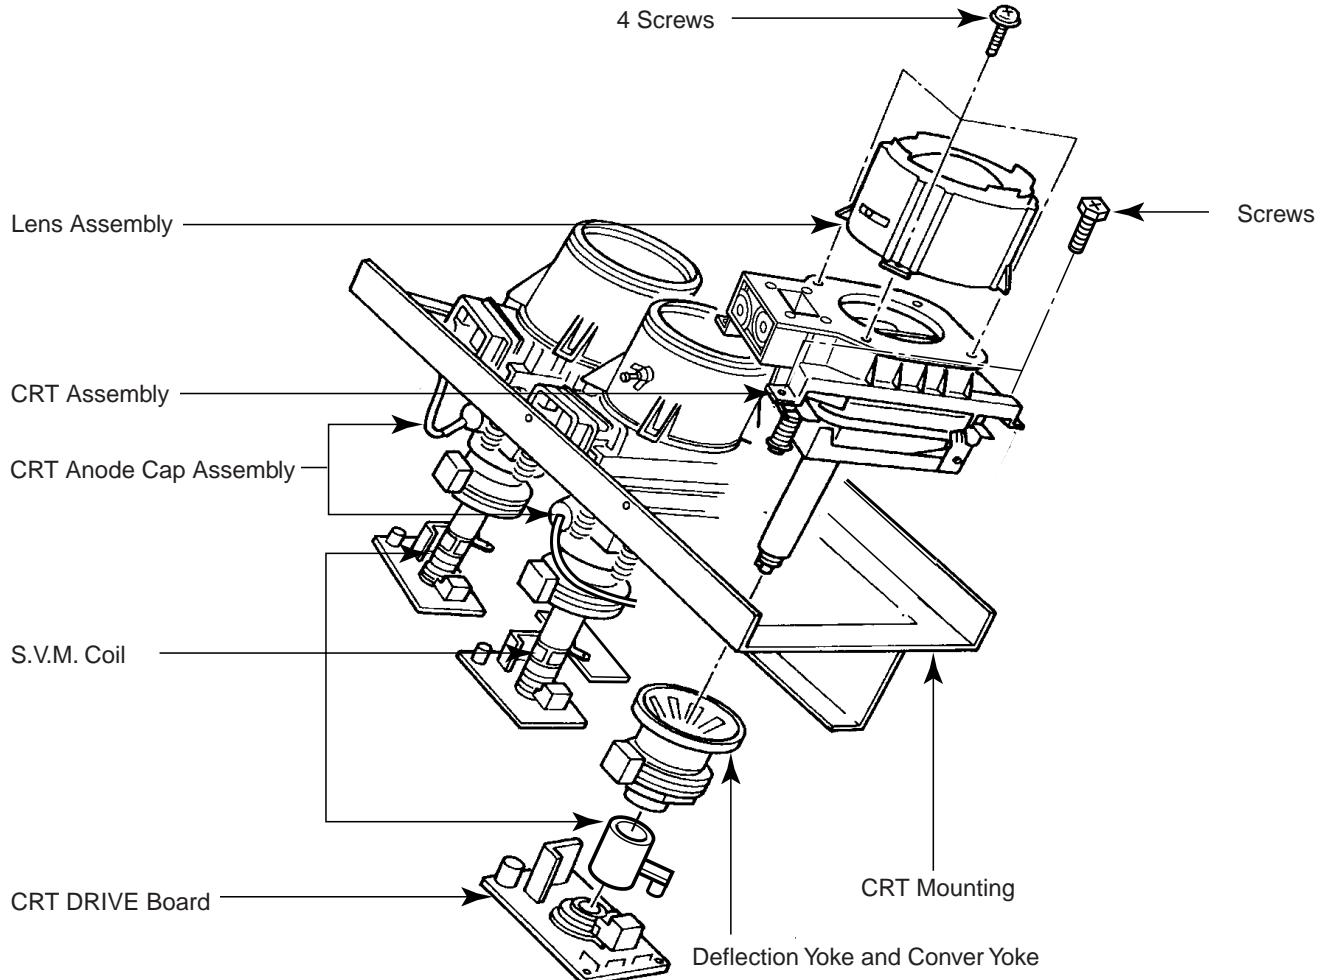

Lens and Neck Components View

TO REMOVE CRT (Same procedure for R, G, B)

1. Remove CRT DRIVE Board, S. V. M. COIL and DEF. YOKE from CRT.
2. Remove Lens Assembly.
3. Detach CRT Anode Cap from CRT.
4. Remove CRT Assembly from CRT Mounting.

CRT REPLACEMENT (Same procedure for R, G, B)



Reverse the removal procedures except the followings.

1. Anode Cable should be replaced with new one.
See "SERVICING PRECAUTIONS" shown below.
2. Install silicon (T461B) to the CRT, replace the Anode cable and put enough silicon again on around the Anode Cap as illustrated.


CAUTION: Align the Anode cable as illustrated on page 4.

ADJUSTING PROCEDURE IN REPLACING CRT


1. R.G.B. FOCUS ADJUSTMENT (page 6.)
 2. PICTURE TILT ADJUSTMENT (page 6.)
 3. USER CONVERGENCE CENTER CHECK
(See owner's manual.)
 4. CENTERING ADJUSTMENT (page 6.)
 5. CONVERGENCE ADJUSTMENT (page 13.)
 6. WHITE BALANCE ADJUSTMENT (page 12.)
- Adjustments are complete.

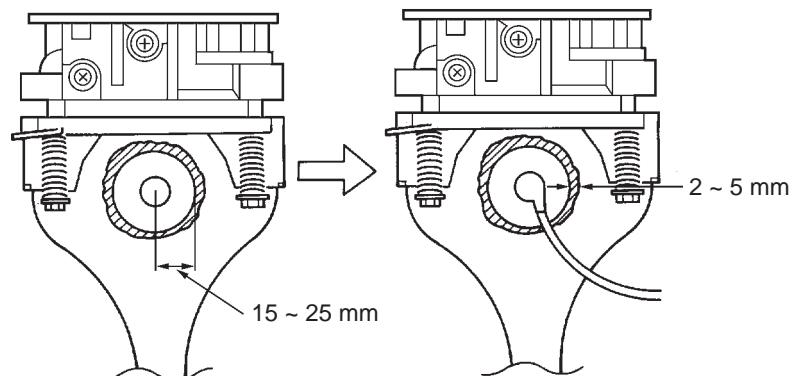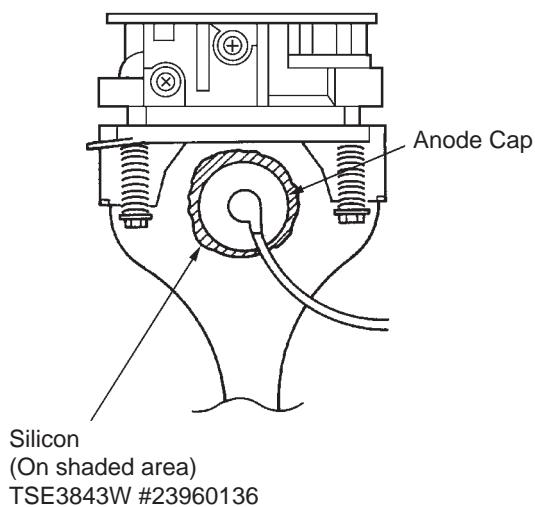**SERVICING PRECAUTIONS**

- Do not use a magnetized screw driver for screws of Deflection Yoke and Velocity Modulation Coil to avoid magnetization of electron gun. Magnetization of electron gun will degrade basic function and result in unbalance of right and left shift of user static convergence, and result in no variable quantity.

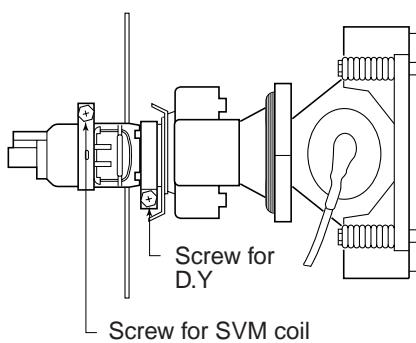


- When replacing the anode cap assembly (CRT) or anode lead assembly (F.B.T.), remove the anode lead holder from old one and attach the holder again to new anode lead.

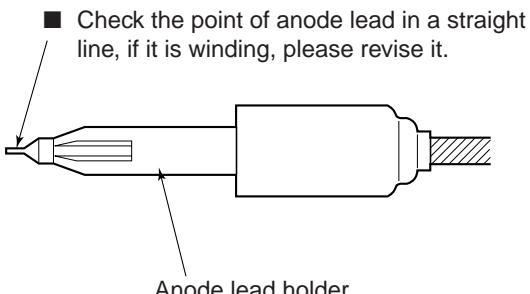

WARNING : BEFORE SERVICING THIS CHASSIS, READ THE "X-RAY RADIATION PRECAUTION", "SAFETY PRE-CAUTION" AND "PRODUCT SAFETY NOTICE" ON PAGE 3 OF THIS MANUAL.

PICTURE TUBE COMPONENTS ADJUSTMENT

DESCRIPTION OF NECK COMPONENTS

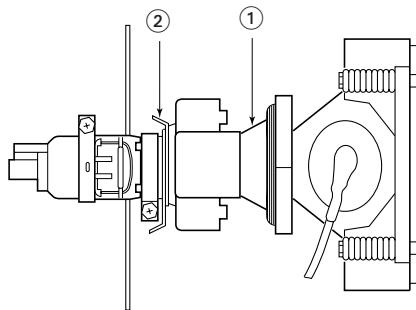

- ① Deflection yoke and convergence yoke
The position on the neck is required most front (CRT funnel side) and the screw is fastened after rotating yoke adjusting picture tilt.
- ② Centering magnet
After adjusting picture tilt, picture position is finally fixed by this magnet.
In order to get maximum margin of user convergence control for center of screen, this magnet have to be used for center convergence adjustment.

PREPARATION

Operate the receiver for at least 5 minutes.

R, G, B FOCUS ADJUSTMENT

1. Before adjusting the R, G, B FOCUS, remove the 4 screws of Lens Assembly which is fixed on the CRT Assembly. (See page 4.)
Then turn around the Lens Assembly by 180° to adjust the fastening screw (Fig. a) and fasten the 4 screws to secure Lens Assembly.
2. Select the adjustment mode. (See page 9.)
3. Press "7" button to display the built-in cross-hatch.
4. Press "0" and "RTN" buttons to make the picture a single Red color.
 - 100 button to erase Red color
 - 0 button to erase Green color
 - RTN button to erase Blue color
5. Loosen the fasten screw and adjust Red lense focus to best focusing point of picture center. Then fasten the screw. (See Fig. a.)

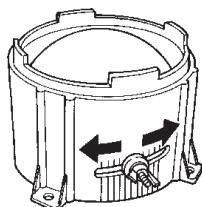


Fig. a


6. Adjust FOCUS VR "R" of FOCUS PACK to find best focusing point of picture center.
7. Repeat steps 3 to 5 for Green and Blue colors.

TILT ADJUSTMENT


Rotate R, G, B deflection yoke so that picture becomes horizon, then fasten screw.

CENTERING ADJUSTMENT

1. Stretch a thread between two center slots of screen edge (top and bottom, left and right).

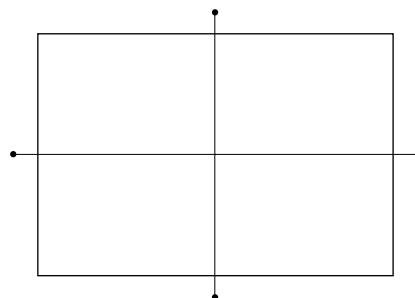


2. Select the adjustment mode.
3. Press TV/VIDEO button on the Remote Control to display the white cross-bar.

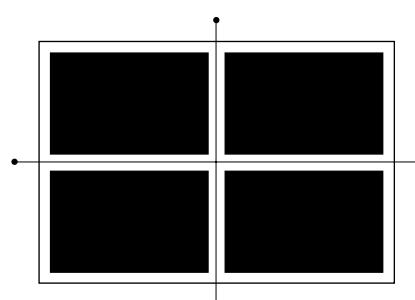

4. Perform VCEN adjustment. (See page 11.)
5. Adjust G centering magnet so that the cross-bar pattern center comes to screen center.
6. Perform HEIGHT adjustment . (See page 12.)
7. Perform VERT. LINEARITY adjustment.
8. Perform WIDTH adjustment. (See page 12.)
9. Check whole quality of green line.
10. Adjust R, B centering magnet so that the cross-bar pattern center comes to screen center.

LOCATION OF SCREEN AND FOCUS VR'S

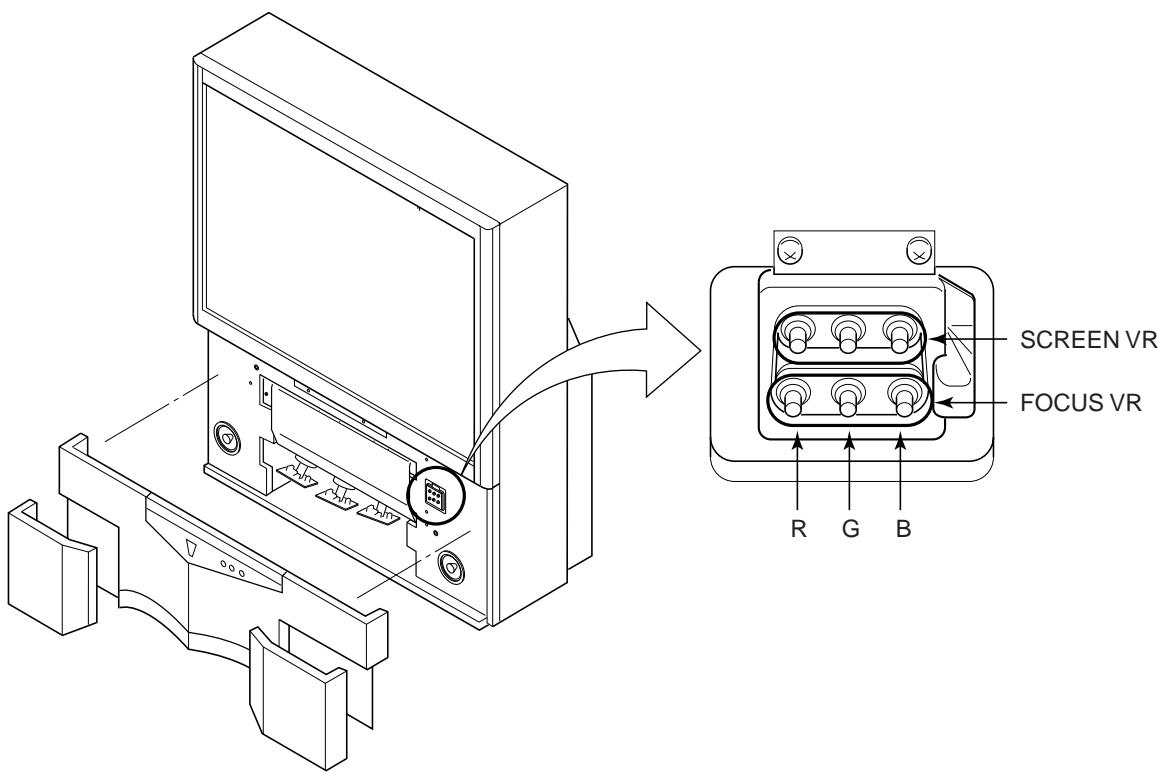


REPLACEMENT OF THE CRT

Service parts are provided for each R, G and B.
The contents of the parts are as follows.

		R	G	B
HITACHI	50A50	23796001	23005397	23796003
CRT	50A60	23005114	23005115	↑
	55A60	23005242	↑	↑
	61A60	23005249	↑	23796486

REPLACEMENT OF HIGH VOLTAGE CABLE

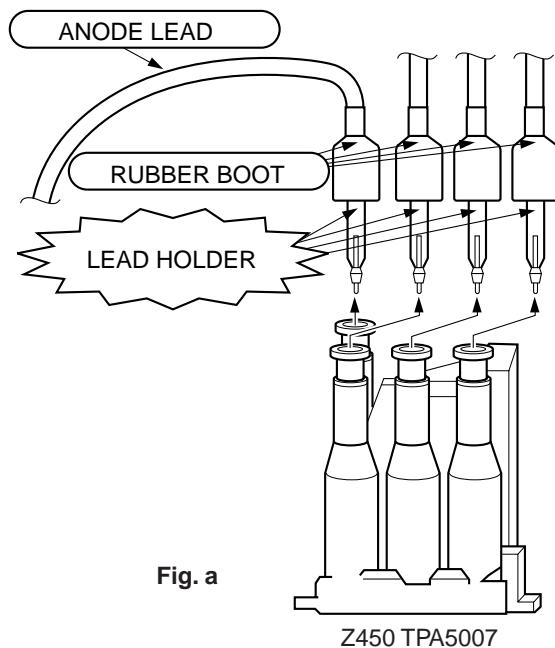

1. When replacing Anode Lead or Anode Cap with new one, remove Lead Holder from old lead as shown in figure below, and put it on new lead. Do not throw away Lead Holder.

NOTE : THE LEAD HOLDER IS ATTACHED TO TPA5007 (Z450), BUT IS NOT ATTACHED TO ANODE LEAD AND ANODE CAP. RUBBER BOOT IS ATTACHED TO ANODE LEAD AND ANODE CAP.

2. Detaching Lead Holder


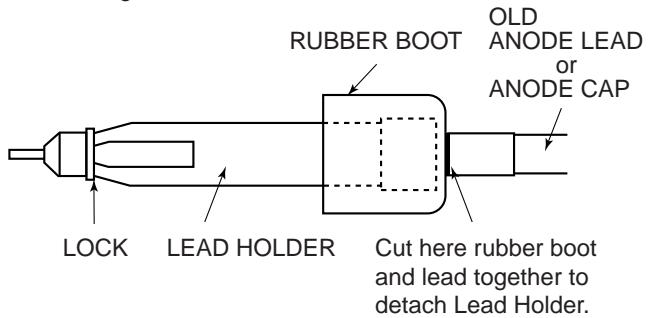


Fig. b

SERVICE MODE


1. ENTERING TO SERVICE MODE

- 1) Press MUTE button once on Remote Control.
- 2) Press MUTE button again to keep pressing.
- 3) While pressing the MUTE button, press MENU button on TV set.

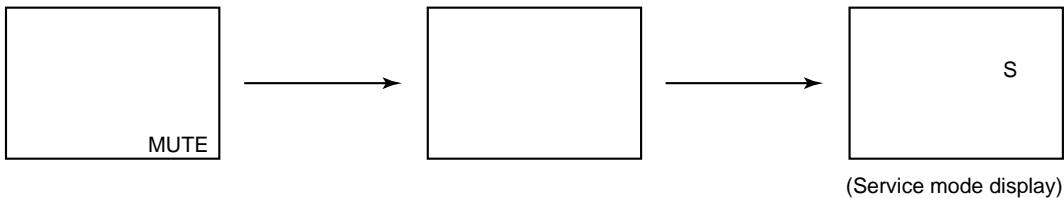

2. DISPLAYING THE ADJUSTMENT MENU

- 1) Press MENU button on TV.

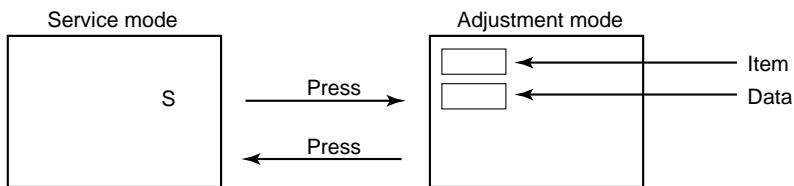

3. KEY FUNCTION IN THE SERVICE MODE

The following key entry during display of adjustment menu provides special functions.

Screen adjustment mode ON/OFF:	TV (ANT)/VIDEO button (on TV)
Selection of the adjustment items :	Channel ▲/▼ (on TV or Remote)
Change of the data value :	Volume ▲/▼ (on TV or Remote)
Adjustment menu mode ON/OFF :	MENU button (on TV)
Initialization of the memory (QA02) :	RECALL+Channel button on TV (▲)
Initialization of the self diagnostic data:	RECALL+Channel button on TV (▼)
"RCUT" selection :	1 button
"GCUT" selection :	2 button
"BCUT" selection :	3 button
"SCNT" selection :	4 button
"SCOL" selection :	5 button
"TNTC" selection :	6 button
Convergence adj :	7 button
Test audio signal ON/OFF (1kHz) :	8 button
Self diagnostic display :	9 button

4. SELECTING THE ADJUSTING ITEMS

- 1) Every pressing of CHANNEL ▲ button in the service mode changes the adjustment items in the order of table-2.
(▼ button for reverse order)

Refer to table-2 for preset data of adjustment mode.
(See SETTING & ADJUSTING DATA on page 17)

5. ADJUSTING THE DATA

- 1) Pressing of VOLUME ▲ or ▼ button will change the value of data in the range from 00H to FFH. The variable range depends on the adjusting item.

6. EXIT FROM SERVICE MODE

- 1) Pressing POWER button to turn off the TV once.

■ INITIALIZATION OF MEMORY DATA OF QA02


After replacing QA02, the following initialization is required.

1. Enter the service mode, then select any register item.
2. Press and hold the RECALL button on the Remote, then press the CHANNEL ▲ button on the TV. The initialization of QA02 has been completed.
3. Check the picture carefully. If necessary, adjust any adjustment item above.
Perform "Programming Channel Memory" on the owner's manual.

CAUTION: Never attempt to initialize the data unless QA02 has been replaced.





7. SELF DIAGNOSTIC FUNCTION


- 1) Press "9" button on Remote Control during display of adjustment menu in the service mode.
The diagnosis will begin to check if interface among IC's are executed properly.
- 2) During diagnosis, the following displays are shown.

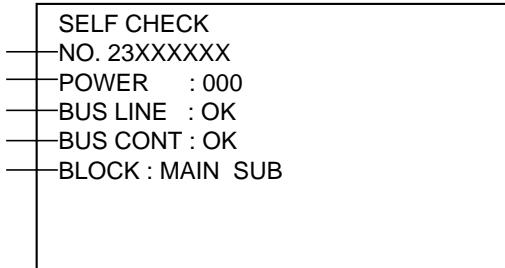

- ① Part number of microprocessor (QA01)
- ② Operation number of protection circuit (current limiter) "000" is normal.
- ③ BUS line check ————— "OK" Normal
 - "SCL-GND" or "NG" SCL-GND short circuit
 - "SDA-GND" or "NG" SDA-GND short circuit
 - "SCL-SDA" or "NG" SCL-SDA short circuit
- ④ BUS line ACK (acknowledge) check
 - "OK" Normal
 - Display of Location Number NG
(Display example)
"QA02 NG", "H001 NG", "Q501 NG" etc.
 - Note: The indication of failure place is only one place though failure places are plural. When repair of a failure place finishes, the next failure place is indicated. (The order of priority of indication is left side.)
- ⑤ Sync. signal check ————— Green display Normal
Red display NG
 - MAIN Main sync
 - SUB Sub sync (when turn on the PIP)

ELECTRICAL ADJUSTMENT

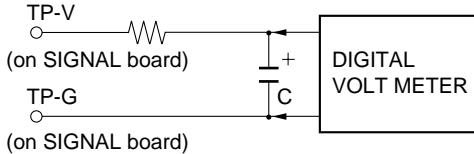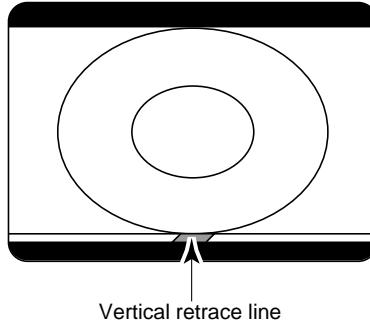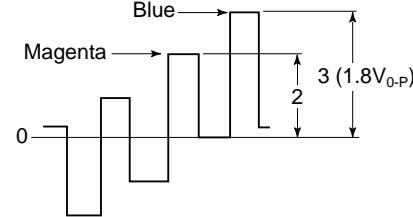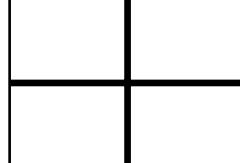
ITEM	ADJUSTMENT PROCEDURE
VERTICAL POSITION (VCEN)	<p>1. Call up the adjustment mode display, then select item VCEN. 2. Press the VOLUME ▲ or ▼ button to get the voltage $+30 \pm 10$ mV. 3. Measuring method of voltage as follows.</p> 
SUB-BRIGHTNESS (BRTC)	<p>1. Constrict the picture height until the vertical retrace line appears adjusting the HEIGHT control on the MAIN board. 2. Adjust the CONTRAST to the minimum and BRIGHTNESS to the center. 3. Enter the service mode, then select "BRTC" register. 4. Adjust the data value so the belt of vertical retrace line just disappear. 5. Adjust the HEIGHT control. * Adjust the SUB-BRIGHTNESS after adjusting the WHITE BALANCE.</p> 
SUB-COLOR (SCOL) SUB-TINT (TNTC)	<p>1. Receive color-bar signal from color-bar generator. 2. Adjust the BRIGHTNESS and CONTRAST to the center (RESET status). 3. Connect oscilloscope to TP501on on the MAIN board. 4. Enter the service mode, then select "SCOL". 5. Temporarily adjust the data value to achieve about $1V_{0-p}$ of blue bar. 6. Select "TNTC" register. 7. Adjust the data value to obtain the blue bar to magenta bar ratio of 3:2 as shown. 8. Select "SCOL" register. 9. Adjust the data value to achieve $1.8V_{0-p}$ of blue bar on scope. 10. Check the picture with off-air signal.</p> 
SUB-CONTRAST (SCNT)	<p>1. Tune in a color program and adjust the BRIGHTNESS and CONTRAST to normal mode(RESET). 2. Enter the service mode, then select "SCNT" register. 3. Change "SCNT" data to 13H. 4. Check the picture contrast.</p>
PICTURE POSITION	<p>1. Receive the pattern signal which shows its center on the screen. 2. Adjust the picture position alternately by turning CENTERING MAGNETS for proper picture position. 3. Check the picture with off-air signal.</p> 

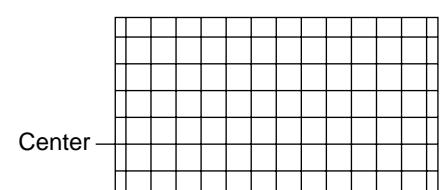ITEM	ADJUSTMENT PROCEDURE
HEIGHT (HIT)	<p>1. Call up the adjustment mode display, then select the item HIT. 2. Press the VOLUME ▲ or ▼ button to get the picture so the top of raster begins to lack. 3. Press the VOLUME ▲ button to advance the data by 10 steps. Note : Check the vertical picture position is correct.</p>
WIDTH (WID)	<p>1. Call up the adjustment mode display, then select the item WID. 2. Press the VOLUME ▲ or ▼ button to get the picture so the left and right edges of raster begins to lack. 3. Press the VOLUME ▲ or ▼ button to advance the data by 10 steps. Note : Check the horizontal picture position is correct.</p>
VERTICAL LINEARITY (VLIN)	<p>1. Call up the adjustment mode display, then select the item VLIN. 2. Receive cross-hatch pattern signal. 3. Press the VOLUME ▲ or ▼ button to obtain the picture of the best linearity. 4. Then readjust the item HIT.</p> 
WHITE BALANCE (RCUT) (GCUT) (BCUT) (RDRV) (BDRV)	<p>1. Press RESET button on TV or remote hand set. 2. Call up the adjustment mode display, then adjust the data of items RCUT, GCUT and BCUT to "40". 3. Press TV (ANT)/VIDEO button on TV. 4. Gradually rotate R, G and B SCREEN volume of FOCUS PAC (page 7) clockwise or counterclockwise until the raster appears slightly on the CRT through the each lens, and leave them. (Look into the lens in order to check the raster.) 5. Press TV (ANT)/VIDEO button on TV again. 6. Exit from service mode. 7. Receive white raster pattern signal, and adjust the contrast to the minimum to make white picture to low light. 8. Adjust the data of items RCUT, GCUT and BCUT for low light area. 9. Adjust the contrast to the maximum to make white picture to high light. 10. Adjust the data of items GDRV and BDRV Controls for proper white-balanced picture in high light area. 11. Check the white balance in both low and high light areas. If necessary, perform again steps from 7 to 9. * The data of item GDRV changes red drive actually.</p>

CONVERGENCE ADJUSTMENT

Adjust convergence from center to circumference in order.


1. Select the adjustment mode following the steps on page 9.

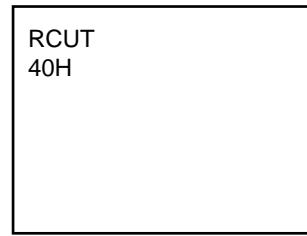

KEY FUNCTION IN THE CONVERGENCE ADJUSTMENT:

Up :	2 button
Select Green color:	3 button
Left :	4 button
Blinking of cursor ON/OFF:	5 button
Right:	6 button
Adjust mode ON/OFF:	7 button
Down:	8 button
Erase Green line:	0 button
Erase Red line:	100 button
Erase Blue line:	CHRTN (ENT) button

2. Press "7" button to display the built-in cross-hatch pattern.

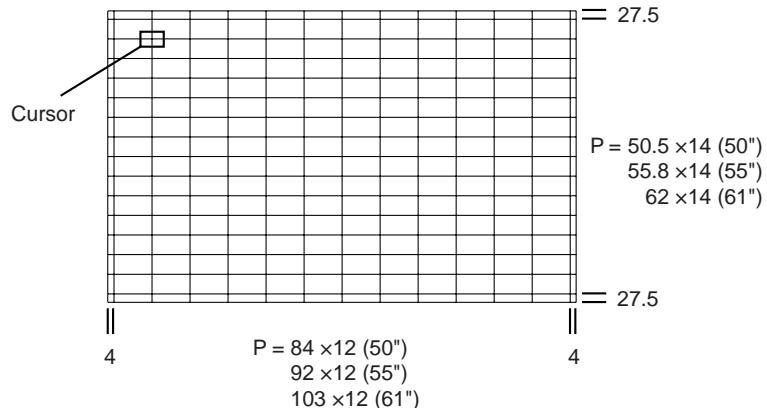

Note:

Adjusting procedure in replacing convergence board.

1. User convergence center check. Make sure the best convergence setting is about the center of adjustable range.
2. CENTERING ADJUSTMENT
3. PICTURE POSITION ADJUSTMENT
4. HIT, WID ADJUSTMENT
5. CONVERGENCE ADJUSTMENT

The pattern includes three colors (R, G, B).

The cursor should be blinking in Red.

This means that the Red color is adjustable.

Adjustment around cursor can be done.

3. Press "3" button to select Green color to be adjusted.
4. Press "5" button to stop the blinking of cursor.
5. Press "2 (up)", "8 (down)", "4 (left)" or "6 (right)" to obtain the correct cross-hatch pattern as above.
- If necessary, the specified color line can be erased from the screen.
 - 100 button to erase Red line
 - 0 button to erase Green line
 - RTN (ENT) button to erase Blue line
6. Press "5" button to make the cursor blinking.
7. Press "2", "8", "4", "6" buttons to move the cursor to other point to be adjusted.
8. Repeat steps 4 to 7.
9. Repeat steps 3 to 8 to adjust Red and Blue colors.
Converge the selected color line into the Green line.
10. Press "7" button to enter the adjusted states.
At this time, picture changes for about 1 second.
11. Press "7" button again to return to the normal picture.

NOTES

In many cases, color misconvergence may be corrected by returning HIT and WID data in main deflection side to initial adjusting values. Following cases will surely require readjustment of convergence.

CRT REPLACEMENT

When CRT is replaced, main deflection readjustment and color matching are required.

Perform following procedures.

1. Replace two CRT's of blue and red.
2. Perform horizontal adjustment for blue and red yokes on base of green CRT data. Mount yoke and velocity mod. coil alignment, pushing towards CRT without gap.
3. Adjust alignment of blue and red. (Refer Alignment adjustment for details.)
4. Rotating centering magnet, adjust CRT centers of red and blue to CRT center of green.
(Picture position adjustment)
5. Adjust HIT and WID data of main deflection, and decide data at the most precise screen comparing to green data.
6. Adjust convergence of each screen picture for color matching. Do not move green one at this time.
7. After convergence adjustment of each screen picture finishes, replace green CRT.
For green CRT as well, repeat steps 2 to 5 above on bases of red and blue color matching to adjust convergence.



REPLACING CONVERGENCE UNIT

When replacing convergence unit, all picture screens require readjustment basically, but the following method allows process be reduced considerably.


1. Replace the memory (Q713) on defective unit with memory on new unit. Mounting the unit on the SET after the above working realizes picture screen before replacement immediately.
2. Mount unit which has combination of old and new memories, on SET and turn it on. Screen shows whole picture looks like straightly shifted towards vertical or horizontal direction.
3. Adjust again centers of green, red and blue with centering magnets.
4. Check each picture screen for slight disparity of color and picture size. If necessary, add some adjustments of main deflection and color matching of convergence.

SCREEN AND MIRROR ALIGNMENTS

ASSEMBLING OF FRONT SCREEN

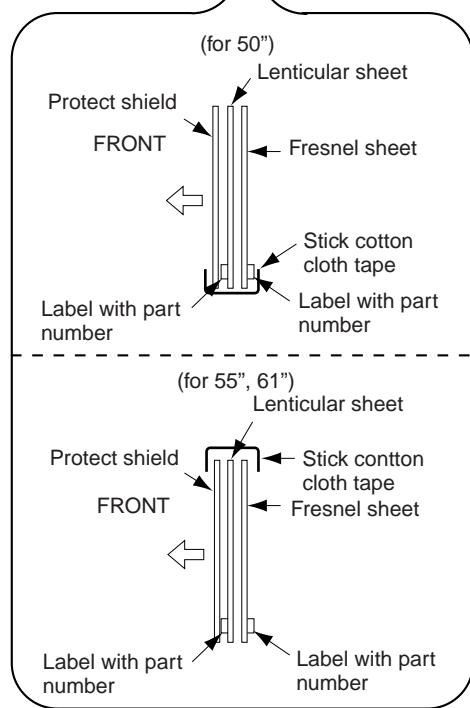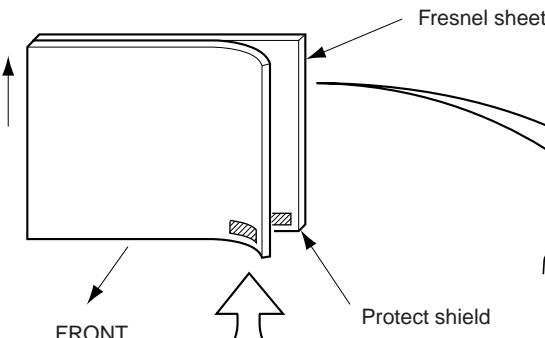

MOUNTING OF FRONT SCREEN

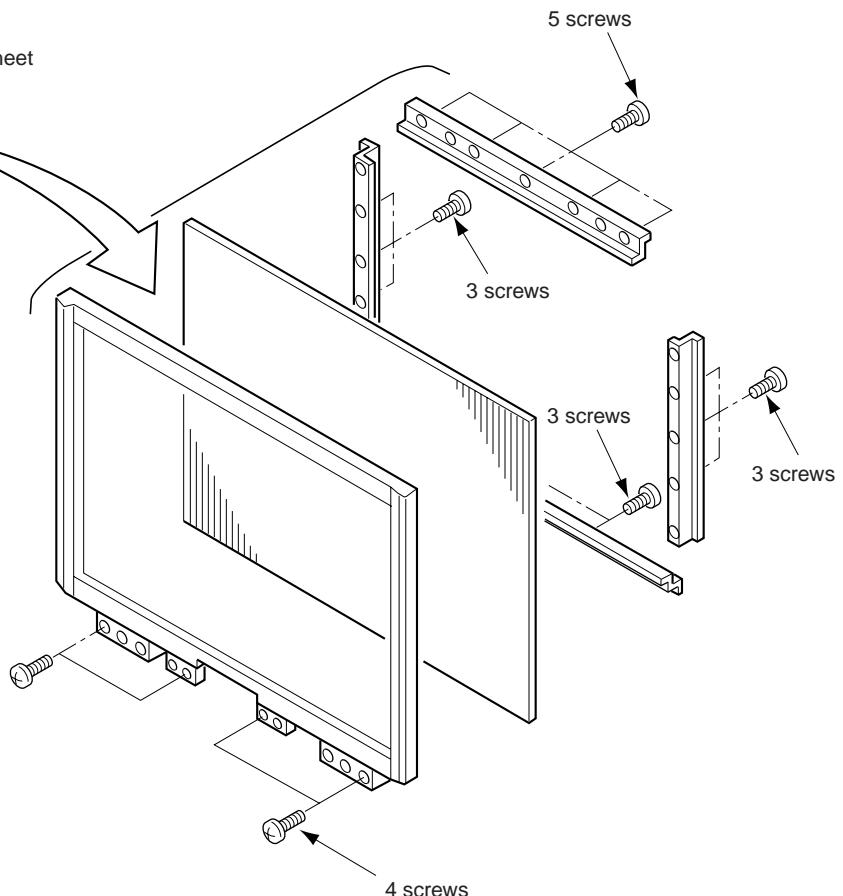

* Please refer to Mechanical Disassembly on page 23.

CAUTION : Do not hold the optical system parts (lens and mirror) with bare hand to avoid finger-prints on the surface of those parts.

HOW TO CLEAN LENS AND MIRROR

1. Be sure to remove sand dust with an air brush, etc.
2. When it is stained slightly, breathe upon it and wipe away with the specified cleaning cloth.

For other stains than the above, wipe the stains away with the specified cloth into which a cleaning liquid has been soaked.

Cleaning liquid **LENS LUSTER** (Manufactured by Edmund Scientific Co., etc.)

HOW TO CLEAN SCREEN

When cleaning the screen, use a soft cloth so as not to damage the screen.

1. Wipe the screen with a dry cloth to remove moisture on the screen.

Note : Absolutely do not use detergent, water, alcohol, benzine, thinner, etc. for cleaning in order not to wipe away the black print on the surface.

CIRCUIT CHECKS

HIGH VOLTAGE CHECK

CAUTION: There is no HIGH VOLTAGE ADJUSTMENT on this chassis. Checking should be done following the steps below.

1. Connect an accurate high voltage meter to the anode of the picture tube.
2. Turn on the receiver. Set the BRIGHTNESS and CONTRAST to minimum (zero beam current).
3. High voltage must be measured below (B) KV.
Refer to table-1 for high voltage (B).
(See SETTING & ADJUSTING DATA on page 17)
4. Vary the BRIGHTNESS to both extremes to be sure the high voltage does not exceed the limit under any conditions.

CAUTION:

When the following parts fail, check the High Voltage after replacing.

Location No.	Name	Name
T461	Flyback Trans.	TFB3078ZD
C447	Capacitor	3900pF, ±3%
C406	Capacitor	1500pF, ±3%
C407	Capacitor	4700pF, ±3%

ANODE VOLTAGE MEASURING METHOD

CAUTION: Take extra precaution when measuring this high voltage. High voltages are also present in surrounding circuit boards (CRT DRIVE assembly, DEFLECTION assembly, and POWER SUPPLY assembly).


1. Disconnect the FBT anode cable as outlined below. Measure high voltage at the point where the cable enters the FBT.
2. Holding the rubber cover firmly, turn it counterclockwise and check that the lock has been disengaged. (See Fig. b on page 8.)
3. Determine the extent of the rubber cover before disconnecting the cable.
4. Pull straight up the anode cable to disconnect.
5. When reconnecting the cable, proceed in the reverse order. After reconnecting, tug on the cable to check that it is secure.

FS CIRCUIT CHECK

The Fail Safe (FS) circuit check is indispensable for the final check in servicing. Checking should be done following the steps below.

1. Turn the receiver on.
2. Temporarily short TP- (R) and TP- (X) on the DEF/POWER Board with a jumper wire.
Raster and sound will disappear.
3. The receiver must remain in this state even after removing the jumper wire. This is the evidence that the FS circuit is functioning properly.
4. To obtain a picture again, temporarily turn the receiver off and allow the FS circuit more than 5 seconds to reset. Then turn the receiver on to produce a normal picture.

Troubleshooting Guide for Fail Safe Circuit

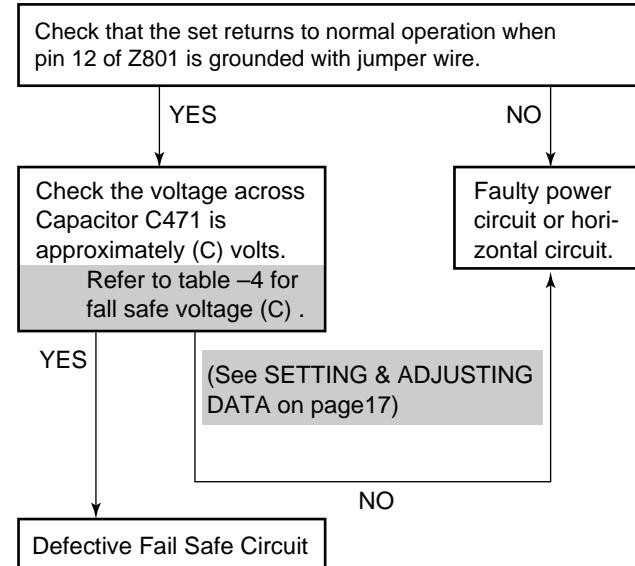

CHAPTER 2 SPECIFIC INFORMATIONS

SETTING & ADJUSTING DATA

【SAFETY INSTRUCTIONS】

		43", 50", 55", 61"
HIGH VOLTAGE AT ZERO BEAM:	(A)	31.3 KV
MAX HIGH VOLTAGE:	(B)	32.4 KV

Table-1

【SERVICE MODE】

ADJUSTING ITEMS AND DATA IN THE SERVICE MODE:

Item	Name of adjustment	Preset	Date	Item	Name of adjustment	Preset	Date
RCUT	R CUTOFF	40H	←	VCP	V-COMPENSATE	0AH	←
GCUT	G CUTOFF	40H	←	PARA	E-W PARABOLA (DPC)	29H	←
BCUT	B CUTOFF	40H	←	CNR	E-W CORNER	08H	←
GDRV	G DRIVE	40H	←	TRAP	TRAPEZIUM	10H	←
BDRV	B DRIVE	40H	←	HCP	H-COMPENSATE	00H	←
CNTX	SUB CONT MAX	7FH	←	VFC	V-F CORRECT	00H	←
BRTC	SUB-BRIGHT	80H	←	PHUE	PIP TINT	00H	↑
COLC	SUB-COLOR	50H	←	PCNT	PIP CONT	00H	←
TNTC	SUB-TINT	44H	←	PCOL	PIP COLOR	0FH	←
SCOL	SUB COLOR	05H	←	RGBB	RGB BRIGHT	54H	←
SCNT	SUB-CONTRAST	10H	←	PROF	PIP R OFFSET	00H	←
HPOS	HORIZ. POSITION	19H	←	PBOF	PIP B OFFSET	00H	←
VPOS	VERT. POSITION	00H	←	PGOF	PIP YG OFFSET	00H	←
HIT	HEIGHT	64H	←	STRH	START H	67H	←
LIN	V-LINEARITY	12H	←	STRP	START PTN	8AH	←
VSC	V-S CORRECTION	10H	←	VLD	VLD	41H	←
WID	PICTURE WIDTH	28H	23H	VCEN	V POSITION	81H	←
VPS	V-SHIFT	18H	←	TVOP	TV OPTION	00H	←

Table-2


【CIRCUIT CHECKS】

FBT DETECTION VOLTAGE	(C) 24.5V
-----------------------	-----------


Table-3

LOCATION OF CONTROLS (Representative : 50A60)


TV front

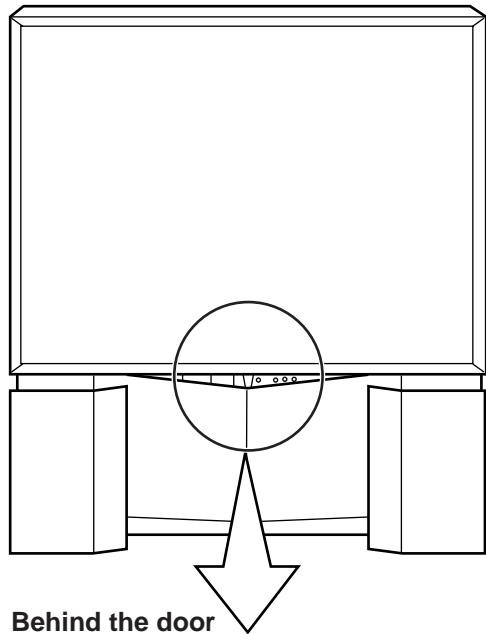


Behind the door

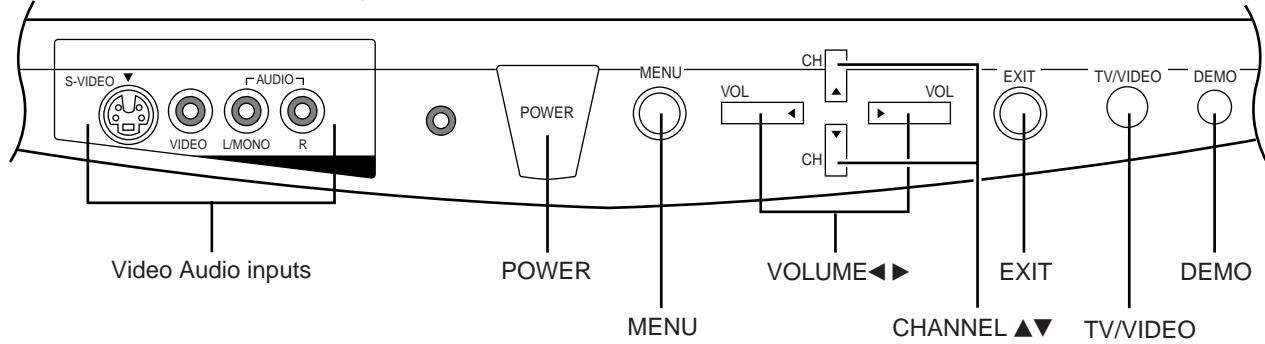

TV rear

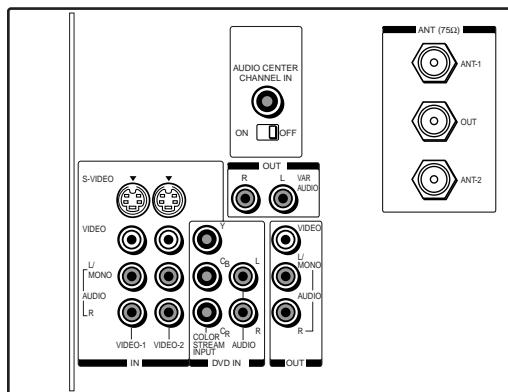

Remote Control

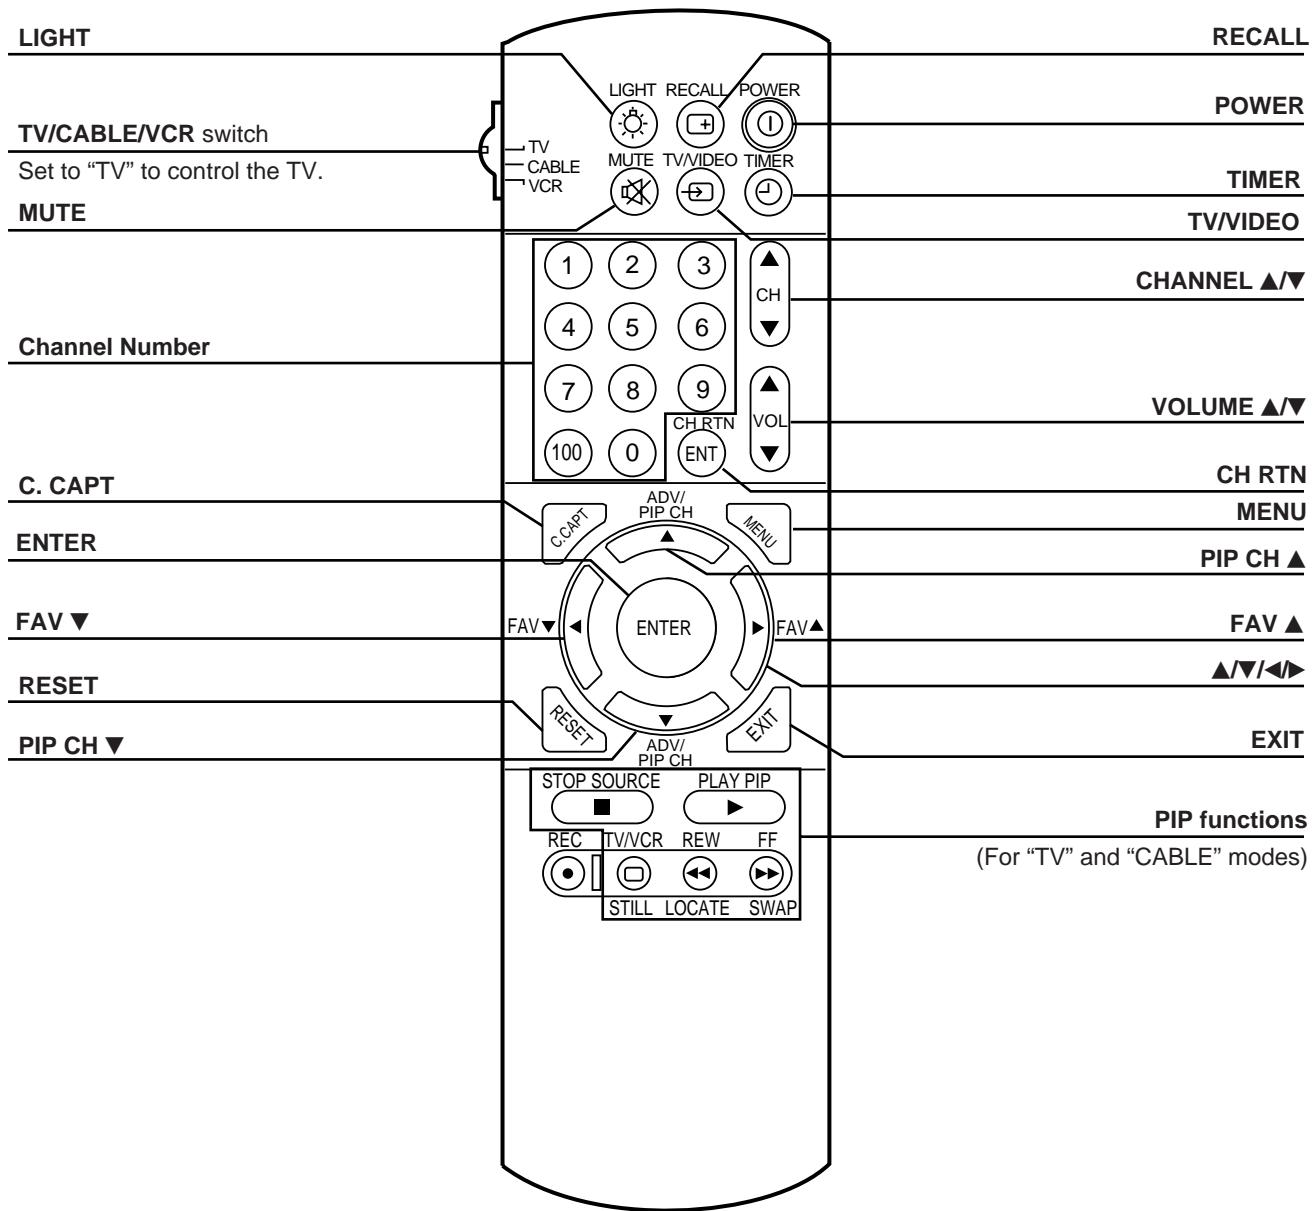

PROGRAMMING CHANNEL MEMORY

The channel memory is the list of TV channel numbers the TV tunes in when you press the CHANNEL ▲ or ▼ button.

First, use the TV/CABLE and CH PROGRAM functions to preset all active channels in your area automatically.

If necessary, arrange the preset channels with the ADD/ERASE functions so that you can tune into only desired channels.

Note: If you utilize both ANT-1 and ANT-2 terminals for some model, perform programming channels for each input source.

TV/CABLE function

- 1 Press **MENU**, then press ► or ◀ until the SET UP menu appears.
- 2 Press ▼ (or ▲) until "TV/CABLE" is highlighted.
- 3 Press ► or ◀ to highlight either "TV" or "CABLE", whichever you use.

CH PROGRAM function

- 1 Select "CH PROGRAM" following steps 1 and 2 above.
- 2 Press ► or ◀ to start channel programming.
The TV will automatically cycle through all the TV or CABLE channels selected by the TV/CABLE function, and store active channels in the channel memory.
- 3 When channel programming is complete, you will see the message to the right appears.
- 4 Press **CHANNEL ▲ or ▼** to make sure the channel programming has been done properly.

ADD/ERASE function

After performing the CH PROGRAM function, you can add or erase specific channels.


- 1 Select the channel you want to erase using the **CHANNEL ▲ or ▼** button, or select the channel you want to add using the **Channel Number** buttons.
- 2 Press **MENU**, then press ► or ◀ until the SET UP menu appears.
- 3 Press ▼ (or ▲) until "ADD/ERASE" is highlighted.
- 4 Press ► or ◀ :
To erase the channel press the button until "ERASE" is highlighted.
To add the channel press the button until "ADD" is highlighted.
- 5 Repeat steps 1 to 4 for other channels.

You have now completed the channel programming.


Note: The CHANNEL ▼/▲ buttons on the TV function as the ▼/▲ buttons while a menu is on the screen.

* Please refer to owner's manual in detail.

CIRCUIT BLOCK DIAGRAM

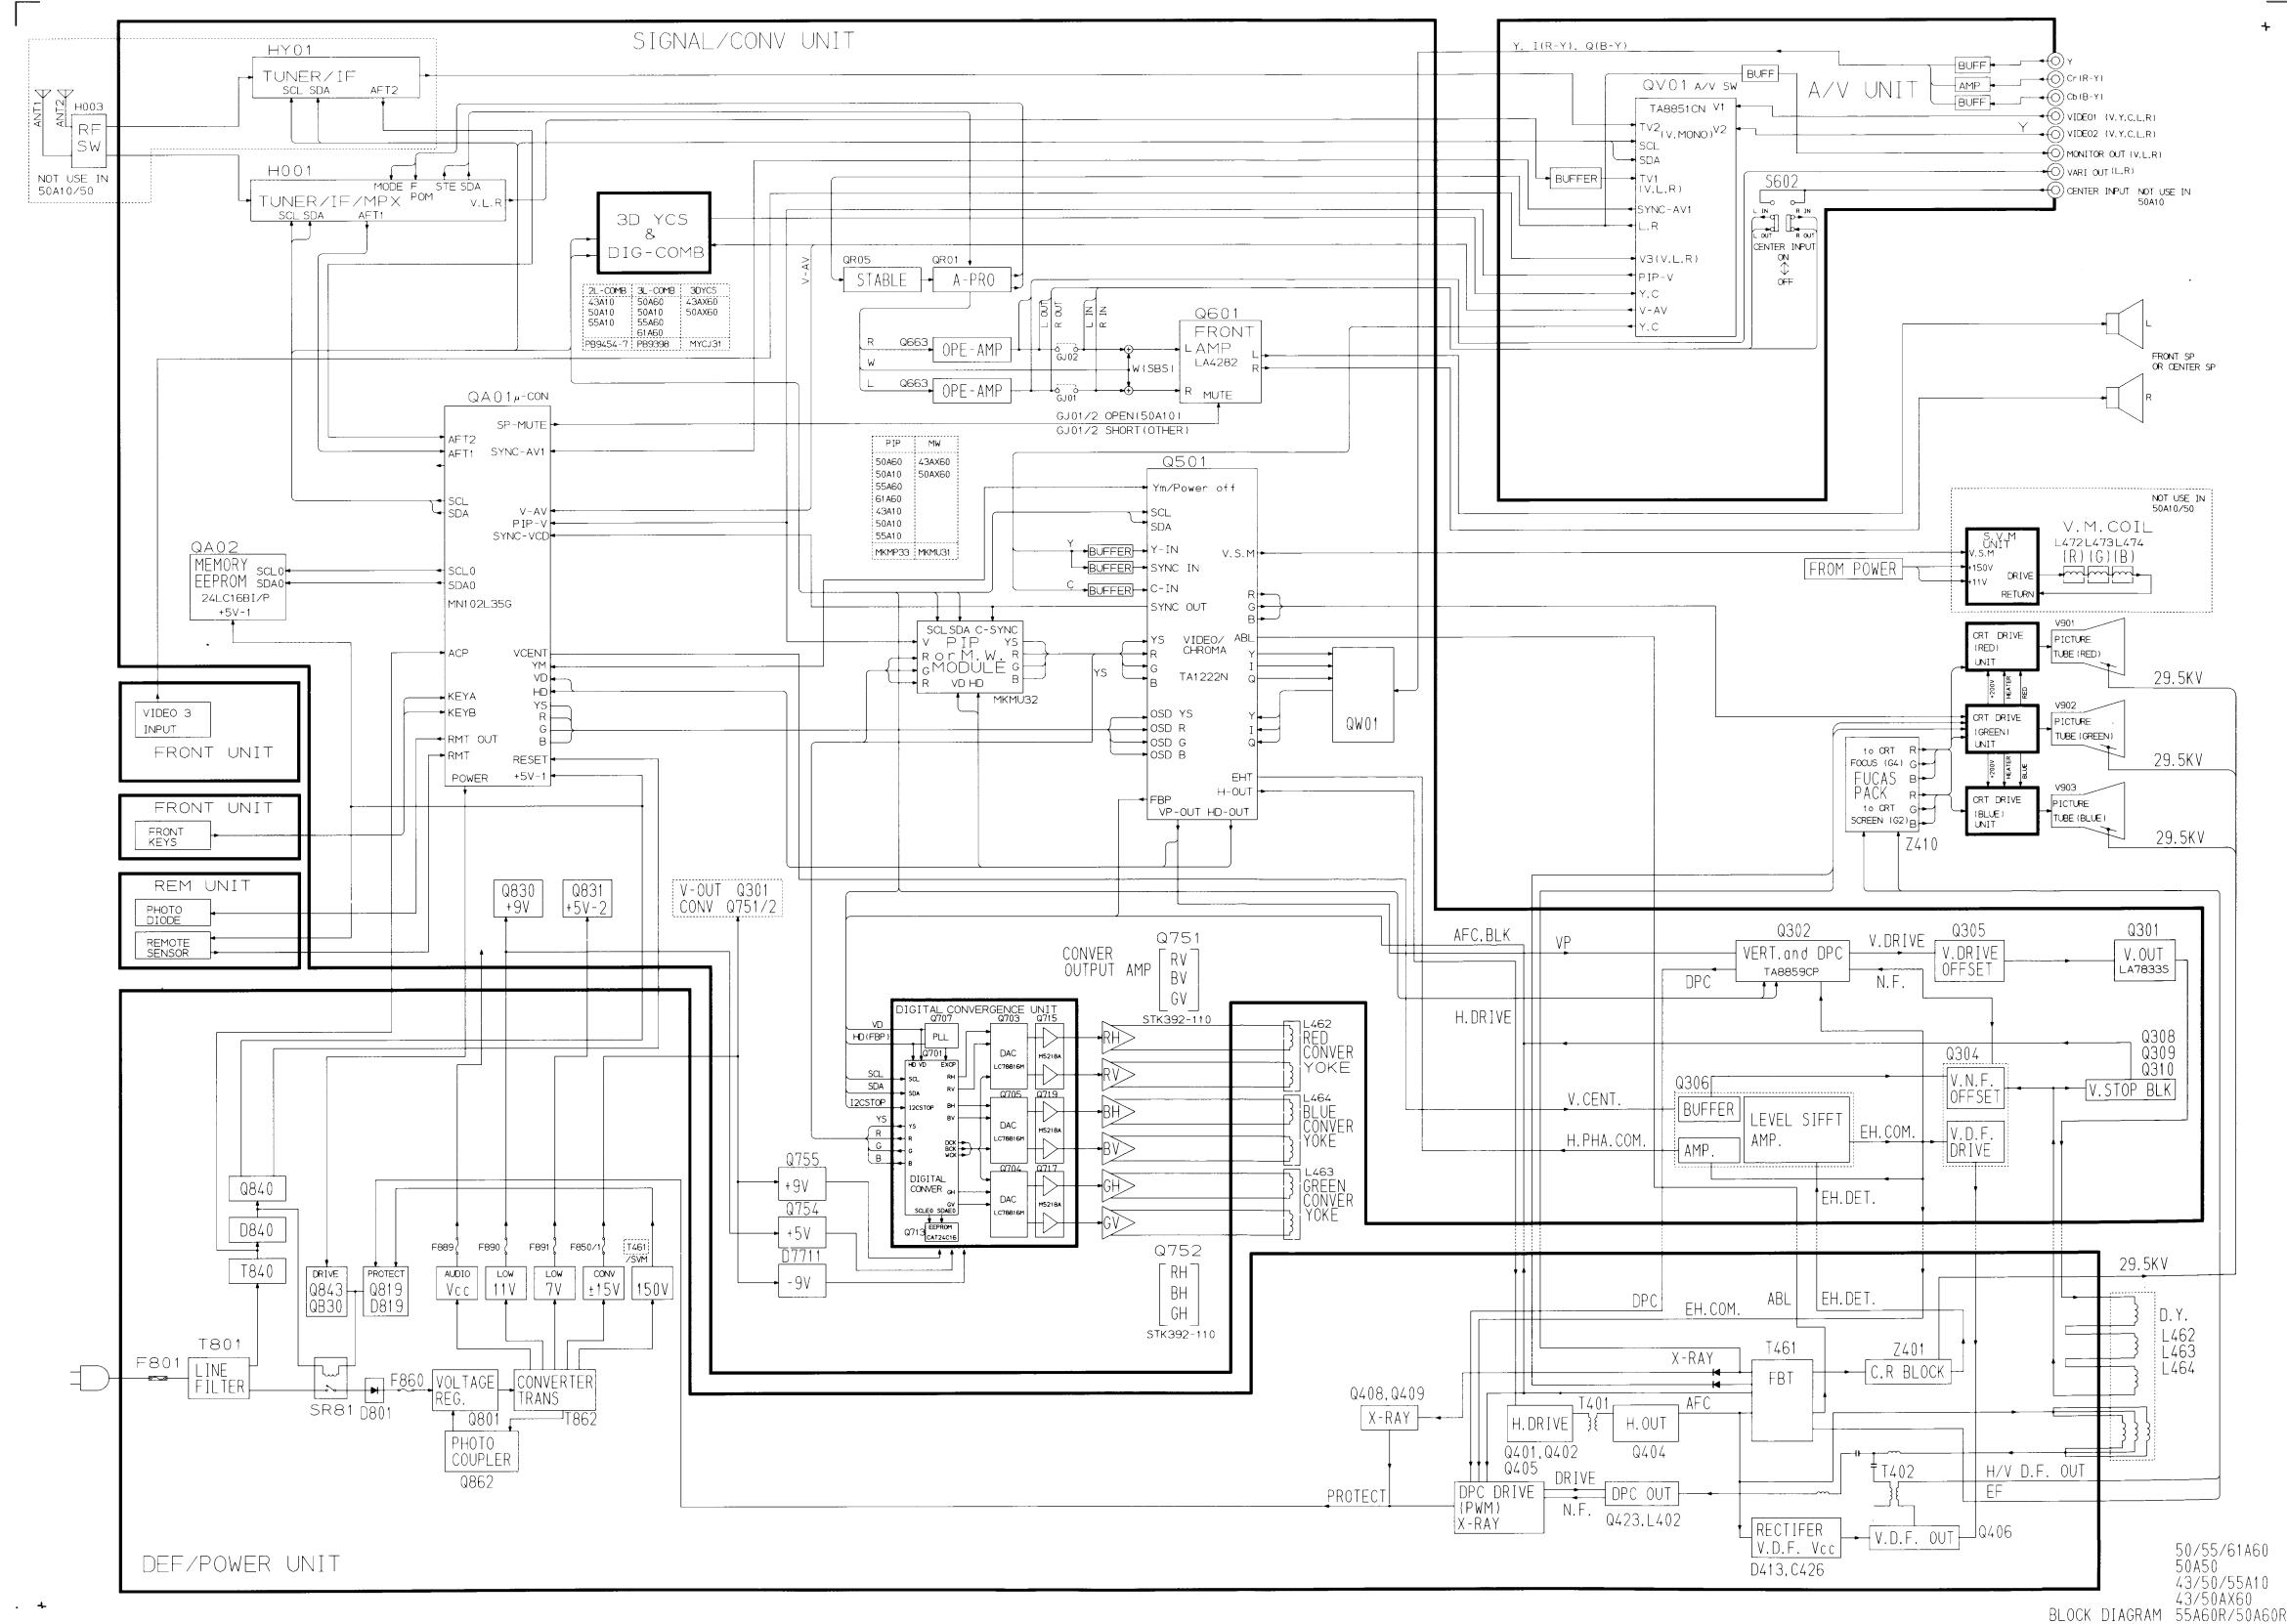

MECHANICAL DISASSEMBLY

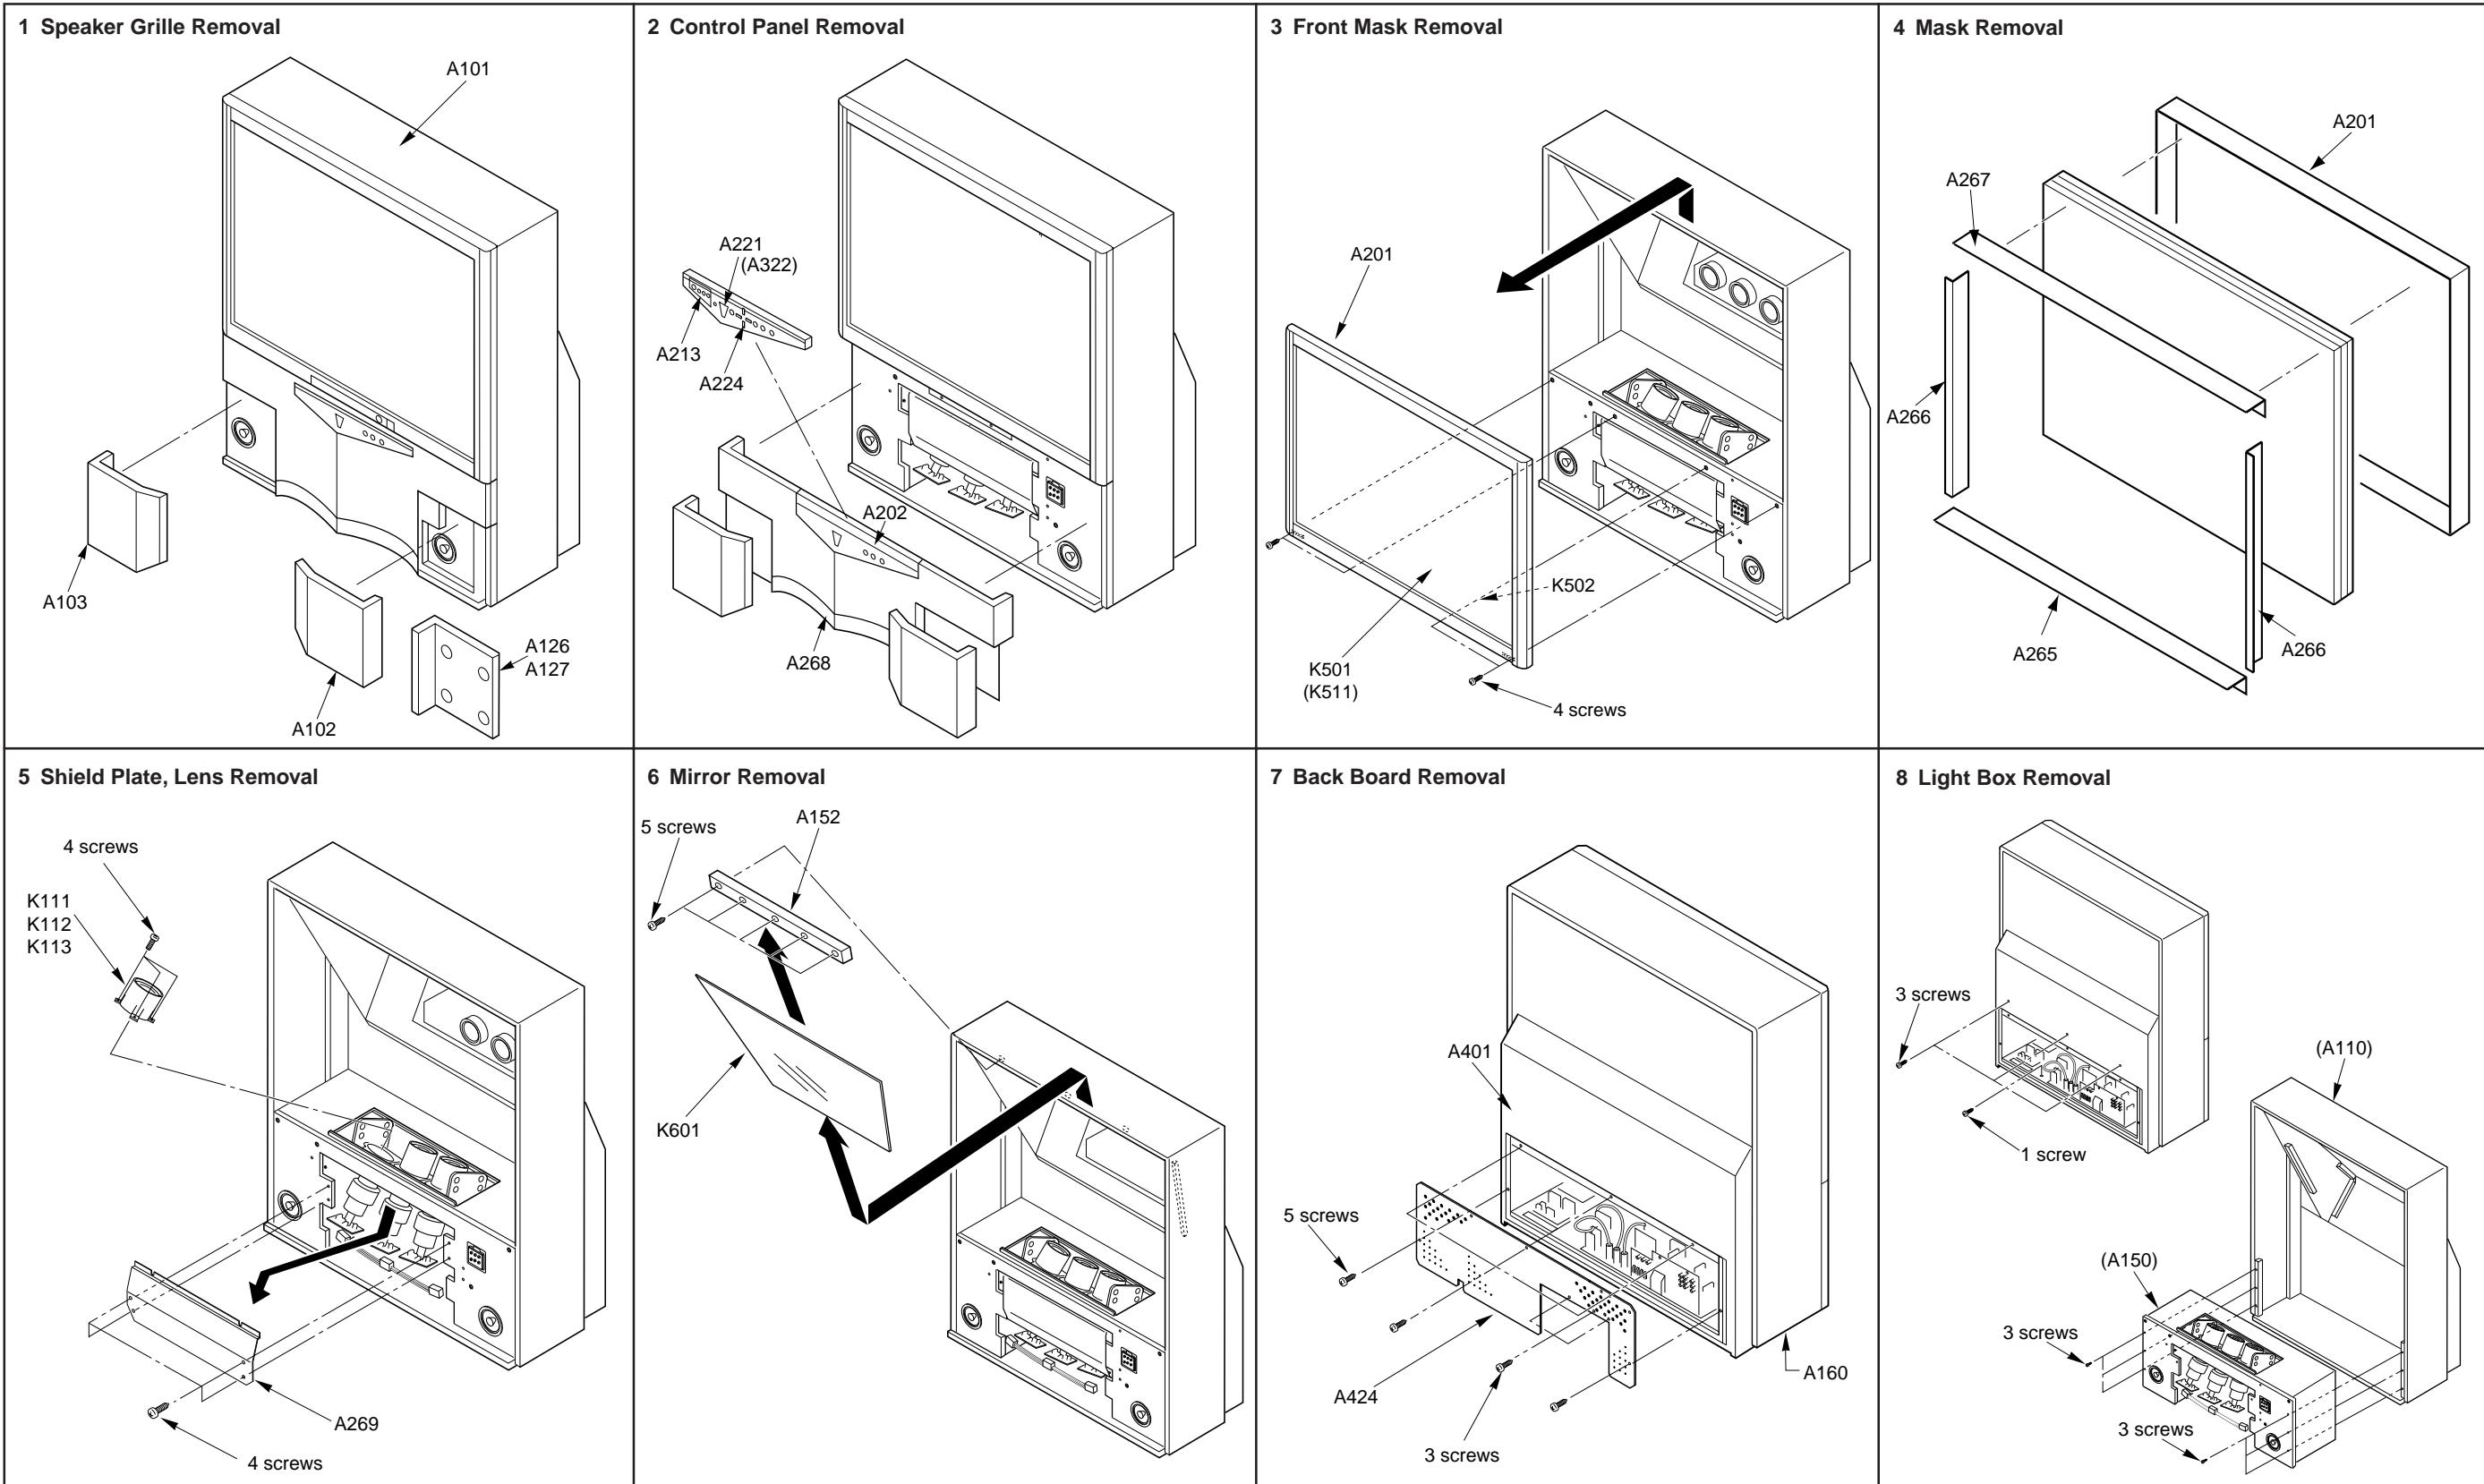

CHASSIS REPLACEMENT PARTS LIST

WARNING: BEFORE SERVICING THIS CHASSIS, READ THE "X-RAY RADIATION PRECAUTION", "SAFETY PRE-CAUTION" AND "PRODUCT SAFETY NOTICE" ON PAGE 3 OF THIS MANUAL.

CAUTION: The international hazard symbols “⚠” in the schematic diagram and the parts list designate components which have special characteristics important for safety and should be replaced only with types identical to those in the original circuit or specified in the parts list. The mounting position of replacements is to be identical with originals. Before replacing any of these components, read carefully the PRODUCT SAFETY NOTICE. Do not degrade the safety of the receiver through improper servicing.

NOTICE:

- The part number must be used when ordering parts, in order to assist in processing, be sure to include the Model number and Description.
- The PC board assembly with * mark is no longer available after the end of the production.

Models : 50A60/50A50/55A60/61A60

Capacitors	CD	: Ceramic Disk	PF	: Plastic Film	EL	: Electrolytic
Resistors	CF	: Carbon Film	CC	: Carbon Composition	MF	: Metal Film
	OMF	: Oxide Metal Film	VR	: Variable Resistor	FR	: Fusible Resistor

(All CD and PF capacitors are ±5%, 50V and all resistors, ±5%, 1/6W unless otherwise noted.)

Location No.	Part No.	Description
CAPACITORS		
C102	24665221	EL, 220μF, ±20%, 10V
C105	24815102	Chip, 0.001μF, ±10%
C106	24669479	EL, 4.7μF, ±20%, 50V
C107	24666221	EL, 220μF, ±20%, 16V
C112	24665221	EL, 220μF, ±20%, 10V (50A60/55A60/61A60)
C115	24815102	Chip, 0.001μF, ±10% (50A60/55A60/61A60)
C117	24666221	EL, 220μF, ±20%, 16V (50A60/55A60/61A60)
C151	24815102	Chip, 0.001μF, ±10% (50A60/55A60/61A60)
C201	24666100	EL, 10μF, ±20%, 16V
C203	24092178	Chip, 0.1μF, ±10%, 25V
C204	24669010	EL, 1μF, ±20%, 50V
C205	24206229	EL, 2.2μF, ±20%, 50V
C206	24666100	EL, 10μF, ±20%, 16V
C207	24781390	Chip, 39pF, SL
C208	24781390	Chip, 39pF, SL
C209	24781390	Chip, 39pF, SL
C212	24666100	EL, 10μF, ±20%, 16V
C213	24092616	Chip, 0.33μF, ±10%, 16V
C220	24709100	EL, 10μF, ±20%, 200V
C301	24815683	Chip, 0.068μF, ±10%
C302	24092463	Chip, 0.22μF, ±10%, 16V
C303	24666101	EL, 100μF, ±20%, 16V
C304	24092178	Chip, 0.1μF, ±10%, 25V
C305	24815103	Chip, 0.01μF, ±10%
C306	24815102	Chip, 0.001μF, ±10%
C307	24617912	EL, 2.2μF, ±10%, 50V
C309	24815102	Chip, 0.001μF, ±10%
C311	24815103	Chip, 0.01μF, ±10%
C312	24815102	Chip, 0.001μF, ±10%
C313	24092573	Chip, 0.47μF, ±10%, 16V
C314	24092178	Chip, 0.1μF, ±10%, 25V
C315	24666222	EL, 2200μF, ±20%, 16V
C316	24666101	EL, 100μF, ±20%, 16V
C317	24815222	Chip, 0.0022μF, ±10%
C318	24815182	Chip, 0.0018μF, ±10%
C319	24667101	EL, 100μF, ±20%, 25V

Location No.	Part No.	Description
C320	24667101	EL, 100μF, ±20%, 25V
C321	24667101	EL, 100μF, ±20%, 25V
C322	24815393	Chip, 0.039μF, ±10%
C323	24815563	Chip, 0.056μF, ±10%
C324	24669101	EL, 100μF, ±20%, 50V
C325	24082057	PF, 0.22μF, 100V
C326	24092463	Chip, 0.22μF, ±10%, 16V (50A60/55A60/61A60)
C327	24092463	Chip, 0.22μF, ±10%, 16V
C328	24082260	PF, 4700pF, 100V
C329	24669100	EL, 10μF, ±20%, 50V (50A60/55A60/61A60)
C330	24085946	EL, 10μF, ±20%, 16V, Non-Polar (50A60/55A60/61A60)
C331	24815333	Chip, 0.033μF, ±10%
C332	24669221	EL, 220μF, ±20%, 50V
C333	24693473	PF, 0.047μF, 100V
C334	24591471	PF, 470pF
C335	24092178	Chip, 0.1μF, ±10%, 25V (50A60/55A60/61A60)
C336	24815472	Chip, 0.0047μF, ±10% (50A60/55A60/61A60)
C340	24092463	Chip, 0.22μF, ±10%, 16V
C350	24669229	EL, 2.2μF, ±20%, 50V
C351	24092178	Chip, 0.1μF, ±10%, 25V
C352	24669229	EL, 2.2μF, ±20%, 50V
C401	24092178	Chip, 0.1μF, ±10%, 25V
C401	24214821	CD, 820pF, ±10%, 500V
C402	24214391	CD, 390pF, ±10%, 500V
C402	24815223	Chip, 0.022μF, ±10%
C403	24678100	EL, 10μF, ±20%, 200V
C404	24212152	CD, 1500pF, ±10%
C404	24669229	EL, 2.2μF, ±20%, 50V
C405	24567124	PF, 0.12μF
△C406	24082823	PF, 1500pF, ±3%, 1800V
△C407	24082946	PF, 4700pF, ±3%, 1500V
△C408	24820123	PF, 0.012μF, ±10%, 630V
C410	24095900	PF, 3.3μF, ±10%, 100V
C412	24828473	PF, 0.047μF, 200V
C413	24214221	CD, 220pF, ±10%, 500V
△C414	24095782	PF, 0.47μF, 400V

Location No.	Part No.	Description	Location No.	Part No.	Description
C415	24092484	CD, 1500pF, ±10%, 2kV (50A60/55A60/61A60)	C628	24206100	EL, 10µF, ±20%, 50V
C416	24828333	PF, 0.033µF, 200V	C629	24206100	EL, 10µF, ±20%, 50V
C417	24679229	EL, 2.2µF, ±20%, 250V	C630	24206108	EL, 0.1µF, ±20%, 50V
C418	24679330	EL, 33µF, ±20%, 250V	C631	24814472	Chip, 0.01µF, +80%, -20%
C419	24669479	EL, 4.7µF, ±20%, 50V	C632	24203470	EL, 47µF, ±20%, 16V
C423	24640908	EL, 33µF, ±20%, 160V	C633	24092178	Chip, 0.1µF, ±10%, 25V
C426	24211222	CD, 2200pF, ±10%, 2kV (50A60/55A60/61A60)	C634	24206108	EL, 0.1µF, ±20%, 50V
C427	24828473	PF, 0.047µF, 200V	C635	24206479	EL, 4.7µF, ±20%, 50V
C429	24591102	PF, 1000pF	C636	24206479	EL, 4.7µF, ±20%, 50V
C430	24567103	PF, 0.01µF	C637	24206100	EL, 10µF, ±20%, 50V
C431	24567103	PF, 0.01µF	C638	24794101	EL, 100µF, ±20%, 16V
C432	24567683	PF, 0.068µF	C639	24815103	Chip, 0.01µF, ±10%
C433	24666100	EL, 10µF, ±20%, 16V	C640	24815273	Chip, 0.027µF, ±10%
C434	24679479	EL, 4.7µF, ±20%, 250V	C641	24815822	Chip, 0.0082µF, ±10%
C435	24820222	PF, 0.0022µF, 630V	C642	24206100	EL, 10µF, ±20%, 50V
△C447	24082944	PF, 3900pF, ±3%, 1500V	C643	24206479	EL, 4.7µF, ±20%, 50V
△C448	24820123	PF, 0.012µF, ±10%, 630V	C644	24206339	EL, 3.3µF, ±20%, 50V
C450	24815103	Chip, 0.01µF, ±10%	C645	24815333	Chip, 0.033µF, ±10%
C451	24815222	Chip, 0.0022µF, ±10%	C646	24815223	Chip, 0.022µF, ±10%
C452	24666101	EL, 100µF, ±20%, 16V	C647	24815473	Chip, 0.047µF, ±10%
C481	24666101	EL, 100µF, ±20%, 16V	C648	24815333	Chip, 0.033µF, ±10%
C482	24567223	PF, 0.022µF	C649	24815273	Chip, 0.027µF, ±10%
C484	24501102	PF, 0.001µF	C650	24815822	Chip, 0.0082µF, ±10%
C485	24567104	PF, 0.1µF	C651	24815103	Chip, 0.01µF, ±10%
C497	24567474	PF, 0.47µF	C652	24815103	Chip, 0.01µF, ±10%
C498	24669479	EL, 4.7µF, ±20%, 50V	C653	24814103	Chip, 0.01µF, +80%, -20%
C501	24815103	Chip, 0.01µF, ±10%	C654	24763101	EL, 100µF, ±20%, 16V
C502	24815103	Chip, 0.01µF, ±10%	C661	24206010	EL, 1µF, ±20%, 50V
C503	24665101	EL, 100µF, ±20%, 10V	C662	24206010	EL, 1µF, ±20%, 50V
C504	24815222	Chip, 0.0022µF, ±10%	C663	24206010	EL, 1µF, ±20%, 50V
C505	24774120	Chip, 12pF, CH	C664	24669479	EL, 4.7µF, ±20%, 50V
C508	24666100	EL, 10µF, ±20%, 16V	C665	24815103	Chip, 0.01µF, ±10%
C509	24666101	EL, 100µF, ±20%, 16V	C666	24206010	EL, 1µF, ±20%, 50V
C510	24666101	EL, 100µF, ±20%, 16V	C667	24747478	EL, 0.47µF, ±20%, 50V
C511	24815103	Chip, 0.01µF, ±10%	C680	24669471	EL, 470µF, ±20%, 50V
C512	24206228	EL, 0.22µF, ±20%, 50V	C681	24666100	EL, 10µF, ±20%, 16V
C513	24815103	Chip, 0.01µF, ±10%	C682	24092178	Chip, 0.1µF, ±10%, 25V
C514	24092178	Chip, 0.1µF, ±10%, 25V	C690	24815103	Chip, 0.01µF, ±10%
C515	24092178	Chip, 0.1µF, ±10%, 25V	C701	24781330	Chip, 33pF, SL
C517	24774010	Chip, 1pF, ±0.25pF, CH	C702	24781330	Chip, 33pF, SL
C520	24666101	EL, 100µF, ±20%, 16V	C703	24781330	Chip, 33pF, SL
C531	24666101	EL, 100µF, ±20%, 16V	C704	24781330	Chip, 33pF, SL
C532	24666100	EL, 10µF, ±20%, 16V	C706	24092293	Chip, 0.1µF, +80%, -20%, 25V
C601	24815102	Chip, 0.001µF, ±10%	C708	24092293	Chip, 0.1µF, +80%, -20%, 25V
C602	24815102	Chip, 0.001µF, ±10%	C710	24092293	Chip, 0.1µF, +80%, -20%, 25V
C603	24669100	EL, 10µF, ±20%, 50V	C711	24203100	EL, 10µF, ±20%, 16V
C604	24669100	EL, 10µF, ±20%, 50V	C712	24781330	Chip, 33pF, SL
C605	24667101	EL, 100µF, ±20%, 25V	C713	24781330	Chip, 33pF, SL
C606	24667101	EL, 100µF, ±20%, 25V	C714	24092293	Chip, 0.1µF, +80%, -20%, 25V
C607	24567104	PF, 0.1µF	C717	24774470	Chip, 47pF, CH
C608	24567104	PF, 0.1µF	C718	24774470	Chip, 47pF, CH
C609	24669102	EL, 1000µF, ±20%, 50V	C719	24794101	EL, 100µF, ±20%, 16V
C610	24669102	EL, 1000µF, ±20%, 50V	C720	24092293	Chip, 0.1µF, +80%, -20%, 25V
C611	24667221	EL, 220µF, ±20%, 25V	C721	24774070	Chip, 7pF, ±0.25pF, CH
C612	24666470	EL, 47µF, ±20%, 16V	C724	24092293	Chip, 0.1µF, +80%, -20%, 25V
C621	24206479	EL, 4.7µF, ±20%, 50V	C725	24092293	Chip, 0.1µF, +80%, -20%, 25V
C622	24206108	EL, 0.1µF, ±20%, 50V	C726	24092293	Chip, 0.1µF, +80%, -20%, 25V
C623	24814472	Chip, 0.01µF, +80%, -20%	C727	24092293	Chip, 0.1µF, +80%, -20%, 25V
C624	24206479	EL, 4.7µF, ±20%, 50V	C728	24100104	Chip, 0.1µF, +80%, -20%, 25V
C625	24206479	EL, 4.7µF, ±20%, 50V	C730	24092293	Chip, 0.1µF, +80%, -20%, 25V
C626	24206479	EL, 4.7µF, ±20%, 50V	C731	24092293	Chip, 0.1µF, +80%, -20%, 25V
C627	24206479	EL, 4.7µF, ±20%, 50V	C732	24815103	Chip, 0.01µF, ±10%

Location No.	Part No.	Description	Location No.	Part No.	Description
C739	24092293	Chip, 0.1μF, +80%, -20%, 25V	C869	24678229	EL, 2.2μF, ±20%, 200V
C740	24092293	Chip, 0.1μF, +80%, -20%, 25V	C870	24082890	PF, 0.082μF, 800V
C741	24794470	EL, 47μF, ±20%, 16V	C871	24092484	CD, 1500pF, ±10%, 2kV
C742	24794470	EL, 47μF, ±20%, 16V	C872	24092474	CD, 220pF, ±10%, 2kV
C743	24092293	Chip, 0.1μF, +80%, -20%, 25V	C873	24567224	PF, 0.22μF
C744	24092293	Chip, 0.1μF, +80%, -20%, 25V	C874	24212471	CD, 470pF, ±10%
C745	24794470	EL, 47μF, ±20%, 16V	C876	24567474	PF, 0.47μF
C746	24794470	EL, 47μF, ±20%, 16V	C879	24073081	EL, 1.0μF, ±20%, 50V
C747	24092293	Chip, 0.1μF, +80%, -20%, 25V	C884	24086939	EL, 330μF, ±20%, 200V
C748	24092293	Chip, 0.1μF, +80%, -20%, 25V	C890	24073096	EL, 3300μF, ±20%, 50V
C749	24794470	EL, 47μF, ±20%, 16V	C891	24082229	PF, 0.1μF, ±10%, 250V
C750	24794470	EL, 47μF, ±20%, 16V	C894	24073043	EL, 2200μF, ±20%, 16V
C761	24774102	Chip, 1000pF, CH	C895	24073043	EL, 2200μF, ±20%, 16V
C762	24590562	PF, 5600pF	C898	24212102	CD, 1000pF, ±10%
C763	24774391	Chip, 390pF, CH	C901	24211102	CD, 1000pF, ±10%, 2kV
C765	24774102	Chip, 1000pF, CH	C902	24794100	EL, 10μF, ±20%, 16V
C766	24590562	PF, 5600pF	C903	24232103	CD, 0.01μF, +80%, -20%
C767	24774391	Chip, 390pF, CH	C904	24436102	CD, 1000pF
C769	24774102	Chip, 1000pF, CH	C908	24214472	CD, 4700pF, ±10%, 500V
C770	24590562	PF, 5600pF	C909	24436221	CD, 220pF
C771	24774391	Chip, 390pF, CH	C911	24211102	CD, 1000pF, ±10%, 2kV
C772	24761221	EL, 220μF, ±20%, 6.3V	C912	24794100	EL, 10μF, ±20%, 16V
C773	24774102	Chip, 1000pF, CH	C914	24436102	CD, 1000pF
C774	24590562	PF, 5600pF	C915	24679330	EL, 33μF, ±20%, 250V
C775	24774391	Chip, 390pF, CH	C916	24794101	EL, 100μF, ±20%, 16V
C777	24774102	Chip, 1000pF, CH	C918	24794470	EL, 47μF, ±20%, 16V
C778	24590562	PF, 5600pF	C919	24436221	CD, 220pF
C779	24774391	Chip, 390pF, CH	C921	24211102	CD, 1000pF, ±10%, 2kV
C781	24774102	Chip, 1000pF, CH	C922	24794100	EL, 10μF, ±20%, 16V
C782	24590562	PF, 5600pF	C923	24794470	EL, 47μF, ±20%, 16V
C783	24774391	Chip, 390pF, CH	C924	24232103	CD, 0.01μF, +80%, -20%
C784	24774821	Chip, 820pF, CH	C925	24794470	EL, 47μF, ±20%, 16V
C785	24774821	Chip, 820pF, CH	C926	24436102	CD, 1000pF
C786	24774821	Chip, 820pF, CH	C927	24436221	CD, 220pF
C787	24774821	Chip, 820pF, CH	C928	24214472	CD, 4700pF, ±10%, 500V
C788	24774821	Chip, 820pF, CH	C929	24794100	EL, 10μF, ±20%, 16V
C789	24774821	Chip, 820pF, CH	C961	24666101	EL, 100μF, ±20%, 16V
C790	24092293	Chip, 0.1μF, +80%, -20%, 25V	C962	24203100	EL, 10μF, ±20%, 16V
C795	24761221	EL, 220μF, ±20%, 6.3V	C963	24232103	CD, 0.01μF, +80%, -20%
C798	24763101	EL, 100μF, ±20%, 16V	C964	24567104	PF, 0.1μF
C799	24763101	EL, 100μF, ±20%, 16V	C7721	24815102	Chip, 0.001μF, ±10%
C801	24082001	PF, 0.47μF, AC125V	C7722	24781101	Chip, 100pF, SL
C809	24086062	EL, 1000μF, ±20%, 200V	C7724	24667101	EL, 100μF, ±20%, 25V
C810	24086062	EL, 1000μF, ±20%, 200V	C7725	24667101	EL, 100μF, ±20%, 25V
C814	24092597	CD, 4700pF, ±20%, AC250V	C7726	24815102	Chip, 0.001μF, ±10%
C815	24092597	CD, 4700pF, ±20%, AC250V	C7727	24781101	Chip, 100pF, SL
C816	24073081	EL, 1.0μF, ±20%, 50V	C7729	24815102	Chip, 0.001μF, ±10%
C817	24092597	CD, 4700pF, ±20%, AC250V	C7730	24781101	Chip, 100pF, SL
C819	24567684	PF, 0.68μF	C7732	24815102	Chip, 0.001μF, ±10%
C830	24567334	PF, 0.33μF	C7733	24781101	Chip, 100pF, SL
C831	24073037	EL, 47μF, ±20%, 16V	C7735	24667101	EL, 100μF, ±20%, 25V
C832	24567334	PF, 0.33μF	C7736	24667101	EL, 100μF, ±20%, 25V
C833	24073037	EL, 47μF, ±20%, 16V	C7737	24815102	Chip, 0.001μF, ±10%
C840	24073072	EL, 1000μF, ±20%, 35V	C7738	24781101	Chip, 100pF, SL
C842	24073001	EL, 100μF, ±20%, 6.3V	C7740	24815102	Chip, 0.001μF, ±10%
C843	24567104	PF, 0.1μF	C7741	24781101	Chip, 100pF, SL
C857	24073060	EL, 4700μF, ±20%, 25V	C7744	24815103	Chip, 0.01μF, ±10%
C858	24073060	EL, 4700μF, ±20%, 25V	C7747	24667101	EL, 100μF, ±20%, 25V
C860	24214103	CD, 0.01μF, ±10%, 500V	C7748	24567104	PF, 0.1μF
C863	24567104	PF, 0.1μF	C7749	24567104	PF, 0.1μF
C864	24092474	CD, 220pF, ±10%, 2kV	C7750	24667101	EL, 100μF, ±20%, 25V
C866	24567474	PF, 0.47μF	C7751	24667101	EL, 100μF, ±20%, 25V
C867	24591682	PF, 6800pF	C7752	24567104	PF, 0.1μF
C868	24073052	EL, 47μF, ±20%, 25V	C7753	24567104	PF, 0.1μF
			C7754	24667101	EL, 100μF, ±20%, 25V

Location No.	Part No.	Description	Location No.	Part No.	Description
C7755	24667101	EL, 100µF, ±20%, 25V	CS04	24206010	EL, 1µF, ±20%, 50V
C7765	24669479	EL, 4.7µF, ±20%, 50V	CS07	24436221	CD, 220pF
C7766	24669479	EL, 4.7µF, ±20%, 50V	CS08	24206010	EL, 1µF, ±20%, 50V
C7767	24667470	EL, 47µF, ±20%, 25V	CS09	24436331	CD, 330pF
C7769	24815103	Chip, 0.01µF, ±10%	CS10	24206229	EL, 2.2µF, ±20%, 50V
C7774	24781101	Chip, 100pF, SL	CS11	24206010	EL, 1µF, ±20%, 50V
C7776	24667470	EL, 47µF, ±20%, 25V	CS12	24436221	CD, 220pF
CA10	24781101	Chip, 100pF, SL	CS13	24206010	EL, 1µF, ±20%, 50V
CA13	24815221	Chip, 220pF, ±10%	CS14	24436221	CD, 220pF
CA18	24666470	EL, 47µF, ±20%, 16V	CS15	24436331	CD, 330pF
CA20	24774181	Chip, 180pF, CH	CS16	24206229	EL, 2.2µF, ±20%, 50V
CA21	24092442	Chip, 0.47µF, +80%, -20%, 16V	CS21	24436101	CD, 100pF
CA22	24815103	Chip, 0.01µF, ±10%	CS22	24436101	CD, 100pF
CA23	24774181	Chip, 180pF, CH	CS23	24206478	EL, 0.47µF, ±20%, 50V
CA24	24092442	Chip, 0.47µF, +80%, -20%, 16V	CS24	24436331	CD, 330pF
CA25	24666100	EL, 10µF, ±20%, 16V	CS25	24206229	EL, 2.2µF, ±20%, 50V
CA26	24092441	Chip, 1µF, +80%, -20%, 16V	CS28	24436331	CD, 330pF
CA27	24092441	Chip, 1µF, +80%, -20%, 16V	CS29	24436331	CD, 330pF
CA29	24815221	Chip, 220pF, ±10%	CS32	24203100	EL, 10µF, ±20%, 16V
CA30	24774101	Chip, 100pF, CH	CS33	24203100	EL, 10µF, ±20%, 16V
CA34	24781101	Chip, 100pF, SL	CS34	24436331	CD, 330pF
CA45	24666100	EL, 10µF, ±20%, 16V	CS35	24206229	EL, 2.2µF, ±20%, 50V
CA49	24666100	EL, 10µF, ±20%, 16V	CS36	24206229	EL, 2.2µF, ±20%, 50V
CA50	24814103	Chip, 0.01µF, +80%, -20%	CS38	24206229	EL, 2.2µF, ±20%, 50V
CA52	24815272	Chip, 0.0027µF, ±10%	CS41	24436331	CD, 330pF
CA54	24781101	Chip, 100pF, SL	CS42	24206229	EL, 2.2µF, ±20%, 50V
CA59	24781101	Chip, 100pF, SL	CS43	24436331	CD, 330pF
CA60	24781101	Chip, 100pF, SL	CS44	24206229	EL, 2.2µF, ±20%, 50V
CA61	24666220	EL, 22µF, ±20%, 16V	CV01	24085981	EL, 10µF, ±20%, 16V, Non-Polar
CA64	24814103	Chip, 0.01µF, +80%, -20%	CV02	24232103	CD, 0.01µF, +80%, -20%
CA68	24666100	EL, 10µF, ±20%, 16V	CV03	24203100	EL, 10µF, ±20%, 16V
CA69	24814103	Chip, 0.01µF, +80%, -20%	CV04	24203100	EL, 10µF, ±20%, 16V
CA71	24781101	Chip, 100pF, SL	CV05	24203100	EL, 10µF, ±20%, 16V
CA72	24085981	EL, 10µF, ±20%, 16V, Non-Polar	CV08	24666471	EL, 470µF, ±20%, 16V
CA73	24666100	EL, 10µF, ±20%, 16V	CV09	24666471	EL, 470µF, ±20%, 16V
CB11	24794470	EL, 47µF, ±20%, 16V	CV13	24794100	EL, 10µF, ±20%, 16V
CB13	24085981	EL, 10µF, ±20%, 16V, Non-Polar	CV14	24232103	CD, 0.01µF, +80%, -20%
CB14	24781101	Chip, 100pF, SL	CV15	24232103	CD, 0.01µF, +80%, -20%
CB15	24794100	EL, 10µF, ±20%, 16V	CV16	24085981	EL, 10µF, ±20%, 16V, Non-Polar
CB42	24232103	CD, 0.01µF, +80%, -20%	CV17	24203100	EL, 10µF, ±20%, 16V
CB61	24781221	Chip, 220pF, SL	CV19	24232103	CD, 0.01µF, +80%, -20%
CB90	24815103	Chip, 0.01µF, ±10%	CV21	24203100	EL, 10µF, ±20%, 16V
CB91	24666100	EL, 10µF, ±20%, 16V	CV22	24203100	EL, 10µF, ±20%, 16V
CD02	24591562	PF, 5600pF	CV23	24232103	CD, 0.01µF, +80%, -20%
CD03	24591393	PF, 0.039µF	CV24	24232103	CD, 0.01µF, +80%, -20%
CD04	24591393	PF, 0.039µF	CV27	24202221	EL, 220µF, ±20%, 10V
CD08	24794100	EL, 10µF, ±20%, 16V	CV28	24202221	EL, 220µF, ±20%, 10V
CD10	24436101	CD, 100pF	CV29	24203101	EL, 100µF, ±20%, 16V
CD12	24436101	CD, 100pF	CV30	24232103	CD, 0.01µF, +80%, -20%
CD13	24797479	EL, 4.7µF, ±20%, 50V	CV31	24203100	EL, 10µF, ±20%, 16V
CD14	24797229	EL, 2.2µF, ±20%, 50V	CV38	24203101	EL, 100µF, ±20%, 16V
CD15	24794470	EL, 47µF, ±20%, 16V	CV39	24212102	CD, 1000pF, ±10%
CD16	24797229	EL, 2.2µF, ±20%, 50V	CV40	24763101	EL, 100µF, ±20%, 16V
CR12	24092178	Chip, 0.1µF, ±10%, 25V	CV41	24232103	CD, 0.01µF, +80%, -20%
CR13	24092178	Chip, 0.1µF, ±10%, 25V	CV42	24085971	EL, 3.3µF, ±20%, 50V, Non-Polar
CR14	24092178	Chip, 0.1µF, ±10%, 25V	CV43	24436121	CD, 120pF
CR15	24092178	Chip, 0.1µF, ±10%, 25V	CV44	24436220	CD, 22pF
CR16	24092178	Chip, 0.1µF, ±10%, 25V	CV46	24232103	CD, 0.01µF, +80%, -20%
CR17	24092178	Chip, 0.1µF, ±10%, 25V	CV48	24763101	EL, 100µF, ±20%, 16V
CS03	24436221	CD, 220pF	CV49	24232103	CD, 0.01µF, +80%, -20%
			CV61	24232103	CD, 0.01µF, +80%, -20%

Location No.	Part No.	Description	Location No.	Part No.	Description
CV64	24206100	EL, 10 μ F, $\pm 20\%$, 50V	R150	24872101	Chip, 100 ohm, 1/16W (50A60/55A60/61A60)
CV65	24591122	PF, 1200pF	R151	24872562	Chip, 5600 ohm, 1/16W (50A60/55A60/61A60)
CV66	24436561	CD, 560pF	R152	24872103	Chip, 10k ohm, 1/16W (50A60/55A60/61A60)
CV67	24591102	PF, 1000pF	R201	24872821	Chip, 820 ohm, 1/16W
CV68	24206010	EL, 1 μ F, $\pm 20\%$, 50V	R202	24872102	Chip, 1k ohm, 1/16W
CW04	24591822	PF, 8200pF	R204	24872104	Chip, 100k ohm, 1/16W
CW05	24212103	CD, 0.01 μ F, $\pm 10\%$	R205	24872101	Chip, 100 ohm, 1/16W (50A60/55A60/61A60)
CW07	24666470	EL, 47 μ F, $\pm 20\%$, 16V	R206	24872102	Chip, 1k ohm, 1/16W (50A60/55A60/61A60)
CW08	24794101	EL, 100 μ F, $\pm 20\%$, 16V	R207	24872101	Chip, 100 ohm, 1/16W
CW09	24815103	Chip, 0.01 μ F, $\pm 10\%$	R208	24872101	Chip, 100 ohm, 1/16W
CW12	24666470	EL, 47 μ F, $\pm 20\%$, 16V	R209	24872101	Chip, 100 ohm, 1/16W
CW13	24709100	EL, 10 μ F, $\pm 20\%$, 200V	R212	24872472	Chip, 4700 ohm, 1/16W
CW14	24436101	CD, 100pF	R213	24872122	Chip, 1200 ohm, 1/16W
CW15	24214472	CD, 4700pF, $\pm 10\%$, 500V	R214	24872222	Chip, 2200 ohm, 1/16W
CW16	24436101	CD, 100pF	R216	24872103	Chip, 10k ohm, 1/16W
CW17	24214472	CD, 4700pF, $\pm 10\%$, 500V	R223	24872102	Chip, 1k ohm, 1/16W
CW18	24666470	EL, 47 μ F, $\pm 20\%$, 16V	R241	24367103	CF, 10k ohm, $\pm 2\%$
CW19	24435560	CD, 56pF, 500V	R242	24367103	CF, 10k ohm, $\pm 2\%$
CW20	24709100	EL, 10 μ F, $\pm 20\%$, 200V	R243	24381563	OMF, 56k ohm, 1/2W
CW21	24666470	EL, 47 μ F, $\pm 20\%$, 16V	R266	24872102	Chip, 1k ohm, 1/16W
CW22	24436561	CD, 560pF	R267	24872821	Chip, 820 ohm, 1/16W
CW26	24212102	CD, 1000pF, $\pm 10\%$	R268	24872102	Chip, 1k ohm, 1/16W
CW52	24203100	EL, 10 μ F, $\pm 20\%$, 16V	R269	24872102	Chip, 1k ohm, 1/16W
CW53	24203100	EL, 10 μ F, $\pm 20\%$, 16V	R270	24872682	Chip, 6800 ohm, 1/16W
CW54	24203100	EL, 10 μ F, $\pm 20\%$, 16V	R301	24872103	Chip, 10k ohm, 1/16W
CW58	24794101	EL, 100 μ F, $\pm 20\%$, 16V	R302	24872101	Chip, 100 ohm, 1/16W
CW59	24232103	CD, 0.01 μ F, +80%, -20%	R303	24872102	Chip, 1k ohm, 1/16W
CY01	24665471	EL, 470 μ F, $\pm 20\%$, 10V	R304	24872103	Chip, 10k ohm, 1/16W
CY40	24206100	EL, 10 μ F, $\pm 20\%$, 50V	R305	24872153	Chip, 15k ohm, 1/16W
CZ03	24092442	Chip, 0.47 μ F, +80%, -20%, 16V	R307	24872471	Chip, 470 ohm, 1/16W
CZ05	24814103	Chip, 0.01 μ F, +80%, -20%	R308	24872471	Chip, 470 ohm, 1/16W
CZ07	24092178	Chip, 0.1 μ F, $\pm 10\%$, 25V	R310	24872562	Chip, 5600 ohm, 1/16W
CZ09	24781220	Chip, 22pF, SL	R311	24872103	Chip, 10k ohm, 1/16W
CZ10	24781100	Chip, 10pF, ± 0.5 pF%, SL	R312	24872103	Chip, 10k ohm, 1/16W
CZ11	24781220	Chip, 22pF, SL	R313	24872102	Chip, 1k ohm, 1/16W
CZ12	24814103	Chip, 0.01 μ F, +80%, -20%	R314	24872473	Chip, 47k ohm, 1/16W
CZ13	24814103	Chip, 0.01 μ F, +80%, -20%	R315	24872821	Chip, 820 ohm, 1/16W
CZ14	24203100	EL, 10 μ F, $\pm 20\%$, 16V	R316	24872102	Chip, 1k ohm, 1/16W
CZ17	24814103	Chip, 0.01 μ F, +80%, -20%	R317	24872824	Chip, 820k ohm, 1/16W
CZ19	24781181	Chip, 180pF, SL	R318	24872153	Chip, 15k ohm, 1/16W
CZ20	24814103	Chip, 0.01 μ F, +80%, -20%	R319	24872100	Chip, 10 ohm, 1/16W
CZ21	24781122	Chip, 1200pF, SL	R320	24000249	MF, 47k ohm, 1/4W
CZ22	24203100	EL, 10 μ F, $\pm 20\%$, 16V	R321	24872332	Chip, 3300 ohm, 1/16W
CZ23	24814103	Chip, 0.01 μ F, +80%, -20%	R322	24000529	MF, 6800 ohm, 1/4W
CZ24	24814103	Chip, 0.01 μ F, +80%, -20%	R323	24000639	MF, 22k ohm, 1/4W
CZ25	24203100	EL, 10 μ F, $\pm 20\%$, 16V	R324	24872103	Chip, 10k ohm, 1/16W
CZ26	24814103	Chip, 0.01 μ F, +80%, -20%	R325	24872222	Chip, 2200 ohm, 1/16W
CZ28	24814103	Chip, 0.01 μ F, +80%, -20%	R326	24872103	Chip, 10k ohm, 1/16W
CZ29	24814103	Chip, 0.01 μ F, +80%, -20%	R327	24872103	Chip, 10k ohm, 1/16W
CZ30	24203100	EL, 10 μ F, $\pm 20\%$, 16V	R328	24872103	Chip, 10k ohm, 1/16W
CZ31	24092178	Chip, 0.1 μ F, $\pm 10\%$, 25V	R329	24872103	Chip, 10k ohm, 1/16W
CZ32	24781150	Chip, 15pF, SL	R330	24872153	Chip, 15k ohm, 1/16W
CZ33	24781390	Chip, 39pF, SL	R331	24019119	MF, 30k ohm, 1/6W
CZ34	24781150	Chip, 15pF, SL	R332	24000525	MF, 4.7k ohm, 1/4W
CZ35	24781390	Chip, 39pF, SL	R333	24872103	Chip, 10k ohm, 1/16W
CZ37	24203100	EL, 10 μ F, $\pm 20\%$, 16V	R334	24872102	Chip, 1k ohm, 1/16W
CZ38	24203100	EL, 10 μ F, $\pm 20\%$, 16V	R335	24872102	Chip, 1k ohm, 1/16W
CZ41	24781470	Chip, 47pF, SL	R336	24872102	Chip, 1k ohm, 1/16W
CZ42	24781470	Chip, 47pF, SL	R337	24321129	MF, 1.2 ohm, 1/2W
CZ45	24781100	Chip, 10pF, ± 0.5 pF%, SL			
RESISTORS					
R101	24383223	OMF, 22k ohm, 2W			

Location No.	Part No.	Description	Location No.	Part No.	Description
R338	24872682	Chip, 6800 ohm, 1/16W (50A60/55A60/61A60)	R428	24310109	MF, 1.0 ohm, 1/2W
R339	24872393	Chip, 39k ohm, 1/16W (50A60/55A60/61A60)	R431	24383102	OMF, 1k ohm, 2W (50A60/55A60/61A60)
R340	24872824	Chip, 820k ohm, 1/16W (50A60/55A60/61A60)	R432	24376274	CF, 270k ohm, 1/2W (50A60/55A60/61A60)
R341	24872273	Chip, 27k ohm, 1/16W (50A60/55A60/61A60)	R432	24552101	OMF, 100 ohm, 1/2W
R342	24872153	Chip, 15k ohm, 1/16W	R433	24376274	CF, 270k ohm, 1/2W (50A60/55A60/61A60)
R343	24872102	Chip, 1k ohm, 1/16W (50A60/55A60/61A60)	R433	24872222	Chip, 2200 ohm, 1/16W
R344	24382271	OMF, 270 ohm, 1W	R434	24376274	CF, 270k ohm, 1/2W (50A60/55A60/61A60)
R345	24322828	MF, 0.82 ohm, 1W	R435	24322228	MF, 0.22 ohm, 1W
R346	24382391	OMF, 390 ohm, 1W	R436	24382561	OMF, 560 ohm, 1W
R347	24872103	Chip, 10k ohm, 1/16W (50A60/55A60/61A60)	R437	24382561	OMF, 560 ohm, 1W
R348	24872103	Chip, 10k ohm, 1/16W (50A60/55A60/61A60)	R438	24382561	OMF, 560 ohm, 1W
R349	24872392	Chip, 3900 ohm, 1/16W (50A60/55A60/61A60)	R439	24366103	CF, 10k ohm
R350	24872822	Chip, 8200 ohm, 1/16W (50A60/55A60/61A60)	R440	24366103	CF, 10k ohm
R351	24366472	CF, 4700 ohm (50A60/55A60/61A60)	R441	24366474	CF, 470k ohm
R360	24872103	Chip, 10k ohm, 1/16W	R442	24366103	CF, 10k ohm
R361	24872103	Chip, 10k ohm, 1/16W	R443	24366562	CF, 5600 ohm
R362	24872103	Chip, 10k ohm, 1/16W	R444	24366103	CF, 10k ohm
R363	24872682	Chip, 6800 ohm, 1/16W	R445	24366472	CF, 4700 ohm
R364	24872103	Chip, 10k ohm, 1/16W	R446	24366103	CF, 10k ohm
R370	24872102	Chip, 1k ohm, 1/16W	R447	24366681	CF, 680 ohm
R371	24872823	Chip, 82k ohm, 1/16W	R448	24366334	CF, 330k ohm
R372	24872332	Chip, 3300 ohm, 1/16W	R449	24366101	CF, 100 ohm
R373	24872823	Chip, 82k ohm, 1/16W	R451	24872224	Chip, 220k ohm, 1/16W
R374	24872104	Chip, 100k ohm, 1/16W	R468	24366103	CF, 10k ohm
R375	24872153	Chip, 15k ohm, 1/16W	R469	24366222	CF, 2200 ohm
R376	24872333	Chip, 33k ohm, 1/16W	R470	24338828	MF, 0.82 ohm, 1W
R378	24872222	Chip, 2200 ohm, 1/16W	R471	24552271	OMF, 270 ohm, 1/2W
R401	24366102	CF, 1k ohm	R472	24552151	OMF, 150 ohm, 1/2W
R401	24872391	Chip, 390 ohm, 1/16W	R473	24327223	MF, 22k ohm, ±1%, 1/4W
R402	24366102	CF, 1k ohm	R474	24327223	MF, 22k ohm, ±1%, 1/4W
R403	24553272	OMF, 2700 ohm, 1W	R475	24366102	CF, 1k ohm
R403	24872302	Chip, 3k ohm, 1/16W	R479	24366393	CF, 39k ohm
R404	24384682	OMF, 6800 ohm, 3W	R480	24366103	CF, 10k ohm
R405	24552330	OMF, 33 ohm, 1/2W	R481	24366102	CF, 1k ohm
R406	24382222	OMF, 2200 ohm, 1W	R482	24366331	CF, 330 ohm
R406	24872223	Chip, 22k ohm, 1/16W	R483	24366102	CF, 1k ohm
R407	24552100	OMF, 10 ohm, 1/2W	R484	24366474	CF, 470k ohm
R407	24872103	Chip, 10k ohm, 1/16W	R485	24366103	CF, 10k ohm
R408	24366101	CF, 100 ohm	R486	24366103	CF, 10k ohm
R409	24555220	OMF, 22 ohm, 3W	△ R487	24000366	MF, 2200 ohm, 1/4W
R410	24555220	OMF, 22 ohm, 3W	△ R488	24000357	MF, 910ohm, 1/4W
R411	24383270	OMF, 27 ohm, 2W	R489	24366222	CF, 2200 ohm
R412	24366223	CF, 22k ohm	R490	24000639	MF, 22k ohm, 1/4W
R413	24366332	CF, 3300 ohm	R492	24366392	CF, 3900 ohm
R414	24366100	CF, 10 ohm	R493	24366224	CF, 220k ohm
R415	24533102	FR, 1k ohm, 2W	△ R494	24000635	MF, 12k ohm, ±1%, 1/4W
R418	24019292	FR, 68 ohm, 1/2W	R495	24366473	CF, 47k ohm
R419	24942102	CC, 1k ohm, 1/2W	R496	24366223	CF, 22k ohm
R420	24382473	OMF, 47k ohm, 1W	R497	24366103	CF, 10k ohm
R421	24382104	OMF, 100k ohm, 1W (50A60/55A60/61A60)	R498	24366223	CF, 22k ohm
R423	24872471	Chip, 470 ohm, 1/16W	R499	24366683	CF, 68k ohm
R424	24338398	MF, 0.39 ohm, 1W	R501	24872223	Chip, 22k ohm, 1/16W
R426	24000112	FR, 10 ohm, 1/4W	R502	24872101	Chip, 100 ohm, 1/16W
			R503	24872101	Chip, 100 ohm, 1/16W
			R504	24872101	Chip, 100 ohm, 1/16W
			R505	24872471	Chip, 470 ohm, 1/16W
			R506	24872103	Chip, 10k ohm, 1/16W
			R508	24872102	Chip, 1k ohm, 1/16W
			R509	24872471	Chip, 470 ohm, 1/16W
			R510	24872102	Chip, 1k ohm, 1/16W

Location No.	Part No.	Description	Location No.	Part No.	Description
R512	24872101	Chip, 100 ohm, 1/16W	R709	24872100	Chip, 10 ohm, 1/16W
R514	24872122	Chip, 1200 ohm, 1/16W	R710	24872100	Chip, 10 ohm, 1/16W
R515	24872103	Chip, 10k ohm, 1/16W	R711	24872100	Chip, 10 ohm, 1/16W
R530	24872101	Chip, 100 ohm, 1/16W	R712	24872100	Chip, 10 ohm, 1/16W
R531	24872101	Chip, 100 ohm, 1/16W	R713	24872100	Chip, 10 ohm, 1/16W
R532	24872101	Chip, 100 ohm, 1/16W	R714	24872100	Chip, 10 ohm, 1/16W
R533	24872102	Chip, 1k ohm, 1/16W	R716	24872103	Chip, 10k ohm, 1/16W
R534	24872102	Chip, 1k ohm, 1/16W	R718	24872221	Chip, 220 ohm, 1/16W
R535	24872102	Chip, 1k ohm, 1/16W	R719	24872103	Chip, 10k ohm, 1/16W
R536	24872272	Chip, 2700 ohm, 1/16W	R720	24872103	Chip, 10k ohm, 1/16W
R537	24872472	Chip, 4700 ohm, 1/16W	R721	24872103	Chip, 10k ohm, 1/16W
R538	24872103	Chip, 10k ohm, 1/16W	R722	24872561	Chip, 560 ohm, 1/16W
R601	24872682	Chip, 6800 ohm, 1/16W	R723	24872102	Chip, 1k ohm, 1/16W
R602	24872682	Chip, 6800 ohm, 1/16W	R724	24872102	Chip, 1k ohm, 1/16W
R603	24872562	Chip, 5600 ohm, 1/16W	R725	24872102	Chip, 1k ohm, 1/16W
R604	24872562	Chip, 5600 ohm, 1/16W	R727	24872222	Chip, 2200 ohm, 1/16W
R609	24872229	Chip, 2.2 ohm, 1/16W	R728	24872221	Chip, 220 ohm, 1/16W
R610	24872229	Chip, 2.2 ohm, 1/16W	R729	24872221	Chip, 220 ohm, 1/16W
R611	24872332	Chip, 3300 ohm, 1/16W	R730	24872473	Chip, 47k ohm, 1/16W
R612	24872332	Chip, 3300 ohm, 1/16W	R731	24872473	Chip, 47k ohm, 1/16W
R613	24872222	Chip, 2200 ohm, 1/16W	R732	24872473	Chip, 47k ohm, 1/16W
R621	24872101	Chip, 100 ohm, 1/16W	R733	24872473	Chip, 47k ohm, 1/16W
R622	24872105	Chip, 1M ohm, 1/16W	R734	24872221	Chip, 220 ohm, 1/16W
R623	24872101	Chip, 100 ohm, 1/16W	R735	24872911	Chip, 910 ohm, 1/16W
R624	24872101	Chip, 100 ohm, 1/16W	R736	24872911	Chip, 910 ohm, 1/16W
R625	24872101	Chip, 100 ohm, 1/16W	R737	24872152	Chip, 1500 ohm, 1/16W
R626	24872101	Chip, 100 ohm, 1/16W	R738	24872332	Chip, 3300 ohm, 1/16W
R627	24872101	Chip, 100 ohm, 1/16W	R739	24872362	Chip, 3600 ohm, 1/16W
R633	24872101	Chip, 100 ohm, 1/16W	R740	24872911	Chip, 910 ohm, 1/16W
R634	24872101	Chip, 100 ohm, 1/16W	R741	24872911	Chip, 910 ohm, 1/16W
R635	24872101	Chip, 100 ohm, 1/16W	R742	24872152	Chip, 1500 ohm, 1/16W
R636	24872101	Chip, 100 ohm, 1/16W	R743	24872332	Chip, 3300 ohm, 1/16W
R637	24872101	Chip, 100 ohm, 1/16W	R744	24872362	Chip, 3600 ohm, 1/16W
R638	24872101	Chip, 100 ohm, 1/16W	R745	24872911	Chip, 910 ohm, 1/16W
R639	24872101	Chip, 100 ohm, 1/16W	R746	24872911	Chip, 910 ohm, 1/16W
R640	24872101	Chip, 100 ohm, 1/16W	R747	24872152	Chip, 1500 ohm, 1/16W
R641	24872101	Chip, 100 ohm, 1/16W	R748	24872332	Chip, 3300 ohm, 1/16W
R642	24872101	Chip, 100 ohm, 1/16W	R749	24872362	Chip, 3600 ohm, 1/16W
R643	24872101	Chip, 100 ohm, 1/16W	R750	24872911	Chip, 910 ohm, 1/16W
R661	24872101	Chip, 100 ohm, 1/16W	R751	24872911	Chip, 910 ohm, 1/16W
R662	24872153	Chip, 15k ohm, 1/16W	R752	24872152	Chip, 1500 ohm, 1/16W
R663	24872123	Chip, 12k ohm, 1/16W	R753	24872332	Chip, 3300 ohm, 1/16W
R665	24872223	Chip, 22k ohm, 1/16W	R754	24872362	Chip, 3600 ohm, 1/16W
R666	24872473	Chip, 47k ohm, 1/16W	R755	24872911	Chip, 910 ohm, 1/16W
R667	24872223	Chip, 22k ohm, 1/16W	R756	24872911	Chip, 910 ohm, 1/16W
R668	24872473	Chip, 47k ohm, 1/16W	R757	24872152	Chip, 1500 ohm, 1/16W
R669	24872222	Chip, 2200 ohm, 1/16W	R758	24872332	Chip, 3300 ohm, 1/16W
R671	24872101	Chip, 100 ohm, 1/16W	R759	24872362	Chip, 3600 ohm, 1/16W
R672	24872153	Chip, 15k ohm, 1/16W	R760	24872911	Chip, 910 ohm, 1/16W
R673	24872123	Chip, 12k ohm, 1/16W	R761	24872911	Chip, 910 ohm, 1/16W
R674	24872103	Chip, 10k ohm, 1/16W	R762	24872152	Chip, 1500 ohm, 1/16W
R675	24872473	Chip, 47k ohm, 1/16W	R763	24872332	Chip, 3300 ohm, 1/16W
R682	24872473	Chip, 47k ohm, 1/16W	R764	24872362	Chip, 3600 ohm, 1/16W
R683	24872223	Chip, 22k ohm, 1/16W	R778	24872101	Chip, 100 ohm, 1/16W
R684	24872223	Chip, 22k ohm, 1/16W	R779	24872101	Chip, 100 ohm, 1/16W
R687	24872103	Chip, 10k ohm, 1/16W	R780	24872101	Chip, 100 ohm, 1/16W
R689	24872222	Chip, 2200 ohm, 1/16W	R781	24872101	Chip, 100 ohm, 1/16W
R690	24872103	Chip, 10k ohm, 1/16W	R782	24872101	Chip, 100 ohm, 1/16W
R701	24872221	Chip, 220 ohm, 1/16W	R783	24872101	Chip, 100 ohm, 1/16W
R702	24872221	Chip, 220 ohm, 1/16W	R786	24872472	Chip, 4700 ohm, 1/16W
R703	24872472	Chip, 4700 ohm, 1/16W	R787	24872472	Chip, 4700 ohm, 1/16W
R704	24872472	Chip, 4700 ohm, 1/16W	R815	24366102	CF, 1k ohm
R707	24872100	Chip, 10 ohm, 1/16W	R816	24366102	CF, 1k ohm
R708	24872100	Chip, 10 ohm, 1/16W	R817	24366102	CF, 1k ohm

Location No.	Part No.	Description
R818	24366471	CF, 470 ohm
R819	24366102	CF, 1k ohm
R820	24327153	MF, 15k ohm, ±1%, 1/4W
R821	24327123	MF, 12k ohm, ±1%, 1/4W
R822	24327123	MF, 12k ohm, ±1%, 1/4W
R823	24327123	MF, 12k ohm, ±1%, 1/4W
R824	24366102	CF, 1k ohm
R842	24366222	CF, 2200 ohm
R843	24366103	CF, 10k ohm
R861	24383473	OMF, 47k ohm, 2W
R862	24381330	OMF, 33 ohm, 1/2W
R864	24552102	OMF, 1k ohm, 1/2W
R865	24552470	OMF, 47 ohm, 1/2W
R867	24366563	CF, 56k ohm
R868	24552560	OMF, 56 ohm, 1/2W
R870	24381121	OMF, 120 ohm, 1/2W
R871	24382680	OMF, 68 ohm, 1W
R872	24377224	CF, 220k ohm, 1W
R883	24381683	OMF, 68k ohm, 1/2W
R884	24366102	CF, 1k ohm
R891	24366152	CF, 1500 ohm
R898	24002000	CC, 3.9M ohm, ±10%, 1/2W
R900	24000906	FR, 2.4 ohm, 2W
R901	24366101	CF, 100 ohm
R903	24942102	CC, 1k ohm, 1/2W
R904	24366102	CF, 1k ohm
R905	24366470	CF, 47 ohm
R906	24366471	CF, 470 ohm
R908	24366330	CF, 33 ohm
R909	24366101	CF, 100 ohm
R911	24366101	CF, 100 ohm
R913	24942102	CC, 1k ohm, 1/2W
R914	24366102	CF, 1k ohm
R915	24366750	CF, 75 ohm
R916	24366471	CF, 470 ohm
R918	24366330	CF, 33 ohm
R919	24366391	CF, 390 ohm
R921	24366101	CF, 100 ohm
R923	24942102	CC, 1k ohm, 1/2W
R924	24366102	CF, 1k ohm
R925	24366101	CF, 100 ohm
R926	24366471	CF, 470 ohm
R927	24366102	CF, 1k ohm
R928	24366330	CF, 33 ohm
R931	24555153	OMF, 15k ohm, 3W
R932	24555153	OMF, 15k ohm, 3W
R940	24366102	CF, 1k ohm
R941	24555153	OMF, 15k ohm, 3W
R942	24555153	OMF, 15k ohm, 3W
R949	24366470	CF, 47 ohm
R950	24366101	CF, 100 ohm
R951	24555153	OMF, 15k ohm, 3W
R952	24555153	OMF, 15k ohm, 3W
R953	24366470	CF, 47 ohm
R954	24366102	CF, 1k ohm
R955	24366151	CF, 150 ohm
R956	24366271	CF, 270 ohm
R958	24366821	CF, 820 ohm
R959	24366390	CF, 39 ohm
R960	24366560	CF, 56 ohm
R961	24366821	CF, 820 ohm
R962	24366391	CF, 390 ohm
R963	24366222	CF, 2200 ohm
R964	24366332	CF, 3300 ohm

Location No.	Part No.	Description
R965	24366471	CF, 470 ohm
R966	24366821	CF, 820 ohm
R967	24366122	CF, 1200 ohm
R968	24366680	CF, 68 ohm
R969	24366103	CF, 10k ohm
R970	24366222	CF, 2200 ohm
R971	24367152	CF, 1500 ohm, ±2%
R972	24367471	CF, 470 ohm, ±2%
R973	24367681	CF, 680 ohm, ±2%
R974	24367681	CF, 680 ohm, ±2%
R975	24366242	CF, 2400 ohm
R976	24367562	CF, 5600 ohm, ±2%
R977	24367562	CF, 5600 ohm, ±2%
R978	24367681	CF, 680 ohm, ±2%
R980	24366272	CF, 2700 ohm
R981	24366103	CF, 10k ohm
R982	24366562	CF, 5600 ohm
R983	24366562	CF, 5600 ohm
R984	24366562	CF, 5600 ohm
R986	24366102	CF, 1k ohm
R987	24366822	CF, 8200 ohm
R988	24366103	CF, 10k ohm
R989	24366103	CF, 10k ohm
R990	24366392	CF, 3900 ohm
R991	24366562	CF, 5600 ohm
R992	24366102	CF, 1k ohm
R993	24366681	CF, 680 ohm
R994	24366392	CF, 3900 ohm
R995	24366102	CF, 1k ohm
R996	24366103	CF, 10k ohm
R997	24366472	CF, 4700 ohm
R998	24366102	CF, 1k ohm
R999	24366102	CF, 1k ohm
R7707	24872472	Chip, 4700 ohm, 1/16W
R7708	24872472	Chip, 4700 ohm, 1/16W
R7710	24555680	OMF, 68 ohm, 3W
R7711	24323229	MF, 2.2 ohm, 2W
R7712	24872472	Chip, 4700 ohm, 1/16W
R7713	24872472	Chip, 4700 ohm, 1/16W
R7715	24555680	OMF, 68 ohm, 3W
R7716	24323229	MF, 2.2 ohm, 2W
R7717	24872472	Chip, 4700 ohm, 1/16W
R7718	24872472	Chip, 4700 ohm, 1/16W
R7720	24555680	OMF, 68 ohm, 3W
R7721	24323229	MF, 2.2 ohm, 2W
R7722	24872472	Chip, 4700 ohm, 1/16W
R7723	24872472	Chip, 4700 ohm, 1/16W
R7725	24555680	OMF, 68 ohm, 3W
R7726	24323229	MF, 2.2 ohm, 2W
R7727	24872472	Chip, 4700 ohm, 1/16W
R7728	24872472	Chip, 4700 ohm, 1/16W
R7730	24555680	OMF, 68 ohm, 3W
R7731	24323229	MF, 2.2 ohm, 2W
R7732	24872472	Chip, 4700 ohm, 1/16W
R7733	24872472	Chip, 4700 ohm, 1/16W
R7735	24555680	OMF, 68 ohm, 3W
R7736	24323229	MF, 2.2 ohm, 2W
R7766	24872223	Chip, 22k ohm, 1/16W
R7767	24872153	Chip, 15k ohm, 1/16W
R7773	24872224	Chip, 220k ohm, 1/16W
R7775	24872273	Chip, 27k ohm, 1/16W
R7776	24872472	Chip, 4700 ohm, 1/16W
R7777	24872273	Chip, 27k ohm, 1/16W
R7778	24872472	Chip, 4700 ohm, 1/16W

Location No.	Part No.	Description	Location No.	Part No.	Description
R7779	24872102	Chip, 1k ohm, 1/16W	RB03	24872101	Chip, 100 ohm, 1/16W
R7780	24872102	Chip, 1k ohm, 1/16W	RB04	24366103	CF, 10k ohm
R7781	24872333	Chip, 33k ohm, 1/16W	RB14	24872153	Chip, 15k ohm, 1/16W
R7786	24872472	Chip, 4700 ohm, 1/16W	RB15	24366471	CF, 470 ohm
R7787	24872472	Chip, 4700 ohm, 1/16W	RB15	24872153	Chip, 15k ohm, 1/16W
R7788	24382221	OMF, 220 ohm, 1W	RB16	24872332	Chip, 3300 ohm, 1/16W
R7795	24872332	Chip, 3300 ohm, 1/16W	RB17	24872332	Chip, 3300 ohm, 1/16W
R7796	24872332	Chip, 3300 ohm, 1/16W	RB19	24366470	CF, 47 ohm
R7797	24872332	Chip, 3300 ohm, 1/16W	RB30	24366103	CF, 10k ohm
R7798	24872221	Chip, 220 ohm, 1/16W	RB41	24366273	CF, 27k ohm
RA01	24872102	Chip, 1k ohm, 1/16W	RB41	24366681	CF, 680 ohm
RA02	24872101	Chip, 100 ohm, 1/16W	RB42	24366153	CF, 15k ohm
RA03	24872101	Chip, 100 ohm, 1/16W	RB61	24872222	Chip, 2200 ohm, 1/16W
RA04	24872102	Chip, 1k ohm, 1/16W	RB62	24872103	Chip, 10k ohm, 1/16W
RA05	24872102	Chip, 1k ohm, 1/16W	RB63	24872472	Chip, 4700 ohm, 1/16W
RA06	24872102	Chip, 1k ohm, 1/16W	RB81	24872122	Chip, 1200 ohm, 1/16W
RA07	24872102	Chip, 1k ohm, 1/16W	RB82	24872123	Chip, 12k ohm, 1/16W
RA09	24872103	Chip, 10k ohm, 1/16W	RB83	24872123	Chip, 12k ohm, 1/16W
RA10	24872103	Chip, 10k ohm, 1/16W	RB84	24872562	Chip, 5600 ohm, 1/16W
RA11	24872102	Chip, 1k ohm, 1/16W	RB90	24872392	Chip, 3900 ohm, 1/16W
RA12	24872102	Chip, 1k ohm, 1/16W	RB91	24872473	Chip, 47k ohm, 1/16W
RA13	24872102	Chip, 1k ohm, 1/16W	RB92	24872271	Chip, 270 ohm, 1/16W
RA15	24872102	Chip, 1k ohm, 1/16W	RB93	24872271	Chip, 270 ohm, 1/16W
RA16	24872102	Chip, 1k ohm, 1/16W	RB94	24872222	Chip, 2200 ohm, 1/16W
RA17	24872102	Chip, 1k ohm, 1/16W	RB95	24872222	Chip, 2200 ohm, 1/16W
RA18	24872103	Chip, 10k ohm, 1/16W	RB96	24872273	Chip, 27k ohm, 1/16W
RA26	24872101	Chip, 100 ohm, 1/16W	RB97	24872273	Chip, 27k ohm, 1/16W
RA27	24872101	Chip, 100 ohm, 1/16W	RB98	24872102	Chip, 1k ohm, 1/16W
RA29	24872102	Chip, 1k ohm, 1/16W	RD09	24366101	CF, 100 ohm
RA30	24872102	Chip, 1k ohm, 1/16W	RD11	24366101	CF, 100 ohm
RA31	24872102	Chip, 1k ohm, 1/16W	RD13	24366222	CF, 2200 ohm
RA33	24872102	Chip, 1k ohm, 1/16W	RD14	24366103	CF, 10k ohm
RA34	24872102	Chip, 1k ohm, 1/16W	RD16	24366103	CF, 10k ohm
RA35	24872102	Chip, 1k ohm, 1/16W	RR08	24872332	Chip, 3300 ohm, 1/16W
RA39	24872102	Chip, 1k ohm, 1/16W	RR09	24872222	Chip, 2200 ohm, 1/16W
RA46	24872332	Chip, 3300 ohm, 1/16W	RR10	24872102	Chip, 1k ohm, 1/16W
RA47	24872332	Chip, 3300 ohm, 1/16W	RR12	24872151	Chip, 150 ohm, 1/16W
RA48	24872332	Chip, 3300 ohm, 1/16W	RR13	24872151	Chip, 150 ohm, 1/16W
RA49	24872332	Chip, 3300 ohm, 1/16W	RR14	24872151	Chip, 150 ohm, 1/16W
RA50	24872682	Chip, 6800 ohm, 1/16W	RR15	24872151	Chip, 150 ohm, 1/16W
RA51	24872151	Chip, 150 ohm, 1/16W	RR16	24872151	Chip, 150 ohm, 1/16W
RA52	24872103	Chip, 10k ohm, 1/16W	RR17	24872151	Chip, 150 ohm, 1/16W
RA54	24872332	Chip, 3300 ohm, 1/16W	RR18	24872332	Chip, 3300 ohm, 1/16W
RA55	24872102	Chip, 1k ohm, 1/16W	RR40	24872101	Chip, 100 ohm, 1/16W
RA56	24872102	Chip, 1k ohm, 1/16W	RR42	24872101	Chip, 100 ohm, 1/16W
RA59	24872101	Chip, 100 ohm, 1/16W	RR44	24872101	Chip, 100 ohm, 1/16W
RA60	24872101	Chip, 100 ohm, 1/16W	RR52	24872102	Chip, 1k ohm, 1/16W
RA71	24366683	CF, 68k ohm	RR53	24872471	Chip, 470 ohm, 1/16W
RA72	24366223	CF, 22k ohm	RR54	24872102	Chip, 1k ohm, 1/16W
RA72	24872332	Chip, 3300 ohm, 1/16W	RR55	24872471	Chip, 470 ohm, 1/16W
RA73	24366103	CF, 10k ohm	RR56	24872102	Chip, 1k ohm, 1/16W
RA73	24872332	Chip, 3300 ohm, 1/16W	RR57	24872471	Chip, 470 ohm, 1/16W
RA74	24872153	Chip, 15k ohm, 1/16W	RR58	24872103	Chip, 10k ohm, 1/16W
RA75	24872153	Chip, 15k ohm, 1/16W	RR59	24872104	Chip, 100k ohm, 1/16W
RA76	24366822	CF, 8200 ohm	RR92	24872222	Chip, 2200 ohm, 1/16W
RA76	24872103	Chip, 10k ohm, 1/16W	RR99	24872102	Chip, 1k ohm, 1/16W
RA77	24366153	CF, 15k ohm	RS02	24366472	CF, 4700 ohm
RA77	24872103	Chip, 10k ohm, 1/16W	RS04	24366102	CF, 1k ohm
RA78	24366273	CF, 27k ohm	RS06	24366102	CF, 1k ohm
RA78	24872333	Chip, 33k ohm, 1/16W	RS07	24366103	CF, 10k ohm
RA79	24366823	CF, 82k ohm	RS08	24366103	CF, 10k ohm
RA79	24872333	Chip, 33k ohm, 1/16W	RS09	24366102	CF, 1k ohm
RA80	24872101	Chip, 100 ohm, 1/16W	RS10	24366102	CF, 1k ohm
RB01	24366271	CF, 270 ohm	RS12	24366103	CF, 10k ohm

Location No.	Part No.	Description	Location No.	Part No.	Description
RS21	24366104	CF, 100k ohm	RV93	24366103	CF, 10k ohm
RS22	24366104	CF, 100k ohm	RV94	24366392	CF, 3900 ohm
RS25	24366223	CF, 22k ohm	RV95	24366123	CF, 12k ohm
RS26	24366223	CF, 22k ohm	RV96	24366274	CF, 270k ohm
RS27	24366471	CF, 470 ohm	RV97	24366331	CF, 330 ohm
RS28	24366471	CF, 470 ohm	RV98	24366472	CF, 4700 ohm
RS29	24366104	CF, 100k ohm	RW02	24366821	CF, 820 ohm
RS30	24366104	CF, 100k ohm	RW09	24366563	CF, 56k ohm
RS31	24366103	CF, 10k ohm	RW10	24872102	Chip, 1k ohm, 1/16W
RS32	24366104	CF, 100k ohm	RW13	24366393	CF, 39k ohm
RS33	24366222	CF, 2200 ohm	RW14	24552121	OMF, 120 ohm, 1/2W
RS34	24366222	CF, 2200 ohm	RW14	24872101	Chip, 100 ohm, 1/16W
RS35	24366103	CF, 10k ohm	RW15	24366223	CF, 22k ohm
RS36	24366103	CF, 10k ohm	RW16	24366273	CF, 27k ohm
RS37	24366101	CF, 100 ohm	RW16	24872101	Chip, 100 ohm, 1/16W
RS40	24366101	CF, 100 ohm	RW17	24366333	CF, 33k ohm
RS42	24366101	CF, 100 ohm	RW18	24366101	CF, 100 ohm
RS48	24366101	CF, 100 ohm	RW19	24366100	CF, 10 ohm
RS49	24366103	CF, 10k ohm	RW20	24366392	CF, 3900 ohm
RS51	24366103	CF, 10k ohm	RW22	24366102	CF, 1k ohm
RS52	24366103	CF, 10k ohm	RW23	24366471	CF, 470 ohm
RV01	24366472	CF, 4700 ohm (50A60/55A60/61A60)	RW24	24366470	CF, 47 ohm
RV03	24366101	CF, 100 ohm	RW25	24366182	CF, 1800 ohm
RV04	24366101	CF, 100 ohm	RW30	24552100	OMF, 10 ohm, 1/2W
RV10	24366100	CF, 10 ohm	RW30	24872102	Chip, 1k ohm, 1/16W
RV11	24366100	CF, 10 ohm	RW31	24552331	OMF, 330 ohm, 1/2W
RV12	24366100	CF, 10 ohm	RW32	24366820	CF, 82 ohm
RV13	24366100	CF, 10 ohm	RW33	24366683	CF, 68k ohm
RV14	24366100	CF, 10 ohm	RW34	24366820	CF, 82 ohm
RV15	24366222	CF, 2200 ohm	RW35	24366683	CF, 68k ohm
RV20	24366750	CF, 75 ohm	RW36	24366330	CF, 33 ohm
RV21	24366750	CF, 75 ohm	RW37	24366152	CF, 1500 ohm
RV22	24366750	CF, 75 ohm	RW38	24366102	CF, 1k ohm
RV23	24366332	CF, 3300 ohm	RW39	24366152	CF, 1500 ohm
RV24	24366750	CF, 75 ohm	RW40	24366330	CF, 33 ohm
RV25	24366750	CF, 75 ohm	RW40	24872182	Chip, 1800 ohm, 1/16W
RV26	24366750	CF, 75 ohm	RW41	24366279	CF, 2.7 ohm
RV28	24366472	CF, 4700 ohm	RW42	24366279	CF, 2.7 ohm
RV31	24366332	CF, 3300 ohm	RW43	24554221	OMF, 220 ohm, 2W
RV32	24366750	CF, 75 ohm	RW44	24366122	CF, 1200 ohm
RV33	24366680	CF, 68 ohm	RW45	24366122	CF, 1200 ohm
RV34	24366750	CF, 75 ohm	RW51	24366683	CF, 68k ohm
RV40	24366223	CF, 22k ohm	RW52	24366473	CF, 47k ohm
RV41	24366123	CF, 12k ohm	RW53	24366333	CF, 33k ohm
RV42	24366561	CF, 560 ohm	RW54	24366153	CF, 15k ohm
RV43	24366471	CF, 470 ohm	RW55	24366102	CF, 1k ohm
RV44	24366471	CF, 470 ohm	RW57	24366222	CF, 2200 ohm
RV45	24366681	CF, 680 ohm	RW68	24366333	CF, 33k ohm
RV46	24366102	CF, 1k ohm	RW69	24366223	CF, 22k ohm
RV47	24366102	CF, 1k ohm	RW74	24366471	CF, 470 ohm
RV48	24366102	CF, 1k ohm	RW76	24366561	CF, 560 ohm
RV49	24366911	CF, 910 ohm	RW77	24366561	CF, 560 ohm
RV60	24366682	CF, 6800 ohm	RW78	24366681	CF, 680 ohm
RV63	24366102	CF, 1k ohm	RW91	24366102	CF, 1k ohm
RV67	24366750	CF, 75 ohm	RW92	24366101	CF, 100 ohm
RV74	24366680	CF, 68 ohm	RW93	24366101	CF, 100 ohm
RV83	24366332	CF, 3300 ohm	RW94	24366101	CF, 100 ohm
RV84	24366750	CF, 75 ohm	RY01	24872103	Chip, 10k ohm, 1/16W
RV85	24552181	OMF, 180 ohm, 1/2W	RY80	24366331	CF, 330 ohm
RV89	24366750	CF, 75 ohm	RY81	24366101	CF, 100 ohm
RV90	24366103	CF, 10k ohm	RY82	24366102	CF, 1k ohm
RV91	24366302	CF, 3k ohm	RY87	24366100	CF, 10 ohm
RV92	24366103	CF, 10k ohm	RZ01	24872102	Chip, 1k ohm, 1/16W
			RZ02	24872102	Chip, 1k ohm, 1/16W

Location No.	Part No.	Description
RZ03	24872332	Chip, 3300 ohm, 1/16W
RZ04	24872122	Chip, 1200 ohm, 1/16W
RZ05	24872471	Chip, 470 ohm, 1/16W
RZ06	24872821	Chip, 820 ohm, 1/16W
RZ08	24872122	Chip, 1200 ohm, 1/16W
RZ09	24872101	Chip, 100 ohm, 1/16W
RZ10	24872471	Chip, 470 ohm, 1/16W
RZ12	24872332	Chip, 3300 ohm, 1/16W
RZ13	24872122	Chip, 1200 ohm, 1/16W
RZ14	24872821	Chip, 820 ohm, 1/16W
RZ15	24872821	Chip, 820 ohm, 1/16W
RZ17	24872471	Chip, 470 ohm, 1/16W
RZ18	24872122	Chip, 1200 ohm, 1/16W
RZ19	24872332	Chip, 3300 ohm, 1/16W
RZ20	24872101	Chip, 100 ohm, 1/16W
RZ22	24872471	Chip, 470 ohm, 1/16W
RZ29	24872331	Chip, 330 ohm, 1/16W
RZ30	24872331	Chip, 330 ohm, 1/16W

COILS & TRANSFORMERS

L101	23289845	Coil, Peaking, TRF4680AT
L111	23289845	Coil, Peaking, TRF4680AT (50A60/55A60/61A60)
L115	23103852	Coil, Filter, TEM2028AH (50A60/55A60/61A60)
L121	23238562	Coil, Peaking, TRF4109AJ
L122	23238562	Coil, Peaking, TRF4109AJ
L301	23237975	Coil, Peaking, TRF4101AC
L302	23248073	Coil, Choke, TLN3299D
L303	23248073	Coil, Choke, TLN3299D
L304	23103859	Coil (Ferrite Bead), TEM2011
L400	23289840	Coil, Peaking, TRF4100AT
L401	23103775	Coil (Ferrite Bead), TEM2014
L402	23248243	Coil, Choke, TLN3496AH
△ L403	23233977	Coil, Linearity, TLN2203AG
L404	23248242	Coil, Choke, TLN3495AH
L405	23221076	Coil, Choke, TLN1015R
L406	23289560	Coil, Peaking, TRF4560AF
△ L408	23248244	Coil, Choke, TLN3497AH
L409	23103775	Coil (Ferrite Bead), TEM2014
△ L462	23231135	Deflection Yoke, TDY707AS(R)
△ L463	23231135	Deflection Yoke, TDY707AS(R)
△ L464	23231135	Deflection Yoke, TDY707AS(R)
L472	23102457	Magnet, MAG-1102
L473	23102457	Magnet, MAG-1102
L474	23102457	Magnet, MAG-1102
L481	23237975	Coil, Peaking, TRF4101AC
L501	23289853	Coil, Peaking, TRF4120AT
L502	23289853	Coil, Peaking, TRF4120AT
L503	23289853	Coil, Peaking, TRF4120AT
L701	23238562	Coil, Peaking, TRF4109AJ
L702	23238562	Coil, Peaking, TRF4109AJ
L707	23238562	Coil, Peaking, TRF4109AJ
L708	23238562	Coil, Peaking, TRF4109AJ
L709	23238562	Coil, Peaking, TRF4109AJ
L710	23238562	Coil, Peaking, TRF4109AJ
L711	23238562	Coil, Peaking, TRF4109AJ
L712	23238562	Coil, Peaking, TRF4109AJ
L713	23238562	Coil, Peaking, TRF4109AJ
L714	23238562	Coil, Peaking, TRF4109AJ
L720	23289102	Coil, Peaking, TRF4102AJ
L721	23237805	Coil, Peaking, TRF4222
L722	23289102	Coil, Peaking, TRF4102AJ
L723	23237805	Coil, Peaking, TRF4222

Location No.	Part No.	Description
L724	23289102	Coil, Peaking, TRF4102AJ
L725	23237805	Coil, Peaking, TRF4222
L726	23289102	Coil, Peaking, TRF4102AJ
L727	23237805	Coil, Peaking, TRF4222
L728	23289102	Coil, Peaking, TRF4102AJ
L729	23237805	Coil, Peaking, TRF4222
L730	23289102	Coil, Peaking, TRF4102AJ
L731	23237805	Coil, Peaking, TRF4222
L737	23289560	Coil, Peaking, TRF4560AF
L738	23289560	Coil, Peaking, TRF4560AF
L739	23289560	Coil, Peaking, TRF4560AF
L740	23289560	Coil, Peaking, TRF4560AF
L742	23103866	Chip (Ferrite Bead), TEM2105T
L745	23103866	Chip (Ferrite Bead), TEM2105T
L746	23103866	Chip (Ferrite Bead), TEM2105T
L748	23103866	Chip (Ferrite Bead), TEM2105T
L749	23103866	Chip (Ferrite Bead), TEM2105T
L750	23103864	Coil (Ferrite Bead), TEM2103T
L751	23103864	Coil (Ferrite Bead), TEM2103T
L752	23103795	Chip, Impeder, MMZ2012S301A
L851	23103880	Coil (Ferrite Bead), TEM2011Y
L852	23103880	Coil (Ferrite Bead), TEM2011Y
L853	23248073	Coil, Choke, TLN3299D
L854	23248073	Coil, Choke, TLN3299D
L861	23103880	Coil (Ferrite Bead), TEM2011Y
L862	23103937	Coil (Ferrite Bead), TEM2004
L881	23103880	Coil (Ferrite Bead), TEM2011Y
L882	23103880	Coil (Ferrite Bead), TEM2011Y
L885	23248073	Coil, Choke, TLN3299D
L888	23103880	Coil (Ferrite Bead), TEM2011Y
L889	23103880	Coil (Ferrite Bead), TEM2011Y
L891	23103880	Coil (Ferrite Bead), TEM2011Y
L892	23103880	Coil (Ferrite Bead), TEM2011Y
L893	23103880	Coil (Ferrite Bead), TEM2011Y
L894	23103880	Coil (Ferrite Bead), TEM2011Y
L895	23248073	Coil, Choke, TLN3299D
L896	23248073	Coil, Choke, TLN3299D
L897	23248087	Coil, Choke, TLN3312D
L898	23248087	Coil, Choke, TLN3312D
L961	23289100	Coil, Peaking, TRF4100AF
L962	23237991	Coil, Peaking, TRF4479AC
L963	23237975	Coil, Peaking, TRF4101AC
L7701	23103859	Coil (Ferrite Bead), TEM2011
L7702	23103859	Coil (Ferrite Bead), TEM2011
L7703	23103859	Coil (Ferrite Bead), TEM2011
L7704	23103859	Coil (Ferrite Bead), TEM2011
L7705	23103859	Coil (Ferrite Bead), TEM2011
L7706	23103859	Coil (Ferrite Bead), TEM2011
LA22	23245830	Chip, Inductor, TRF4100CB
LA49	23245830	Chip, Inductor, TRF4100CB
LV01	23103852	Coil, Filter, TEM2028AH
LV02	23103852	Coil, Filter, TEM2028AH
LV05	23289560	Coil, Peaking, TRF4560AF
LV06	23289560	Coil, Peaking, TRF4560AF
LV07	23238719	Coil, Peaking, TRF4399AJ
LV11	23289100	Coil, Peaking, TRF4100AF
LV13	23289100	Coil, Peaking, TRF4100AF
LV14	23289100	Coil, Peaking, TRF4100AF
LV20	23238705	Coil, Peaking, TRF4560AJ
LV41	23289470	Coil, Peaking, TRF4470AF
LW01	23103845	Coil, TEM2030AY
LW02	23261974	Coil, Choke, HC5-035
LW04	23103859	Coil (Ferrite Bead), TEM2011

Location No.	Part No.	Description
LW04	23245834	Chip, Inductor, TRF4220CB
LW05	23103859	Coil (Ferrite Bead), TEM2011
LW07	23289220	Coil, Peaking, TRF4220AF
LY01	23245832	Chip, Inductor, TRF4150CB
LY22	23103852	Coil, Filter, TEM2028AH
LZ01	23238710	Coil, Peaking, TRF4220AJ
LZ02	23238714	Coil, Peaking, TRF4100AJ
LZ03	23238714	Coil, Peaking, TRF4100AJ
LZ04	23238714	Coil, Peaking, TRF4100AJ
LZ05	23238714	Coil, Peaking, TRF4100AJ
LZ08	23238707	Coil, Peaking, TRF4390AJ
LZ11	23238710	Coil, Peaking, TRF4220AJ
LZ12	23238710	Coil, Peaking, TRF4220AJ
T401	23224367	Transformer, Horiz. Drive, TLN1098AH
T403	23224364	Transformer, Focus, TLN2168AH
▲T461	23236623	Transformer, Flyback, TFB3086AD
▲T461A	23192940	Anode Cap, TCCP5157
T801	23211698	Line Filter, TRF3218AK
T802	23211729	Line Filter, TRF3232AQ
T840	23217233	Transformer, Converter, TPW1547AZ
T862	23217463	Transformer, Converter, TPW3447AS
SEMICONDUCTORS		
Q151	A6541130	Transistor, 2SA1162-Y (50A60/55A60/61A60)
Q152	A6335470	Transistor, 2SC2712-Y (50A60/55A60/61A60)
Q201	A6335470	Transistor, 2SC2712-Y (50A60/55A60/61A60)
Q202	A6335470	Transistor, 2SC2712-Y
Q203	A6361770	Transistor, 2SC3437-Y
Q261	A6335470	Transistor, 2SC2712-Y
Q262	A6541130	Transistor, 2SA1162-Y
Q263	A6541130	Transistor, 2SA1162-Y
Q301	23319787	IC, LA7833S
Q301B	70391355	Screw, BITTB3X8 SZN
Q302	B0384625	IC, TA8859CP
Q303	A6335470	Transistor, 2SC2712-Y
Q304	B0351525	IC, TA75902FB
Q305	A6541130	Transistor, 2SA1162-Y
Q306	B0351525	IC, TA75902FB
Q308	A6335470	Transistor, 2SC2712-Y
Q309	A6541130	Transistor, 2SA1162-Y
Q310	A6335470	Transistor, 2SC2712-Y
Q401	A6330069	Transistor, 2CS2482 FA-1
Q402	A6734590	Transistor, 2SC752(G)TM-Y
Q403	A6073390	Transistor, 2SK2920
Q404	A6873777	Transistor, 2SD2553
Q404B	72471082	Screw, BRDT2W3X10 SZN
Q405	A6734590	Transistor, 2SC752(G)TM-Y
Q406	23314548	Transistor, 2SC4256 (50A60/55A60/61A60)
Q407	B0347500	IC, TA75358P
Q408	23314962	Transistor, KTA1266 Y
Q409	23314965	Transistor, KTC3198 Y
Q430	23314965	Transistor, KTC3198 Y
Q481	B0347235	IC, TA75339AP
Q492	A6547305	Transistor, 2SA1321(FA,C)
Q501	B0385677	IC, TA1222BN

Location No.	Part No.	Description
Q502	A6335470	Transistor, 2SC2712-Y
Q503	A6541130	Transistor, 2SA1162-Y
Q520	A6541130	Transistor, 2SA1162-Y
Q521	A6541130	Transistor, 2SA1162-Y
Q522	A6541130	Transistor, 2SA1162-Y
Q523	A6335470	Transistor, 2SC2712-Y
Q524	A6004010	Transistor, RN1401
Q525	A6004010	Transistor, RN1401
Q526	A6004010	Transistor, RN1401
Q601	B0376885	IC, TA8213K
Q612	A6541130	Transistor, 2SA1162-Y
Q621	23000381	IC, CXA2021S
Q622	B01A0119	IC, TA1304F(EL)
Q661	A6359870	Transistor, 2SC3326-B
Q662	A6359870	Transistor, 2SC3326-B
Q663	23906596	IC, BA4558
Q664	A6014040	Transistor, RN2404
Q681	A6359870	Transistor, 2SC3326-B
Q682	A6359870	Transistor, 2SC3326-B
Q701	B01B4088	IC, TC190C060AF-
Q702	23904743	IC, LC89066M
Q703	23905014	IC, LC78816M
Q704	23905014	IC, LC78816M
Q705	23905014	IC, LC78816M
Q707	23905013	IC, TLC29321PW
Q709	23906908	IC, MC33078DR2
Q711	23904665	IC, NM24C04EN
Q715	23906908	IC, MC33078DR2
Q717	23906908	IC, MC33078DR2
Q719	23906908	IC, MC33078DR2
Q751	23905094	IC, STR392-110
Q752	23905094	IC, STR392-110
Q754	23904521	IC, AN7805
Q754B	70391356	Screw, BITTB3X10 SZN
Q755	23904525	IC, AN7809
Q755B	70391356	Screw, BITTB3X10 SZN
Q764	B0485884	IC, TC74HC14AF
Q765	A6335470	Transistor, 2SC2712-Y
Q766	A6335470	Transistor, 2SC2712-Y
Q767	B0488448	IC, TC74HC4066AF
Q801	23906540	IC, STR-Z4267
Q819	23314965	Transistor, KTC3198 Y
Q830	23905977	IC, PQ09RD11
Q830B	70391356	Screw, BITTB3X10 SZN
Q831	23905976	IC, PQ05RD11
Q831B	70391356	Screw, BITTB3X10 SZN
Q840	23318299	IC, L78MR05
Q841	70129444	IC, PST994D
Q843	23314965	Transistor, KTC3198 Y
Q862	A8643112	Photo Coupler, TLP621(GRL-L
△Q863	23319305	IC, SE140N, LF4
Q901	A6372621	Transistor, 2SC5360
Q902	A6317440	Transistor, 2SC1815-Y
Q911	A6372621	Transistor, 2SC5360
Q913	A6317440	Transistor, 2SC1815-Y
Q921	A6372621	Transistor, 2SC5360
Q922	A6317440	Transistor, 2SC1815-Y
Q961	A6317440	Transistor, 2SC1815-Y
Q962	A6509140	Transistor, 2SA562TM-Y
Q963	A6317440	Transistor, 2SC1815-Y
Q964	A6534040	Transistor, 2SA1015-Y
Q965	A6317440	Transistor, 2SC1815-Y
Q966	A6534040	Transistor, 2SA1015-Y
Q971	A6317440	Transistor, 2SC1815-Y

Location No.	Part No.	Description	Location No.	Part No.	Description
Q972	A6317440	Transistor, 2SC1815-Y	QY26	23114528	Transistor, 2SC1740S, Q
Q973	A6317440	Transistor, 2SC1815-Y	QZ01	B0410895	IC, TC90A49P
Q974	A6317440	Transistor, 2SC1815-Y	QZ02	A6541130	Transistor, 2SA1162-Y
Q975	A6317440	Transistor, 2SC1815-Y	QZ03	A6541130	Transistor, 2SA1162-Y
Q976	A6317440	Transistor, 2SC1815-Y	QZ04	A6541130	Transistor, 2SA1162-Y
Q981	A6534040	Transistor, 2SA1015-Y	QZ05	A6335470	Transistor, 2SC2712-Y
Q982	A6534040	Transistor, 2SA1015-Y	QZ06	A6541130	Transistor, 2SA1162-Y
Q983	A6317440	Transistor, 2SC1815-Y	QZ07	A6541130	Transistor, 2SA1162-Y
Q984	A6534040	Transistor, 2SA1015-Y	QZ08	A6335470	Transistor, 2SC2712-Y
QA01	23000374	IC, MN102L35GF	D101	23316756	Diode, Zener, MTZJ33D
QA02	23905666	IC, AT24C1610PC	D201	23118041	Diode, MA111-(TX)
QA71	A6541130	Transistor, 2SA1162-Y	D215	23118041	Diode, MA111-(TX)
QB01	23114528	Transistor, 2SC1740S, Q	D216	23118041	Diode, MA111-(TX)
QB03	A6004050	Transistor, RN1405	D217	23118041	Diode, MA111-(TX)
QB14	A6541130	Transistor, 2SA1162-Y	D218	23118041	Diode, MA111-(TX)
QB30	23314965	Transistor, KTC3198 Y	D219	23118041	Diode, MA111-(TX)
QB61	A6361770	Transistor, 2SC3437-Y	D220	23118041	Diode, MA111-(TX)
QB81	A6359870	Transistor, 2SC3326-B	D221	23118041	Diode, MA111-(TX)
QB82	A6359870	Transistor, 2SC3326-B	D222	23118041	Diode, MA111-(TX)
QB83	A6541130	Transistor, 2SA1162-Y	D223	23118041	Diode, MA111-(TX)
QB84	A6335470	Transistor, 2SC2712-Y	D230	23316753	Diode, Zener, MTZJ33A
QB85	A6541130	Transistor, 2SA1162-Y	D301	23316575	Diode, Zener, MA8062-H, TX
QB86	A6541130	Transistor, 2SA1162-Y	D302	23118094	Diode, EU2A, LF-F10
QB87	A6541130	Transistor, 2SA1162-Y	D303	23316610	Diode, Zener, MA8180-M, TX
QB88	A6541130	Transistor, 2SA1162-Y	D304	23316794	Diode, SC570ALFE2
QB92	A6335470	Transistor, 2SC2712-Y	D305	23118822	Diode, ERB12-02
QD01	B0377277	IC, TA8173AP	D306	23118822	Diode, ERB12-02
QR02	A6335470	Transistor, 2SC2712-Y	D307	23118041	Diode, MA111-(TX)
QR14	A6541130	Transistor, 2SA1162-Y	D310	23118041	Diode, MA111-(TX)
QR15	A6541130	Transistor, 2SA1162-Y	D311	23118041	Diode, MA111-(TX)
QR16	A6541130	Transistor, 2SA1162-Y	D320	23316576	Diode, Zener, MA8068-L, TX
QR17	23318981	IC, MC14053BFEL	D336	23316583	Diode, Zener, MA8039-H, TX
QS01	A6342200	Transistor, 2CS2878-A	D401	23118094	Diode, EU2A, LF-F10
QS11	A6342200	Transistor, 2CS2878-A	D402	23118094	Diode, EU2A, LF-F10
QS12	A6012040	Transistor, RN2204	D403	23316254	Diode, ERC06-15L
QS13	23314965	Transistor, KTC3198 Y	D404	23316969	Diode, ERD29-06J
QS14	23314965	Transistor, KTC3198 Y	D405	23316254	Diode, ERC06-15L
QV01	B0384761	IC, TA8851CN	D406	23118094	Diode, EU2A, LF-F10
QV20	A6002040	Transistor, RN1204	D407	23118707	Diode, RP 1H, LF-C1 (50A60/55A60/61A60)
QV21	23114528	Transistor, 2SC1740S, Q	D408	A7978850	Diode, S5295G
QV22	23114530	Transistor, 2SA933S-Q	D412	23118094	Diode, EU2A, LF-F10
QV23	23114530	Transistor, 2SA933S-Q	D413	23118707	Diode, RP 1H, LF-C1 (50A60/55A60/61A60)
QV40	23114528	Transistor, 2SC1740S, Q	D415	23316731	Diode, Zener, MTZJ18B
QV41	23114528	Transistor, 2SC1740S, Q	D421	23118041	Diode, MA111-(TX)
QV42	23114530	Transistor, 2SA933S-Q	D422	23118041	Diode, MA111-(TX)
QV43	23114530	Transistor, 2SA933S-Q	D430	23316594	Diode, Zener, MA8110-M, TX
QV48	23114528	Transistor, 2SC1740S, Q	D431	23118041	Diode, MA111-(TX)
QW01	23318981	IC, MC14053BFEL	D481	23118859	Diode, 1SS133
QW05	A6335470	Transistor, 2SC2712-Y	△ D482	23115774	Diode, Zener, RD6.2E(4)
QW06	A6317440	Transistor, 2SC1815-Y	D490	23118859	Diode, 1SS133
QW07	A6734590	Transistor, 2SC752(G)TM-Y	D491	23316758	Diode, Zener, MTZJ36B
QW09	23114528	Transistor, 2SC1740S, Q	D512	23118041	Diode, MA111-(TX)
QW10	23114530	Transistor, 2SA933S-Q	D513	23316587	Diode, Zener, MA8091-L, TX
QW11	A6335470	Transistor, 2SC2712-Y	D531	23316573	Diode, Zener, MA8062-L, TX
QW11	A6550640	Transistor, 2SA1837	D532	23118822	Diode, ERB12-02
QW12	A6369650	Transistor, 2SC4793	D601	23118041	Diode, MA111-(TX)
QW17	A6004010	Transistor, RN1401	D602	23118041	Diode, MA111-(TX)
QW19	A6317440	Transistor, 2SC1815-Y	D603	23118041	Diode, MA111-(TX)
QW20	A6317440	Transistor, 2SC1815-Y	D604	23118041	Diode, MA111-(TX)
QW52	23114528	Transistor, 2SC1740S, Q	D607	23316616	Diode, Zener, MA8220-M, TX
QW53	23114528	Transistor, 2SC1740S, Q	D608	23316616	Diode, Zener, MA8220-M, TX
QW54	23114528	Transistor, 2SC1740S, Q	D611	23118041	Diode, MA111-(TX)
QW60	23114530	Transistor, 2SA933S-Q			
QW68	23114528	Transistor, 2SC1740S, Q			

Location No.	Part No.	Description
D661	23316570	Diode, Zener, MA8056-L, TX
D701	23115537	Diode, 1SS131
D702	23115537	Diode, 1SS131
D703	23115537	Diode, 1SS131
D704	23115537	Diode, 1SS131
D705	23316675	Diode, Zener, MTZJ6.2B
D706	23316675	Diode, Zener, MTZJ6.2B
D707	23316675	Diode, Zener, MTZJ6.2B
D801	23357041	Diode, LN6SB60-F05
D819	A7801205	SCR, SF0R3G42(N,G5H1)
D820	23316757	Diode, Zener, MTZJ36A
D821	23118859	Diode, 1SS133
D840	23316962	Diode, S1WBA20 4101
D845	23118859	Diode, 1SS133
D851	23357215	Diode, D4SBS6
D862	23118094	Diode, EU2A, LF-F10
△D863	23316689	Diode, Zener, MTZJ10A
D864	23118094	Diode, EU2A, LF-F10
D873	23316747	Diode, Zener, MTZJ27C
D875	23316688	Diode, Zener, MTZJ9.1C
D876	23316747	Diode, Zener, MTZJ27C
D877	23316747	Diode, Zener, MTZJ27C
D878	23316686	Diode, Zener, MTZJ9.1A
D881	23118859	Diode, 1SS133
D884	23357217	Diode, D4SBL40
D885	23357216	Diode, D4SBL20U
D891	23357214	Diode, D4SBS4
D892	23357042	Diode, FMX-12S(023
D899	24000948	Varistor, TNR15G391K
D901	23118859	Diode, 1SS133
D902	23118859	Diode, 1SS133
D911	23118859	Diode, 1SS133
D912	23118859	Diode, 1SS133
D921	23118859	Diode, 1SS133
D922	23118859	Diode, 1SS133
D924	23118859	Diode, 1SS133
D925	23118859	Diode, 1SS133
D961	23118859	Diode, 1SS133
D965	23118859	Diode, 1SS133
D966	23118859	Diode, 1SS133
D975	23118859	Diode, 1SS133
D7703	23316675	Diode, Zener, MTZJ6.2B
D7705	23118041	Diode, MA111-(TX)
D7706	23118041	Diode, MA111-(TX)
D7707	23118041	Diode, MA111-(TX)
D7708	23118041	Diode, MA111-(TX)
D7709	23316675	Diode, Zener, MTZJ6.2B
D7710	23316716	Diode, Zener, MTZJ11B
D7711	23316687	Diode, Zener, MTZJ9.1B
D7712	23118041	Diode, MA111-(TX)
D7713	23118041	Diode, MA111-(TX)
D7717	23316675	Diode, Zener, MTZJ6.2B
D7718	23316675	Diode, Zener, MTZJ6.2B
D7719	23316675	Diode, Zener, MTZJ6.2B
DA02	23316574	Diode, Zener, MA8062-M, TX
DA11	23118859	Diode, 1SS133
DA34	23118041	Diode, MA111-(TX)
DA43	23118041	Diode, MA111-(TX)
DA44	23118041	Diode, MA111-(TX)
DA45	23118041	Diode, MA111-(TX)
DA46	23118041	Diode, MA111-(TX)
DB01	23358501	Diode (LED), SCL003URC5F
DB13	23358522	Diode (LED), SIR-56SB3F
DB30	23118859	Diode, 1SS133


Location No.	Part No.	Description
DV01	23316686	Diode, Zener, MTZJ9.1A
DV02	23316686	Diode, Zener, MTZJ9.1A
DV03	23316686	Diode, Zener, MTZJ9.1A
DV07	23316686	Diode, Zener, MTZJ9.1A
DV08	23316686	Diode, Zener, MTZJ9.1A
DV09	23316686	Diode, Zener, MTZJ9.1A
DV11	23316686	Diode, Zener, MTZJ9.1A
DV12	23316686	Diode, Zener, MTZJ9.1A
DV13	23316686	Diode, Zener, MTZJ9.1A
DV17	23316686	Diode, Zener, MTZJ9.1A
DV25	23118859	Diode, 1SS133
DW04	23118859	Diode, 1SS133
DW05	23118859	Diode, 1SS133
DW21	23118859	Diode, 1SS133
MISCELLANEOUS		
B224	23035412	Screw, BTB 4X12 SZN
B225	23035412	Screw, BTB 4X12 SZN
B230	23037312	Screw, BTBW 3X12 SZN
B233	23035412	Screw, BTB 4X12 SZN
B234	23035412	Screw, BTB 4X12 SZN
B235	23035310	Screw, BTB 3X8 SZN
BB30	23903022	Socket, 8P
BB31	23903022	Socket, 8P
BB300	23368627	Plug, 8P
F470	23144906	Fuse, 1.25A, 125V
F470A	23165433	Holder, Fuse
F801	23144481	Fuse, 7.0A, 125V
F801A	23165433	Holder, Fuse
F850	23144893	Fuse, 3.15, 125V
F850A	23165433	Holder, Fuse
F851	23144893	Fuse, 3.15, 125V
F851A	23165433	Holder, Fuse
F860	23144511	Fuse, 4.0A, 125V
F889	23144893	Fuse, 3.15, 125V
F889A	23165433	Holder, Fuse
F890	23144897	Fuse, 2.0A, 125V
F890A	23165433	Holder, Fuse
F891	23144854	Fuse, 1.6A, 125V
F891A	23165433	Holder, Fuse
G005	23118859	Diode, 1SS133
G023	24327180	MF, 18 ohm, ±1%, 1/4W
G101	24872101	Chip, 100 ohm, 1/16W
G102	24872101	Chip, 100 ohm, 1/16W
GJ01	24000824	Chip Jumper, 2125Type
GJ05	24000824	Chip Jumper, 2125Type
GJ06	24000824	Chip Jumper, 2125Type
GJ07	24000824	Chip Jumper, 2125Type
GJ31	24000824	Chip Jumper, 2125Type
GJ32	24000824	Chip Jumper, 2125Type
GJ59	24000824	Chip Jumper, 2125Type
GJ77	24000824	Chip Jumper, 2125Type
GJ701	24000824	Chip Jumper, 2125Type
GJ702	24000824	Chip Jumper, 2125Type
GJ705	24000824	Chip Jumper, 2125Type
GR01	24000824	Chip Jumper, 2125Type (50A60/55A60/61A60)
GR02	24000824	Chip Jumper, 2125Type
H003	23344421	RF Switch, RSU133X6
H003A	23740989	Nut, F-Connector
K912A	23101988	Battery, LR6G R SP-2A (50A60/55A60/61A60)
K912A	23101998	Battery, R6KGT SP-2T (50A50)

Location No.	Part No.	Description	Location No.	Part No.	Description
KB11	23904946	Remote Sensor, RPM-676CBR-S	* E033Z		CRT-D/B Board, PB9454A3 (50A60/55A60/61A60)
P002	23365089	F Connector(50A50)	* E033Z		CRT-D/B Board, PB9454B3 (50A50)
P701	23367724	Plug, B-B,15P	* E034Z		FRONT-CON Board, PB9454A4 (50A60/55A60/61A60)
P702	23367724	Plug, B-B,15P	* E034Z		FRONT-CON Board, PB9454B4 (50A50)
P708	23902655	Socket, B-B, 15P	* E035Z		FRONT-IN Board, PB9454A5 (50A60/55A60/61A60)
P709	23902655	Socket, B-B, 15P	* E035Z		FRONT-IN Board, PB9454B5 (50A50)
P713	23164787	Plug, 7P	* E036Z		SVM Board, PB9454A6 (50A60/55A60/61A60)
P714	23164787	Plug, 7P	* E040Z		REM Board, PB9454A10 (50A60/55A60/61A60)
P715	23164787	Plug, 7P	* E040Z		REM Board, PB9454B10 (50A50)
P801	23372117	Power Cord	* U701	23784738	DIGI-CONV Board, PB9453A (50A60/50A50)
PV02	23365819	Jack, 1S3P	* U701	23784777	DIGI-CONV Board, PB9453B (55A60)
PV06	23903040	Socket, 56P	* U701	23784779	DIGI-CONV Board, PB9453C (61A60)
PZ01	23368130	Plug, B-B,10P	* U801		DEF/Power Board, PB9451A (50A60/55A60/61A60)
PZ02	23902213	Socket, B-B, 10P	* U801		DEF/Power Board, PB9451B (50A50)
S602	23145412	Switch, Slide, 2C2P	* U901		Signal/CON Board, PB9450A (50A60)
SA01	23145226	Switch, Push, 1C1P	* U901		Signal/CON Board, PB9450B (50A50)
SA02	23145226	Switch, Push, 1C1P	* U901		Signal/CON Board, PB9450C (55A60)
SA03	23145226	Switch, Push, 1C1P	* U901		Signal/CON Board, PB9450D (61A60)
SA04	23145226	Switch, Push, 1C1P	* UV01		A/V Board, PB9452A (50A60/55A60/61A60)
SA05	23145226	Switch, Push, 1C1P	* UV01		A/V Board, PB9452B (50A50)
SA06	23145226	Switch, Push, 1C1P	* UZ01	23784601	DIG COM Board, PB9398
SA07	23145226	Switch, Push, 1C1P			PICTURE TUBE
SA08	23145226	Switch, Push, 1C1P	△ V901R	23005114	Protector Coupling 50A R (50A60)
SA09	23145226	Switch, Push, 1C1P	△ V901R	23796001	Projection Tube Ass'y, 50HR (50A50)
SR81	23146556	Relay, DC12V	△ V901R	23005242	Protector Coupling 55A R (55A60)
UY01	23148731	Module, MKMP33, MULTI PICTURE PNT	△ V901R	23005249	Protector Coupling 61A R (61A60)
V901A	23902019	Socket, CRT, 9P	△ V902G	23005115	Protector Coupling 50A G (50A60/55A60/61A60)
V902A	23902019	Socket, CRT, 9P	△ V902G	23005397	Protector Coupling 50A50 G (50A50)
V903A	23902019	Socket, CRT, 9P	△ V903B	23796003	Projection Tube Ass'y, 50HB (50A60/50A50/55A60)
W661	23151232	Speaker, SPK-1235, 160X160mm, 8 ohm	△ V903B	23796486	Projection Tube Ass'y, 61HB (61A60)
W662	23151232	Speaker, SPK-1235, 160X160mm, 8 ohm			TUNER
X401	23153721	Ceramic Resonator, 503kHz, TCR1023	H001	23321374	Tuner, EL952LW
X501	23153961	Crystal, 3.58MHz	HY01	23321369	Tuner, EL953L (50A60/55A60/61A60)
XA01	23153533	Ceramic Resonator, 8.00MHz, TCR1082AM			
Z401	24082996	CR Block, TPA5007BH			
Z402	23140203	SG-GAP, SG99B3EN			
Z410	23110841	Coil, Forcus, TPA6030			
Z410A	23505177	Focus Cable			
Z450A	23504953	Anode Cable			
Z702	23103823	Filter, TEM2027D			
Z703	23103823	Filter, TEM2027D			
Z704	23103823	Filter, TEM2027D			
Z705	23103823	Filter, TEM2027D			
Z706	23103823	Filter, TEM2027D			
Z707	23103823	Filter, TEM2027D			
Z711	23103823	Filter, TEM2027D			
Z712	23103823	Filter, TEM2027D			
ZT01	70108925	Resonator, 4MHz, TCR1071			
PC BOARD ASSEMBLIES					
* E031Z		CRT-D/R Board, PB9454A1 (50A60/55A60/61A60)			
* E031Z		CRT-D/R Board, PB9454B1 (50A50)			
* E032Z		CRT-D/G Board, PB9454A2 (50A60/55A60/61A60)			
* E032Z		CRT-D/G Board, PB9454B2 (50A50)			

Location No.	Part No.	Description	Location No.	Part No.	Description
ACCESSORIES					
K912	23306263	Remote Hand Unit, CT-9946 (50A60/55A60/61A60)	A703	23935868	Packing, Top(61A60)
K912	23306359	Remote Hand Unit, CT-90037 (50A50)	A708	23935848	Packing, Bottom (50A60/50A50)
AT03	23588181	Battery Cover	A708	23935866	Packing, Bottom (55A60/61A60)
Y101	23563913	Owner's Manual, English, 50A60/55A60/61A60	A721	23943628	Cover, Poly
Y101	23563938	Owner's Manual, English, 50A50	K111	23430111	Delta, 77-A/B Assembly (50A60/50A50/55A60)
Y101F	23563914	Owner's Manual, French, 50A60/55A60/61A60	K111	23430160	Delta, 79-A/B Assembly (61A60)
Y101F	23563939	Owner's Manual, French, 50A50	K112	23430432	Delta, 78-A/B Assembly (50A60/50A50/55A60/61A60)
CABINET PARTS					
A101	23411115	Wood Cabinet(50A60/50A50)	K113	23430111	Delta, 77-A/B Assembly (50A60/50A50/55A60)
A101	23411138	Wood Cabinet(55A60)	K113	23430160	Delta, 79-A/B Assembly (61A60)
A101	23411141	Wood Cabinet(61A60)	K501	23430783	Lenti Sheet, SCREEN50KK-L (50A60/50A50)
A102	23527067	Speaker Grille R (50A60/50A50/55A60)	K501	23430612	Lenti Sheet, SCREEN55DJ-L (55A60)
A102	23527073	Speaker Grille R(61A60)	K501	23837528	Lenti Sheet, SCREEN61DH-L (61A60)
A103	23527068	Speaker Grille L (50A60/50A50/55A60)	K502	23430784	Fresnel Sheet, SCREEN50KK-F (50A60/50A50)
A103	23527074	Speaker Grille L(61A60)	K502	23430613	Fresnel Sheet, SCREEN55DJ-F (55A60)
A126	23445281	Button, Catch Male	K502	23837529	Fresnel Sheet, SCREEN61DH-F (61A60)
A127	23445281	Button, Catch Male	K511	23430782	SCREEN50KK (50A60/50A50)
A150	23411114	Light Box (50A60/50A50)	K511	23430611	SCREEN55DJ (55A60)
A150	23411137	Light Box (55A60)	K511	23837527	SCREEN61DH (61A60)
A150	23411140	Light Box (61A60)	K601	23430313	Mirror, MIRROR48(E) (50A60/50A50)
A160	23469228	Caster	K601	23430529	Mirror, MIRROR55H (55A60)
A201	23549258	Bezel (50A60/50A50)	K601	23430528	Mirror, MIRROR61H (61A60)
A201	23549323	Bezel (55A60)			
A201	23549324	Bezel (61A60)			
A202	23450257	Control Panel			
A213	23427652	Door			
A268	23450101	Front Panel (50A60/50A50/55A60)			
A268	23450224	Front Panel(61A60)			
A322	23445282	Button, Catch Female			
A401	23005351	Back Cover (50A60/50A50)			
A401	23005229	Back Cover(55A60)			
A401	23005247	Back Cover(61A60)			
A424	23540074	Back Cover (50A60/50A50)			
A424	23540075	Back Cover (55A60)			
A424	23540076	Back Cover (61A60)			
A505	72471068	Screw, BIDT2 4X12BZ			
A510	23030815	Screw, PTD #6 X 3/4			
A518	23030815	Screw, PTD #6 X 3/4			
A519	23030815	Screw, PTD #6 X 3/4			
A521	23030815	Screw, PTD #6 X 3/4			
A533	23030815	Screw, PTD #6 X 3/4			
A535	23030815	Screw, PTD #6 X 3/4			
A539	23030815	Screw, PTD #6 X 3/4			
A541	23030815	Screw, PTD #6 X 3/4			
A543	72471068	Screw, BIDT2 4X12BZ			
A544	23030815	Screw, PTD #6 X 3/4			
A701	23525844	Case(50A60/50A50)			
A701	23525845	Case(55A60)			
A701	23525846	Case(61A60)			
A703	23935847	Packing, Top(50A60/50A50)			
A703	23935867	Packing, Top(55A60)			


SIGNAL/CON BOARD PB9450

BOTTOM (FOIL) SIDE

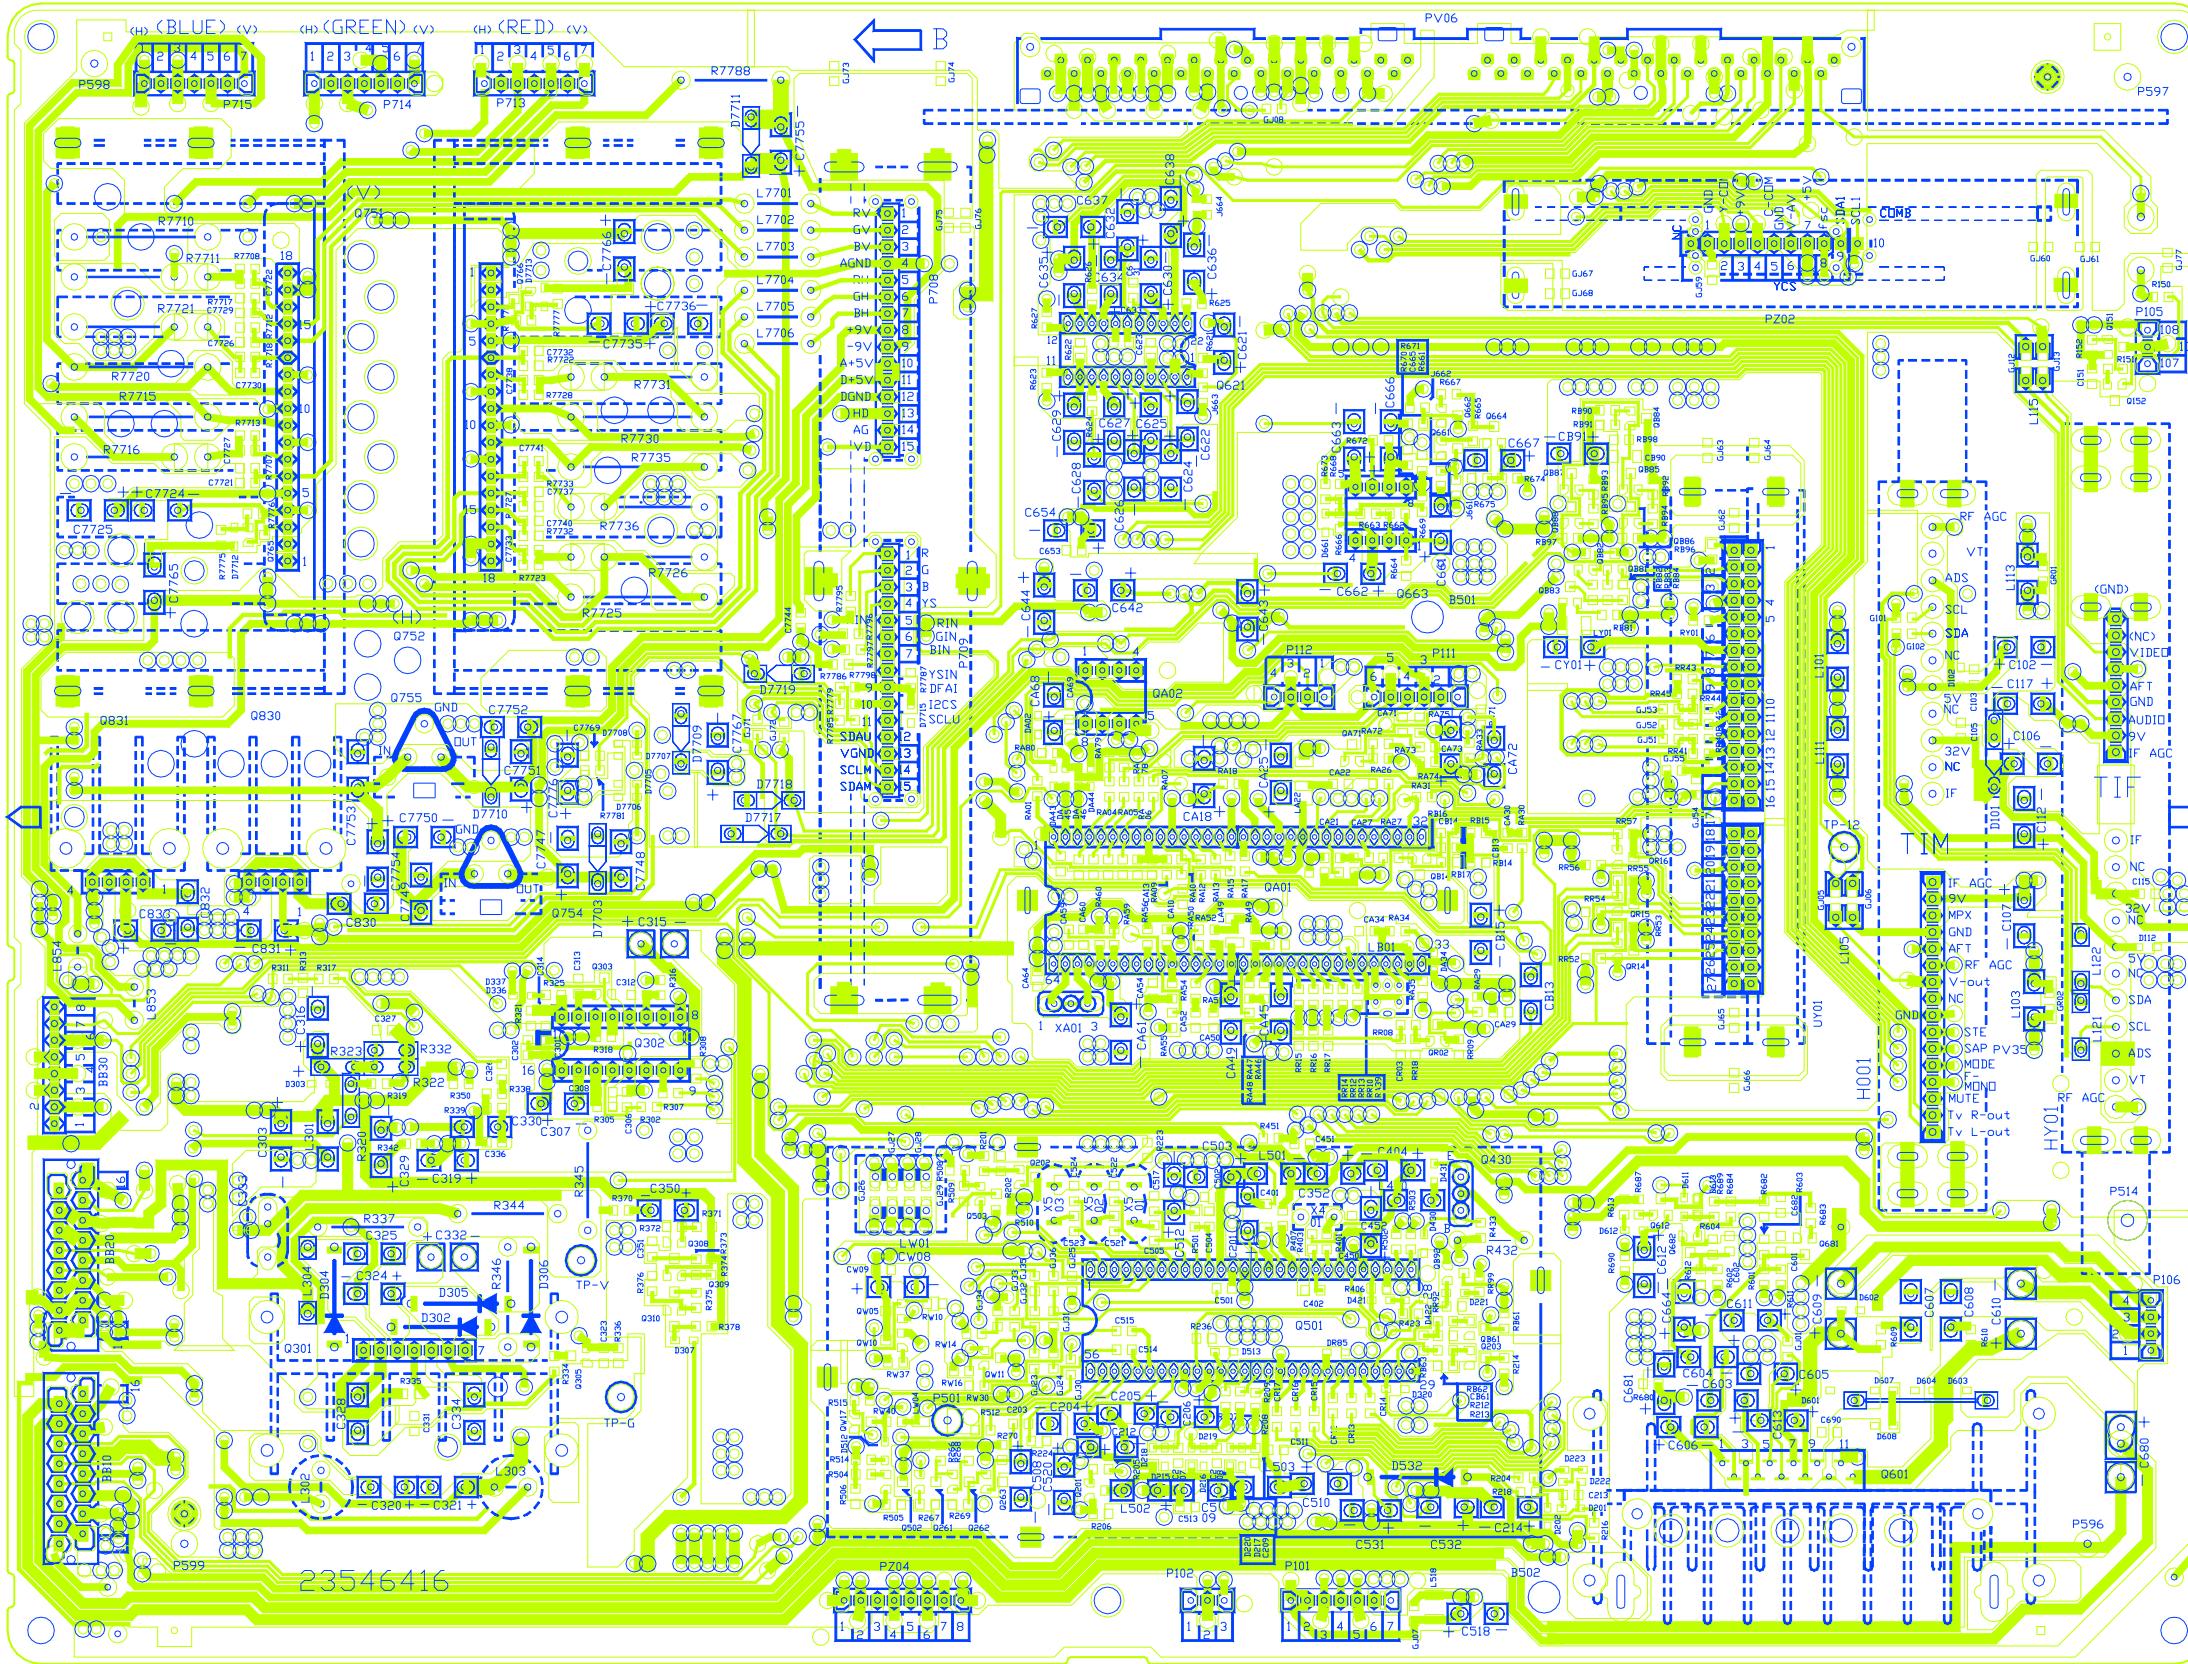


DEF/POWER BOARD PB9451

BOTTOM (FOIL) SIDE

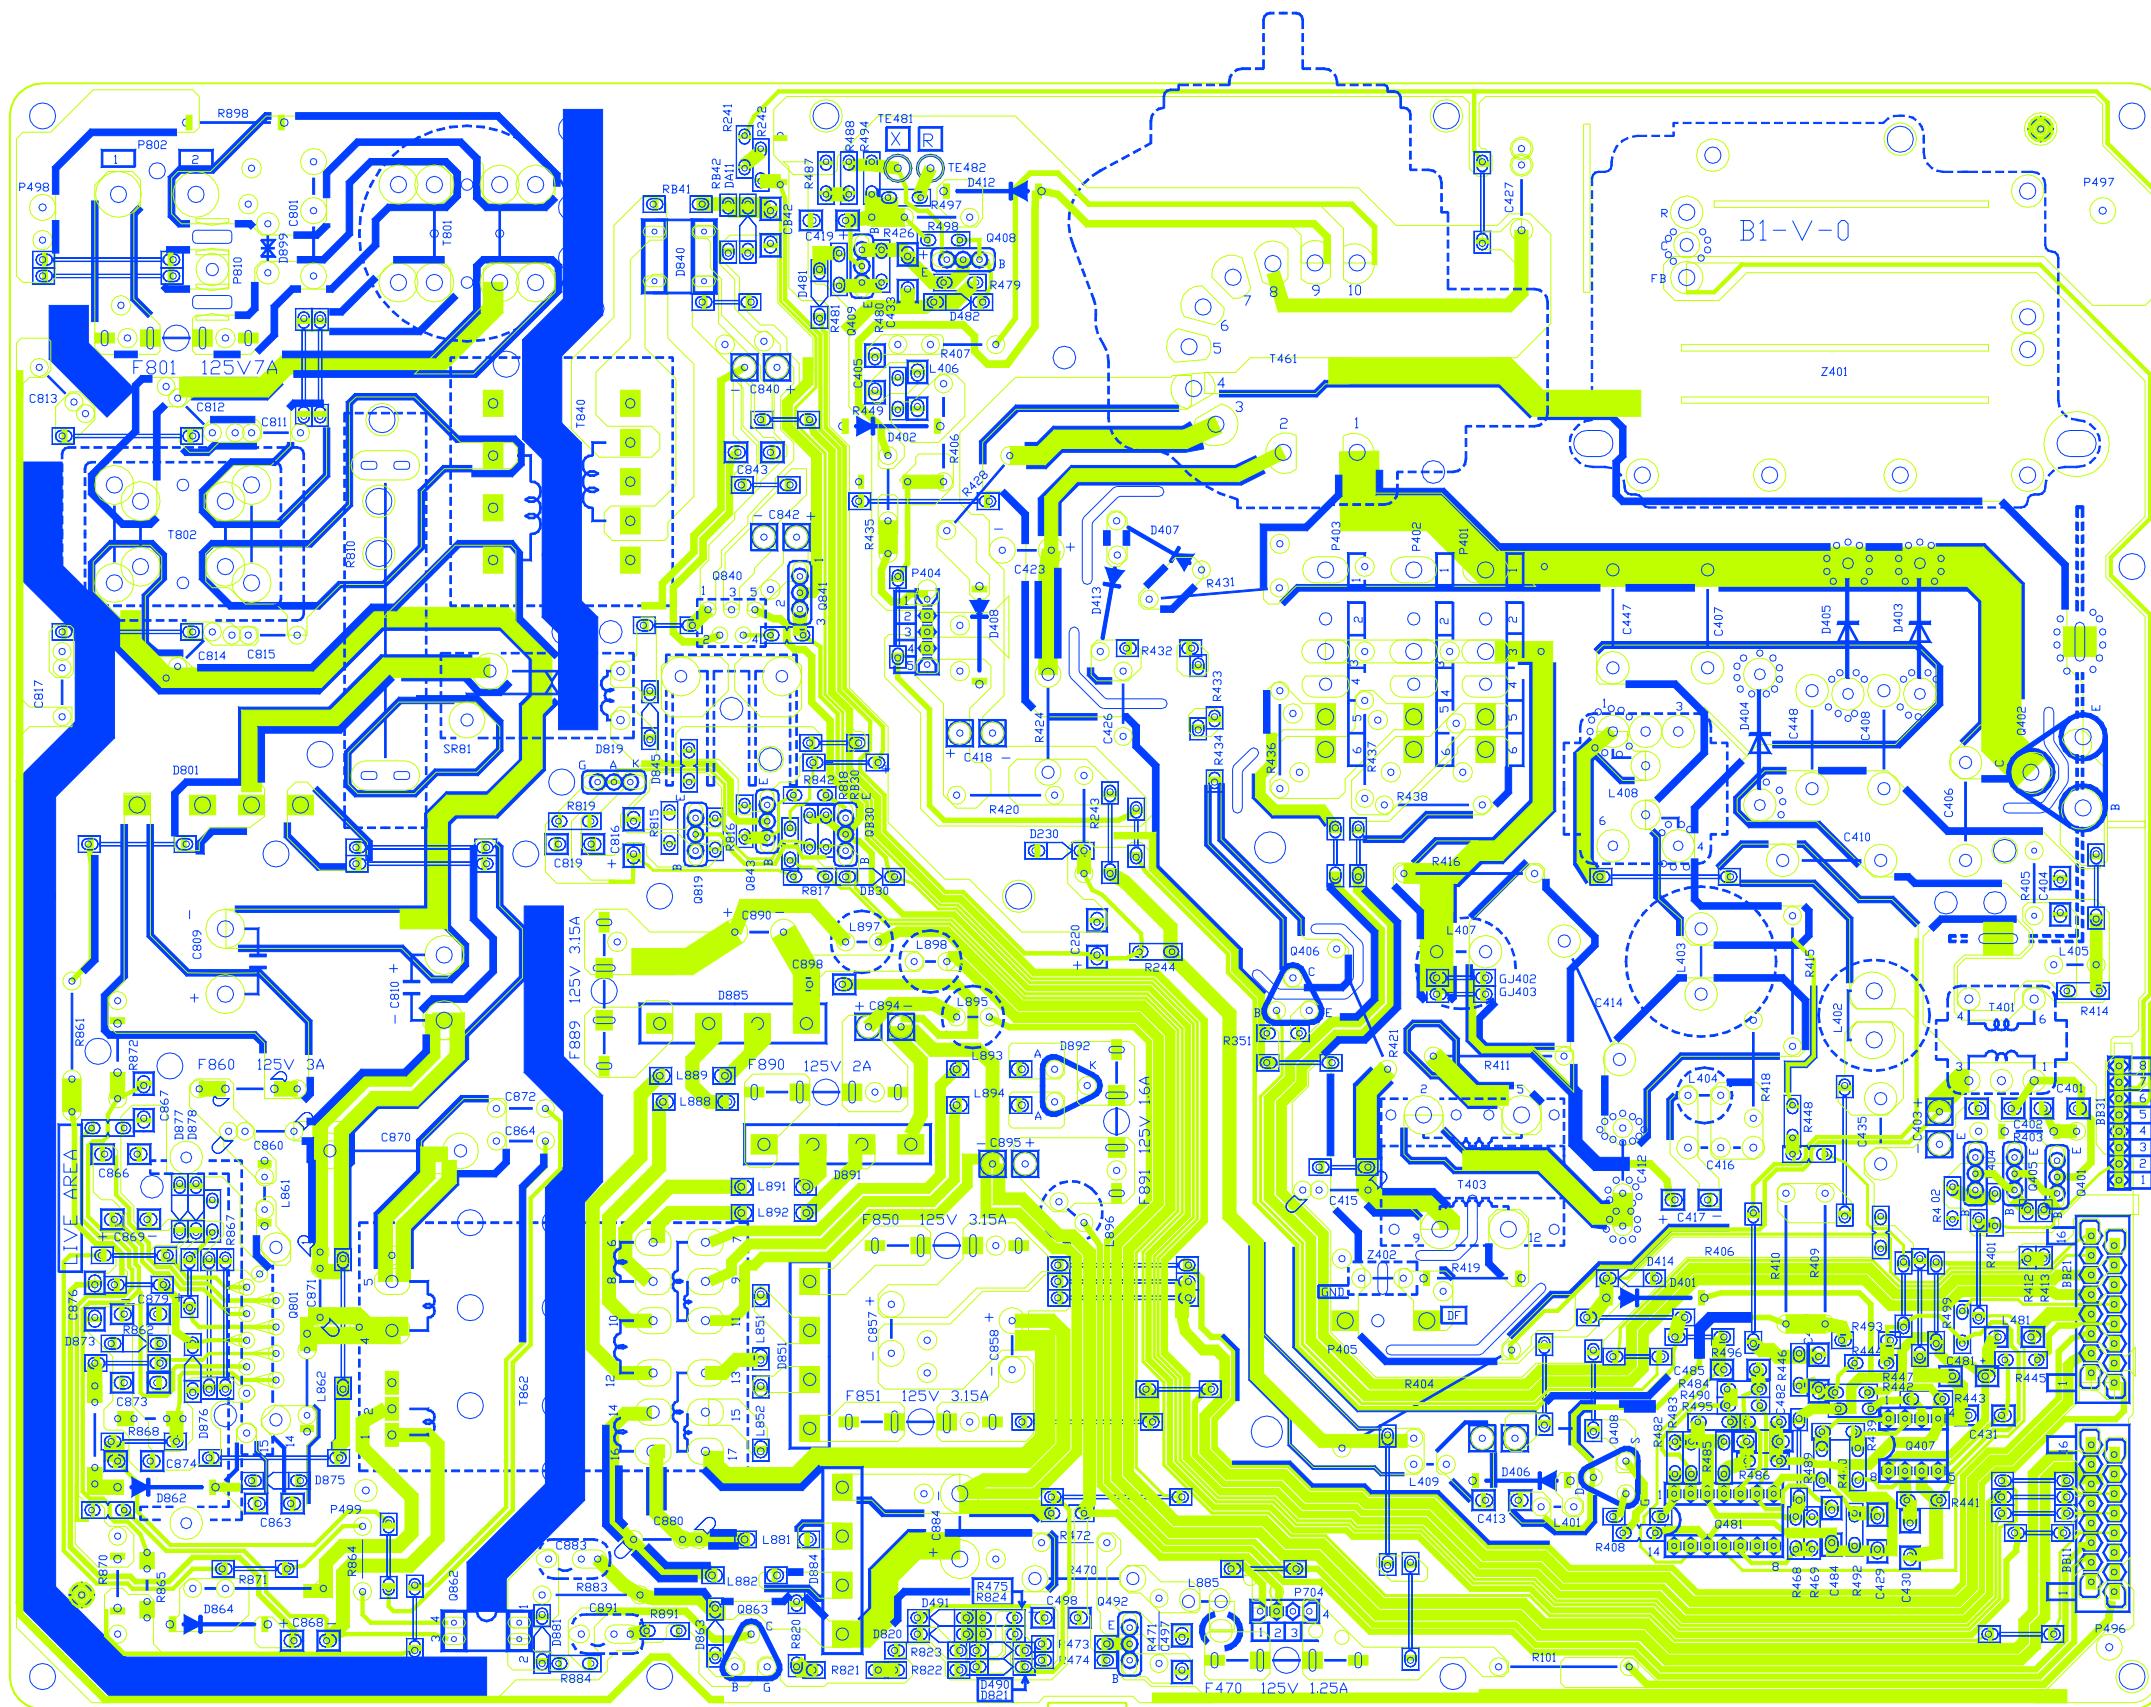


BACK/AV BOARD PB9452


BOTTOM (FOIL) SIDE

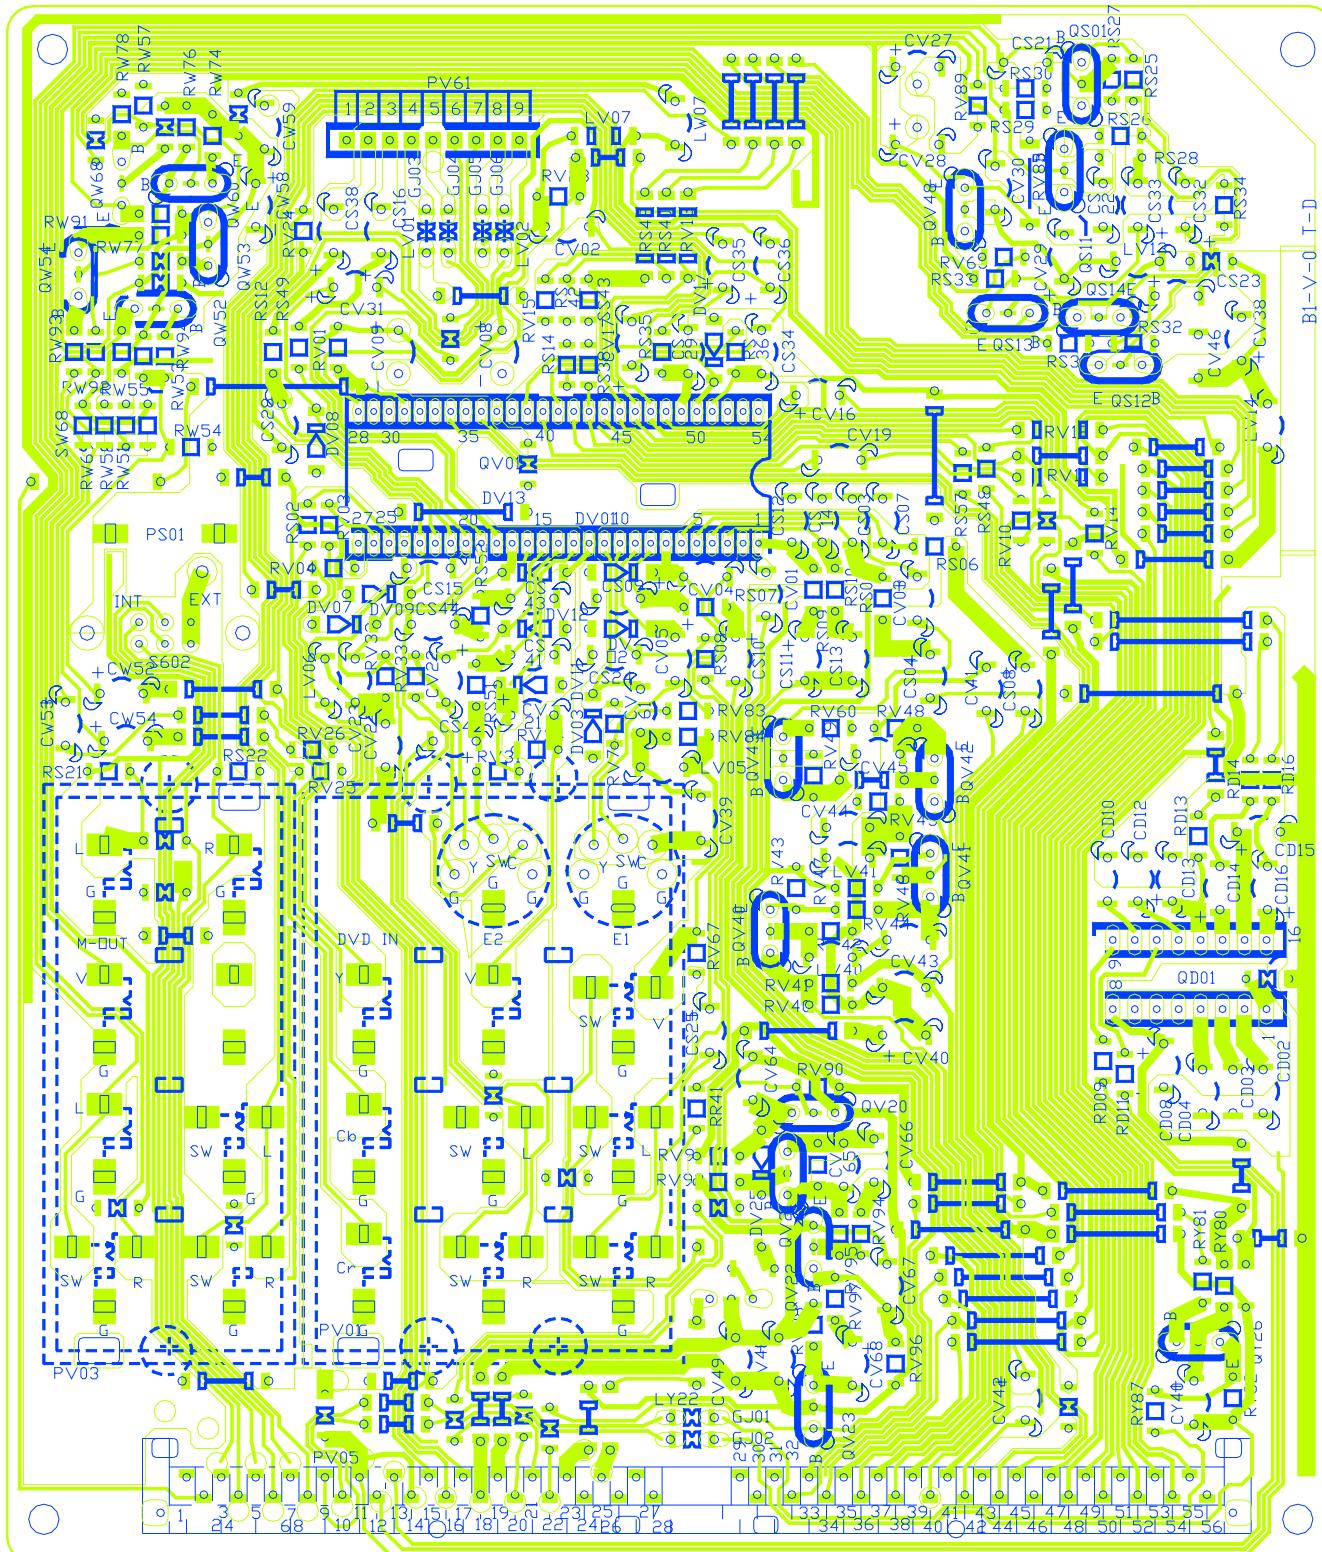

DIGI-CONV BOARD PB9453
BOTTOM (FOIL) SIDE

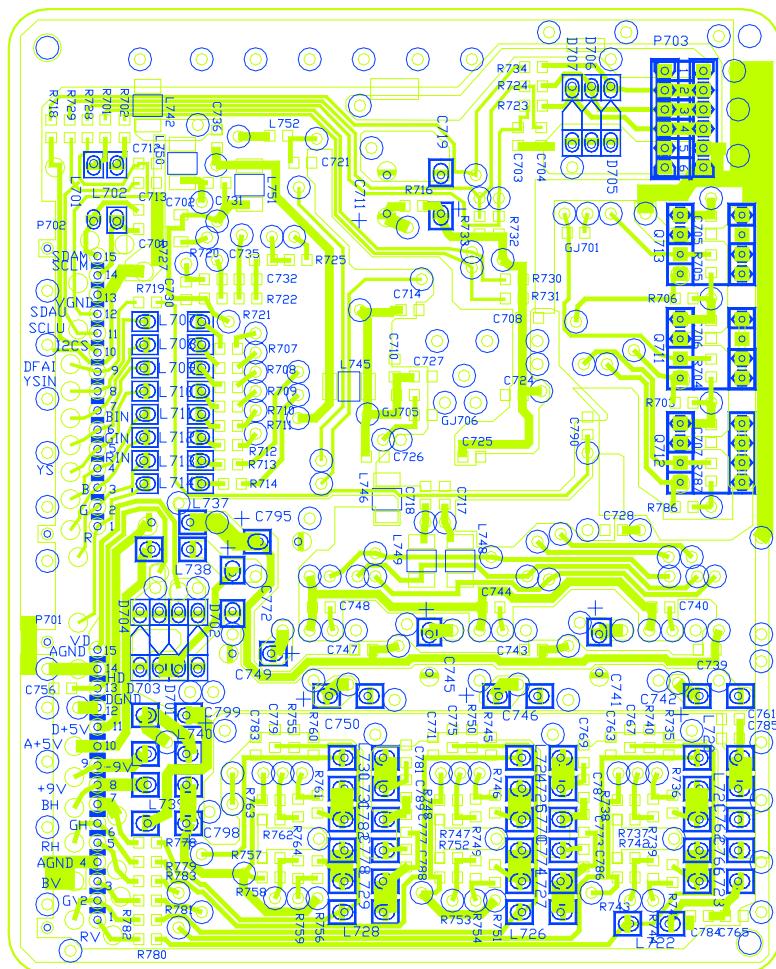


DIGI-COMB BOARD PB9398
BOTTOM (FOIL) SIDE

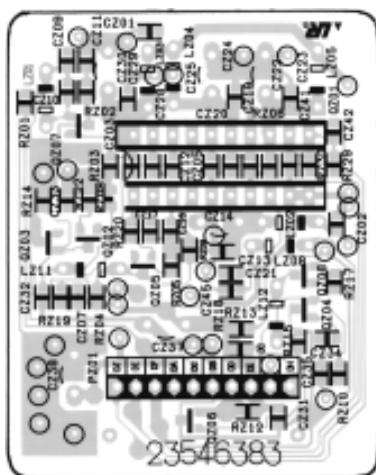


R-DRIVE BOARD PB9454-1

BOTTOM (FOIL) SIDE

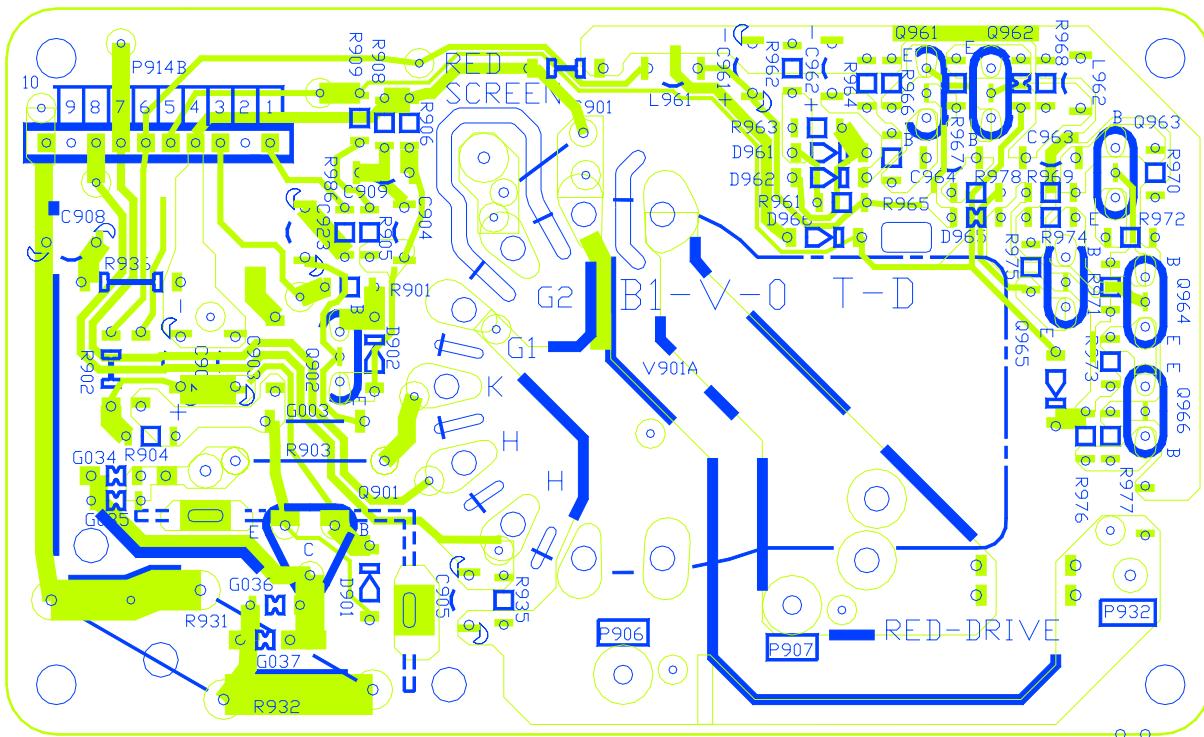



B-DRIVE BOARD PB9454-3

BOTTOM (FOIL) SIDE

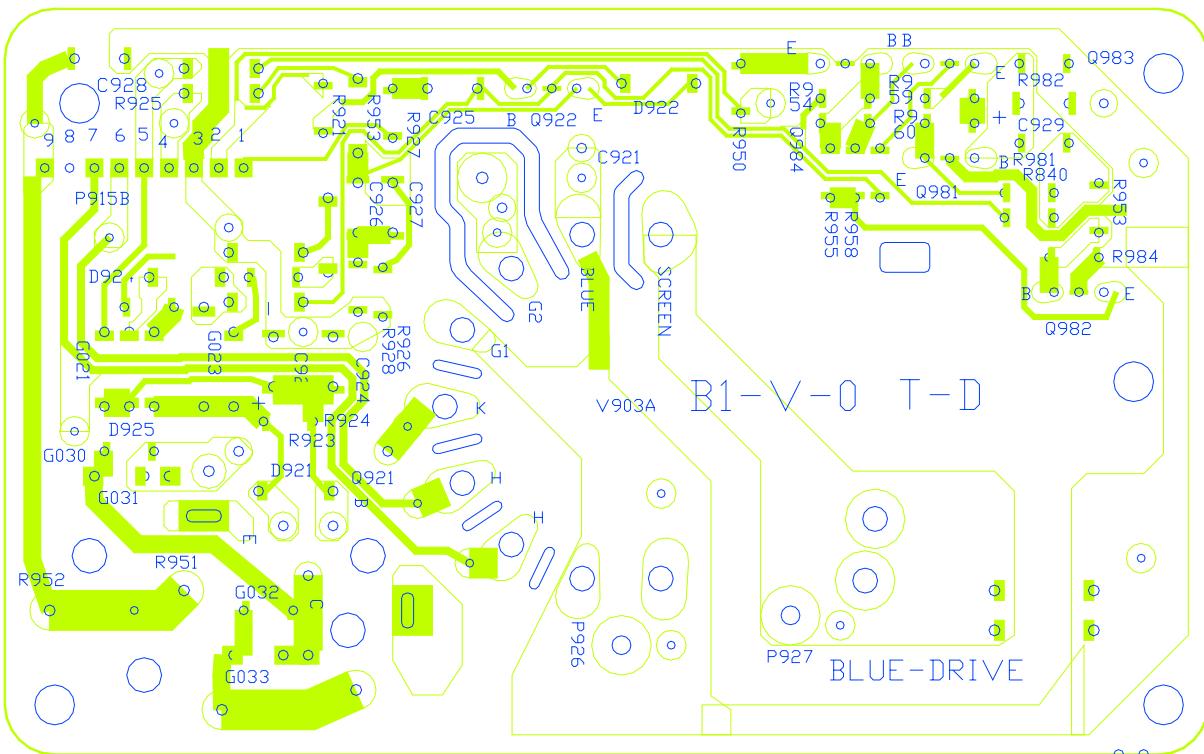


B-DRIVE BOARD PB9454-2
BOTTOM (FOIL) SIDE

FRONT-CONT BOARD PB9454-4
BOTTOM (FOIL) SIDE

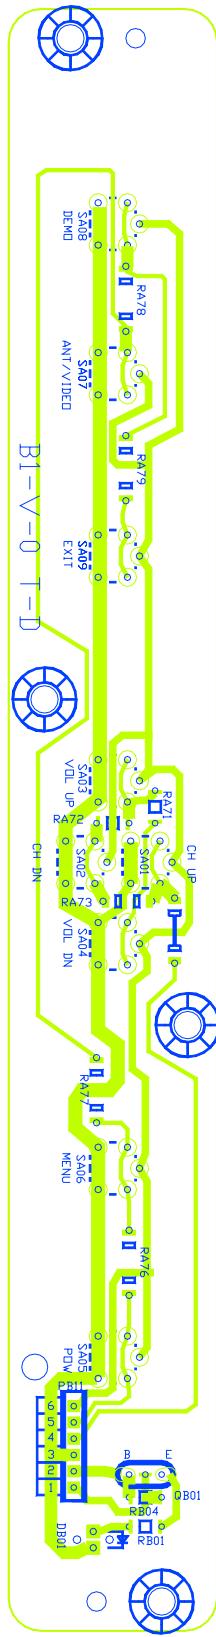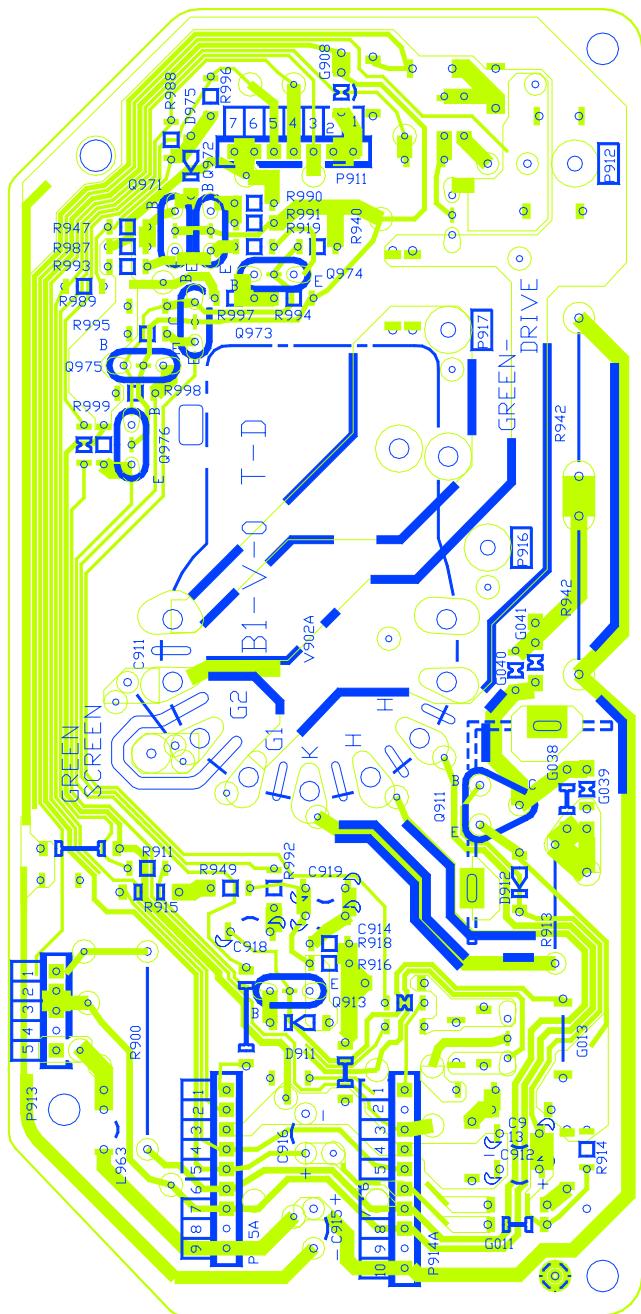


FRONT-CONV BOARD PB9454-5

BOTTOM (FOIL) SIDE

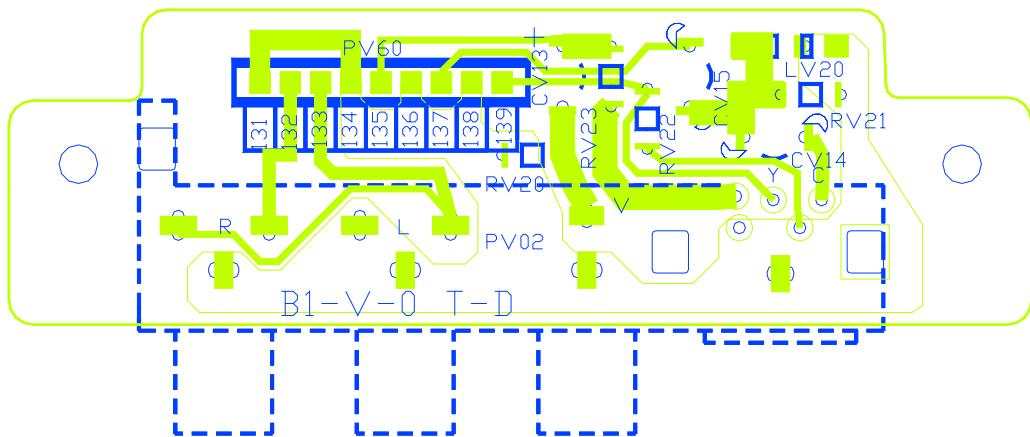


FRONT-IN BOARD PB9454-9

BOTTOM (FOIL) SIDE

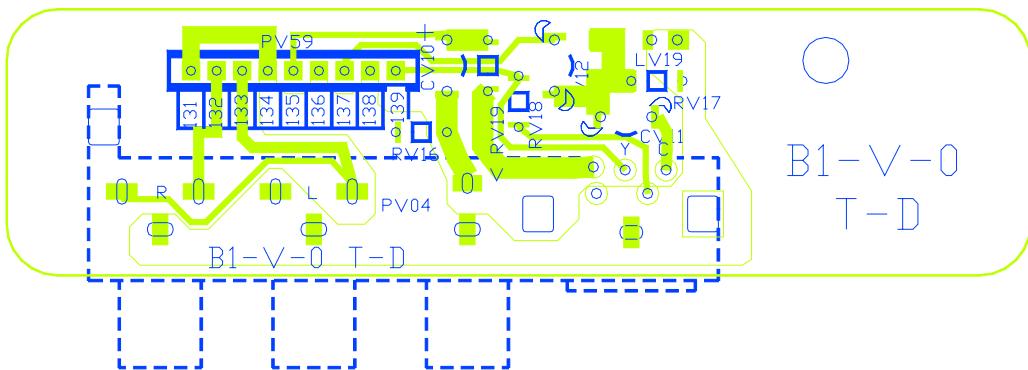


REM BOARD PB9454-10

BOTTOM (FOIL) SIDE

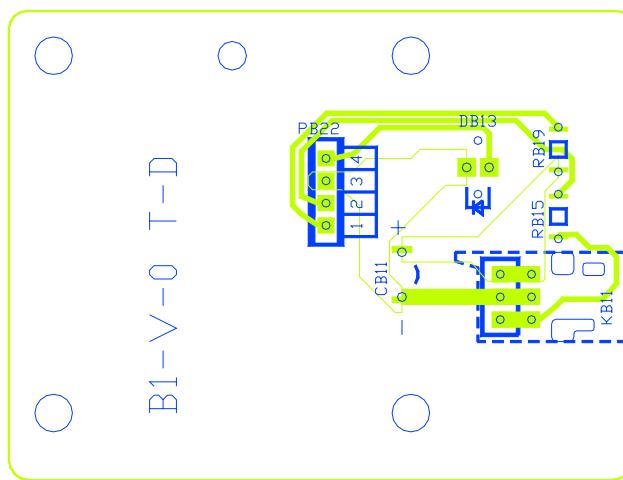


SVM BOARD PB9454-6

BOTTOM (FOIL) SIDE

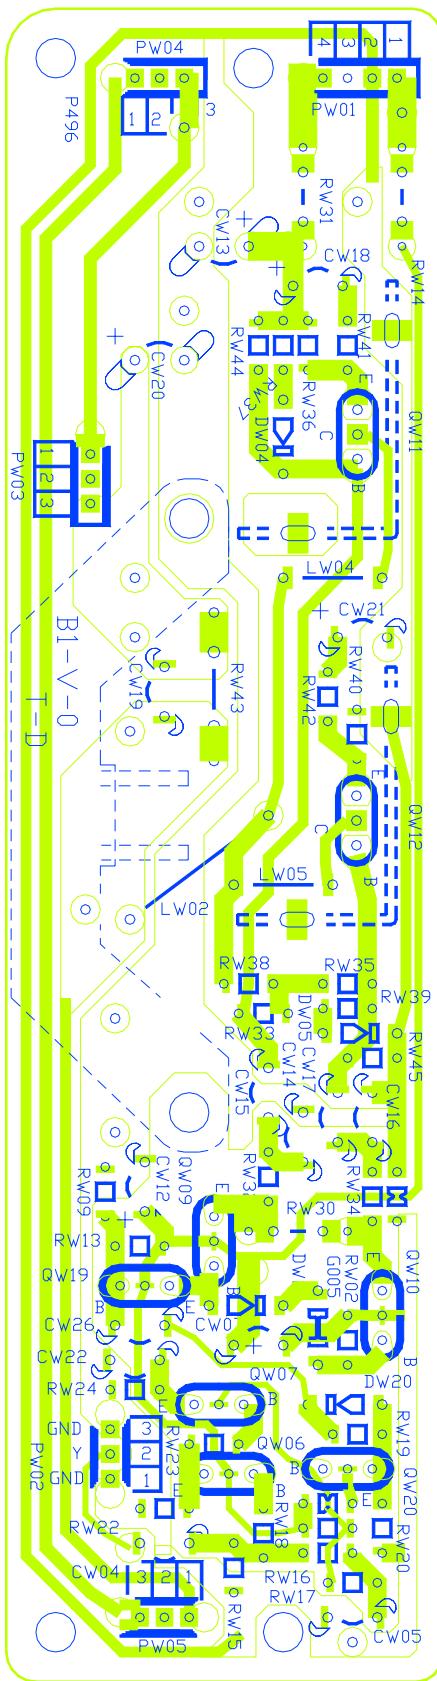


FRONT-CON BOARD PB9454-8

BOTTOM (FOIL) SIDE

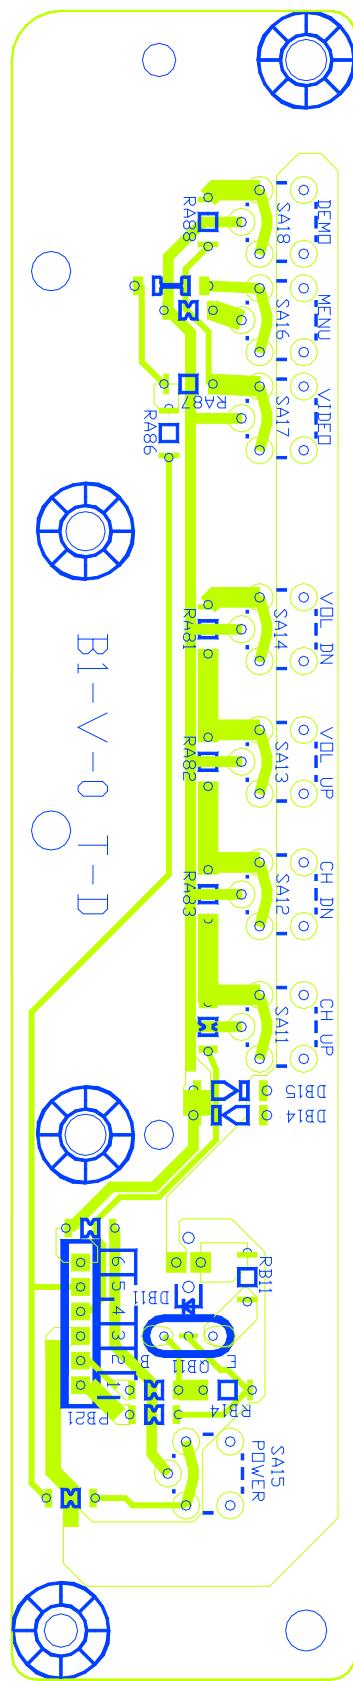


TERMINAL VIEW OF TRANSISTORS


① 2SD2253
(old)
2SC5243

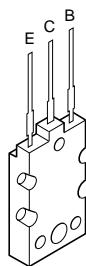

② 2SC3852
2SD1763A
2SC1569
2SC4544
2SA1788
2SA1306
2SA1186A

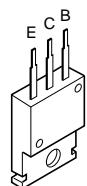


③ 2SC752GTM
2SC2482
2SC2655
2SC4721P

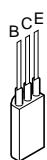


④ 2SC752
2SA562TM
2SA1015
2SC1815
2SC2878
2SC1740S
2SC2120
2SA9335




⑤ 2SA1788

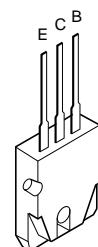


⑥ RN2203
RN2201
RN2004
RN1203
RN1204
RN2204
RN1205
RN1202
RN1201

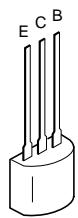

⑦ 2SD1554
2SD2253
2SD1556
2SD2553
2SC5143

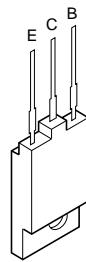

⑧ ON4409

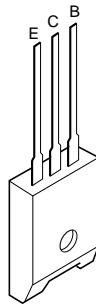

— MEMO —

SPECIFICATIONS (Representative: 50A60)						
TELEVISION SYSTEM	NTSC standard					
CHANNEL COVERAGE	VHF: 2 through 13 UHF: 14 through 69 Cable TV: Mid band (A-8 through A-1, A through I) Super band (J through W) Hyper band (AA through ZZ, AAA, BBB) Ultra band (65 through 94, 100 through 125)					
POWER SOURCE	120 V AC, 60 Hz					
POWER CONSUMPTION	137W					
AUDIO POWER	14 W + 14 W					
SPEAKER TYPE	Two 6-1/4 inches (16 cm) round					
VIDEO/AUDIO TERMINALS	S-VIDEO INPUT Y-INPUT: 1V (p-p), 75 ohm, negative sync. C-INPUT: 0.286 V(p-p) (burst signal), 75 ohm VIDEO/AUDIO INPUT VIDEO: 1 V(p-p), 75 ohm, negative sync. AUDIO: 150 mV(rms) (30% modulation equivalent, 47 kohm) ColorStream™ (Color Difference) VIDEO, AUDIO INPUT Y-INPUT: 1 V(p-p), 75 ohm Cr-INPUT: 0.7 V(p-p), 75 ohm Cb-INPUT: 0.7 V(p-p), 75 ohm AUDIO: 150mV(rms). 47 kohm VIDEO/AUDIO OUTPUT VIDEO: 1 V(p-p), 75 ohm, negative sync. AUDIO: 150 mV(rms) (30% modulation equivalent, 4.7 kohm) VARIABLE AUDIO OUTPUT 0-300 mV(rms) (30% modulation equivalent, 4.7 kohm) AUDIO CENTER CHANNEL INPUT 300 mV(rms) (30% modulation equivalent, 10 kohm)					
DIMENSIONS/MASS	<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="text-align: center; padding: 2px;">Dimension (W/H/D)</th><th style="text-align: center; padding: 2px;">Mass</th></tr> </thead> <tbody> <tr> <td style="text-align: center; padding: 2px;">50A60 42-1/4 x 50-5/8 x 20-13/16 inches (1,073 x 1,284 x 529 mm)</td><td style="text-align: center; padding: 2px;">217 lbs (98.6 kg)</td></tr> </tbody> </table>		Dimension (W/H/D)	Mass	50A60 42-1/4 x 50-5/8 x 20-13/16 inches (1,073 x 1,284 x 529 mm)	217 lbs (98.6 kg)
Dimension (W/H/D)	Mass					
50A60 42-1/4 x 50-5/8 x 20-13/16 inches (1,073 x 1,284 x 529 mm)	217 lbs (98.6 kg)					
SUPPLIED ACCESSORIES	Remote Control with 2 size "AA" alkaline batteries					

*Please refer to owner's manual in detail.

TOSHIBA CORPORATION
1-1, SHIBAURA 1-CHOME, MINATO-KU, TOKYO 105-8001, JAPAN