# 7.1CH Blu-ray Home Theater System user manual

# imagine the possibilities

Thank you for purchasing this Samsung product.

To receive more complete service,
please register your product at

www.samsung.com/register



# Safety Information

#### **Safety Warnings**

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVERIOR BACK). NO USER-SERVICEABLE PARTS ARE INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



This symbol indicates "dangerous voltage" inside the product that presents a risk of electric shock or personal injury.

#### CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN

**CAUTION:** TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK) NO USER SERVICEABLE PARTS INSIDE, REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



This symbol indicates important instructions accompanying the product.

#### WARNING

. To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

CLASS 1 KLASSE 1 **LUOKAN 1** KLASS 1 PRODUCTO LASER PRODUCT LASER PRODUKT LASER LAITE LASER APPARAT LÁSER CLASE 1

#### CLASS 1 LASER PRODUCT

· This product is classified as a CLASS 1 LASER product.

Use of controls, adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

#### CAUTION

 Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.

#### DANGER

VISIBLE AND INVISIBLE LASER RADIATION WHEN OPEN AVOID DIRECT EXPOSURE TO BEAM. (FDA 21 CFR)

#### CAUTION

- CLASS 3B VISIBLE AND INVISIBLE LASER RADIATION WHEN OPEN. AVOID EXPOSURE TO THE BEAM (IEC
- THIS PRODUCT UTILIZES A LASER. USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES. OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE. DO NOT OPEN COVER AND DO NOT REPAIR YOURSELF, REFER SERVICING TO QUALIFIED PERSONNEL.

#### Note to CATV system installer

This reminder is provided to call the CATV system installer's attention to Section 820~40 of the NEC which provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

#### **Precautions**

- Ensure that the AC power supply in your house complies with the identification sticker located on the back of vour product.
- Install your product horizontally, on a suitable base (furniture), with enough space around it for ventilation (3~4 inches).
- Do not place the product on amplifiers or other equipment which may become hot. Make sure the ventilation slots are not covered.
- Do not stack anything on top of the product.
- Before moving the product, ensure the Disc Insert Hole is empty.
- In order to disconnect the product completely from the power supply, remove the main plug from the wall outlet, especially when left unused for a long period of time.
- During thunderstorms, disconnect the AC main plug from the wall outlet. Voltage peaks due to lightning could damage the product.
- Do not expose the product to direct sunlight or other heat sources. This could lead to overheating and malfunction of the product.
- Protect the product from moisture, and excess heat or equipment creating strong magnetic or electric fields (i.e. speakers.).
- Disconnect the power cable from the AC supply if the product malfunctions.
- Your product is not intended for industrial use. Use of this product is for personal use only.
- Condensation may occur if your product or disc has been stored in cold temperatures. If transporting the product during the winter, wait approximately 2 hours until the product has reached room temperature before usina.
- The batteries used with this product contain chemicals that are harmful to the environment. Do not dispose of batteries in the general household trash.

# Safety Information

#### **Cautions on Handling and Storing Discs**

Small scratches on the disc may reduce sound and picture quality or cause skipping.

Be especially careful not to scratch discs when handling them.

## **Holding discs**

- Do not touch the playback side of the disc.
- Hold the disc by the edges so that fingerprints will not get on the surface.
- Do not stick paper or tape on the disc.



## **Disc Storage**

- Do not keep in direct sunlight
- · Keep in a cool ventilated area
- Keep in a clean Protection jacket.
   Store vertically.



- Do not allow the discs to become contaminated with dirt.
- Do not load cracked or scratched discs.

## **Handling and Storing Discs**

If you get fingerprints or dirt on the disc, clean it with a mild detergent diluted in water and wipe with a soft cloth.

 When cleaning, wipe gently from the inside to the outside of the disc



Condensation may form if warm air comes into contact with cold parts inside the product. When condensation forms inside the product, it may not operate correctly. If this occurs, remove the disc and let the product stand for 1 or 2 hours with the power on.

#### License

- This product incorporates copyright protection technology that is
  protected by U.S. patents and other intellectual property rights. Use of
  this copyright protection technology must be authorized by
  Macrovision, and is intended for home and other limited viewing uses
  only unless otherwise authorized by Macrovision. Reverse engineering
  or disassembly is prohibited.
- ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX,Inc. This is an official DivX Certified device that plays DivX video. Visit www. divx.com for more information and software tools to convert your files into DivX video.



ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play DivX Video-on-Demand (VOD) content. To generate the registration code, locate the DivX VOD section in the device setup menu. Go to vod.divx.com with this code to complete the registration process and learn more about DivX VOD.
DivX Certified to play DivX video up to HD 1080p, including premium

- iPod is a trademark of Apple Inc., registered in the U.S. and other countries.
- Made for iPod



iPhone is a trademark of Apple Inc.

- Manufactured under license from Dolby Laboratories. Dolby, Pro Logic and the double-D symbol are trademarks of Dolby Laboratories.
- < Open Source License Notice >
   In the case of using open source software, Open Source Licenses are available on the product menu.

#### Copyright

© 2010 Samsung Electronics Co., Ltd. All rights reserved.

## Contents

# SAFETY INFORMATION

- 2 Safety Warnings
- 3 Precautions
- 4 Cautions on Handling and Storing Discs
- 4 License
- Copyright

# **GETTING STARTED**

- 7 Key features of your new Blu-ray Home Theater
- 8 Icons that will be used in manual
- 9 Disc Types and Characteristics
- 13 Accessories
- 14 Description

14

- Front Panel
- Rear Panel 15
- 16 Remote control
- CONNECTIONS
- 18 Connecting the Speakers
- 23 Connecting External Devices/your TV via HDMI
- 25 Connecting the Video Out to your TV
- 26 Connecting Audio from External Components
- 27 Connecting to the Network
- 28 Connecting the FM Antenna

## **SETUP**

- Before Starting (Initial settings)
- 30 Setting the Menu
- 31 Display
- 31 TV Aspect
- 31 BD Wise (Samsung Products only)
- 31 Resolution
- 33 **HDMI** Format
- 33 Movie Frame (24 Fs)
  - Progressive Mode
- 33 Still Mode
- 33 **HDMI Deep Color**
- 34 Audio

33

35

37

- 34 Speaker Setting
  - Musical Room Calibration
- EQ Optimizer 35
- 35 **HDMI** Audio
- Digital Output 36
- 37 Dynamic Range Control
- 37 AV Sync
- 37 System
- 37 Initial Settings
- 37 Internet@TV Screen Size
- 37 Anynet+(HDMI-CEC)
  - **BD** Data Management
- 38 Clock
- 38 DivX(R) Registration
- 38 DivX(R) Deactivation
- Network Setup 39
- 39 Network Settings
- 42 Network Status
  - **BD-LIVE Internet Connection**
- 42 42 Language
- 43 Security
- 43 Parental Rating
- 43 Change Password

# Contents

43 General

43 Background

43 Energy Saving 43 Front Display

43 Power On/Off Sound

43 Light Effect

44 Support

44

44 Software Upgrade

Contact Samsung

## **BASIC FUNCTIONS**

45 Playing a Disc

45 Using the Disc menu / Title menu / Popup menu

46 Using the Search and Skip Functions

47 Slow Motion Play/Step Motion Play
 47 Repeat Playback

48 Using the TOOLS button

50 Listening to Music

52 Sound Mode

53 Playing back a Picture

54 Playing back a USB Storage

54 Listening to Radio

55 Using an iPod

## **NETWORK SERVICES**



57 Using Internet@TV

61 BD-LIVE™

61 Software Upgrade Notification

61 Using the AllShare Function

## **OTHER INFORMATION**



63 Troubleshooting

66 Index

67 Specifications

· Figures and illustrations in this User Manual are provided for reference only and may differ from actual product appearance.

# Getting Started

## Key features of your new Blu-ray Home Theater

#### **Product Features**

#### Playback of many disc types, plus an FM tuner

This product allows you to play various discs, including BD-ROM/RE/R, DVD-VIDEO, DVD-RW/-R(V mode), DVD+RW/+R, MP3/WMA, JPEG, DivX/MKV/MP4, and CD-R/RW, with a sophisticated FM tuner, all in a single player.

# Full HD audio decoding support (Dolby Digital, Dolby Pro Logic IIx, Dolby Pro Logic IIz, Dolby Digital Plus, Dolby TrueHD, DTS, DTS-HD HRA, DTS-HD MA Essential)

Please refer to www.DOLBY.COM and DTS.COM for more detail.

#### **HDMI**

HDMI transmits Blu-Ray/DVD video and audio signals simultaneously, and provides a clearer picture. The 1080p(Full HD) resolution provides even clearer pictures.

#### AV SYNC function

Video may lag behind the audio if the product is connected to a digital TV. To compensate for this, you can adjust the audio delay time to sync up with the video.

#### Wireless receiver module

Samsung 's rear- channel wireless receiver module does away with cables running between the product and rear-channel speakers. Instead, the rear speakers connect to a compact wireless receiver module that communicates with the product.

#### iPod & iPhone support

You can enjoy music files by connecting your iPod to the product with the supplied iPod dock.

#### **BD** Wise

BD Wise automatically adjusts BD Wise-compliant Samsung products to the optimal settings between them. This feature is enabled only if BD Wise-compliant Samsung products are connected to each other using an HDMI cable.

#### Internet@TV

You can download various chargeable or free-of charge applications through network connection.

## **Blu-ray Disc Features**

Blu-ray Discs support the highest quality HD video available in the industry - Large capacity means no compromise on video quality. Furthermore, a Blu-ray Disc has the same familiar size and look as a DVD.

\* The following Blu-ray Disc features are disc dependant and will vary. Appearance and navigation of features will also vary from disc to disc. Not all discs will have the features described below.

#### Video highlights

The BD-ROM format for movie distribution supports three highly advanced video codecs, including AVC, VC-1, and MPEG-2.

HD video resolutions are also available:

1920 x 1080 HD

1280 x 720 HD

#### For high-definition playback

To view high-definition contents on a Blu-ray disc, an HDTV (High Definition Television) is required. Some discs may require using the product's HDMI OUT to view high-definition content. The ability to view high-definition content on Blu-ray disc may be limited depending on the resolution of your TV.

#### **BD-LIVE**

You can use a Blu-ray Disc supporting BD-LIVE through network connection to enjoy various contents provided by the disc manufacturer.

# Getting Started

## Icons that will be used in manual

Make sure to check the following terms before reading the user manual.

Term	Logo	Icon	Definition
BD-ROM	6)	BD-ROM	This involves a function available on a BD-ROM.
BD-RE/-R	Bio-ray Disc	BD-RE/-R	This involves a function available on a BD-RE/-R disc recorded in the BD-RE format.
DVD-VIDEO	VIDEO	DVD-VIDEO	This involves a function available on a DVD-VIDEO.
DVD-RW(V)	DVD RW		
DVD-R			This involves a function available on recorded DVD+RW or DVD-RW(V)
DVD+RW	RW DVD+RWWMM	DVD±RW/±R	DVD-R/+R discs that have been recorded and finalized.
DVD+R	DVO-R DVO-R		
Audio CD	OISC DIGITAL AUDIO	Audio CD	This involves a function available on an audio CD-RW/-R (CD-DA format).
MP3 WMA	-	MP3/WMA	This involves a function available in a CD-RW/-R, DVD-RW/-R disc or a USB storage media containing MP3 or WMA contents.
JPEG	-	JPEG	This involves a function available in a CD-RW/-R, DVD-RW/-R disc or a USB storage media containing JPEG contents.
DivX MKV MP4	DivX	DWX/MKV/MP4	This involves a function available in a CD-RW/-R, DVD-RW/-R disc or a USB storage media containing DivX contents.
USB storage device	-	USB	This involves a function available on a USB storage device.
CAUTION	-	Ţ	This involves a situation where a function does not operate or settings may be cancelled.
NOTE	-	<b>\(\text{\tin}\text{\tetx{\text{\tetx{\text{\text{\texi}\text{\text{\texi}\text{\text{\text{\text{\ti}\text{\text{\text{\text{\text{\texi}\tiex{\tiint{\text{\texit{\texi}\text{\texi}\text{\text{\text{\texi}\text{\text{\tet</b>	This involves tips or instructions on the page that help each function operate.
Shortcut Key	-	(Am)	This function provides direct and easy access pressing the button on the remote control.

- This product is compatible with the NTSC color system only.
- PAL discs will not play.

#### **Disc Types and Characteristics**

## Blu-ray Disc Compatibility

Blu-ray is a new and evolving format. Accordingly, disc compatibility issues are possible. Not all discs are compatible and not every disc will play back. For additional information, refer to the Disc Types and Characteristics section of this Manual. If you encounter compatibility problems, please contact the SAMSUNG customer care center at 1-800 SAMSUNG.

## **<sup>®</sup> NOTE**

- Playback may not work for some types of discs, or when specific operations, such as angle change and aspect ratio adjustment, are being performed. Information about the discs is written in detail on the box. Please refer to this if necessary.
- Do not allow the disc to become dirty or scratched. Fingerprints, dirt, dust, scratches or deposits of cigarette smoke on the recording surface may make it impossible to use the disc for playback.
- When a BD-Java title is played, loading may take longer than a normal title, or some functions may perform slowly.


## Discs that cannot be played

- HD DVD Disc
- DVD-RAM
- 3.9 GB DVD-R Disc for Authoring.
- DVD-RW(VR mode)
- Super Audio CD(except CD laver)
- DVD-ROM/PD/MV-Disc, etc CVD/CD-ROM/ CDV/CD-G/CD-I/LD
- CDGs play audio only, not graphics.

## **<sup>®</sup> NOTE**

- Some commercial discs and DVD discs purchased outside your region may not be playable with this product. When these discs are played, either "No disc." or "Please check the regional code of the disc." will be displayed.
- If a DVD-R/-RW disc has not been recorded properly in DVD video format, it will not be playable.

## Logos of Discs that can be played

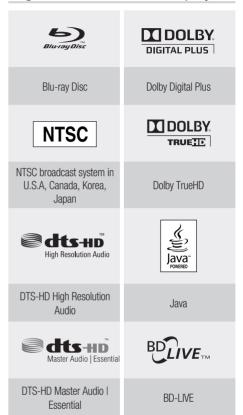

# Getting Started

## Region code

Both the product and the discs are coded by region. These regional codes must match in order to play the disc. If the codes do not match, the disc will not play.

Disc Type	Region Code	Area
		North America, Central America, South America, Korea, Japan, Taiwan, Hong Kong and South East Asia.
Blu-ray		Europe, Greenland, French territories, Middle East, Africa, Australia and New Zealand.
		India, China, Russia, Central and South Asia.
		The U.S., U.S. territories and Canada
	2	Europe, Japan, the Middle East, Egypt, South Africa, Greenland
	(3)	Taiwan, Korea, the Philippines, Indonesia, Hong Kong
DVD-VIDEO	4	Mexico, South America, Central America, Australia, New Zealand, Pacific Islands, Caribbean
	<b>(5)</b>	Russia, Eastern Europe, India, most of Africa, North Korea, Mongolia
	6	China

## Disc Types

#### **BD-ROM**

Blu-ray Disc Read Only Memory. A BD-ROM disc contains pre-recorded data. Although a BD-ROM may contain any form of data, most BD-ROM discs. will contain movies in High Definition format, for playback on the product. This product can play back pre-recorded commercial BD-ROM discs.

#### BD-RE/BD-R

Blu-ray Disc Rewritable/Blu-ray Disc Recordable. BD-RE/BD-R is the ideal format for making backups, or recording personal video.

#### **DVD-VIDEO**

- A digital versatile disc (DVD) can contain up to 135minutes of images, 8 audio languages and 32 subtitle languages. It is equipped with MPEG-2 picture compression and Dolby Digital surround, allowing you to enjoy vivid and clear quality images.
- When switching from the first layer to the second layer of a dual-layered DVD Video disc, there may be momentary distortion in the image and sound. This is not a malfunction of the product.
- Once a DVD-RW/-R recorded in Video Mode is finalized, it becomes DVD-Video, Pre-recorded (pre-stamped) commercial DVDs with movies are also referred to as DVD-Videos. This product can play back pre-recorded commercial DVD discs (DVD-Video discs) with movies.

#### DVD-R/-RW

- Once a DVD-R/-RW recorded in Video Mode is finalized, it becomes DVD-Video. Ability to play back may depend on recording conditions.
- This product can play back DVD-R disc recorded and finalized with a Samsung DVD video recorder.
- Playback can be performed with DVD-RW discs in the Video Mode and finalized only.

#### DVD+RW

 This product can play back a DVD+RW disc recorded with a DVD Video recorder. Ability to play back may depend on recording conditions.

#### DVD+R

 This product can play back a DVD+R disc recorded and finalized with a DVD Video recorder. Ability to play back may depend on recording conditions.

#### Audio CD

- An audio disc on which 44.1kHz PCM Audio is recorded
- This product can play back CD-DA format audio CD-R and CD-RW discs.
- The product may not be able to play some CD-R or CD-RW discs due to the condition of the recording.

#### CD-R/-RW

- Use a 700MB(80 minutes) CD-R/-RW disc. If possible, do not use a 800MB(90 minutes) or above disc, as the disc may not play back.
- If the CD-R/-RW disc was not recorded as a closed. session, you may experience delays when playing back the beginning of the disc or all recorded files may not play.
- Some CD-R/-RW discs may not be playable with this product, depending on the device which was used to burn them. For contents recorded on CD-R/-RW media from CDs for your personal use, playability may vary depending on contents and discs.

#### Disc Format

## Using MP3 disc

- CD-R/-RW, DVD-RW/-R recorded with UDF. ISO9660 or JOLIET format can be played back.
- Only MP3 files with the ".mp3" or ".MP3" extension can be played.
- Playable bit rate range is from 56 Kbps to 320 Kbps.
- Playable sample-rate is 32KHz to 48KHz.
- The product can handle a maximum of 1500 files and folders under a parent folder. For MP3 files recorded with a VBR(Variable Bit Rates), the sound may cut in and out.

## Using JPEG disc

- CD-R/-RW, DVD-RW/-R recorded with UDF, ISO9660 or JOLIET format can be played back.
- Only JPEG files with the ".jpg", ".JPG", ".jpeg" or "JPEG" extension can be displayed.
- Progressive JPEG is supported.

## DVD-RW/-R (V)

- This is a format that is used for recording data on a DVD-RW or DVD-R disc. The disc can be played by this product once it has been finalized.
- If a disc that has been recorded in Video Mode by a different maker's recorder but has not been finalized. it cannot be played by this product.

## DivX(Digital video express)

DivX is a video file format developed by Microsoft and is based on MPEG4 compression technology to provide audio and video data over the Internet in real-time.

MPEG4 is used for video encoding and MP3 for audio encoding so that the users can watch a movie at near DVD-quality video and audio.

## Supported Formats(DivX)

This product only supports the following media formats. If both video and audio formats are not supported, the user may experience problems such as broken images or no sound.

## Supported Video Formats

Format	Supported Versions
AVI	DivX3.11~DivX5.1, XviD

#### Supported Audio Formats

Format	Bit Rate	Sampling Frequency
MP3	80~384kbps	44.1khz
AC3	128~384kbps	44.1/48khz
DTS	1.5Mbps	44.1khz

- DivX files, including audio and video files, created in the DTS format can only support up to 6Mbps.
- Aspect Ratio: Although the default DivX resolution is 640x480 pixels (4:3), this product supports up to 800x600 pixels (16:9). TV screen resolutions higher than 800 will not be supported.
- When you play a disc whose sampling frequency is higher than 48khz or 320kbps, you may experience shaking on the screen during playback.
- Qpel and gmc is not supported.

## MKV, MP4

- CD-R/-RW, DVD-R/-RW, USB, PC streaming
- Video Files with the following extensions can be played.: .avi, .divx, .mkv, .mp4, .AVI, .DIVX, .MKV..MP4

## NOTE

Some DivX. MKV and MP4 format discs may not play, depending on the video resolution and frame rate condition.

# Getting Started

## Supported File Formats

## Video File Support

File Extension	Container	Video Codec	Audio Codec	Resolution
		Divx 3.11/4.x/5.1/6.0	MP3	1920x1080
*.avi	AVI	XviD	AC3 DTS WMA	1920x1080
.dvi		MP4v3		1920x1080
		H.264 BP/MP/HP	PCM	1920x1080
		VC-1 AP(wmv1)		1920x1080
*.mkv	MKV	DivX 5.1/6.0	MP3 AC3	1920x1080
.IIIKV		XviD	DTS	1920x1080
		H.264 BP/MP/HP		1920x1080
* 14/001/	WMV	VC-1 AP	WMA	1920x1080
*.wmv	VVIVIV	VC-1 SM	VVIVIA	1920x1080
* mn4	MD4	MP4 (mp4v)	AAC	1920x1080
*.mp4	MP4	H.264 BP/MP/HP	AAC	1920x1080
	PS	MPEG1	MP1, 2	1920x1080
*.mpg *.mpeg		MPEG2	AC3	1920x1080
inpog		H.264 BP/MP/HP	DTS	1920x1080

## Music File Support

File Extension	Container	Audio Codec	Support Range
*.mp3 MP3 MP3		MP3	-
*.wma	WMA	WMA	Compliant with WMA version 10  * Sampling rates (in kHz) - 8, 11, 16, 22, 32, 44.1, 48  * Bit rates - All bit-rates in the range 5kbps to

## **USB Host Specification**

#### **USB Host Specification**

- Supports USB 1.1 or USB 2.0 compliant devices.
- Supports devices connected using the USB A type cable.
- Supports UMS (USB Mass Storage Device) V1.0 compliant devices.
- Supports FAT(FAT, FAT16, FAT32) file system formatting.

## Non-compliance

- Does not support a device that requires installing. a separate driver on the PC (Windows).
- Does not support connection to a USB hub.
- A USB device that is connected using an USB extension cable may not be recognized.

## **Operational Limitations**

- If the connected device has multiple drives (or partitions) installed, only one drive (or partition) can be connected.
- A device supporting USB 1.1 alone may cause a difference in the picture quality, depending on the device.

## Supported file Formats

Format	Still Picture	Music
File name	JPG	MP3
File extension	JPG .JPEG	.MP3
Bit rate	_	80~384kbps
Version	_	_
Pixel	640x480	_
Sampling Frequency	_	44.1kHz

- CBI (Control/Bulk/Interrupt) is not supported.
- Digital Cameras that use PTP protocol or require additional program installation when connected to a PC are not supported.
- A device using the NTFS file system is not supported. (Only the FAT 16/32 (File Allocation Table 16/32) file system is supported.)
- Does not operate with Janus enabled MTP (Media Transfer Protocol) devices.

## USB Devices that can be used with the product

- 1. USB Storage Device
- 2. MP3 Plaver
- 3. Digital Camera
- 4. Removable HDD
  - Removable HDDs equipped with less than 160 Gbytes are supported. Removable HDDs equipped with 160Gbytes or more may not be recognized, depending on the device.
  - If the connected device does not work due to insufficient power supply, you can use a separate power cable to supply power so that it can work properly. The USB cable connector may differ, depending on the manufacturer of the USB device.
- 5. USB card Reader: One slot USB card reader and Multi-slot USB card reader.
  - The USB card reader may not be supported. depending on the manufacturer.
  - If you install multiple memory devices into a multi-card reader, you may experience problems.

#### **Accessories**

Check for the supplied accessories below.













Video Cable

FM Antenna

iPod Dock

User's Manual


Remote Control/ Batteries (AAA size)

ASC Microphone

# Getting Started

## Description

## Front Panel

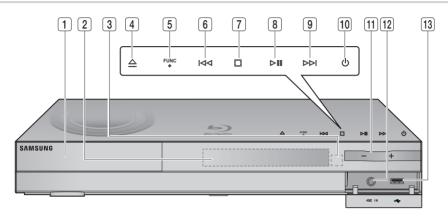


1	DISC TRAY	Insert disc here.	
2	Displays the playing status, time, etc.		
3	REMOTE CONTROL SENSOR     Detects signals from the remote control.		
4	OPEN/CLOSE BUTTON	Opens and closes the disc tray.	
5	The mode switches as follows:  BD/DVD → D. IN → AUX → HDMI 1 → HDMI 2 → FM		
6	TUNING DOWN & SKIP BUTTON	Goes back to the previous title/chapter/track. Tunes down the FM frequency band.	
7	STOP BUTTON Stops disc playback.		
8	PLAY/PAUSE BUTTON	Plays a disc or pauses playback.	
9	TUNING UP & SKIP BUTTON	Goes to the next title/chapter/track. Tunes up the FM frequency band.	
10	POWER BUTTON (Ů)	Turns the product on and off.	
11	VOLUME CONTROL	Volume adjustment.	
12	ASC IN JACK	Used to connect the ASC Microphone for setting up MRC (Musical Room Calibration).	
13	USB PORT	A USB storage device can be connected here and used as storage when connected to BD-LIVE. It can also be used for software upgrades and MP3/JPEG/DivX/MKV/MP4 playback.	

## **<sup>®</sup>NOTE**

- Software upgrades using the USB Port must be performed with a USB memory flash stick only.
- A USB device consuming more than 500mA requires a separate power supply device for normal operation.
- A USB HDD device cannot be used for BD Data storage (BD-LIVE).

## 14 English

## **Rear Panel**

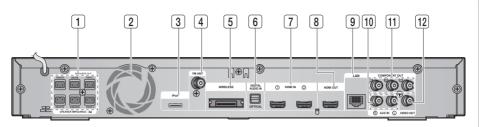

1	SPEAKER OUTPUT CONNECTORS	Connect the front, center, surround back, subwoofer speakers.
2	COOLING FAN	The cooling fan supplies cool air to the product to prevent overheating and always revolves when the power is on.
3	iPod JACK	Connect the iPod dock connector here.
4	FM 75Ω COAXIAL JACK	Connect the FM antenna.
5	TX CARD CONNECTION (WIRELESS)	The TX card enables communication between the product and the wireless receiver module.
6	EXTERNAL DIGITAL OPTICAL IN JACKS (OPTICAL)	Use this to connect external equipment capable of digital output.
7	HDMI IN JACKS	Receives digital video and audio signals simultaneously using an HDMI cable.
8	HDMI OUT JACK	Use an HDMI cable, connect this HDMI output terminal to the HDMI input terminal on your TV for the best quality picture.
9	LAN TERMINAL	Can be used for network based services (see pages 57~62), BD-LIVE and software upgrade under the network connection.
10	AUX IN JACKS	Connect to the 2CH analog output of an external device (such as a VCR)
11	COMPONENT VIDEO OUT JACKS	Connect a TV with Component video inputs to these jacks.
12	VIDEO OUT JACK	Connect your TV's Video Input jack (VIDEO IN) to the VIDEO OUT Jack on this product.


## ! CAUTION

- Ensure a minimum of 4 inches of clear space on all sides of the cooling fan when installing the product.
- Do not obstruct the cooling fan or ventilation holes.


# Getting Started

#### Remote control

## **Tour of the Remote Control**

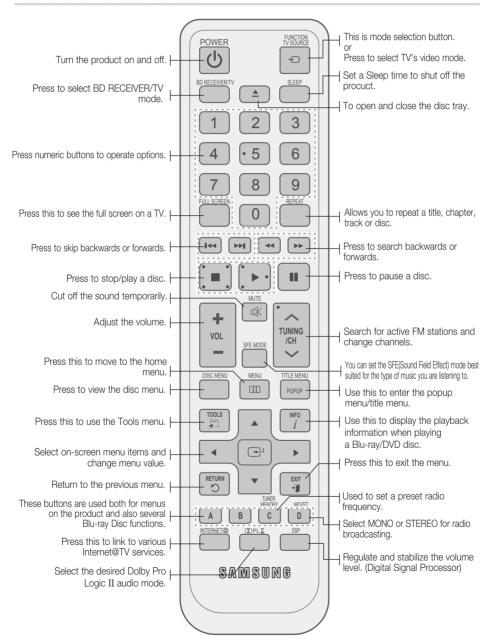

## Installing batteries in the Remote Control

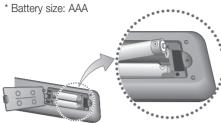

## **<sup>®</sup> NOTE**

- Make sure to match the "+" and "-" ends of the batteries with the diagram inside the compartment.
- Assuming typical TV usage, the batteries last for about one year.
- The remote control can be used up to approximately 23 feet (7 meters) in a straight line.

## Setting the Remote Control

You can control certain functions of your TV with this remote control.

## When operating a TV with the remote control

- 1. Press the BD RECEIVER/TV button to set the remote control to TV mode.
- 2. Press the **POWER** button to turn on the TV.
- 3. While holding down the POWER button, enter the code corresponding to your brand of TV.
  - If there is more than one code listed for your TV in the table, enter one at a time to determine which code works.
  - . Example: For a Samsung TV While holding down the **POWER** button, use the number buttons to enter 00, 15, 16, 17 and 40.
- **4.** If the TV turns off, the setting is complete.
  - You can use the TV POWER, VOLUME, CHANNEL, and Numeric buttons (0~9).

## **◎** NOTE

- The remote control may not work on some brands of TV's. Also, some operations may not be possible, depending on your brand of TV.
- The remote control will work with Samsung TVs by default.

## TV Brand Code List

Brand	Codo
Brand	Code
Admiral (M.Wards)	56, 57, 58
A Mark	01, 15
	01, 02, 03, 04, 05,
Anam	06, 07, 08, 09, 10,
	11, 12, 13, 14
AOC	01, 18, 40, 48
Bell &	57, 58, 81
Howell (M.Wards)	07,00,01
Brocsonic	59, 60
Candle	18
Cetronic	03
Citizen	03, 18, 25
Cinema	97
Classic	03
Concerto	18
Contec	46
Coronado	15
Craig	03, 05, 61, 82, 83, 84
Croslex	62
Crown	03
Curtis	59, 61, 63
Mates	03
0/10	
	17, 18, 19, 20, 21,
Daewoo	22, 23, 24, 25, 26,
	02, 03, 04, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 32, 34, 35, 36, 48, 59, 90
Daytron	40
Dynasty	03
Emerson	03, 15, 40, 46, 59, 61, 64, 82, 83, 84, 85
Fisher	19, 65
Funai	03
Futuretech	03
General	
Electric (GE)	06, 40, 56, 59, 66, 67, 68
Hall Mark	40
Hitachi	15, 18, 50, 59, 69
Inkel	45
JC Penny	56, 59, 67, 86
JVC	70
KTV	59, 61, 87, 88
KEC	03, 15, 40
KMC	15
LG	01, 15, 16, 17, 37, 38,
(Goldstar)	01, 15, 16, 17, 37, 38, 39, 40, 41, 42, 43, 44
Luxman	18
LXI	19, 54, 56, 59, 60, 62, 63, 65, 71
(Sears)	60, 62, 63, 65, 71
Magnavox	15, 17, 18, 48, 54, 59, 60, 62, 72, 89
Marantz	40, 54
Matsui	54
MGA	18, 40
	, .0


Code
18, 40, 59, 60, 75
18 18, 19, 20, 40, 59, 60
03
03
03
06, 07, 08, 09, 54, 66, 67, 73, 74
18
03, 15, 17, 18, 48, 54, 59, 62, 69, 90
15, 17, 18, 40, 48, 54, 62, 72
63, 66, 80, 91
15, 18, 59
40
06, 66, 67
17, 48, 56, 60, 61, 75
18, 59, 67, 76, 77, 78, 92, 93, 94
03, 19
40
00, 15, 16, 17, 40, 43, 46, 47, 48, 49, 59, 60, 98
19, 61, 65
03, 40, 60, 61
15, 18, 19
15, 57, 64
57, 58
50, 51, 52, 53, 55
03, 40
01
18
18, 40, 48, 54, 59, 60, 62
61, 95, 96
06
18
03, 15, 18, 25
18, 40 19, 57, 63, 71
18
59, 60, 69
15, 17, 18, 40, 48, 54, 60, 64
18
40
03
58, 79
01
03, 54

# Connections

This section involves various methods of connecting the product to other external components.

Before moving or installing the product, be sure to turn off the power and disconnect the power cord.

## Connecting the Speakers

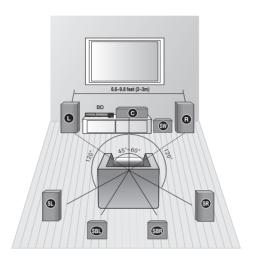

#### Position of the product

Place it on a stand or cabinet shelf, or under the TV stand.

#### Selecting the Listening Position

The listening position should be located about 2.5 to 3 times the distance of the TV's screen size away from the TV. Example: For 32" TV's  $6.56 \sim 7.87$  feet( $2\sim 2.4$ m)


For 55" TV's 11.5 ~ 13.1 feet(3.5~4m)


Front Speakers	Place these speakers in front of your listening position, facing inwards (about 45°) toward you. Place the speakers so that their tweeters will be at the same height as your ear. Align the front face of the front speakers with the front face of the center speaker or place them slightly in front of the center speakers.
Center Speaker C	It is best to install it at the same height as the front speakers. You can also install it directly over or under the TV.
Surround Speakers SD SR	Place these speakers to the side of your listening position. If there isn't enough room, place these speakers so they face each other. Place them about 2 to 3 feet (60 to 90cm) above your ear, facing slightly downward.  * Unlike the front and center speakers, the surround speakers are used to handle mainly sound effects and sound will not come from them all the time.
Surround Back Speakers SBD SBR	If you are using two rear center speakers, place them behind the listening position.  Place the surround back speaker about 2.3-3.3 feet (70 cm to 1 m).
Subwoofer SW	The position of the subwoofer is not so critical. Place it anywhere you like.


2

## **Speaker Components**

## **Assembled Speakers**

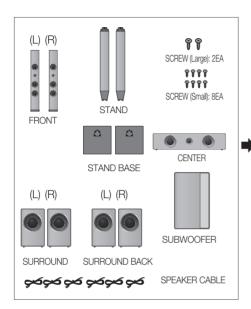

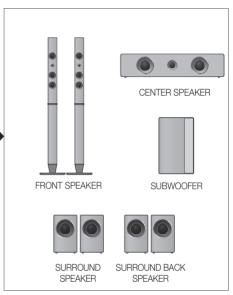

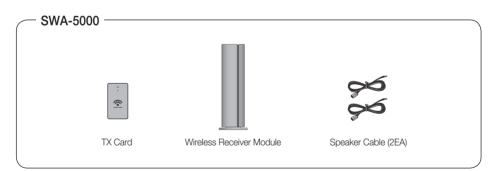


## **№** NOTE

Refer to page 20 to install the Speakers on the Tallboy Stand.

# Connections

## Installing the Speakers on the Tallboy Stand


1. Turn the Stand Base upside-down and connect it to the Stand.




2. Insert four small screws clockwise into the four holes marked using a screwdriver as shown in the illustration.



3. Connect the upper Speaker to the assembled Stand.





4. Insert another large screw clockwise into the hole on the rear of the speaker using a screwdriver.




## Connecting The Speakers

- 1. Press down the terminal tab on the back of the speaker.
- 2. Insert the black wire into the black terminal (–) and the red wire into the red (+) terminal, and then release the tab.
- 3. Connect the connecting plugs to the back of the product by matching the colors of the speaker plugs to the speaker jacks.
- 4. With the product turned off, insert the TX card into the TX Card Connection(WIRELESS) on the back of the product.
  - Hold the TX card so that the label "WIRELESS" faces upward and insert the card into the port.
  - The TX card enables communication between the product and the wireless receiver module
- 5. Connect the left and right surround speakers to the wireless receiver module.
- 6. Plug the power cord of the wireless receiver module in the wall outlet.
- 7. Turn on the product. The product and wireless receiver module will now communicate with each other and you will hear sound from the Surround speakers.

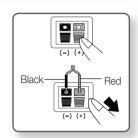

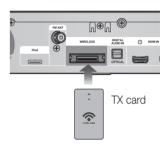

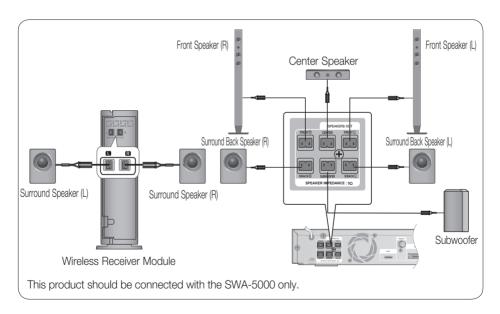

# Connections

#### ! CAUTION

- Do not let children play with or near the speakers. They could get hurt if a speaker falls.
- When connecting the speaker wires to the speakers, make sure that the polarity (+/-) is correct.
- Keep the subwoofer speaker out of reach of children so as to prevent children from inserting their hands or alien substances into the duct (hole) of the subwoofer speaker.
- Do not hang the subwoofer on the wall through the duct (hole).
- Do not insert any other card except the TX card dedicated to the product. If a different TX card is used, the product may be damaged or the card may not be removed easily.
- Do not insert the TX card upside down or in the reverse direction.
- Insert the TX card when the product is turned off. Inserting the card when it is turned on may cause a problem.
- The wireless receiving antenna is built into the wireless receiver module. Keep it away from water and moisture.
- For optimal listening performance, make sure that the area around the wireless receiver module location is clear of any obstructions.
- If no sound is heard from the wireless surround speakers, switch the mode to DVD 5.1 channel or Dolby Pro Logic II.
- In 2-CH mode, no sound will be heard from the wireless surround speakers.


## NOTE

- If you place a speaker near your TV set, screen color may be distorted because of the magnetic field generated by the speaker. If this occurs, place the speaker away from your TV set.
- Place the wireless receiver module at the rear of the listening position. If the wireless receiver module is too close to the product, some sound interruption may be heard due to interference.
- If you use a device such as a microwave oven, wireless LAN Card or any other device that uses the same frequency (2.4/5.8GHz) near the product, some sound interruption may be heard due to interference.
- The transmission distance from the product to the wireless receiver module is about 33 feet (10m), but may vary depending on your operating environment. If a steel-concrete wall or metallic wall is between the product and the wireless receiver module, the system may not operate at all. because the radio wave cannot penetrate metal.
- If the product doesn't make wireless connection, the system needs ID Setting between the product and wireless receiver module. With the product turned off, press the remote control's number buttons "0"→"1"→"3"→"5" and turn on the product. With the wireless receiver module turned on, press "ID SET" button on the back of the wireless receiver module for 5 seconds.

## Connecting External Devices/your TV via HDMI

HDMI is a standard digital interface for connection to such devices as a TV, projector, DVD player, Blu-ray player, set top box and more.

HDMI removes any loss of signal from analog conversion, enabling you to enjoy video and audio sound quality as it was originally created in the digital source.

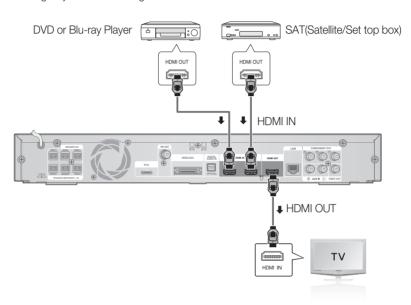

## HDMI OUT: Connecting to a TV with an HDMI Cable (BEST QUALITY)

Connect an HDMI cable (not supplied) from the HDMI OUT jack on the back of the product to the HDMI IN iack on your TV.

## NOTE

- Certain HDMI output resolutions may not work, depending on your TV.
- If an HDMI cable is connected or removed during playback of a CD-DA, MP3 or JPEG file, the product will stop playing.
- After making the video connection, set the Video input source on your TV to match the corresponding Video output (HDMI, Component or Composite) on your product.
  - See your TV owner's manual for more information on how to select the TV's Video Input source.
- If you have set the product's remote control to operate your TV, press the SOURCE button on the remote control and select HDMI as the external source of the TV.

# Connections

#### Connecting External Devices/your TV via HDMI

## HDMI IN: Connecting to an External Component with an HDMI Cable

- 1. Connect an HDMI cable (not supplied) from the HDMI IN jack on the back of the product to the HDMI OUT jack on your digital devices.
- 2. Press the FUNCTION button to select HDMI 1 or HDMI 2 input. The mode switches as follows: BD/DVD → D, IN → AUX → HDMI 1 → HDMI 2 → FM

#### **HDMI** Auto Detection Function

- 1. Using an HDMI cable, connect the HDMI OUT terminal on the rear of the player to the HDMI IN terminal of your TV.
- 2. Turn on the player and TV.

For possible HDMI resolutions, see page 32.


- This function is not available if the HDMI cable does not support CEC.
- HDMI connection description
  - HDMI outputs only a pure digital signal to the TV.
  - If your TV does not support HDCP, random noise appears on the screen.
- What is the HDCP?

HDCP (High-band width Digital Content Protection) is a system for preventing BD/DVD content outputted via HDMI from being copied. It provides a secure digital link between a video source (PC, DVD. etc) and a display device (TV, projector. etc). Content is encrypted at the source device to prevent unauthorized copies from being made.

## ! CAUTION

The Anynet+ function is supported only when an HDMI Cable is connected to the HDMI OUT of the product.

#### Connecting the Video Out to your TV

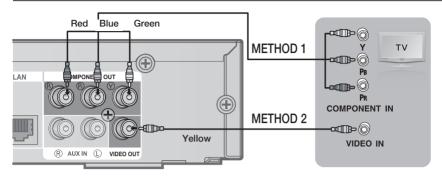

## METHOD 1: Component Video (BETTER QUALITY)

If your television is equipped with Component Video inputs, connect a Component video cable (not supplied) from the Component Video Output (Pr, Pb and Y) Jacks on the back of the product to the Component Video Input Jacks on your TV.

## NOTE

- You can select from a variety of resolution settings such as 1080i, 720p, 480p and 480i, depending on the disc type. (See page 32)
- The actual resolution may differ from the setting in the Setup menu if both Component and HDMI cables are connected. The resolution may also be different depending on the disc. (See page 32)
- After making the video connection, set the Video input source on your TV to match the corresponding Video output (HDMI, Component or Composite) on your product.
  - See your TV owner's manual for more information on how to select the TV's Video Input source.
- If you have set the product's remote control to operate your TV, press the TV SOURCE button on the remote control and select COMPONENT as the external source of the TV.
- In DVD playback, if both HDMI and Component jacks are connected and you select the Component 1080p, 1080i, 720p or 480p mode, the Display Setup menu will show the output resolution as 1080p, 1080i, 720p or 480p in the menu. The resolution is actually 480i.

## METHOD 2 : Composite Video (GOOD QUALITY)

Connect the supplied Video cable from the VIDEO OUT jack on the back of the product to the VIDEO IN jack on your TV.

## NOTE


- The VIDEO source is always output in 480i resolution regardless of the resolution set in the Setup menu. (See page 32)
- After making the video connection, set the Video input source on your TV to match the corresponding Video output (HDMI. Component or Composite) on your product.
  - See your TV owner's manual for more information on how to select the TV's Video Input source.
- If you have set the product's remote control to operate your TV, press the TV SOURCE button on the remote control and select VIDEO as the external source of the TV.

#### ! CAUTION

Do not connect the unit through a VCR. Video signals fed through VCRs may be affected by copyright protection systems and the picture will be distorted on the television.

# Connections

## **Connecting Audio from External Components**

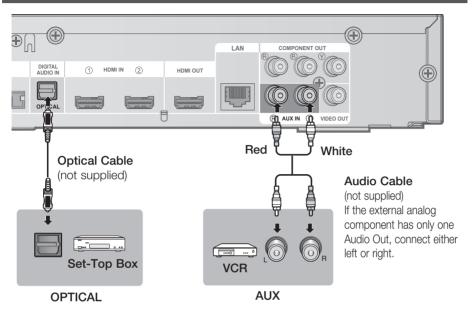

## **OPTICAL: Connecting an External Digital Component**

Digital signal components such as a Cable Box/Satellite receiver (Set-Top Box).

- Connect the Digital Input (OPTICAL) on the product to the Digital Output of the external digital component.
- 2. Press the **FUNCTION** button to select **D.IN** input.
  - The mode switches as follows : BD/DVD → D, IN → AUX → HDMI 1 → HDMI 2 → FM

## **<sup>®</sup>** NOTE

- To see video from your Cable Box/Satellite receiver, you must connect it's video output to a TV.
- This system supports Digital sampling frequencies of 32 kHz of higher from external digital components.
- This system supports only DTS and Dolby Digital audio, MPEG audio which is bitstream cannot be supported.

## AUX: Connecting an External Analog Component

Analog signal components such as a VCR.

- 1. Connect AUX IN (Audio) on the product to the Audio Out of the external analog component.
  - Be sure to match connector colors.
- 2. Press the **FUNCTION** button to select **AUX** input.
  - The mode switches as follows : BD/DVD → D. IN → AUX → HDMI 1 → HDMI 2 → FM



You can connect the Video Output jack of your VCR to the TV, and connect the Audio Output jacks of the VCR to this product.

## 26 English

2


## **Connecting to the Network**

This product enables you to view network based services (See pages 57~62) such as Internet@TV and BD-LIVE, as well as receive software upgrades when a network connection is made. We recommend using an AP (Access Point) or IP router for the connection.

For more information on router connection, refer to the user manual of the router or contact the router manufacturer for technical assistance.

#### Cable Network

- 1. Using the Direct LAN Cable (UTP cable), connect the LAN terminal of the product to the LAN terminal of your modem.
- 2. Set the network options. (See page 39)

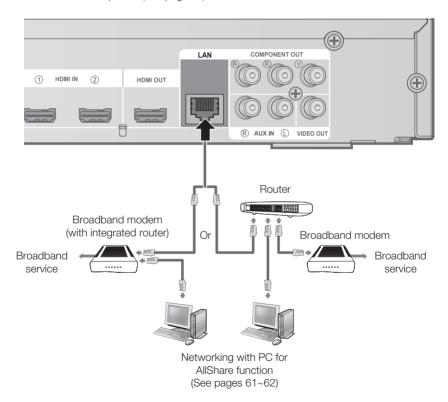


## **<sup>®</sup> NOTE**

- Internet access to Samsung's software update server may not be allowed, depending on the router you use or the ISP's policy. For more information, contact your ISP (Internet Service Provider).
- For DSL users, please use a router to make a network connection.
- For the AllShare function, a PC must be connected in the network as shown in the figure.

# Connections

## **Connecting to the Network**


## Wireless Network

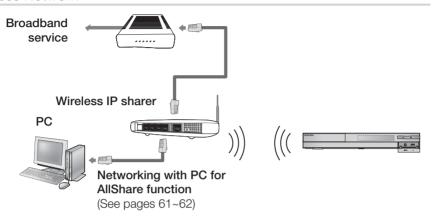

You can connect to network with a Wireless IP sharer. A wireless AP/IP router is required to make a wireless network connection. Set the network options. (See page 39)

## **™** NOTE

- You must use a wireless IP sharer that supports IEEE 802.11 a/b/g/n. (n is recommended for stable operation of the wireless network.)
- Wireless LAN, by its nature, may cause interference, depending on the use condition (AP performance, distance, obstacles, interference by other radio devices, etc).
- Set the wireless IP sharer to Infrastructure mode. Ad-hoc mode is not supported.
- When applying the security key for the AP (wireless IP sharer), only the following is supported.
  - 1) Authentication Mode: WEP, WPAPSK, WPA2PSK
  - 2) Encryption Type: WEP, TKIP, AES
- For the AllShare function, a PC must be connected in the network as shown in the figure.

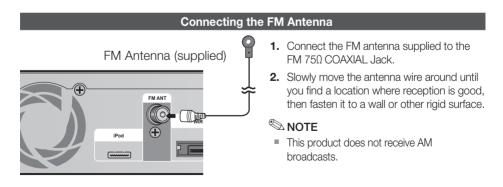

# Setup

## Before Starting (Initial Settings)

1. Turn on your TV after connecting the product. When the product is connected to TV for the first time, product will turn on automatically and the Initial Settings screen will be displayed.)



- 2. Press the ▲ ▼ buttons to select the desired language, then press the **ENTER** button.
- Press the ENTER button to select Start button.



 Press the ▲ ▼ buttons to select desired TV Aspect ratio, then press the **ENTER** button. (See page 31)

Musical Room Calibration screen will be displayed.

- 5. Plug the ASC microphone into the ASC IN jack on the product. (See page 35)
- 6. Press the ENTER button to select Start button.



Setting the Musical Room Calibration function takes about 3 minutes

7. Press the ◀▶ buttons to the select the desired Network Settings: Wired, Wireless or PBC (WPS), then press the **ENTER** button. (See pages 39~42)

The Network Test will start and Initial Settings will be completed.



8. Press the OK button. The home menu will be displayed. (For more information about home menu, please see page 30)

#### Home Menu




#### NOTE

- When the product is connected to TV for the first time, product will turn on automatically. Do not confuse because this is not malfunction.
- The home menu will not be displayed if you do not configure the initial settings.
- If you press the **BLUE(D)** button during the Musical Room Calibration/Network setup, you can access the home menu even if the network setup is not completed yet.
- When you return to home menu, the full screen mode will be cancelled automatically.

# Setup

- If you want to display Initial Settings screen again in order to make changes, press the STOP (■) button on the front panel of the product for more than 5 seconds with no disc inserted.
- Use the HDMI cable to connect the product to an Anynet+(HDMI-CEC)-compliant Samsung TV. If the TV uses a language supported by the product, that language will be set to a preferred language automatically. However, the Anvnet+(HDMI-CEC) feature should be set to **0n** in both TV and the product
- If the product is left in the stop mode for more than 5 minutes without being operated, a screen saver will appear on your TV. If the product is left in the screen saver mode for more than 25 minutes, the power will automatically turn off except during playback of a CD-DA (Automatic Power-Off Function).

## Setting the Menu

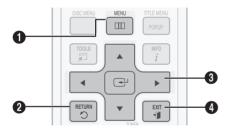


- MENU Button: Press this to move to the home menu.
- 2 **RETURN** Button: Return to the previous menu.

#### **ENTER / DIRECTION** Button:

- Press the arrow buttons to move the cursor and select 6
  - Press the ENTER button to launch the selected item or confirm the setting.
- 4 EXIT Button: Press this to exit the menu.

1. Press the **POWFR** button The Home Menu will appear.

#### Home Menu

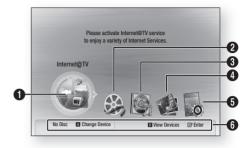

- Selects the Internet@TV. a
- 2 Selects the Videos.
- Selects the Music 6
- 4 Selects the Photos.
- 6 Selects the Settings.
- 6 Displays buttons available.
- 2. Press the ◀▶ buttons to select Settings. then press the **ENTER** button.
- 3. Press the ▲ ▼ buttons to select the desired submenu, then press the **ENTER** button.
- 4. Press the ▲ ▼ buttons to select the desired item, then press the ENTER button.
- 5. Press the **EXIT** button to exit the menu.

#### **◎** NOTE

- When the product is connected to the network, select Internet@TV from the home menu. Download desired content from Samsung AppS.
- The access step may differ depending on the selected menu.
- The OSD (On Screen Display) may change in this product after upgrading the software version.

#### **Display**

You can configure various display options such as the TV Aspect, Resolution, etc.

## TV Aspect

Depending on the type of television you have, you may want to adjust the screen setting.

#### • 16:9 Normal



Certain movies(4:3 source) will be displayed in 4:3 Pillarbox (black bars on sides of picture) if 16:9 normal is selected.

#### • 16:9 Wide



You can view the full 16:9 picture on your widescreen TV.

#### 4:3 Letter Box



Select when you want to see the total 16:9 ratio screen a Blu-ray Disc/DVD supplies. even though you have a TV with a 4:3 ratio screen. Black bars will appear at the top and bottom of the screen.

#### 4:3 Pan-Scan



Select when you want to see the 16:9 video supplied by the Blu-ray Disc/DVD without the black bars on top and bottom. even though you have a TV with a 4:3 ratio screen(extreme left and right portion of the movie picture will be cut off).

## NOTE

- Depending on the disc type, some aspect ratios may not be available.
- If you select an aspect ratio and option which is different than the aspect ratio of your TV screen, then the picture might appear to be distorted.
- If you select the 4:3 Pan-Scan or 4:3 Letter Box, you can't see full screen by pressing the FULL **SCREEN** button on the remote control.

If you select the 16:9 Normal, 4:3 Pillarbox may be displayed. In this case, you can't see full screen by pressing the **FULL SCREEN** button on the remote control.

## BD Wise (Samsung Products only)

BD Wise is Samsung's latest inter-connectivity feature. When you connect Samsung products with BD-Wise to each other via HDMI, the optimum resolution will be set automatically.

- Off: The output resolution will be fixed according to the Resolution previously set, regardless of the resolution of the disc.
- On: The original resolution of the BD/DVD disc will be output to the TV.

#### ⊗ NOTE

- If you want to change the resolution in BD Wise, you must set BD Wise to Off in advance.
- If you set off the BD Wise, the resolution of the connected TV will be adjusted to its maximum. resolution automatically.
- If the product is connected to a device that does not support BD Wise, you can not use BD Wise function.
- For a proper operation of BD Wise, set the BD Wise menu of both the product and the TV to **0n**.

## Resolution

Sets the output resolution of the Component and HDMI video signal.

The number in 1080p, 1080i, 720p, 480p, 480i indicates the number of lines of video.

The i and p indicate interlace and progressive scan, respectively.

- Auto : It automatically checks and sets the optimal resolution. (HDMI only)
- BD Wise: Automatically sets the optimal resolution when connected via HDMI to a TV with the BD Wise feature. (The BD Wise menu item. appears only if BD Wise is set to On.) (HDMI only)
- 1080p: Outputs 1080 lines of progressive video. (HDMI only)
- 1080i: Outputs 1080 lines of interlaced video.
- **720p**: Outputs 720 lines of progressive video.
- 480p: Outputs 480 lines of progressive video.
- 480i : Outputs 480 lines of interlaced video. (Component & VIDEO only)



#### Resolution according to the output mode

#### • Blu-ray Disc playback

Output	HDMI / connected		HDMI / not connected	
Setup	HDMI Mode	Component/VIDEO Mode	Component Mode	VIDEO Mode
Auto	Optimal Resolution	480i	-	-
1080p, Movie Frame(24Fs) off	1080p@60F	480i	-	-
1080p/1080i, Movie Frame(24Fs) on	1080p@24F	480i	-	-
1080i, Movie Frame(24Fs) off	1080i	480i	1080i	480i
720p	720p	480i	720p	480i
480p	480p	480i	480p	480i
480i	-	-	480i	480i

#### · DVD playback

	Output	HDMI / connected		HDMI / not connected	
Setup		HDMI Mode	Component/VIDEO Mode	Component Mode	VIDEO Mode
Auto		Optimal Resolution	480i	-	-
1080p		1080p@60F	480i	-	-
1080i		1080i	480i	480p	480i
720p		720p	480i	480p	480i
480p		480p	480i	480p	480i
480i		-	-	480i	480i

#### **◎ NOTE**

- If the connected TV does not support Movie Frame or the selected resolution, the message "If no pictures are shown after the selection, please wait for 15 seconds. And then, the resolution will be reverted to the previous value automatically. Would you like to make a selection?" will be displayed. If you select **Yes** and the resolution is not supported, the TV's screen will be blank. Please wait for 15 seconds and the resolution will be reverted to the previous value automatically.
- If the screen is blank, press and hold the STOP (■) button on the front of the product for more than 5 seconds (no disc inserted). All settings are restored to the factory default. Follow the steps on the previous page to access each mode and select the Display Setup that your TV will support.

- When the factory default settings are restored, all the user data stored in the BD data will be deleted.
- The Blu-ray Disc must have the 24 frame feature in order to use the Movie Frame (24Fs) mode.
- If both HDMI and Component jacks are connected and you are currently viewing component output, there is a difference between resolution table and actual resolution depending on your TV.
- If the HDMI Auto Detection feature does not work, you can't select the 1080p resolution or Movie Frame (24Fs).

## **HDMI** Format

You can optimize the color setting from the HDMI output. Select a connected device Type.

- TV · Select if connected to a TV via HDMI
- Monitor: Select if connected to a Monitor via HDMI.

## **◎** NOTE

 A TV or monitor has to be connected to the product before you select this option.

## Movie Frame (24 Fs)

Setting the Movie Frame (24Fs) feature to On allows you to adjust the product's HDMI output to 24 frames per second for improved picture quality. You can enjoy the Movie Frame (24Fs) feature only on a TV supporting this frame rate. This menu can only be selected in 1080i or 1080p HDMI output resolution modes.

- Off: Movie Frame (24Fs) functions will not work.
- On: Movie Frame (24Fs) functions will work.

## NOTE

- Two types of frame rates may be included, depending on the disc: Movie material (24 frame) and Video material (30 frame). When the setting switches between Movie (24 frame) and Video (30 frame), the screen may blink for a few seconds.
- If your TV does not support Movie Frame (24Fs) function, the pop-up message will be displayed.

## **Progressive Mode**

Set to improve picture quality when viewing DVDs.

- Auto : Select this to have the product automatically set the best picture for the DVD you're watching.
- Video: Select this for the best picture from Concert or TV show DVDs.

#### Still Mode

Set the type of picture shown when you pause DVD playback.

- Auto: Automatically set the best still picture depending on the content.
- Frame: Select when pausing a scene with a little action.
- Field: Select when pausing a scene with a lot of action.

## **HDMI Deep Color**

Set to output the picture from the HDMI OUT jack with Deep Color or not, Deep Color allows more accurate color reproduction with deeper color depth.


- Auto: The picture will be output with Deep Color to the connected TV which supports HDMI Deep Color.
- Off: The picture will be output without Deep Color.

#### Audio

## Speaker Setting

#### **DPL IIz**

- Off: Select when you place the Surround Back speakers as shown.
- On: Provide a more realistic 3D surround sound with vertical surround system.

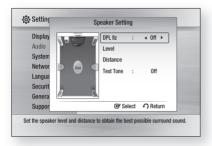

#### Level

You can adjust the balance and level for each speaker.

#### Adjusting Front/Center/Surround /Surround Back/Subwoofer Speaker Level


- The volume level can be adjusted in steps from +6dB to -6dB.
- The sound gets louder as you move closer to +6dB and guieter as you get closer to -6dB.



#### Distance

If the speakers cannot be placed at equal distances from the listening position, you can adjust the delay time of the audio signals from the front, center, surround, surround back and subwoofer speakers.

 You can set the Speaker Distance between 1ft(0.3m) and 30ft(9.0m).

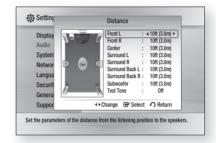

#### **Test Tone**

Use the Test Tone feature to check the speaker connections.

Press the ◀. ▶ buttons to select All.

 A test tone will be sent to Front Left → Center → Front Right → Surround Right → Surround Back L → Surround Back R → Surround Left → Subwoofer in order so you can make sure the speakers are set up correctly.

To stop the test tone, press the ◀, ▶ buttons to select Off.






When HDMI Audio is ON (audio is produced through TV speakers), the Test Tone function is not available.

#### Musical Room Calibration

By setting the Musical Room Calibration (MRC) function just once when you relocate or install the product, you can have the product automatically recognize the distance between speakers, levels between channels, and frequency characteristics to create a 7.1-channel sound field optimized for your environment.

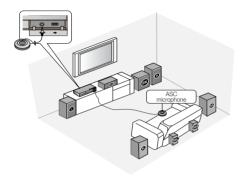

## Musical Room Calibration

You will hear either the Musical Room Calibration mode or the User Speaker Settings.

- Off: You will hear sound in the the Speaker Setting value.
- On: You will hear sound in the Musical Room Calibration mode.

## Musical Room Calibration Setting

- 1. Plug the ASC microphone into the ASC IN jack.
- **2.** Place the ASC microphone at the listening position.
  - Musical Room Calibration will be automatically set up in the following sequence:

Front Left → Center → Front Right → Surround Right → Surround Back L →Surround Back R → Surround Left → Subwoofer

- Press the RETURN button to cancel the Musical Room Calibration Setting.
- When the message "REMOVE MIC" appears in the display, unplug the ASC microphone.

## **™** NOTE

- Setting the Musical Room Calibration. function takes about 3 minutes.
- The Musical Room Calibration setup can be made when there is no disc in the product.
- If the ASC microphone is disconnected during the Musical Room Calibration setup, the setup will be canceled
- When the Musical Room Calibration function is activated, the DSP, Dolby Pro Logic II and SFE Mode will not work.
- If the product is connected to external devices or other components (such as an iPod. AUX. D.IN). the Musical Room Calibration Setup may not work properly.

## **EQ** Optimizer

Set optimal EQ automatically depending on the region.

- Off: Turn EQ Optimizer off.
- On: Turn EQ Optimizer on.

#### **HDMI** Audio

The audio signals transmitted over the HDMI Cable can be toggled On/Off.

- Off: Video is transmitted over the HDMI. connection cable only, and audio is output through your product speakers only.
- On: Both video and audio signals are transmitted over the HDMI connection cable. and audio is output through your TV speakers only.

## NOTE

 HDMI Audio is automatically down-mixed to 2ch for TV speakers.

## **Digital Output**

Set Digital output depending on the connected receiver. (For more details, please refer to the digital output selection)

- PCM
- Bistream(Re-encode)
- Bistream(Audiophile)

Blu-ray Discs may include three audio streams.

- Primary Audio: The audio soundtrack of the main feature.
- Secondary Audio : Additional soundtrack such as director or actor's commentary.
- Interactive Audio: Interactive sounds will be heard when selected. Interactive Audio is different on each Blu-ray Disc.

## **◎** NOTE

- Be sure to select the correct Digital Output or you will hear no sound or a loud noise.
- If the HDMI device (Receiver, TV) is not compatible with compressed formats (Dolby digital, DTS), the audio signal outputs as PCM.
- Secondary and Effect audio will not be heard with regular DVDs.
- Some Blu-ray Discs do not have Secondary and Effect audio.
- This Digital Output setup does not effect the analog (L/R) audio or HDMI audio output to your TV. It effects the optical and HDMI audio output when

connected to a receiver.

 If you play MPEG audio soundtracks, audio signal outputs PCM regardless of Digital Output Selections (PCM or Bitstream).

## **Digital Output Selection**

Setup		PCM		Bitstream (Re-encode)	Bitstream (Audiophile)	
Connection		HDMI Receiver	Optical	HDMI Receiver or Optical	HDMI Receiver	Optical
Audio Stream on Blu-ray Disc	PCM	Up to 7.1ch	PCM 2ch	DTS re-encoded	PCM	PCM 2ch
	Dolby Digital	Up to 5.1ch	PCM 2ch	DTS re-encoded	Dolby Digital	Dolby Digital
	Dolby Digital Plus	Up to 7.1ch	PCM 2ch	DTS re-encoded	Dolby Digital Plus	Dolby Digital
	Dolby TrueHD	Up to 7.1ch	PCM 2ch	DTS re-encoded	Dolby TrueHD	Dolby Digital
	DTS	Up to 6.1ch	PCM 2ch	DTS re-encoded	DTS	DTS
	DTS-HD HRA	Up to 7.1ch	PCM 2ch	DTS re-encoded	DTS-HD HRA	DTS
	DTS-HD MA	Up to 7.1ch	PCM 2ch	DTS re-encoded	DTS-HD MA	DTS
Audio Stream on DVD	PCM	PCM 2ch	PCM 2ch	PCM 2ch	PCM 2ch	PCM 2ch
	Dolby Digital	Up to 5.1ch	PCM 2ch	Dolby Digital	Dolby Digital	Dolby Digital
	DTS	Up to 6.1ch	PCM 2ch	DTS	DTS	DTS
Definition for Blu-ray Disc	Any	Decodes Primary, Secondary and Effect audio streams together into PCM audio.  Decodes Primary, Secondary and Effect audio streams together into PCM audio, then re-encodes the PCM audio into DTS hitstream the audio into DTS hitstream.		Outputs only the soundtrack (main movie) so that your r the audio bitstream Secondary and	soundtrack of the receiver can decode n. You will not hear	

## **Dynamic Range Control**

You can listen at low volumes but still hear dialog clearly. This is only active when a Dolby Digital signal is detected.

- Off: You can enjoy the movie with the standard Dynamic Range.
- On: When Movie soundtracks are played at low volume or from smaller speakers, the system can apply appropriate compression to make low-level content more intelligible and prevent dramatic passages from getting too loud.

## **AV Sync**

Video may look slower than the audio when the product is connected to a digital TV. If this occurs, adjust the audio delay time to match the video.

• You can set the audio delay time between 0 msec and 300 msec. Set it to the optimal status.

#### **System**

## **Initial Settings**

By using the Initial Settings, you can set language, TV aspect, Musical Room Calibration and Network setting, etc.

For more information on the settings, refer to the corresponding section in this user manual.

## Internet@TV Screen Size

Set the Internet@TV Screen to the optimal size.

- Size 1 : Display smaller application icons, you may see some black on sides of screen.
- Size 2: Display normal application icons, image may be too large for your TV screen.
- Size 3: Display larger application icons, image may be too large for your TV screen.

## Anynet+(HDMI-CEC)

Anynet+ is a convenient function that offers linked operations with other Samsung products with the Anvnet+ feature.

To operate this function, connect this product to a Samsung TV with an HDMI cable.

You can operate this product using a Samsung TV remote control and start disc playback simply by pressing the **PLAY** (▶) button on the TV's remote control.

For more information, please see the TV user manual.


- Off: Anynet+ function will not work.
- On: Anvnet+ functions will work.

#### NOTE

- This function is not available if the HDMI cable does not support CEC.
- If your Samsung TV has an Anynet+ logo, then it supports the Anynet+ function.
- Depending on your TV, certain HDMI output resolutions may not work.
  - Please refer to the user manual of your TV.
- The Anynet+ function is supported only when an HDMI Cable is connected to the HDMI OUT of the product.

## **BD Data Management**

Enables you to manage the downloaded contents from a Blu-ray Disc that supports the BD-LIVE service. You can check the device information including the storage size, delete the BD data or change the Flash memory device. Change Device allows you to select either the product's Internal Memory or External Memory (connected USB Device). If the data to be stored from BD-LIVE is greater than the size of the remaining memory or the Internal Memory is full, connect an External USB device, then select External Device in the menu.

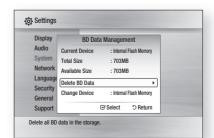

## Setup

#### Description of Device(Storage) Information on the Product

- Total Size: Total size of the Device (Storage).
- Available Size: Available size of the Device (Storage).

#### **◎ NOTE**

- In the external memory mode, disc playback will be stopped if you disconnect the USB device in the middle of the playback.
- Only those USB devices formatted in FAT file system (DOS 8.3 volume label) are supported. and it is recommended to use USB devices that support USB 2.0 protocol, 4 MB/sec or faster read/write speed.
- A USB HDD device cannot be used for BD Data storage (BD-LIVE).
- The Resume Play function may not work after formatting the storage device.
- The total size of BD Data Management may differ, depending on the software version.

#### Clock

Set time-related functions.



- Clock Mode: You can select Auto or Manual. If you select Manual, the Clock Set menu will be activated while **DST** will be deactivated.
- Clock Set: You can specify the current time and date manually.
- Time Zone: You can specify the time zone that is applicable to your area.
- DST: You can set DST (Daylight Saving Time) 1 hour, 2 hour and off.

## DivX (R) Registration

View DivX(R) VOD Registration Code to purchase and play DivX(R) VOD content.



#### NOTE

This option is not activated if you select OK. To activate this option, please activate the DivX(R) Deactivation.

## DivX(R) Deactivation

Select this to get a new registration code.





 This function can be operated when DivX(R) Registration function is deactivated.

#### **Network Setup**

To begin setting up the network connection for your product, follow these steps:

- 1. In the Home menu, press the ◀▶ buttons to select the Settings, and then press the **ENTER** button.
- 2. Press the ▲ ▼ buttons to select Network. and then press the **ENTER** button.
- 3. Press the ▲ ▼ buttons to select **Network** Settings, and then press the ENTER button.
- 4. Press the ▲ ▼ buttons to select Network Type, and then press the ENTER button.
- Press the ▲ ▼ buttons to select Wired or Wireless, and then press the ENTER button.
- 6. Go to the next section.

## **Network Settings**

Please contact your ISP to find out if your IP address is static or dynamic. If it is dynamic, we recommend using the Auto setting. This is the easiest and will work in the majority of cases. If it is static, you must use the manual set up procedure. Directions for wired networks are below. Directions for wireless networks are after the directions for wired networks.

#### Wired Network


- 1. In the Network Settings menu, press the ▲ ▼ buttons to select **Network Settings**. and then press the ENTER button. The Internet Protocol Setup screen appears.
- 2. Press the ▶ button, then select Auto or Manual, and then press the ENTER button.

#### Setting Up a Wired Connecton - Auto

1. If you selected Auto, the Network Function acquires and fills in the values for IP Address. Subnet Mask, etc., automatically.



This process can take up to five minutes.

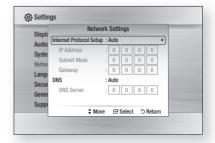

- 2. After the Network Function has acquired the network values, press the **RETURN** button. Then, run a Network Test to ensure the product has connected to your network (See page 42).
- 3. If the Network Function does not acquire the network values or you selected Manual, go to the directions for Manual Setup.

#### Setting Up a Wired Connecton - Manual

If the Auto Setting does not work, vou'll need to set the Network Setting values manually.


To get the Network setting values from most Windows computers, follow these steps:

- 1. Right click the Network icon on the bottom right of the screen.
- 2. In the pop-up menu, click Status.
- 3. On the dialog that appears, click the Support tab.
- 4. On the Support tab, click the Details button. The Network settings are displayed.

To enter the Network settings into your product, follow these steps:

- 1. On the Internet Protocol Setup screen, press the **ENTER** button.
- 2. Press the ▲ ▼ buttons to select Manual, and then press the ENTER button.
- 3. Press the ▼ button to go to the first entry field (IP Address).

## Setup

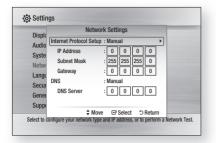

- **4.** Use the number buttons on your remote to enter numbers.
- When done with each field, use the ► button to move successively to the next field.

You can also use the other arrow buttons to move up, down, and back.

- **6.** Enter the **IP Address**, **Subnet Mask**, and **Gateway** values.
- **7.** Press the **▼** button to go to **DNS**.
- **8.** Press the ▼ button to go to the first DNS entry field. Enter the numbers as above.
- **9.** Press the **RETURN** button on your remote.
- Run a Network Test to ensure the product has connected to your network (See page 42).

#### Wireless Network

You can setup the wireless network three ways:

- Using PBC (WPS)
- Using the Auto Network Search function.
- Manually.

Each method is described below.

## Setting Up the Wireless Network Connection - PBC (WPS)

The easiest way to set up the wireless network connection is using the PBC (WPS) function. If your wireless router has a PBC (WPS) button, follow these steps:

In the Network Settings menu, press the
 ▼ buttons to select Network Settings, and then press the ENTER button.
 The Internet Protocol Setup screen appears.

- Press the RED(A) button on the remote control.
- 3. Press the PBC (WPS) button on your router within two minutes. Your product displays the Network Selection Screen, and automatically acquires all the network setting values it needs and connects to your network. When it is done, it displays an OK button. Press the ENTER button on your remote.
- After the network connection is set up, press the RETURN button to exit the Network Setting screen.

## Setting Up the Wireless Network Connection - Auto Network Search

Most wireless networks have an optional security system that requires devices that access the network to transmit an encrypted security code called an Access or Security Key. The Security Key is based on a Pass Phrase, typically a word or a series of letters and numbers of a specified length you were asked to enter when you set up security for your wireless network. If you use this method of setting up the network connection, and have a Security Key for your wireless network, you will have to enter the Pass Phrase during the setup process.

## Setting Up the Network Connection

To set up the wireless connection using Auto Network Search, follow these steps:

- Press the ▲ ▼ buttons to select the Internet Protocol Setup, and then press the ENTER button.
- Press the ▲ ▼ buttons to select Auto or Manual, and then press the ENTER button.
- If you selected Auto, press the ▲ button to go to Access Point Selection, and then press the ENTER button.

The Network function searches for available wireless networks.

When done, it displays a list of the available networks.

- 5. In the list of networks, press the ▲ ▼ buttons to select a network, and then press the **ENTER** button.
- 6. If the PIN/Security pop-up appears, go to Step 7. If the Network Connecting Screen appears, go to Step 11.
- 7. Press the ▲ ▼ buttons to select PIN or Security. For most home networks, you would select Security (for Security Key).
- 8. On the Security screen, enter your network's Pass Phrase.

### **◎** NOTE

- You should be able to find the Pass Phrase on one of the set up screens you used to set up your router or modem.
- 9. To enter the Pass Phrase, follow these general directions:
  - Press the number kevs on your remote to enter numbers.
  - Use the arrow kevs on your remote to move from button to button on the Security Key screen.
  - To enter letters, move to the button labeled a/A/1/★, and then press the ENTER button. Each time you press the ENTER button, you change the kind of characters you can enter (a/A/1/★).
  - To enter a letter, press the number button that corresponds to the letter. Pressing the button repeatedly changes the letter.
  - To delete the last letter or number you entered, move to the **Delete** button, and then press the ENTER button.
  - To clear all entered letters and numbers. move to the Clear key, and then press the ENTER button. You can also just press the RED(A) button on your remote.

- 10. When done, press the YELLOW(C) button on your remote, or move to the Done button, and then press the ENTER button. The Network Connecting screen appears.
- **11.** Wait until the connection confirmation message is displayed, and then press the **ENTER** button. The Network Settings screen reappears.
- **12.** To test the connection, press the ▼ button to select **Network Test**, and then press the **ENTER** button.


#### Setting Up the Wireless Network **Connection - Manual**

If the Auto Setting does not work, you need to enter the Network setting values manually. To get the Network setting values from most Windows computers, follow these steps:

- Right click the Network icon on the bottom right of the screen.
- 2. In the pop-up menu, click Status.
- 3. On the dialog that appears, click the Support tab.
- 4. On the Support tab, click the Details button. The Network settings are displayed.

To Enter the Network settings into your product, follow these steps:

- 1. On the Internet Protocol Setup screen, press the ENTER button.
- 2. Press the ▲ ▼ buttons to select Manual, and then press the ENTER button.
- **3.** Press the ▼ button to go to the first entry field (IP Address).
- 4. Use the number buttons to enter numbers.

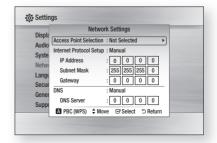

## Setup

- 5. When done with each field, use the button to move successively to the next field
  - You can also use the other arrow buttons to move up. down, and back.
- 6. Enter the IP Address. Subnet Mask. and Gateway values.
- 7. Press the ▼ to go to DNS.
- 8. Press the ▼ button to go to the first DNS entry field. Enter the numbers as above.
- When done, press the ▲ button to return to Access Point Selection. Select the network. and then press the ENTER button.
- 10. Go to Step 6 in the Automatic Wireless procedure above, and follow the directions from that point on.

#### **Network Test**

Use this menu to connect the wired network or check whether your network connection is working or not.



## **Network Status**

Check whether a connection to the network and the Internet have been established.

#### **BD-LIVE Internet Connection**

Set whether to allow internet connection when BD-LIVE service is used.

- Allow (All): The Internet connection will be allowed for all BD-LIVE contents.
- Allow (Valid Only): The Internet connection will be allowed only for BD-LIVE contents containing a valid certificate.
- Prohibit: No Internet connection will be allowed for any BD-LIVE content.

#### NOTE

- What is a valid certificate?
  - When the product uses BD-LIVE to send the disc data and request to the server to certify the disc, the server uses the transferred data to check if the disc is valid and sends the certificate back to the product.
- The Internet connection may be restricted. while you are using BD-LIVÉ contents.

#### Language

You can select the language you prefer for home menu, disc menu, etc.

- On-Screen Menu: Select the language for the on-screen displays.
- Disc Menu: Select the language for the disc menu displays.
- Audio: Select the language for disc audio.
- Subtitle: Select the language for disc subtitles.



The selected language will only appear if it is supported on the disc.

8


#### Security

When you operate this menu for the first time. password setup screen will be displayed. Enter the desired 4-digit password using the number buttons. (Default password is set to 0000.)

## **Parental Rating**

This function works in conjunction with Blu-ray Disc/DVDs that have been assigned a rating. which helps you control the types of Blu-ray Disc/ DVDs that your family watches.

Select the rating level you want to set. A larger number indicates that the program is intended for adult use only. For example, if you select up to Level 6, discs that contain Level 7, 8 will not play.

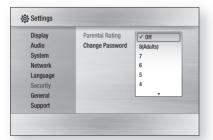

## **Change Password**

Change the 4-digit password used to access security functions.



## If you forgot your password

- 1. Remove the disc.
- 2. Press and hold the STOP ( ) button on the front panel for 5 seconds or more. All settings will revert to the factory settings.

#### **<a>♥ NOTE**</a>

When the factory default settings are restored, all the user data stored in the BD data will be deleted.

#### General

### Background

Change the background theme of the menu screen.



## **Energy Saving**

You can reduce power consumption by setting the front panel to turn off automatically when there is no operation for 5 seconds.

- Off: Energy Saving function is not used.
- On: The front panel will automatically turn off when there is no operation for 5 seconds.

## Front Display

Change the brightness of the front panel.

- Auto : Dim during playback only.
- Dim: Dim the display window.
- Bright: Brighten the display window.

#### Power On/Off Sound

Play a melody when the product is turned on and off.

- Off: Turn Power Sound Off.
- On: Turn Power Sound On.

## Light Effect

You can activate or deactivate the light effect on the top of the product.

- Always On : Activate Light Effect at all times. Select this for retail display.
- Auto : Activate Light Effect when turning the product on and off or when moving the tray. Select when installing the product in your home.
- Off: Turn Light Effect off at all times.

Setup

#### Support

## Software Upgrade

This menu allows you to upgrade software for performance improvements or additional services. You can check the current software version. upgrade by internet and set the Auto upgrade notification. If the product is properly connected to the network by cable or wirelessly, the product will automatically connect to our website each time it is turned on and download update files if any valid upgrade exists.



- 1. To select By Internet, press the ENTER button.
  - A popup message will appear if an update is available.
- 2. If you select Yes, the product will turn off automatically before restarting. (Never turn it on manually.)
- 3. The update progress popup will appear. When the update is completed, the product will turn back off automatically.
- 4. Press the **POWER** button to turn on the product.

## **◎ NOTE**

- The Update will be completed when the product turns off after restarting. Press the **POWER** button to turn on the updated product for your use. Never turn off or on the product manually during the update process.
- Samsung Electronics shall take no legal responsibility for product malfunction caused by unstable of internet connection or consumer negligence during software upgrade.

You can update software in any of the two ways as follows: Software update is the same as in the By Internet menu.

- USB: Visit www.samsung.com/bluraysupport, then download and store the latest software (RUF file) into the USB flash drive. Connect the USB flash drive to the USB port of the product (disc tray must be empty) to update the software, then follow the on-screen instructions.
- CD: Visit www.samsung.com/bluravsupport. download and write the latest software (RUF file) onto a disc. Insert and play the disc in the product to start the update, then follow the onscreen instructions.

#### NOTE

- Software upgrades using the USB Host jack must be performed with no disc inside.
- If you want to cancel the upgrade in the process of downloading the upgrade data, press the ENTER button.
- When the system upgrade is done, check the software details in the software Upgrade menu.
- Do not turn off the product during the System Upgrade, as it may cause the product to not work properly.
- Do not use USB devices other than USB Flash. Drives to do software upgrades when using the USB Host iack.

## Contact Samsung

Provide contact information for assistance with your product.

#### Plaving a Disc

## Playback

- 1. Press the OPEN/CLOSE (▲) button to open the disc tray.
- 2. Place a disc gently into the tray with the disc's label facing up.
- 3. Press the PLAY (▶) button or OPEN/ **CLOSE** (▲) button to close the disc tray.

#### Playback related buttons

PLAY (►)	Starts playback.	
STOP(■)	Stops playback.  If pressing the button once: The stop position will be memorized.  If pressing the button twice: The stop position will be not memorized.	
	(With some Blu-ray discs (BD-J), this function may not work.)	
PAUSE ( II )	Pauses playback.	

## **<sup>®</sup> NOTE**

"Not Available" will appear when an invalid button is pressed.

#### **Disc Structure**

The contents of disc are usually divided as below.

#### • Blu-ray Disc, DVD-VIDEO



#### Audio CD (CD-DA)

#### . MP3, WMA, DivX, MKV and MP4



## Using the Disc menu / Title menu / Popup menu

## Using the Disc Menu





- 1. During playback, press the DISC **MENU** button on the remote control.
- 2. Press the ▲▼◀ ▶ buttons to make the desired selection, then press the **ENTER** button.





Depending on the disc, the menu items may differ and this menu may not be available.

## Using the Title Menu



- 1. During playback, press the TITLE **MENU** button on the remote control
- 2. Press the ▲ ▼ ◀ ▶ buttons to make the desired selection, then press the **ENTER** button.



### **S** NOTE

- Depending on the disc, the menu items may differ and this menu may not be available.
- The Title Menu will only be displayed if there are at least two titles on the disc.

## Playing the Title List



- 1. During playback, press the DISC MENU or TITLE MENU button.
- 2. Press the ▲ ▼ buttons to select an entry you want to play from Title List, then press the **ENTER** button.



## Using the Popup Menu



- 1. During playback, press the POPUP button on the remote control.
- 2. Press the ▲ ▼ ◀ ▶ buttons or **ENTER** button to select the desired menu.



#### NOTE

Depending on the disc, the menu items may differ and this menu may not be available.

#### **Using the Search and Skip Functions**

During playback, you can search guickly through a chapter or track, and use the skip function to iump to the next selection.

## Searching for a Desired Scene











 During playback, press the SEARCH (◄ button.

Each time you press the **SEARCH** (◀ ▶ ) button, the playback speed will change as follows.

BD-ROM, BD-RE/-R, DVD-RW/-R, DVD+RW/+R, DVD-VIDEO	
DivX, MKV, MP4	<b>▶</b> 1 → <b>▶</b> 2 → <b>▶</b> 3 <b>◄</b> 1 → <b>◄</b> 2 → <b>◄</b> 3

• To return to normal speed playback, press the **PLAY** (▶) button.



No sound is heard during search mode.

## **Skipping Chapters**











 During playback, press the SKIP (I◄◄►►I) button.

If you press the **SKIP** (►►I) button, it moves to the next chapter.

If you press the **SKIP** (►) button, it moves to the beginning of the chapter. One more press makes it move to the beginning of the previous chapter.

#### Slow Motion Play/Step Motion Play


### Slow Motion Play











If you press the **SEARCH** (►►) button, the playback speed is reduced to

**I**▶ 1/8 **I**▶ 1/4 **I**▶ 1/2

• To return to normal speed playback, press the **PLAY** (▶ ) button.



- No sound is heard during slow mode.
- Slow motion operates only in the forward direction.

## Step Motion Play














• To return to normal speed playback, press the **PLAY** ( ▶ ) button.

#### **◎** NOTE

- No sound is heard during step mode.
- Step motion operates only in the forward direction.

#### Repeat Playback

## Repeat the Title or Chapter









Repeat the disc title or chapter.

1. During playback, press the REPEAT button on the remote control.

2. Press the ▲ ▼ buttons to select Chapter or Title, then press the **ENTER** button.



- 3. To return to normal play, press the REPEAT button again.
- 4. Press the ▲ ▼ buttons to select Off, the press the **ENTER** button.

#### NOTE

Depending on the disc, the Repeat function may not be available.

## Repeat the Section

REPEAT A-B.









1. During playback, press the REPEAT button on the remote control.

2. Press the ▲ ▼ buttons to select



- 3. Press the ENTER button at the point where you want repeat play to start (A).
- 4. Press the **ENTER** button at the point where you want repeat play to stop (B).
- 5. To return to normal play, press the REPEAT button again.
- 6. Press the ENTER button.

## NOTE


If you set point (B) before 5 seconds has lapsed, the prohibition message will appear.

#### **Using the TOOLS button**

During playback, you can operate disc menu by pressing the TOOLS button.



TOOLS Menu Screen

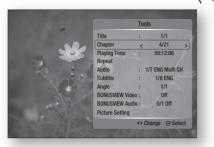



 Depending on the disc, the TOOLS menu may differ

## Moving to a Desired Scene Directly









- 1. During playback, press the **TOOLS** button.
- 2. Press the ▲ ▼ buttons to select Title, Chapter or Playing Time.
- 3. Enter the desired Title, Chapter or Playing **Time** using the number buttons, then press the **FNTFR** button

## Selecting the Audio Language









- 1. During playback, press the TOOLS button.
- 2. Press the ▲ ▼ buttons to select Audio.
- 3. Press the ◀▶ buttons to select the desired. audio language.

### **S** NOTE

■ The ◀▶ indicator will not be displayed on the screen if the BONUSVIEW section does not contain any BONUSVIEW audio settings.

- Information about the primary / secondary mode will be also displayed if the Blu-ray Disc has a BONUSVIEW section Use the ◀▶ button to switch between primary and secondary audio modes.
- This function depends on what audio languages are encoded on the disc and may not be available.
- A Blu-ray Disc can contain up to 32 audio languages and a DVD up to 8.
- Some Blu-ray Discs may allow you to select either the multi-channel LPCM or Dolby digital audio soundtrack in English.

## Selecting the Subtitle Language







- 1. During playback, press the TOOLS button.
- 2. Press the ▲ ▼ buttons to select Subtitle
- Press the ◀▶ buttons to select the desired. subtitle language.

### **◎** NOTE

Depending on the Blu-ray Disc / DVD, you may be able to change the desired subtitle in the Disc Menu

Press the **DISC MENU** button.

- This function depends on what subtitles are encoded on the disc and may not be available on all Blu-ray Discs/DVDs.
- A Blu-ray Disc can contain up to 255 subtitle languages and a DVD up to 32.
- Information about the primary / secondary mode will also be displayed if the Blu-ray Disc has a BONUSVIEW section.
- This function changes both the primary and secondary subtitles at the same time.
- The total number of subtitles is the sum of the primary and secondary ones.

#### **Caption Function**



- You must have some experience with video extraction and editing in order to use this feature properly.
- To use the caption function, save the caption file (\*.smi) in the same file name as that of the DivX media f le (\*.avi) within the same folder. Example. Root Samsung 007CD1.avi Samsung 007CD1.smi
- Up to 60 alphanumeric characters or 30 East Asian characters (2 byte characters such as Korean and Chinese) for the file name.

## Changing the Camera Angle





When a Blu-ray Disc/DVD contains multiple angles of a particular scene, you can use the ANGLE function.

- 1. During playback, press the TOOLS button.
- 2. Press the ▲ ▼ buttons to select Angle.
- 3. Press the ◀▶ buttons to select the desired Angle.

## Selecting the Picture Setting









This function enables you to adjust video quality when you are connected to a TV via HDMI.


- 1. During playback, press the **TOOLS** button.
- 2. Press the ▲ ▼ buttons to select Picture Setting, then press the ENTER button.
- 3. Press the ◀▶ buttons to select the desired Picture Setting, then press the ENTER button.
  - Dynamic : Choose this setting to increase Sharpness.
  - Normal: Choose this setting for most viewing applications.
  - Movie: This is the best setting for watching movies.

• User: The user can adjust the sharpness and noise reduction function respectively.

## Setting the BONUSVIEW



The BONUSVIEW feature allows you to view additional content (such as commentaries) in a small screen window while the movie is playing. This function is only available if the disc has the bonusview feature.

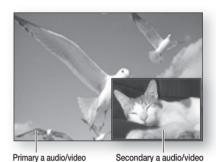

- 1. During playback, press the TOOLS button.
- 2. Press the ▲ ▼ buttons to select BONUSVIEW Video or BONUSVIEW Audio.
- 3. Press the ◀▶ buttons to select the desired. bonusview.

## **◎** NOTE


If you switch from BONUSVIEW Video, BONUSVIEW Audio will change automatically in accordance with BONUSVIEW Video.



#### Listening to Music



## **Buttons on the Remote Control** used for Music Playback

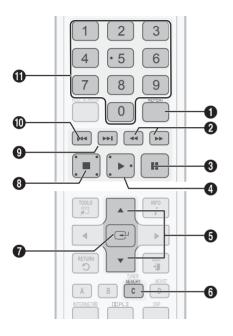


REPEAT buttons: Selects the play mode in the O Playlist. **SEARCH** buttons: Fast Play. 2 (Audio CD (CD-DA) only) 8 PAUSE button: Pauses playback. PLAY button: Plays the currently selected track. 4 ▲ ▼ buttons : Selects a track in the Music List 6 or Playlist. YELLOW(C) button: Select or deselect a track 6 in the music list.

- ENTER button: Plays and pauses the selected 0 track
- a STOP button: Stops a track.
- SKIP(►►I) button: During playback, moves to 9 the next page in the Music List or moves to the next track in the Playlist.
  - SKIP (I◄) button: During playback, moves to the previous page in the Music List or moves to the previous track in the Playlist.
- If you press this button after three seconds of 1 playback in the Playlist, the current track will be replayed from the beginning. But, if you press this button within three seconds after playback starts in the Playlist, the previous track will be played.
- NUMBER button: During the Playlist playback, (II) press the desired track number. The selected track will be played.

## Playing an Audio CD (CD-DA)/MP3

- 1. Insert an Audio CD (CD-DA) or an MP3 Disc into the disc trav.
  - For an Audio CD (CD-DA), the first track will be played automatically.
  - For an MP3 disc, press the ◀▶ buttons to select Music, then press the ENTER button.

#### Audio CD (CD-DA)/MP3 Screen Elements

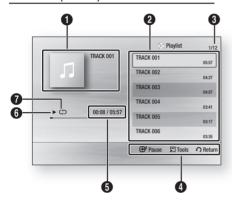

- 0 Displays the music information. 0 Displays the playlist. 6 Shows the current track/total tracks. 4 Displays buttons available. Shows the current play time/total play time. A Displays the current playback status. 6 a Displays the repeated playback status.
- 2. Press the ▲ ▼ buttons to select the track you want to play, and then press the ENTER button.

## Repeat an Audio CD (CD-DA)/MP3

- 1. During the Playlist playback, press the **REPEAT** button.
- 2. Select the desired play mode by pressing the **REPEAT** button repeatedly

the HEI EAT button repeatedry.				
Off	Audio CD (CD-DA)/MP3	Tracks on a disc are played in the order in which they were recorded on the disc.		
(CD) Track	Audio CD (CD-DA)	Current track is repeated.		
(CD) One MP3		Current track is repeated.		
(C) All	Audio CD (CD-DA)/MP3	All tracks are repeated.		
(¬吞\Chuffle	Audio CD	The random option plays a		

## **Playlist**

(C)Shuffle

1. Insert an Audio CD (CD-DA) or an MP3 Disc into the disc trav.

(CD-DA)/MP3

• For an Audio CD (CD-DA), the first track will be played automatically.

disc's track in random order.

- For an MP3 disc, press the ◀▶ buttons to select Music, then press the ENTER button.
- 2. To move to the Music List, press the STOP (II) or **RETURN** button.
  - The Music List screen is displayed.
- 3. Press the ▲ ▼ ◀ ▶ buttons to move to the desired track, then press the YELLOW(C) button to check desired tracks.

Repeat this procedure to select additional tracks.



- 4. If there is an undesired track in the playlist, press the YELLOW(C) button again. The selected track will be deleted
- 5. Press the ENTER button to play the selected

The selected track will automatically play.



- 6. To go to the Music List, press the STOP (■) or **RETURN** button.
- 7. To go to the Playlist, press the ENTER button.

### **◎ NOTE**

 You can create a playlist with up to 99 tracks on Audio CD (CD-DA).

#### **Sound Mode**

## **DSP(Digital Signal Processor) Function**

This will regulate and stabilize the volume level against a drastic volume change when changing channels or during a scene transition.

Press the **DSP** button.



#### SMART SOUND → MP3 ENHANCER → POWER BASS → DSP MODE OFF

- SMART SOUND: This will regulate and stabilize the volume level against a drastic volume change when changing channels or during a scene transition.
- MP3 ENHANCER: This also helps enhance vour sound experience (ex. mp3 music). You can upscale vour MP3 level sound(24 kHz. 8bit) to CD level sound(44.1 kHz, 16bit).
- POWER BASS: This function stresses low tones providing thudding sound effects.

## SFE(Sound Field Effect) MODE

You can set the SFE mode best suited for the type of music you are listening to.

Press the SFE MODE button.



HALL1	Provides a clear vocal as if listening in a concert hall.			
HALL2	Provides also a clear vocal as if listening in a concert hall but, less powerful than HALL1.			
JAZZ	Recommended setting for Jazz.			
CHURCH	Gives the feel of being in a grand church.			
ROCK Recommended setting for F				
SFE OFF	Select this for normal listening.			

## Dolby Pro Logic II Mode

You can select the desired Dolby Pro Logic II audio mode.

Press the DO PL II button.



When listening to music, you can experience sound effects as if you are listening to the actual performance.
Adds realism to the movie soundtrack.
You will experience a realistic multi-channel effect, as if using six speakers, while using just the front left and right speakers.
You will hear multi channel surround sound.
Select this to listen to sound from the front left and right speakers and the subwoofer only.
You can hear like game sound.

### **◎** NOTE

- When selecting Dolby Pro Logic II mode, connect your external device to the AUDIO INPUT jacks (L and R) on the product. If you connect to only one of the inputs (L or R), you cannot listen to surround sound.
- This mode is available only with 2 channel audio.

#### Playing back a Picture



## Playing a JPEG Disc

- 1. Insert a JPEG disc into the disc tray.
- 2. Press the ◀▶ buttons to select the Photos. and then press the ENTER button.
- 3. Press the ▲ ▼ ◀ ▶ buttons to select the folder you want to play, and then press the **ENTER** button.
- 4. Press the ▲ ▼ ◀ ▶ buttons to select the photo you want to play, and then press the **ENTER** button.

## **◎ NOTE**

You can't enlarge the subtitle and PG graphic in the full screen mode.

## Using the TOOLS button

During the slide show playback, you can use various function by pressing the TOOLS button.





- Start Slide Show: Select this if you want to start the slide show.
- Slide Show Speed: Select this if you want to adjust the Slide Show speed.
- Background Music: Select this if you want to listen to music while viewing a picture.
- Zoom: Select this if you want to enlarge the current picture. (Enlarged up to 4 times)
- Rotate: Select this if you to rotate the picture. (This will rotate the picture either clockwise or counter clockwise.)
- **Information**: Shows the picture information including the name and size, etc.

### **◎** NOTE

 To enable the Background Music function, both music and MP3 files must be contained in the same folder. However, the sound quality can be affected by the bit rate of the MP3 file, the size of the photo and the encoding method.

#### Playing back a USB Storage



You can use the USB connection to play multimedia files (MP3, JPEG, DivX, etc) downloaded from the USB storage device.

- 1. Move to the home menu.
- In Stop mode, connect the USB storage device to the USB port on the front panel of the product. The message "Do you want to access the device?" will be displayed.
- **3.** Press the **◄▶** button to select **Yes**, then press the **ENTER** button.
- 4. Press the RED(A) button.



- **5.** Press the ▲ ▼ buttons to select the USB, then press the **ENTER** button.
- **6.** Press the **◄►** buttons to select the desired Videos, Music or Photos, then press the **ENTER** button.
- 4-1. Press the BLUE(D) button.



- **5**-1. Press the **◄►** buttons to select the USB, then press the **ENTER** button.
- **6-1.** Press the ▲▼ buttons to select the desired Videos, Music or Photos, then press the **ENTER** button.
- 7. For playing back Video, Music or Photos files, see pages 45~53.

#### **◎ NOTE**

- You must remove the USB storage device safely (by performing the "Safe to Remove Hardware" function) in order to prevent a possible damage to the USB memory. Press the MENU button to move to the main screen, and select the YELLOW(C) button and press the ENTER button.
- When the Audio-CD (CD-DA), MP3 and JPEG files are in stop mode, you can't see full screen by pressing the FULL SCREEN button on the remote control.
- If you insert the disc when playing USB storage device, the device mode is changed to "DVD or CD" automatically.
- To listen to your music files with 7.1 channel sound, you must set the Dolby Pro Logic II mode to Matrix. (See page 53)

#### Listening to Radio

#### Using buttons on the Remote Control

- 1. Press the **FUNCTION** button to select **FM**.
- 2. Tune in to the desired station.
  - Automatic Tuning 1: When the I◄ ► button is pressed, a preset broadcast station is selected.
  - Automatic Tuning 2: Press and hold the TUNING/CH (^>) button to automatically search for active broadcasting stations.
  - Manual Tuning: Press the TUNING/CH
     (^>) button to increase or decrease the
     frequency incrementally.

## Using buttons on the product

- 1. Press the **FUNCTION** ( ) button to select **FM**.
- 2. Select a broadcast station.
  - Automatic Tuning 1 : Press the STOP (■)
    button to select PRESET and then press the
     I◄ ► I button to select the preset station.
  - Automatic Tuning 2 : Press the STOP (■)
    button to select MANUAL and then press and
    hold the I◄ ►I button to automatically
    search the band.
  - Manual Tuning: Press the STOP (■) button to select MANUAL and then press the I<</li>
     button to tune in to a lower or higher frequency.

## **54** English

## Setting Mono/Stereo

Press the MO/ST button.

- Each time the button is pressed, the sound switches between STEREO and MONO.
- In a poor reception area, select MONO for a clear, interference-free broadcast.

## **Presetting Stations**

Example: Presetting FM 89.10 into memory

- 1. Press the **FUNCTION** button to select **FM**.
- 2. Press the TUNING/CH ( >> ) button to select <89.10>.
- 3. Press the TUNER MEMORY button.
  - NUMBER flashes on the display.
- 4. Press the I◀ ▶ button to select preset number.
  - You can select between 1 and 15. presets.
- 5. Press the TUNER MEMORY button again.
  - Press the TUNER MEMORY button before NUMBER disappears from the display.
  - NUMBER disappears from the display and the station is stored in memory.
- **6.** To preset another station, repeat steps 2 to 5.
  - To tune in to a preset station, press the I

    → I button on the remote control to select a channel

#### Using an iPod

You can enjoy music, video files from an iPod through the product.



## Listening to Music

You can play music files stored in the iPod player by connecting it to the product.



- 1. Connect the iPod dock connector to the iPod Jack on the rear panel of the product.
- 2. Place the iPod in the supplied iPod Dock.
  - · Your iPod is automatically turned on.
  - "iPod" message appears on the TV screen.
- 3. Press the RED(A) button.
- 4. Press the ▲ ▼ buttons to select iPod, then press the **ENTER** button.
- 5. Press the ◀▶ buttons to select Music, then press the **ENTER** button.
- 6. Select the music file to play.
  - You can use the remote control or product to control simple playback functions such as the PLAY, PAUSE, STOP, I≪/ ►>I, ≪/ >> and **REPEAT** buttons. See page 16.

#### **S** NOTE

- Adjust the volume to a moderate level before you connect your iPod and product.
- When the product is powered on and you connect an iPod, the product will charge your iPod's battery.
- Make sure to connect the dock connector so that the label "SAMSUNG" faces upward.
- "Made for iPod" means that an electronic accessory has been designed to connect specifically to the iPod and has been certified by the developer to meet Apple performance standards.
- "Works with iPhone" means that an electronic accessory has been designed to connect specifically to an iPhone and has been certified by the developer to meet Apple performance standards.

## iPod Music categories

File information including the artist name, album name, music title and genre will be displayed according to the ID3 Tag information on the appropriate music file.

Now Playing	Plays a recently played file or moves to the playback screen of the current file.	
Artist	To play by artist.	
Songs	To play in numeric or alphabetical order	
Playlist	To play by Playlist.	
Album	To play by album.	
Generic	To play by genre.	
Composers	To play by composer.	

## **№ NOTE**

- The category list may differ, depending on the iPod model.
- What is an ID3 Tag?
  This is what is attached to:

This is what is attached to an MP3 to carry information relevant to the file such as the title, artist, album, year, genre and a comment field.

## Watching a Movie

You can play video files stored in the iPod player by connecting it to the product.

- **1.** Connect the iPod dock connector to the iPod Jack on the rear panel of the product.
- In the iPod screen, move to Settings >
   Videos, then set the TV Out option and the
   TV signal.
- **3.** Place the iPod in the supplied iPod Dock.
  - "iPod" message appears on the TV screen.
- 4. Press the RED(A) button.
- Press the ▲ ▼ buttons to select iPod, then press the ENTER button.
- **6.** Press the **◄►** buttons to select **Videos**, then press the **ENTER** button.
- 7. Select the video file to play.
  - You can use the remote control or the product to control simple playback functions such as the PLAY, PAUSE, STOP, I◄ /►►I and ◄ /►► buttons. (See page 16.)

## <u>iPod models that can be used with</u> this product

iPod nano 3rd generation (video)	<b>iPod</b> 5th generation (video)	iPod nano 4th generation (video)
iPod touch 1st generation	iPod touch 2nd generation	iPhone 3G
iPod classic	iPhone	

## **◎** NOTE

- You must have the VIDEO output (Composite) connected to your TV to view iPod video (See page 25).
- If you want to iPod video via VIDEO output, set Anynet+(HDMI-CEC) to off.
- No other screen than the playback one will appear on the TV screen. Check other screens on the iPod player.
- If the connected iPod does not support video playback, the "Cannot play video files saved on this iPod" message appears when you select the Video menu.
- Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

## Network Services

You can enjoy various network services such as Internet@TV or BD-LIVE by connecting the product to the network system.

Check the following instructions before using anv network service.

- 1. Connect the product to the network. (see pages 27~28)
- 2. Configure the network settings. (see pages 39~42)

#### Using Internet@TV

Connect this product to the network to download various chargeable or free-of-charge applications. Internet@TV brings useful and entertaining contents and services directly from the web to vour product.

And enjoy the applications such as news, weather forecast, stock market, games, movies and music

You can also operate this function by pressing the INTERNET@ button on the remote control.



## Getting Started with Internet@TV


1. Move to the home menu.



- 2. Press the ◀▶ buttons to select Internet@ TV and press the ENTER button.
- 3. In the start screen of the Internet@TV service, you will see the service agreement screen. You should agree to the service terms and conditions before you can use the Internet@ TV service.

4. When you have agreed on the service agreement, the Internet@TV service will start being updated. It takes several minutes. When the update is completed, you will see the Internet@TV menu screen.

#### Internet@TV at a Glance

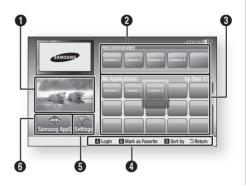

- Commercial: Displays Internet@TV Guide. product introduction and new application introduction.
- Recommended: Displays recommended contents managed by Samsung.
- My Application: Displays your personal gallery 6 which can be added and deleted by you.

Navigation Help: Displays remote control buttons available.

- RED(A): To log in to to Internet@TV.
- BLUE(B): To mark the application as a favorite.
  - GREEN(D): To sort the applications.
  - Return : To return to the previous menu.
- Settings: You can set the system setup and create accounts, etc.
- Samsung AppS: You can download various chargeable or free-of-charge application services.

## Network Services

#### Using the Keypad

Pressing the **FULL SCREEN** button on the remote while you are using the Screen Keypad enables you to change the text fields to lower case, upper case, numbers and icons.

You can use this Screen Keypad in a several Internet@TV applications.



For example, here is how to search an address in Google Maps:

- 1. Press the ENTER button on the remote at the Google Maps icon at the Internet@TV.
- Press the GREEN(B) button to use the SEARCH function.
- **3.** Press the **◄** ▶ buttons to move to the "Search or address" window.
- Press the ENTER button to use Search or address function.
- **5.** For example, suppose that you want to input "105 Challenger Rd., Ridgefield Park NJ'.
- Press the FULL SCREEN button on the remote twice to change the input mode from lower case to numbers.
- 7. Press '1', '0', '5'.
- **8.** Press the **YELLOW(C)** button on the remote to input a blank space.
- Press the FULL SCREEN button on the remote 3 times to change the input mode from numbers to upper case.
- **10.** Press '2' button on the remote 3 times to input **C**.
- **11.** Press the **FULL SCREEN** button on the remote 3 times to change the input mode from upper case to lower case.
- **12.** Press buttons on the remote to input the rest of 'Challenger Rd., Ridgefield Park NJ'.

- 13. Press the ENTER button.
- **14.** The map and address appear on the screen.

#### **◎ NOTE**

- Samsung Electronics shall take no legal responsibility for any interruption of the Internet@TV service caused by the service provider for any reasons.
- The Internet@TV service is to download and process data via the Internet so that you can enjoy the contents on the TV screen. If the Internet connection is unstable, the service may be delayed or interrupted. Furthermore, the product may be turned off automatically. If this is the case, check the Internet connection and try again.
- The application service may be provided in English only and the contents available may vary, depending on the area.
- For more information about the Internet@TV service, visit the web site of the applicable service provider.
- The provided services are subject to change, depending on the Internet@TV service provider.
- The Internet@TV service contents may differ according to the firmware version.
- A chargeable DivX contents with copy protection can only be played using HDMI cable.


If connected with component or video cable, the video signal can not output or the popup message "cannot play current file" will be displayed.

#### Account Login

For a more enjoyable application experience. register and log in to your account.

To do this, you must create an account first. (For instructions on creating an account, refer to Internet@TV ID on this page)


1. Press the ▲ ▼ ◀ ▶ buttons to select the desired application and press the RED(A) button.

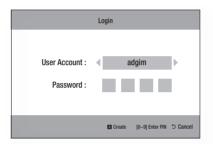

2. Enter the user account and password.

## Settings

Create IDs and configure Internet@TV settings from this screen.

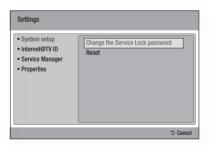

#### System Setup

#### Reset

Resets Internet@TV settings to factory default settings.



If you forgot your password, press the STOP (**II**) button on the front panel of the product for more than 5 seconds with no disc inserted

#### Internet@TV ID

You can use this menu when creating, deleting the account.

You can control your account including contents site's account information

Account is only for Internet@TV.

#### Create

Create an account and link it with desired service applications.



Account will be made less than 10 and Maximum number of characters is 10.

#### Manager

- Service Site : Register login information for service sites.
- Change Password : Change account password.
- Delete: Delete the account.

## Network Services

#### Service Manager

Delete and lock applications installed to Internet@ TV.

#### Lock

Lock the application. Accessing a locked application requires the password.

#### Delete

Delete the application.

#### **Properties**

Display information about Internet@TV. Use the Check the speed of your internet connection option to test your network connection.

## Samsung AppS

Various applications are available from here, organized into different categories. Some applications have a download fee.



#### My Application

Displays the application list.

#### Help

If you questions about Internet@TV, check this section first. If none of the tips apply, please visit the help website.

## Using the color buttons with the Samsung Apps

- RED(A) (Login): To log in to the internet service.
- GREEN(B) (Thumbnail View): To change the view mode.
- BLUE(D) (Sort By): To sort the applications by Featured, Most Downloaded, Most Recent or Name.

#### Internet@TV Services Available

 YouTube: You can view video streamed by YouTube.



 The available Internet contents service may be added or deleted

#### BD-LIVE™

Once the product is connected to the network. you can enjoy various movie-related service contents using a BD-LIVE compliant disc.

- 1. Check the size of the remaining memory. The memory device must have at least 1GB of free space to accommodate the BD-LIVE services.
- 2. Insert a Blu-ray disc that supports BD-LIVE.
- 3. Select an item from various BD-LIVE service contents provided by the disc manufacturer.

#### **◎** NOTE

The way you use BD-LIVE and the provided contents may differ, depending on the disc manufacturer.

#### **Software Upgrade Notification**

In network connection, the product will notice you of any new software version with a popup message.

- 1. Turn on the product.
- 2. From the Software Upgrade menu, set Auto Upgrade Notification to On. (See page 44) If there is a new software version available. the product will notice you with a popup message.
- 3. To upgrade the firmware, select Yes. It will turn off automatically before restarting. (Never turn it on manually.)
- **4.** The update progress popup will appear. When the update is completed, it will turn back off automatically.
- 5. Press the **POWER** button to turn on the product.

## **<a>♥ NOTE**</a>

- Update will be completed when the product turns off after restarting. Press the POWER button to turn on the updated product for your
  - Never turn off or on the product manually during the update process.
- Samsung Electronics shall take no legal responsibility for product malfunction caused by unstable of internet connection or consumer negligence during software upgrade.


#### **Using the AllShare Function**

AllShare enables you to play music, video and photo files in your PC using the product.

To use AllShare, you must connect the product to your PC via the network (See pages 27~28) and install the SAMSUNG PC Share Manager on the PC.

- 1. Visit the Samsung website at www.samsung.
- 2. Download the SAMSUNG PC Share Manager and install it on the PC.
- 3. When the installation is completed, you will see the SAMSUNG PC Share Manager icon on your desktop. Double-click the icon to launch the application.


## Application Program at a Glance

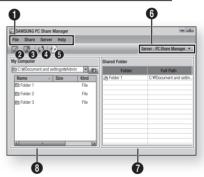

- Menu Bar
- Share Folder Enabled icon: Use this if you want to select a folder in your PC to share.
- Share Folder Disabled icon: Use this if you 8 want to set folder sharing off.
- Refresh icon: Use this if you want to refresh 4 list of folders and files in Mv Computer.
- **Update icon**: Select a folder to share and don't forget to press this button. The updated state will be applied to the server.
- Server: Displays the name of the sharing 6 server.
- Shared Folder: Displays a list of the shared
- My Computer: Displays a list of the folders and files in the PC.

## Network Services

- 4. Select a folder to share from the My computer pane, and click the Share Folder Enabled icon ( ). (To remove a shared folder: Select a folder
  - to remove from the shared folders, and click the Share Folder Disabled icon ( ).)
- 5. To apply the updated sharing state to the server, click the **Set Change State icon** ( ).
- **6.** To enable the product to locate a PC server. click Share from the menu bar. Click Set Device Policy and click Accept.

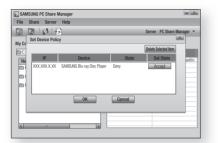

- 7. Click the Set Change State icon ( ) and move to the home menu on the product.
- 8. To select a device, use the RED(A) or **BLUE(D)** button to select a file to play. (For playing back Video, Music or Photos files, see pages 45~53.)



## **◎** NOTE

- Depending on te performance of the external modem or router, HD video may not play properly.
- If your system uses a firewall, the product may not locate your PC on the TV screen.

- AllShare does not support the following functions.
  - The Background Music and Background Music Setting functions.
  - Sorting files by preference in the Photo. Music, and Movie folders.
  - The Change Group function.
  - The Safe Remove function.
- The Sorting method may differ depending on the sever function.
- The search and skip operation may differ depending on the sever function.
- If you press the STOP (■) button during video playback, stop position will be memorized and it will be memorized only end user's operation. But stop position will not be memorized depending on the sever function.
- During video playback, play time will not display.
- To use AllShare function, please locate both this product and PC in same subnet.

## Other information

### **Troubleshooting**

Refer to the chart below when this product does not function properly. If the problem you are experiencing is not listed below or if the instruction below does not help, turn off the product, disconnect the power cord, and contact Samsung Electronics at 1-800-SAMSUNG.

Symptom	Check/Remedy
I cannot eject the disc.	Is the power cord plugged securely into the outlet?     Turn off the power and then turn it back on.
Playback does not start.	Check the region number of the BD/DVD. BD/DVD discs purchased from abroad may not be playable. CD-ROMs and DVD-ROMs cannot be played on this Product. Make sure that the rating level is correct.
Playback does not start immediately when the Play/Pause button is pressed.	Are you using a deformed disc or a disc with scratches on the surface?     Wipe the disc clean.
Sound is not produced.	<ul> <li>No sound is heard during fast playback, slow playback, and step motion playback.</li> <li>Are the speakers connected properly? Is the speaker setup correctly customized?</li> <li>Is the disc severely damaged?</li> </ul>
Sound can be heard only from a few speakers and not all 8.	<ul> <li>On certain BD/DVD discs, sound is output from the front speakers only.</li> <li>Check if the speakers are connected properly.</li> <li>Adjust the volume.</li> <li>When listening to a CD, radio or TV, sound is output to the front speakers only. Select "PRO LOGIC II" by pressing DK PL II (Dolby Pro Logic II) on the remote control to use all six speakers.</li> </ul>
Dolby Digital 7.1 CH Surround Sound is not produced.	<ul> <li>Is there "Dolby Digital 7.1 CH" mark on the disc? Dolby Digital 7.1 CH Surround Sound is produced only if the disc is recorded with 7.1 channel sound.</li> <li>Is the audio language correctly set to Dolby Digital 7.1-CH in the information display?</li> </ul>
The remote control does not work.	Is the remote control being operated within its operation range of angle and distance?     Are the batteries drained?     Have you selected the mode(TV/BD) functions of the remote control (TV or BD) correctly?
<ul> <li>Disc is rotating but no picture is produced.</li> <li>Picture quality is poor and picture is shaking.</li> </ul>	Is the TV power on?     Are the video cables connected properly?     Is the disc dirty or damaged?     A poorly manufactured disc may not be playable.
Audio language and subtitles do not work.	Audio language and subtitles will not work if the disc does not contain them.
Menu screen does not appear even when the menu function is selected.	Are you using a disc that does not contain menus?

# Other information

Symptom	Check/Remedy			
Aspect ratio cannot be changed.	You can play 16:9 BD/DVDs in 16:9 Wide mode, 4:3 Letter Box mode, or 4:3     Pan - Scan mode, but 4:3 BD/DVDs can be seen in 4:3 ratio only. Refer to the Blu-ray Disc jacket and then select the appropriate function.			
The product is not working. (Example: The power goes out or a strange noise is heard.) The Product is not working normally.	<ul> <li>Turn off the power, and press and hold the STOP (■) button on the product for longer than 5 seconds.</li> <li>Using the RESET function will erase all stored settings.</li> <li>Do not use this unless necessary.</li> </ul>			
The rating level password has been forgotten.	<ul> <li>With no disc in the product, press and hold the product's STOP (■) button follonger than 5 seconds. INIT appears on the display and all settings will return to the default values.</li> <li>And then press the POWER button.</li> <li>Using the RESET function will erase all stored settings.</li> <li>Do not use this unless necessary.</li> </ul>			
Can't receive radio broadcasts.	Is the antenna connected properly?     If the antenna's input signal is weak, install an external FM antenna in an area with good reception.			
While listening to TV audio through the Product, no sound is heard.	• If the <b>OPEN/CLOSE</b> ( <u>A</u> ) button is pressed while listening to TV audio using the D.IN or AUX functions, the BD/DVD functions are turned on and the TV audio is muted.			
"Not Available" appears on screen.	The features or action cannot be completed at this time because:  The BD/DVD's software restricts it.  The BD/DVD's software doesn't support the feature (e.g., angles)  The feature is not available at the moment.  You've requested a title or chapter number or search time that is out of range.			
If the HDMI output is set to a resolution your TV cannot support (for example, 1080p), you may not see a picture on your TV.	Press the STOP (■) button (on front panel) for more than 5 seconds with no disc inside. All settings will revert to the factory settings.			
No HDMI output.	Check the connection between the TV and the HDMI jack of the Product.     Check if your TV supports 480p/720p/1080i/1080p HDMI input resolution.			
Abnormal HDMI output screen.	If random noise appears on the screen, it means that TV does not support HDCP (High-bandwidth Digital Content Protection).			
If the HDMI output is set to a resolution your TV cannot support (for example, 1080p), you may not see a picture on your TV.	<ul> <li>Press the STOP (■) button (on front panel) for more than 5 seconds with no disc inside. All settings will revert to the factory settings.</li> <li>When the factory default settings are restored, all the user data stored in the BD data will be deleted.</li> </ul>			

Symptom	Check/Remedy			
PC Share Manager function				
I can see folders shared through the PC Share Manager, but I cannot see the files.	Since it shows only files corresponding to the Image, Music, and Movie categories, files that do not correspond to these categories may not be displayed.			
AllShare function				
Video is played intermittently.	Check if the network is stable. Check if the network cable is properly connected and if the network is n overloaded. Wireless connection between the server and the product is unstable. Check the connection.			
AllShare connection between TV and PC is unstable.	IP address under the same subnetwork should be unique, otherwise IP collision can results in such a phenomenon.     Check if you have a firewall enabled.     If so, disable the firewall function.			
BD-LIVE				
I cannot connect to the BD-LIVE server.	Check whether the network connection is successful or not by using Network Test menu. (See page 42) Check whether the USB memory device is connected with product or not. The memory device must have at least 1GB of free space to accommodate the BD-LIVE service. You can check the available size in BD Data Management. (See page 37) Please check whether the BD-LIVE Internet Connection menu is set to Allow(All). If all above fails, contact the contents provider or update the latest firmware.			
When using the BD-LIVE service, an error occurs.	The memory device must have at least 1GB of free space to accommodate the BD-LIVE service.  You can check the available size in BD Data Management. (See page 37)			

## **⊗** NOTE

• When the factory default settings are restored, all the user data stored in the BD data will be deleted.

## Other information

#### Р D Α 13 Accessories Digital Output 36 Parental Rating 43 AllShare 51 61 Disc menu 45 Playlist Angle 49 Display 31 Popup menu 46 Anvnet+(HDMI-CEC) 37 DivX(R) Deactivation 38 Power On/Off Sound 43 Audio 34 DivX(R) Registration 38 Progressive Mode 33 Audio Language 48 Dolby Pro Logic II Mode 53 R AV Sync 37 DSP 52 Region code 10 Dynamic Range Control 37 В Remote Control 16 Ε Background 43 Remote control sensor 14 **Energy Saving** BD-Live 61 43 Repeat 47.51 **BD-LIVE Internet Connection** 42 **EQ** Optimizer 35 Resolution 31 BD Data Management 37 F S **BD** Wise 31 Front Display 43 Search 46 Before Starting (Initial settings) 29 Security 43 **BONUSVIEW** 49 G Setting the Menu 30 C General 43 29 Setup Change Password 43 SFE 52 Н Clock 38 Skip 46 **HDMI** Audio 35 Connections 18 SLEEP(timer) 16 **HDMI Deep Color** 33 Speaker 18 Slow motion 47 **HDMI** Format 33 Wireless receiver module 21 Software Upgrade 44 TV/ 23 Speaker Setting 34 HDMI 23 47 Step motion Initial Settings 37 Component 25 Still Mode 33 Internet@TV 57 Composite 25 Subtitle Language 48 Internet@TV Screen Size 37 Set-Top Box 26 Support 44 **iPod** 55 **OPTICAL** 26 System 37 AUX 26 L Т Network 27 42 Language Title menu 46 LAN Cable 27 Light Effect 43 Title list 46 Wireless Network 28 TV Aspect 31 FM Antenna 28 M TV Screen Saver 30 Contact Samsung 44 Mono/Stereo 55 U Movie Frame (24 Fs) 33 Musical Room Calibration 35 USB Storage 54 MUTE 16 Ζ Ν 700m 53 Network Setup 39

**Network Settings** 

**Network Status** 

39

42

Index

	Sı	pecifications		
	Weight	8.3 lbs		
General	Dimensions	16.9 (W) x 2.4 (H) x 13.0 (D) inches		
	Operating Temperature Range	+41°F to +95°F		
	Operating Humidity Range	10 % to 75 %		
	Signal/noise ratio	70 dB		
FM Tuner	Usable sensitivity	10 dB		
	Total harmonic distortion	0.5 %		
	BD (Blu-ray Disc)	Reading Speed: 4.917m/sec		
	DVD (Dinital Variatila Dia)	Reading Speed: 3.49 ~ 4.06 m/sec.		
	DVD (Digital Versatile Disc)	Approx. Play Time (Single Sided, Single Layer Disc): 135 min.		
Disc	OD F inches (OOMDAGT DIOO)	Reading Speed: 4.8 ~ 5.6 m/sec.		
	CD: 5 inches (COMPACT DISC)	Maximum Play Time : 74 min.		
	OD 0 1/0 tracket (OOMBACT DIOO)	Reading Speed: 4.8 ~ 5.6 m/sec.		
	CD: 3 <sup>1</sup> /2 inches (COMPACT DISC)	Maximum Play Time : 20 min.		
		1 channel : 1.0 Vp-p (75 Ω load)		
	Composite Video	Blu-ray Disc : 480i DVD : 480i		
Violan Outro		Y : 1.0 Vp-p (75 Ω load)		
Video Output	Component Video	Pr : 0.70 Vp-p (75 Ω load)		
	Component Video	Pb : 0.70 Vp-p (75 Ω load)		
		Blu-ray Disc : 1080i, 720p, 480p, 480i DVD : 480p, 480i		
Video/Audio HDMI		1080p, 1080i, 720p, 480p		
		PCM multichannel audio, Bitstream audio, PCM audio		
	Front speaker output	165W x 2(3Ω)		
	Center speaker output	170W(3Ω)		
	Surround speaker output	165W x 2(3Ω)		
	Surround Back Speaker output	165W x 2(3Ω)		
Amplifian	Subwoofer speaker output	170W(3Ω)		
Amplifier	Eroguanou rognonos	Analog input 20Hz~20kHz (±3dB)		
	Frequency response	Digital input 20Hz~44kHz (±3dB)		
	S/N Ratio	70dB		
	Channel separation	60dB		
	Input sensitivity	(AUX)500mV		

## Other information

	Speaker system	7.1ch speaker system				
		Front	Surround/Surround back	Center	Subwoofer	
	Impedance	3 Ω	3 Ω	3 Ω	3 Ω	
	Frequency range	140Hz~20kHz	140Hz~20kHz	140Hz~20kHz	40Hz ~ 160Hz	
	Output sound pressure level	87dB/W/M	87dB/W/M	87dB/W/M	88dB/W/M	
	Rated input	165W	165W	170W	170W	
Speaker	Maximum input	330W	330W	340W	340W	
	Dimensions (W x H x D)	Front: 3.54 x 51.18 x 4.69 inches (Stand base: 9.84 x 9.84 inches) Surround/Surround back: 3.54 x 5.57 x 2.7 inches Center: 14.17 x 2.93 x 2.7 inches Subwoofer: 6.61 x 13.78 x 11.61 inches				
	Weights	Front : 7.21 lbs, Surround/Surround back : 1.28 lbs Center : 1.28 lbs , Subwoofer : 9.92 lbs				

<sup>\*:</sup> Nominal specification

- Samsung Electronics Co., Ltd reserves the right to change the specifications without notice.
- Weight and dimensions are approximate.
- Design and specifications are subject to change without prior notice.
- For the power supply and Power Consumption, refer to the label attached to the product.

#### SWA-5000

2.52 lbs
3 x 9 x 6 inches
+41°F to +95°F
10% ~ 75%
165W x 2 CH
20Hz~20KHz
65dB



#### LIMITED WARRANTY TO ORIGINAL PURCHASER

Samsung Electronics Canada Inc.(SECA), warrants that this product is free from defective material and workmanship.

SECA further warrants that if this product falls to operate properly within the specified warranty period and the failure is due to improper workmanship or defective materials, SECA will repair or replace the product at its option.

All warranty repairs must be performed by a SECA Authorized Service Center. (The name and address of the location nearest you can be obtained by calling toll free: 1-800-SAMSUNG)

LABOR	PARTS
One year (Carry- in)	One year

On carry-in models, transportation to and from the service center is the customer's responsibility.

The original dated sales receipt must be retained by the customer and is the only acceptable proof of purchase. It must be presented to the authorized service center at the time service is requested.

**EXCLUSIONS (WHAT IS NOT COVERED)** 

This warranty does not cover damage due to accident, fire, flood and/ or other acts of God; misuse, incorrect line voltage, improper installation, improper or unauthorized repairs, commercial use or damage that occurs in shipping. Exterior and interior finish, lamps, glass are not covered under this warranty. Customer adjustments which are explained in the instruction manual are not covered under the terms of this warranty. This warranty will automatically be voided for any unit found with a missing or altered serial number. This warranty is valid only on products purchased and used in Canada.

HEADQUARTERS
SAMSUNG ELECTRONICS CANADA INC.,
CUSTOMER SERVICE
55 STANDISH COURT MISSISSAUGA, ONTARIO L5R 4B2 CANADA
FABRIQUE EN CORÉE
1-800-SAMSUNG (1-800-7267864)
WWW.SAMSUNG.COM/CA

#### Contact SAMSUNG WORLD WIDE

If you have any questions or comments relating to Samsung products, please contact the SAMSUNG customer care center.

Region	Country	Customer Care Center 2	Web Site
	CANADA	1-800-SAMSUNG (726-7864)	www.samsung.com/ca
North America	MEXICO	01-800-SAMSUNG (726-7864)	www.samsung.com/mx
	U.S.A	1-800-SAMSUNG (726-7864)	www.samsung.com/us
Latin America GL PA	ARGENTINE	0800-333-3733	www.samsung.com/ar
	BRAZIL	0800-124-421, 4004-0000	www.samsung.com/br
	CHILE	800-SAMSUNG (726-7864)	www.samsung.com/cl
	NICARAGUA	00-1800-5077267	www.samsung.com/latin
	HONDURAS	800-7919267	www.samsung.com/latin
	COSTA RICA	0-800-507-7267	www.samsung.com/latin
	ECUADOR	1-800-10-7267	www.samsung.com/latin
	EL SALVADOR	800-6225	www.samsung.com/latin
	GUATEMALA	1-800-299-0013	www.samsung.com/latin
	JAMAICA	1-800-234-7267	www.samsung.com/latin
	PANAMA	800-7267	www.samsung.com/latin
	PUERTO RICO	1-800-682-3180	www.samsung.com/latin
	REP. DOMINICA	1-800-751-2676	www.samsung.com/latin
	TRINIDAD & TOBAGO	1-800-SAMSUNG (726-7864)	www.samsung.com/latin
	VENEZUELA	0-800-100-5303	www.samsung.com/latin
	COLOMBIA	01-8000112112	www.samsung.com.co
	BELGIUM	02 201 2418	www.samsung.com/be (Dutch)
			www.samsung.com/be_fr (French
	CZECH REPUBLIC	800-SAMSUNG (800-726786)	www.samsung.com/cz
	DENMARK	8-SAMSUNG (7267864)	www.samsung.com/dk
	FINLAND	30-6227 515	www.samsung.com/fi
	FRANCE	01 4863 0000	www.samsung.com/fr
	GERMANY	01805-SAMSUNG (726-7864 € 0,14/Min)	www.samsung.de
	HUNGARY	06-80-SAMSUNG (726-7864)	www.samsung.com/hu
	ITALIA	800-SAMSUNG (726-7864)	www.samsung.com/it
	LUXEMBURG	02 261 03 710	www.samsung.com/lu
Europe	NETHERLANDS	0900-SAMSUNG (0900-7267864) (€ 0,10/Min)	www.samsung.com/nl
	NORWAY	3-SAMSUNG (7267864)	www.samsung.com/no
	POLAND	0 801 1SAMSUNG (172678), 022-607-93-33	www.samsung.com/pl
	PORTUGAL	80820-SAMSUNG (726-7864)	www.samsung.com/pt
	SLOVAKIA	0800-SAMSUNG (726-7864)	www.samsung.com/sk
	SPAIN	902-1-SAMSUNG (902 172 678)	www.samsung.com/es
	SWEDEN	0771 726 7864 (SAMSUNG)	www.samsung.com/se
	U.K	0845 SAMSUNG (7267864)	www.samsung.com/uk
	EIRE	0818 717 100	www.samsung.com/ie
	AUSTRIA	0810-SAMSUNG (7267864, € 0.07/min)	www.samsung.com/at
	SWITZERLAND	0848-SAMSUNG (7267864, CHF 0.08/min)	www.samsung.com/ch
	RUSSIA	8-800-555-55-55	www.samsung.ru
	KAZAKHSTAN	8-10-800-500-55-500	www.samsung.com/kz ru
	UZBEKISTAN	8-10-800-500-55-500	www.samsung.com/kz_ru
	KYRGYZSTAN	00-800-500-55-500	www.samsung.som/kz_ru
cis	TADJIKISTAN	8-10-800-500-55-500	
	UKRAINE	8-800-502-0000	www.samsung.ua
0.0	BELARUS	810-800-502-0000	www.samsung.com/lt
	MOLDOVA	00-800-500-55-500	www.samsung.com/it
	LITHUANIA	8-800-77777	
	LATVIA	8000-77777	www.samsung.com/lv
	ESTONIA	800-7267	www.samsung.com/ee
	AUSTRALIA	1300 362 603	www.samsung.com/ee
	NEW ZEALAND	0800 SAMSUNG (0800 726 786)	www.samsung.com/nz
	CHINA	400-810-5858, 010-6475 1880	www.samsung.com/cn
	HONG KONG	3698-4698	Ŭ
	INDIA		www.samsung.com/hk
	INDONESIA	3030 8282, 1800 110011, 1800 3000 8282 0800-112-8888	www.samsung.com/in
Asia Pacific			www.samsung.com/id
	JAPAN MALAYSIA	0120-327-527	www.samsung.com/jp
	MALAYSIA PHILIPPINES	1800-88-9999 1-800-10-SAMSUNG (726-7864), 1-800-3- SAMSUNG (726-7864), 03-5005777	www.samsung.com/my www.samsung.com/ph
	SINGADODE	1-800-8-SAMSUNG (726-7864), 02-5805777	www.cameuna.com/ca
	SINGAPORE	1800-SAMSUNG (726-7864)	www.samsung.com/sg
	THAILAND	1800-29-3232, 02-689-3232	www.samsung.com/th
	TAIWAN	0800-329-999	www.samsung.com/tw
	VIETNAM	1 800 588 889	www.samsung.com/vn
Middle	TURKEY	444 77 11	www.samsung.com/tr
East &	SOUTH AFRICA	0860-SAMSUNG (726-7864 )	www.samsung.com/za
Africa	U.A.E	800-SAMSUNG (726-7864), 8000-4726	www.samsung.com/ae



