

OWNER'S MANUAL

22" SELF- PROPELLED ROTARY MOWERS

Model Numbers
123-260A
123-262A

Important:
**Read Safety Rules and
Instructions Carefully**

Thank you for purchasing an
American built product.

INDEX

Safe Operation Practices	3	Maintenance	12
Assembly Instructions	4	Off-Season Storage	13
Controls	8	Illustrated Parts	16
Operation	8	Repair Parts List	17
Adjustments	10	Parts Information	Back Cover
Lubrication	12		

LIMITED WARRANTY

For one year from the date of original retail purchase, MTD PRODUCTS INC will either repair or replace, at its option, free of charge, F.O.B. factory or authorized service firm, any part or parts found to be defective in material or workmanship. Transportation charges for the movement of any power equipment unit or attachment are the responsibility of the purchaser. Transportation charges for any parts submitted for replacement under this warranty must be paid by the purchaser unless such return is requested by MTD PRODUCTS INC.

This warranty will not apply to any part which has become inoperative due to misuse, excessive use, accident, neglect, improper maintenance, alterations, or unless the unit has been operated and maintained in accordance with the instructions furnished. This warranty does not apply to the engine, motor, battery, battery charger or component parts thereof. Please refer to the applicable manufacturer's warranty on these items.

This warranty will not apply where the unit has been used commercially.

Warranty service is available through your local authorized service dealer or distributor. If you do not know the dealer or distributor in your area, please write to the Customer Service Department of MTD.

The return of a complete unit will not be accepted by the factory unless prior written permission has been extended by MTD.

This warranty gives you specific legal rights. You may also have other rights which vary from state to state.



This unit is equipped with an internal combustion engine and should not be used on or near any unimproved forest-covered, brush-covered or grass-covered land unless the engine's exhaust system is equipped with a spark arrester meeting applicable local or state laws (if any). If a spark arrester is used, it should be maintained in effective working order by the operator.

In the State of California the above is required by law (Section 4442 of the California Public Resources Code). Other states may have similar laws. Federal laws apply on federal lands. A spark arrester muffler is available at your nearest engine authorized service center.



WARNING

To reduce the potential for any injury, comply with the following safety instructions. Failure to comply with the instructions may result in personal injury.

SAFE OPERATION PRACTICES FOR WALK-BEHIND MOWERS

TRAINING

1. Read this owner's manual carefully in its entirety before attempting to assemble or operate this machine. Be completely familiar with the controls and the proper use of this machine before operating it. Keep this manual in a safe place for future and regular reference and for ordering replacement parts.
2. Your rotary mower is a precision piece of power equipment, not a plaything. Therefore, exercise extreme caution at all times.
3. Never allow children to operate a power mower. Only persons well acquainted with these rules of safe operation should be allowed to use your mower.
4. Keep the area of operation clear of all persons, particularly small children and pets. Stop engine when they are in the vicinity of your mower. Although the area of operation should be completely cleared of foreign objects, an object may have been overlooked and could be accidentally thrown by the mower in any direction and cause serious personal injury to the operator or any others allowed in the area.

PREPARATION

1. Thoroughly inspect the area where the equipment is to be used. Remove all stones, sticks, wire, bones and other foreign objects which could be picked up and thrown by the mower in any direction and cause serious personal injury to the operator or any others allowed in the area.
2. Do not operate equipment when barefoot or wearing open sandals. Always wear substantial footwear.
3. Do not wear loose fitting clothing that could get caught on the mower.
4. Check the fuel before starting the engine. Gasoline is an extremely flammable fuel. Do not fill the gasoline tank indoors, while the engine is running, or while the engine is still hot. Wipe off any spilled gasoline before starting the engine as it may cause a fire or explosion.
5. Disengage the self-propelled mechanism or drive clutch on units so equipped before starting the engine.
6. The blade control handle is a safety device. Never attempt to bypass its operation. Doing so makes the safety device inoperative and may result in personal injury through contact with the rotating blade. The blade control handle must operate easily in both directions.
7. Never attempt to make a wheel or cutting height adjustment while the engine is running.
8. Mow only in daylight or in good artificial light.
9. Never operate the equipment in wet grass. Always be sure of your footing. A slip and fall can cause serious personal injury. Keep a firm hold on the handle and walk, never run.

OPERATION

1. Do not change the engine governor settings or overspeed the engine. Excessive engine speeds are dangerous.
2. Do not put hands or feet near or under rotating parts. Keep clear of the discharge opening at all times as the rotating blade can cause injury.
3. Stop the blade when crossing gravel drives, walks or roads.
4. After striking a foreign object, stop the engine, remove the wire from the spark plug, and thoroughly inspect the mower for any damage. Repair the damage before restarting and operating the mower.
5. If the equipment should start to vibrate abnormally, stop the engine and check immediately for the cause. Vibration is generally a warning of trouble.
6. Shut the engine off and wait until the blade comes to a complete stop before removing the grass catcher or unclogging the chute. The cutting blade continues to rotate for a few seconds after the engine is shut off. Never place any part of the body in the blade area until you are sure the blade has stopped rotating.
7. Before cleaning, repairing or inspecting, make certain the blade and all moving parts have stopped. Disconnect the spark plug wire, and keep the wire away from the spark plug to prevent accidental starting.
8. Do not run the engine indoors.
9. Mow across the face of slopes, never up-and-down. Exercise extreme caution when changing direction on slopes. Do not mow excessively steep slopes. Always be sure of your footing. A slip and fall can cause serious personal injury.
10. Always disconnect electric mowers (line operated) before cleaning, repairing or adjusting.
11. Never operate mower without proper guards, plates or other safety protective devices in place.

MAINTENANCE AND STORAGE

1. Check the blade and engine mounting bolts at frequent intervals for proper tightness.
2. Keep all nuts, bolts, and screws tight to be sure the equipment is in safe working condition.
3. Never store the equipment with gasoline in the tank inside of a building where fumes may reach an open flame or spark. Allow the engine to cool before storing in any enclosure.
4. To reduce fire hazard, keep the engine free of grass, leaves, or excessive grease.
5. Check the grass catcher bag frequently for wear or deterioration. For safety protection, replace only with new bag meeting original equipment specifications.



This unit is shipped WITHOUT GASOLINE or OIL. After assembly, see separate engine manual for proper fuel and engine oil recommendations.

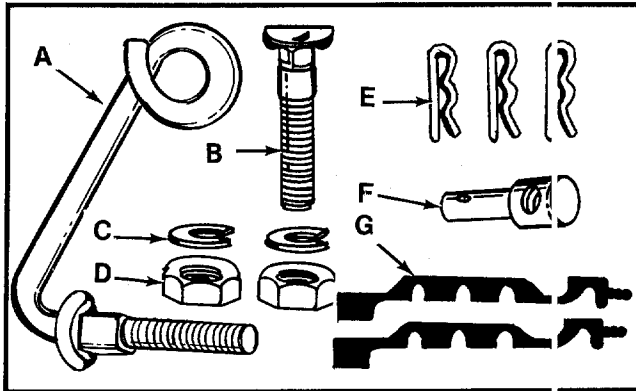


FIGURE 1.

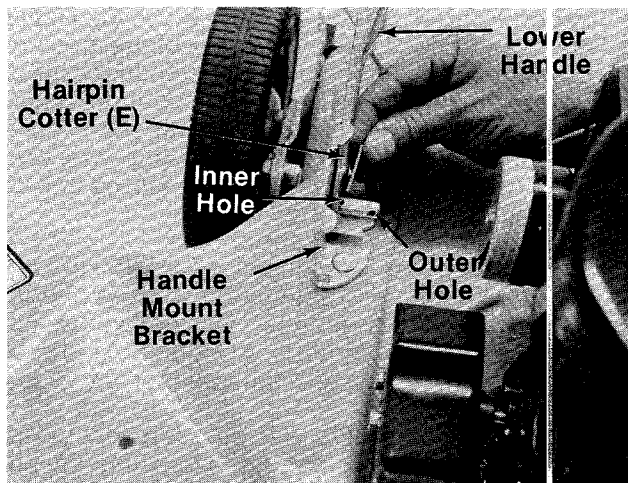


FIGURE 2.

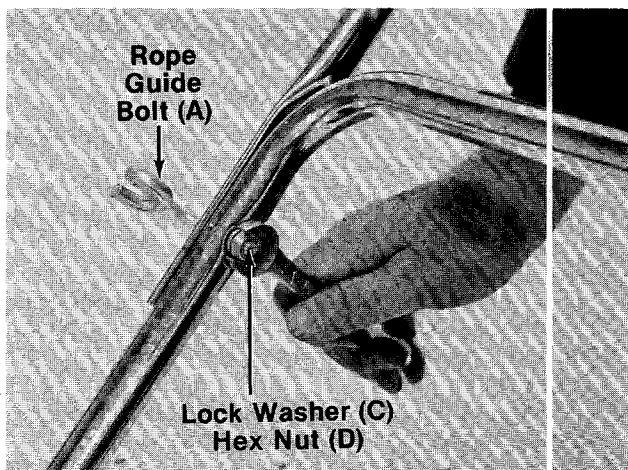


FIGURE 3.

ASSEMBLY INSTRUCTIONS

Contents of Hardware Pack: (See figure 1)

- A (1) Rope Guide Bolt
- B (1) Curved Carriage Bolt
- C (2) Lock Washers 5/16" I.D.
- D (2) Hex Nuts 5/16-18 Thread
- E (3) Hairpin Cotters
- F (1) Ferrule
- G (2) Cable Ties



Reference to right or left hand side of the mower is observed from the operating position.

1. Remove lawn mower and loose parts from carton. Make certain all parts and literature have been removed from the carton before the carton is discarded.
2. Extend the throttle control cable (attached to the upper handle) and the brake cable (attached to the engine) and place on the floor. Be careful not to bend or kink control cables.
3. Attach the lower handle by placing the bottom holes in the lower handle over the weld pins on the handle mount brackets. The hole in the lower handle which is for the clutch rod must be on the **left** side of the handle. Secure with hairpin cotters (E) in inner holes on weld pins.



There are two (2) holes in the handle mount brackets. Place the hairpin cotter in the inner hole for operation. Outer hole is for storage.



It may be necessary to bend the ends of the lower handle outward slightly to obtain a tight fit against the handle mount brackets.

4. Place the upper handle in position over the lower handle. The throttle control must be on the right hand side of the handle. Secure the right hand side of upper handle using the rope guide bolt (A), lock washer (C) and hex nut (D) as shown in figure 3.



Left handed operators may assemble the rope guide bolt to the left hand side of the handle for easier starting.

5. Secure the other side of the handle with curved head bolt (E), lock washer (C) and hex nut (D).

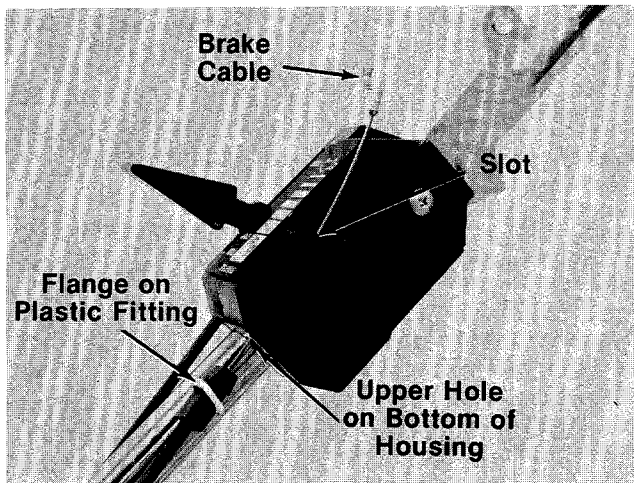


FIGURE 4.

6. Route the brake cable under the lower handle. Place the end of the brake cable into the upper hole on the bottom of the control housing, and through the slot as shown. The angle of the flange on the plastic fitting must be positioned as shown in figure 4. Be careful not to bend or kink the cable.

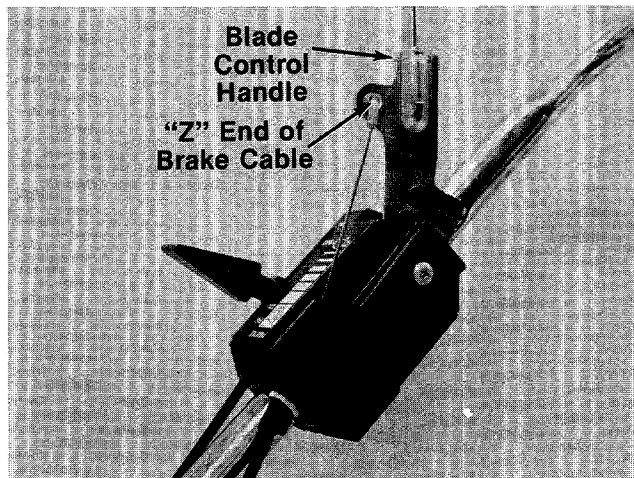


FIGURE 5.

7. Snap the plastic fitting on the end of the cable into the control housing.
8. Hook the "Z" end of the brake cable into the hole in the blade control handle. See figure 5. If additional slack is needed in order to hook the cable into the handle, proceed as follows.

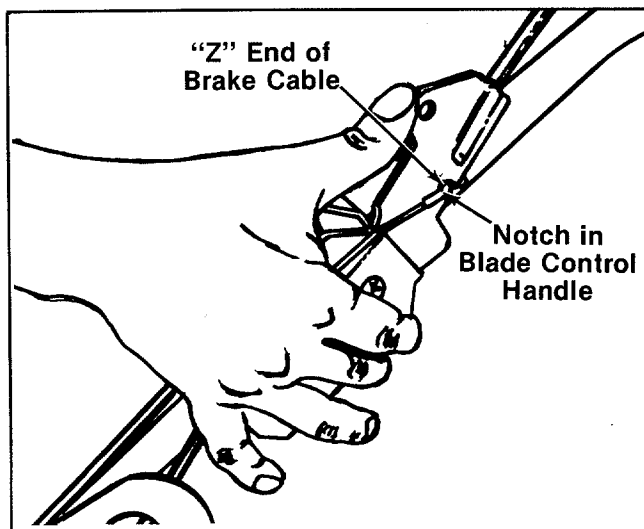


FIGURE 6.

- a. Hook the "Z" end of the cable into notch provided in the blade control handle. See figure 6.
- b. Squeeze blade control handle against upper handle.
- c. Release the blade control handle, unhook the cable from the notch and hook it into the hole in the blade control handle.

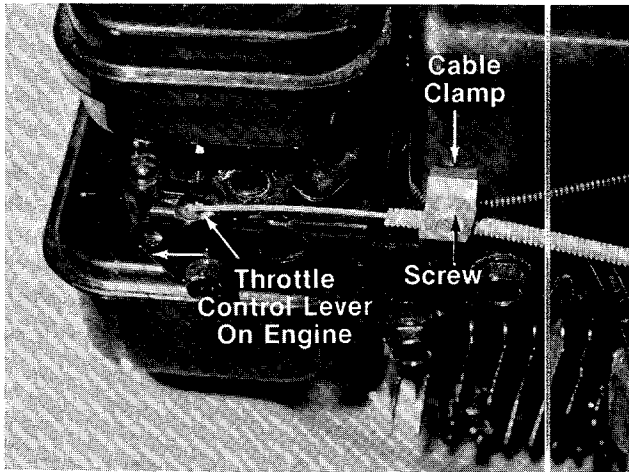


FIGURE 7.

9. Place the throttle control lever on the handle in "Fast" position.
10. Push the throttle control lever on the engine to the full open position (as far toward the outside of the unit as it will go) as shown in figure 7.
11. Hook the "Z" end of the throttle control cable into the hole in the control lever on the engine.
12. Loosen (do not remove) the screw on the cable clamp shown in figure 7. Slip the control casing under the clamp. With the throttle lever on the engine still in the full open position, tighten the screw to secure the throttle control cable.

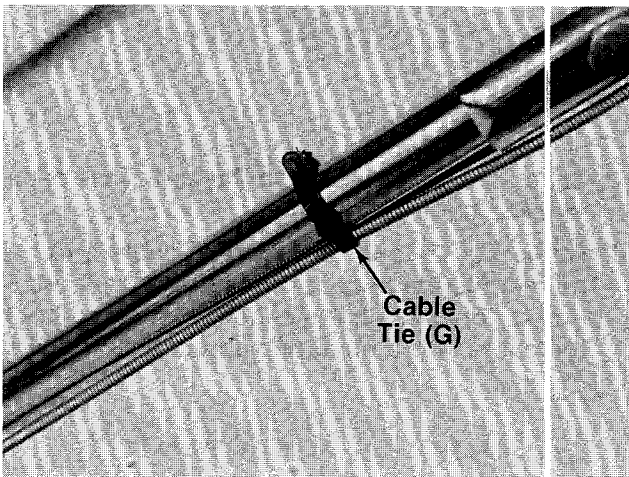


FIGURE 8.

13. Secure throttle control and brake cables to upper and lower handles with cable ties (G). See figure 8.

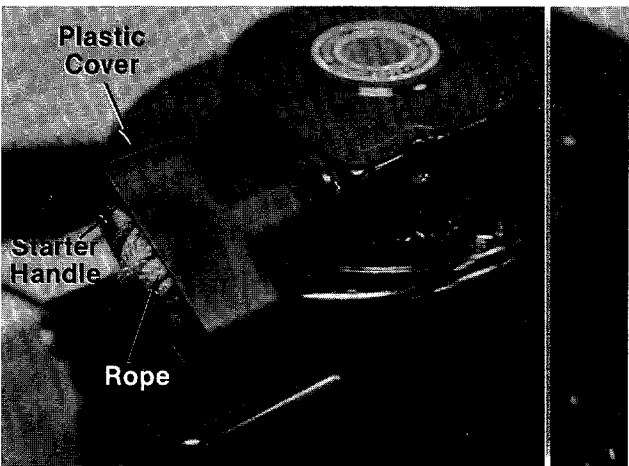


FIGURE 9.

14. The starter rope and handle may be secured with a plastic cover for shipping purposes. Remove the plastic cover and discard. See figure 9.

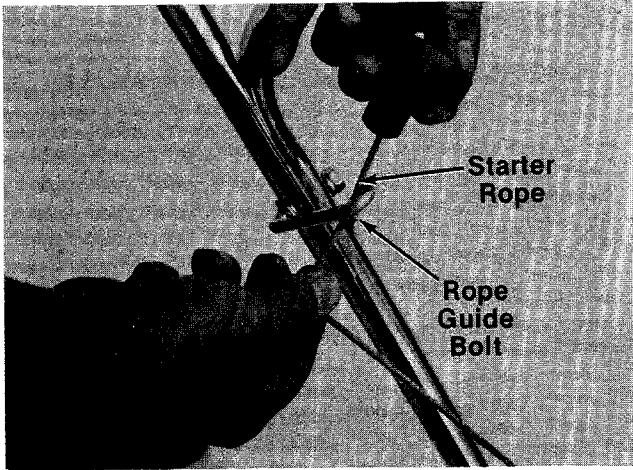


FIGURE 10.

15. With the spark plug wire disconnected and grounded, depress the blade control handle and pull the starter rope out from the engine.
16. Slip the starter rope into the rope guide bolt ← as shown in figure 10.

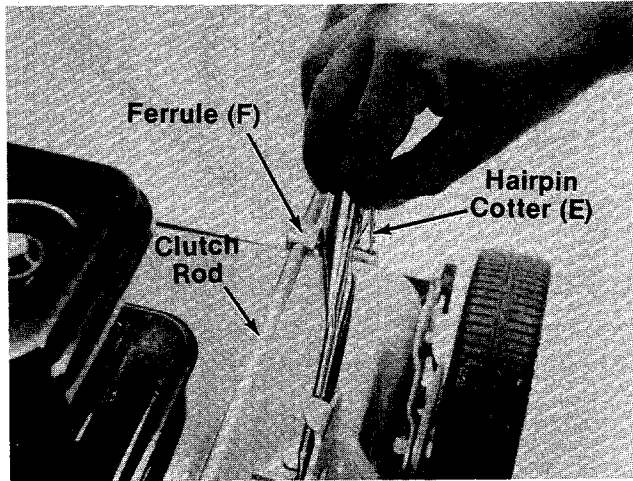


FIGURE 11.

17. Thread the clutch rod into the ferrule (F) until the ferrule lines up with the hole in the lower handle. Secure ferrule in handle with cotter pin (E) as shown in figure 11. Check for 1/8" clearance between drive pinion and front wheels. **See clutch rod adjustment** on page 11. ←
18. Check all nuts and bolts for correct tightness.

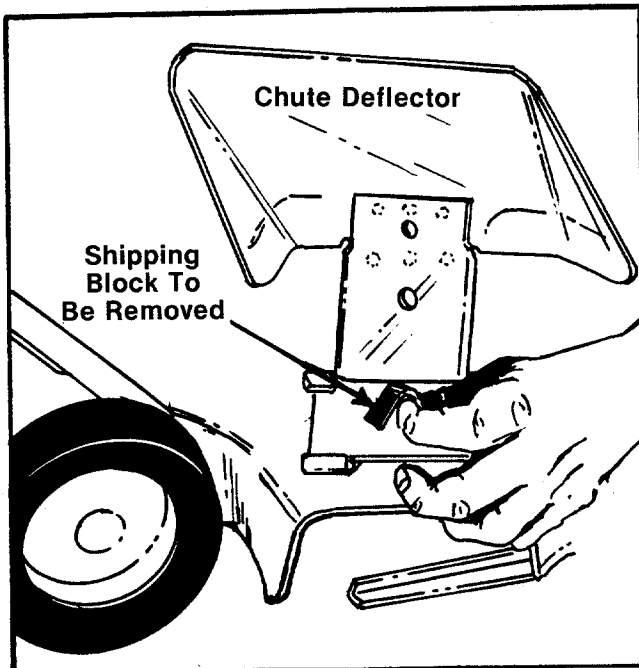


FIGURE 12.

CAUTION

Please note that the chute deflector on your mower is in an upright position. It is held in that position by a shipping block. This block is used for shipping purposes only. It must be removed and discarded before your mower is put into operation. ← See figure 12.

CONTROLS

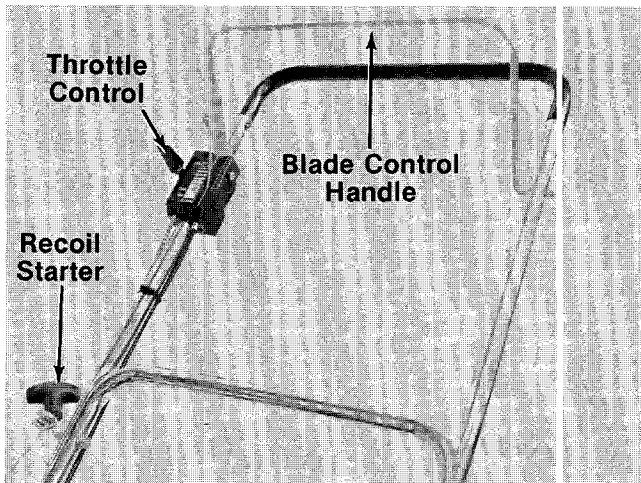


FIGURE 13.

BLADE CONTROL HANDLE



The blade control handle is located on the upper handle of the mower. See figure 13. The blade control handle must be depressed in order to operate the unit. Release the blade control handle to stop the engine and blade.



The blade will be rotating whenever the engine is running.

THROTTLE CONTROL

The throttle control is located on the right side of the upper handle. It is used to regulate the engine speed. The engine should be started with the engine in the FAST or START position.



The throttle control cannot be used to stop the engine.

RECOIL STARTER

The recoil starter handle is attached to the handle. See figure 13. Stand behind the unit in the operating position to start the unit.

OPERATION

Caution

Do Not Operate Mower Unless Guard or Entire Grasscatcher Is In Its Proper Place.



FIGURE 14.

Keep hands and feet away from the chute area on cutting deck. See figure 14.



For shipping purposes your mower is set with the wheels in a low cutting height position. For best results raise the cutting position until it is determined which height is best for your lawn. See cutting height adjustment section.

BREAK-IN INSTRUCTIONS

This mower should be broken in following the procedure described below. The added effort here will double the service life of the unit. Particular attention should be paid to the drive assembly adjustment.

1. Before starting the engine, lubricate all the bronze bearings on the drive shaft. The same oil which is used for the engine may be used for this.
2. Check drive assembly adjustment. When the handle is lifted, the clutch rod is moved to the self-propelled position. The black nylon drive pinions should mesh simultaneously with the gear tread tires. When the handle is lowered, the pinions should clear the wheels by 1/8". See clutch rod adjustment for further details.

BEFORE STARTING

1. Follow "Break-In Instructions." See above.
2. Fill sump with oil as instructed in the separate engine manual packed with your unit.
3. Fill fuel tank, using clean, fresh, lead-free, low lead, or regular grade leaded gasoline. Fill tank completely!

DO NOT MIX OIL WITH GASOLINE.

4. Attach spark plug wire to spark plug.

TO START ENGINE AND ENGAGE BLADE

1. Make sure handle is all the way back (free-wheeling position).
2. Move the throttle control lever to FAST or START position.
3. Standing behind the unit, depress the blade control handle and hold it against the upper handle as shown in figure 15.
4. Grasp the recoil starter handle as shown and pull up rapidly. Return it slowly to the rope guide bolt.
5. After engine starts, move throttle control lever to desired speed.



When starting the unit, place the unit facing a solid object to stop it if it is not correctly adjusted to be in "Neutral" position. If the unit shows signs of motion with the handle back in the "free-wheeling" position, shut off the engine immediately. Readjust the clutch rod as necessary. See clutch rod adjustment on page 11.

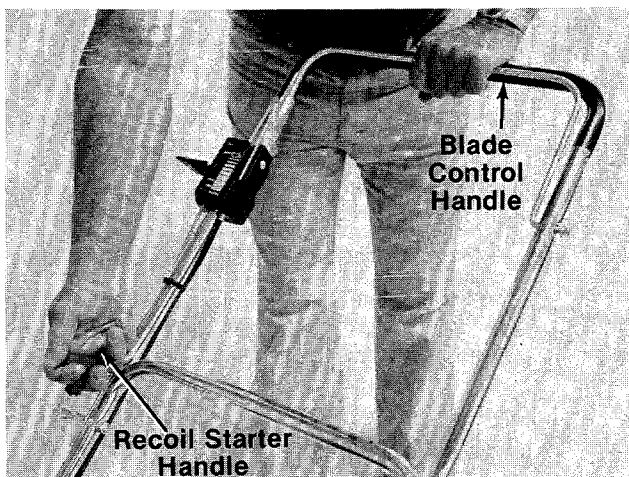


FIGURE 15.

TO STOP ENGINE AND BLADE

1. Release the blade control handle to stop the engine and blade.



The blade continues to rotate for a few seconds after the engine is shut off.

2. Disconnect the spark plug wire and ground it against the engine to prevent accidental starting while equipment is unattended.

TO ENGAGE DRIVE

Move the handle forward for self-propelled operation. The drive pinions will engage with the gear tread tires, and forward drive results.

To stop the forward drive, lower the handle. The unit will be free-wheeling. Self-propelled drive is resumed when handle is raised.

When operating this mower, unnecessary or excessive engaging of the drive pinions with the wheels should be avoided. Minimize the number of times the handle is raised and lowered. Failure to observe this operating rule can reduce the service life of the front tires and drive pinions substantially. When engaging the self-propelled mechanism, a slight forward push on the mower as the drive pinions and the gear tread tires mesh will add to smoother and quieter operation and will add substantially to the service life of both the tires and the drive pinions.

USING YOUR ROTARY MOWER

Be sure that lawn is clear of stones, sticks, wire, or other objects which could damage lawn mower or engine. Such objects could be accidentally thrown by the mower in any direction and cause serious personal injury to the operator and others.

Operate a new engine at intermediate speeds and light load for the first few hours as you would a new automotive engine.

For best results, do not cut wet grass because it tends to stick to the underside of the mower, preventing proper discharge of grass clippings, and could cause you to slip and fall. New grass, thick grass or wet grass may require a narrower cut. Blade speed should be adjusted to the condition of the lawn.

The best mowing pattern is one that allows the clippings to discharge towards the uncut part of the lawn. This permits recutting of the clippings to further pulverize them. When cutting high weeds, discharge towards cut portion, then recut at right angles to first direction.

For best results, cut off one-third or less of the total length of the grass. Lawn should be cut in the fall as long as there is growth.

This mower is designed to be operated at full throttle to give you the best cut and do the most effective job of bagging the cut grass.

➔ IMPORTANT

If you strike a foreign object, stop the engine. Remove wire from spark plug, thoroughly inspect the mower for any damage, and repair the damage before restarting and operating the mower. Extensive vibration of the mower during operation is an indication of damage. The unit should be promptly inspected and repaired.

ADJUSTMENTS

⚠ CAUTION

Do not at any time make any adjustment to lawn mower without first stopping engine and disconnecting spark plug wire.

CUTTING HEIGHT ADJUSTMENT

Units Without Height Adjustment Bracket:

Adjustment may be made by removing and moving axle bolts to desired position. Cutting heights will be raised as axle bolts are moved to a lower hole and lowered as axle bolts are moved to a higher hole in the deck. All axle bolts must be mounted in the same relative position to the deck. Cupped side of belleville washers must be against the deck.

To change the height of the front wheels, proceed as follows:

1. Place the front of mower deck on a block so that the front wheels are off the ground.
2. Remove the hairpin cotter from ferrule, located on clutch rod.
3. Slip the ferrule out of the lower handle.
4. With an adjustable wrench, remove the axle bolt, front wheel and belleville washer. See figure 16.

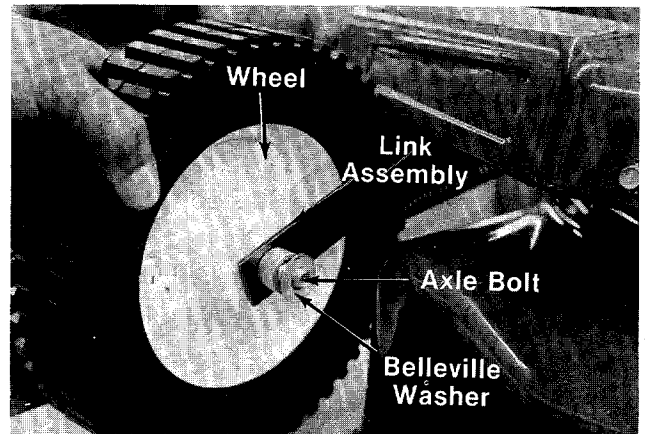


FIGURE 16.

➔ NOTE

When axle bolt is removed from deck, the link assembly is under spring tension and will pivot back against the deck.

5. Reassemble in selected hole. Cupped side of belleville washer must be toward the deck.
6. Raise the handle. Adjust ferrule and clutch rod (see clutch rod adjustment section). Slide ferrule into hole in lower handle. Secure with hairpin cotter.

Units With Height Adjustment Brackets

An adjusting plate and thumb lever at each wheel position provides cutting height adjustment. Each adjusting plate has five holes. Height of cut will be changed when the thumb lever is moved from one hole to another. Simply depress the lever towards wheel and move wheel and lever assembly to desired position. See figure 17.

Cutting height will be raised as the levers are lowered. Cutting height will be lowered as the levers are raised. All wheels must be positioned at the same height.

For rough or uneven lawns, move the wheels to a position which will give a higher cutting height.

➔ NOTE

Clutch rod **must** be adjusted each time cutting height is changed.

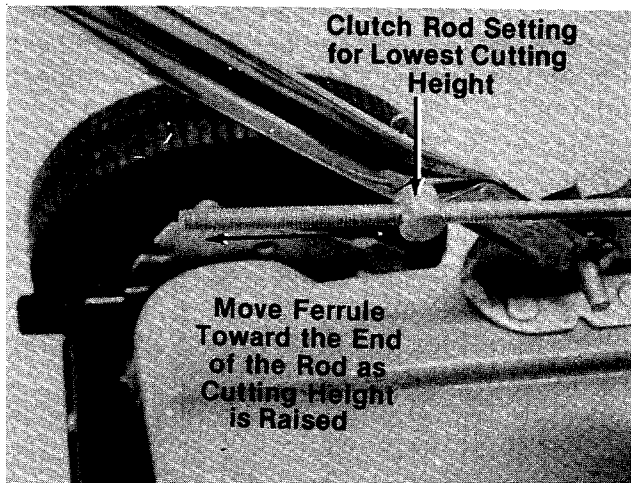


FIGURE 17.

CLUTCH ROD ADJUSTMENT

The drive pinion should be about 1/8" from the drive wheels when the clutch is disengaged (handle is **not** pushed forward). See figure 18.

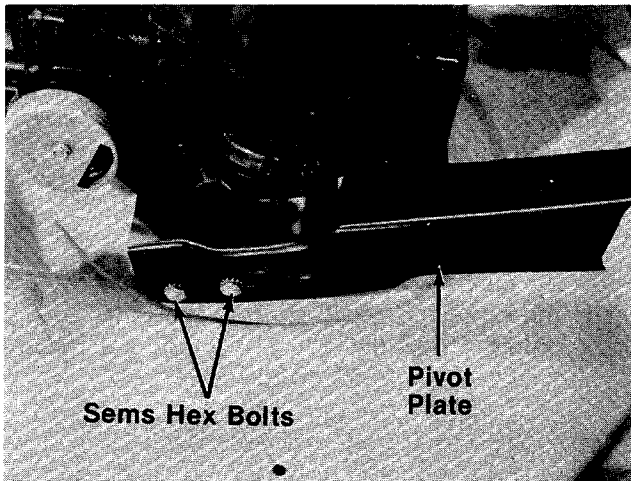


FIGURE 18.

If there is not 1/8" of clearance, proceed as follows:

1. Remove the cotter pin. See figure 11.
2. Pull the clutch rod and ferrule out of the lower handle.
3. Thread the ferrule on or off the rod as necessary.
4. Place ferrule back in position and secure with cotter pin. If the engagement and clearance are still not correct, repeat the above steps until 1/8" of clearance is obtained and the drive mechanism engages properly.

The clutch rod must be adjusted each time the cutting height is changed. Figure 19 illustrates the clutch rod setting for the lowest cutting height. As the cutting height is raised, the ferrule must be moved toward the end of the rod. See figure 19.

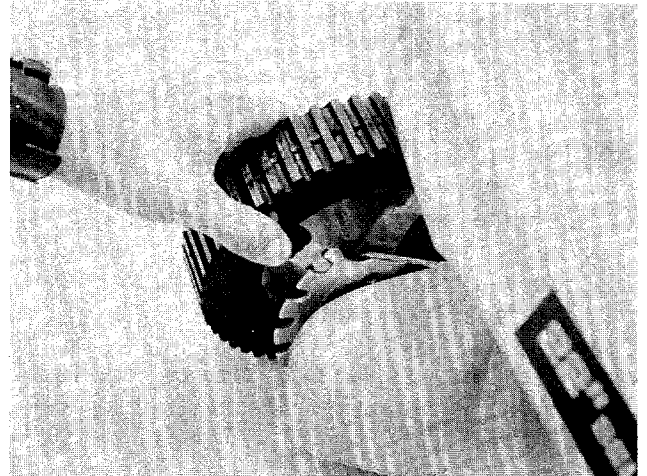


FIGURE 19.

CHAIN ADJUSTMENT

1. Loosen (do not remove) two sems hex bolts. See figure 20.
2. Pull pivot plate forward by hand. Do not force.
3. Tighten cap screws and check chain tension. Repeat adjustment if necessary.

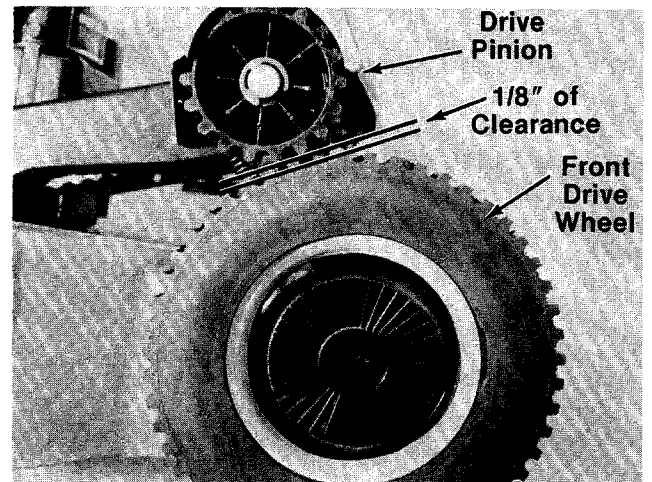


FIGURE 20.

THROTTLE

If adjustment becomes necessary, the throttle control wire assembly can be reset as follows:

1. Loosen, but do not remove, screw securing throttle control wire assembly at engine. See figure 7.

2. Move throttle control lever on handle to "FAST" position.
3. Move control lever on engine to full open position. Retighten screw to secure throttle control wire assembly.

CARBURETOR ADJUSTMENTS



If any adjustments are made to the engine while the engine is running (e.g. carburetor), keep clear of all moving parts. Be careful of heated surfaces and muffler.

Minor carburetor adjustment may be required to compensate for differences in fuel, temperature, altitude and load.

Refer to the separate engine manual packed with your mower for carburetor adjustment information.

LUBRICATION



Always stop engine and disconnect spark plug wire before cleaning, lubricating or doing any kind of work on lawn mower.

Blade Control—Lubricate the pivot points on the blade control handle and the brake cable at least once a season with light oil. See figure 21. The blade control must operate freely in both directions.

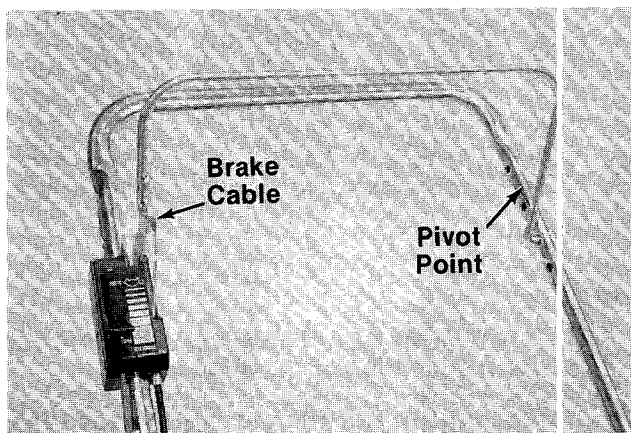


FIGURE 21.

Chute Deflector—The torsion spring and pivot point should be lubricated periodically with light oil to prevent any rust or binding. Deflector must work freely.

Wheels—Front and rear wheel bearings are of self-lubricating Fortiflex. They require no lubrication. However, if the wheels are removed for any reason, lubricate the surface of the axle bolt and the inner surface of the wheel with light oil. A 4 oz. plastic bottle of light oil lubricant is available. Order part number 737-0170. Engine oil may also be used.

Engine—Follow engine manual for lubrication instructions.

Throttle—Periodically lubricate throttle control lever and throttle wire assembly with a few drops of light oil for ease of operation.

MAINTENANCE



When tipping the unit, empty the fuel tank and keep engine spark plug side up.

CUTTING BLADE

A. Removal for Sharpening or Replacement



Be sure to disconnect and ground the spark plug wire before working on the cutting blade to prevent accidental engine starting.

Remove the large bolt and lock washer which holds the blade and adapter to the engine crankshaft. Remove the blade and adapter from the crankshaft.

If the blade or blade adapter needs replacing, remove the two small bolts, lock washers and nuts which hold the blade to the adapter.



Periodically inspect the blade adapter for cracks, especially if you strike a foreign object. Replace when necessary.

B. Sharpening

Remove the cutting blade by following the directions of the preceding section.

When sharpening the blade, follow the original angle of grind as a guide. It is **extremely important** that each cutting edge receives an equal amount of grinding to prevent an unbalanced blade. An unbalanced blade will cause excessive vibration when rotating at high speeds, may cause damage to the mower and could break, causing personal injury.

It is recommended that the blade always be removed from the adapter for the best test of balance. The blade can be tested by balancing it on a round shaft screwdriver. Remove metal from the heavy side until it balances evenly.

C. Reassembly

Before reassembling the blade and the blade adapter to the unit, lubricate the engine crankshaft and the inner surface of the blade adapter with light oil. Lubricating the bolt holes, bolts and inner surface of the nuts with light oil is also recommended. A 4 oz. plastic bottle of light oil lubricant is available. Order part number 737-0170. Engine oil may also be used.

When replacing the blade, be sure to install the blade with the side of the blade marked "Bottom" (or with part number) facing the ground when the mower is in the operating position.

Blade Mounting Torque

3/8" Dia. Bolt 375 in. lb. min., 450 in. lb. max.

5/16" Dia. Bolt 150 in. lb. min., 250 in. lb. max.

To insure safe operation of your unit, **all** nuts and bolts must be checked periodically for correct tightness.

DECK

The underside of mower deck should be cleaned after each period of use as grass clippings, leaves, dirt and other matter will accumulate. This accumulation of grass clippings, etc., is undesirable as it will invite rust and corrosion and may cause an uneven discharge of grass clippings at the next cutting.

The deck may be cleaned by tilting the mower forward or on its side and scraping clean with a suitable tool or by washing with a stream of water from a garden hose.



CAUTION

Do not direct the stream of water at a hot engine as damage to the engine may result.

ENGINE OIL

Check oil level before starting engine and after every 5 hours of operation. ADD oil as necessary to keep level to full mark on dipstick. Before removing dipstick, clean area around dipstick to

prevent dirt from entering oil fill opening. Engine should be in a level position when checking oil.

Change oil after first 5 hours of operation. Thereafter change every 25 hours. Change oil while engine is warm. Oil may be drained thru oil drain on bottom of engine. Oil capacity 1-1/4 pints.

AIR CLEANER

Service air cleaner every 25 hours under normal conditions. Clean every few hours under extremely dusty conditions. Poor engine performance and flooding usually indicates that the air cleaner should be serviced.

To service the air cleaner, refer to the separate engine manual packed with your unit.

SPARK PLUG

The spark plug should be cleaned and the gap reset once a season. Spark plug replacement is recommended at the start of each mowing season; check engine manual for correct plug type and gap specifications.

OFF-SEASON STORAGE

The following steps should be taken to prepare lawn mower for storage.

1. Clean and lubricate mower thoroughly as described in the lubrication instructions.
2. Refer to engine manual for correct engine storage instructions.
3. Coat mower's cutting blade with chassis grease to prevent rusting.
4. Store mower in a dry, clean area.

HANDLE STORAGE

The handle may be placed in an upright position for storage.

Remove the hairpin cotter from the ferrule on the clutch rod. Remove the ferrule from the handle. Move hairpin cotters to outer hole on weld pins. See figure 2. Press inward on the bottom of the lower handle and push forward. The handle will lock in this position.

To place the handle in the operating position, remove the starter rope from the rope guide bolt. Grasp the lower handle at the bottom, pull inward slightly and tip the handle backward. Place the cotter hairpins in the inner holes. With the spark plug wire disconnected and grounded, depress the blade control handle and pull the starter rope out from the engine. Slip the starter rope into the rope guide bolt. Reassemble the clutch rod.



CAUTION

Be certain to check the clutch rod adjustment.



The use of any accessory on this Rotary Mower other than those manufactured by the mower manufacturer is **not** recommended.

GRASS CATCHER Model 003 is available as optional equipment for the mower shown in this manual.



1. DO NOT operate the mower without the entire grass catcher or chute deflector in place.
2. DO NOT operate the mower without the protective shield on the rear of the deck in place.



Under normal usage bag material is subject to wear and should be checked periodically. Be sure any replacement bag complies with the mower manufacturer's recommendations.

For replacement bags, use only factory authorized replacement bag No. 764-0176.


NOTES

A large, empty rectangular box with a black border, occupying most of the page. It is intended for the user to write their notes.

Models 260 and 262

Meets CPSC Blade Safety Requirements

Lot/Model	Mfg. Date

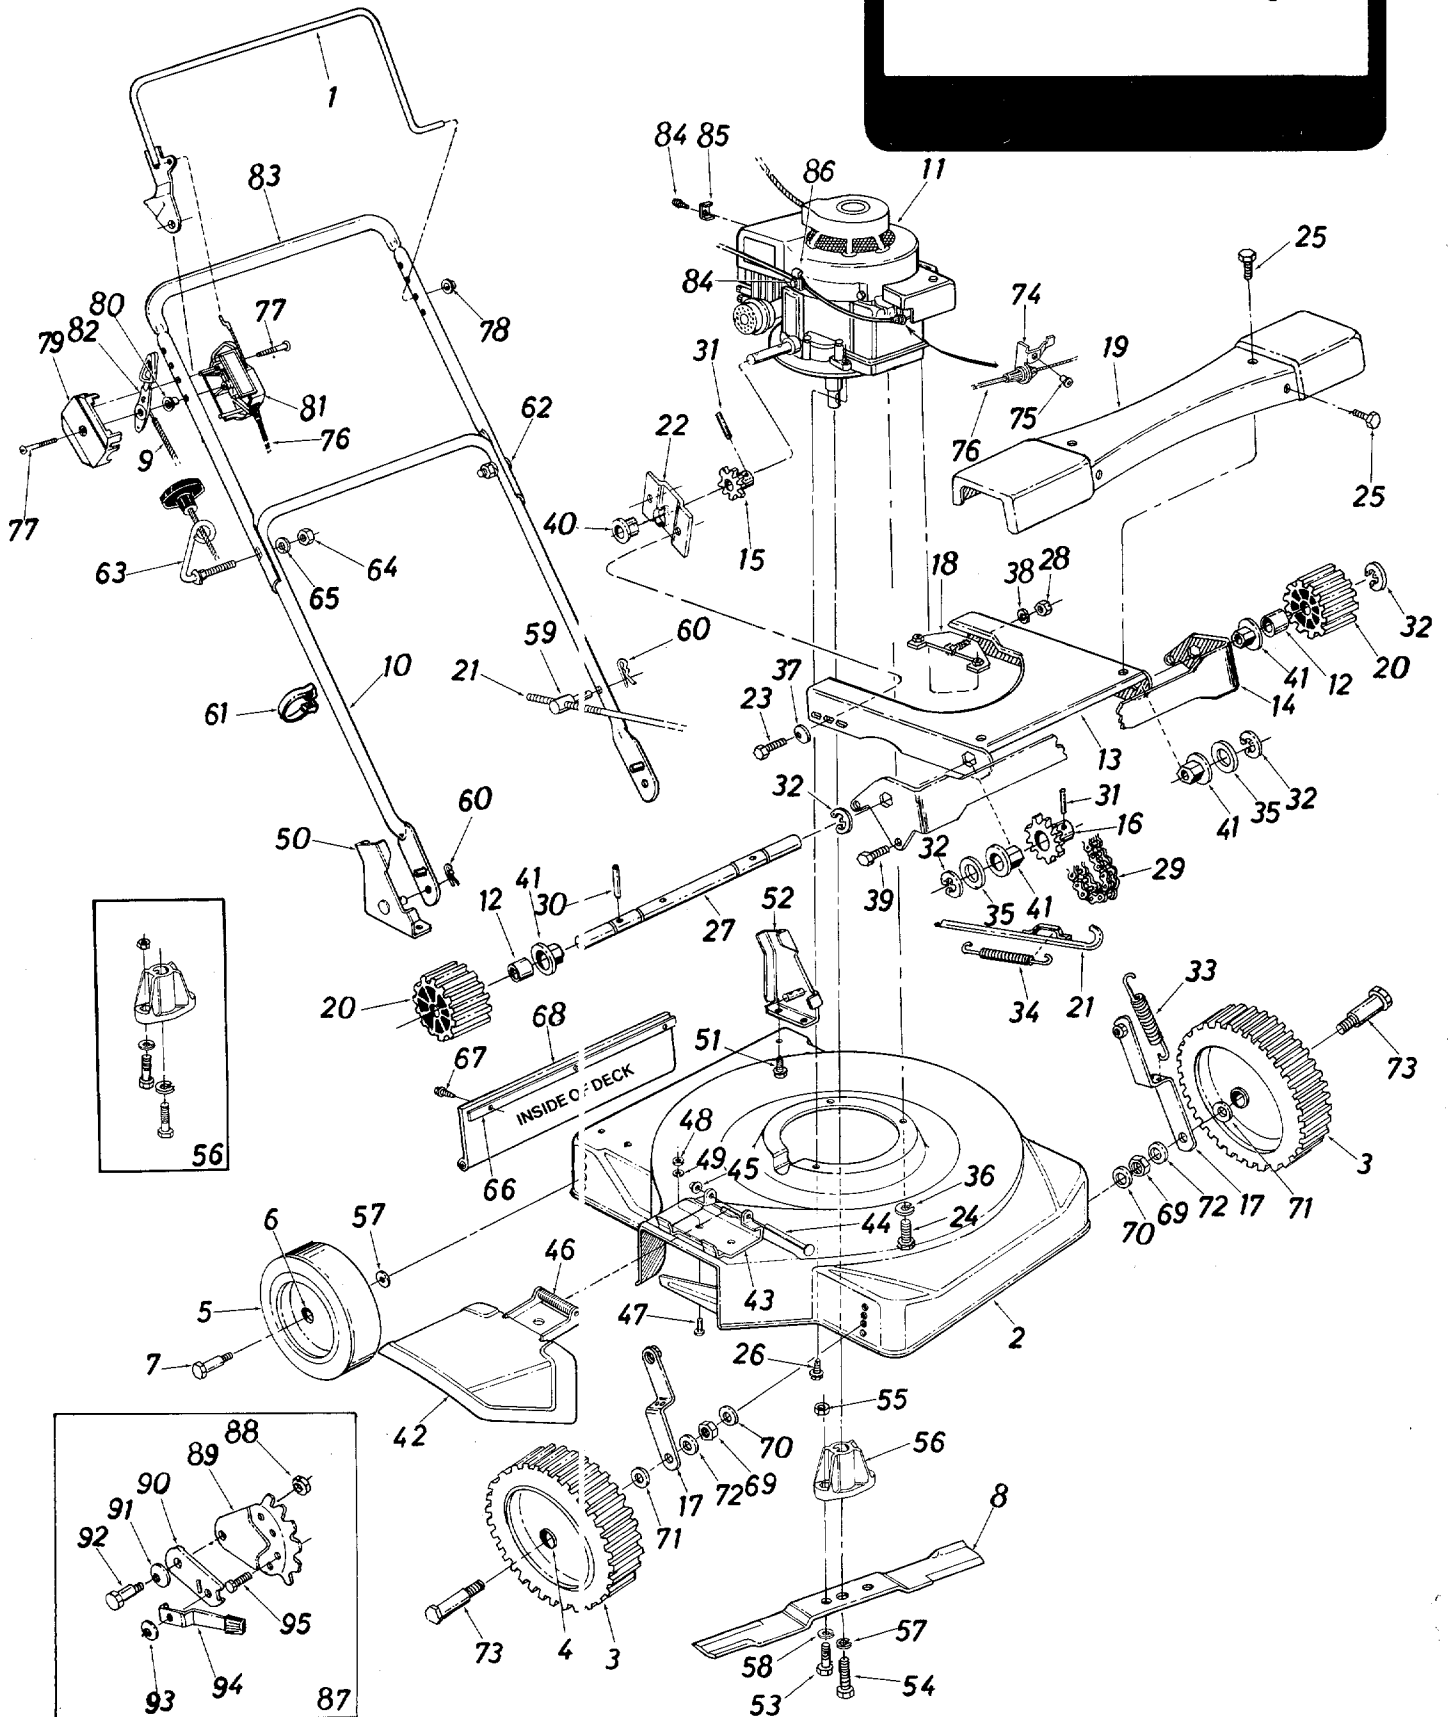

Models 260 and 262

PARTS LIST FOR MODELS 260 AND 262 ROTARY MOWERS

REF. NO.	PART NO.	COLOR CODE	DESCRIPTION	NEW PART	REF. NO.	PART NO.	COLOR CODE	DESCRIPTION	NEW PART
1	14320		Control Handle Ass'y.—R.H.	N	46	732-0253		Torsion Spring	
2	14918		22" Deck Ass'y.		47	710-0289		Hex Bolt 1/4-20 x .50" Lg.*	
3	734-0538		Wheel Ass'y.—Front 8 x 1.75		48	712-0287		Hex Nut 1/4-20 Thd.*	
4	741-0262		Flange Brg. (Plastic)		49	736-0329		L-Wash. 1/4" I.D.*	
5	734-0894		Wheel Ass'y.—Rear 8 x 1.75		50	14164		Handle Brkt. Ass'y.—R.H.	
6	741-0262		Flange Brg. (Plastic)		51	710-0603		Hex Wash. Hd. Self-Tap Scr. 5/16-18 x .50" Lg.	
7	738-0213		Axle Bolt—Rear (260)		52	14165		Handle Brkt. Ass'y.—L.H.	
	738-0102		Axle Bolt—Rear (262)		53	710-0117		Hex Bolt 3/8-24 x 1.00" Lg. (Grade 5)	
8	742-0125		Blade 22"		54	710-0331		Hex Bolt 3/8-24 x 2.25" Lg. (Grade 5)	
9	746-0417		Throttle Wire—43.0"		55	712-0123		Hex Nut 5/16-24 Thd.*	
10	749-0392		Lower Handle (Chrome)		56	753-0348		Blade Adapter Kit	N
	749-0446		Lower Handle (Painted)		57	736-0217		Bell-Wash. .400" I.D. x .88" O.D.	
11	—		Engine		58	736-0119		L-Wash. 5/16" I.D.*	
12	02265		Crank Spacer .632" I.D. x .75" O.D. x .442		59	711-0570		Engagement Ferrule	
13	10370		Pivot Plate		60	714-0104		Intern. Cot. Pin 5/16" Dia.	
14	10372		Drive Support		61	726-0192		Cable Tie	
15	10377		Sprocket Ass'y.		62	710-0671		Curved Carriage Bolt 5/16-18 x 1.38" Lg.	
16	10378		Sprocket Ass'y.		63	710-0842		Rope Guide Bolt	
17	10379		Link Ass'y.		64	712-0267		Hex Nut 5/16-18 Thd.*	
18	10381		Engine Bracket Ass'y.		65	736-0119		L-Wash. 5/16" I.D.*	
19	10913		Drive Cover		66	14836		Retainer Strip	
20	10914		Drive Pinion		67	710-0776		Hex Wash. Hd. Self-Tap Scr. 1/4 x .62" Lg.	
21	12613		Clutch Rod Ass'y.		68	731-0575		Rear Flap Ass'y.	
22	13708		Bearing Support		69	712-0266		Hex Cent. L-Nut 3/8-16 Thd. (260 Only)	
23	710-0352		Hex "B"-Tap Scr. 1/4 x .38" Lg.		70	736-0105		Bell-Wash. .400" I.D. x .88" O.D.	
24	710-0442		Hex Bolt 5/16-18 x 1.50" Lg.*		71	736-0160		Fl-Wash. .531" I.D. x .930" O.D.	
25	710-0599		Hex Wash. Self-Tap Scr. 1/4-20 x .50" Lg.		72	736-0300		Fl-Wash. .385" I.D. x .87" O.D. (260 Only)	
26	710-0654		Hex Wash. Hd. TT-Tap Scr. 3/8-16 x 1.00" Lg.		73	738-0414		Axle Bolt—Front (262)	
27	711-0435		Shaft		74	14924		Axle Bolt—Front (262)	N
28	712-0116		Hex Ins. L-Nut 3/8-24 Thd.		75	726-0171		Cable Brkt.	
29	713-0257		#48 Chain 1/2" Pitch x 52 Links—E.		76	746-0478		Pop Rivet .156" Dia. x .379	
30	715-0246		Spring Pin Spir. 3/16" Dia. x 1.25" Lg.		77	710-0796		Control Cable x 49.0"—Blue	
31	715-0247		Spring Pin Spir. 3/16" Dia. x 1.00" Lg.		78	726-0135		Truss Mach. Tap Scr. #12 x 1.50" Lg.	
32	716-0106		"E"-Ring for .625" Dia. Shaft		79	731-0523		Cap Speed Nut 5/16" Rod	
33	732-0209		Extension Spring .47" O.D. x 2.03" Lg.		80	731-0524		Control Panel Half	
34	732-0433		Extension Spring .50" O.D. x 5.0" Lg.		81	731-0526		Control Disc Pin	
35	736-0116		Fl-Wash. .635" I.D. x .93" O.D. x .060		82	731-0528		Clutch Panel Half	
36	736-0119		L-Wash. 5/16" I.D.*		83	749-0536		Throttle Control Lever	
37	736-0175		Spr.-Wash. .270" I.D. x .57" O.D. x .025		84	749-0538		Upper Handle (Chrome)	
38	736-0300		Fl-Wash. .385" I.D. x .87" O.D. x .06		85	710-0429		Upper Handle (Painted)	
39	738-0147		Shld. Bolt .500" Dia. x .170		86	751-0333		Hex B-Tap Scr. #10 x .38" Lg.	
40	748-0142		Flange Brg.		87	12894		Casing Clamp	
41	748-0227		Hex Flange Brg. .630" I.D.			12321		Casing Clamp	
42	11679		Chute Deflector Ass'y. Comp.			12322		Height Adj. Ass'y. Comp.— L.H. (262 Only)	
43	11130		Adapter Plate					Height Adj. Ass'y. Comp.— R.H. (262 Only)	
44	711-0555		Pivot Pin						
45	726-0106		Push Nut 1/4" Rod						

PARTS LIST FOR MODELS 260 AND 262 ROTARY MOWERS (CONTINUED)

REF. NO.	PART NO.	COLOR CODE	DESCRIPTION	NEW PART
88	712-0375		Hex Cent. L-Nut 3/8-16 Thd. (262 Only)	
89	12323		Index Plate (262 Only)	
90	10619		Pivot Bar (262 Only)	
91	736-0255		Belleville Washer (262 Only)	
92	738-0269		Shld. Bolt (262 Only)	
93	736-0105		Belleville Wash. 3/8" I.D.	
94	10531		Spring Lever Ass'y. w/Knob (262 Only)	
95	710-0209		Hex Sems Bolt 3/8-16 x .62" Lg.* (262 Only)	

*For faster service obtain standard nuts, bolts and washers locally. If these items cannot be obtained locally, order by part number and size as shown on parts list.

(462—Red Flake)

When ordering parts if color or finish is important, use color code shown at left. (e.g. Red Flake—11430 (462).)



NOTE

This instruction manual covers various models and all specifications shown do not necessarily apply to your model. Specifications subject to change without notice or obligation.

NOTE: The engine is not under warranty by the mower manufacturer. . . If repairs or service is needed on the engine, please contact your nearest authorized engine service outlet. Check the "Yellow Pages" of your telephone book under "Engines— Gasoline."



PARTS INFORMATION

POWER EQUIPMENT PARTS AND SERVICE

Parts and service are available through the authorized service firms listed below. All orders should specify the model number of your unit, part numbers, description of parts and the quantity of each part required.

NOTE: If any parts are found to be missing or defective upon assembly of this unit, write to advise the factory so that immediate replacement can be made.

ALABAMA	BIRMINGHAM	
Auto Electric & Carburetor Co.	2625 4th Ave. S.	35233
ARKANSAS	NORTH LITTLE ROCK	
Sutton's Lawn Mower Shop	5301 Roundtop Drive Box 368, Rt. 4	72117
CALIFORNIA	PORTERVILLE	
Billious	75 North D Street	93257
COLORADO	DENVER	
Spitzer Industrial Products Co.	Box 29114, 6601 N. Washington St.	80229
FLORIDA	JACKSONVILLE	
Radco Distributors	4909 Victor St. Box 5459	32207
	OPA LOCKA	
Small Eng. Dist.	2351 N.W. 147th St.	33054
GEORGIA	EAST POINT	
East Point Cycle & Key	2834 Church St.	30344
ILLINOIS	LYONS	
Keen Edge Co.	8615 Ogden Ave.	60534
INDIANA	ELKHART	
Parts & Sales Inc.	2101 Industrial Pkwy.	46514
IOWA	DUBUQUE	
Power Lawn & Garden Equip.	2551 J.F. Kennedy	52001
LOUISIANA	MONROE	
Mid-South Power	700 Pine St.	71201
	NEW ORLEANS	
Suhren Engine Co.	8330 Earhart Blvd.	70118
MARYLAND	TAKOMA PARK	
Center Supply Co.	6867 New Hampshire Ave.	20912
MASSACHUSETTS	SPRINGFIELD	
Morton B. Collins Co.	300 Birnie Ave.	01107
MICHIGAN	LANSING	
Lorenz Service Co.	2500 S. Pennsylvania	48910
	MOUNT CLEMENS	
Power Equipment Dist.	340 Hubbard	48043
MINNESOTA	HOPKINS	
Hance Distributing Inc.	420 Excelsior Ave. W.	55343
MISSISSIPPI	BILOXI	
Biloxi Sales & Service, Inc.	506 Caillavet St.	39533
MISSOURI	KANSAS CITY	
Automotive Equip. Service	3117 Holmes St.	64109
	ST. JOSEPH	
Ross-Frazier Supply Co.	8th and Monterey	64503
	ST. LOUIS	
Henzler, Inc.	2015 Lemay Ferry Road	63125
NEW JERSEY	BELLMAWR	
Lawnmower Parts Inc.	717 Creek Rd.	08030
NEW MEXICO	ALBUQUERQUE	
Spitzer Eng. & Parts	1023 Third Ave. N.W.	87103
NEW YORK	CARTHAGE	
Gamble Dist., Inc.	West End Ave.	13619

BRIGGS AND STRATTON, TECUMSEH AND PEERLESS PARTS AND SERVICE

Briggs & Stratton, Tecumseh and Peerless parts and service should be handled by your nearest authorized engine service firm. Check the yellow pages of your telephone directory under the listing **Engines—Gasoline**, Briggs & Stratton or Tecumseh Lauson.

NORTH CAROLINA	GOLDSBORO	
Smith Hardware Co.	515 N. George St.	27530
	GREENSBORO	
Dixie Sales Company	335 N. Green	27402
OHIO	CARROLL	
Stebe's Mid-State Mower Supply ..	Box 366, 71 High St.	43112
	CLEVELAND	
Bleckrie, Inc.	7900 Lorain Ave.	44102
	WADSWORTH	
National Central	687 Seville Rd.	44281
	YOUNGSTOWN	
Burton Supply Co.	1301 Logan Ave. Box 929	44501
OKLAHOMA	MUSKOGEE	
Victory Motors, Inc.	605 S. Cherokee	74401
OREGON	PORTLAND	
Kenton Supply Co.	8216 N. Denver Ave.	97217
PENNSYLVANIA	HARRISBURG	
EECO Inc.	4021 N. 6th St.	17110
	PHILADELPHIA	
Thompson Rubber Co.	5222-24 N. Fifth St.	19120
	PITTSBURGH	
Bluemont Co.	11125 Frankstown Rd.	15235
	PUNXSUTAWNEY	
Frank Roberts & Sons	R. D. 2	15767
TENNESSEE	KNOXVILLE	
Master Repair Service	2000 Western Ave.	37921
	MEMPHIS	
American Sales & Service, Inc.	3035-43 Bellbrook	38116
TEXAS	DALLAS	
Marr Brothers, Inc.	423 E. Jefferson	75203
	FORT WORTH	
Woodson Sales Corp.	1702 N. Sylvania	76111
	HOUSTON	
Bullard Supply Co.	2409 Commerce St.	77003
	SAN ANTONIO	
Engine House Inc.	8610 Botts Lane P.O. Box 17867	78217
UTAH	SALT LAKE CITY	
A-1 Engine & Mower Co.	439 E. 900 So.	84111
VIRGINIA	ASHLAND	
RBI Corp.	Lake Ridge Rd. 101 Cedar Run Dr.	23005
WASHINGTON	SEATTLE	
Bailey's Inc.	1414 14th Ave.	98122
WISCONSIN	MARSHFIELD	
Power Pac	301 E. 29th St.	54449
	APPLETON	
Appleton Automotive Supply Co. ..	123 S. Linwood Ave. P.O. Box 798	54911
	TWIN LAKES	
E-Kon Small Engine Spec.	122 Lance Dr.	53181

WARRANTY PARTS AND SERVICE POLICY

(0782)

The purpose of warranty is to protect the customer from defects in workmanship and materials, defects which are NOT detected at the time of manufacture. It does not provide for the unlimited and unrestricted replacement of parts. Use and maintenance are the responsibility of the customer. The manufacturer cannot assume responsibility for conditions over which it has no control. Simply put, if it's the manufacturer's fault, it's the manufacturer's responsibility; if it's the customer's fault, it's the customer's responsibility.

CLAIMS AGAINST THE MANUFACTURER'S WARRANTY INCLUDES:

1. Replacement of Missing Parts on new equipment.
2. Replacement of Defective Parts within the warranty period.
3. Repair of Defects within the warranty period.

All claims MUST be substantiated with the following information:

1. Model Number of unit involved.
2. Date unit was purchased or first put into service.
3. Date of failure.
4. Nature of failure.