

OWNER'S MANUAL

22" SELF- PROPELLED ROTARY MOWERS

**Model Numbers
123-280A
123-282A**

**Important:
Read Safety Rules and
Instructions Carefully**

Thank you for purchasing an
American built product.

INDEX

Safe Operation Practices	3	Maintenance	12
Assembly	4	Off-Season Storage	13
Controls	8	Illustrated Parts	14
Operation	9	Repair Parts List	15
Adjustments	10	Parts Information	Back Cover
Lubrication	12		

LIMITED WARRANTY

For one year from the date of original retail purchase, MTD PRODUCTS INC will either repair or replace, at its option, free of charge, F.O.B. factory or authorized service firm, any part or parts found to be defective in material or workmanship. Transportation charges for the movement of any power equipment unit or attachment are the responsibility of the purchaser. Transportation charges for any parts submitted for replacement under this warranty must be paid by the purchaser unless such return is requested by MTD PRODUCTS INC.

This warranty will not apply to any part which has become inoperative due to misuse, excessive use, accident, neglect, improper maintenance, alterations, or unless the unit has been operated and maintained in accordance with the instructions furnished. This warranty does not apply to the engine, motor, battery, battery charger or component parts thereof. Please refer to the applicable manufacturer's warranty on these items.

This warranty will not apply where the unit has been used commercially.

Warranty service is available through your local authorized service dealer or distributor. If you do not know the dealer or distributor in your area, please write to the Customer Service Department of MTD.

The return of a complete unit will not be accepted by the factory unless prior written permission has been extended by MTD.

This warranty gives you specific legal rights. You may also have other rights which vary from state to state.



This unit is equipped with an internal combustion engine and should not be used on or near any unimproved forest-covered, brush-covered or grass-covered land unless the engine's exhaust system is equipped with a spark arrester meeting applicable local or state laws (if any). If a spark arrester is used, it should be maintained in effective working order by the operator.

In the State of California the above is required by law (Section 4442 of the California Public Resources Code). Other states may have similar laws. Federal laws apply on federal lands. A spark arrester muffler is available at your nearest engine authorized service center.



WARNING

To reduce the potential for any injury, comply with the following safety instructions. Failure to comply with the instructions may result in personal injury.

SAFE OPERATION PRACTICES FOR WALK-BEHIND MOWERS

TRAINING

1. Read this owner's manual carefully in its entirety before attempting to assemble or operate this machine. Be completely familiar with the controls and the proper use of this machine before operating it. Keep this manual in a safe place for future and regular reference and for ordering replacement parts.
2. Your rotary mower is a precision piece of power equipment, not a plaything. Therefore, exercise extreme caution at all times.
3. Never allow children to operate a power mower. Only persons well acquainted with these rules of safe operation should be allowed to use your mower.
4. Keep the area of operation clear of all persons, particularly small children and pets. Stop engine when they are in the vicinity of your mower. Although the area of operation should be completely cleared of foreign objects, an object may have been overlooked and could be accidentally thrown by the mower in any direction and cause serious personal injury to the operator or any others allowed in the area.

PREPARATION

1. Thoroughly inspect the area where the equipment is to be used. Remove all stones, sticks, wire, bones and other foreign objects which could be picked up and thrown by the mower in any direction and cause serious personal injury to the operator or any others allowed in the area.
2. Do not operate equipment when barefoot or wearing open sandals. Always wear substantial footwear.
3. Do not wear loose fitting clothing that could get caught on the mower.
4. Check the fuel before starting the engine. Gasoline is an extremely flammable fuel. Do not fill the gasoline tank indoors, while the engine is running, or while the engine is still hot. Wipe off any spilled gasoline before starting the engine as it may cause a fire or explosion.
5. Disengage the self-propelled mechanism or drive clutch on units so equipped before starting the engine.
6. The blade control handle is a safety device. Never attempt to bypass its operation. Doing so makes the safety device inoperative and may result in personal injury through contact with the rotating blade. The blade control handle must operate easily in both directions.
7. Never attempt to make a wheel or cutting height adjustment while the engine is running.
8. Mow only in daylight or in good artificial light.
9. Never operate the equipment in wet grass. Always be sure of your footing. A slip and fall can cause serious personal injury. Keep a firm hold on the handle and walk, never run.

OPERATION

1. Do not change the engine governor settings or overspeed the engine. Excessive engine speeds are dangerous.
2. Do not put hands or feet near or under rotating parts. Keep clear of the discharge opening at all times as the rotating blade can cause injury.
3. Stop the blade when crossing gravel drives, walks or roads.
4. After striking a foreign object, stop the engine, remove the wire from the spark plug, and thoroughly inspect the mower for any damage. Repair the damage before restarting and operating the mower.
5. If the equipment should start to vibrate abnormally, stop the engine and check immediately for the cause. Vibration is generally a warning of trouble.
6. Shut the engine off and wait until the blade comes to a complete stop before removing the grass catcher or unclogging the chute. The cutting blade continues to rotate for a few seconds after the engine is shut off. Never place any part of the body in the blade area until you are sure the blade has stopped rotating.
7. Before cleaning, repairing or inspecting, make certain the blade and all moving parts have stopped. Disconnect the spark plug wire, and keep the wire away from the spark plug to prevent accidental starting.
8. Do not run the engine indoors.
9. Mow across the face of slopes, never up-and-down. Exercise extreme caution when changing direction on slopes. Do not mow excessively steep slopes. Always be sure of your footing. A slip and fall can cause serious personal injury.
10. Always disconnect electric mowers (line operated) before cleaning, repairing or adjusting.
11. Never operate mower without proper guards, plates or other safety protective devices in place.

MAINTENANCE AND STORAGE

1. Check the blade and engine mounting bolts at frequent intervals for proper tightness.
2. Keep all nuts, bolts, and screws tight to be sure the equipment is in safe working condition.
3. Never store the equipment with gasoline in the tank inside of a building where fumes may reach an open flame or spark. Allow the engine to cool before storing in any enclosure.
4. To reduce fire hazard, keep the engine free of grass, leaves, or excessive grease.
5. Check the grass catcher bag frequently for wear or deterioration. For safety protection, replace only with new bag meeting original equipment specifications.



Reference to right or left hand side of the mower is observed from the operating position.

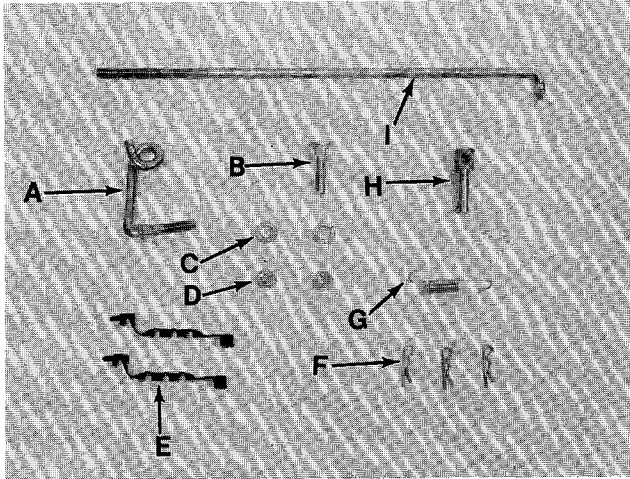


FIGURE 1.

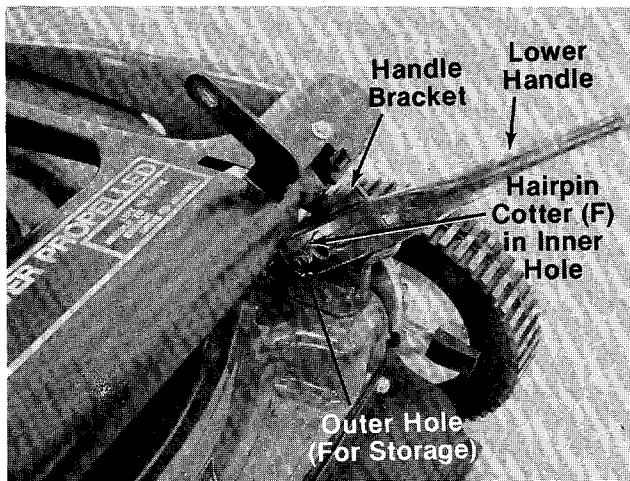


FIGURE 2.

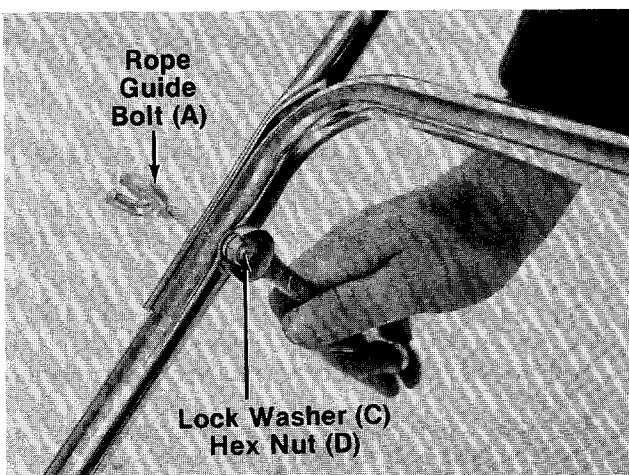


FIGURE 3.

ASSEMBLY INSTRUCTIONS



This unit is shipped WITHOUT GASOLINE or OIL. After assembly, see separate engine manual for proper fuel and engine oil recommendations.

← Contents of Hardware Pack: (See figure 1)

- A (1) Rope Guide Bolt
- B (1) Curved Head Carriage Bolt
- C (2) Lock Washers 5/16" I.D.
- D (2) Hex Nuts 5/16-18 Thread
- E (2) Cable Ties
- F (3) Hairpin Cotter
- G (1) Spring
- H (1) Ferrule
- I (1) Clutch Rod

1. Remove lawn mower and loose parts from carton. Make certain all parts and literature have been removed from the carton before the carton is discarded.
2. Extend the throttle control cable (attached to the upper handle) and the brake cable (attached to the engine) and place on the floor. Be careful not to bend or kink control cables.

- ← 3. Attach the lower handle by placing the bottom holes in the lower handle over the weld pins on the handle mount brackets. Make certain the instruction label on the lower handle can be read from the operating position. Secure with hairpin cotters (F) in inner holes on weld pins. See figure 2.



There are two (2) holes in the handle mount brackets. Place the hairpin cotter in the inner hole for operation. Outer hole is for storage.



It may be necessary to bend the ends of the lower handle outward slightly to obtain a tight fit against the handle mount brackets.

- ← 4. Place the upper handle in position over the lower handle. The throttle control must be on the left hand side of the handle. Secure the right hand side of upper handle using the rope guide bolt (A), lock washer (C) and hex nut (D) as shown in figure 3.

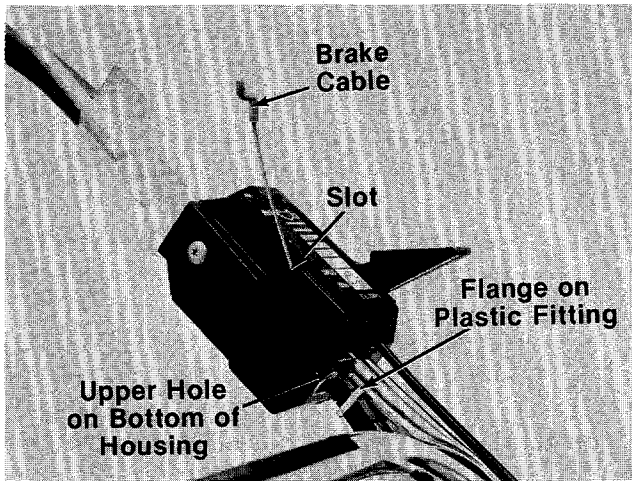


FIGURE 4.

NOTE

Left handed operators may assemble the rope guide bolt to the left hand side of the handle for easier starting.

5. Secure the other side of the handle with curved head bolt (B), lock washer (C) and hex nut (D).
- ← 6. Place the end of the brake cable into the upper hole on the bottom of the throttle control housing, and through the slot as shown in figure 4. The angle of the flange on the plastic fitting must be positioned as shown in the illustration. Be careful not to bend or kink the cable.

NOTE

The control cables should be assembled under the lower handle.

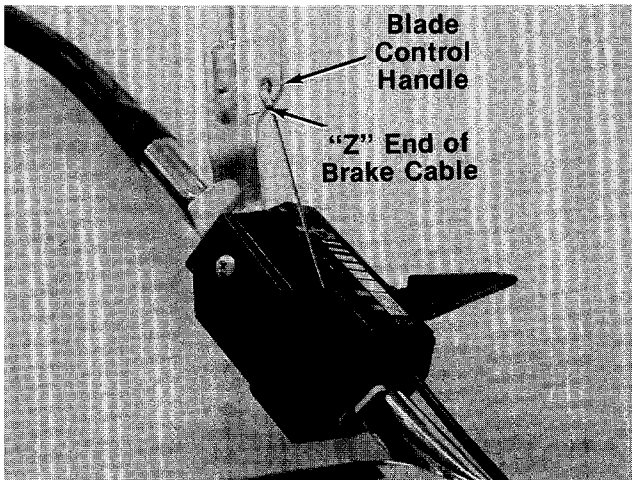


FIGURE 5.

7. Snap the end of the cable into the throttle control housing.
- ← 8. Hook the "Z" end of the brake cable into blade control handle. See figure 5.

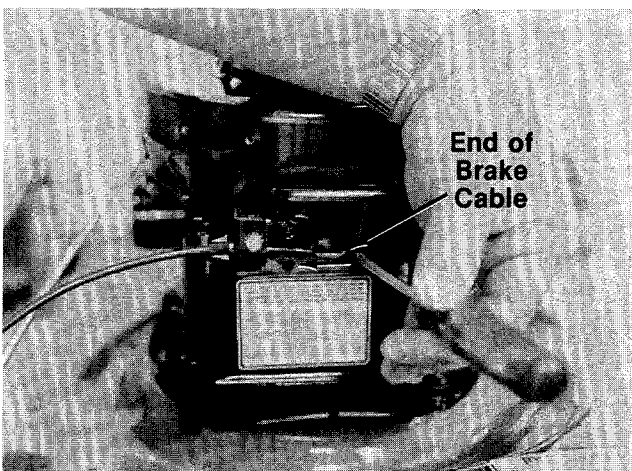


FIGURE 6.

NOTE

It may be necessary to push the end of the brake cable using a screwdriver as shown in figure 6 to allow enough slack for the cable to be assembled to the blade control handle.

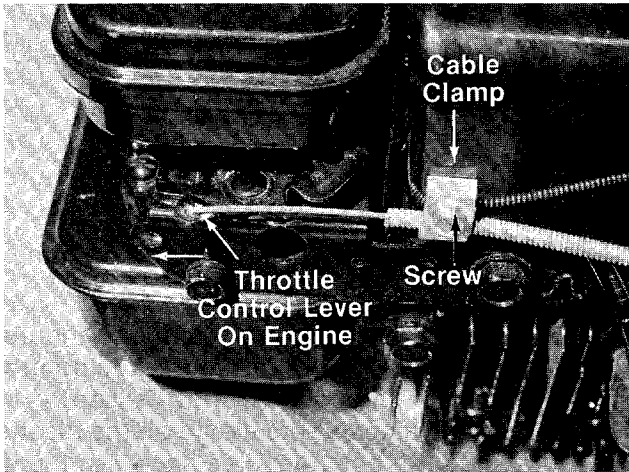


FIGURE 7.

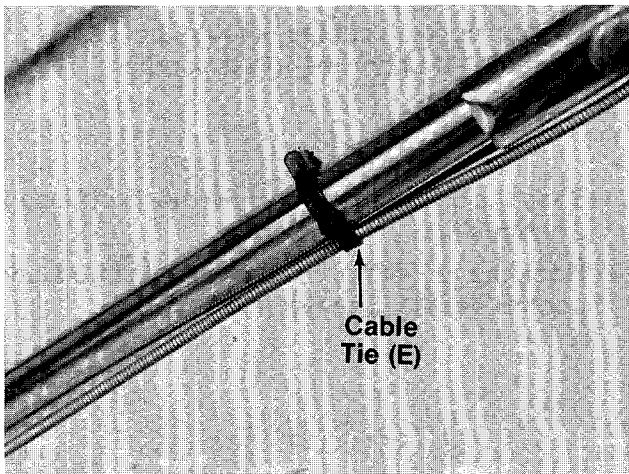


FIGURE 8.

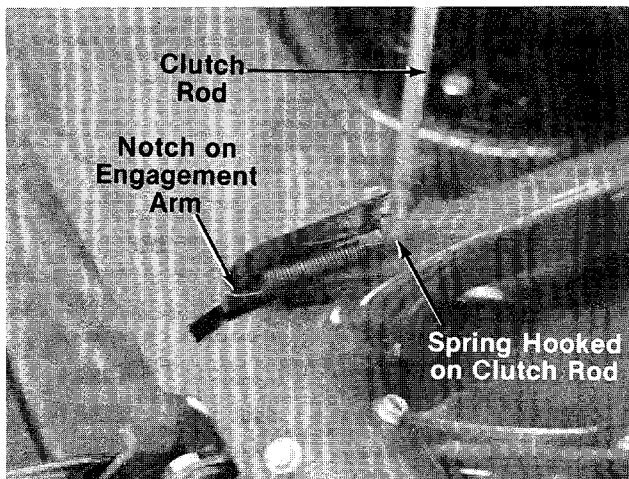


FIGURE 9.

9. Place the throttle control lever on the handle in "Fast" position.
10. Push the throttle control lever on the engine to the full open position (as far toward the outside of the unit as it will go) as shown in figure 7.
11. Hook the "Z" end of the throttle control cable into the hole in the control lever on the engine.
- ← 12. Loosen (do not remove) the screw on the cable clamp shown in figure 7. Slip the control casing under the clamp. With the throttle lever on the engine still in the full open position, tighten the screw to secure the throttle control cable.
13. Loosen the screw on the clamp on the side of the engine. Secure the cable away from the muffler. Be careful not to bend or kink the cable. Tighten the screw.
- ← 14. Secure throttle control and brake cables to upper and lower handles with cable ties (E). See figure 8.

NOTE

The clutch rod must be readjusted each time the cutting height is changed. Therefore, set the desired cutting height (refer to page 10) before proceeding with the clutch rod assembly.

15. Thread the ferrule (B) onto the threaded end of the clutch rod (A) a few turns.
- ← 16. Hook the short end of the spring (D) into the notch on the engagement arm. See figure 9. Hook the longer end of the spring into the notch on the bent end of the clutch rod (A).
17. Pull the clutch rod forward and slip it into the slot on the engagement arm as shown in figure 9.

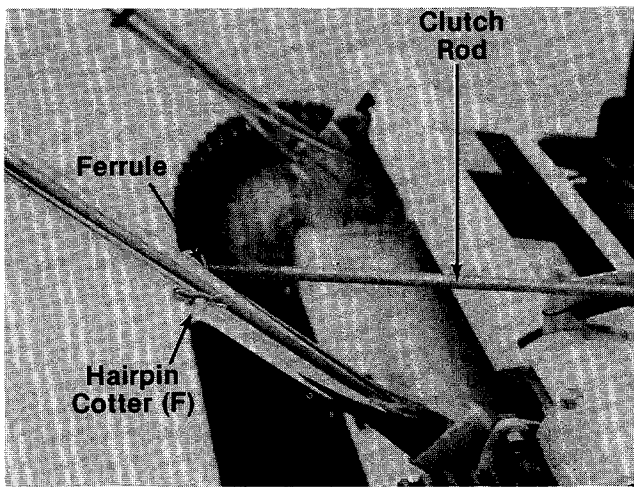


FIGURE 10.

18. Pivot the clutch rod back. Thread the ferrule onto the clutch rod until the ferrule lines up with the hole in the lower handle. Secure ferrule in handle with hairpin cotter (F) as shown in figure 10. Check for 1/16" clearance between drive pinion and front wheels. Refer to **Clutch Rod Adjustment** on page 11.

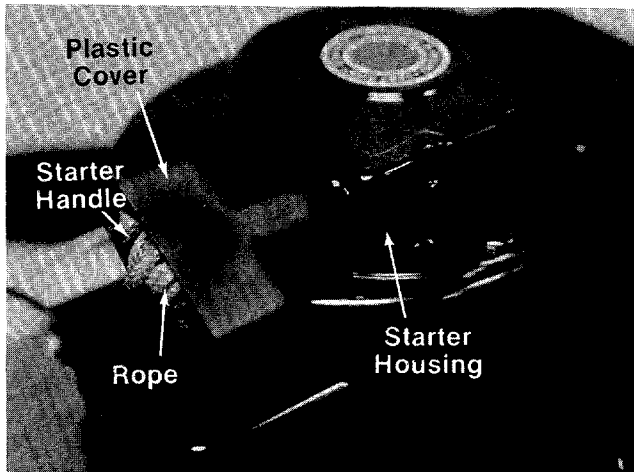


FIGURE 11.

19. The starter rope and handle may be secured with a plastic cover for shipping purposes. Remove the plastic cover and discard. See figure 11.

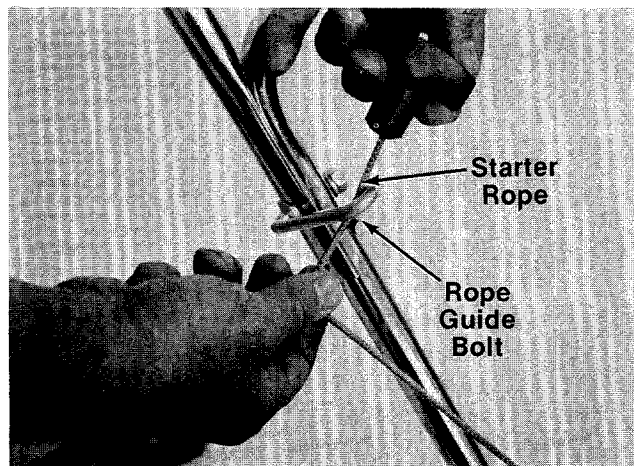


FIGURE 12.

20. With the spark plug wire disconnected and grounded, depress the blade control handle and pull the starter rope out from the engine.
21. Slip the starter rope into the rope guide bolt as shown in figure 12.
22. Check ALL nuts and bolts for correct tightness.

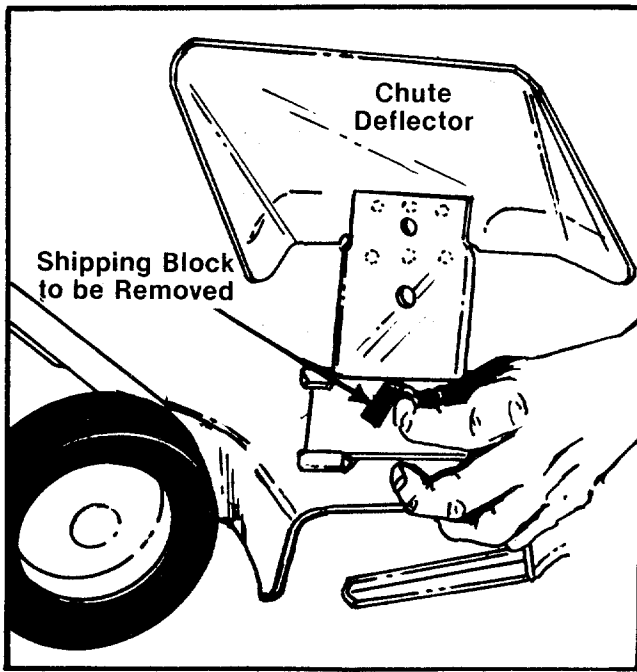


FIGURE 13.



Please note that the chute deflector on your mower is in an upright position. It is held in that position by a shipping block. This block is used for shipping purposes only. It must be removed and discarded before your mower is put into operation. See figure 13.

CONTROLS

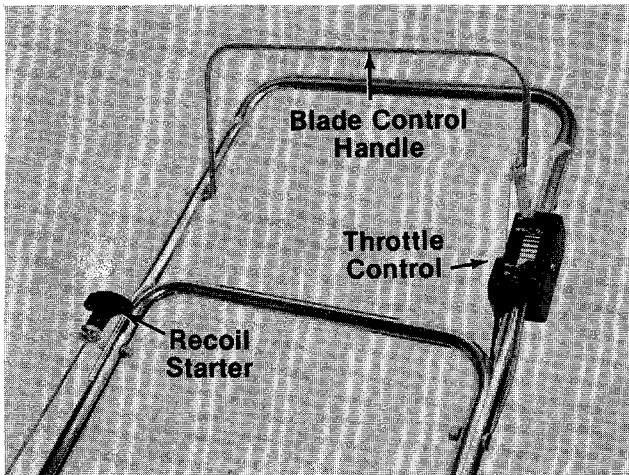


FIGURE 14.

BLADE CONTROL HANDLE

WARNING

THIS CONTROL MECHANISM IS A SAFETY DEVICE. NEVER ATTEMPT TO BYPASS ITS OPERATIONS

The blade control handle is located on the upper handle of the mower. See figure 14. The blade control handle must be depressed in order to operate the unit. Release the blade control handle to stop the engine and blade.



The blade will be rotating whenever the engine is running.

THROTTLE CONTROL

The throttle control is located on the left side of the upper handle. It is used to regulate the engine speed. The engine should be started with the engine in the FAST or START position.



The throttle control cannot be used to stop the engine.

RECOIL STARTER

The recoil starter handle is attached to the handle. See figure 14. Stand behind the unit in the operating position to start the unit.

SELF-PROPELLED DRIVE MECHANISM

To engage the drive mechanism, move the handle forward. The drive pinions will engage with the gear tread tires, and the unit will self-propel.

To stop the forward drive, release the handle. The unit will be free-wheeling. Self-propelled drive is resumed when handle is raised.

OPERATION



FIGURE 15.

Keep hands and feet away from the chute area on cutting deck. See figure 15.



For shipping purposes your mower is set with the wheels in a low cutting height position. For best results raise the cutting position until it is determined which height is best for your lawn. See cutting height adjustment section.

BEFORE STARTING

1. Fill sump with oil as instructed in the separate engine manual packed with your unit.
2. Fill fuel tank, using clean, fresh, unleaded, low-lead or regular grade leaded gasoline. Fill tank completely!

DO NOT MIX OIL WITH GASOLINE.

3. Attach spark plug wire to spark plug.
4. Before each use, check drive assembly adjustment. When the handle is lifted, the clutch rod is moved to the self-propelled position. The black nylon drive pinions should mesh simultaneously with the gear tread tires. When the handle is released, the pinions should clear the wheels by approximately 1/16". See clutch rod adjustment on page 11 for further details.



To make sure the clutch rod has been adjusted properly, take the following precaution when using your unit for the first time after making a clutch rod adjustment. Face the mower against a solid object such as a wall, fence, etc. Start the unit, and if it moves forward with the handle down in the freewheeling position, shut the engine off promptly. Refer to page 11 for further instructions on clutch rod adjustment.

TO START ENGINE AND ENGAGE BLADE

1. Move the throttle control lever to FAST or START position.
2. Standing behind the unit, depress the blade control handle and hold it against the upper handle as shown in figure 16.
3. Grasp the recoil starter handle as shown and pull up rapidly. Return it slowly to the rope guide bolt.
4. After engine starts, move throttle control to desired engine speed.

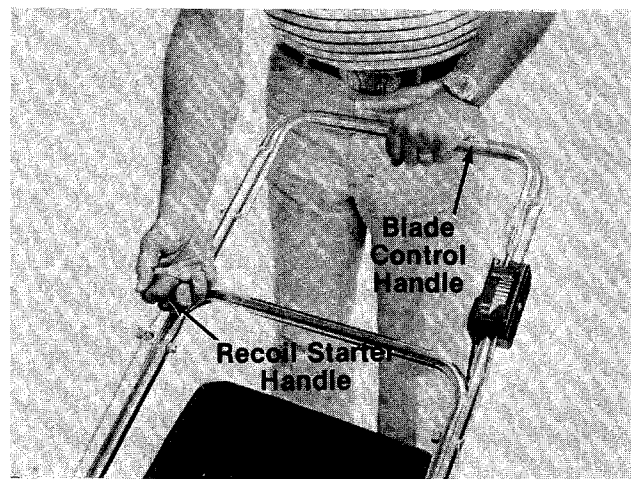


FIGURE 16.

TO STOP ENGINE AND BLADE

1. Release the blade control handle to stop the engine and blade.



The blade continues to rotate for a few seconds after the engine is shut off.

2. Disconnect the spark plug wire and ground it against the engine to prevent accidental starting while equipment is unattended.

USING YOUR ROTARY MOWER

Be sure that lawn is clear of stones, sticks, wire, or other objects which could damage lawn mower or engine. Such objects could be accidentally thrown by the mower in any direction and cause serious personal injury to the operator and others.

Operate a new engine at intermediate speeds and light load for the first few hours as you would a new automotive engine.

For best results, do not cut wet grass because it tends to stick to the underside of the mower, preventing proper discharge of grass clippings, and could cause you to slip and fall. New grass, thick grass or wet grass may require a narrower cut. Blade speed should be adjusted to the condition of the lawn.

The best mowing pattern is one that allows the clippings to discharge towards the uncut part of the lawn. This permits recutting of the clippings to further pulverize them. When cutting high weeds, discharge towards cut portion, then recut at right angles to first direction.

For best results, cut off one-third or less of the total length of the grass. Lawn should be cut in the fall as long as there is growth.

This mower is designed to be operated at full throttle to give you the best cut and do the most effective job of bagging the cut grass.



IMPORTANT

If you strike a foreign object, stop the engine. Remove wire from spark plug, thoroughly inspect the mower for any damage, and repair the damage before restarting and operating the mower. Extensive vibration of the mower during operation is an indication of damage. The unit should be promptly inspected and repaired.

ADJUSTMENTS



CAUTION

Do not at any time make any adjustment to lawn mower without first stopping engine and disconnecting spark plug wire.

CUTTING HEIGHT ADJUSTMENT

Model 282 (with height adjustment brackets)

An adjusting plate and thumb lever at each wheel position provides cutting height adjustment. Each adjusting plate has nine positions. Height of cut will be changed when the thumb lever is moved from one hole to another. Simply depress the lever towards wheel and move wheel and lever assembly to desired position. See figure 17.

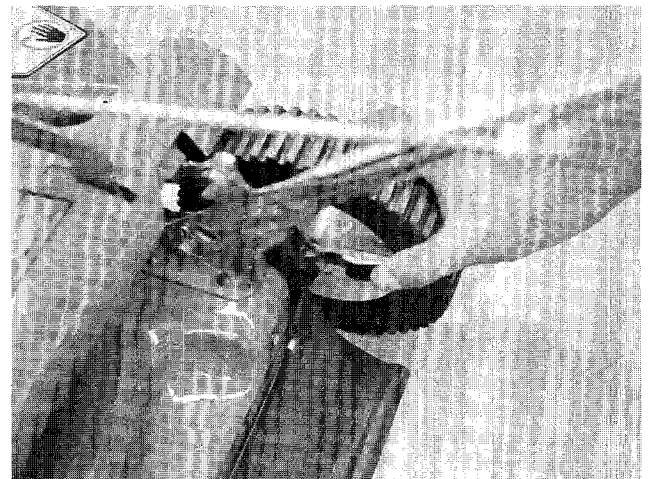


FIGURE 17.

Cutting height will be raised as the rear levers are lowered and the front levers are moved toward the front of the unit. Cutting height will be lowered as the rear levers are raised and the front levers are moved toward the rear of the unit. All wheels must be positioned at the same relative height.

For rough or uneven lawns, move the wheels to a position which will give a higher cutting height.



NOTE

Clutch rod **must** be adjusted each time cutting height is changed.

Model 280 (without height adjustment brackets)

Adjustment may be made by removing and moving axle bolts to desired position. Cutting heights will be raised as axle bolts are moved to a lower hole and lowered as axle bolts are moved to a higher hole. All axle bolts must be mounted in the same relative position to the deck.

When changing the height of the front wheels, use the holes closest to the front of the deck. The cupped side of the Belleville washers must be against the deck.

To change the height of the rear wheels, proceed as follows.

1. Remove the hairpin cotter from ferrule, located on clutch rod.

2. Slip the ferrule out of the lower handle.
3. With an adjustable wrench, remove the hex nut, lock washer, axle bolt, belleville washer and rear wheel.
4. Reassemble in selected hole. The belleville washer must be assembled between the link and wheel bracket, with the cupped side of the washer against the deck. See figure 18.

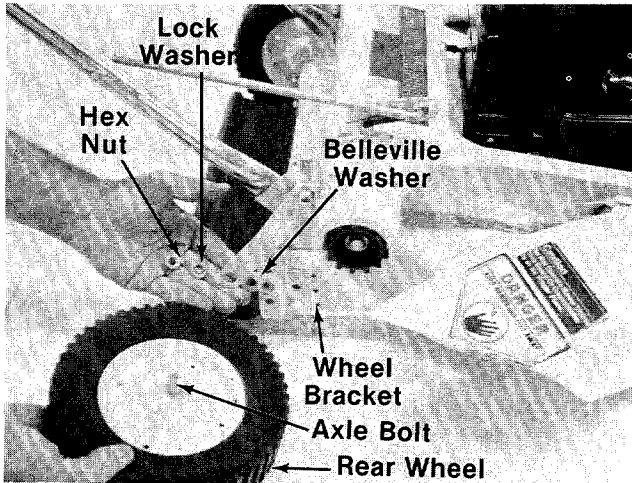


FIGURE 18.

5. Reassemble clutch rod, and check the clutch rod adjustment.



Clutch rod **must** be adjusted each time cutting height is changed.

CLUTCH ROD ADJUSTMENT

The drive pinion should be approximately 1/16" from the drive wheels when the clutch is disengaged (handle is **not** pushed forward). See figure 19.

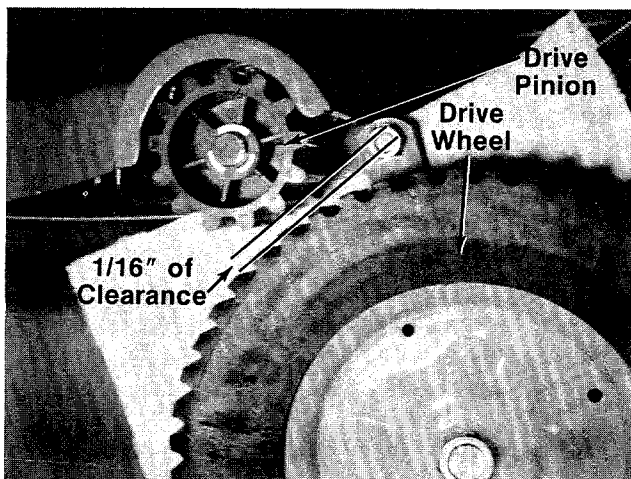


FIGURE 19.

If there is not 1/16" of clearance, proceed as follows:

1. Remove the cotter pin. See figure 10.
2. Pull the clutch rod and ferrule out of the lower handle.
3. Thread the ferrule on or off the rod as necessary.
4. Place ferrule back in position and secure with cotter pin. If the engagement and clearance are still not correct, repeat the above steps until 1/16" of clearance is obtained and the drive mechanism engages properly.

CHAIN ADJUSTMENT

1. Loosen (do not remove) the hex bolt on each side of the pinion pivot plate. See figure 20.

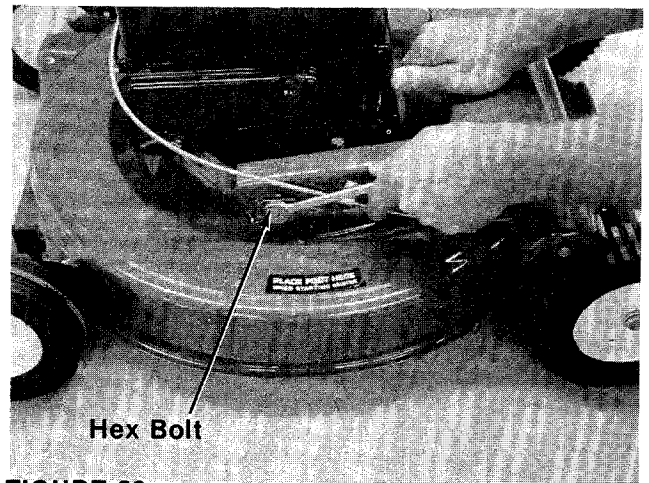


FIGURE 20.

2. Pull pivot plate backward by hand. Do not force.
3. Tighten hex bolts and check chain tension. Repeat adjustment if necessary.

THROTTLE

If adjustment becomes necessary, the throttle control wire assembly can be reset as follows:

1. Loosen, but do not remove, screw securing throttle control wire assembly at engine. See figure 7.
2. Move throttle control lever on handle to "FAST" position.
3. Move control lever on engine to full open position. Retighten screw to secure throttle control wire assembly.

CARBURETOR ADJUSTMENTS



WARNING

If any adjustments are made to the engine while the engine is running (e.g. carburetor), keep clear of all moving parts. Be careful of heated surfaces and muffler.

Minor carburetor adjustment may be required to compensate for differences in fuel, temperature, altitude and load.

Refer to the separate engine manual packed with your mower for carburetor adjustment information.

LUBRICATION



IMPORTANT

Always stop engine and disconnect spark plug wire before cleaning, lubricating or doing any kind of work on lawn mower.

Blade Control—Lubricate the pivot points on the blade control handle and the brake cable at least once a season with light oil. See figure 21. The blade control must operate freely in both directions.

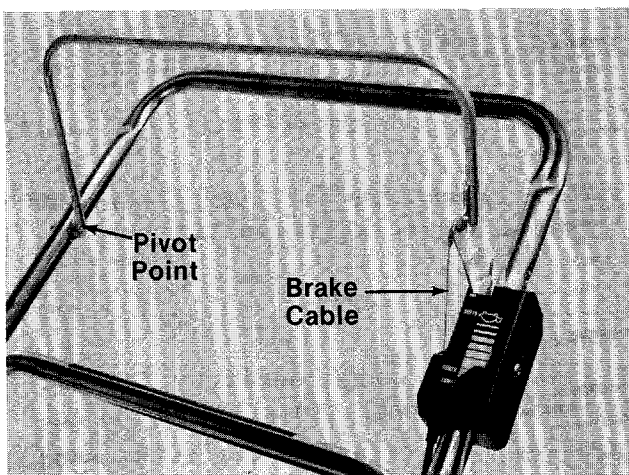


FIGURE 21.

Chute Deflector—The torsion spring and pivot point should be lubricated periodically with light oil to prevent any rust or binding. Deflector must work freely.

Wheels—Mower may be provided with ball bearing wheels. Lubricate at least once a season with light oil. Also, if the wheels are removed for any reason, lubricate the surface of the axle bolt and the inner surface of the wheel with light oil. A 4 oz. plastic bottle of light oil lubricant is available. Order part number 737-0170. Engine oil may also be used.

Engine—Follow engine manual for lubrication instructions.

Throttle—Periodically lubricate throttle control lever and throttle wire assembly with a few drops of light oil for ease of operation.

Chain—The chain should be lubricated periodically with a few drops of light oil to prevent any rust or binding. Use very little or no oil if unit is being used in a dusty or sandy area.

MAINTENANCE



CAUTION

When tipping the unit, empty the fuel tank and keep engine spark plug side up.

CUTTING BLADE

A. Removal for Sharpening or Replacement



WARNING

Be sure to disconnect and ground the spark plug wire before working on the cutting blade to prevent accidental engine starting.

Remove the large bolt and lock washer which holds the blade and adapter to the engine crankshaft. Remove the blade and adapter from the crankshaft.

If the blade or blade adapter needs replacing, remove the two small bolts, lock washers and nuts which hold the blade to the adapter.



CAUTION

Periodically inspect the blade adapter for cracks, especially if you strike a foreign object. Replace when necessary.

B. Sharpening

Remove the cutting blade by following the directions of the preceding section.

When sharpening the blade, follow the original angle of grind as a guide. It is **extremely important** that each cutting edge receives an equal amount of grinding to prevent an unbalanced blade. An unbalanced blade will cause excessive vibration when rotating at high speeds, may cause damage to the mower and could break, causing personal injury.

It is recommended that the blade always be removed from the adapter for the best test of balance. The blade can be tested by balancing it on a round shaft screwdriver. Remove metal from the heavy side until it balances evenly.

C. Reassembly

Before reassembling the blade and the blade adapter to the unit, lubricate the engine crankshaft and the inner surface of the blade adapter with light oil. Lubricating the bolt holes, bolts and inner surface of the nuts with light oil is also recommended. A 4 oz. plastic bottle of light oil lubricant is available. Order part number 737-0170. Engine oil may also be used.

When replacing the blade, be sure to install the blade with the side of the blade marked "Bottom" (or with part number) facing the ground when the mower is in the operating position.

Blade Mounting Torque

3/8" Dia. Bolt 375 in. lb. min., 450 in. lb. max.

5/16" Dia. Bolt 150 in. lb. min., 250 in. lb. max.

To insure safe operation of your unit, **all** nuts and bolts must be checked periodically for correct tightness.

To insure safe operation of your unit, **all** nuts and bolts must be checked periodically for correct tightness.

DECK

The underside of mower deck should be cleaned after each period of use as grass clippings, leaves, dirt and other matter will accumulate. This accumulation of grass clippings, etc., is undesirable as it will invite rust and corrosion and may cause an uneven discharge of grass clippings at the next cutting.

The deck may be cleaned by tilting the mower forward or on its side and scraping clean with a suitable tool or by washing with a stream of water from a garden hose.



CAUTION

Do not direct the stream of water at a hot engine as damage to the engine may result.

ENGINE OIL

Check oil level before starting engine and after every 5 hours of operation. ADD oil as necessary to keep level to full mark on dipstick. Before removing dipstick, clean area around dipstick to prevent dirt from entering oil fill tube. Engine should be in a level position when checking oil.

Change oil after first 5 hours of operation. Thereafter change every 25 hours. Change oil while engine is warm. Oil may be drained thru oil drain on bottom of the engine. Oil capacity 1 1/4 pints.

AIR CLEANER

Service air cleaner every 25 hours under normal conditions. Clean every few hours under extremely dusty conditions. Poor engine performance and flooding usually indicates that the air cleaner should be serviced.

To service the air cleaner, refer to the separate engine manual packed with your unit.

SPARK PLUG

The spark plug should be cleaned and the gap reset once a season. Spark plug replacement is recommended at the start of each mowing season; check engine manual for correct plug type and gap specifications.

OFF-SEASON STORAGE

The following steps should be taken to prepare lawn mower for storage.


1. Clean and lubricate mower thoroughly as described in the lubrication instructions.
2. Refer to engine manual for correct engine storage instructions.
3. Coat mower's cutting blade with chassis grease to prevent rusting.
4. Store mower in a dry, clean area.

Models 280 and 282

Meets CPSC Blade Safety Requirements

Lot/Model

Mfg. Date

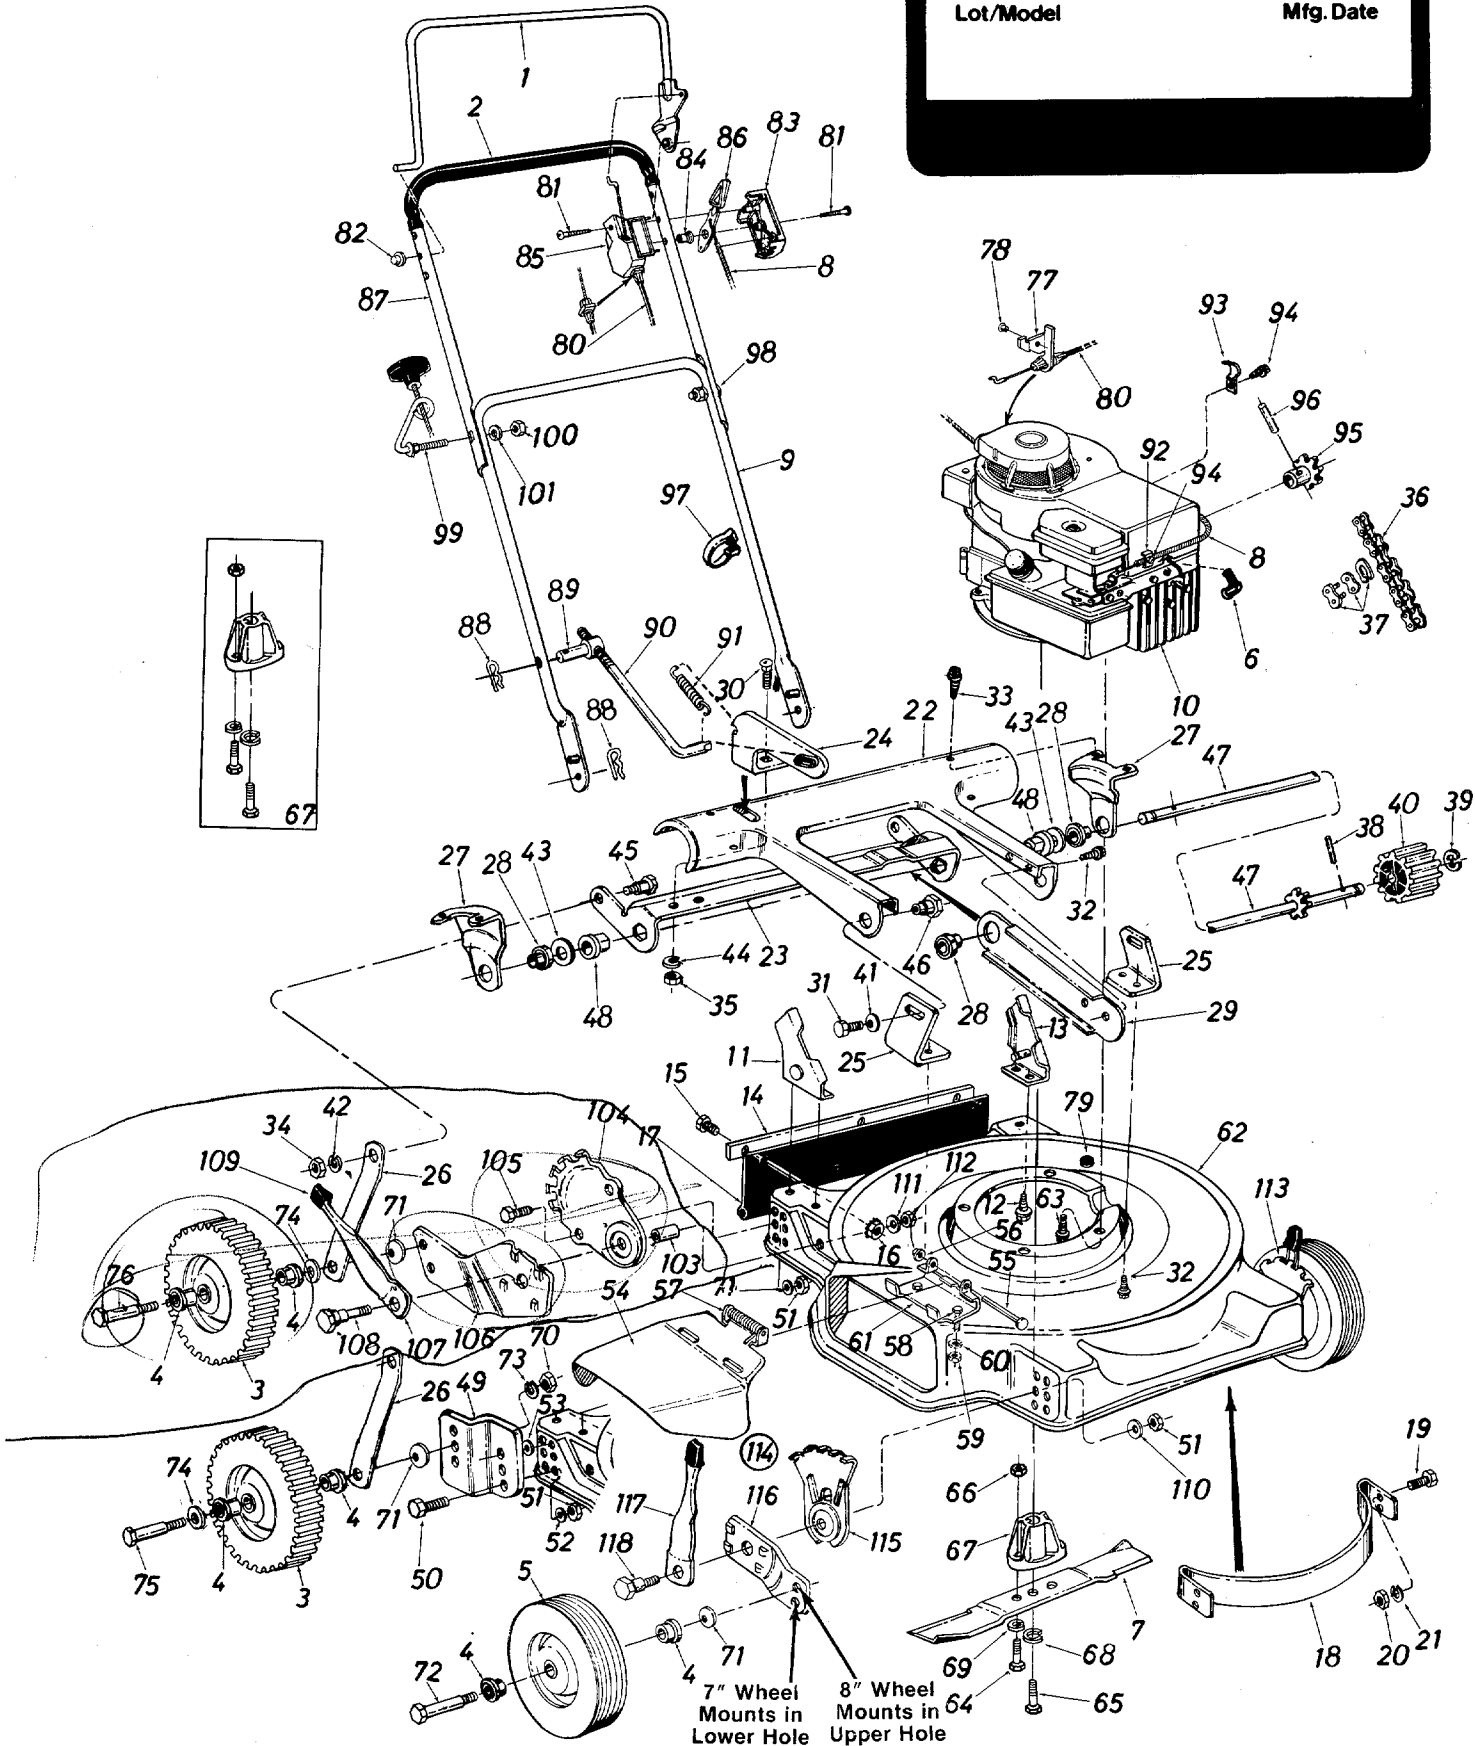

Models 280 and 282

PARTS LIST FOR MODELS 280 AND 282 ROTARY MOWERS

REF. NO.	PART NO.	COLOR CODE	DESCRIPTION	NEW PART	REF. NO.	PART NO.	COLOR CODE	DESCRIPTION	NEW PART
1	14321		Control Handle Ass'y.—L.H.		46	738-0529		Shld. Nut .625" Dia. x .162	
2	718-0145		Gript†		47	738-0530		Pinion Shaft w/7 Tooth	
3	734-0538		Wheel Ass'y. Comp.—Rear					Sprocket	
			8 x 1.75		48	741-0324		Hex Flange Brg. x .506" I.D.	
4	741-0262		Flange Brg.—Plastic 1/2" I.D.					Plastic	
5	734-0877		Wheel Ass'y. Comp.—Front		49	14761		Wheel Brkt. (280 Only)	
			7 x 1.50		50	710-0216		Hex Bolt 3/8-16 x .75" Lg.*	
6	735-0639		Spark Plug Boot					(280 Only)	
7	742-0125		Blade 22"		51	712-0798		Hex Nut 3/8-16 Thd.*	
8	746-0474		Throttle Wire—53.0"		52	736-0105		Bell-Wash. .400" I.D. x .88"	
9	749-0522		Lower Handle (Chrome)					O.D. (280 Only)	
	749-0521		Lower Handle (Painted)		53	736-0117		Fl-Wash. .38" I.D. x .620"	
10	—		Engine					O.D. (280 Only)	
11	14164		Handle Brkt. Ass'y.—R.H.		54	14944		Chute Deflector Ass'y.	
12	710-0603		Hex Wash. Hd. "B"-Tap Scr.					Comp.	N
			5/16-18 x .50" Lg.		55	711-0555		Pivot Pin	
13	14165		Handle Brkt. Ass'y.—L.H.		56	726-0106		Cap Speed Nut 1/4" Rod	
14	14531		Retainer Strip		57	732-0253		Torsion Spring	
15	710-0258		Hex Bolt 1/4-20 x .62" Lg.*		58	710-0289		Hex Bolt 1/4-20 x .50" Lg.*	
16	712-0271		Hex Sems Nut 1/4-20 Thd.		59	712-0287		Hex Nut 1/4-20 Thd.*	
17	731-0575		Rear Flap Ass'y.		60	736-0329		L-Wash. 1/4" I.D.*	
18	14554		Front Baffle†		61	11143		Hinge Plate	
19	710-0216		Hex Bolt 3/8-16 x .75" Lg.*		62	14999 —462		22" Deck Ass'y.	N
			(280)†		63	710-0654		Hex Wash. Hd. TT-Tap Scr.	
20	712-0789		Hex Nut 3/8-16 Thd.* (280)†					3/8-16 x 1.0" Lg.	
21	736-0169		L-Wash. 3/8" I.D.* (280)†		64	710-0117		Hex Bolt 5/16-24 x 1.00" Lg.	
22	14755 —462		Pinion Pivot Cover 22"					(Grade 5)	
23	14756		Cam		65	710-0331		Hex Bolt 3/8-24 x 2.25" Lg.	
24	14758		Engagement Arm					(Grade 5)	N
25	14759		Pivot Brkt.		66	712-0123		Hex Nut 5/16-24 Thd.	
26	14760		Link 4.58 x .88		67	753-0348		Blade Adapter Kit	N
27	14757		Axle Brkt.		68	736-0217		L-Wash. 3/8" I.D.—H.D.	
28	741-0180		Flanged Ball Brg. .500" I.D.		69	736-0119		L-Wash. 5/16" I.D.*	
29	14877		Brg. Support		70	712-0798		Hex Nut 3/8-16 Thd.*	
30	710-0167		Carriage Bolt 1/4-20 x .50"		71	736-0105		Bell-Wash. .400" I.D. x .88"	
			Lg.*					O.D.	
31	710-0168		Hex Bolt 3/8-16 x .50" Lg.*		72	738-0213		Front Axle Bolt (280 Only)	
32	710-0352		Hex "B"-Tap Scr. 1/4" x .38"			738-0102		Front Axle Bolt (282 Only)	
			Lg.		73	736-0169		L-Wash. 3/8" I.D.*	
33	710-0776		Hex Wash. Hd. "AB"-Tap		74	736-0192		Fl-Wash. .531" I.D. x .93"	
			Scr. 1/4" x .62" Lg.					O.D.	
34	712-0267		Hex Nut 5/16-18 Thd.*		75	738-0533		Rear Axle Bolt (280 Only)	
35	712-0287		Hex Nut 1/4-20 Thd.*		76	738-0144		Rear Axle Bolt (282 Only)	
36	713-0311		#48 Chain 1/2" Pitch 50		77	14924		Cable Bracket	N
			Links—E.		78	728-0171		Pop Rivet .156" Dia. x .379	
37	713-0116		#48 Master Link (Service		79	731-0564		Plug	N
			Only)		80	746-0476		Control Cable—39.0"	
38	715-0246		Spring Pin Spir. 3/16" Dia.		81	710-0796		Truss Mach. Self-Tap Scr.	
			x 1.25" Lg.					#12 x 1.50" Lg.	
39	716-0104		"E"-Ring for .500" Dia. Shaft		82	726-0135		Cap Speed Nut 5/16" Rod	
40	731-0393		Drive Pinion		83	731-0523		Control Panel Half	
41	736-0105		Bell-Wash. .400" I.D. x .88"		84	731-0524		Control Disc Pin	
			O.D. x .060		85	731-0526		Clutch Panel Half	
42	736-0119		L-Wash. 5/16" I.D.*		86	731-0528		Throttle Control Lever	
43	736-0160		Fl-Wash. .531" I.D. x .930"		87	749-0536		Upper Handle (Chrome)	
			O.D. x .050			749-0538		Upper Handle (Painted)	
44	736-0329		L-Wash. 1/4" I.D.*		88	714-0104		Hairpin Cotter	
45	738-0155		Shld. Bolt .437" Dia. x .162		89	711-0570		Ferrule	

Models 280 and 282

PARTS LIST FOR MODELS 280 AND 282 ROTARY MOWERS (CONTINUED)

REF. NO.	PART NO.	COLOR CODE	DESCRIPTION	NEW PART	REF. NO.	PART NO.	COLOR CODE	DESCRIPTION	NEW PART
90	747-0392		Clutch Rod	N	107	732-0417		Spring Lever (282 Only)	
91	732-0418		Extension Spring—3/8" O.D. x 2.10" Lg.		108	738-0528		Shoulder Bolt .500" Dia. x 3.75" Lg. (282 Only)	
92	751-0333		Casing Clamp		109	720-0190		Spring Lever Knob (282 Only)	
93	12894		Casing Clamp		110	736-0331		Bell-Wash. .39 I.D. x 1.13 O.D. (282 Only)	
94	710-0429		Hex "B"-Tap Scr. #10 x .38" Lg.		111	736-0242		Bell-Wash. .336" I.D. x .860 O.D. (282 Only)	
95	713-0308		10 Tooth Sprocket Ass'y.		112	712-0158		Hex L-Nut 5/16-18 Thd. (282 Only)	
96	715-0247		Spiral Pin 3/16" Dia. x 1.00" Lg.		113	14579		Height Adj. Ass'y.—Comp.—L.H. (282 Only)	
97	726-0192		Cable Tie		114	14578		Height Adj. Ass'y.—Comp.—R.H. (282 Only)	
98	710-0671		Curved Hd. Carriage Bolt 5/16-18 x 1.38" Lg.		115	15261		Height Adj. Plate (282 Only)	
99	710-0842		Rope Guide Bolt		116	15262		Pivot Bar (282 Only)	
100	712-0267		Hex Nut 5/16-18 Thd.*		117	14832		Spring Lever Ass'y. w/Knob (282 Only)	
101	736-0119		L-Wash. 5/16" I.D.*		118	738-0507		Shoulder Bolt .500" Dia. x .375" Lg. (282 Only)	
103	750-0503		Spacer .395" I.D. x .503" O.D. x .562" Lg. (282 Only)						
104	14764		Index Plate (282 Only)						
105	710-0216		Hex Bolt 3/8-16 x .75" Lg.* (282 Only)						
106	14765		Pivot Bar R.H. (282 Only)						
	14766		Pivot Bar L.H. (Not Shown) (282 Only)						

†Optional Parts

*For faster service obtain standard nuts, bolts and washers locally. If these items cannot be obtained locally, order by part number and size as shown on parts list.

(462—Red Flake)

When ordering parts, if color or finish is important, use the appropriate color code shown above. (e.g. Red Flake Finish—14005 (462).)

Hub Caps Available

Color	Part No.
Red	731-0124
Orange	731-0254
Black	731-0354
Gray	731-0355

NOTE: The engine is not under warranty by the mower manufacturer... If repairs or service is needed on the engine, please contact your nearest authorized engine service outlet. Check the "Yellow Pages" of your telephone book under "Engines—Gasoline."



 **NOTE**

The use of any accessory on this Rotary Mower other than those manufactured by the mower manufacturer is **not** recommended.

GRASS CATCHER Model 003 is available as optional equipment for the mower shown in this manual.



1. DO NOT operate the mower without the entire grass catcher or chute deflector in place.
2. DO NOT operate the mower without the protective shield on the rear of the deck in place.

 **NOTE**

Under normal usage bag material is subject to wear and should be checked periodically. Be sure any replacement bag complies with the mower manufacturer's recommendations.

For replacement bags, use only factory authorized replacement bag No. 764-0176.

PARTS INFORMATION

POWER EQUIPMENT PARTS AND SERVICE

Parts and service are available through the authorized service firms listed below. All orders should specify the model number of your unit, part numbers, description of parts and the quantity of each part required.

BRIGGS AND STRATTON, TECUMSEH AND PEERLESS PARTS AND SERVICE

Briggs & Stratton, Tecumseh and Peerless parts and service should be handled by your nearest authorized engine service firm. Check the yellow pages of your telephone directory under the listing **Engines—Gasoline**, Briggs & Stratton or Tecumseh Lauson.

NOTE: If any parts are found to be missing or defective upon assembly of this unit, write to advise the factory so that immediate replacement can be made.

ALABAMA	BIRMINGHAM
Auto Electric & Carburetor Co.	2625 4th Ave. S. 35233
ARKANSAS	NORTH LITTLE ROCK
Sutton's Lawn Mower Shop	5301 Roundtop Drive
	Box 368, Rt. 4 72117
CALIFORNIA	PORTERVILLE
Billious	75 North D Street 93257
COLORADO	DENVER
Spitzer Industrial Products Co.	Box 29114, 6601
	N. Washington St. 80229
FLORIDA	JACKSONVILLE
Radco Distributors	4909 Victor St.
	Box 5459 32207
	OPA LOCKA
Small Eng. Dist.	2351 N.W. 147th St. 33054
GEORGIA	EAST POINT
East Point Cycle & Key	2834 Church St. 30344
ILLINOIS	LYONS
Keen Edge Co.	8615 Ogden Ave. 60534
INDIANA	ELKHART
Parts & Sales Inc.	2101 Industrial Pkwy. 46514
IOWA	DUBUQUE
Power Lawn & Garden Equip.	2551 J.F. Kennedy 52001
LOUISIANA	MONROE
Mid-South Power	700 Pine St. 71201
	NEW ORLEANS
Suhren Engine Co.	8330 Earhart Blvd. 70118
MARYLAND	TAKOMA PARK
Center Supply Co.	6867 New Hampshire
	Ave. 20912
MASSACHUSETTS	SPRINGFIELD
Morton B. Collins Co.	300 Birnie Ave. 01107
MICHIGAN	LANSING
Lorenz Service Co.	2500 S. Pennsylvania 48910
	MOUNT CLEMENS
Power Equipment Dist.	340 Hubbard 48043
MINNESOTA	HOPKINS
Hance Distributing Inc.	420 Excelsior Ave. W. 55343
MISSISSIPPI	BILOXI
Biloxi Sales & Service, Inc.	506 Caillavet St. 39533
MISSOURI	KANSAS CITY
Automotive Equip. Service	3117 Holmes St. 64109
	ST. JOSEPH
Ross-Frazier Supply Co.	8th and Monterey 64503
	ST. LOUIS
Henzler, Inc.	2015 Lemay Ferry
	Road 63125
NEW JERSEY	BELLMAWR
Lawnmower Parts Inc.	717 Creek Rd. 08030
NEW MEXICO	ALBUQUERQUE
Spitzer Eng. & Parts	1023 Third Ave. N.W. 87103
NEW YORK	CARTHAGE
Gamble Dist., Inc.	West End Ave. 13619

NORTH CAROLINA	GOLDSBORO
Smith Hardware Co.	515 N. George St. 27530
	GREENSBORO
Dixie Sales Company	335 N. Green 27402
OHIO	CARROLL
Stebe's Mid-State Mower Supply	Box 366, 71 High St. 43112
	CLEVELAND
Bleckrie, Inc.	7900 Lorain Ave. 44102
	WADSWORTH
National Central	687 Seville Rd. 44281
	YOUNGSTOWN
Burton Supply Co.	1301 Logan Ave.
	Box 929 44501
OKLAHOMA	MUSKOGEE
Victory Motors, Inc.	605 S. Cherokee 74401
OREGON	PORTLAND
Kenton Supply Co.	8216 N. Denver Ave. 97217
PENNSYLVANIA	HARRISBURG
EECO Inc.	4021 N. 6th St. 17110
	PHILADELPHIA
Thompson Rubber Co.	5222-24 N. Fifth St. 19120
	PITTSBURGH
Bluemont Co.	11125 Frankstown Rd. 15235
	PUNXSUTAWNEY
Frank Roberts & Sons	R.D. 2 15767
TENNESSEE	KNOXVILLE
Master Repair Service	2000 Western Ave. 37921
	MEMPHIS
American Sales & Service, Inc.	3035-43 Bellbrook 38116
TEXAS	DALLAS
Marr Brothers, Inc.	423 E. Jefferson 75203
	FORT WORTH
Woodson Sales Corp.	1702 N. Sylvania 76111
	HOUSTON
Bullard Supply Co.	2409 Commerce St. 77003
	SAN ANTONIO
Engine House Inc.	8610 Botts Lane
	P.O. Box 17867 78217
UTAH	SALT LAKE CITY
A-1 Engine & Mower Co.	439 E. 900 So. 84111
VIRGINIA	ASHLAND
RBI Corp.	Lake Ridge Rd.
	101 Cedar Run Dr. 23005
WASHINGTON	SEATTLE
Bailey's Inc.	1414 14th Ave. 98122
WISCONSIN	MARSHFIELD
Power Pac	301 E. 29th St. 54449
	APPLETON
Appleton Automotive Supply Co.	123 S. Linwood Ave.
	P.O. Box 798 54911
	TWIN LAKES
E-Kon Small Engine Spec.	122 Lance Dr. 53181

WARRANTY PARTS AND SERVICE POLICY

(0782)

The purpose of warranty is to protect the customer from defects in workmanship and materials, defects which are NOT detected at the time of manufacture. It does not provide for the unlimited and unrestricted replacement of parts. Use and maintenance are the responsibility of the customer. The manufacturer cannot assume responsibility for conditions over which it has no control. Simply put, if it's the manufacturer's fault, it's the manufacturer's responsibility; if it's the customer's fault, it's the customer's responsibility.

CLAIMS AGAINST THE MANUFACTURER'S WARRANTY INCLUDES:

1. Replacement of Missing Parts on new equipment.
2. Replacement of Defective Parts within the warranty period.
3. Repair of Defects within the warranty period.

All claims MUST be substantiated with the following information:

1. Model Number of unit involved.
2. Date unit was purchased or first put into service.
3. Date of failure.
4. Nature of failure.