



LevelOne

User Manual

WNC-0301

WPC-0301

11g Wireless LAN Adapter

Ver. 6.0.0-0712

Safety

FCC WARNING

This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- 1) Reorient or relocate the receiving antenna.
- 2) Increase the separation between the equipment and receiver.
- 3) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- 4) Consult the dealer or an experienced radio/TV technician for help.

CE Declaration of conformity

This equipment complies with the requirements relating to electromagnetic compatibility, EN 55022 class B for ITE, the essential protection requirement of Council Directive 89/336/EEC on the approximation of the laws of the Member States relating to electromagnetic compatibility.

CE Marking Warning

Hereby, Digital Data Communications, declares that this (Model-no. WNC-0301/WPC-0301) is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

The CE-Declaration of Conformity can be downloaded at:

<http://www.levelone.eu/support.php>



Table of Content

TABLE OF CONTENT	V
INTRODUCTION	1
USER MANUAL OVERVIEW.....	1
UNPACKING AND SETUP	3
FEATURES	3
PACKAGE CONTENTS.....	3
SETUP.....	4
HARDWARE INSTALLATION	5
INSTALLATION PROCEDURE FOR PCI.....	5
INSTALLATION PROCEDURE FOR CARDBUS.....	7
LED INDICATOR FOR PCI.....	7
LED INDICATOR FOR CARDBUS.....	7
CHECK THE INSTALLATION	8
SOFTWARE INSTALLATION	7
WINDOWS 2000/XP/VISTA UTILITY INSTALLATION.....	7
WINDOWS VISTA WIRELESS UTILITY SETTING	9
LINK INFORMATION	9
CONFIGURATION.....	10
SITE SURVEY	12
PROFILE	13
ABOUT.....	14
WINDOWS XP/2000 WIRELESS UTILITY SETTING	15
LINK INFORMATION	15
CONFIGURATION.....	16
ADVANCED.....	18
SITE SURVEY	22
ABOUT.....	24
TECHNICAL SPECIFICATIONS	25

Introduction

Congratulations on your purchase of LevelOne 11g Wireless LAN Adapter.

This manual helps to get familiar with the LevelOne 11g Wireless LAN Adapter. This manual contains detailed instructions in operation of this product. Please keep this manual for future reference.

With a Wireless LAN Adapter, a laptop computer or a station can communicate with another computer in a wireless way. Easy-to-use utilities are bundled with Wireless LAN Adapter for configuration, monitoring, and diagnosis purposes.

Wireless LAN Adapter can wirelessly transmit and receive data, with the Wireless LAN Adapter, you can locate your Notebook PC or station wherever you want without wires and cables.

Wireless LAN Adapter provides users with an access to real-time information anywhere in their organization. The mobility provides productivity and service, which are not available under wired networks. The Wireless LAN Adapter configuration is easy to change from peer-to-peer networks, suitable for a small number of users, to full infrastructure networks of thousands of users that allow roaming around a broad area.

User Manual Overview

Introduction	Describes 11g Wireless LAN Adapter.
Unpacking and Setup	Helps user to get started with the basic installation of the 11g Wireless LAN Adapter.
Hardware Installation	Describes the LED indicators of the 11g Wireless LAN Adapter.
Software Installation	Tells how to setup the driver and the utility setting.
Technical Specifications	Lists the technical (general, physical and environmental) specifications of the 11g Wireless LAN Adapter.

Unpacking and Setup

This chapter provides the package contents and setup information for the 11g Wireless LAN Adapter.

Features

- Works with both IEEE 802.11b and IEEE 802.11g products.
- High-speed transfer data rate - up to 54Mbps.
- High throughput supports multi-media data bandwidth requirement.
- Supports 64/128-bit WEP Data Encryption, WPA/WPA2 (TKIP with IEEE 802.1x) and AES.
- Automatic fallback increases data security and reliability.
- Supports the most popular operating system: Windows 2000/XP/Vista.
- Supports 32-bit PCI interface – WNC-0301
- Supports 32-bit CardBus interface – WPC-0301

Package Contents

Open the box of the 11g Wireless LAN Adapter and carefully unpack it. The box should contain the following items:

- 11g Wireless LAN Adapter
WNC-0301 11g Wireless PCI Card or WPC-0301 11g Wireless CardBus Adapter
- Antenna (WNC-0301 11g Wireless PCI Card Only)
- Quick Installation Guide
- CD Manual/Driver/Utility

If any item is found missing or damaged, please contact your local reseller for replacement.

Setup

The setup of the Wireless LAN Adapter can be performed using the following steps:

- Visually inspect the CardBus/PCI Adapter and make sure that it is fully plugged in to the CardBus/PCI slot.
- Make sure that there is a well environment that there is no much intrusion to have a better connection.

Hardware Installation

Installation Procedure for PCI

Please shut down your Computer and install the Wireless PCI Card BEFORE installs the supplied software.



Note

The following installation was operated under Windows XP. (Procedures are similar for Windows 2000.)



Note

If you have installed the Wireless PC Card driver & utility before, please uninstall the old version first.

Hardware installation steps

- Find an empty PCI expansion slot from your desktop computer.
- Press the PCI Card firmly into the slot and screw on the bracket.
- Connect the supplied antenna to the connectors on the PCI Card.
- Power on your desktop computer.



- The Windows "New Hardware" wizard will then prompt. Please click **Cancel**

Installation Procedure for CardBus

You should install the supplied software BEFORE inserting the Wireless Adapter when using Windows 2000 or XP.

When using Windows Vista, please insert the card first, and then run the software utility.



Note

The following installation was operated under Windows XP. (Procedures are similar for Windows 2000.)



Note

If you have installed the Wireless PC Card driver & utility before, please uninstall the old version first.

LED Indicator for PCI

Link

The Link LED indicator lighted green when the 11g Wireless LAN Adapter is connected to wireless network successfully.

LED Indicator for CardBus

Link

The Link LED indicator lighted green when the 11g Wireless LAN Adapter is connected to wireless network successfully.

ACT (Activity)

When the 11g Wireless LAN Adapter is transmitting or receiving data, the ACT LED indicator blinking in green.

Check the installation

The LEDs of the Wireless LAN Adapter are clearly visible and the status of the network link can be seen instantly:


1. Once the device is plugged to the station's CardBus/PCI slot, the LED of the Wireless LAN Adapter will light up indicating a normal status.
2. When the device plugged to the station's CardBus/PCI slot and the driver was installed, the ACT will start alternate blinking; it means that the device is starting to scan the wireless devices near the Wireless LAN Adapter.
3. While the Wireless LAN Adapter linked up and transmitting data to the Access Point or to other Wireless LAN station, the Link LED will lighted green.

Software Installation

This section will lead you to install the driver and utility of the Wireless LAN Adapter.

Windows 2000/XP/Vista Utility Installation


1. Insert the 11g Wireless LAN Adapter Utility CD into the computer and then the Auto-run screen will appear. Alternatively, open a file browser and double click on the autorun.exe file located in the CD directory.
2. Select model than Click “Utility” to install the driver and utility. Select “XP/2000” or “Vista”, depending on your operating system, and the install wizard will begin installing the software. Follow the install wizard instructions to complete the installation.

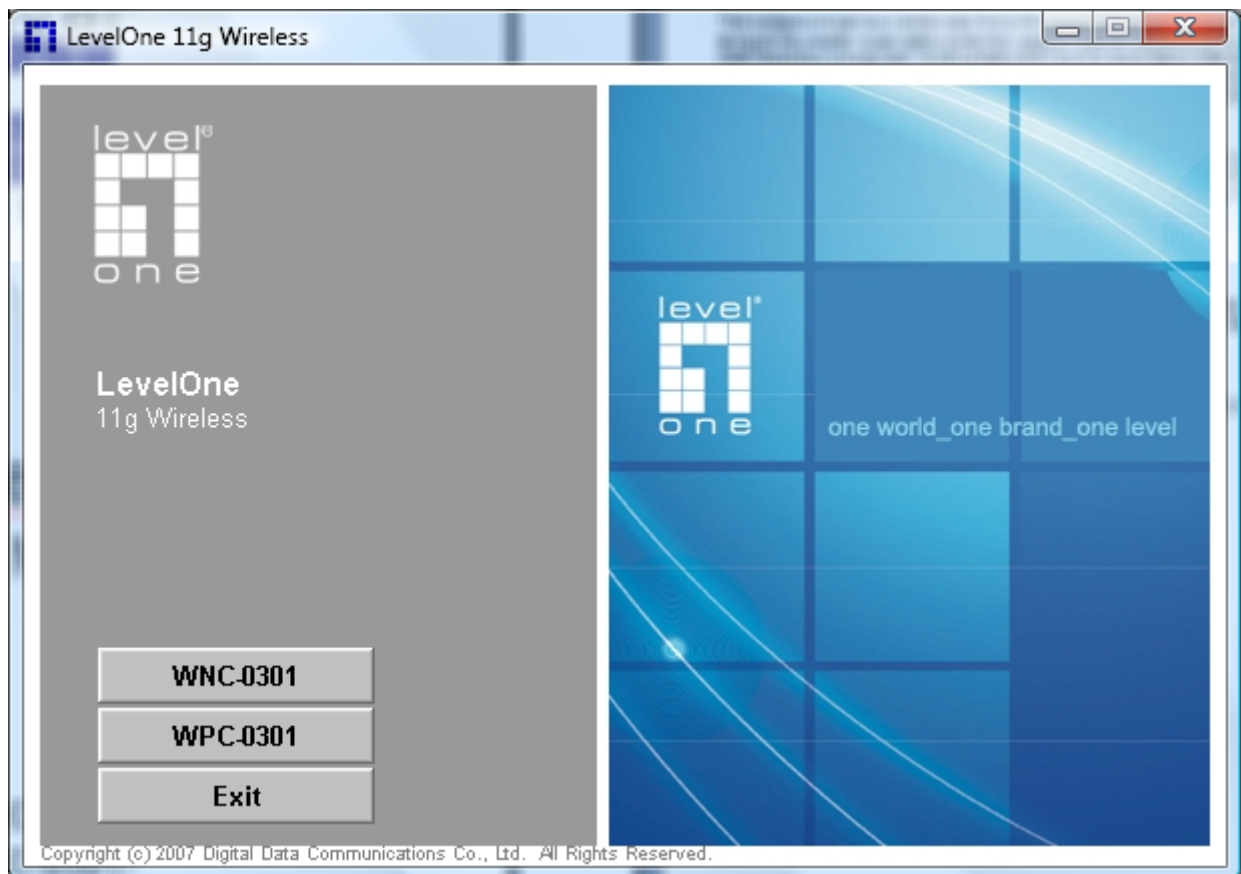

3. Follow the Install Shield Wizard Instructions. Click “**Next**” to continue and finish it.

The installation program will help you to setup the Wireless LAN utility. ***Be noted that the Windows XP and Vista have its own Wireless Utility; you can either use the utility of Windows XP/Vista or the provided utility.***

When the Wireless LAN Adapter utility is installed properly, you will see the icon on the Windows task bar. The user can configure the wireless settings using the Wireless Adapter Configuration Utility. Double-click the utility icon that appears in the taskbar



When the icon in the toolbar represents in full blue color then the signal strength has an excellent performance with the AP, if it represents in half blue color then the signal strength has a fair performance with the AP, and if the icon represents in low blue, then the signal strength has a worst performance with the wireless station.



Excellent Wireless Signal Strength



Adequate Wireless Signal Strength



Low Wireless Signal Strength




Wireless Card inactive

Windows Vista Wireless Utility Setting

Link Information

This is the default screen after launching the Utility program.

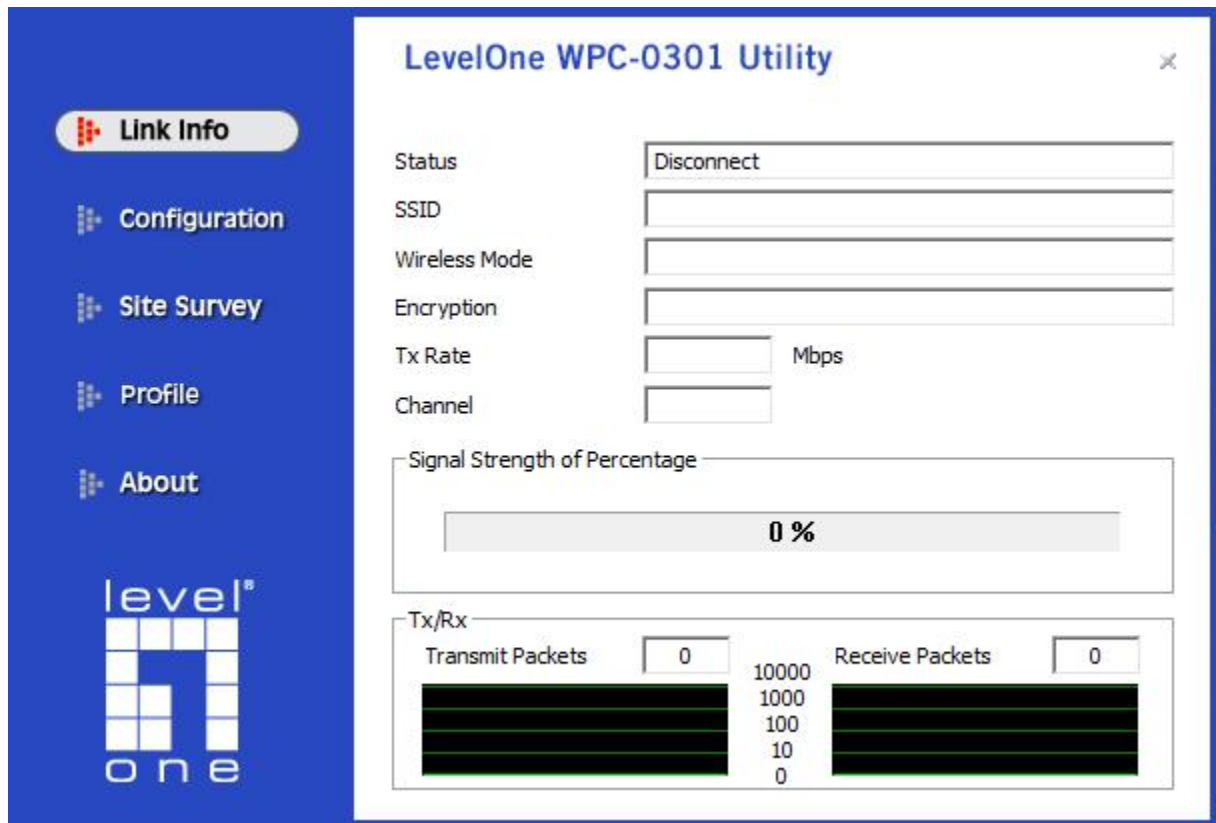

Status: Shows the associated BSSID, which can be used to identify the wireless access point.

SSID: Shows the current SSID, which must be the same on the wireless client and AP in order for communication to be established.

Wireless Mode: Shows the current wireless mode used for wireless communication.

Encryption: Shows the current encryption mode used on the wireless network.

TX Rate: Shows the current data rate used for transmitting.


Channel: Shows the current channel for communication.

Signal Strength of Percentage: Shows the wireless signal strength of the connection between the Wireless LAN USB 2.0 Adapter with the Access Point.

TX/RX: Shows the statistics of data transfer, and the calculation is based on the number of packets transmitted and received. It also shows the link quality of the Wireless LAN Adapter with the Access Point when operation under Infrastructure mode.

Configuration

This screen is where you set the basic wireless settings for the Wireless LAN Adapter.

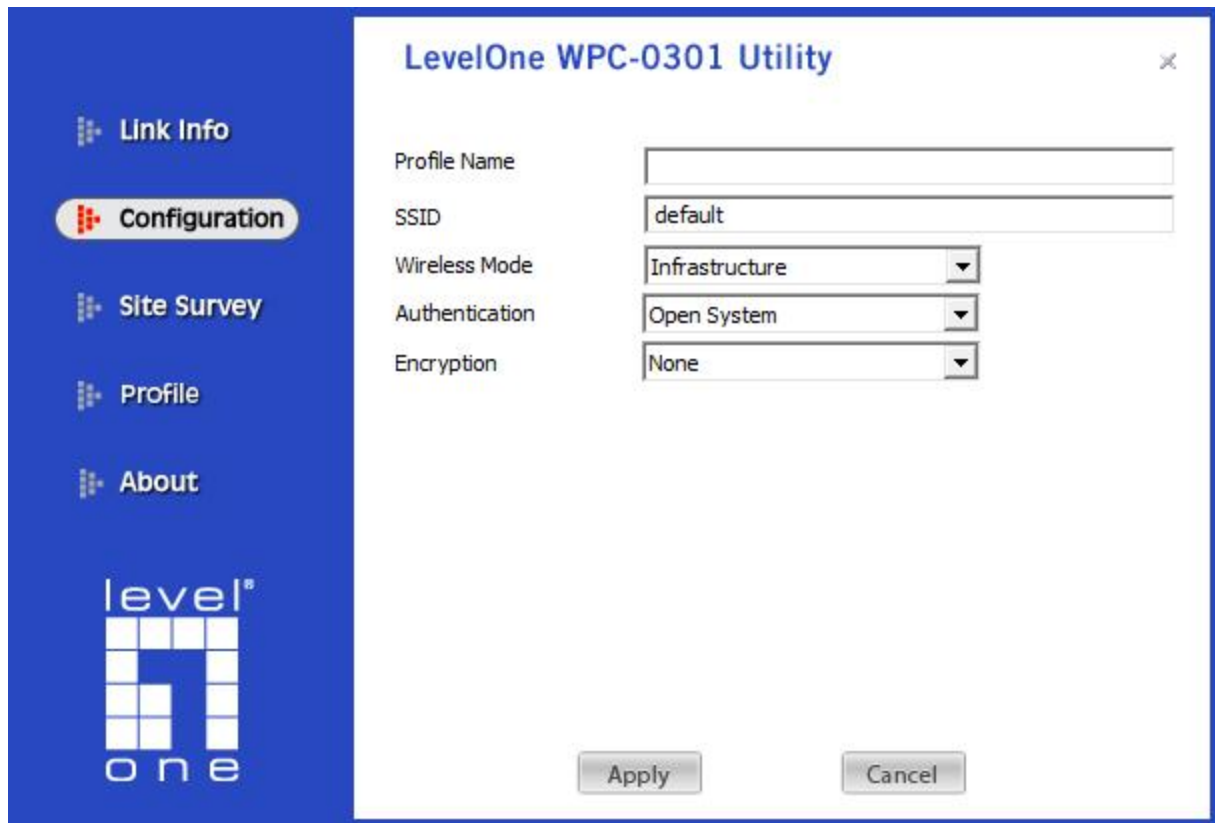

Profile Name: The default name is the same as the SSID of the platform which you connected and you can change the name you favor (the key length is limited 1~32 bits).

SSID: Service Set Identifier, which is a unique name shared among all client in a wireless network. The SSID must be identical for client in the wireless network.

Wireless Mode: There are two modes available for selection

- Infrastructure –to establish wireless communication with the LAN and other wireless client through the use of Access Points.
- Ad-Hoc – to establish point- to-point wireless communication directly with other wireless client device.

Authentication: The following options are available: **Open System, Shared key, WPA-PSK, WPA2-PSK, WPA EAP-TLS and WPA2 EPA-TLS.**

Select **Open System, Shared Key** for WEP data encryption feature.

Open System and **Shared Key** require the users to set a WEP key to exchange data with other wireless clients that have the same WEP key.

The following will only be activated when **Open, Shared Key** is enabled:

Default Key: select one of the 4 keys to use.

Network Key: choose the encryption way, either in HEX or ASCII formats, and enter the password in the blank space.

Key Length: select 64 or 128 bits as the length of the keys.

Key Format: HEX or ASCII


WPA-PSK/ WPA2-PSK: This Passphrase must be the same on each computer that is connected to the wireless network.

WPA/ WPA2: Please click the "**Certificate**" button. Then, please select the certificate that user wants to use

Encryption: Select the encryption type for TKIP or AES encryption type.

Site Survey

This screen allows the user to scan for available wireless networks (wireless clients and Access Points). It also allows the user to establish wireless communications with an available wireless network.

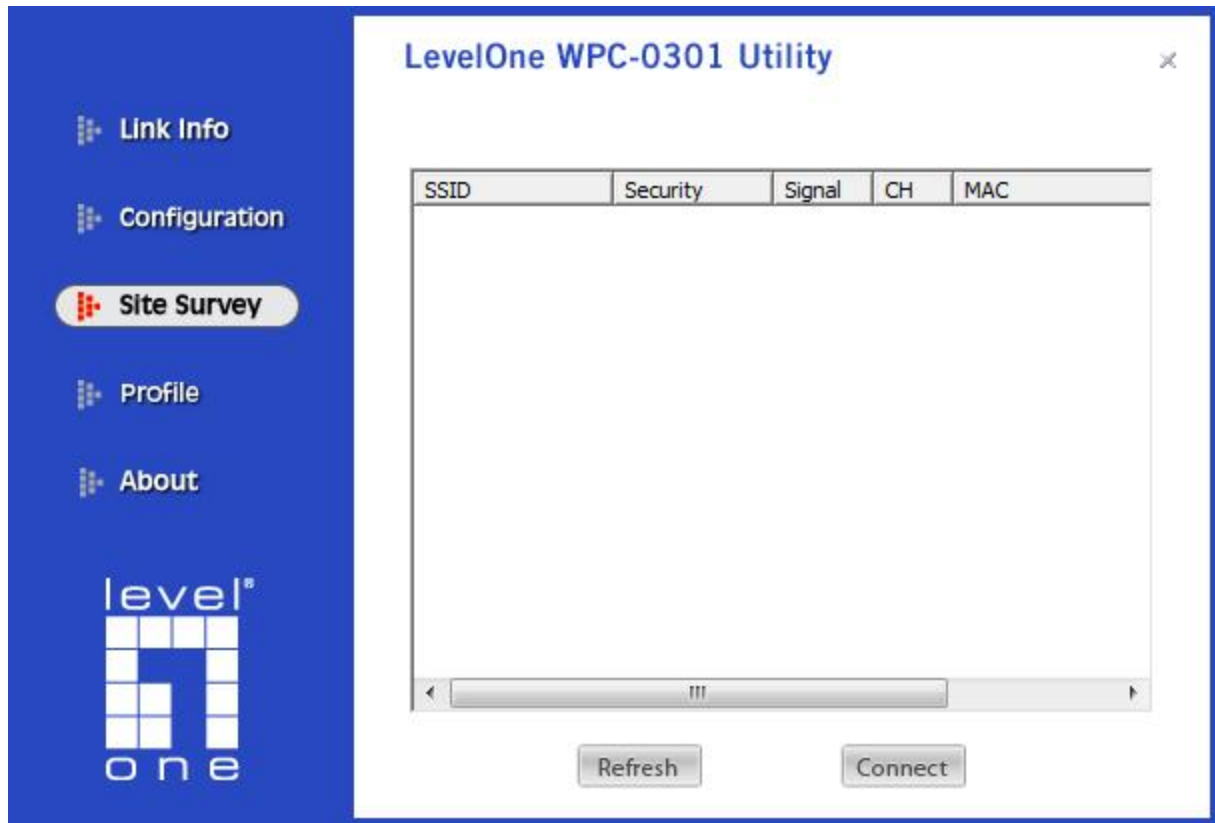


Available Network – displays the wireless networks (wireless clients and Access Points) that are within range.

Select any one of the wireless networks by **double-clicking** on it or clicking on the “**Connect**” button.

Click the “**Refresh**” button to scan for available networks.

Profile

Profile –The user can create and manage the created profiles for home, work or public areas. By double-clicking on one of the created profile, the setting will adjust to the specific setting such as SSID, channel, and encryption as saved by that particular profile.

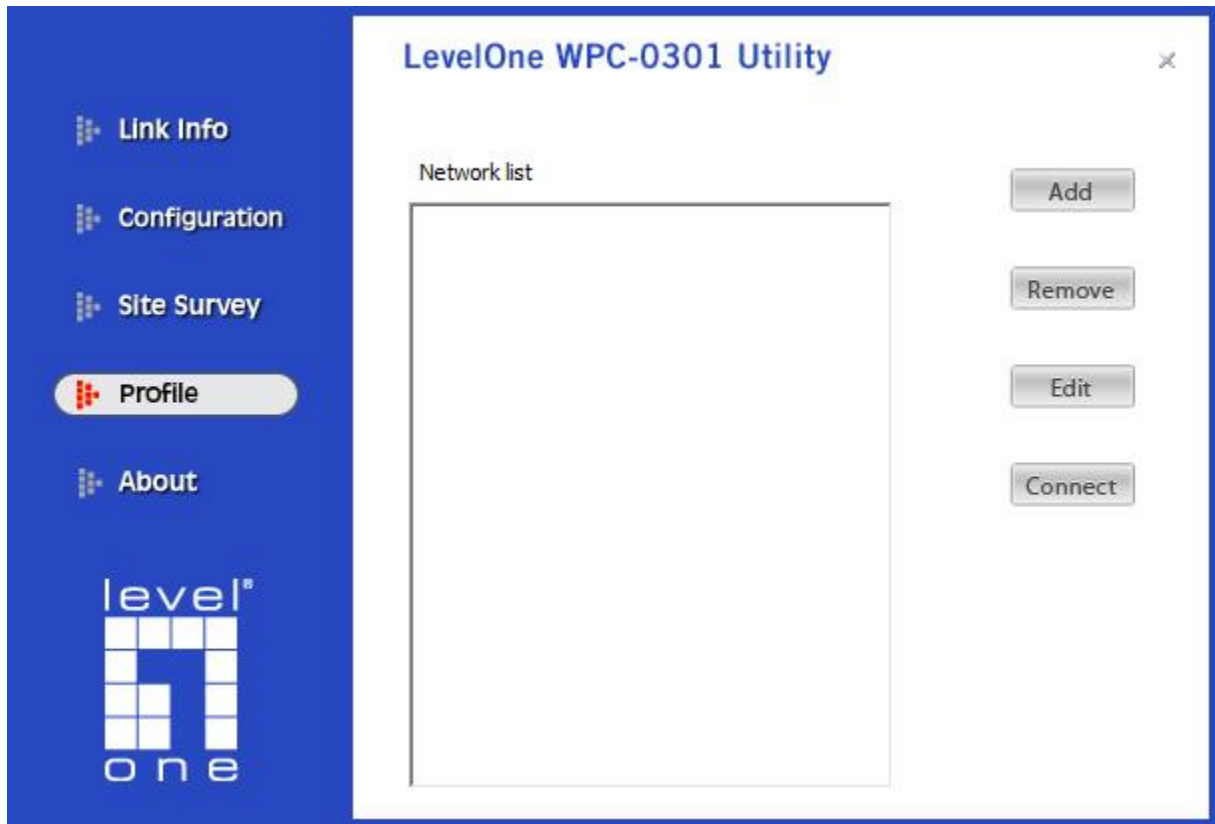

Add: Adds a profile. The following screen will appear. The user can enter the necessary information required for accessing Access Points or Wireless Router.

Remove: Deletes the selected profile

Edit: To view and change its settings of the profile.

Connect: The current connected profile information

About

This screen displays information about the 11g Wireless LAN Adapter, such as the Driver and Utility version. When a new version of the utility becomes available for upgrade, users will be able to identify by version numbers.

LevelOne WPC-0301 Utility


Copyright (c) 2007, LevelOne. All Rights Reserved.
11g Wireless LAN Utility

Adapter Information	
MAC Address	00:40:F4:F8:56:58
Utility Version	1.15.108.60
Driver Version	6.1099.312.2007

Windows XP/2000 Wireless Utility Setting

Link Information

The default page is as below after launching the Utility program.

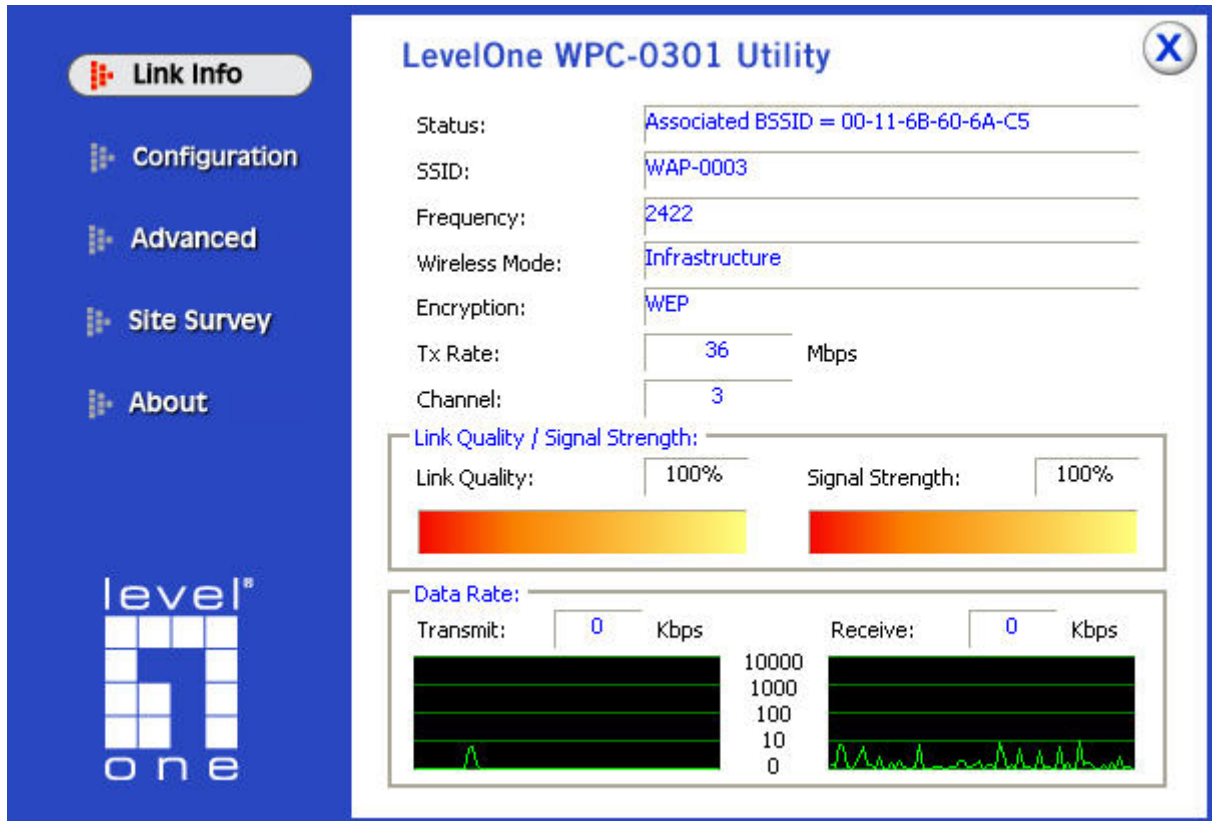

Status: Shows the associated BSSID, which can be used to identify the wireless network.

SSID: Shows the current SSID, which must be the same on the wireless client and AP in order for communication to be established.

Frequency: Shows the current frequency used for wireless network.

Wireless Mode: Shows the current wireless mode used for wireless communication.

Encryption: Shows the current encryption mode used for wireless network.

TxRate: Shows the current data rate used for transmitting.

Channel: Shows the current channel for communication.


Link Quality: Shows the link quality of the wireless LAN adapter with the Access Point when operating under Infrastructure mode.

Signal Strength: Shows the wireless signal strength of the connection between the wireless LAN adapter with the Access Point.

Data Rate: Shows the statistics of data transfer, and the calculation is based on the number of packets transmitted and received.

Configuration

This screen is where changes the basic wireless settings for the wireless LAN adapter with the minimum amount of effort to implement a secure wireless network environment.

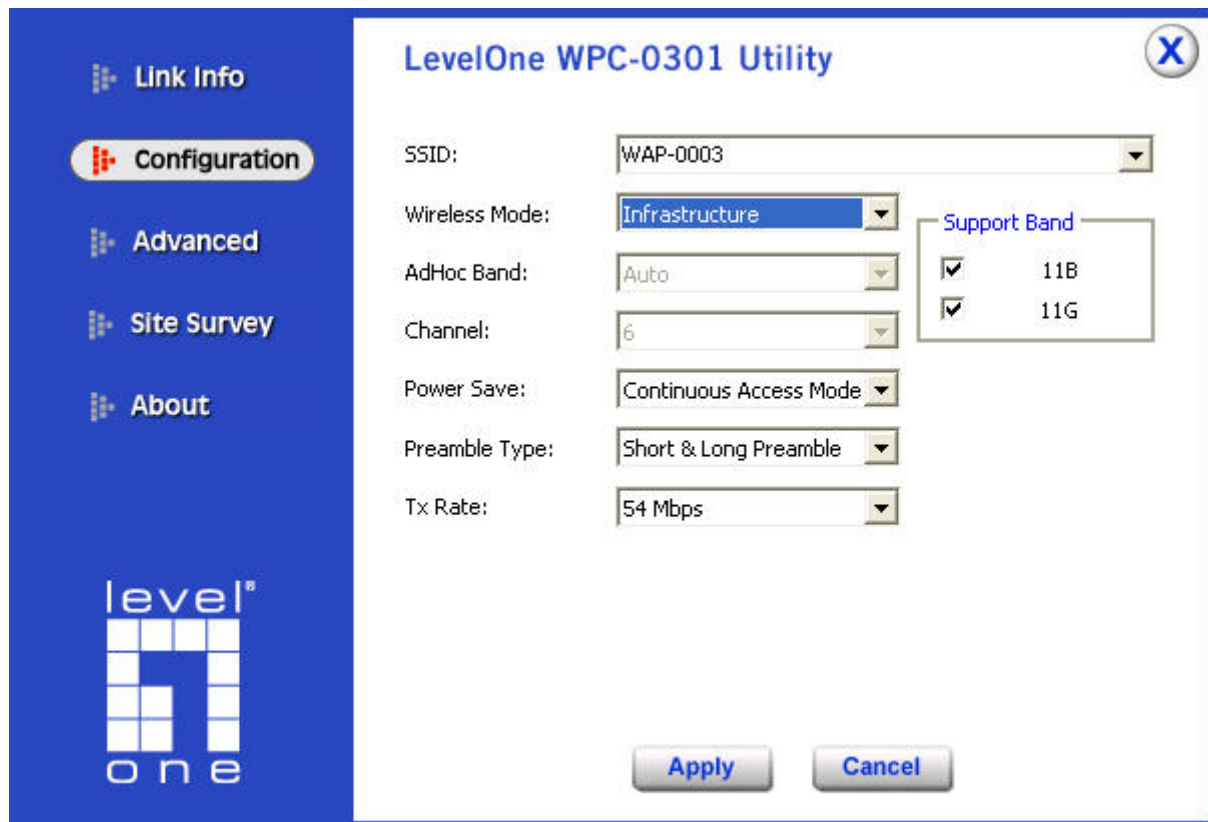

SSID: Service Set Identifier, which is a unique name shared among all clients and nodes in a wireless network. The SSID must be identical for each clients and nodes in the wireless network.

Wireless Mode: There are two types available for selection

- Infrastructure: to establish wireless communication with LAN and other wireless clients through the use of the Access Points.
- Ad-Hoc: to establish point-to-point wireless communication directly with other wireless client devices such as wireless network PCI Adapter.

AdHoc Band: When using **Wireless Mode** for **Ad-Hoc mode**, select the **AdHoc Band** from drop down list for **11b only**, **11g only** or **Auto** for both of 11b and 11g.

Channel: The channel range of 1 to 11 for North America (FCC) domain and 1 to 13 for European (ETSI) domain and 1 to 14 for Japanese domain.

WARNING: Country domain can't be choosing by end-user, because the incorrect region may be in violation of applicable laws.

Power Mode: There are 3 modes to choose from.

- Continuous Access Mode (default) – the wireless LAN adapter is constantly operating with full power. This mode consumes the most power.
- Maximum Power Save – the wireless LAN adapter consumes the least power. This mode only operates when there is wireless network activity.
- Power Save – the wireless LAN adapter consumes moderate level of power.


Preamble: Select Long or Short Preamble type. Preamble is a sequence of bits transmitted at 1Mbps that allows the PHY circuitry to reach steady-state demodulation and synchronization of bit clock and frame start. Two different preambles and headers are defined: the mandatory supported Long Preamble and header, which interoperate with the 1 Mbit/s and 2 Mbit/s DSSS specification (as described in IEEE Std 802.11), and an optional Short Preamble and header (as described in IEEE Std 802.11b). At the receiver, the Preamble and header are processed to aid in demodulation and delivery of the PSDU. The Short Preamble and header may be used to minimize overhead and, thus, maximize the network data throughput. However, the Short Preamble is supported only from the IEEE 802.11b (High- Rate) standard and not from the original IEEE 802.11. That means that stations using Short-Preamble cannot communicate with stations implementing the original version of the protocol. Click “Apply” for the changes to take effect.

Support Band: There are two modes the user can select, including 11B and 11G. The default setting is 11B and 11G are enabled, which is interoperable with both 11B and 11G devices.

Note: user must select one of 11B or 11G at least; otherwise the wireless connection will not function.

Advanced

This screen is where you configure the Security settings for the 11g Wireless LAN Adapter.

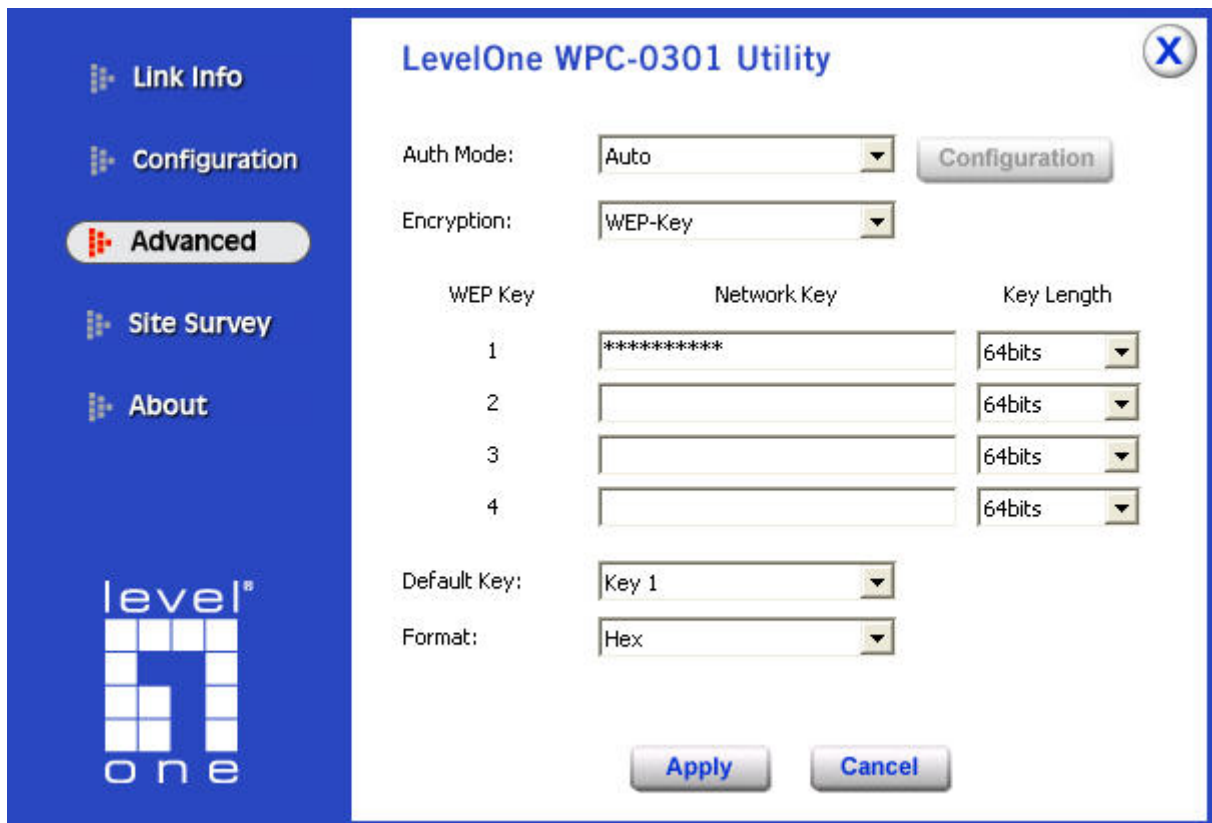

The screenshot shows the 'LevelOne WPC-0301 Utility' window with the 'Advanced' tab selected. The interface includes a sidebar with navigation options: Link Info, Configuration, Advanced (highlighted), Site Survey, and About. The main configuration area contains the following settings:

- Auth Mode:** Auto (dropdown menu)
- Encryption:** WEP-Key (dropdown menu)
- WEP Key:** A table with 4 rows and 3 columns: WEP Key, Network Key, and Key Length.
- Default Key:** Key 1 (dropdown menu)
- Format:** Hex (dropdown menu)

Buttons for 'Configuration', 'Apply', and 'Cancel' are also visible.

WEP Key	Network Key	Key Length
1	*****	64bits
2		64bits
3		64bits
4		64bits

Auth Mode: Select the authentication type from drop down list for Disable, Open System, Shared Key, WPA, WPA-PSK, WPA2 and WPA2-PSK.

Open System / Shared Key

The screenshot shows the 'LevelOne WPC-0301 Utility' configuration window. On the left is a blue sidebar with navigation options: 'Link Info', 'Configuration', 'Advanced' (highlighted), 'Site Survey', and 'About'. The main window has a title bar with a close button (X) and the text 'LevelOne WPC-0301 Utility'. Below the title bar, there are two dropdown menus: 'Auth Mode' set to 'Open System' and 'Encryption' set to 'WEP-Key'. A 'Configuration' button is to the right of the 'Auth Mode' dropdown. Below these are four rows for WEP keys. Each row has a 'WEP Key' column with a number (1-4), a 'Network Key' column with a text input field, and a 'Key Length' column with a dropdown menu set to '64bits'. The first row's 'Network Key' field contains '*****'. Below the key rows are 'Default Key' and 'Format' dropdown menus, set to 'Key 1' and 'Hex' respectively. At the bottom are 'Apply' and 'Cancel' buttons.

WEP Key	Network Key	Key Length
1	*****	64bits
2		64bits
3		64bits
4		64bits

Default Key: Key 1
Format: Hex

Buttons: Apply, Cancel

WEP Key 1~4: choose the encryption way, either in HEX or ASCII formats, and enter the password in the blank space.

Key Length: select 64 or 128 bits as the length of the keys. If you select 64bit in Hex format, you must type 10 values in the following range (0~F, hexadecimal), or 64bit in ASCII format, you must type 5 values in the following range (0~9, A~Z and a~z Alphanumeric); If you select 128bit in Hex format, you must type 26 values (0~F, hexadecimal), or 128bit in ASCII format, you must type 13 values in the following range (0~9, A~Z and a~z Alphanumeric).

Default Key: select one of the 4 keys to use.

Key Format: *ASCII* or *HEX*.

WPA-PSK / WPA2-PSK

The screenshot shows the 'LevelOne WPC-0301 Utility' configuration window. On the left is a blue sidebar with navigation options: Link Info, Configuration, **Advanced** (highlighted), Site Survey, and About. The main area is white and contains the following settings:

- Auth Mode:** WPA2-PSK (dropdown menu)
- Encryption:** AES (dropdown menu)
- Configuration** button
- WEP Key:** A table with 4 rows and 1 column of input fields.
- Network Key:** A single input field.
- Key Length:** A column of 4 dropdown menus, each set to '64bits'.
- Default Key:** Key 1 (dropdown menu)
- Format:** Hex (dropdown menu)
- Apply** and **Cancel** buttons at the bottom.

WEP Key	Network Key	Key Length
1	*****	64bits
2		64bits
3		64bits
4		64bits

The dialog box is titled 'Define WPA-PSK / WPA2-PSK'. It contains the text: 'Enter your WPA/WPA2 Passphrase. The minimum length is 8 characters'. Below the text is a single-line text input field. At the bottom are 'OK' and 'Cancel' buttons.

If WPA-PSK or WPA2-PSK is selected, the above screen is shown. Please select the encryption type from drop down menu and press **Configuration** button to configure the passphrase key.

Encryption: Select the encryption type for TKIP or AES encryption type.

WPA / WPA2

LevelOne WPC-0301 Utility X

Link Info
Configuration
Advanced
Site Survey
About

level[®]
one

Auth Mode:

Encryption:

WEP Key	Network Key	Key Length
1	<input type="text" value="*****"/>	<input type="text" value="64bits"/>
2	<input type="text"/>	<input type="text" value="64bits"/>
3	<input type="text"/>	<input type="text" value="64bits"/>
4	<input type="text"/>	<input type="text" value="64bits"/>

Default Key:

Format:

Define Certificate

Select a Certificate:

Trusted Root Certification Authorities:

Server/Domain Name:

Login Name:


If WPA or WPA2 is selected, the above screen is shown. Please select the encryption type from drop down menu and press **Configuration** button to configure parameters for the RADIUS server.

WARNING : WPA, WPA2 don't support In Windows 98/ME .

Encryption: Select the encryption type for TKIP or AES encryption type.

Site Survey

This screen allows user to scan for available wireless networks (wireless clients and Access Points). It also allows the user to establish wireless communications with an available wireless network.

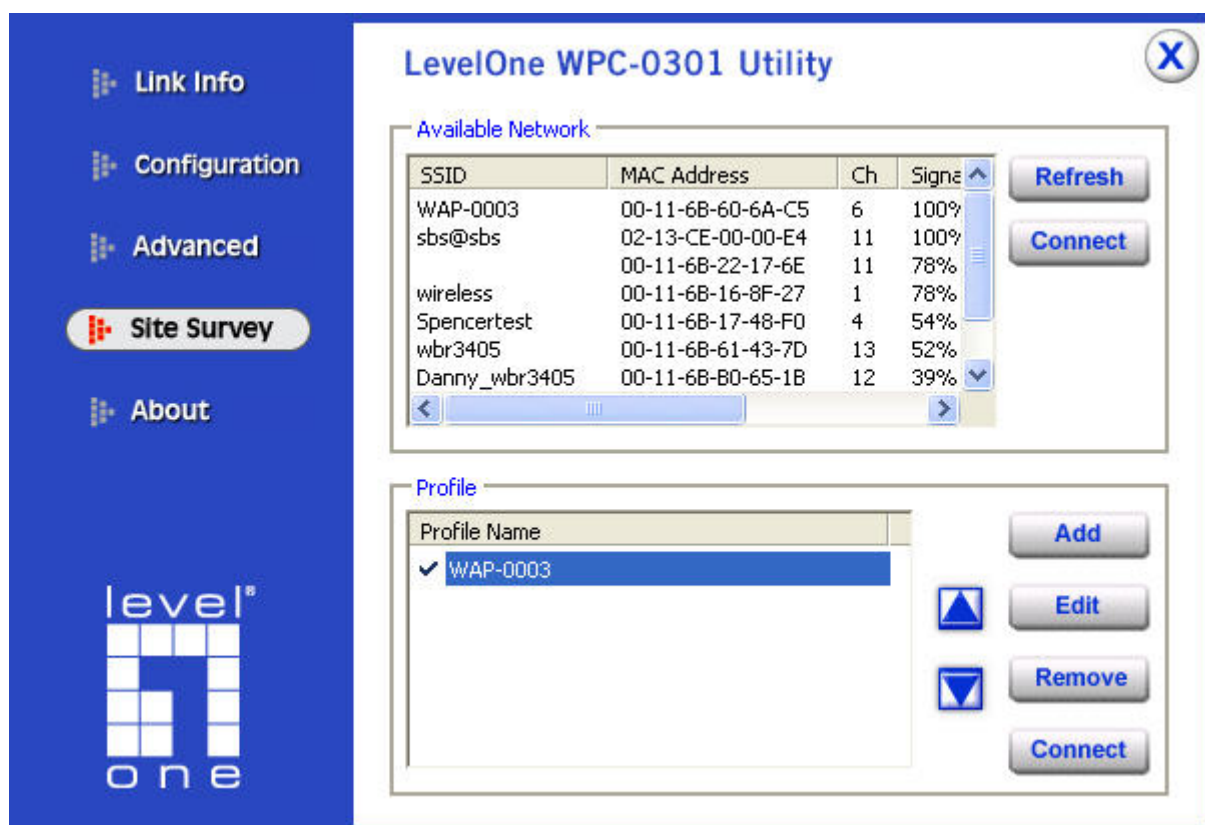


Available Network – displays the wireless networks (wireless clients and Access Points) that are in signal range.

Select any one of them to establish communications by simply mouse **double-click** or click on the “**Connect**” button.

Click “**Refresh**” button to start scanning for available network again.

Profile – The user can create and manage the created profiles for home, work or public areas. By double-clicking on one of the

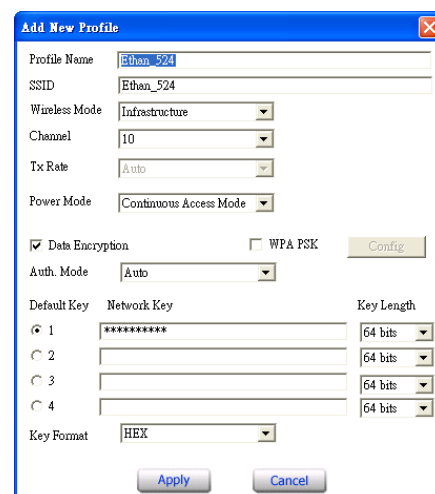

created profile, the setting will adjust to the specific setting such as SSID, channel, and WEP as saved by that particular profile.

Add: Adds a profile. Then, the following screen would appear. User can enter the necessary information required for accessing Access Points or Wireless Router.

Edit: To view and change its settings of the profile.

Remove: Deletes the selected profile

Connect: The current connected profile information.

About

This screen displays information about the 11g Wireless LAN Adapter, such as the Driver and Utility version. Users are able to identify by version numbers when a new version of the utility for upgraded.

LevelOne WPC-0301 Utility

Copyright (c) 2007, LevelOne. All Rights Reserved.
11g Wireless LAN Utility

Adapter Information

MAC Address:	00-40-F4-F8-56-58
Driver Version:	5.1097.201.2007
Utility Version:	2.4.15.314
Regulatory Domain:	ETSI

Technical Specifications

General	
Radio Technology	IEEE 802.11b Direct Sequence Spread Spectrum (DSSS) IEEE 802.11g Orthogonal Frequency Division Multiplexing (OFDM)
Interface	WNC-0301: 32-bit PCI bus; WPC-0301: 32-bit CardBus,
Data Transfer Rate	1, 2, 5.5, 6, 9, 11, 12, 18, 24, 36, 48, 54Mbps
Receiver Sensitivity	54Mbps: Typical -70dBm @ 10% PER (Packet Error Rate) 11Mbps: Typical -86dBm @ 8% PER (Packet Error Rate)
Transmit Power	802.11b: 15±2dBm 802.11g: 13±2dBm
Frequency Range	2412 ~ 2484 MHz ISM band (channels 1 ~ 14) 2400~2483.5MHz ISM band (channels 1 ~ 11)
Modulation Schemes	DBPSK/DQPSK/CCK/OFDM
Channels	1~11 channels (FCC), 1~13 channels (ETSI), 1~14 channels (MCK-Japan)
Media Access Protocol	CSMA/CA with ACK
Security	64/128-bits WEP Encryption, WPA-PSK, WPA2-PSK, WPA, WPA2
Diagnostic LED	CardBus Adapter: Link, ACT PCI Card: Link
Antenna	CardBus Adapter: Integrated printed dual diversity antennas PCI Card: 2dBi dipole antenna
Physical and Environmental	
Driver Support	Windows 2000, Windows XP, Windows Vista
Temperature	Operating: 0° ~ 40° C, Storage: -10° ~ 70° C
Humidity	10% ~ 95% RH, no condensation
Dimensions	PC Card:, 115 x 54 x 8.7 mm, PCI Adapter: 13 x 121 x 21.6
Certifications	FCC Part 15.247 for US, ETS 300 328 for Europe,