



OfficeConnect®

ADSL Wireless 11g Firewall Router User Guide

Model WL-542

3CRWDR100A-72
3CRWDR100B-72
3CRWDR100U-72

<http://www.3com.com/>

Part No. DUA100A-72AAA02

Published August 2005



3Com Corporation
350 Campus Drive,
Marlborough, MA
USA 01752-3064

Copyright © 2004, 2005, 3Com Corporation. All rights reserved. No part of this documentation may be reproduced in any form or by any means or used to make any derivative work (such as translation, transformation, or adaptation) without written permission from 3Com Corporation.

3Com Corporation reserves the right to revise this documentation and to make changes in content from time to time without obligation on the part of 3Com Corporation to provide notification of such revision or change.

3Com Corporation provides this documentation without warranty, term, or condition of any kind, either implied or expressed, including, but not limited to, the implied warranties, terms or conditions of merchantability, satisfactory quality, and fitness for a particular purpose. 3Com may make improvements or changes in the product(s) and/or the program(s) described in this documentation at any time.

If there is any software on removable media described in this documentation, it is furnished under a license agreement included with the product as a separate document, in the hard copy documentation, or on the removable media in a directory file named LICENSE.TXT or !LICENSE.TXT. If you are unable to locate a copy, please contact 3Com and a copy will be provided to you.

UNITED STATES GOVERNMENT LEGEND

If you are a United States government agency, then this documentation and the software described herein are provided to you subject to the following:

All technical data and computer software are commercial in nature and developed solely at private expense. Software is delivered as "Commercial Computer Software" as defined in DFARS 252.227-7014 (June 1995) or as a "commercial item" as defined in FAR 2.101(a) and as such is provided with only such rights as are provided in 3Com's standard commercial license for the Software. Technical data is provided with limited rights only as provided in DFAR 252.227-7015 (Nov 1995) or FAR 52.227-14 (June 1987), whichever is applicable. You agree not to remove or deface any portion of any legend provided on any licensed program or documentation contained in, or delivered to you in conjunction with, this User Guide.

Unless otherwise indicated, 3Com registered trademarks are registered in the United States and may or may not be registered in other countries.

3Com, and the 3Com logo are registered trademarks of 3Com Corporation.

Intel and Pentium are registered trademarks of Intel Corporation. Microsoft, MS-DOS, Windows, and Windows NT are registered trademarks of Microsoft Corporation. Novell and NetWare are registered trademarks of Novell, Inc. UNIX is a registered trademark in the United States and other countries, licensed exclusively through X/Open Company, Ltd.

Netscape Navigator is a registered trademark of Netscape Communications.

JavaScript is a trademark of Sun Microsystems

Wi-Fi and the Wi-Fi logo are registered trademarks of the Wi-Fi Alliance.

IEEE and 802 are trademarks of the Institute of Electrical and Electronics Engineers, Inc.

All other company and product names may be trademarks of the respective companies with which they are associated.

ENVIRONMENTAL STATEMENT

It is the policy of 3Com Corporation to be environmentally-friendly in all operations. To uphold our policy, we are committed to:

Establishing environmental performance standards that comply with national legislation and regulations.

Conserving energy, materials and natural resources in all operations.

Reducing the waste generated by all operations. Ensuring that all waste conforms to recognized environmental standards. Maximizing the recyclable and reusable content of all products.

Ensuring that all products can be recycled, reused and disposed of safely.

Ensuring that all products are labelled according to recognized environmental standards.

Improving our environmental record on a continual basis.

End of Life Statement

3Com processes allow for the recovery, reclamation and safe disposal of all end-of-life electronic components.

Regulated Materials Statement

3Com products do not contain any hazardous or ozone-depleting material.

Environmental Statement about the Documentation

The documentation for this product is printed on paper that comes from sustainable, managed forests; it is fully biodegradable and recyclable, and is completely chlorine-free. The varnish is environmentally-friendly, and the inks are vegetable-based with a low heavy-metal content.

CONTENTS

ABOUT THIS GUIDE

- Naming Convention 5
- Conventions 6
- Feedback About this User Guide 6
- Related Documentation 7

1 INTRODUCING THE ROUTER

- OfficeConnect ADSL Wireless 11g Firewall Router 9
- Router Advantages 11
- Package Contents 11
- Minimum System and Component Requirements 12
- Front Panel 12
- Rear Panel 13

2 INSTALLING THE ROUTER

- Introduction 15
 - Safety Information 15
- Positioning the Router 15
 - Using the Rubber Feet 16
- Powering Up the Router 16
- Connecting the Router 16

3 SETTING UP YOUR COMPUTERS

- Obtaining an IP Address Automatically 21
 - Windows 2000 21
 - Windows XP 23
 - Windows 98/ME 23
 - Macintosh 23
- Disabling PPPoE and PPTP Client Software 24
- Disabling Web Proxy 24

4 RUNNING THE SETUP WIZARD

- Accessing the Setup Wizard 25
 - Setup Wizard - Connection Type 27

5 CONFIGURING THE ROUTER

- Navigating Through the Router Configuration Pages 35
 - Main Menu 35
- Status Screen 35
 - Status 35
- LAN Setup 36
 - LAN Settings 37
- Wireless Settings 39
 - Configuring Wireless 39
 - Encryption 40
- Internet Settings 46
 - Connection Type 46
 - DNS 55
 - Hostname & MAC 56
- Firewall 57
 - Special Applications 58
 - Virtual Servers 59
 - Client IP Filters 60
 - MAC Address Filtering 65
 - DMZ 66
- Advanced 68
 - Routing 70
 - DDNS 73
 - SNMP 74
- System Tools 75
 - Restart Router 75
 - Reset to Factory Default 76
 - Backup/Restore Settings 76
 - Upgrade 77
 - Admin Password 77
 - Time and Time Zone 78
 - Syslog Server 79
- Status and Logs 80

Status	80
ADSL Status	80
ATM PVC Status	81
Logs	81
Support/Feedback	82
Support	82
Feedback	82

6 TROUBLESHOOTING

Basic Connection Checks	83
Browsing to the Router Configuration Screens	83
Connecting to the Internet	84
Forgotten Password and Reset to Factory Defaults	84
Wireless Networking	85
Recovering from Corrupted Software	87
Frequently Asked Questions	88

A IP ADDRESSING

The Internet Protocol Suite	89
Managing the Router over the Network	89
IP Addresses and Subnet Masks	89
How does a Device Obtain an IP Address and Subnet Mask?	91
DHCP Addressing	91
Static Addressing	91
Auto-IP Addressing	91

B TECHNICAL SPECIFICATIONS

OfficeConnect ADSL Wireless 11g Firewall Router	93
Standards	94

C SAFETY INFORMATION

D END USER SOFTWARE LICENSE AGREEMENT

E OBTAINING SUPPORT FOR YOUR PRODUCT

Register Your Product	103
Purchase Value-Added Services	103
Troubleshoot Online	104
Access Software Downloads	104
Telephone Technical Support and Repair	104
Contact Us	105

GLOSSARY

REGULATORY NOTICES

INDEX

ABOUT THIS GUIDE

This guide describes how to install and configure the OfficeConnect ADSL Wireless 11g Firewall Router (3CRWD100x-72).

This guide is intended for use by those responsible for installing and setting up network equipment; consequently, it assumes a basic working knowledge of LANs (Local Area Networks) and Internet Routers.



If a release note is shipped with the ADSL 11g Wireless Router and contains information that differs from the information in this guide, follow the information in the release note.

Most user guides and release notes are available in Adobe Acrobat Reader Portable Document Format (PDF) on the 3Com World Wide Web site:

<http://www.3com.com>

Naming Convention

Throughout this guide, the OfficeConnect ADSL Wireless 11g Firewall Router is referred to as the "Router".

Category 3 and Category 5 Twisted Pair Cables are referred to as Twisted Pair Cables throughout this guide.

Conventions

[Table 1](#) and [Table 2](#) list conventions that are used throughout this guide.

Table 1 Notice Icons




Icon	Notice Type	Description
	Information note	Information that describes important features or instructions.
	Caution	Information that alerts you to potential loss of data or potential damage to an application, system, or device.
	Warning	Information that alerts you to potential personal injury.

Table 2 Text Conventions

Convention	Description
The words "enter" and "type"	When you see the word "enter" in this guide, you must type something, and then press Return or Enter. Do not press Return or Enter when an instruction simply says "type."
Keyboard key names	If you must press two or more keys simultaneously, the key names are linked with a plus sign (+). Example: Press Ctrl+Alt+Del
Words in <i>italics</i>	Italics are used to: <ul style="list-style-type: none"> ■ Emphasize a point. ■ Denote a new term at the place where it is defined in the text. ■ Identify menu names, menu commands, and software button names. Examples: From the <i>Help</i> menu, select <i>Contents</i>. Click <i>OK</i>.

Feedback About this User Guide

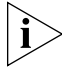Your suggestions are very important to us. They will help make our documentation more useful to you. Please e-mail comments about this document to 3Com at:

pddtechpubs_comments@3com.com

Please include the following information when commenting:

- Document title
- Document part number (on the title page)
- Page number (if appropriate)

Example:

- OfficeConnect ADSL Wireless 11g Firewall Router User Guide
- Part Number DUA100A-72AAA01
- Page 24



Do not use this e-mail address for technical support questions. For information about contacting Technical Support, please refer to [Appendix E](#).

Related Documentation

In addition to this guide, each Router document set includes one Installation Guide. This guide contains the instructions you need to install and configure your Router.

1

INTRODUCING THE ROUTER


Welcome to the world of networking with 3Com®. In the modern business environment, communication and sharing information is crucial. Computer networks have proved to be one of the fastest modes of communication but, until recently, only large businesses could afford the networking advantage.

OfficeConnect ADSL Wireless 11g Firewall Router

The OfficeConnect ADSL Wireless 11g Firewall Router is designed to provide a cost-effective means of sharing a single broadband Internet connection amongst several wired and wireless computers. The Router also provides protection in the form of an electronic “firewall” preventing anyone outside of your network from seeing your files or damaging your computers. The Router can also prevent your users from accessing Web sites which you find unsuitable.


[Figure 1](#) shows an example network without a Router. In this network, only one computer is connected to the Internet. This computer must always be powered on for the other computers on the network to access the Internet.

Figure 1 Example Network Without a Router

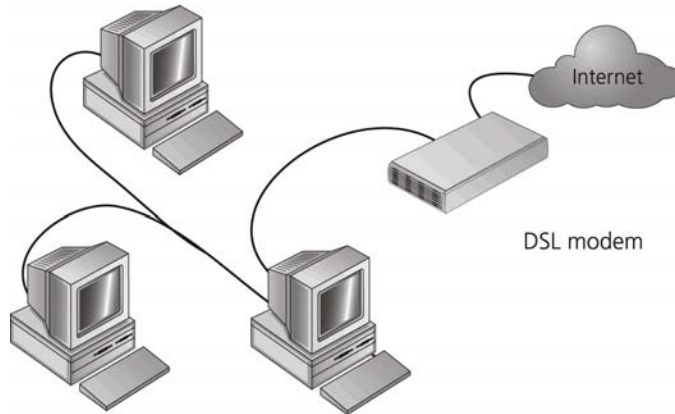

When you use the Router in your network ([Figure 2](#)), it becomes your connection to the Internet. Connections can be made directly to the Router, or to an OfficeConnect Switch or Hub, expanding the number of computers you can have in your network.

Figure 2 Example Network Using a Firewall Router

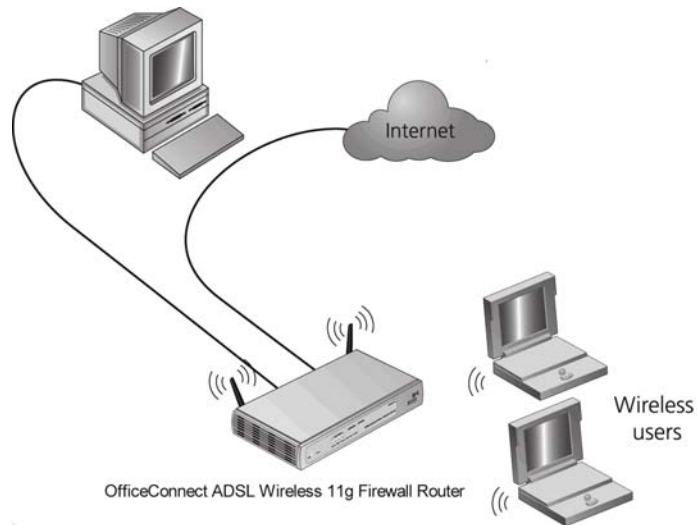

Router Advantages

The advantages of the Router include:

- Shared Internet connection for both wired and wireless computers
- High speed 802.11g wireless networking
- No need for a dedicated, “always on” computer serving as your Internet connection
- Cross-platform operation for compatibility with Windows, Unix and Macintosh computers
- Easy-to-use, Web-based setup and configuration
- Provides centralization of all network address settings (DHCP)
- Acts as a Virtual server to enable remote access to Web, FTP, and other services on your network
- Security — Firewall protection against Internet hacker attacks and encryption to protect wireless network traffic

Package Contents

The Router kit includes the following items:

- One OfficeConnect ADSL Wireless 11g Firewall Router
- One power adapter for use with the Router
- Four rubber feet
- One Telephone Cable
- One CD-ROM containing this User Guide
- Installation Guide
- One Support and Safety Information Sheet
- One Warranty Flyer

If any of these items are missing or damaged, please contact your retailer.

Minimum System and Component Requirements


Your Router requires that the computer(s) and components in your network be configured with at least the following:

- A computer with an operating system that supports TCP/IP networking protocols (for example Windows 98/NT/Me/2000/XP, Unix, Mac OS 8.5 or higher).
- An Ethernet 10 Mbps or 10/100 Mbps NIC for each computer to be connected to the four-port switch on your Router.
- An 802.11b or 802.11g wireless NIC.
- An active ADSL subscription and connection.
- A Web browser that supports JavaScript, such as Netscape 4.7 or higher, Internet Explorer 5.0 or higher, or Mozilla 1.2.1 or higher.

Front Panel

The front panel of the Router contains a series of indicator lights (LEDs) that help describe the state of various networking and connection operations.

Figure 3 Router - Front Panel

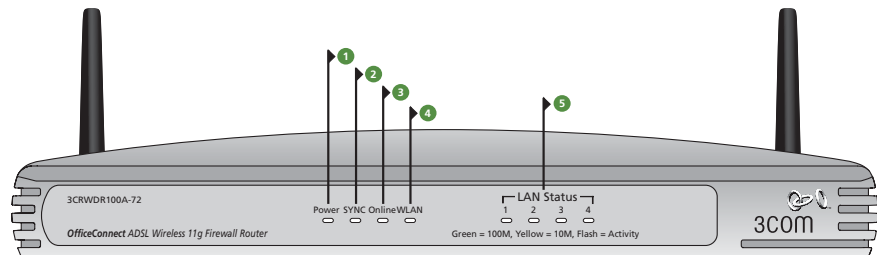

1 Power LED

Green

Indicates that the Router is powered on.

2 SYNC LED

Green

If the LED is on it indicates that DSL connection is present. This LED flashes during configuration at power up.

3 Online LED

Green

If this LED is on, your username/password has been authenticated successfully with your ISP.

4 Wireless LAN (WLAN) Status LED

Green

If the LED is on it indicates that wireless networking is enabled. If the LED is flashing, the link is OK and data is being transmitted or received. If the LED is off, the Wireless LAN has been disabled in the Router, or there is a problem. Refer to [Chapter 6 "Troubleshooting"](#).

5 LAN Status LEDs


Green

If the LED is on, the link between the port and the next piece of network equipment is OK. If the LED is flashing, the link is OK and data is being transmitted or received. If the LED is off, nothing is connected, or the connected device is switched off, or there is a problem with the connection (refer to [Chapter 6 "Troubleshooting"](#)). The port will automatically adjust to the correct speed and duplex.

Rear Panel

The rear panel ([Figure 4](#)) of the Router contains four LAN ports, one ADSL port, a reset button, a power switch, and a power adapter socket.

Figure 4 Router - Rear Panel

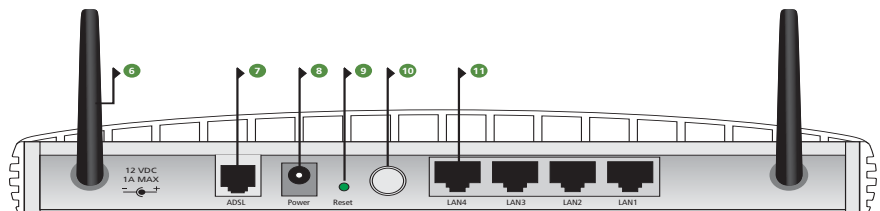

6 Wireless Antennae

The antennae on the product should be placed in a 'V' position when initially installed.



CAUTION: Do not force the antennae beyond their mechanical stops. Rotating the antennae further may cause damage.

7 ADSL Port

Using the RJ11 cable provided, you should connect your Router to the telephone socket via a splitter.

8 Power Adapter Socket

Only use the power adapter that is supplied with this Router. Do not use any other adapter.

9 Reset Button

If you want to reset your Router to factory default settings, and cannot access the web management interface (for example, due to a lost password), then you may use this button. Refer to [“Forgotten Password and Reset to Factory Defaults”](#) on [page 84](#) for further details.

10 Power Switch

Push this switch to the “in” position to turn the unit on. In the “out” position, the unit is off.

11 Ethernet Ports

Using suitable RJ45 cables, you can connect your Router to a computer, or to any other piece of equipment that has an Ethernet connection (for example, a hub or a switch). These ports have an automatic MDI/MDIX feature, which means either straight-through or a crossover cable can be used.

2

INSTALLING THE ROUTER

Introduction

This chapter will guide you through a basic installation of the Router, including:

- Connecting the Router to the Internet.
- Connecting the Router to your network.
- Setting up your computers for networking with the Router.

Safety Information

Please note the following:



WARNING: Please read the "[Safety Information](#)" section in [Appendix C](#) before you start.



VORSICHT: Bitte lesen Sie den Abschnitt "[Wichtige Sicherheitshinweise](#)" sorgfältig durch, bevor Sie das Gerät einschalten.



AVERTISSEMENT: Veuillez lire attentivement la section "[Consignes importantes de sécurité](#)" avant de mettre en route.

Positioning the Router

You should place the Router in a location that:

- is conveniently located for connection to the telephone socket.
- is centrally located to the wireless computers that will connect to the Router. A suitable location might be on top of a high shelf or similar furniture to optimize wireless connections to computers in both horizontal and vertical directions, allowing wider coverage.
- allows convenient connection to the computers that will be connected to the four LAN ports on the rear panel, if desired.
- allows easy viewing of the front panel LED indicator lights, and access to the rear panel connectors, if necessary.

When positioning your Router, ensure:

- It is out of direct sunlight and away from sources of heat.
- Cabling is away from power lines, fluorescent lighting fixtures, and sources of electrical noise such as radios, transmitters and broadband amplifiers.
- Water or moisture cannot enter the case of the unit.
- Air flow around the unit and through the vents in the side of the case is not restricted. 3Com recommends you provide a minimum of 25 mm (1 in.) clearance.

Using the Rubber Feet

Use the four self-adhesive rubber feet to prevent your Router from moving around on your desk or when stacking with flat top units. Only stick the feet to the marked areas at each corner of the underside of your Router.


Powering Up the Router

To power up the Router:

- 1 Plug the power adapter into the power adapter socket located on the back panel of the Router.
- 2 Plug the power adapter into a standard electrical wall socket.
- 3 Press the power button located on the back of the Router.

Connecting the Router

The first step for installing your Router is to physically connect it to the telephone socket and then connect it to a computer in order to be able to access the Internet. See [Figure 5](#):

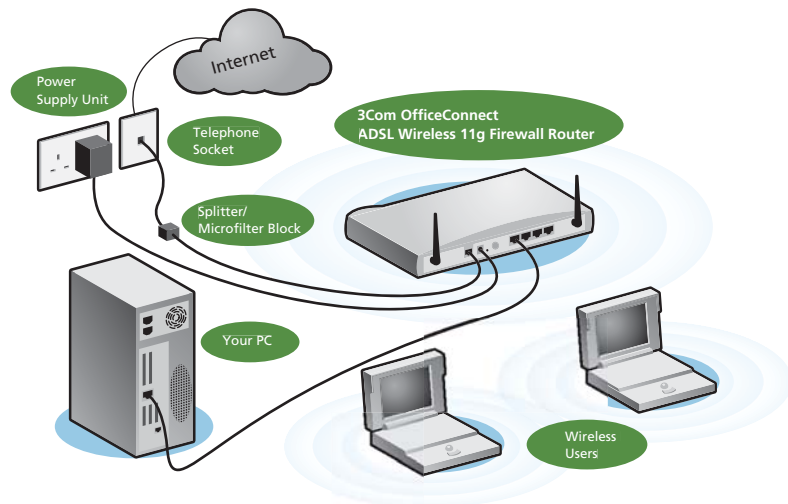Figure 5 Connecting the Router

- 1 Run the provided telephone cable from the wall jack providing ADSL service to the ADSL port on your ADSL Router. When inserting an ADSL RJ-11 plug, be sure the tab on the plug clicks into position to ensure that it is properly seated. If you are using splitterless ADSL service, add low-pass filters between the ADSL wall jack and your telephones. (These filters pass voice signals through but filter data signals out.)
- 2 Then:
 - If you are using a full-rate (G.dmt) connection, your service provider will attach the outside ADSL line to a data/voice splitter. In this case you can connect your phones and computer directly to the splitter as shown below ([Figure 6](#)):
 - or
 - If you are using a splitterless (G.lite) connection, then your service provider will attach the outside ADSL line directly to your phone system. In this case you can connect your phones and computer directly to the incoming ADSL line, but you will have to add low-pass filters to your phones as shown below ([Figure 7](#))

Figure 6 Installing with a splitter

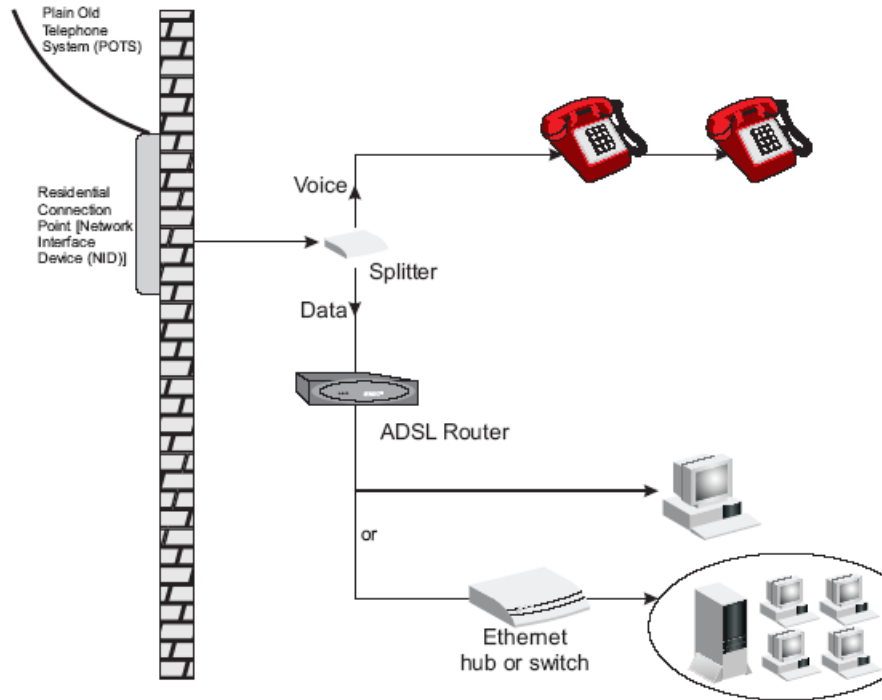
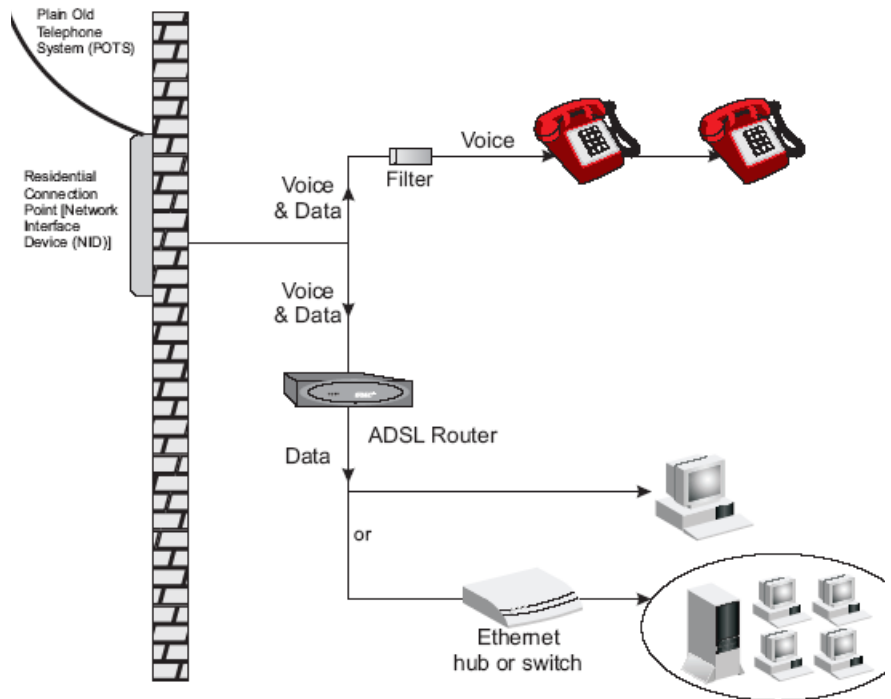


Figure 7 Installing without a splitter

You have now completed the hardware installation of your Router. Next you need to set up your computers so that they can make use of the Router to communicate with the Internet.

3Com recommends that you perform the initial Router configuration from a computer that is directly connected to one of the LAN ports.

If you configure the Router from a wireless computer, note that you may lose contact with the Router if you change the wireless configuration.

To communicate wirelessly with your Router, your wireless NIC should be set as follows:

- Encryption — none
- SSID — 3Com
- Channel — 11

3


SETTING UP YOUR COMPUTERS

The Router has the ability to dynamically allocate network addresses to the computers on your network, using DHCP. However, your computers need to be configured correctly for this to take place. To change the configuration of your computers to allow this, follow the instructions in this chapter.

Obtaining an IP Address Automatically


- Windows 2000** If you are using a Windows 2000-based computer, use the following procedure to change your TCP/IP settings:
- 1 From the Windows *Start* Menu, select *Settings > Control Panel*.
 - 2 Double click on *Network and Dial-Up Connections*.
 - 3 Double click on *Local Area Connection*.
 - 4 Click on *Properties*.
 - 5 A screen similar to [Figure 8](#) should be displayed. Select *Internet Protocol TCP/IP* and click on *Properties*.

Figure 8 Local Area Properties Screen

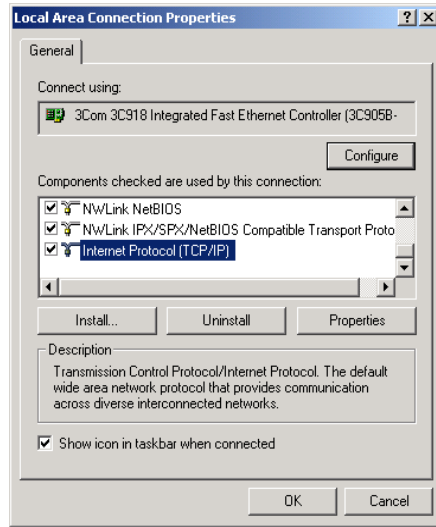

- 6 Ensure that the options *Obtain an IP Address automatically*, and *Obtain DNS server address automatically* are both selected as shown in [Figure 9](#). Click **OK**.

Figure 9 Internet Protocol (TCP/IP) Properties Screen

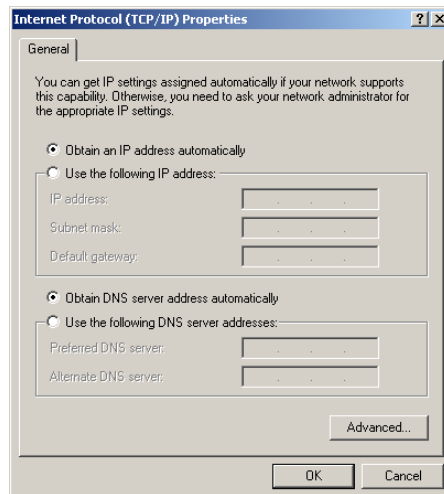

- 7 Restart your computer.

Windows XP

- 1 From the Windows *Start* menu, select *Control Panel*.
- 2 Click on *Network and Internet Connections*.
- 3 Click on the *Network Connections* icon.
- 4 Double click on *LAN or High Speed Connection* icon. A screen titled *Local Area Connection Status* will appear.
- 5 Select *Internet Protocol TCP/IP* and click on *Properties*.
- 6 Ensure that the options *Obtain an IP Address automatically*, and *Obtain DNS servers automatically* are both selected. Click *OK*.
- 7 Restart your computer.

Windows 98/ME

- 1 From the Windows *Start* Menu, select *Settings > Control Panel*.
- 2 Double click on *Network*. Select the *TCP/IP* item for your network card and click on *Properties*.
- 3 In the *TCP/IP* dialog, select the *IP Address* tab, and ensure that *Obtain IP address automatically* is selected. Click *OK*.

Macintosh If you are using a Macintosh computer, use the following procedure to change your *TCP/IP* settings:


- 1 From the desktop, select *Apple Menu*, *Control Panels*, and *TCP/IP*.
- 2 In the *TCP/IP* control panel, set *Connect Via:* to *Ethernet*.
- 3 In the *TCP/IP* control panel, set *Configure:* to *Using DHCP Server*.
- 4 Close the *TCP/IP* dialog box, and save your changes.
- 5 Restart your computer.

Disabling PPPoE and PPTP Client Software

If you have PPPoE client software installed on your computer, you will need to disable it. To do this:

- 1 From the Windows *Start* menu, select *Settings > Control Panel*.
- 2 Double click on *Internet Options*.
- 3 Select the *Connections* Tab. A screen similar to [Figure 10](#) should be displayed.
- 4 Select the *Never Dial a Connection* option.

Figure 10 Internet Properties Screen

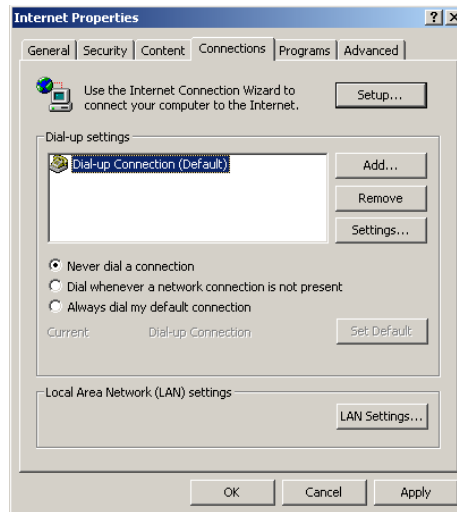

You may want to remove the PPPoE client software from your computer to free resources, as it is not required for use with the Router.

Disabling Web Proxy

Ensure that you do not have a web proxy enabled on your computer.

Go to the *Control Panel* and click on *Internet Options*. Select the *Connections* tab and click *LAN Settings* at the bottom. Make sure that the *Use Proxy Server* option is unchecked.

4

RUNNING THE SETUP WIZARD


Accessing the Setup Wizard

The Router setup program is Web-based, which means that it is accessed through your Web browser (Netscape Navigator 4.7 or higher, Internet Explorer 5.0 or higher, or Mozilla 1.2.1 or higher).

To use the Setup Wizard:

- 1 Ensure that you have at least one computer connected to the Router. Refer to [Chapter 2](#) for details on how to do this.
- 2 Launch your Web browser on the computer.
- 3 Enter the following URL in the location or address field of your browser: **http://192.168.1.1** ([Figure 11](#)). The Login screen displays.

Figure 11 Web Browser Location Field (Factory Default)

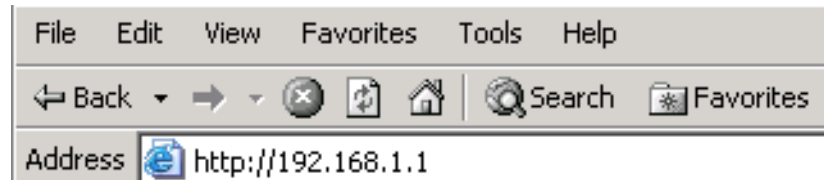


- 4 To log in as an administrator, enter the password (the default password is *admin*) in the *Password* field and click *Log in* ([Figure 12](#)).

Figure 12 Router Login Screen




- 5 When you have logged in either:
 - The *Status* screen will appear (Figure 13). Select *Setup Wizard* from the menu.
 - or
 - If your Router has not been configured before, the Wizard will launch automatically (refer to Figure 14).
- 6 You will be guided step by step through a basic setup procedure.

Figure 13 Status Screen

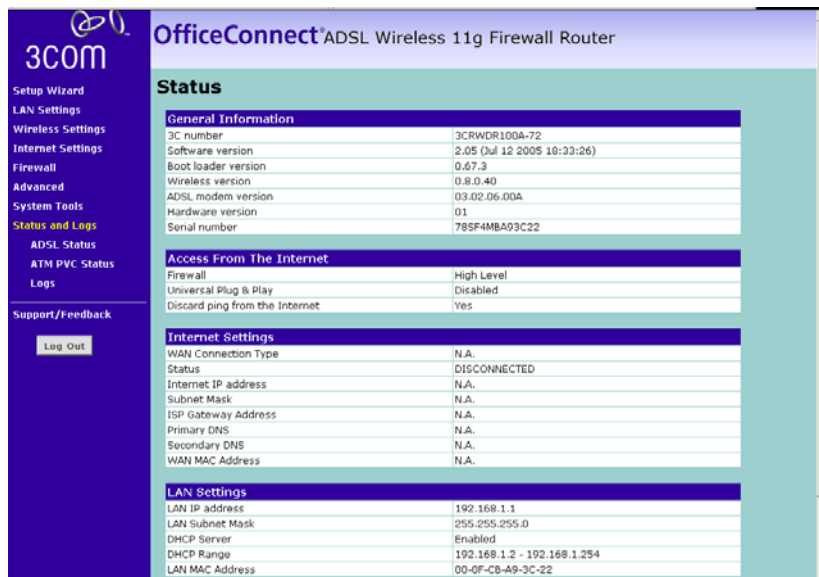

Setup Wizard - Connection Type

Figure 14 Connection Type Screen

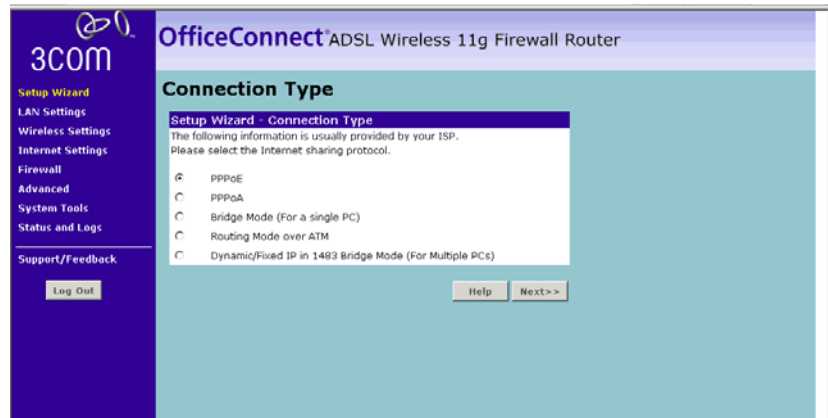

The *Connection Type* screen allows you to set up the Router for the type of Internet connection you have. Before setting up your connection type, have your account information from your ISP ready.

Select a DSL mode from the following:

- *PPPoE* — PPP over Ethernet, providing routing for multiple PCs, see [page 28](#)
- *PPPoA* — PPP over ATM, providing routing for multiple PCs, see [page 29](#)
- *Bridge Mode (for a single PC)* — RFC1483 Bridged Mode, for single PCs only, see [page 31](#)
- *Routing Mode over ATM* — RFC1483 Routed Mode, for multiple PCs, see [page 32](#)
- *Dynamic/Fixed IP in 1483 Bridge Mode (for multiple PCs)*, see [page 33](#)

and click *Next*.



For further information on selecting a mode see "[Internet Settings](#)" on [page 46](#).

PPPoE Mode

Figure 15 PPPoE Screen

The screenshot shows the 'OfficeConnect ADSL Wireless 11g Firewall Router' setup wizard. The left sidebar contains navigation options: Setup Wizard (highlighted), LAN Settings, Wireless Settings, Internet Settings, Firewall, Advanced, System Tools, Status and Logs, and Support/Feedback. A 'Log Out' button is at the bottom of the sidebar. The main content area is titled 'Parameter Settings' and contains a sub-section 'Setup Wizard - Parameter Settings' with the text 'The following information is provided by your ISP.' Below this are input fields for 'Username', 'Password', 'Retype Password', 'VPI/VCI' (split into two boxes for ID and SB), and 'Encapsulation' (a dropdown menu currently set to 'VC MUX'). At the bottom right of the form are '<< Back' and 'Next >>' buttons.

To set up the router for use with a PPP over Ethernet (PPPoE) connection, use the following procedure:

- 1 Enter your PPP over Ethernet user name in the *Username* text box.
- 2 Enter your PPP over Ethernet password in the *Password* text box.
- 3 Re-type your PPP over Ethernet password in the *Retype Password* text box.
- 4 Enter your VPI and VCI information in the *VPI/VCI* text boxes.
- 5 Select the encapsulation type (LLC or VC MUX) in the *Encapsulation* drop-down list. This information will have been provided to you by your ISP.
- 6 Check all of your settings, and then click *Next*. The Wireless Settings screen is displayed.


Figure 16 Wireless Settings Screen



- 7 Set the Wireless Channel you want to use from the *Channel* drop-down list.
- 8 Specify the SSID to be used by your Wireless Network in the *SSID* field. If there are other wireless networks in your area, you should give your wireless network a unique name.

PPPoA Mode

Figure 17 PPPoA Screen

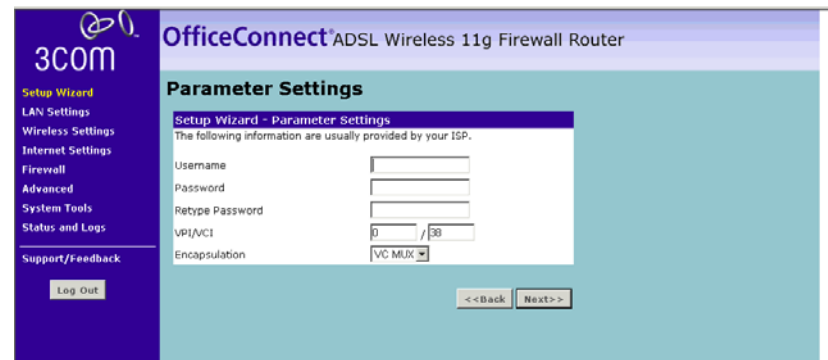


To set up the router for use with a PPP over ATM (PPPoA) connection, use the following procedure:

- 1 Enter your PPP over ATM user name in the *Username* text box.
- 2 Enter your PPP over ATM password in the *Password* text box.
- 3 Re-type your PPP over ATM password in the *Retype Password* text box.
- 4 Enter your VPI and VCI information in the *VPI/VCI* text boxes.

- 5 Select the encapsulation type (LLC or VC MUX) in the *Encapsulation* drop-down list. This information will have been provided to you by your ISP.
- 6 Check all of your settings, and then click *Next*. The Wireless Settings screen is displayed.

Figure 18 Wireless Settings Screen

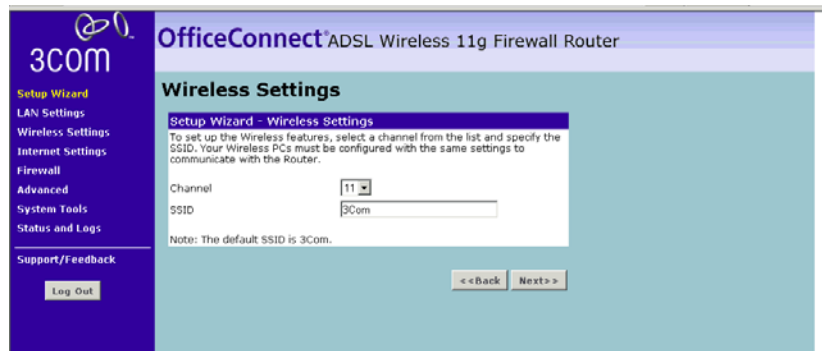


- 7 Set the Wireless Channel you want to use from the *Channel* drop-down list.
- 8 Specify the SSID to be used by your Wireless Network in the *SSID* field. If there are other wireless networks in your area, you should give your wireless network a unique name.

Bridge Mode (for a single PC) (RFC 1483 Bridged Mode)


To set up the Router for use with an RFC 1483 bridged connection:

Figure 19 Bridged Mode Configuration Screen

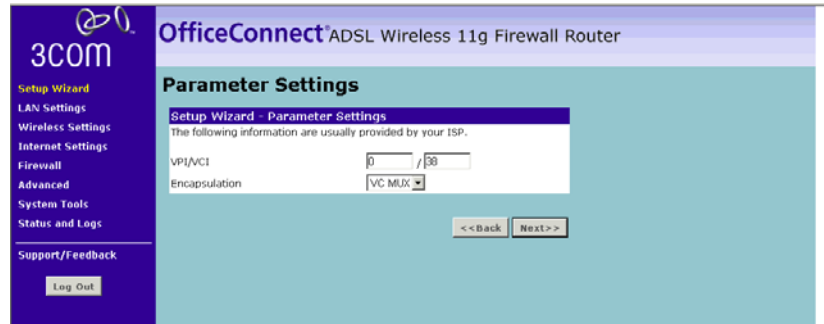

- 1 Enter your VPI and VCI information in the *VPI/VCI* text boxes.
- 2 Select the encapsulation type (LLC or VC MUX) in the *Encapsulation* drop-down list. This information will have been provided to you by your ISP.
- 3 Check all of your settings, and then click *Next*. The Wireless Settings screen is displayed.

Figure 20 Wireless Settings Screen

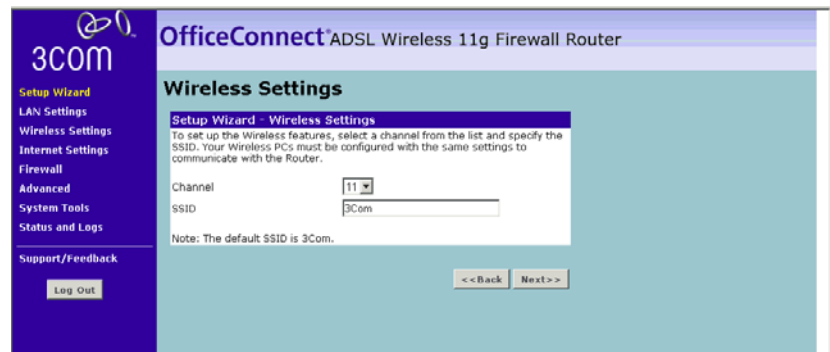

- 4 Set the Wireless Channel you want to use from the *Channel* drop-down list.
- 5 Specify the SSID to be used by your Wireless Network in the *SSID* field. If there are other wireless networks in your area, you should give your wireless network a unique name.

Routing Mode over ATM (RFC 1483 Routed Mode)

To set up the Router for use with an RFC 1483 routed connection:

Figure 21 Routing Mode Screen

- 1 Enter your Internet IP address in the *WAN IP* text box.
- 2 Enter the subnet mask in the *Subnet Mask* text box.
- 3 Enter the default router in the *Default Gateway* text box.
- 4 Enter the DNS address in the *DNS* text box.
- 5 Enter your VPI and VCI information in the *VPI/VCI* text boxes.
- 6 Select the encapsulation type (LLC or VC MUX) in the *Encapsulation* drop-down list. This information will have been provided to you by your ISP.
- 7 Check all of your settings, and then click *Next*. The Wireless Settings screen is displayed.

Figure 22 Wireless Settings Screen

- 8 Set the Wireless Channel you want to use from the *Channel* drop-down list.
- 9 Specify the SSID to be used by your Wireless Network in the *SSID* field. If there are other wireless networks in your area, you should give your wireless network a unique name.

Dynamic/Fixed IP in 1483 Bridge Mode (For Multiple PCs)

For bridge mode to work, you need to assign an IP address to the Router. You can either configure the Router to obtain an IP address automatically from a DHCP server or assign a fixed or static IP address to it.

Figure 23 Dynamic/Fixed IP for Bridge Mode Screen

To obtain an IP address automatically from a DHCP server:
Check the *Get WAN IP By DHCP* field, and then click *Next*. The Wireless Settings screen is displayed.


To assign a fixed IP address:

- 1 Enter your Internet IP address in the *WAN IP* text box.
- 2 Enter the subnet mask in the *Subnet Mask* text box.
- 3 Enter the default router in the *Default Gateway* text box.
- 4 Enter the DNS address in the *DNS* text box.
- 5 Enter your VPI and VCI information in the *VPI/VCI* text boxes.
- 6 Select the encapsulation type (LLC or VC MUX) in the *Encapsulation* drop-down list. This information will have been provided to you by your ISP.
- 7 Check all of your settings, and then click *Next*. The Wireless Settings screen is displayed.

Figure 24 Wireless Settings Screen

- 8 Set the Wireless Channel you want to use from the *Channel* drop-down list.
- 9 Specify the SSID to be used by your Wireless Network in the *SSID* field. If there are other wireless networks in your area, you should give your wireless network a unique name.

Configuration Summary

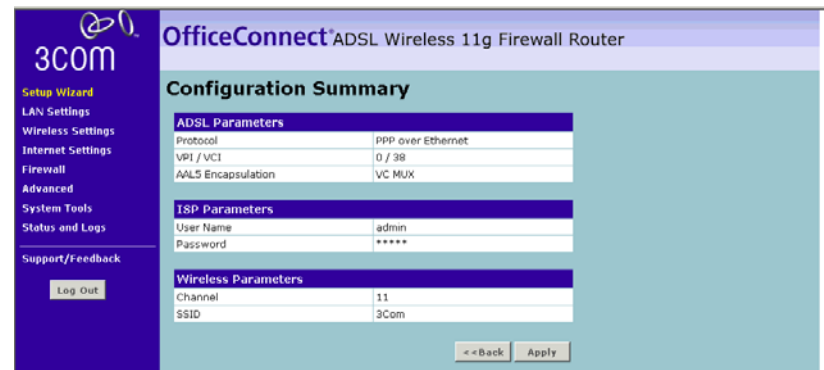Figure 25 Configuration Summary Screen

When you complete the Setup Wizard, a configuration summary will display. Verify the configuration information of the Router and then click *Apply* to save your settings. 3Com recommends that you print this page for your records.

Your Router is now configured and ready for use.

See [Chapter 5](#) for a detailed description of the Router configuration.

5

CONFIGURING THE ROUTER

Navigating Through the Router Configuration Pages

This chapter describes all the screens available through the Router configuration pages, and is provided as a reference. To get to the configuration pages, browse to the Router by entering the URL in the location bar of your browser. The default URL is `http://192.168.1.1` but if you changed the Router LAN IP address during initial configuration, use the new IP address instead. When you have browsed to the Router, log in using your system password (default password is *admin*).


Main Menu

At the left side of all screens is a main menu, as shown in [Figure 26](#) on [page 35](#). When you click on a topic from the main menu, that page will appear in the main part of the screen.

Status Screen

The *Status* screen allows you to view a summary of the Router configuration, including the current Router status.

Status **Figure 26** Status Screen

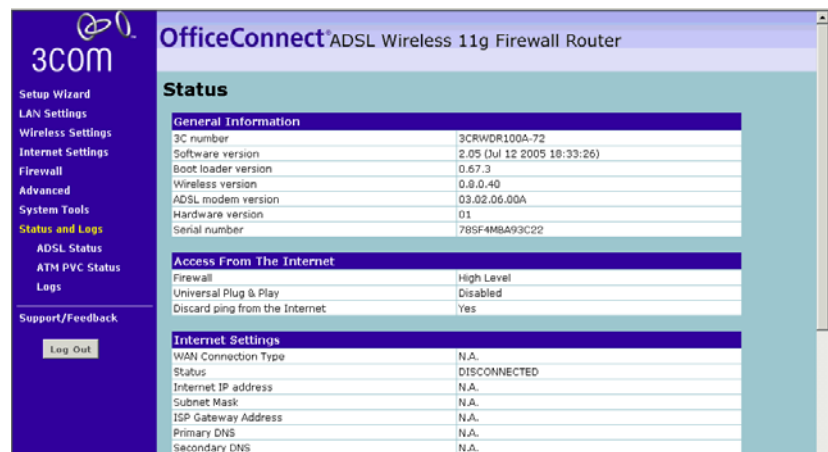

General Information	
3C number	3CRWDR100A-72
Software version	2.05 (Jul 12 2005 18:33:26)
Boot loader version	0.67.3
Wireless version	0.0.40
ADSL modem version	03.02.06.00A
Hardware version	01
Serial number	785F4MBA93C22

Access From The Internet	
Firewall	High Level
Universal Plug & Play	Disabled
Discard ping from the Internet	Yes

Internet Settings	
WAN Connection Type	N.A.
Status	DISCONNECTED
Internet IP address	N.A.
Subnet Mask	N.A.
ISP Gateway Address	N.A.
Primary DNS	N.A.
Secondary DNS	N.A.

LAN Setup

Your Router is equipped with a DHCP server that will automatically assign IP addresses to each computer on your network. The factory default settings for the DHCP server will work in most any application. If you need to make changes to the settings, you can do so.

The changes that you can make are:

- Change the Internal IP address of the Router. The default is 192.168.1.1
- Change the Subnet Mask. The default is 255.255.255.0
- Enable/Disable the DHCP Server Function. Default is ON (Enabled)
- Specify the Starting and Ending IP Pool Address. Default is Starting: 2 / Ending: 254
- Specify the IP address Lease Time. Default is Half day
- Specify a local Domain Name. Default is NONE

To make changes, click *LAN Settings* on the main menu.

The Router will also provide you with a list of all client computers connected to the network.

LAN Settings The LAN Settings screen is used to specify the LAN IP address of your Router, and to configure the DHCP server.

Figure 27 LAN Settings Screen

OfficeConnect[®] ADSL Wireless 11g Firewall Router

LAN Settings

LAN Configuration

IP Address: 192 . 168 . 1 . 1
 Subnet Mask: 255 . 255 . 255 . 0

DHCP Server Parameters

DHCP server: On Off
 IP Pool Start Address: 192 . 168 . 1 . 2
 IP Pool End Address: 192 . 168 . 1 . 254
 Lease Time: Half Day
 Local Domain Name (Optional):

DHCP Client List

IP Address	Host Name	MAC Address	Client Type	Fix	Configure
192.168.1.2	kris_wu-pc	00-10-85-52-49-69	LAN	<input type="checkbox"/>	Release

Note: Only clients that have requested an IP address since the Router's last reboot and fixed associations are displayed in this list. Check Fix to fix an existing address, or click New to allocate an IP address to a MAC address.

Buttons: New, Help, Apply, Cancel

- 1 Select *LAN Settings* and then specify the Router *IP Address* and *Subnet Mask* in the appropriate fields. The default IP address of the Router is 192.168.1.1.
- 2 If you want to use the Router as a DHCP Server, click in the *On* check option.
- 3 If you need to, you can change the range of addresses given out by the Router by changing the *IP Pool Start Address* and *IP Pool End Address* fields.
- 4 Specify the DHCP Lease time by selecting the required value from the *Lease Time* drop down list. The lease time is the length of time the DHCP server will reserve the IP address for each computer
- 5 Specify the Local Domain Name for your network.
This step is optional.
- 6 Check all of your settings, and then click *Apply*.

DHCP Clients List

The DHCP Clients List provides details on the devices that have received IP addresses from the Router. The list is only created when the Router is set up as a DHCP server. For each device that is connected to the LAN the following information is displayed:

- *IP address* — The Internet Protocol (IP) address issued to the client machine.
- *Host Name* — The client machine's host name, if configured.
- *MAC Address* — The Media Access Control (MAC) address of the client's network card.
- *Client Type* — Whether the client is connected to the Router by wired or wireless connection.

As you connect more devices, the client list will grow to a maximum number of 253 clients.

From this section of the screen, you can do the following:

- In the table, check the *Fix* text box to permanently fix the IP address.
- In the table, click *Release* to release the displayed IP address.
- Click *New* to allocate an IP address to a MAC address. If you click *New*, a screen similar to that shown in [Figure 28](#) will be displayed. Enter the required details and click *Apply* to save your settings.

Figure 28 Editing DHCP Clients List Screen

The screenshot shows the 'Editing DHCP Clients List' screen in the OfficeConnect ADSL Wireless 11g Firewall Router web interface. The left sidebar contains navigation options: Setup Wizard, LAN Settings, Wireless Settings, Internet Settings, Firewall, Advanced, System Tools, Status and Logs, and Support/Feedback. The main content area has a title 'Editing DHCP Clients List' and a sub-header 'Input the IP Address and MAC Address of which client that needs to get a fixed IP address by DHCP.' Below this is a table with columns: IP Address, Host Name, MAC Address, Client Type, Fix, and Configure. The first row shows IP 192.168.1.2, Host Name krs_wu-pc, MAC Address 00-10-85-S2-A9-69, Client Type LAN, and a 'Release' button. Below the table is a 'New' form with fields for IP Address (192.168.1), MAC Address, and Type (Fixed Mapping). At the bottom are buttons for Help, Apply, Cancel, and Refresh.




The DHCP server will give out addresses to both wired and wireless clients.

Wireless Settings

From these pages, you can configure the settings for wireless connections.

Figure 29 Wireless Settings Screen

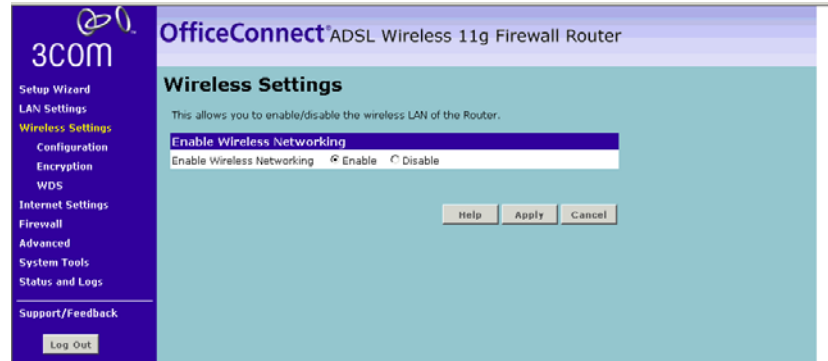


This screen allows you to enable or disable the wireless section of your LAN. When disabled, no wireless PCs can gain access to either the Internet or other PCs on your Wired or Wireless LAN through this Router.

Select the required setting, and press *Apply*.

Configuring Wireless

Click *Configuration* on the left-hand menu, the Wireless Configuration Screen displays.

Figure 30 Wireless Configuration Screen

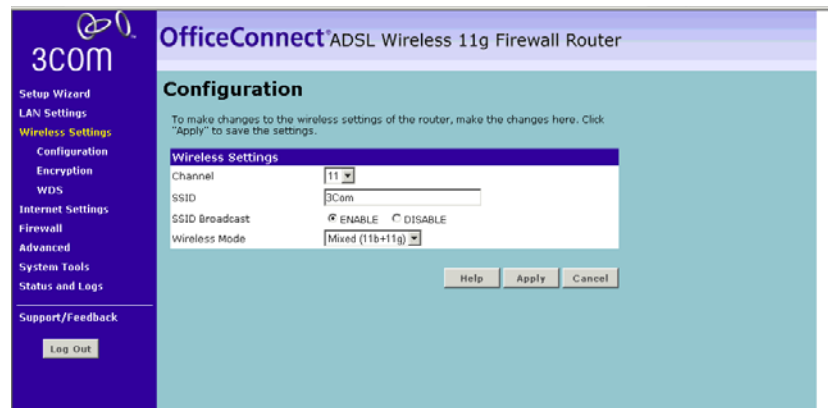


To enable Wireless function:

- 1 Select the Wireless Channel you want to use from the *Channel* drop-down list.
- 2 Specify the SSID to be used by your Wireless Network in the *SSID* field. If there are other wireless networks in your area, you should give your wireless network a unique name.
- 3 Enable or disable *SSID Broadcast*.
A feature of many wireless network adapters is that a computer's SSID can be set to ANY, which means it looks randomly for any existing wireless network. The available networks are then displayed in a site survey, and your computer can select a network. By clicking *disable*, you can block this random search, and set the computer's SSID to a specific network (for example, WLAN). This increases network security. If you decide to enable *SSID Broadcast*, ensure that you know the name of your network first.
- 4 In the *Wireless Mode* drop down list, select whether your router will operate in 11b mode only, 11g mode only, or mixed 11b and 11g.
- 5 Click *Apply*.

Encryption This feature prevents any non-authorized party from reading or changing your data over the wireless network.

Figure 31 Encryption Screen

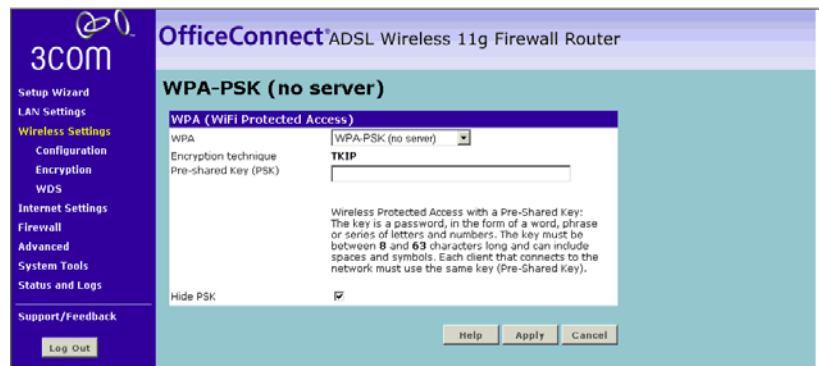

From this screen, you can select the wireless security mode that you want to use. There are five selections:

- Disabled (see [page 41](#))

- WPA-PSK (no Server) (see [page 41](#))
- 128-bit WEP (see [page 42](#))
- 64-bit WEP (see [page 43](#))
- WPA (with RADIUS Server) (see [page 44](#))

Select the required value from the drop down list, and press *Apply*.

Disabled

In this mode, wireless transmissions will not be encrypted, and will be visible to everyone. However, when setting up or debugging wireless networks, it is often useful to use this security mode.

WPA-PSK (no server)

WPA (WiFi Protected Access) provides dynamic key changes and constitutes the best security solution. In a wireless network where not all devices support WPA, WEP (Wired Equivalent Privacy) should be used.

Figure 32 WPA-PSK (no server) Screen



To enable WPA-PSK:

- 1 Enter the pre-shared key in the *Pre-shared Key (PSK)* field. The pre-shared key is a password, in the form of a word, phrase or series of letters and numbers. The key must be between 8 and 63 characters long and can include spaces and symbols.


Note that each client that connects to the network must use the same key.

- 2 Optionally, check the Hide PSK check box, if you want the key that you enter to be shown on the screen as a series of asterisks (*).
- 3 Click *Apply*.

128-bit WEP

WEP is the basic mechanism to transmit your data securely over the wireless network. Matching encryption keys must be setup on your Router and wireless client devices to use WEP.

Figure 33 128-bit WEP Screen

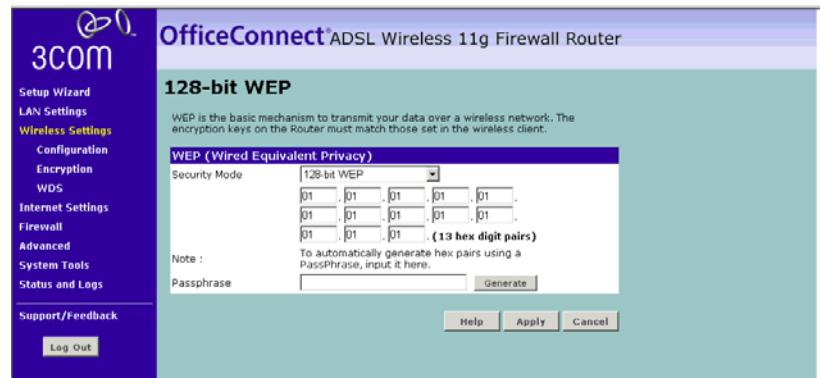

To enable 128-bit WEP:

- 1 You can enter the 128-bit WEP key manually:
 - enter your WEP key as 13 pairs of hex digits (0-9, A-F).

Or you can generate the 128-bit WEP key automatically:

- enter a memorable passphrase in the *Passphrase* box, and then click *Generate* to generate the hex keys from the passphrase.



The WEP keys on each device on the wireless network must be identical.


In 128-bit WEP mode, only one WEP key (key 1) can be specified.

- 2 Click *Apply*.

64-bit WEP

WEP is the basic mechanism to transmit your data securely over the wireless network. Matching encryption keys must be setup on your Router and wireless client devices to use WEP.

Figure 34 64-bit WEP Screen

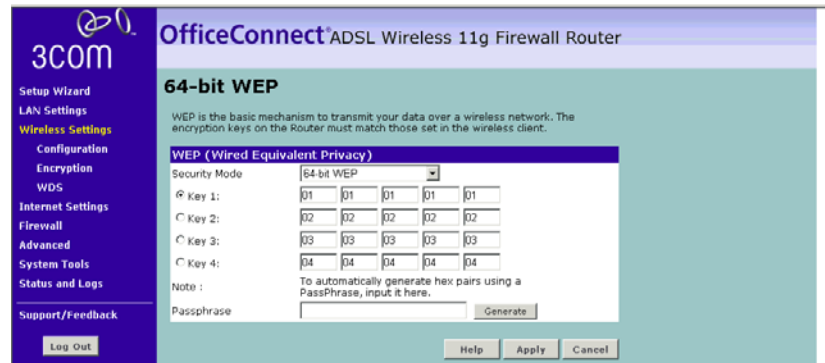

To enable 64-bit WEP:

- 1 Manually enter the key:
 - enter the WEP key as 5 pairs of hex digits (0-9, A-F).

Automatically generate the key:

- enter a memorable passphrase in the *Passphrase* box, and then click *Generate* to generate the hex keys from the passphrase.

For 64-bit WEP, you can enter up to four keys, in the fields *Key 1* to *Key 4*. The radio button on the left hand side selects the key that is used in transmitting data.



Note that all four WEP keys on each device in the wireless network must be identical.


- 2 Click *Apply*.

WPA (with RADIUS Server)

WPA (WiFi Protected Access) provides dynamic key changes and constitutes the best security solution. On a wireless network where not all devices support WPA, WEP (Wired Equivalent Privacy) should be used.

Wireless Protected Access using a server to distribute keys to the clients, and this function requires that a Radius server is running on the network.

Figure 35 WPA (with RADIUS Server) Screen

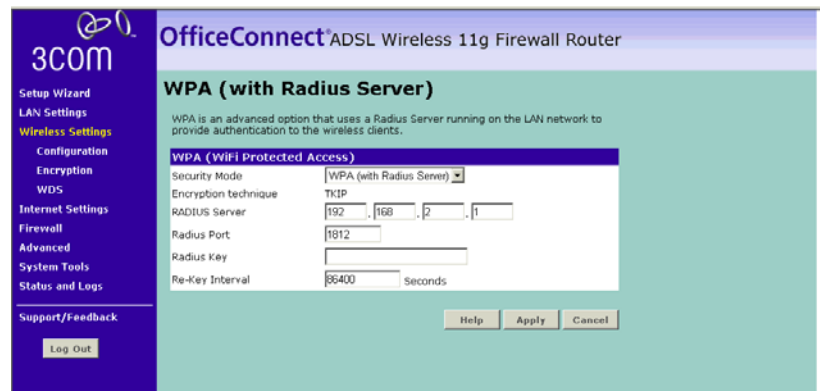


To enable WPA with Radius server:

- 1 Enter the IP address of the RADIUS server on your network into the *RADIUS Server* field.
- 2 Enter the port that the RADIUS server is operating on in the *RADIUS Port* field.
- 3 Enter the key for the RADIUS server in the *RADIUS Key* field.
- 4 By default, the WPA keys are changed every hour, but if you want to change this you can do so by specifying the required time in the *Re-key Interval* field, in minutes.
- 5 Click *Apply*.

Wireless WDS Settings

The Router supports WDS (Wireless Distribution System). WDS enables one or more Access Points to rebroadcast received signals to extend range and reach, though this can affect the overall throughput of data.

Figure 36 Wireless WDS Settings Screen

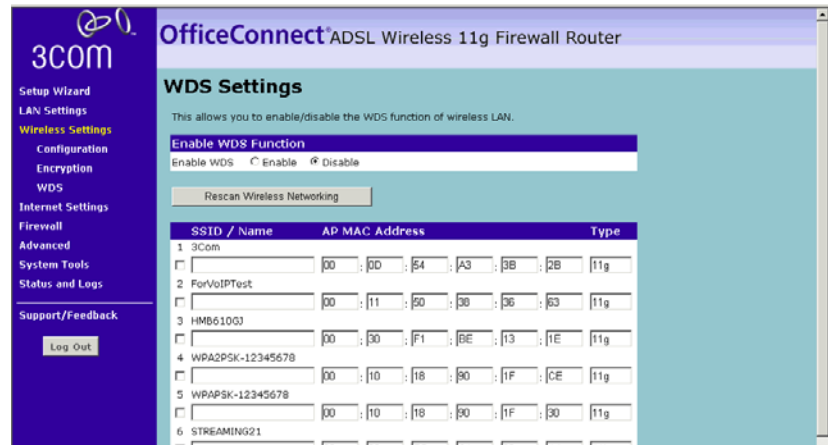

To enable wireless repeating:

- 1 Check the *Enable WDS* check box.
- 2 Enter the MAC address(es) of one or more access points in the *AP MAC Address* table.
- 3 Click *Apply*.

To refresh the list of available access points, click *Rescan Wireless Networking*.


Internet Settings

From these pages, you can configure the settings for your DSL connection.

Connection Type

The Internet Settings screen is used to configure the parameters for your DSL connection. The information necessary to complete these screens should be obtained from your ISP. Check with your ISP as for what type of connection you should choose.

Figure 37 Internet Settings Screen

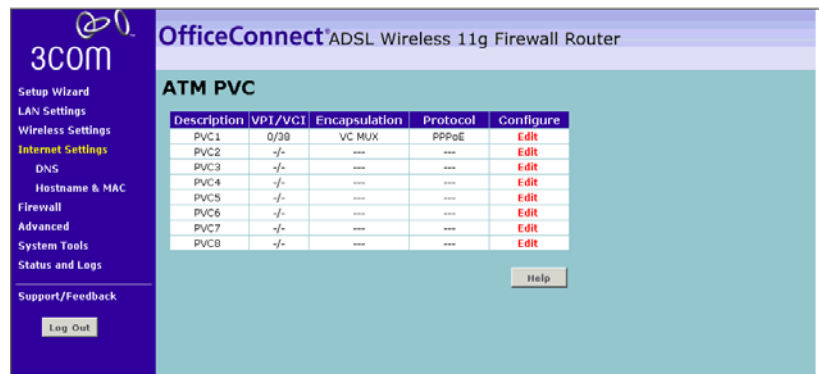

There are six options available for the DSL connection mode:

- *PPPoE* — PPP over Ethernet, providing routing for multiple PCs (see [page 47](#))
- *PPPoA* — PPP over ATM, providing routing for multiple PCs (see [page 49](#))
- *Bridge Mode* — RFC1483 Bridged Mode, for single PCs only (see [page 51](#))
- *Routing Mode over ATM* — RFC1483 Routed Mode, for multiple PCs (see [page 52](#))
- *Dynamic/Fixed IP in 1483 Bridge Mode (for multiple PCs)* (see [page 53](#))
- *Disable* — To disable the Internet connection function (see [page 55](#))

Click *Edit* to set the detail settings.

PPPoE

PPP over Ethernet, providing routing for multiple PCs. To configure this page correctly, you should obtain the information on this page from your ISP.

Figure 38 PPPoE Settings Screen

The screenshot shows the configuration page for the ATM Interface on an OfficeConnect ADSL Wireless 11g Firewall Router. The left sidebar contains navigation options: Setup Wizard, LAN Settings, Wireless Settings, Internet Settings (highlighted), DNS, Hostname & MAC, Firewall, Advanced, System Tools, Status and Logs, and Support/Feedback. The main content area is titled 'ATM Interface' and contains the following fields:

ATM1	
Protocol	PPPoE
IP Address	0.0.0.0
Subnet Mask	0.0.0.0
VPI/VCI	0 / 38
Encapsulation	VC MUX
QoS Class	UBR
PCR/SCR/MBS	4000 / 4000 / 10
Connect Type	Auto - Triggered by traffic
Idle Time (Minute)	20
Username	
Password	
Confirm Password	
MTU	1492

Buttons for Help, Apply, and Cancel are located at the bottom right of the form.

- 1 Select *PPPoE* from the *Protocol* drop-down menu.
- 2 Then enter the IP address and Subnet Mask information provided by your ISP into the *IP address* and *Subnet Mask* fields.
- 3 Enter the VPI and VCI parameters provided to you by your ISP in the *VPI* and *VCI* fields.
- 4 Select the encapsulation type (LLC or VC MUX) in the *Encapsulation* field. This information will have been provided to you by your ISP.
- 5 Select the type of Quality of Service (CBR, UBR or VBR) in the QoS field.
 - CBR (constant bit rate): the CBR service class is intended for real-time applications, for example, those requiring tightly constrained delay and delay variation, such as voice and video applications. The consistent availability of a fixed quantity of bandwidth is considered appropriate for CBR service.
 - UBR (unspecified bit rate): the UBR service class is intended for delay-tolerant or non-real-time applications, for example, those which do not require tightly constrained delay and delay variation, such as traditional computer communications applications. The UBR service may be considered as "best effort service".

- VBR (variable bit rate): QoS class defined by the ATM Forum for ATM networks. VBR is subdivided into a real time (RT) class and non-real time (NRT) class. VBR (RT) is used for connections in which there is a fixed timing relationship between samples. VBR (NRT) is used for connections in which there is no fixed timing relationship between samples, but that still need a guaranteed QoS. Compare with ABR, CBR, and UBR.
- 6 Enter the PCR/SCR/MBS values.
 - 7 Select the connection type from the Connect Type drop-down menu.
 - *Always Connected* means that Internet connection to your ISP is always on.
 - *Auto - Triggered by Traffic* means your Router will automatically connect to your ISP every time a PC needs to access the Internet.
 - *Manual - Start in Disconnected* means that after re-booting the Router, the Internet connection will need to be re-established manually by the user.
 - *Manual - Start in Connected* means that after re-booting the Router, it will automatically establish connection to your ISP.
 - *Manual - Start in Last State* means that after re-booting the Router, the Internet connection will stay in the previous condition before the reboot.
 - 8 If you want your Router to automatically disconnect from the Internet after a period of inactivity, specify a time in the *Idle Time (Minutes)* field.

Enter a value of 0 to disable this timeout.
 - 9 Enter the *User Name* assigned to you by your ISP in the *User Name* field. And enter the password assigned to you by your ISP in the *Password* field. Re-enter your password in the *Confirm Password* field.
 - 10 Enter the *MTU* value supplied by your ISP. If you do not know this, leave it at the default value.
 - 11 Click *Apply*.

PPPoA

PPP over ATM, this is a popular choice among European DSL providers. To configure this page correctly, you should obtain the information on this page from your ISP.

Figure 39 PPPoA Settings Screen

The screenshot shows the configuration page for the ATM Interface on an OfficeConnect ADSL Wireless 11g Firewall Router. The left sidebar contains navigation options: Setup Wizard, LAN Settings, Wireless Settings, Internet Settings (highlighted), DNS, Hostname & MAC, Firewall, Advanced, System Tools, Status and Logs, and Support/Feedback. The main content area is titled 'ATM Interface' and contains the following fields:

ATM1	
Protocol	PPPoA
VPI/VCI	0 / 38
Encapsulation	VC MUX
QoS Class	UBR
PCR/SCR/MBS	4000 / 4000 / 110
IP assigned by ISP	Yes
IP Address	0.0.0.0
Subnet Mask	0.0.0.0
Connect Type	Auto - Triggered by traffic
Idle Time (Minute)	20
Username	
Password	
Confirm Password	
MTU	1492

Buttons for Help, Apply, and Cancel are located at the bottom right of the form.

- 1 Select *PPPoA* from the *Protocol* drop-down menu.
- 2 Enter the VPI and VCI parameters provided to you by your ISP in the *VPI* and *VCI* fields.
- 3 Select the encapsulation type (LLC or VC MUX) in the *Encapsulation Type* field. This information is provided to you by your ISP.
- 4 Select the type of Quality of Service (CBR, UBR or VBR) in the QoS field.
 - CBR (constant bit rate): the CBR service class is intended for real-time applications, for example, those requiring tightly constrained delay and delay variation, such as voice and video applications. The consistent availability of a fixed quantity of bandwidth is considered appropriate for CBR service.
 - UBR (unspecified bit rate): the UBR service class is intended for delay-tolerant or non-real-time applications, for example, those which do not require tightly constrained delay and delay variation, such as traditional computer communications applications. The UBR service may be considered as "best effort service".
 - VBR (variable bit rate): QoS class defined by the ATM Forum for ATM networks. VBR is subdivided into a real time (RT) class and


non-real time (NRT) class. VBR (RT) is used for connections in which there is a fixed timing relationship between samples. VBR (NRT) is used for connections in which there is no fixed timing relationship between samples, but that still need a guaranteed QoS. Compare with ABR, CBR, and UBR.

- 5 Enter the PCR/SCR/MBS values.
- 6 IP assigned by ISP:
 - If your ISP assigns your IP address dynamically then select *Yes* in the *IP assigned by ISP* field and proceed to step 7.
 - If your ISP has assigned you a fixed or static IP address, select *No* in the *IP assigned by ISP* field.
Then enter the IP address and Subnet Mask information provided by your ISP into the *IP address* and *Subnet Mask* fields.
- 7 Select the connection type from the Connect Type drop-down menu.
 - *Always Connected* means that Internet connection to your ISP is always on.
 - *Auto - Triggered by Traffic* means your Router will automatically connect to your ISP every time a PC needs to access the Internet.
 - *Manual - Start in Disconnected* means that after re-booting the Router, the Internet connection will need to be re-established manually by the user.
 - *Manual - Start in Connected* means that after re-booting the Router, it will automatically establish connection to your ISP.
 - *Manual - Start in Last State* means that after re-booting the Router, the Internet connection will stay in the previous condition before the reboot.
- 8 If you want your Router to automatically disconnect from the Internet after a period of inactivity, specify a time in the *Idle Time (Minutes)* field.
Enter a value of 0 to disable this timeout.
- 9 Enter the User Name assigned to you by your ISP in the *User Name* field.
Enter the password assigned to you by your ISP in the *Password* field.
Re-enter your password in the *Confirm Password* field.
- 10 Enter the *MTU* value supplied by your ISP. If you do not know this, leave it at the default value.
- 11 Click *Apply*.

Bridge Mode (For a Single PC) (RFC 1483 Bridged Mode)

If the ISP limits some specific computers to access Internet, that means only the traffic to/from these computers will be forwarded and the other will be filtered. In this case, bridge modem is used to connect to the ISP. The ISP will generally give one Internet account and limit only one computer to access the Internet. Check with your ISP to determine if this mode is used for your DSL connection. To configure this page correctly, you should also obtain the information on this page from your ISP.

Figure 40 Bridge Mode (For Single PC) Screen

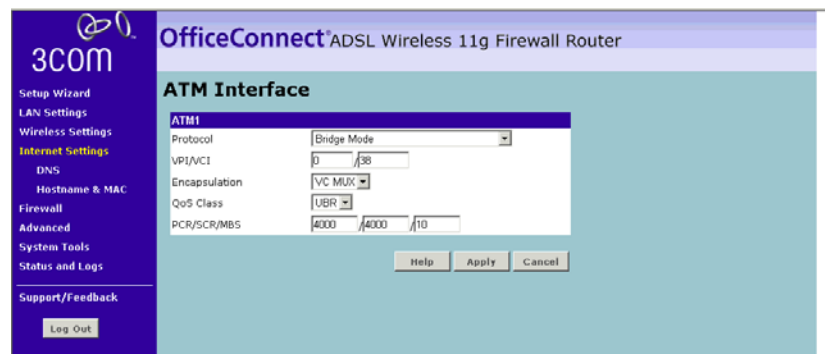

After clicking Edit on the ATM PVC page, the ATM Interface page appears.

- 1 Select *Bridge Mode* from the *Protocol* drop-down menu.
- 2 Enter the VPI and VCI parameters provided to you by your ISP in the *VPI* and *VCI* fields.
- 3 Select the encapsulation type (LLC or VC MUX) in the *Encapsulation Type* field. This information will have been provided to you by your ISP.
- 4 Select the type of Quality of Service that you want from the *QoS Class* drop-down menu.
 - CBR (constant bit rate): the CBR service class is intended for real-time applications, for example, those requiring tightly constrained delay and delay variation, such as voice and video applications. The consistent availability of a fixed quantity of bandwidth is considered appropriate for CBR service.
 - UBR (unspecified bit rate): the UBR service class is intended for delay-tolerant or non-real-time applications, for example, those which do not require tightly constrained delay and delay variation,

such as traditional computer communications applications. The UBR service may be considered as "best effort service".

- VBR (variable bit rate): QoS class defined by the ATM Forum for ATM networks. VBR is subdivided into a real time (RT) class and non-real time (NRT) class. VBR (RT) is used for connections in which there is a fixed timing relationship between samples. VBR (NRT) is used for connections in which there is no fixed timing relationship between samples, but that still need a guaranteed QoS. Compare with ABR, CBR, and UBR.

5 Enter the PCR/SCR/MBS values.

6 Click *Apply*.

Routing Mode over ATM (RFC 1483 Routed Mode)

This mode is commonly used with either dynamic or static IP addressing. In this mode the WAN ADSL port will be configured with an IP address provided by the ISP. To configure this page correctly, you should obtain the information on this page from your ISP.

Figure 41 Routing Mode over ATM Screen

The screenshot shows the configuration page for the ATM Interface on an OfficeConnect ADSL Wireless 11g Firewall Router. The page is titled "ATM Interface" and contains the following fields and options:

- Protocol:** A drop-down menu set to "Routing Mode over ATM".
- IP Address:** A text field containing "0.0.0.0".
- Subnet Mask:** A text field containing "0.0.0.0".
- Default Gateway:** A text field containing "0.0.0.0".
- VPI/VCI:** A text field containing "0 / 38".
- Encapsulation:** A drop-down menu set to "VC MUX".
- QoS Class:** A drop-down menu set to "UBR".
- PCR/SCR/MBS:** Three text fields containing "4000", "4000", and "10" respectively.
- DHCP Client:** An unchecked checkbox.

At the bottom of the form are buttons for "Help", "Apply", and "Cancel". On the left side of the screen, there is a navigation menu with options like "Setup Wizard", "LAN Settings", "Wireless Settings", "Internet Settings", "DNS", "Hostname & MAC", "Firewall", "Advanced", "System Tools", "Status and Logs", and "Support/Feedback". A "Log Out" button is also visible at the bottom left.


After clicking Edit on the ATM PVC page, the ATM Interface page appears.

- 1 Select *Routing Mode over ATM* from the *Protocol* drop-down menu.
- 2 Enter the IP address, Subnet Mask and Default Gateway information provided by your ISP into the *IP address*, *Subnet Mask* and *ISP Default Gateway* fields.
- 3 Enter the VPI and VCI parameters provided to you by your ISP in the *VPI* and *VCI* fields.

- 4 Select the encapsulation type (LLC or VC MUX) in the *Encapsulation* field. This information will have been provided to you by your ISP.
- 5 Select the type of Quality of Service that you want from the QoS Class drop-down menu.
 - CBR (constant bit rate): the CBR service class is intended for real-time applications, for example, those requiring tightly constrained delay and delay variation, such as voice and video applications. The consistent availability of a fixed quantity of bandwidth is considered appropriate for CBR service.
 - UBR (unspecified bit rate): the UBR service class is intended for delay-tolerant or non-real-time applications, for example, those which do not require tightly constrained delay and delay variation, such as traditional computer communications applications. The UBR service may be considered as "best effort service".
 - VBR (variable bit rate): QoS class defined by the ATM Forum for ATM networks. VBR is subdivided into a real time (RT) class and non-real time (NRT) class. VBR (RT) is used for connections in which there is a fixed timing relationship between samples. VBR (NRT) is used for connections in which there is no fixed timing relationship between samples, but that still need a guaranteed QoS. Compare with ABR, CBR, and UBR.
- 6 Enter the PCR/SCR/MBS values.
- 7 If your ISP uses DHCP to automatically assign IP addresses, check the *DHCP Client* box.
- 8 Click *Apply*.

Dynamic/Fixed IP in 1483 Bridge Mode (For Multiple PCs)

Your ISP uses fixed/dynamic IP to provide the Internet connection. To configure this function correctly, you should obtain the information on this page from your ISP.

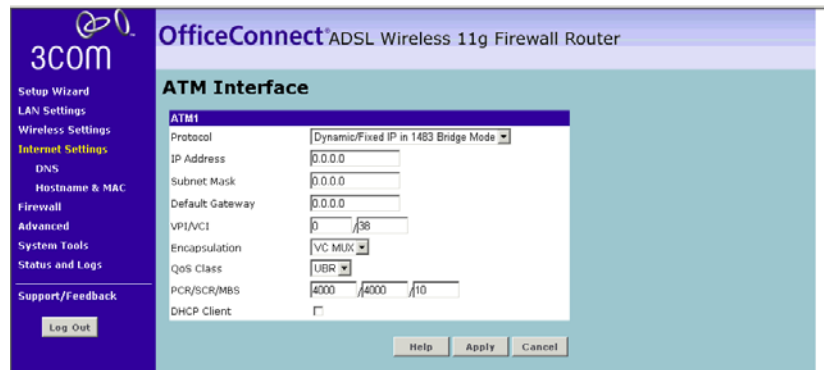Figure 42 Dynamic/Fixed IP for Bridge Mode Screen

After clicking Edit on the ATM PVC page, the ATM Interface page appears.

- 1 Select *Dynamic/Fixed IP for Bridge Mode* from the *Protocol* drop-down menu.
- 2 Enter the IP address, Subnet Mask and Default Gateway information provided by your ISP into the *IP address*, *Subnet Mask* and *ISP Default Gateway* fields.
- 3 Enter the VPI and VCI parameters provided to you by your ISP in the *VPI* and *VCI* fields.
- 4 Select the encapsulation type (LLC or VC MUX) in the *Encapsulation* field. This information will have been provided to you by your ISP.
- 5 Select the type of Quality of Service that you want from the QoS Class drop-down menu.
 - CBR (constant bit rate): the CBR service class is intended for real-time applications, for example, those requiring tightly constrained delay and delay variation, such as voice and video applications. The consistent availability of a fixed quantity of bandwidth is considered appropriate for CBR service.
 - UBR (unspecified bit rate): the UBR service class is intended for delay-tolerant or non-real-time applications, for example, those which do not require tightly constrained delay and delay variation, such as traditional computer communications applications. The UBR service may be considered as "best effort service".
 - VBR (variable bit rate): QoS class defined by the ATM Forum for ATM networks. VBR is subdivided into a real time (RT) class and


non-real time (NRT) class. VBR (RT) is used for connections in which there is a fixed timing relationship between samples. VBR (NRT) is used for connections in which there is no fixed timing relationship between samples, but that still need a guaranteed QoS. Compare with ABR, CBR, and UBR.

- 6 Enter the PCR/SCR/MBS values.
- 7 If your ISP uses DHCP to automatically assign IP addresses, check the *DHCP Client* box.
- 8 Click *Apply*.

Disable


Selecting this option means that you do not want your Router to connect to the Internet.

Figure 43 Disable Internet Connection Screen

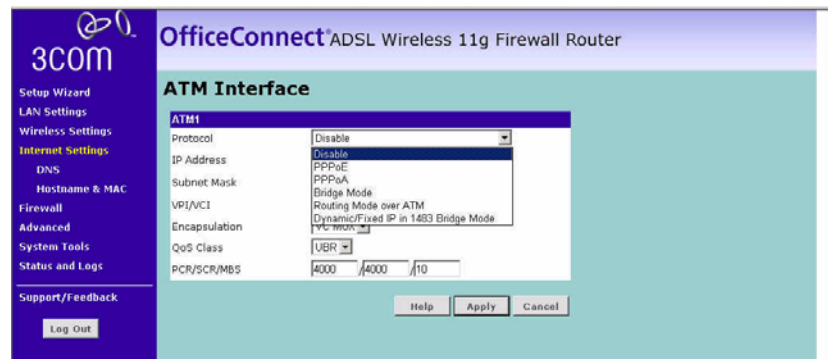

DNS Domain Name Service (or Server), an Internet service that translates domain names into IP addresses. Because domain names are alphabetic, they're easier to remember. The Internet however, is really based on IP addresses. Every time you use a domain name, a DNS service must translate the name into the corresponding IP address. For example, the domain name *www.example.com* might translate to *198.105.232.4*.

Check with your ISP for information on this page.

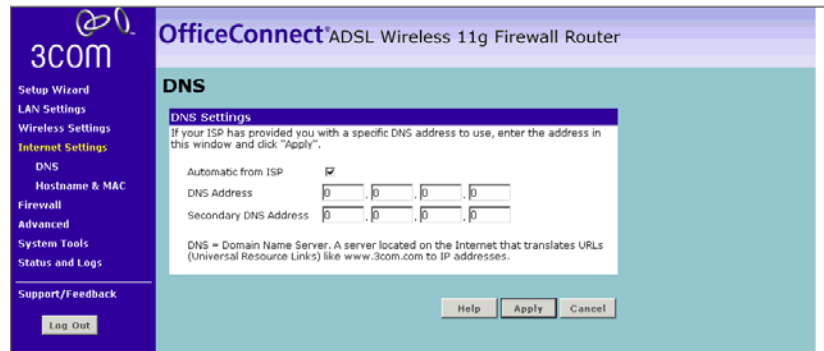Figure 44 DNS Screen

If the DNS information is automatically provided by your ISP every time you connect to it, check the *Automatic from ISP* box.

If your ISP provided you with specific DNS addresses to use, enter them into the appropriate fields on this screen and click *Apply*.

Many ISPs do not require you to enter this information into the Router. If you are using a Static IP connection type, you may need to enter a specific DNS address and secondary DNS address for your connection to work properly. If your connection type is Dynamic, PPPoA or PPPoE, it is likely that you do not have to enter a DNS address.

Hostname & MAC

To configure the Hostname and MAC Address information for your Router, select *Internet Settings*, then from the sub-menu select *Hostname & MAC*. The Hostname and MAC Address screen displays.

Figure 45 Hostname and MAC Address Screen

Some ISPs require a host name. If your ISP has this requirement, enter the host name in the *Host Name* field.


- 1 Three different ways to configure this page:
 - If your ISP requires an assigned MAC address, enter the values for a *WAN MAC address*
or
 - If the computer you are now using is the one that was previously connected directly to the cable modem, select *Clone*
or
 - To reset the MAC Address to the default, select *Reset MAC*.
- 2 Click *Apply* to save the settings.

Firewall

From these pages, you can configure settings for the firewall.

Your Router is equipped with a firewall that will protect your network from a wide array of common hacker attacks including Ping of Death (PoD) and Denial of Service (DoS) attacks. You can turn the firewall function off if needed. Turning off the firewall protection will not leave your network completely vulnerable to hacker attacks, but 3Com recommends that you leave the firewall enabled whenever possible.

Figure 46 Firewall Screen

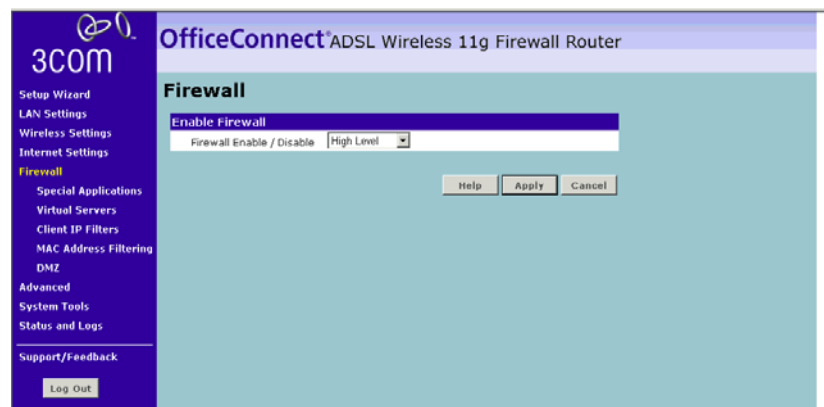


To enable the firewall function:

- 1 Select the level of protection (High Level, Medium Level, Low Level, or Disable) that you desire from the *Firewall Enable/Disable* drop-down menu.
- 2 Click *Apply*.

Special Applications

Special Applications let you choose specific ports to be open for specific applications to work properly with the Network Address Translation (NAT) feature of the Router.

Figure 47 Special Applications Screen

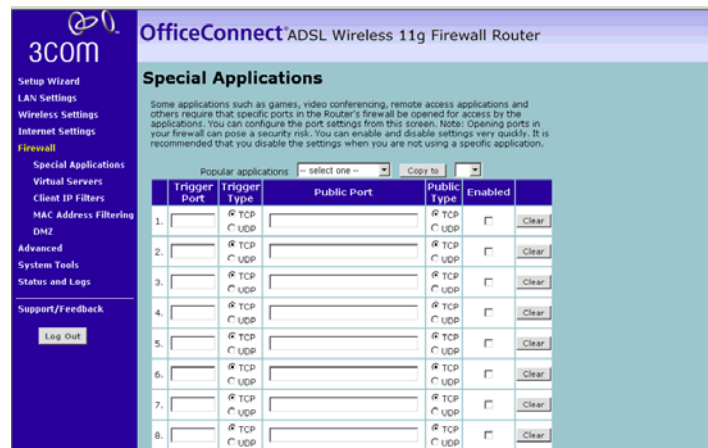

A list of popular applications has been included to choose from. Select your application from the *Popular Applications* drop-down list. Then select the row that you want to copy the settings to from the *Copy To* drop down list, and click *Copy To*. The settings will be transferred to the row you specified. Click *Apply* to save the setting for that application.

If your application is not listed, you will need to check with the application vendor to determine which ports need to be configured. You can manually input this port information into the Router.

To manually enter the port information:


- 1 Specify the trigger port (the one used by the application when it is initialized) in the *Trigger Port* column, and specify whether the trigger is TCP or UDP.
- 2 Specify the Public Ports used by the application, that will need to be opened up in the firewall for the application to work properly. Also specify whether these ports are TCP or UDP.
- 3 Click *Apply*.

Virtual Servers The Virtual servers feature allows you to route external (Internet) calls for services such as a web server (port 80), FTP server (Port 21), or other applications through your Router to your internal network. Since your internal computers are protected by a firewall, machines from the Internet cannot get to them because they cannot be 'seen'.

If you need to configure the Virtual Server function for a specific application, you will need to contact the application vendor to find out which port settings you need.

The maximum number of virtual servers that can be configured is 20.

Figure 48 Virtual Servers Screen

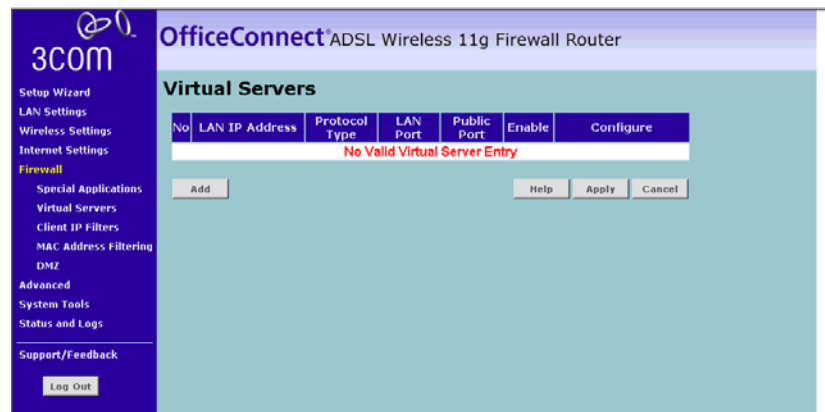

To configure your virtual servers:

- 1 Click *Add*, or *Edit* if you want to edit an existing record.
- 2 Enter the IP address in the space provided for the internal machine.


- 3 Enter the port type (TCP, UDP, or both TCP and UDP).
- 4 Specify the public port that will be seen by clients on the Internet, and the LAN port which the traffic will be routed to.
- 5 You can enable or disable each Virtual Server entry by checking or unchecking the appropriate *Enable* check box.
- 6 Click *Apply* to save the changes for each Virtual Server entry.

Client IP Filters The Router can be configured to restrict access to the Internet, e-mail or other network services at specific days and times. Restriction can be set for a single computer, a range of computers, or multiple computers.

Access Control

Access Control allows users to define the traffic type permitted or not-permitted to the Internet.

Figure 49 Access Control Screen

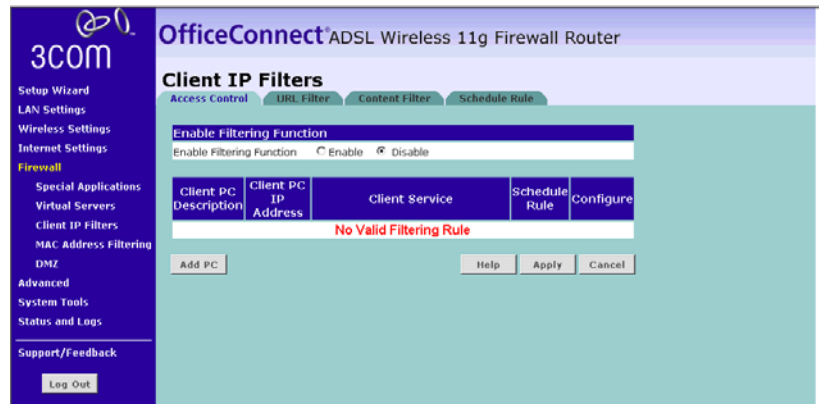

This screen allows you to enable or disable all Access Control rules. Select the appropriate *Enable Filtering Function* option, and click *Apply* to save the settings.


To edit or delete specific existing Access Control rules, click on *Edit* or *Delete* for the appropriate access control rule.

To configure new access control to specific Internet services:

- 1 Click on *Add PC*.

A screen similar to [Figure 50](#) will appear.

Figure 50 Add PC Screen

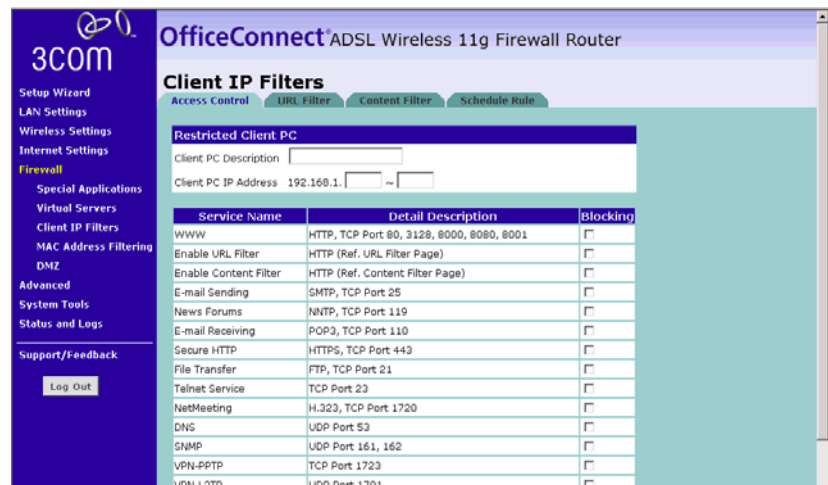

- 2 Enter a description for the filter you are defining in the *Client PC Description* field.
- 3 Enter the IP address or IP address range into the *Client PC IP Address* fields.
- 4 Select the services to be blocked. A list of popular services is given on this screen, to block a particular service place a check in the appropriate *Blocking* check box.

If the service to be restricted is not listed on the screen, you can enter a custom range of ports at the bottom of the page, under *User Defined Blocked Ports*.

- 5 If you want the restriction to only apply at certain times, select the schedule rule to apply from the *Schedule Rule* drop-down list.

Note that Schedule Rules are defined on the Schedule Rule page (see [page 64](#)).

- 6 Click *OK* to add the settings.

URL Filter

To configure the URL filter feature, use the table on the URL Filter page to specify the Web sites (www.somesite.com) and/or keywords you want to filter on your network.

For example, entering a keyword of **xxx** would block access to any URL that contains the string **xxx**.

Figure 51 URL Filter Screen



To complete this configuration, you will need to create or modify an access rule in the *Access Control* section (see [“Access Control”](#) on page 60).

From the *Access Control Add PC* screen, ([Figure 50](#)) check the option: *Enable URL Filter*, and *Enable Content Filter*, to filter out the Web sites and keywords specified in the *URL Filter page*, and *Content Filter page*.

Content Filter

You can use the list on the Content Filter page to specify the type of content that you want to filter out.



The Router comes with a 14-day free trial of the 3Com Content Filter Service (3CSBCFS). To activate the 14-day free trial of the service, you must first register your Router at www.3com.com. To continue using the service after the trial period, you must purchase the 12-month subscription license.

Figure 52 Content Filter Screen



To configure the Content Filter feature:


- 1 Select the server that you want to use from the *Content Filter Server* drop-down menu. If the server you want to use is not listed, enter the server address manually.
- 2 Define the time in the *Server Timeout* field (the default value is 3000ms). If the Content Filter Server does not respond within this time period, the Router will use the default content filter rule. The default rule is either *Allow* or *Deny None of the above (Uncategorized URL)*. You can configure this rule at the bottom of the Content Filter page.
- 3 If you are not sure about your subscription status, click *CHECK* in *Subscription Filtering Status* to find out if you have a current, valid subscription.

- 4 A list of categories is listed under *Core Categories* and *Productivity Categories*. You can define what content should be viewed/blocked using the *Allow/Deny* option. The *Deny* option is used to filter out the content that contains the specific subject matter. Content with a specific subject matter will not be filtered out if the *Allow* option is checked.
- 5 Click *Apply* for the changes to take effect.

Schedule Rule

The Router can be configured to restrict access to the Internet, e-mail or other network services at specific days and times. These schedule rules are used by the rules defined on the *Access Control* section of this screen (see "[Access Control](#)" on [page 60](#)).

Figure 53 Schedule Rule Screen

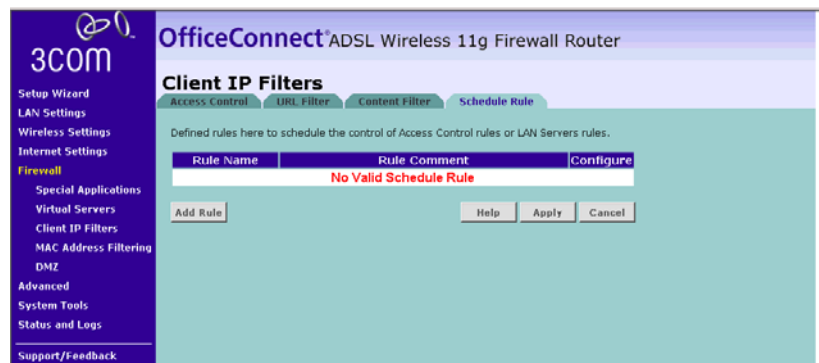


To add a schedule rule:

- 1 Click *Add Rule*.

A screen similar to [Figure 54](#) will appear.

Figure 54 Add Schedule Rule Screen

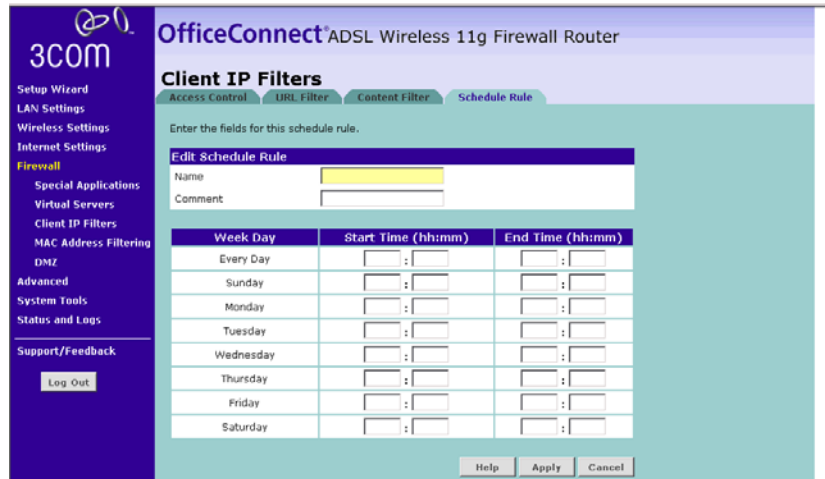


- 2 Enter a name and comment for the schedule rule in the *Name* and *Comment* fields.
- 3 Specify the schedule rules for the required days and times - note that all times should be in 24 hour format.
- 4 Click *Apply*.

MAC Address Filtering

The MAC Address Filter is a powerful security feature that allows you to specify which computers are allowed on the wireless network. Any wireless computers attempting to access the network that are not specified in the filter list will be denied access.

Figure 55 MAC Address Filtering Screen

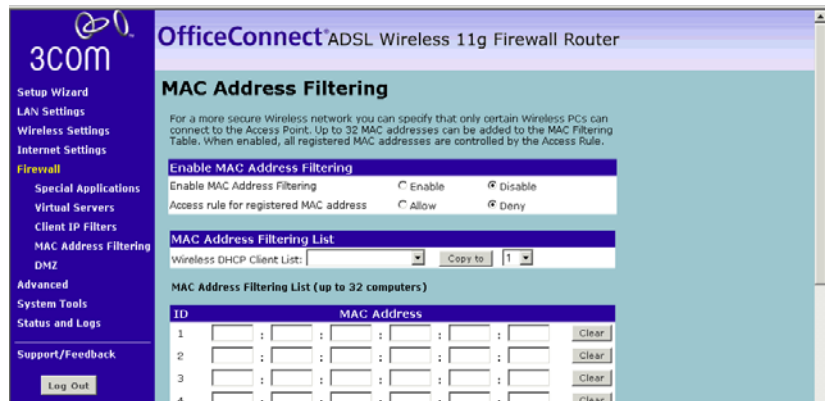


To enable the MAC Address Filtering feature:

- 1 Click *Enable* for the *Enable MAC Address Filtering* option.
- 2 In the *Access Rule for registered MAC address* option, select *Allow* or *Deny* to determine the access rights for the list of addresses defined in the *MAC Address Filtering List*.
- 3 To add entries to the *MAC Address Filtering List*:
 - Enter the MAC address of each client on your network to allow network access
 - or
 - Copy the MAC address by selecting the name of the computer from the *DHCP Clients List*, and then in the *MAC Address Filtering List* click *Copy To*.
- 4 Click *Apply* to save the settings.

DMZ If you have a client PC that cannot run an Internet application properly from behind the firewall, you can open the client up to unrestricted two-way Internet access. This may be necessary if the NAT feature is causing problems with an application such as a game or video conferencing application.

Figure 56 DMZ Screen

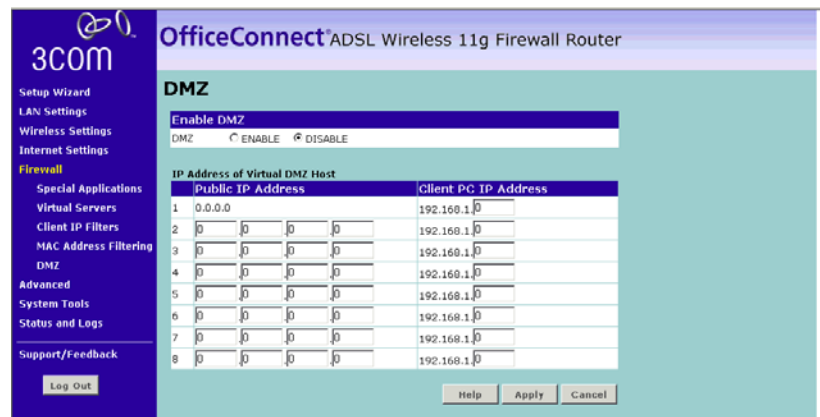

Use this feature on a temporary basis. The computer in the DMZ is not protected from hacker attacks.

To put a computer in the DMZ, enter the last digits of its LAN IP address in the *Static IP* field. Put the IP address (if known) that will be accessing the DMZ PC into the *Public IP* field, so that only the computer on the Internet at this address can access this PC without firewall protection. If the IP address is not known, or if more than one PC on the Internet will need to access this PC, then set the *Public IP* to *0.0.0.0*.

Click *Apply*.

Advanced

From the Advanced screen, you can configure:

- NAT (Network Address Translation)
- Universal Plug and Play
- WAN Ping Blocking
- Remote Admin

Three sub-menu items can also be configured in this page:

- Routing
- DDNS
- SNMP

Figure 57 Advanced Screen



NAT

- **NAT** — Before you enable NAT (Network Address Translation), make sure you have changed the administrator password. NAT is the method by which the router shares the single IP address assigned by your ISP with the computers on your network.

This function should only be disabled by advanced users, and if your ISP assigns you multiple IP addresses or you need NAT disabled for an advanced system configuration. If you have a single IP address and

you turn NAT off, the computers on your network will not be able to access the Internet. Other problems may also occur.

- *IPSEC NAT-T Pass-through* — NAT-T (NAT Traversal) is an Internet Draft proposed to IETF in order to help the problems associated with passing IPsec traffic through NAT Routers. For NAT-T to work, both ends of the connection need to support this function.

Ensure that you select *NAT-T* only if it is needed as it will reduce LAN-WAN throughput. The ADSL Wireless 11g Firewall Router supports NAT-T draft 2 implementation.

Universal Plug and Play

Universal Plug and Play is a technology that offers seamless operation of voice messaging, video messaging, games, and other applications that are Universal Plug and Play compliant. Some applications require the Router's firewall to be configured in a specific way to operate properly. This usually requires opening TCP and UDP ports and in some instances setting trigger ports. An application that is Universal Plug and Play compliant has the ability to communicate with the Router, basically "telling" the Router which way it needs the firewall configured. The Router ships with the Universal Plug and Play feature disabled. If you are using any applications that are Universal Plug and Play compliant, and want to take advantage of the Universal Plug and Play features, you can enable this feature. Simply select *On* in the *Universal Plug and Play* section of the Utilities page. Click *Apply* to save the change.

WAN Ping Blocking

Computer hackers use what is known as "Pinging" to find potential victims on the Internet. By pinging a specific IP address and receiving a response from the IP address, a hacker can determine that something of interest might be there.

The Router can be set up so it will not respond to an ICMP Ping from the outside. This heightens the level of security of your Router.

To turn off the ping response, select *Block ICMP Ping* and click *Apply*; the router will not respond to an ICMP ping from the Internet.

Remote Administration



Before you enable this function, ensure that you have set the Administration Password.

Remote Administration allows you to make changes to your Router's settings from anywhere on the Internet. You can choose to either:


- Click the check box to enable any PC on the network to remotely manage your Router.
- Enter one specific IP address that can remotely manage your router. This is more secure, as only the specified IP address will be able to manage the Router.

Routing Three tabs are presented in the Routing screen:

- Routing
- RIP (Routing Information Protocol) — RIP allows the network administrator to set up routing information on one RIP-enabled device and send that information to all RIP-enabled devices on the network
- Routing table

Routing

Figure 58 Routing Parameter Screen

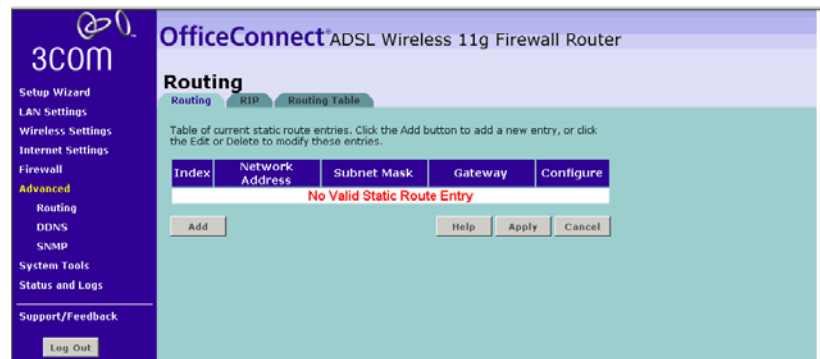

The Routing parameter screen shows a list of current static route entries. For each entry, the following information is displayed:

- *Index* — the index of the entry.
- *Network Address* — the network address of the route.
- *Subnet Mask* — the subnet mask of the route.



A network address of 0.0.0.0 and a subnet mask of 0.0.0.0 indicates the default route.

- *Gateway* — the router used to route data to the network specified by the network address.

To add a static route entry to the table, click *Add* and on the screen that appears type in the network address, subnet mask and router. To change an entry, click *Edit* and to delete an entry, click *Delete*. After you have finished making changes to the table, click *Apply*.

RIP Parameters

Figure 59 RIP Parameter Screen

OfficeConnect® ADSL Wireless 11g Firewall Router

Routing

Routing RIP Routing Table

General RIP parameter

RIP mode Enable Disable

Auto summary Enable Disable

Table of current interface RIP parameter

Interface	Operation Mode	Version	Poison Reverse	Authentication Required	Authentication Code
LAN	Disable	1	Disable	None	
ATM1	Disable	1	Disable	None	
ATM2	Disable	1	Disable	None	
ATM3	Disable	1	Disable	None	
ATM4	Disable	1	Disable	None	
ATM5	Disable	1	Disable	None	
ATM6	Disable	1	Disable	None	
ATM7	Disable	1	Disable	None	
ATM8	Disable	1	Disable	None	
ATM9	Disable	1	Disable	None	

You can set up RIP independently on both LAN and WAN interfaces.

- 1 Select the RIP Mode *Enable* option.
- 2 Select the appropriate option to enable or disable *Auto Summary*. Auto Summarization sends simplified routing data to other RIP-enabled devices rather than full routing data.
- 3 Select the *Operation Mode*:
 - *Disabled* — RIP is not enabled for the WAN or LAN interface.
 - *Enabled* — RIP is enabled for the WAN or LAN interface. The router will transmit RIP update information to other RIP-enabled devices.
 - *Silent* — RIP is enabled, however the router only receives RIP update messages, it will not transmit any messages itself.
- 4 In the *Version* field, select *RIPv1* or *RIPv2*.



3Com recommends that you only use RIPv1 if there is an existing RIP-enabled device on your network that does not support RIPv2. In all other cases, you should use RIPv2.

- 5 Use the *Poison Reverse* drop-down list to enable or disable *Poison Reverse* on the router. Enabling *Poison Reverse* on your Router allows it to indicate to other RIP-enabled devices that they have both routes that point to each other, preventing data loops.
- 6 Use the *Authentication Required* field to choose one of three modes of authentication:
 - *None* — Switches off authentication on the specified interface.
 - *Password* — An unencrypted text password that needs to be set on all RIP-enabled devices connected to this router. RIP information is not shared between devices whose passwords do not match.
- 7 In the *Authentication Code* field, enter the password that is required if the *Password* option has been selected.
- 8 Click *Apply*.

Routing Table

The Routing Table screen displays details for the default routing used by your Router and any routing created using Static Routing or RIP.

Figure 60 Routing Table Screen


The screenshot shows the OfficeConnect ADSL Wireless 11g Firewall Router web interface. The main content area is titled "Routing" and has three tabs: "Routing", "RIP", and "Routing Table". The "Routing Table" tab is active, displaying a table with the following data:

Flags	Network Address	Netmask	Gateway	Interface	Metric
C	192.168.1.0	255.255.255.0	directly	LAN	0
C	127.0.0.1	255.255.255.255	directly	Loopback	0

Below the table, there is a legend: "Flags : C - directly connected, S - static, R - RJP, I - ICMP Redirect". A "Help" button is located at the bottom right of the table area.

DDNS The Router provides a list of dynamic DNS providers for you to choose from. Dynamic Domain Name Server (DDNS) enables you to map a static domain name to a dynamic IP address. The Router supports two DDNS providers: TZO.com and DYNDNS. Before you set up DDNS, you must obtain an account, password and static domain name from your DDNS provider. DDNS is disabled by default.

Figure 61 Dynamic Domain Server (DDNS) Screen

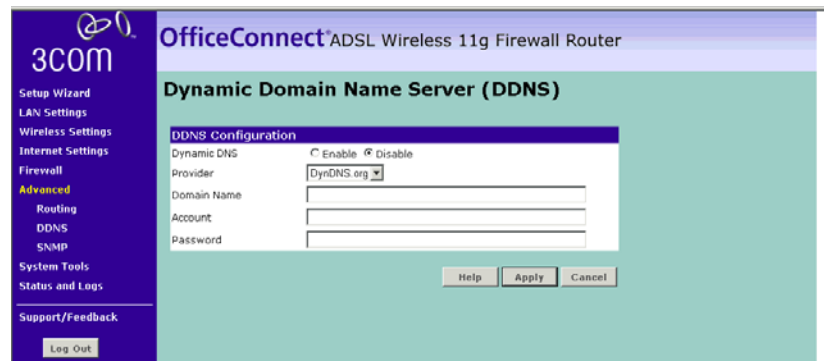

To set up Dynamic DNS:

- 1 Select the *Dynamic DNS Enable* option.
- 2 Select a DDNS Service *Provider* from the drop-down list.

TZO.com

If you select TZO.com:

- 1 In the *Domain Name* text box, enter the domain name.
- 2 In the *E-mail* text box, enter the account name.
- 3 In the *Key* text box, enter the account password.
- 4 Click *Apply* to make this service active.

DynDNS

If you select DynDNS.org:

- 1 In the *Domain Name* text box, enter the domain name.
- 2 In the *Account* text box, enter the account name.
- 3 In the *Password* text box, enter the account password.
- 4 Click *Apply* to make this service active.

SNMP SNMP (Simple Network Management Protocol) allows remote management of your router by a PC that has an SNMP management agent installed.

SNMP Community

Figure 62 SNMP Screen

The screenshot shows the configuration page for the OfficeConnect ADSL Wireless 11g Firewall Router. The page is titled "SNMP" and has a sidebar with navigation options: Setup Wizard, LAN Settings, Wireless Settings, Internet Settings, Firewall, Advanced (highlighted), Routing, DDNS, SNMP, System Tools, Status and Logs, and Support/Feedback. A "Log Out" button is at the bottom of the sidebar.

The main content area is titled "SNMP" and contains the following sections:

Enable SNMP
 Enable SNMP Enable Disable

Please enter the SNMP Community parameters in the following table.

No.	Community	Access	Valid
1	public	Read	<input checked="" type="checkbox"/>
2	private	Write	<input checked="" type="checkbox"/>
3		Read	<input type="checkbox"/>
4		Read	<input type="checkbox"/>
5		Read	<input type="checkbox"/>

Please enter the SNMP Trap parameters in the following table.

No.	IP Address	Community	Version
1	0 . 0 . 0 . 0		Disabled
2	0 . 0 . 0 . 0		Disabled
3	0 . 0 . 0 . 0		Disabled
4	0 . 0 . 0 . 0		Disabled

To Configure SNMP:

- 1 In the *Community* column, enter the name of the SNMP communication channel. Your SNMP management agent needs to be configured with this name so that it can communicate with your router.
- 2 In the *Access* column, select *Read* to allow the management agent to collect data (for example, bandwidth usage) from your router. Select *Write* to allow the management agent to change the configuration of your router.
- 3 Check the appropriate *Valid* check box to enable the communication channel.

SNMP Trap

You can configure your router to send status messages to the SNMP management agent if a problem occurs on the network. To configure traps:

- 1 In the *IP Address* field, enter the IP address of the PC to which you want your router to send status messages.
- 2 In the *Community* field, enter the name of the SNMP communication channel to which you want your router to send status messages.
- 3 Set the *Version* field to match the version of trap messaging that your SNMP management agent supports. The router supports V1 and V2c trap messaging.


System Tools

These pages lets you manage different parameters of the router and perform certain administrative functions.

Restart Router

Sometimes it may be necessary to restart (or reboot) the Router. Restarting the Router will not delete any of your configuration settings.

Figure 63 Restart Router Screen

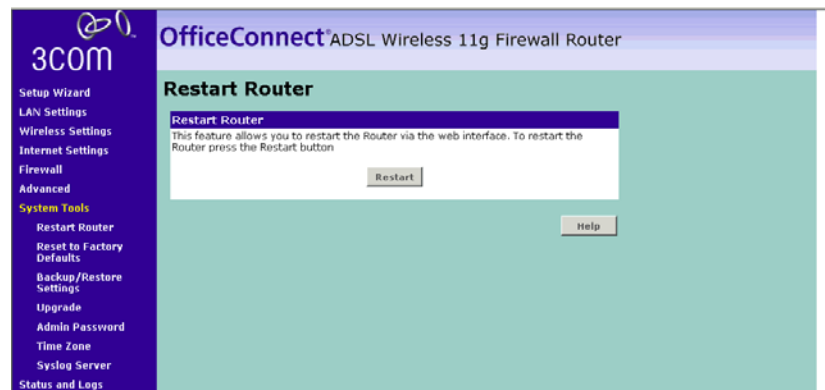

Click *Restart* to restart the Router.

Reset to Factory Default


Figure 64 Reset to Factory Default Screen



Using this option will reset all of the settings in the Router to the factory (default) settings. It is recommended that you backup your settings before you restore all of the defaults. To restore the factory default settings, click *Reset*.

Backup/Restore Settings

Figure 65 Backup/Restore Settings Screen

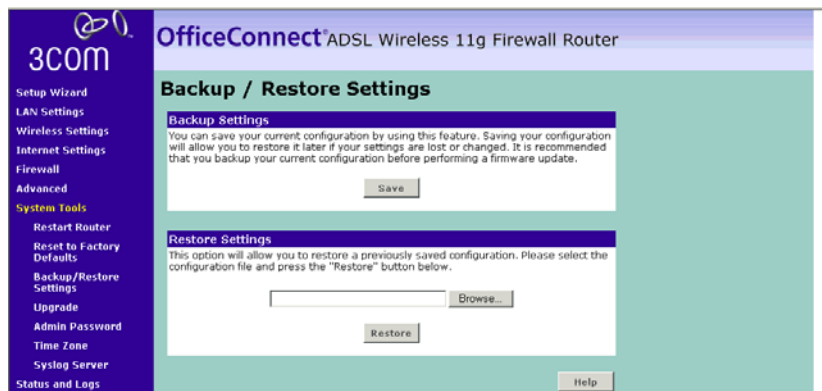


You can save your current configuration by clicking *Save* in *Backup Settings*. Saving your configuration will allow you to restore it later if your settings are lost or changed. It is recommended that you backup your current configuration before performing a firmware update.

The *Restore Settings* option will allow you to restore a previously saved configuration. Please select the configuration file using the *Browse* button and click *Restore*.

Upgrade From time to time 3Com may release new versions of the Router's firmware. Firmware updates contain improvements and fixes to problems that may have existed.

Figure 66 Upgrade Screen

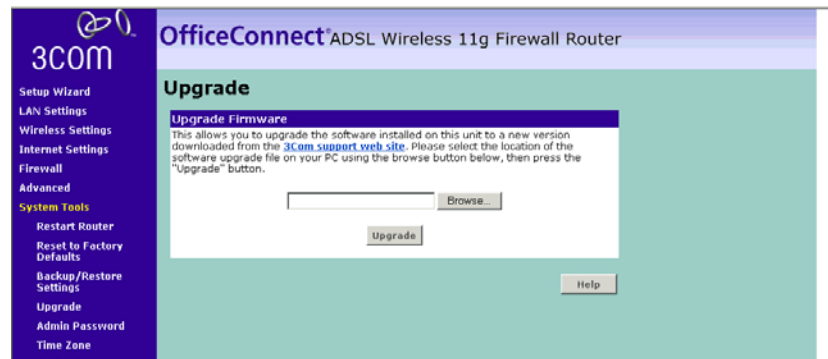

Please download the firmware file to your PC first, and then click *Browse* and select the firmware file. Click *Upgrade* to upload the firmware to the Router.

Admin Password The Router ships with a default password of *admin*. 3Com recommends that you change the password for added security. Keep your password in a safe place as you will need this password to log into the router in the future. It is also recommended that you set a password if you plan to use the Remote management feature of this Router.

Figure 67 Admin Password Screen




To change the password:

- 1 Enter the current password into the *Current Password* field.
- 2 Enter the new password into the *New Password* and *Confirm new Password* fields.
- 3 Click *Apply*.

The login timeout option allows you to set the period of time that you can be logged into the Router's setup interface. The timer starts when there is no activity. For example, you have made some changes in the setup interface, then left your computer alone without clicking "Logout". Assuming the timeout is set to 5 minutes, then 5 minutes after you leave, the login session will expire. You will have to login to the router again to make any more changes. The login timeout option is for security purposes and the default is set to 5 minutes. As a note, only one computer can be logged into the Router's web management interface at one time.

Time and Time Zone You can set the time settings for the Router in this page.

Figure 68 Time and Time Zone Screen

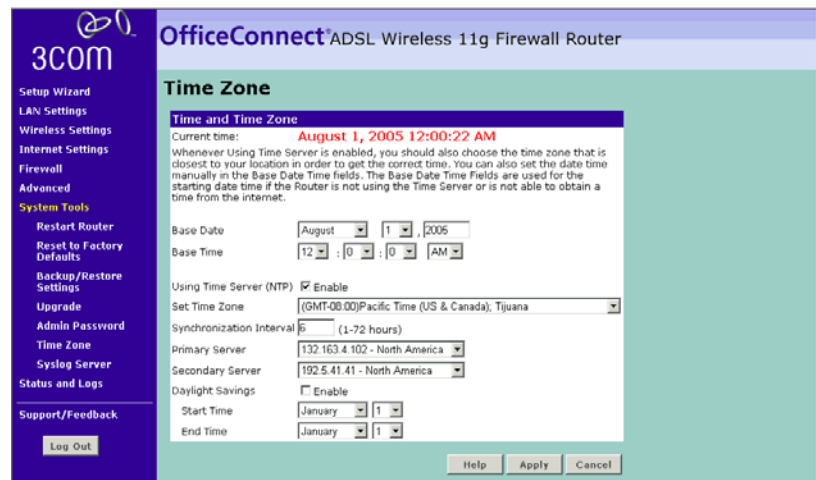

The Router keeps time by connecting to a Simple Network Time Protocol (SNTP) server. This allows the Router to synchronize the system clock to the Internet. The synchronized clock in the Router is used to record the security log and control client filtering. Select the time zone that you reside in. If you reside in an area that observes Daylight Saving, then place

a checkmark in the box next to *Enable Daylight Saving*. The system clock may not update immediately. Allow at least 15 minutes for the router to contact the time servers on the Internet and get a response. You cannot set the clock yourself.

You can specify which SNTP servers the Router will use to update its system clock, although doing this should only be necessary if you are experiencing difficulty.

Syslog Server Using third party syslog software, this Syslog Server tool will automatically download the Router log to the specified server IP address.

Figure 69 Syslog Server Screen


The screenshot shows the configuration interface for the Syslog Server on a 3COM OfficeConnect ADSL Wireless 11g Firewall Router. The left sidebar contains a navigation menu with the following items: Setup Wizard, LAN Settings, Wireless Settings, Internet Settings, Firewall, Advanced, System Tools (highlighted), Restart Router, Reset to Factory Defaults, Backup/Restore Settings, Upgrade, Admin Password, Time Zone, Syslog Server, Status and Logs, and Support/Feedback. A 'Log Out' button is located at the bottom of the sidebar. The main content area is titled 'Syslog Server' and contains a 'Syslog Server Configuration' section. This section includes an 'Enable' checkbox (currently unchecked) and a 'Server LAN IP Address' field with four input boxes for the IP address (0, 0, 0, 0). At the bottom right of the configuration area are three buttons: 'Help', 'Apply', and 'Cancel'.

- 1 Check *Enable* to use this function.
- 2 Enter the server IP address in the *Server LAN IP Address* field.

Status and Logs


You can use the Status Screen to view version numbers for your router's software and hardware and check the status of connections to WAN, LAN and WLAN interfaces.

Status Figure 70 Status Screen

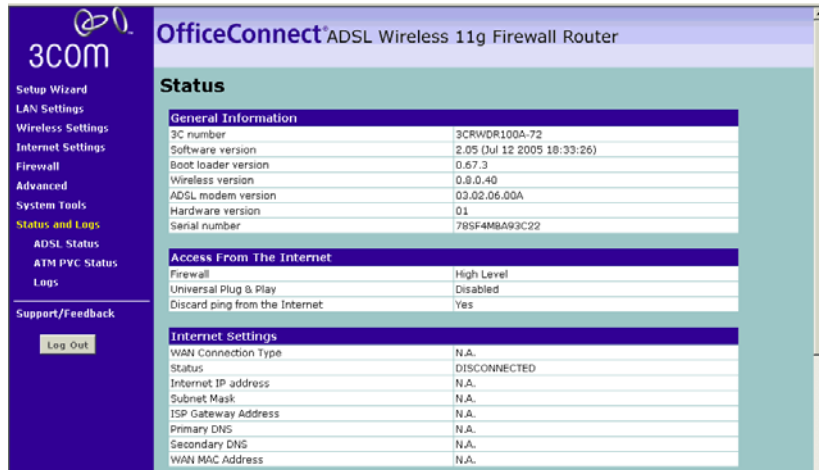


This screen shows Router status and statistics.

ADSL Status Figure 71 ADSL Status Screen

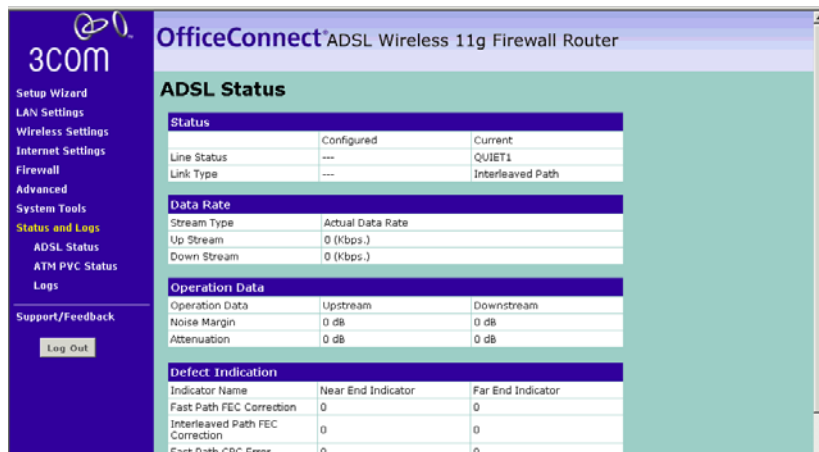

This screen shows ADSL modem status and statistics.


ATM PVC Status **Figure 72** ATM PVC Status Screen

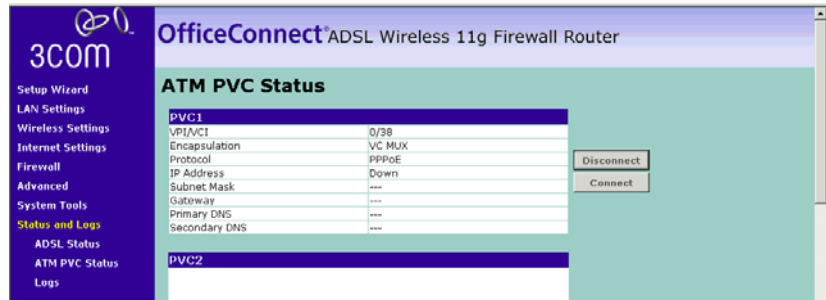

This screen shows ATM PVC status and statistics.

- Click *Disconnect* to disconnect from your ISP.
- Click *Connect* to connect to your ISP.

Logs **Figure 73** Logs Screen

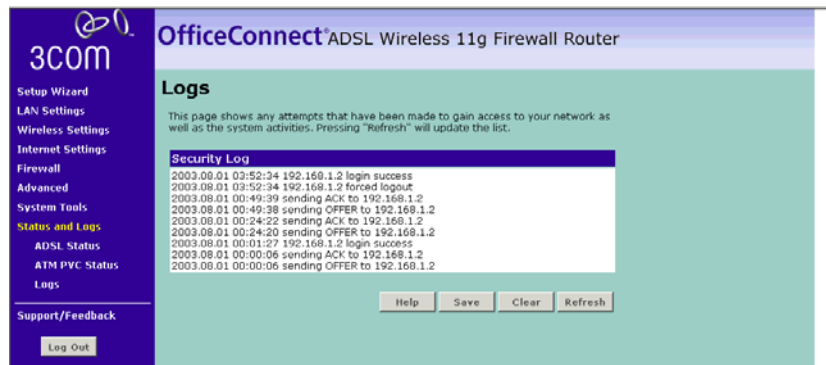


This screen shows any attempts that have been made to gain access to your network as well as the system activities.

- Click *Refresh* to update the display.
- Click *Clear* to clear the log (note that all current entries will be erased).
- Click *Save* to save the log to disk in a text file. When prompted for a location to save the file to, specify a filename and location, and then click *OK*.

Support/Feedback


You can use the Support/Feedback screen to obtain support and help.

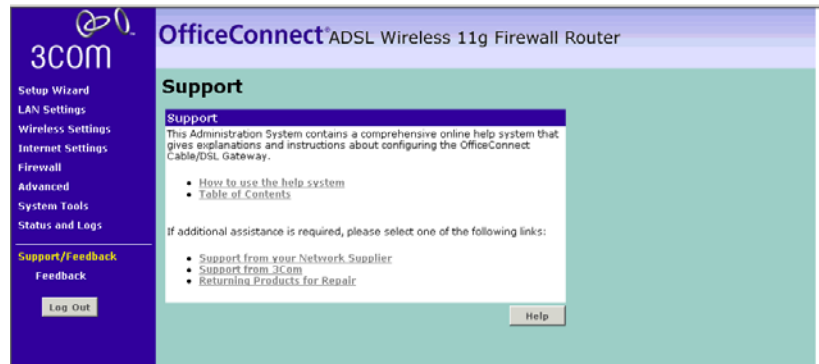Support **Figure 74** Support Screen

This screen shows support information.

Feedback

To provide feedback to 3Com, please click *Provide Feedback*, and this will connect you to 3Com Web site.

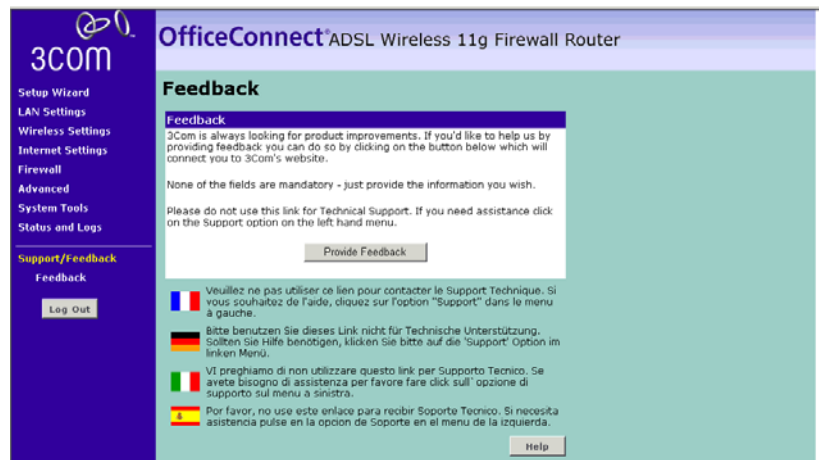Figure 75 Feedback Screen

This screen shows feedback information.

6

TROUBLESHOOTING

Basic Connection Checks

- Check that the Router is connected to your computers and to the telephone line, and that all the equipment is powered on. Check that the LAN Status and SYNC LEDs on the Router are illuminated, and that any corresponding LEDs on the NIC are also illuminated.
- Ensure that the computers have completed their start-up procedure and are ready for use. Some network interfaces may not be correctly initialized until the start-up procedure has completed.
- If the link status LED does not illuminate for a port that is connected, check that you do not have a faulty cable. Try a different cable.

Browsing to the Router Configuration Screens

If you have connected your Router and computers together but cannot browse to the Router configuration screens, check the following:

- Confirm that the physical connection between your computer and the Router is OK, and that the LAN Status LEDs on the Router and network adapter are illuminated and indicating the same speed (10Mbps or 100Mbps). Some NICs do not have status LEDs, in which case a diagnostic program may be available that can give you this information.
- Ensure that you have configured your computer as described in [Chapter 3](#). Restart your computer while it is connected to the Router to ensure that your computer receives an IP address.
- When entering the address of the Router into your web browser, ensure that you use the full URL including the `http://` prefix (e.g. **`http://192.168.1.1`**).
- Ensure that you do not have a Web proxy enabled on your computer. Go to the *Control Panel* and click on *Internet Options*. Select the *Connections* tab and click on the *LAN Settings* button at the bottom. Make sure that the *Proxy Server* option is unchecked.

- If you cannot browse to the Router, use the *winipcfg* utility in Windows 95/98/ME to verify that your computer has received the correct address information from the Router. From the *Start* menu, choose *Run* and then enter **winipcfg**. Check that the computer has an IP address of the form 192.168.1.xxx (where xxx is in the range 2-254), the subnet mask is 255.255.255.0, and the default Router is 192.168.1.1 (the address of the Router). If these are not correct, use the *Release* and *Renew* functions to obtain a new IP address from the Router. Under Windows 2000 and Windows XP, use the *ipconfig* command-line utility to perform the same functions.

Connecting to the Internet

If you can browse to the Router configuration screens but cannot access sites on the Internet, check the following:

- Confirm that the physical connection between the Router and the telephone line is OK, and that the DSL LED on the Router is illuminated.
- Ensure that you have entered the correct information into the Router configuration screens as required by your Internet Service Provider. Use the Internet Settings screen to verify this.
- Check that the PPPoE or PPPoA user name and password are correct.
- Ensure that your computers are not configured to use a Web proxy. On Windows computers, this can be found under *Control Panel > Internet Options > Connections*.

Forgotten Password and Reset to Factory Defaults

If you can browse to the Router configuration screen but cannot log on because you do not know or have forgotten the password, follow the steps below to reset the Router to its factory default configuration.



CAUTION: *All your configuration changes will be lost, and you will need to run the configuration wizard again before you can re-establish your Router connection to the Internet. Also, other computer users will lose their network connections whilst this process is taking place, so choose a time when this would be convenient.*

- 1 Power off the Router.
- 2 Disconnect all your computers and the telephone line from the Router.
- 3 Re-apply power to the Router, and wait for it to finish booting up.

4 Press and hold the *Reset* button on the rear panel (see [“Rear Panel”](#) on [page 13](#)) for 5 seconds.

5 The Router will restart, and when the start-up sequence has completed, browse to:

http://192.168.1.1

and run the configuration wizard. You may need to restart your computer before you attempt this.

6 When the configuration wizard has completed, you may reconnect your network as it was before.

Wireless Networking

- Ensure that you have an 802.11b or 802.11g wireless adapter for each wireless computer, and that it is correctly installed and configured. Verify that each Wireless computer has either Windows 95 or higher or MAC OS 8.5 or higher.
- Verify that your wireless computers are configured to work in Infrastructure mode and not Ad Hoc mode. The Router contains an Access Point that is designed to operate in Infrastructure mode. Ad Hoc mode is not supported by the Router.
- If you have a wired and a wireless NIC in the same computer, ensure that the wired NIC is disabled.
- Check the status of the WLAN LED, it should be lit if wireless is enabled and will flash when there is wireless activity. If not lit go to [“Wireless Settings”](#) on [page 39](#) and enable wireless networking.
- Ensure that the TCP/IP settings for all devices are correct.
- Ensure that the Wireless Clients are using the same SSID or Service Area Name as the Router. The SSID is case-sensitive
- Ensure that the encryption method and level that you use on your clients are the same as those configured on the Router. The Router cannot simultaneously support WPA and WEP encryption.
- Ensure that you have the Wireless computer enabled in the list of allowed MAC addresses if you are using MAC Address Filtering on the Router.
- If you are having difficulty connecting or are operating at a low speed try changing the antenna positions on the rear of the Router. For more effective coverage you can try reorientating your antennae. Place one antenna vertically and one horizontally to improve coverage.

Additionally consider moving the wireless computer closer to the Router to confirm that the building structure or fittings are not adversely affecting the connectivity. If this resolves the problem consider relocating the Wireless computer or the Router, or trying a different channel on the Router.

- Sources of interference: The 2.4Ghz ISM band is used for 802.11b and 802.11g. This is generally a licence free band for low power applications, and you may have other devices at your location that operate in this frequency band. You should take care to ensure that there are no devices like microwave ovens for example close to the Router or wireless computers as this could affect receiver sensitivity and reduce the performance of your network. If you are unsure try relocating both the wireless computers and the Router to establish whether this problem exists.
- Most wireless computer Adapters will scan the channels for the wireless Router. If a wireless computer has not located the Router then try initiating a search manually if the client software supports this feature or manually set the channel on your wireless computer to correspond to the Router channel number. Please refer to your Wireless computer adapter documentation and vendor to do this.
- Speed of connection: The 802.11b and 802.11g standards will automatically choose the best speed depending on the quality of your connection. As the signal quality weakens then the speed falls back to a lower speed. The speeds supported by 802.11g are 54 Mbps, 48 Mbps, 36 Mbps, 24 Mbps, 18 Mbps, 12 Mbps, and 6 Mbps. The speeds supported by 802.11b are 11 Mbps, 5.5 Mbps, 2 Mbps and 1 Mbps. In general the closer you are to the Router the better the speed. If you are not achieving the speed you had anticipated then try moving the antenna on the Router or moving the Wireless computer closer to the Router. In an ideal network the Router should be located in the centre of the network with Wireless computers distributed around it. Applications are generally available with the computer wireless card to carry out a site survey. Use this application to find the optimal siting for your wireless computer. Consult your Computer Card documentation and vendor for more details.

Recovering from Corrupted Software

If the system software has become corrupted, the Router will enter a "recovery" state; DHCP is enabled, and the LAN IP address is set to 192.168.1.1. Follow the instructions below to upload a new copy of the system software to a Router unit in this state.

Ensure that one of your computers has a copy of the new software image file stored on its hard disk or available on CD-ROM.



The latest software is available on 3Com's Web site at:

www.3com.com

- 1** Remove power from the Router and disconnect the telephone line and all your computers, except for the one computer with the software image.
- 2** You will need to reconfigure this computer to obtain an IP address automatically (see "[Obtaining an IP Address Automatically](#)" on [page 21](#))
- 3** Restart the computer, and re-apply power to the Router.
- 4** Using the Web browser on the computer, enter the following URL in the location bar:

`http://192.168.1.1.`

This will connect you to the Recovery utility in the Router.
- 5** Follow the on-screen instructions. Enter the path and filename of the software image file.
- 6** When the upload has completed, the Router will restart, run the self-test and, if successful, resume normal operation.
- 7** Refer to the Installation Guide to reconnect your Router to the telephone line and the computers in your network. Do not forget to reconfigure the computer you used for the software upload.

If the Router does not resume normal operation following the upload, it may be faulty. Contact your supplier for advice.

Frequently Asked Questions

How do I reset the Router to Factory Defaults?

See [“Forgotten Password and Reset to Factory Defaults”](#) on [page 84](#).

How many computers on the LAN does the Router support?

A maximum of 253 computers on the LAN are supported.

How many wireless clients does the Router support?

A maximum of 128 wireless clients are supported.

There are only 4 LAN ports on the Router. How are additional computers connected?

You can expand the number of connections available on your LAN by using hubs, switches and wireless access points connected to the Router. 3Com wireless access points and hubs and switches provide a simple, reliable means of expanding your network; contact your supplier for more information, or visit:

<http://www.3com.com/>

Does the Router support virtual private networks (VPNs)?

The Router supports VPN passthrough, which allows VPN clients on the LAN to communicate with VPN hosts on the Internet. It is also possible to set up VPN hosts on your LAN that clients elsewhere on the Internet can connect to, but this is not a recommended configuration.

Where can I download software updates for the Router?

Updates to the Router software are posted on the 3Com support web site, accessible by visiting:

<http://www.3com.com>

A

IP ADDRESSING

The Internet Protocol Suite

The Internet protocol suite consists of a well-defined set of communications protocols and several standard application protocols. Transmission Control Protocol/Internet Protocol (TCP/IP) is probably the most widely known and is a combination of two of the protocols (IP and TCP) working together. TCP/IP is an internationally adopted and supported networking standard that provides connectivity between equipment from many vendors over a wide variety of networking technologies.

Managing the Router over the Network

To manage a device over the network, the Router must be correctly configured with the following IP information:

- An IP address
- A Subnet Mask

IP Addresses and Subnet Masks

Each device on your network must have a unique IP address to operate correctly. An IP address identifies the address of the device to which data is being sent and the address of the destination network. IP addresses have the format n.n.n.x where n is a decimal number between 0 and 255 and x is a number between 1 and 254 inclusive.

However, an IP Address alone is not enough to make your device operate. In addition to the IP address, you need to set a subnet mask. All networks are divided into smaller sub-networks and a subnet mask is a number that enables a device to identify the sub-network to which it is connected.

For your network to work correctly, all devices on the network must have:

- The same sub-network address.
- The same subnet mask.



The only value that will be different is the specific host device number. This value must always be unique.

An example IP address is '192.168.100.8'. However, the size of the network determines the structure of this IP Address. In using the Router, you will probably only encounter two types of IP Address and subnet mask structures.

Type One

In a small network, the IP address of '192.168.100.8' is split into two parts:

- Part one ('192.168.100') identifies the network on which the device resides.
- Part two ('.8') identifies the device within the network.

This type of IP Address operates on a subnet mask of '255.255.255.0'.

See [Table 3](#) for an example about how a network with three computers and a Router might be configured.

Table 3 IP Addressing and Subnet Masking

Device	IP Address	Subnet Mask
PC 1	192.168.100.8	255.255.255.0
PC 2	192.168.100.33	255.255.255.0
PC 3	192.168.100.188	255.255.255.0
Router	192.168.100.72	255.255.255.0

Type Two

In larger networks, where there are more devices, the IP address of '192.168.100.8' is, again, split into two parts but is structured differently:

- Part one ('192.168') identifies the network on which the device resides.
- Part two ('.100.8') identifies the device within the network.

This type of IP Address operates on a subnet mask of '255.255.0.0'.

See [Table 4](#) for an example about how a network (only four computers represented) and a Router might be configured.

Table 4 IP Addressing and Subnet Masking

Device	IP Address	Subnet Mask
PC 1	192.168.100.8	255.255.0.0
PC 2	192.168.201.30	255.255.0.0
PC 3	192.168.113.155	255.255.0.0
PC 4	192.168.002.230	255.255.0.0
Router	192.168.002.72	255.255.0.0

How does a Device Obtain an IP Address and Subnet Mask?

There are three different ways to obtain an IP address and the subnet mask. These are:

- Dynamic Host Configuration Protocol (DHCP) Addressing
- Static Addressing
- Automatic Addressing (Auto-IP Addressing)

DHCP Addressing

The Router contains a DHCP server, which allows computers on your network to obtain an IP address and subnet mask automatically. DHCP assigns a temporary IP address and subnet mask which gets reallocated once you disconnect from the network.

DHCP will work on any client Operating System such as Windows® 95, Windows 98 or Windows NT 4.0. Also, using DHCP means that the same IP address and subnet mask will never be duplicated for devices on the network. DHCP is particularly useful for networks with large numbers of users on them.

Static Addressing

You must enter an IP Address and the subnet mask manually on every device. Using a static IP and subnet mask means the address is permanently fixed.

Auto-IP Addressing

Network devices use automatic IP addressing if they are configured to acquire an address using DHCP but are unable to contact a DHCP server. Automatic IP addressing is a scheme where devices allocate themselves

an IP address at random from the industry standard subnet of 169.254.x.x (with a subnet mask of 255.255.0.0). If two devices allocate themselves the same address, the conflict is detected and one of the devices allocates itself a new address.

Automatic IP addressing support was introduced by Microsoft in the Windows 98 operating system and is also supported in Windows 2000.

B

TECHNICAL SPECIFICATIONS

This section lists the technical specifications for the OfficeConnect ADSL Wireless 11g Firewall Router.

OfficeConnect ADSL Wireless 11g Firewall Router

Interfaces

DSL connection

LAN connection — four 10Mbps/100Mbps dual speed Ethernet ports (10BASE-T/100BASE-TX)

WLAN Interfaces

Standard IEEE 802.11g, Direct Sequence Spread Spectrum (DSSS)
Transmission rate: 54Mbps, automatic fallback to 48, 36, 24, 18, 12, or 6 Mbps

Maximum channels: 14

Range up to 304.8m (1000ft)

Frequency: (US/Canada/Europe) 2.400-2.4835 GHz

Sensitivity: 6, 12, 18, 24, 36, 48 Mbps: -85 dBm;
54 Mbps -66 dBm typical

Modulation: CCK, BPSK, QPSK, OFDM

Encryption: 40/64 bit WEP, 128 bit WEP, WPA

Maximum clients: 128

O/P Power: 18dBm

Standard IEEE 802.11b, Direct Sequence Spread Spectrum (DSSS)
Transmission rate: 11Mbps, automatic fallback to 5.5, 2, or 1 Mbps
Maximum channels: 14

Range up to 304.8m (1000ft)

Frequency: (US/Canada/Europe) 2.400-2.4835 GHz

Sensitivity: 1, 2, 5.5 Mbps: -85 dBm; 11 Mbps -82 dBm typical

Modulation: CCK, BPSK, QPSK

Encryption: 40/64 bit WEP, 128 bit WEP, WPA

Maximum clients: 128
O/P Power 16dBm

Operating Temperature

0 °C to 40 °C (32 °F to 105 °F)

Power

8VA, 25 BThU/hr

Humidity

0% to 90% (non-condensing) humidity

Dimensions

- Width = 220 mm (8.7 in.)
- Depth = 133 mm (5.2 in.)
- Height = 38 mm (1.5 in.)

Weight

Approximately 550 g (1.1 lbs)

Standards

Functional: ISO 8802/3
IEEE 802.3
IEEE 802.11b, 802.11g

Safety: EN 60950

EMC: EN 55022 Class B
EN 55024
FCC Part 15 Class B*
ETSI EN 301 489-17

Radio ETS 300 328 (2.4 GHz ISM band wide band transmission systems).

Environmental: EN 60068 (IEC 68)

*See [“Regulatory Notices”](#) for conditions of operation.

System Requirements Operating Systems

The Router will support the following Operating Systems:

- Windows 95/98
- Windows NT 4.0
- Windows ME
- Windows 2000
- Windows XP
- Mac OS 8.5 or higher
- Unix

Ethernet Performance The Router complies to the IEEE 802.3i, u and x specifications.

Cable Specifications The Router supports the following cable types and maximum lengths:

- Category 3 (Ethernet) or Category 5 (Fast Ethernet or Dual Speed Ethernet) Twisted Pair — shielded and unshielded cable types.
- Maximum cable length of 100m (327.86 ft).

C

SAFETY INFORMATION

Important Safety Information



WARNING: Warnings contain directions that you must follow for your personal safety. Follow all directions carefully. You must read the following safety information carefully before you install or remove the unit:



WARNING: The Router generates and uses radio frequency (rf) energy. In some environments, the use of rf energy is not permitted. The user should seek local advice on whether or not rf energy is permitted within the area of intended use.



WARNING: Exceptional care must be taken during installation and removal of the unit.



WARNING: To ensure compliance with international safety standards, only use the power adapter that is supplied with the unit.



WARNING: The socket outlet must be near to the unit and easily accessible. You can only remove power from the unit by disconnecting the power cord from the outlet.



WARNING: This unit operates under SELV (Safety Extra Low Voltage) conditions according to IEC 60950. The conditions are only maintained if the equipment to which it is connected also operates under SELV conditions.



WARNING: There are no user-replaceable fuses or user-serviceable parts inside the Router. If you have a physical problem with the unit that cannot be solved with problem solving actions in this guide, contact your supplier.



WARNING: Disconnect the power adapter before moving the unit.



WARNING: RJ-45 ports. These are shielded RJ-45 data sockets. They cannot be used as telephone sockets. Only connect RJ-45 data connectors to these sockets.

Wichtige Sicherheitshinweise



VORSICHT: Warnhinweise enthalten Anweisungen, die Sie zu Ihrer eigenen Sicherheit befolgen müssen. Alle Anweisungen sind sorgfältig zu befolgen.

Sie müssen die folgenden Sicherheitsinformationen sorgfältig durchlesen, bevor Sie das Gerat installieren oder ausbauen:



VORSICHT: Der Router erzeugt und verwendet Funkfrequenz (RF). In manchen Umgebungen ist die Verwendung von Funkfrequenz nicht gestattet. Erkundigen Sie sich bei den zustandigen Stellen, ob die Verwendung von Funkfrequenz in dem Bereich, in dem der Bluetooth Access Point eingesetzt werden soll, erlaubt ist.



VORSICHT: Bei der Installation und beim Ausbau des Gerats ist mit hochster Vorsicht vorzugehen.



VORSICHT: Aufgrund von internationalen Sicherheitsnormen darf das Gerat nur mit dem mitgelieferten Netzadapter verwendet werden.



VORSICHT: Die Netzsteckdose mu in der Nahe des Gerats und leicht zuganglich sein. Die Stromversorgung des Gerats kann nur durch Herausziehen des Geratenetzkabels aus der Netzsteckdose unterbrochen werden.



VORSICHT: Der Betrieb dieses Gerats erfolgt unter den SELV-Bedingungen (Sicherheitskleinstspannung) gema IEC 60950. Diese Bedingungen sind nur gegeben, wenn auch die an das Gerat angeschlossenen Gerate unter SELV-Bedingungen betrieben werden.



VORSICHT: Es sind keine von dem Benutzer zu ersetzende oder zu wartende Teile in dem Gerät vorhanden. Wenn Sie ein Problem mit dem Router haben, das nicht mittels der Fehleranalyse in dieser Anleitung behoben werden kann, setzen Sie sich mit Ihrem Lieferanten in Verbindung.



VORSICHT: Vor dem Ausbau des Geräts das Netzadapterkabel herausziehen.



VORSICHT: RJ-45-Anschlüsse. Dies sind abgeschirmte RJ-45-Datenbuchsen. Sie können nicht als Telefonanschlußbuchsen verwendet werden. An diesen Buchsen dürfen nur RJ-45-Datenstecker angeschlossen werden.

Consignes importantes de sécurité



AVERTISSEMENT: Les avertissements présentent des consignes que vous devez respecter pour garantir votre sécurité personnelle. Vous devez respecter attentivement toutes les consignes. Nous vous demandons de lire attentivement les consignes suivantes de sécurité avant d'installer ou de retirer l'appareil:



AVERTISSEMENT: La Router fournit et utilise de l'énergie radioélectrique (radio fréquence -rf). L'utilisation de l'énergie radioélectrique est interdite dans certains environnements. L'utilisateur devra se renseigner sur l'autorisation de cette énergie dans la zone prévue.



AVERTISSEMENT: Faites très attention lors de l'installation et de la dépose du groupe.



AVERTISSEMENT: Pour garantir le respect des normes internationales de sécurité, utilisez uniquement l'adaptateur électrique remis avec cet appareil.



AVERTISSEMENT: La prise secteur doit se trouver à proximité de l'appareil et son accès doit être facile. Vous ne pouvez mettre l'appareil hors circuit qu'en débranchant son cordon électrique au niveau de cette prise.



AVERTISSEMENT: L'appareil fonctionne à une tension extrêmement basse de sécurité qui est conforme à la norme CEI 60950. Ces

conditions ne sont maintenues que si l'équipement auquel il est raccordé fonctionne dans les mêmes conditions.



AVERTISSEMENT: *Il n'y a pas de parties remplaçables par les utilisateurs ou entretenues par les utilisateurs à l'intérieur du moyeu. Si vous avez un problème physique avec le moyeu qui ne peut pas être résolu avec les actions de la résolution des problèmes dans ce guide, contacter votre fournisseur.*



AVERTISSEMENT: *Débranchez l'adaptateur électrique avant de retirer cet appareil.*



AVERTISSEMENT: Ports RJ-45. *Il s'agit de prises femelles blindées de données RJ-45. Vous ne pouvez pas les utiliser comme prise de téléphone. Branchez uniquement des connecteurs de données RJ-45 sur ces prises femelles.*

D

END USER SOFTWARE LICENSE AGREEMENT

3Com Corporation END USER SOFTWARE LICENSE AGREEMENT

YOU SHOULD CAREFULLY READ THE FOLLOWING TERMS AND CONDITIONS BEFORE DOWNLOADING, INSTALLING AND USING THIS PRODUCT, THE USE OF WHICH IS LICENSED BY 3COM CORPORATION ("3COM") TO ITS CUSTOMERS FOR THEIR USE ONLY AS SET FORTH BELOW. DOWNLOADING, INSTALLING OR OTHERWISE USING ANY PART OF THE SOFTWARE OR DOCUMENTATION INDICATES THAT YOU ACCEPT THESE TERMS AND CONDITIONS. IF YOU DO NOT AGREE TO THE TERMS AND CONDITIONS OF THIS AGREEMENT, DO NOT DOWNLOAD, INSTALL OR OTHERWISE USE THE SOFTWARE OR DOCUMENTATION, DO NOT CLICK ON THE "I AGREE" OR SIMILAR BUTTON. AND IF YOU HAVE RECEIVED THE SOFTWARE AND DOCUMENTATION ON PHYSICAL MEDIA, RETURN THE ENTIRE PRODUCT WITH THE SOFTWARE AND DOCUMENTATION UNUSED TO THE SUPPLIER WHERE YOU OBTAINED IT.

LICENSE: 3Com grants you a nonexclusive, nontransferable (except as specified herein) license to use the accompanying software program(s) in executable form (the "Software") and accompanying documentation (the "Documentation"), subject to the terms and restrictions set forth in this Agreement. You are not permitted to lease, rent, distribute or sublicense (except as specified herein) the Software or Documentation or to use the Software or Documentation in a time-sharing arrangement or in any other unauthorized manner. Further, no license is granted to you in the human readable code of the Software (source code). Except as provided below, this Agreement does not grant you any rights to patents, copyrights, trade secrets, trademarks, or any other rights with respect to the Software or Documentation.

Subject to the restrictions set forth herein, the Software is licensed to be used on any workstation or any network server owned by or leased to you, for your internal use, provided that the Software is used only in connection with this 3Com product. You may reproduce and provide one (1) copy of the Software and Documentation for each such workstation or network server on which the Software is used as permitted hereunder. Otherwise, the Software and Documentation may be copied only as essential for backup or archive purposes in support of your use of the Software as permitted hereunder. Each copy of the Software and Documentation must contain 3Com's and its licensors' proprietary rights and copyright notices in the same form as on the original. You agree not to remove or deface any portion of any legend provided on any licensed program or documentation delivered to you under this Agreement.

ASSIGNMENT; NO REVERSE ENGINEERING: You may transfer the Software, Documentation and the licenses granted herein to another party in the same country in which you obtained the Software and Documentation if the other party agrees in writing to accept and be bound by the terms and conditions of this Agreement. If you transfer the Software and Documentation, you must at the same time either transfer all copies of the Software and Documentation to the party or you must destroy any copies not transferred. Except as set forth above, you may not assign or transfer your rights under this Agreement.

Modification, reverse engineering, reverse compiling, or disassembly of the Software is expressly prohibited. However, if you are a European Union ("EU") resident, information necessary to achieve interoperability of the Software with other programs within the meaning of the EU Directive on the Legal Protection of Computer Programs is available to you from 3Com upon written request.

EXPORT RESTRICTIONS: The Software, including the Documentation and all related technical data (and any copies thereof) (collectively "Technical Data"), is subject to United States Export control laws and may be subject to export or import regulations in other countries. In addition, the Technical Data covered by this Agreement may contain data encryption code which is unlawful to export or transfer from the United States or country where you legally obtained it without an approved U.S. Department of Commerce export license and appropriate foreign export or import license, as required. You agree that you will not export or re-export the Technical Data (or any copies thereof) or any products utilizing the Technical Data in violation of any applicable laws or regulations of the United States or the country where you legally obtained it. You are responsible for obtaining any licenses to export, re-export or import the Technical Data.

In addition to the above, the Product may not be used, exported or re-exported (i) into or to a national or resident of any country to which the U.S. has embargoed; or (ii) to any one on the U.S. Commerce Department's Table of Denial Orders or the U.S. Treasury Department's list of Specially Designated Nationals.

TRADE SECRETS; TITLE: You acknowledge and agree that the structure, sequence and organization of the Software are the valuable trade secrets of 3Com and its suppliers. You agree to hold such trade secrets in confidence. You further acknowledge and agree that ownership of, and title to, the Software and Documentation and all subsequent copies thereof regardless of the form or media are held by 3Com and its suppliers.

UNITED STATES GOVERNMENT LEGENDS: The Software, Documentation and any other technical data provided hereunder is commercial in nature

and developed solely at private expense. The Software is delivered as "Commercial Computer Software" as defined in DFARS 252.227-7014 (June 1995) or as a commercial item as defined in FAR 2.101(a) and as such is provided with only such rights as are provided in this Agreement, which is 3Com's standard commercial license for the Software. Technical data is provided with limited rights only as provided in DFAR 252.227-7015 (Nov. 1995) or FAR 52.227-14 (June 1987), whichever is applicable.

TERM AND TERMINATION: The licenses granted hereunder are perpetual unless terminated earlier as specified below. You may terminate the licenses and this Agreement at any time by destroying the Software and Documentation together with all copies and merged portions in any form. The licenses and this Agreement will also terminate immediately if you fail to comply with any term or condition of this Agreement. Upon such termination you agree to destroy the Software and Documentation, together with all copies and merged portions in any form.

LIMITED WARRANTIES AND LIMITATION OF LIABILITY: All warranties and limitations of liability applicable to the Software are as stated on the Limited Warranty Card or in the product manual, whether in paper or electronic form, accompanying the Software. Such warranties and limitations of liability are incorporated herein in their entirety by this reference.

GOVERNING LAW: This Agreement shall be governed by the laws of the State of California, U.S.A. excluding its conflicts of laws principles and excluding the United Nations Convention on Contracts for the International Sale of Goods.

SEVERABILITY: In the event any provision of this Agreement is found to be invalid, illegal or unenforceable, the validity, legality and enforceability of any of the remaining provisions shall not in any way be affected or impaired and a valid, legal and enforceable provision of similar intent and economic impact shall be substituted therefor.

ENTIRE AGREEMENT: This Agreement sets forth the entire understanding and agreement between you and 3Com and supersedes all prior agreements, whether written or oral, with respect to the Software and Documentation, and may be amended only in a writing signed by both parties.

Should you have any questions concerning this Agreement or if you desire to contact 3Com for any reason, please contact the 3Com subsidiary serving your country, or write:

3Com Corporation, 350 Campus Drive, Marlborough, MA. USA 01752-3064

E

OBTAINING SUPPORT FOR YOUR PRODUCT

Register Your Product

Warranty and other service benefits start from the date of purchase, so it is important to register your product quickly to ensure you get full use of the warranty and other service benefits available to you.

Warranty and other service benefits are enabled through product registration. Register your product at <http://eSupport.3com.com/>. 3Com eSupport services are based on accounts that you create or have authorization to access. First time users must apply for a user name and password that provides access to a number of eSupport features including Product Registration, Repair Services, and Service Request. If you have trouble registering your product, please contact 3Com Global Services for assistance.

Purchase Value-Added Services

To enhance response times or extend warranty benefits, contact 3Com or your authorized 3Com reseller. Value-added services like 3Com ExpressSM and GuardianSM can include 24x7 telephone technical support, software upgrades, onsite assistance or advance hardware replacement. Experienced engineers are available to manage your installation with minimal disruption to your network. Expert assessment and implementation services are offered to fill resource gaps and ensure the success of your networking projects. More information on 3Com maintenance and Professional Services is available at www.3com.com.

Contact your authorized 3Com reseller or 3Com for a complete list of the value-added services available in your area.

Troubleshoot Online

You will find support tools posted on the 3Com Web site at www.3com.com.

3Com Knowledgebase helps you troubleshoot 3Com products. This query-based interactive tool is located at <http://knowledgebase.3com.com> and contains thousands of technical solutions written by 3Com support engineers.

Access Software Downloads

Software Updates are the bug fix/maintenance releases for the version of software initially purchased with the product. In order to access these Software Updates you must first register your product on the 3Com Web site at <http://eSupport.3com.com/>

First time users will need to apply for a user name and password. A link to software downloads can be found at <http://eSupport.3com.com/>, or under the Product Support heading at www.3com.com.

Software Upgrades are the feature releases that follow the software version included with your original product. In order to access upgrades and related documentation you must first purchase a service contract from 3Com or your reseller.

Telephone Technical Support and Repair

To enable telephone support and other service benefits, you must first register your product at <http://eSupport.3com.com/>

Warranty and other service benefits start from the date of purchase, so it is important to register your product quickly to ensure you get full use of the warranty and other service benefits available to you.

When you contact 3Com for assistance, please have the following information ready:

- Product model name, part number, and serial number
- Proof of purchase, if you have not pre-registered your product
- A list of system hardware and software, including revision level
- Diagnostic error messages
- Details about recent configuration changes, if applicable

To send a product directly to 3Com for repair, you must first obtain a return authorization number (RMA). Products sent to 3Com, without authorization numbers clearly marked on the outside of the package, will be returned to the sender unopened, at the sender's expense. If your product is registered and under warranty, you can obtain an RMA number online at <http://eSupport.3com.com/>. First time users will need to apply for a user name and password.

Contact Us

3Com offers telephone, e-mail and internet access to technical support and repair services. To access these services for your region, use the appropriate telephone number, URL or e-mail address from the list below.

Telephone numbers are correct at the time of publication. Find a current directory of contact information posted on the 3Com Web site at <http://csoweb4.3com.com/contactus/>

Country	Telephone Number	Country	Telephone Number
Asia, Pacific Rim Telephone Technical Support and Repair			
Australia	1 800 678 515	Philippines	1235 61 266 2602 or 1800 1 888 9469
Hong Kong	800 933 486	P.R. of China	800 810 3033
India	+61 2 9424 5179 or 000800 650 1111	Singapore	800 6161 463
Indonesia	001 803 61009	S. Korea	080 333 3308
Japan	00531 616 439 or 03 3507 5984	Taiwan	00801 611 261
Malaysia	1800 801 777	Thailand	001 800 611 2000
New Zealand	0800 446 398		
Pakistan	+61 2 9937 5083		
You can also obtain support in this region using the following e-mail: apr_technical_support@3com.com			
Or request a repair authorization number (RMA) by fax using this number:			+ 65 543 6348

Europe, Middle East, and Africa Telephone Technical Support and Repair

From anywhere in these regions, call: +44 (0)1442 435529

From the following countries, you may use the numbers shown:

Country	Telephone Number	Country	Telephone Number
Austria	0800 297 468	Luxembourg	800 23625
Belgium	0800 71429	Netherlands	0800 0227788
Denmark	800 17309	Norway	800 11376
Finland	0800 113153	Poland	00800 4411 357
France	0800 917959	Portugal	800 831416
Germany	0800 182 1502	South Africa	0800 995 014
Hungary	06800 12813	Spain	900 938 919
Ireland	1 800 553 117	Sweden	020 795 482
Israel	1800 945 3794	Switzerland	0800 553 072
Italy	800 879489	U.K.	0800 096 3266

You can also obtain support in this region using the following URL:

<http://emea.3com.com/support/email.html>

Latin America Telephone Technical Support and Repair

Antigua Barbuda	AT&T +800 988 2112	Guadalupe	AT&T +800 998 2112
Argentina Local Number	54 11 5556 3200	Guatemala	AT&T +800 998 2112
Argentina	0 810 444 3COM	Guyana	AT&T +800 998 2112
Argentina	810 44 32 66	Haiti	AT&T +800 998 2112
Aruba	AT&T +800 998 2112	Honduras	AT&T +800 998 2112
Bahamas	AT&T +800 998 2112	Jamaica	AT&T +800 998 2112
Barbados	AT&T +800 998 2112	Mexico Local Number	52 55 52 01 00 04
Belize	AT&T +800 998 2112	Mexico	01 800 849CARE
Bermuda	AT&T +800 998 2112	Mexico	01 800 849 2273
Bolivia	AT&T +800 998 2112	Montserrat	AT&T +800 998 2112
Brazil Local Number	55 11 5643 2700	Nicaragua	AT&T +800 998 2112
Brazil	800 133 266	Panama	AT&T +800 998 2112
British Virgin Islands	AT&T +800 998 2112	Paraguay	AT&T +800 998 2112
Cayman Islands	AT&T +800 998 2112	Peru	AT&T +800 998 2112
Chile	AT&T +800 998 2112	Puerto Rico	AT&T +800 998 2112
Columbia Local Number	57 1 592 5000	Saba Anquila	AT&T +800 998 2112
Colombia	800 011 3266	St. Kitts Neives	AT&T +800 998 2112
Costa Rica	AT&T +800 998 2112	St. Lucia	AT&T +800 998 2112
Curacao	AT&T +800 998 2112	St. Vincent	AT&T +800 998 2112
Dominica	AT&T +800 998 2112	Suriname	AT&T +800 998 2112
Dominique	AT&T +800 998 2112	Trinidad and Tobago	AT&T +800 998 2112
Equador	AT&T +800 998 2112	Turks and Caycos	AT&T +800 998 2112
El Salvador	AT&T +800 998 2112	Uruguay - Montevideo	AT&T +800 998 2112
French Guiana	AT&T +800 998 2112	Venezuela	AT&T +800 998 2112
Grenada	AT&T +800 998 2112	Virgin Islands	AT&T +800 998 2112

You can also obtain support in this region using the following:

Spanish speakers, enter the URL:

<http://lat.3com.com/lat/support/form.html>

Portuguese speakers, enter the URL:

<http://lat.3com.com/br/support/form.html>

English speakers in Latin America should send e-mail to:

lat_support_anc@3com.com

Country	Telephone Number	Country	Telephone Number
US and Canada Telephone Technical Support and Repair			
	1 800 876 3266		

GLOSSARY

802.11b The IEEE specification for wireless Ethernet which allows speeds of up to 11 Mbps. The standard provides for 1, 2, 5.5 and 11 Mbps data rates. The rates will switch automatically depending on range and environment.

802.11g The IEEE specification for wireless Ethernet which allows speeds of up to 54 Mbps. The standard provides for 6, 12, 24, 36, 48 and 54 Mbps data rates. The rates will switch automatically depending on range and environment.

10BASE-T The IEEE specification for 10 Mbps Ethernet over Category 3, 4 or 5 twisted pair cable.

100BASE-TX The IEEE specification for 100 Mbps Fast Ethernet over Category 5 twisted-pair cable.

Access Point An Access Point is a device through which wireless clients connect to other wireless clients and which acts as a bridge between wireless clients and a wired network, such as Ethernet. Wireless clients can be moved anywhere within the coverage area of the access point and still connect with each other. If connected to an Ethernet network, the access point monitors Ethernet traffic and forwards appropriate Ethernet messages to the wireless network, while also monitoring wireless client radio traffic and forwarding wireless client messages to the Ethernet LAN.

Ad Hoc mode Ad Hoc mode is a configuration supported by most wireless clients. It is used to connect a peer to peer network together without the use of an access point. It offers lower performance than infrastructure mode, which is the mode the router uses. (see also Infrastructure mode.)

Auto-negotiation Some devices in the range support auto-negotiation. Auto-negotiation is where two devices sharing a link, automatically configure to use the best

common speed. The order of preference (best first) is: 100BASE-TX full duplex, 100BASE-TX half duplex, 10BASE-T full duplex, and 10BASE-T half duplex. Auto-negotiation is defined in the IEEE 802.3 standard for Ethernet and is an operation that takes place in a few milliseconds.

Bandwidth The information capacity, measured in bits per second, that a channel can transmit. The bandwidth of Ethernet is 10 Mbps, the bandwidth of Fast Ethernet is 100 Mbps. The bandwidth for 802.11b wireless is 11Mbps.

Category 3 Cables One of five grades of Twisted Pair (TP) cabling defined by the EIA/TIA-586 standard. Category 3 is voice grade cable and can only be used in Ethernet networks (10BASE-T) to transmit data at speeds of up to 10 Mbps.

Category 5 Cables One of five grades of Twisted Pair (TP) cabling defined by the EIA/TIA-586 standard. Category 5 can be used in Ethernet (10BASE-T) and Fast Ethernet networks (100BASE-TX) and can transmit data up to speeds of 100 Mbps. Category 5 cabling is better to use for network cabling than Category 3, because it supports both Ethernet (10 Mbps) and Fast Ethernet (100 Mbps) speeds.

Channel Similar to any radio device, the Wireless Cable/DSL router allows you to choose different radio channels in the wireless spectrum. A channel is a particular frequency within the 2.4GHz spectrum within which the Router operates.

Client The term used to describe the desktop PC that is connected to your network.

DHCP Dynamic Host Configuration Protocol. This protocol automatically assigns an IP address for every computer on your network. Windows 95, Windows 98 and Windows NT 4.0 contain software that assigns IP addresses to workstations on a network. These assignments are made by the DHCP server software that runs on Windows NT Server, and Windows 95 and Windows 98 will call the server to obtain the address. Windows 98 will allocate itself an address if no DHCP server can be found.

DNS Server Address DNS stands for Domain Name System, which allows Internet host computers to have a domain name (such as 3com.com) and one or more IP addresses (such as 192.34.45.8). A DNS server keeps a database of

host computers and their respective domain names and IP addresses, so that when a domain name is requested (as in typing "3com.com" into your Internet browser), the user is sent to the proper IP address. The DNS server address used by the computers on your home network is the location of the DNS server your ISP has assigned.

DSL modem DSL stands for digital subscriber line. A DSL modem uses your existing phone lines to send and receive data at high speeds.

Encryption A method for providing a level of security to wireless data transmissions. The Router uses two levels of encryption; 40/64 bit and 128 bit. 128 bit is a more powerful level of encryption than 40/64 bit.

ESSID Extended Service Set Identifier. The ESSID is a unique identifier for your wireless network. You must have the same ESSID entered into the router and each of it's wireless clients.

Ethernet A LAN specification developed jointly by Xerox, Intel and Digital Equipment Corporation. Ethernet networks use CSMA/CD to transmit packets at a rate of 10 Mbps over a variety of cables.

Ethernet Address See MAC address.

Fast Ethernet An Ethernet system that is designed to operate at 100 Mbps.

Firewall Electronic protection that prevents anyone outside of your network from seeing your files or damaging your computers.

Full Duplex A system that allows packets to be transmitted and received at the same time and, in effect, doubles the potential throughput of a link.

Half Duplex A system that allows packets to be transmitted and received, but not at the same time. Contrast with full duplex.

Hub A device that regenerates LAN traffic so that the transmission distance of that signal can be extended. Hubs are similar to repeaters, in that they connect LANs of the same type; however they connect more LANs than a repeater and are generally more sophisticated.

IEEE Institute of Electrical and Electronics Engineers. This American organization was founded in 1963 and sets standards for computers and communications.

IETF Internet Engineering Task Force. An organization responsible for providing engineering solutions for TCP/IP networks. In the network management area, this group is responsible for the development of the SNMP protocol.

Infrastructure mode Infrastructure mode is the wireless configuration supported by the Router. You will need to ensure all of your clients are set up to use infrastructure mode in order for them to communicate with the Access Point built into your Router. (see also Ad Hoc mode)

IP Internet Protocol. IP is a layer 3 network protocol that is the standard for sending data through a network. IP is part of the TCP/IP set of protocols that describe the routing of packets to addressed devices. An IP address consists of 32 bits divided into two or three fields: a network number and a host number or a network number, a subnet number, and a host number.

IP Address Internet Protocol Address. A unique identifier for a device attached to a network using TCP/IP. The address is written as four octets separated with periods (full-stops), and is made up of a network section, an optional subnet section and a host section.

IPsec IP Security. Provides IP network-layer encryption. IPsec can support large encryption networks (such as the Internet) by using digital certificates for device authentication. When setting up an IPsec connection between two devices, make sure that they support the same encryption method.

ISP Internet Service Provider. An ISP is a business that provides connectivity to the Internet for individuals and other businesses or organizations.

LAN Local Area Network. A network of end stations (such as PCs, printers, servers) and network devices (hubs and switches) that cover a relatively small geographic area (usually not larger than a floor or building). LANs are characterized by high transmission speeds over short distances (up to 1000 metres).

- MAC** Media Access Control. A protocol specified by the IEEE for determining which devices have access to a network at any one time.
- MAC Address** Media Access Control Address. Also called the hardware or physical address. A layer 2 address associated with a particular network device. Most devices that connect to a LAN have a MAC address assigned to them as they are used to identify other devices in a network. MAC addresses are 6 bytes long.
- NAT** Network Address Translation. NAT enables all the computers on your network to share one IP address. The NAT capability of the Router allows you to access the Internet from any computer on your home network without having to purchase more IP addresses from your ISP.
- NAT-T**
- Network** A Network is a collection of computers and other computer equipment that are connected for the purpose of exchanging information or sharing resources. Networks vary in size, some are within a single room, others span continents.
- Network Interface Card (NIC)** A circuit board installed into a piece of computing equipment, for example, a computer, that enables you to connect it to the network. A NIC is also known as an adapter or adapter card.
- Protocol** A set of rules for communication between devices on a network. The rules dictate format, timing, sequencing and error control.
- PPPoE** Point-to-Point Protocol over Ethernet. Point-to-Point Protocol is a method of data transmission originally created for dial-up connections; PPPoE is for Ethernet connections.
- PPTP** Point-to-Point Tunneling Protocol is a method of secure data transmission between two remote sites over the internet.
- RJ-45** A standard connector used to connect Ethernet networks. The "RJ" stands for "registered jack".

- Router** A device that acts as a central hub by connecting to each computer's network interface card and managing the data traffic between the local network and the Internet.
- Server** A computer in a network that is shared by multiple end stations. Servers provide end stations with access to shared network services such as computer files and printer queues.
- SSID** Service Set Identifier. Some vendors of wireless products use SSID interchangeably with ESSID.
- Subnet Address** An extension of the IP addressing scheme that allows a site to use a single IP network address for multiple physical networks.
- Subnet mask** A subnet mask, which may be a part of the TCP/IP information provided by your ISP, is a set of four numbers configured like an IP address. It is used to create IP address numbers used only within a particular network (as opposed to valid IP address numbers recognized by the Internet, which must assigned by InterNIC).
- Subnets** A network that is a component of a larger network.
- Switch** A device that interconnects several LANs to form a single logical LAN that comprises of several LAN segments. Switches are similar to bridges, in that they connect LANs of a different type; however they connect more LANs than a bridge and are generally more sophisticated.
- TCP/IP** Transmission Control Protocol/Internet Protocol. This is the name for two of the most well-known protocols developed for the interconnection of networks. Originally a UNIX standard, TCP/IP is now supported on almost all platforms, and is the protocol of the Internet.
- TCP relates to the content of the data travelling through a network — ensuring that the information sent arrives in one piece when it reaches its destination. IP relates to the address of the end station to which data is being sent, as well as the address of the destination network.
- Traffic** The movement of data packets on a network.

universal plug and play	Universal plug and play is a system which allows compatible applications to read some of their settings from the Router. This allows them to automatically configure some, or all, of their settings and need less user configuration.
URL Filter	A URL Filter is a feature of a firewall that allows it to stop its clients from browsing inappropriate Web sites.
WAN	Wide Area Network. A network that connects computers located in geographically separate areas (for example, different buildings, cities, or countries). The Internet is an example of a wide area network.
WDS	Wireless Distribution System. WDS enables one or more Access Points to rebroadcast received signals to extend range and reach, though this can affect the overall throughput of data.
WECA	Wireless Ethernet Compatibility Alliance. An industry group formed to certify cross vendor interoperability and compatibility of 802.11b and 802.11g wireless networking products and to promote the standard for enterprise, small business and home environments. (see also 802.11b, 802.11g, Wi-Fi)
WEP	Wired Equivalent Privacy. A shared key encryption mechanism for wireless networking. Encryption strength is 40/64 bit or 128 bit.
Wi-Fi	Wireless Fidelity. This is the certification granted by WECA to products that meet their interoperability criteria. (see also 802.11b, WECA)
Wireless Client	The term used to describe a desktop or mobile PC that is wirelessly connected to your wireless network
Wireless LAN Service Area	Another term for ESSID (Extended Service Set Identifier)
Wizard	A Windows application that automates a procedure such as installation or configuration.

WLAN Wireless Local Area Network. A WLAN is a group of computers and devices connected together by wireless in a relatively small area (such as a house or office).

WPA Wi-Fi Protected Access. A dynamically changing encryption mechanism for wireless networking. Encryption strength is 256 bit.

REGULATORY NOTICES

GENERAL STATEMENTS

The 3Com OfficeConnect ADSL 11g Firewall Router, Model Number: WL-542 (3CRWDR100A-72, 3CRWDR100A-72, 3CRWDR100A-72) must be installed and used in strict accordance with the manufacturer's instructions as described in the user documentation that comes with the product.

This product contains encryption. It is unlawful to export out of the U.S. without obtaining a U.S. Export License.

This product does not contain any user serviceable components. Any unauthorized product changes or modifications will invalidate 3Com's warranty and all applicable regulatory certifications and approvals.

EXPOSURE TO RADIO FREQUENCY RADIATION

This device generates and radiates radio-frequency energy. In order to comply with FCC radio-frequency exposure guidelines for an uncontrolled environment, this equipment must be installed and operated while maintaining a minimum body to antenna distance of 20 cm (approximately 8 in).

The installer of this radio equipment must ensure that the antenna is located or pointed such that it does not emit RF field in excess of Health Canada limits for the general population; consult Safety Code 6, obtainable from Health Canada's website www.hc-sc.gc.ca/rpb.

This product must maintain a minimum body to antenna distance of 20 cm. Under these conditions this product will meet the Basic Restriction limits of 1999/519/EC [Council Recommendation of 12 July 1999 on the limitation of exposure of the general public to electromagnetic fields (0 Hz to 300 GHz)].

US - RADIO FREQUENCY REQUIREMENTS

This device must not be co-located or operated in conjunction with any other antenna or transmitter.

US FEDERAL COMMUNICATIONS COMMISSION (FCC) EMC COMPLIANCE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The user may find the following booklet prepared by the Federal Communications Commission helpful: The Interference Handbook

This booklet is available from the U.S. Government Printing Office, Washington, D.C. 20402. Stock No. 004-000-0034504.

3Com is not responsible for any radio or television interference caused by unauthorized modification of the devices included with this 3Com OfficeConnect ADSL 11g Firewall Router, Model Number: WL-542 (3CRWDR100A-72, 3CRWDR100A-72, 3CRWDR100A-72), or the substitution or attachment of connecting cables and equipment other than specified by 3Com.

The correction of interference caused by such unauthorized modification, substitution or attachment will be the responsibility of the user.

Changes or modifications not expressly approved by 3Com could void the user's authority to operate this equipment.

US MANUFACTURER'S FCC DECLARATION OF CONFORMITY


3Com Corporation
350 Campus Drive
Marlborough, MA 01752-3064, USA
(508) 323-5000
Date: July 19, 2005

Declares that the Product:

Brand Name: 3Com Corporation
Model Number: WL-542
Equipment Type: OfficeConnect ADSL 11g Firewall Router

Complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including

interference that may cause undesired operation.

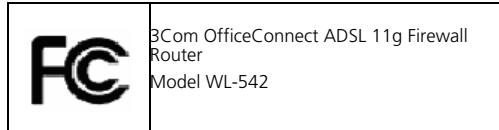

INDUSTRY CANADA - RF COMPLIANCE

This device complies with RSS 210 of Industry Canada.

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of this device.

L` utilisation de ce dispositif est autorisee seulement aux conditions suivantes: (1) il ne doit pas produire de brouillage et (2) l` utilisateur du dispositif doit etre pret a accepter tout brouillage radioelectrique recu, meme si ce brouillage est susceptible de compromettre le fonctionnement du dispositif.

The term "IC" before the equipment certification number only signifies that the Industry Canada technical specifications were met.

To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (EIRP) is not more than that required for successful communication. To prevent radio interference to the licensed service, this device is intended to be operated indoors and away from windows to provide maximum shielding. Equipment (or its transmit antenna) that is installed outdoors is subject to licensing.

Pour empecher que cet appareil cause du brouillage au service faisant l'objet d'une licence, il doit etre utilise a l'interieur et devrait etre place loin des fenetres afin de Fournier un ecras de blindage maximal. Si le materiel (ou son antenne d'emission) est installe a l'exterieur, il doit faire l'objet d'une licence.

INDUSTRY CANADA - EMISSIONS COMPLIANCE STATEMENT

This Class B digital apparatus complies with Canadian ICES-003.

AVIS DE CONFORMITÉ À LA RÉGLEMENTATION D'INDUSTRIE CANADA


Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

SAFETY COMPLIANCE NOTICE

This device has been tested and certified according to the following safety standards and is intended for use only in Information Technology Equipment which has been tested to these or other equivalent standards:

- UL Standard 60950 (3rd Edition) or 60950
- CAN/CSA C22.2 No. 60950 or 60950
- IEC 60950
- EN 60950

EU COMPLIANCE

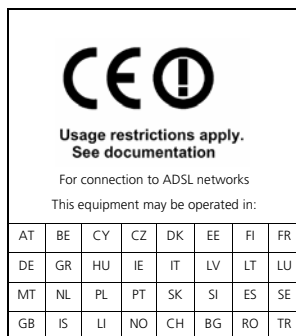

Intended use: ADSL 802.11g/b Firewall Router

For connection to ADSL networks

NOTE: To ensure product operation is in compliance with local regulations, select the country in which the product is installed. Refer to 3CRWDR100A-72, 3CRWDR100A-72, 3CRWDR100A-72 User Guide.

English	Hereby, 3Com Corporation, declares that this LAN device is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.
Finnish	3Com Corporation vakuuttaa täten että LAN device tyyppinen laite on direktiivin 1999/5/EY oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen.
Dutch	Hierbij verklaart 3Com Corporation dat het toestel LAN device in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 1999/5/EG Bij deze verklaart 3Com Corporation dat deze LAN device voldoet aan de essentiële eisen en aan de overige relevante bepalingen van Richtlijn 1999/5/EC.
French	Par la présente 3Com Corporation déclare que l'appareil LAN device est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 1999/5/CE Par la présente, 3Com Corporation déclare que ce LAN device est conforme aux exigences essentielles et aux autres dispositions de la directive 1999/5/CE qui lui sont applicables
Swedish	Härmed intygar 3Com Corporation att denna LAN device står i överensstämmelse med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 1999/5/EG
German	Hiermit erklärt 3Com Corporation, dass sich dieser/diese/dieses Managed Acccess Point in Übereinstimmung mit den grundlegenden Anforderungen und den anderen relevanten Vorschriften der Richtlinie 1999/5/EG befindet". (BMW) Hiermit erklärt 3Com Corporation die Übereinstimmung des Gerätes LAN device mit den grundlegenden Anforderungen und den anderen relevanten Festlegungen der Richtlinie 1999/5/EG. (Wien)
Greek	ΜΕ ΤΗΝ ΠΑΡΟΥΣΑ 3Com Corporation ΔΗΛΩΝΕΙ ΟΤΙ LAN device ΣΥΜΜΟΡΦΩΝΕΤΑΙ ΠΡΟΣ ΤΙΣ ΟΥΣΙΩΔΕΙΣ ΑΠΑΙΤΗΣΕΙΣ ΚΑΙ ΤΙΣ ΛΟΙΠΕΣ ΣΧΕΤΙΚΕΣ ΔΙΑΤΑΞΕΙΣ ΤΗΣ ΟΔΗΓΙΑΣ 1999/5/ΑΕ
Italian	Con la presente 3Com Corporation dichiara che questo LAN device è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 1999/5/CE.
Spanish	Por medio de la presente 3Com Corporation declara que el LAN device cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 1999/5/CE
Portuguese	3Com Corporation declara que este LAN device está conforme com os requisitos essenciais e outras disposições da Directiva 1999/5/CE.
Malti	Hawnhekk, 3Com Corporation, jiddikjara li dan LAN device jikkonforma mal-htgijiet essenzjali u ma provvedimenti orajn relevanti li hemm fid-Dirrettiva 1999/5/EC
Estonian	Käesolevaga kinnitab 3Com Corporation seadme LAN device vastavust direktiivi 1999/5/EU põhinõuetele ja nimetatud direktiivist tulenevatele teistele asjakohastele sätetele.
Hungarian	Alulírott, 3Com Corporation nyilatkozom, hogy a LAN device megfelel a vonatkozó alapvető követelményeknek és az 1999/5/EC irányelv egyéb előírásainak.
Slovak	3Com Corporation týmto vyhlasuje, že LAN device spĺňa základné požiadavky a všetky príslušné ustanovenia Smernice 1999/5/ES.
Czech	3Com Corporation tímto prohlašuje, že tento LAN device je ve shodě se základními požadavky a dalšími příslušnými ustanoveními směrnice 1999/5/ES.
Slovene	Šiuo 3Com Corporation deklaruoja, kad šis LAN device atitinka esminius reikalavimus ir kitas 1999/5/EB Direktyvos nuostatas.
Lithuanian	Šiuo 3Com Corporation deklaruoja, kad šis LAN device atitinka esminius reikalavimus ir kitas 1999/5/EB Direktyvos nuostatas.
Latvian	Ar šo 3Com Corporation deklarē, ka LAN device atbilst Direktīvas 1999/5/EK būtiskajām prasībām un citiem ar to saistītajiem noteikumiem.

A copy of the signed Declaration of Conformity can be downloaded from the Product Support web page for the 3Com OfficeConnect ADSL 11g Firewall Router (3CRWDR100A-72, 3CRWDR100A-72, 3CRWDR100A-72) at <http://www.3com.com>.

Also available at http://support.3com.com/doc/WL-542_EU_DOC.pdf

**EU - RESTRICTIONS FOR USE
IN THE 2.4GHZ BAND**

This device may be operated indoors or outdoors in all countries of the European Community using the 2.4GHz band: Channels 1 - 13, except where noted below.

- In Italy the end-user must apply for a license from the national spectrum authority to operate this device outdoors.
- In Belgium outdoor operation is only permitted using the 2.46 - 2.4835 GHz band: Channel 13.
- In France outdoor operation is only permitted using the 2.4 - 2.454 GHz band: Channels 1 - 7.

BRAZIL RF COMPLIANCE

Este equipamento opera em caráter secundário, isto é, não tem direito a proteção contra interferência prejudicial, mesmo de estações do mesmo tipo, e não causar interferência a sistema operando em caráter primário.

INDEX

Numbers

128-bit WEP 46
128-bit WEP Screen 46
1483 Bridge Mode 55
64-bit WEP Screen 47

A

Access Control Screen 62
Add PC Screen 63
Add Schedule Rule Screen 65
Addresses
 IP 85
Admin Password Screen 75
ADSL Status Screen 77
Advanced Screen 68
Automatic Addressing 87

B

Backup/Restore Settings Screen 74
Bridge Mode for Single PC Screen 53
Bridged Mode Configuration Screen 33

C

Cable Specifications 91
Channels 111
Configuration Summary Screen 37
Connection Type Screen 29, 50
Conventions
 notice icons, About This Guide 8
 text, About This Guide 8

D

DDNS 70
DHCP 87
DHCP Clients List 42
DHCP server 25, 42
disabling 26
DMZ Screen 67
DNS 24

DNS Screen 55
DSL mode 29
Dynamic Domain Server (DDNS) Screen 70
Dynamic IP Address 34
Dynamic/Fixed IP for Bridge Mode Screen 35, 55
DYNDNS 70

E

Editing DHCP Clients List Screen 42
Encryption Screen 44
Encryption, disabling 45

F

Firewall Screen 59
Forgotten Password 80

H

Hostname
 configuring 56
Hostname and MAC Address Screen 56

I

Internet
 addresses 85
Internet Properties Screen 26
Internet Protocol (TCP/IP) Properties Screen 24
IP Address 41, 85
IPSEC 68

L

LAN Settings Screen 41
LED 14
LEDs 14
Local Area Properties Screen 24
Logs Screen 77

M

MAC Address 56

configuring 56
 MAC Address Filtering Screen 66
 mode 30

N

NAT (Network Address Translation) 68
 NAT-T (NAT Traversal) 68
 Network
 addresses 85
 Networking
 wireless 81
 NIC
 wireless 14

P

Password 27, 75
 Poison Reverse 58
 PPPoA 31
 PPPoA Screen 31
 PPPoA Settings Screen 52
 PPPoE 26, 30, 31
 PPPoE Screen 30
 PPPoE Settings Screen 51

R

Remote Admin 68
 Reset to Factory Default Screen 73
 Reset to Factory Defaults 80
 Restart Router Screen 73
 RFC 1483 Bridged Mode 32, 53
 RFC 1483 Routed Mode 34
 RIP (Routing Information Protocol) 57
 RIP Parameter Screen 58
 Router Login Screen 28
 Routing Mode Screen 34
 Routing Table Screen 59

S

Schedule Rule Screen 65
 Setup Wizard 27
 SNMP Community Screen 71
 SNMP Trap Screen 72
 Special Applications Screen 60
 Specifications
 technical 89
 SSID 31, 32, 33, 35, 36, 43
 Static Addressing 87
 Static Route Parameters Screen 57
 Status Screen 28, 40

Subnet Mask 85

T

TCP/IP 23, 25, 85
 Technical
 specifications 89
 standards 89
 Time and Time Zone screen 76
 TZO.com 70

U

Universal Plug and Play 68
 Upgrade Screen 74
 URL Blocking Screen 64

V

Virtual Servers Screen 61
 VPI/VCI 30, 32, 33, 34, 36

W

WAN Ping Blocking 68
 WDS 49
 Web Browser Location Field 27
 Web Proxy 26
 WiFi Protected Access 45, 48
 Wireless
 networking 81
 NIC 14
 Wireless Configuration Screen 43
 Wireless Settings Screen 31, 32, 33, 35, 36, 43
 Wireless WDS Settings Screen 49
 WPA (with RADIUS Server) Screen 48
 WPA-PSK (no server) Screen 45