

**D-Link**<sup>®</sup>  
Building Networks for People



# Manual

Version 1.1

DGL-4300

## Wireless 108G Gaming Router

# Contents

<b>Package Contents</b> .....	<b>6</b>
<b>Minimum System Requirements</b> .....	<b>6</b>
<b>Introduction</b> .....	<b>7</b>
<b>Features and Benefits</b> .....	<b>8</b>
<b>Hardware Overview</b> .....	<b>9</b>
Connections .....	9
LEDs.....	10
<b>Wireless Basics</b> .....	<b>11</b>
Standards-based Technology .....	12
Installation Considerations .....	12
<b>Using the Configuration Interface</b> .....	<b>13</b>
Basic .....	13
<i>Wizard</i> .....	13
Internet Connection Setup Wizard.....	14
Wireless Security Setup Wizard .....	16
<i>WAN</i> .....	18
Modes .....	18
Advanced.....	19
Static WAN Mode .....	20
DHCP WAN Mode.....	20
PPPoE WAN Mode .....	21
PPTP WAN Mode .....	22
L2TP WAN Mode.....	23
<i>LAN</i> .....	23
LAN Settings .....	23
<i>DHCP</i> .....	24
DHCP Settings.....	24
Number of Dynamic DHCP Clients .....	24
Add Static DHCP Client .....	25

Static DHCP Client List.....	25
<i>Wireless</i> .....	26
Basic Wireless Settings.....	26
<i>Wireless Security Mode</i> .....	27
WEP.....	27
WPA-Personal.....	28
WPA-Enterprise.....	28
Advanced.....	29
<i>Virtual Server</i> .....	29
Add/Edit Virtual Server.....	30
Virtual Servers List.....	30
<i>Special Applications</i> .....	31
Application Level Gateway (ALG) Configurations.....	31
Add/Edit Special Applications Rule.....	32
Special Applications Rules List.....	32
<i>Gaming</i> .....	33
Add/Edit Game Rule.....	33
Game Rules List.....	33
<i>GameFuel™</i> .....	34
GameFuel™ Setup.....	34
Add/Edit GameFuel™ Rule.....	35
GameFuel Rules List.....	35
<i>Routing</i> .....	36
Add/Edit Route.....	36
Route List.....	36
<i>Access Control</i> .....	37
Enabled.....	37
Add/Edit Access Control Rule.....	37
Access Control Rules List.....	38
<i>Web Filter</i> .....	38
Add/Edit Web Site.....	38
Allowed Web Site List.....	38

<i>Mac Address Filters</i> .....	39
Filter Settings .....	39
Add MAC Address .....	39
MAC Address List.....	39
<i>Firewall</i> .....	40
Firewall Settings.....	40
<i>Inbound Filters</i> .....	41
Add/Edit Inbound Filter Rule .....	41
Inbound Filter Rules List .....	41
Configuring an Inbound Filter Rule.....	42
<i>Advanced Wireless</i> .....	43
Advanced Wireless Settings .....	43
Tools .....	44
<i>Admin</i> .....	44
Password .....	44
Administration .....	44
Save and Restore Configuration .....	44
<i>Time</i> .....	45
Time Configuration.....	45
Set the Date and Time .....	45
<i>Schedules</i> .....	46
Add/Edit Schedule Rule .....	46
Schedule Rules List.....	46
<i>Syslog</i> .....	47
<i>Email</i> .....	47
Email Settings .....	47
Email Log When Full or on Schedule.....	47
<i>System</i> .....	48
System Commands .....	48
<i>Firmware</i> .....	49
Firmware Information.....	49
Firmware Upgrade.....	49


Firmware Upgrade Notification Options.....	49
<i>Dynamic DNS</i> .....	50
Status.....	51
<i>Device Info</i> .....	51
General.....	51
WAN.....	51
LAN.....	51
Wireless LAN.....	52
<i>Wireless</i> .....	52
<i>Routing</i> .....	52
<i>Logs</i> .....	53
Log Options.....	53
Log Details .....	53
<i>Statistics</i> .....	53
Network Traffic Stats .....	53
LAN Statistics.....	54
WAN Statistics .....	54
Wireless Statistics.....	54
<i>Active Sessions</i> .....	54
<b>Appendix</b> .....	<b>55</b>
Securing Your Network .....	55
Glossary .....	57
<b>Technical Specifications</b> .....	<b>67</b>
<b>Contacting Technical Support</b> .....	<b>69</b>
<b>Warranty</b> .....	<b>70</b>
<b>Registration</b> .....	<b>74</b>

# Package Contents

- D-Link® DGL-4300 GamerLounge™ Gaming Router
- Detachable Antenna
- Cat5 Ethernet Cable
- Power Adapter (5.0V, 2.5A)
- CD-ROM with Manual
- Quick Installation Guide
- Vertical Stands
- Rubber Feet

**Note: Using a power supply with a different voltage than the one included with your product will cause damage and void the warranty for this product.**

If any of the above items are missing, please contact your reseller.

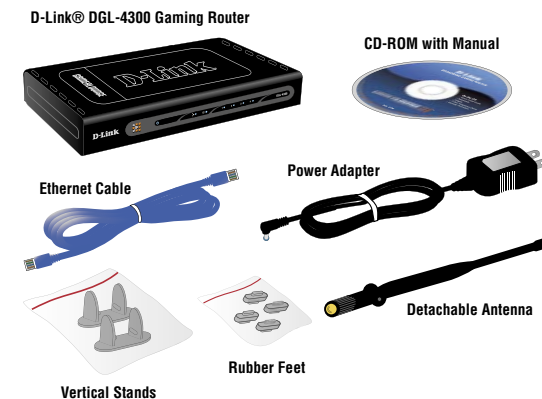

# Minimum System Requirements

- Ethernet-Based Cable or DSL Modem

## To Change Default Settings

- PC with
  - 1.2GHz Processor
  - 256MB Memory
  - CD-ROM Drive
- Ethernet Adapter with TCP/IP Protocol Installed
- Windows® XP/2000 or Mac® OS X v10.3/v10.2/v10.1
- Internet Explorer v6 or Netscape® Navigator v7

# Introduction

The D-Link GamerLounge™ DGL-4300 High-Speed Wireless Gaming Router is an 802.11g high-performance, wireless router that supports high-speed wireless networking and is designed to provide maximum gaming performance.

With top-notch maximum wireless signal rates of up to 108Mbps<sup>1</sup> and Gigabit Ethernet support for 10/100/1000Mbps LAN connections, rest assured enough bandwidth is available for all your gaming needs.

The DGL-4300 incorporates GameFuel™ Technology designed to provide the uninterrupted and flawless gaming experience serious online gamers expect.

The DGL-4300's high-performance CPU supports up to 6000 concurrent connections, making it ideal for P2P applications and multiplayer interactivity.

<sup>1</sup>Maximum wireless signal rate derived from IEEE Standard 802.11a/11b/11g specifications. Actual data throughput will vary. Network conditions and environmental factors lower actual data throughput rate.

# Features and Benefits

- Loaded with game-centric features boasting maximum flexibility for configuration and performance
- Designed for the Gamers Network
- GameFuel Priority powered platform delivers fully-loaded features boosting network efficiency and performance
- Enhanced wireless technology for optimal range and connectivity – up to 108Mbps<sup>1</sup>
- High-Performance CPU – ideal for P2P applications and multiplayer interactivity
- Automatically prioritizes and intelligently manages network traffic to better execute bandwidth-sensitive applications such as VoIP and multimedia streaming
- Enables multi-tasking between other applications without degradation in game connection
- Pre-configured ports to accommodate up to 256 policies for games and applications
- Customizable settings to add or modify new applications or game configurations
- New firmware upgrade notification keeps your D-Link Gaming Router up-to-date
- Next Generation hardware with one Fast Ethernet 10/100 WAN port and four Gigabit Ethernet 10/100/1000 auto-sensing LAN ports
- Shamelessly attractive chassis – chrome-plated front panel, hypnotizing blue LEDs
- 5dBi high-gain antenna for exceptional wireless signal
- Smooth GUI design for seamless device management
- Protect your wireless data with both Wi-Fi Protected Access (WPA) and 128-bit Wired Equivalent Privacy (WEP)
- Integrated Stateful Packet Inspection (SPI) firewall and Network Address Translation (NAT) firewall help protect against hackers, wardrivers, and other unauthorized users
- Create versatile Access Control policies to control network access based on time, date, websites, and/or applications
- Disable SSID Broadcast and MAC Filtering features help increase your level security to protect against unauthorized access to your wireless network
- Supports Virtual Private Network (VPN) pass-through to create a secure connection to your day job


<sup>1</sup>Maximum wireless signal rate derived from IEEE Standard 802.11a/11b/11g specifications. Actual data throughput will vary. Network conditions and environmental factors lower actual data throughput rate.




# Hardware Overview

## Connections

All Ethernet Ports (WAN and LAN) are auto MDI/MDIX, meaning you can use either a straight-through or a crossover Ethernet cable.

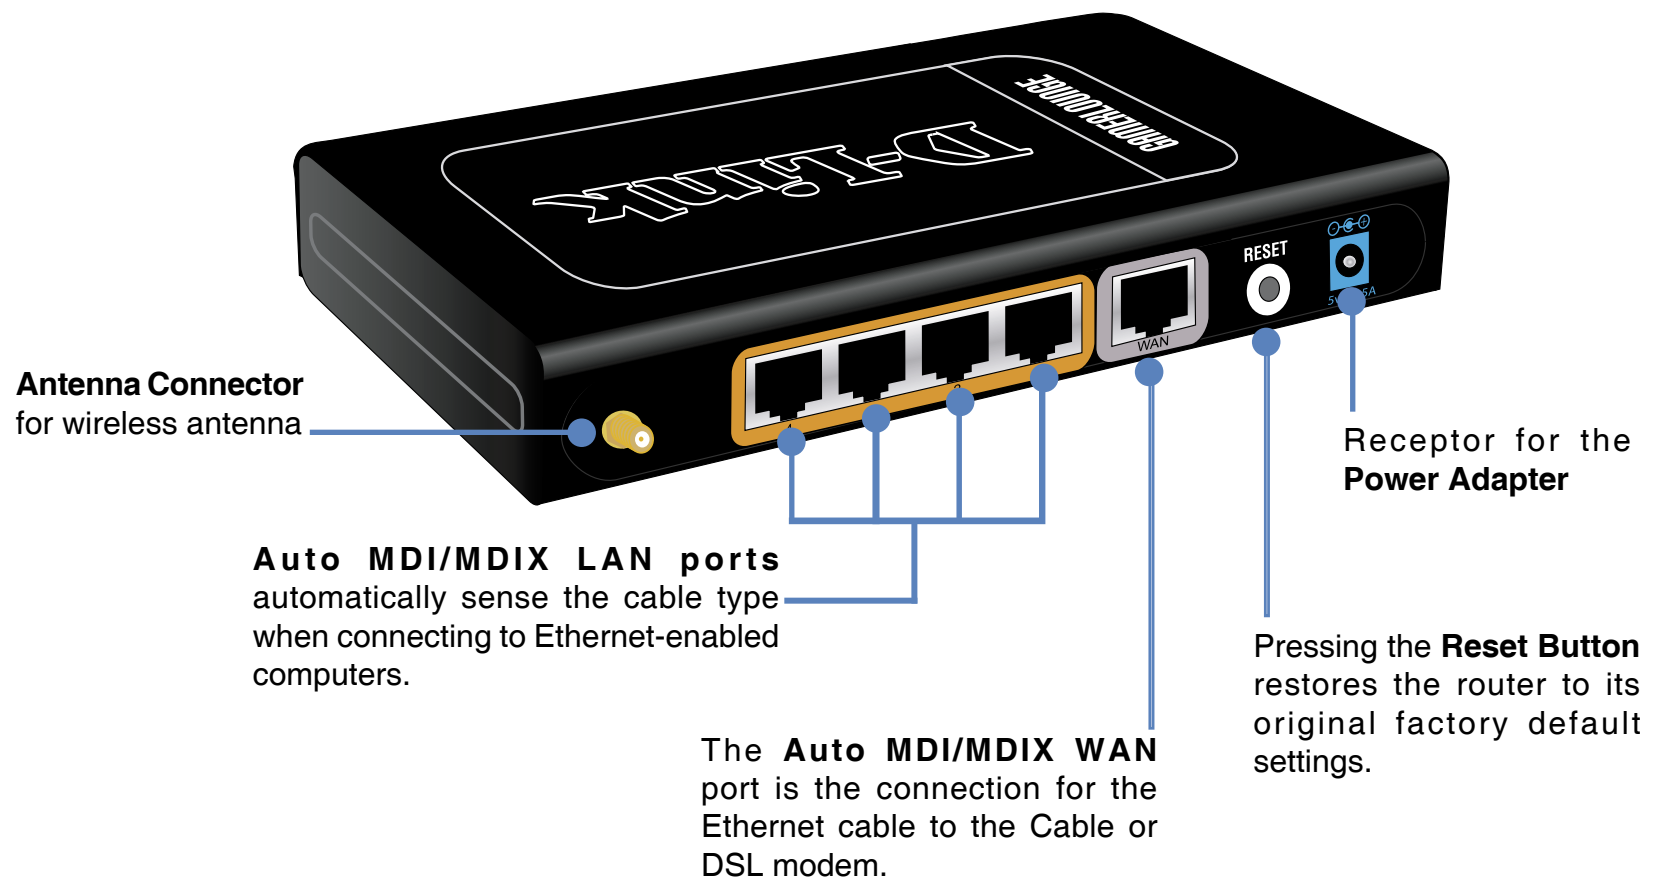

# LEDs

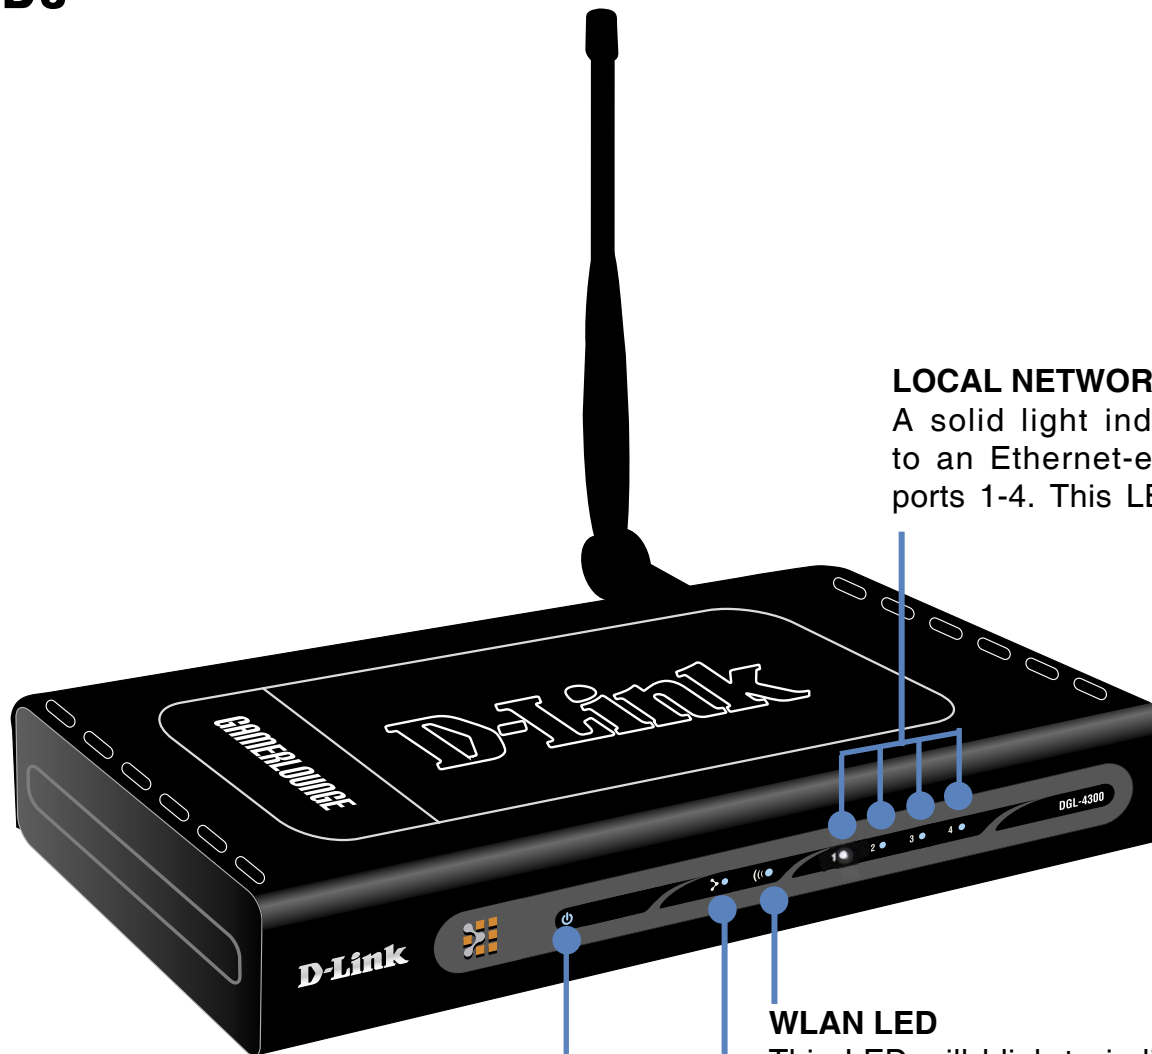

## POWER LED

A solid light indicates a proper connection to the power supply

## LOCAL NETWORK LEDs

A solid light indicates a connection to an Ethernet-enabled computer on ports 1-4. This LED blinks during data

## WLAN LED

This LED will blink to indicate activity on the wireless network

## WAN LED

A solid light indicates connection on the WAN port. This LED blinks during data transmission

# Wireless Basics

D-Link wireless products are based on industry standards to provide easy-to-use and compatible high-speed wireless connectivity within your home, business, or on public access wireless networks. D-Link wireless products will allow you access to the data you want, when and where you want it. You will be able to enjoy the freedom that wireless networking brings.

A WLAN is a cellular computer network that transmits and receives data with radio signals instead of wires. WLANs are used increasingly in both home and office environments, and public areas such as airports, coffee shops and universities. Innovative ways to utilize WLAN technology are helping people to work and communicate more efficiently. Increased mobility and the absence of cabling and other fixed infrastructure have proven to be beneficial for many users.

Wireless users can use the same applications they use on a wired network. Wireless adapter cards used on laptop and desktop systems support the same protocols as Ethernet adapter cards.

People use wireless LAN technology for many different purposes:

**Mobility** - Productivity increases when people have access to data in any location within the operating range of the WLAN. Management decisions based on real-time information can significantly improve worker efficiency.

**Low Implementation Costs** – WLANs are easy to set up, manage, change and relocate. Networks that frequently change can benefit from WLANs ease of implementation. WLANs can operate in locations where installation of wiring may be impractical.

**Installation and Network Expansion** - Installing a WLAN system can be fast and easy and can eliminate the need to pull cable through walls and ceilings. Wireless technology allows the network to go where wires cannot go - even outside the home or office.

**Scalability** – WLANs can be configured in a variety of topologies to meet the needs of specific applications and installations. Configurations are easily changed and range from peer-to-peer networks suitable for a small number of users to larger infrastructure networks to accommodate hundreds or thousands of users, depending on the number of wireless devices deployed.

**Inexpensive Solution** - Wireless network devices are as competitively priced as conventional Ethernet network devices.

# Standards-based Technology

The DGL-4300 Wireless Broadband Router utilizes the new **802.11g** standard.

The IEEE **802.11g** standard is an extension of the 802.11b standard. It increases the data rate up to 54Mbps within the 2.4GHz band, utilizing **OFDM technology**.

This means that in most environments, within the specified range of this device, you will be able to transfer large files quickly or even watch a movie in MPEG format over your network without noticeable delays. This technology works by transmitting high-speed digital data over a radio wave utilizing **OFDM (Orthogonal Frequency Division Multiplexing)** technology. **OFDM** works by splitting the radio signal into multiple smaller sub-signals that are then transmitted simultaneously at different frequencies to the receiver. **OFDM** reduces the amount of **crosstalk** (interference) in signal transmissions.

The DGL-4300 is backwards compatible with 802.11b devices. This means that if you have an existing 802.11b network, the devices in that network will be compatible with 802.11g devices at speeds of up to 11Mbps in the 2.4GHz range.

## Installation Considerations

The D-Link DGL-4300 lets you access your network, using a wireless connection, from virtually anywhere within its operating range. Keep in mind, however, that the number, thickness and location of walls, ceilings, or other objects that the wireless signals must pass through, may limit the range. Typical ranges vary depending on the types of materials and background RF (radio frequency) noise in your home or business. The key to maximizing wireless range is to follow these basic guidelines:

- Keep the number of walls and ceilings between the DGL-4300 and other network devices to a minimum - each wall or ceiling can reduce your D-Link wireless product's range from 3-90 feet (1-30 meters). Position your devices so that the number of walls or ceilings is minimized.
- Be aware of the direct line between network devices. A wall that is 1.5 feet thick (.5 meters), at a 45-degree angle appears to be almost 3 feet (1 meter) thick. At a 2-degree angle it looks over 42 feet (14 meters) thick! Position devices so that the signal will travel straight through a wall or ceiling (instead of at an angle) for better reception.
- Building Materials can impede the wireless signal - a solid metal door or aluminum studs may have a negative effect on range. Try to position wireless devices and computers with wireless adapters so that the signal passes through drywall or open doorways and not other materials.
- Keep your product away (at least 3-6 feet or 1-2 meters) from electrical devices or appliances

# Using the Configuration Interface

The Configuration Interface can be accessed from your Web browser. Open up your Web browser and type **http://192.168.0.1** in the address field and press **Enter**. The Configuration Interface login screen will appear. By default, there is no password. Click on the **Log In** button to access the Configuration main screen.


*Note: If you are online you will see status.*

## Basic

The Basic settings tab contains the Setup Wizards, Internet connection, and network setting options.

## Wizard

The Wizard screen contains two wizards that assist you with the configuration of your D-Link® Gaming Router.

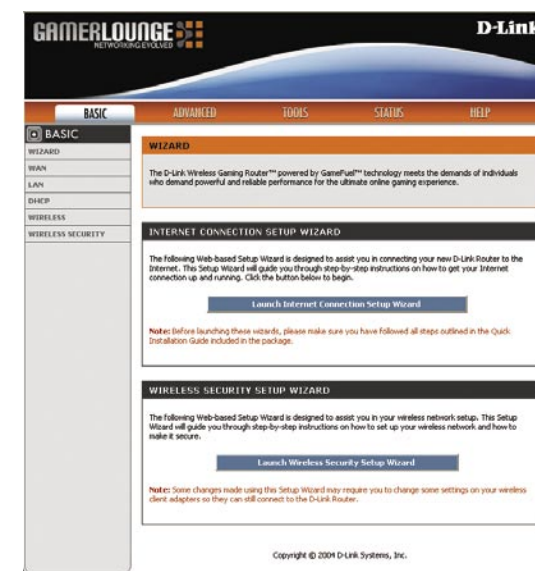

*Basic > Wizard*

## Internet Connection Setup Wizard

The Internet Connection Setup Wizard will assist you with connecting your D-Link® Gaming Router™ to the Internet. The step by step guide will prompt you for the necessary information to get you connected. The Internet Connection Setup Wizard guides you through the following basic router setup steps:

To begin, click on the **Launch Internet Connection Setup Wizard** button.

- The **Welcome To The D-Link Setup Wizard** screen appears, click Next to continue.
  
- **Step 1: Set Your Password** prompts you to enter a password for the Web-based configuration interface. You must also enter the password in the Verify Password prompt.
  
- **Step 2: Select Your Time Zone** prompts you to select your time zone from the pull-down menu.
  
- **Step 3: Configure Your Internet Connection** prompts you to select your Internet Service Provider from the pull-down menu. If your Internet Service Provider is not listed or you do not know who it is, you can select the connection type manually.

**WELCOME TO THE D-LINK SETUP WIZARD**

This wizard will guide you through a step-by-step process to configure your new D-Link router and connect to the Internet.

- Step 1: Set your Password
- Step 2: Select your Time Zone
- Step 3: Configure your Internet Connection
- Step 4: Save Settings and Connect

**STEP 1: SET YOUR PASSWORD**

By default, your new D-Link Router does not have a password configured for administrator access to the Web-based configuration pages. To secure your new networking device, please set and verify a password below:

Password:   
 Verify Password:

**STEP 2: SELECT YOUR TIME ZONE**

Select the appropriate time zone for your location. This information is required to configure the time-based options for the router.

**STEP 3: CONFIGURE YOUR INTERNET CONNECTION**

Your Internet Connection could not be detected, please select your Internet Service Provider (ISP) from the list below. If your ISP is not listed, select the "Not Listed or Don't Know" option to manually configure your connection.

If your Internet Service Provider was not listed or you don't know who it is, please select the Internet connection type below:

- DHCP Connection (Dynamic IP Address)**  
Choose this if your Internet connection automatically provides you with an IP Address. Most Cable Modems use this type of connection.
- Username / Password Connection (PPPoE)**  
Choose this option if your Internet connection requires a username and password to get online. Most DSL modems use this connection type of connection.
- Username / Password Connection (PPPT)**  
Choose this option if your Internet connection requires a username and password to get online. Most DSL modems use this connection type of connection.
- Username / Password Connection (L2TP)**  
Choose this option if your Internet connection requires a username and password to get online. Most DSL modems use this connection type of connection.
- Static IP Address Connection**  
Choose this option if your Internet Setup Provider provided you with IP Address information that has to be manually configured.

Not Listed or Don't Know

- Adelphia Power Link
- ALLTEL DSL
- AT&T DSL Service
- Bell Sympatico
- Bellsouth
- Charter High-Speed
- Comcast
- Covad
- Cox Communications
- Earthlink Cable
- Earthlink DSL
- FrontierNet
- Optimum Online
- RCN
- Road Runner
- Rogers Yahoo!
- SBC Yahoo! DSL
- Shaw
- Speakeasy
- Sprint FastConnect
- Telus
- Time Warner Cable
- US West / Qwest
- Verizon Online DSL
- XO Communications

Depending upon your Internet Service Provider or the type of connection you selected in the previous step, one of five screens will appear. If you are unsure of any of the information, please contact your Internet Service Provider (ISP) for details.

- **DHCP Connection (Dynamic IP Address)** requires you to enter the MAC address of the computer that was originally connected to your broadband modem. If you are using that computer, click on the **Clone Your PC's MAC Address** button and the MAC address is automatically copied. If your ISP requires you to enter a Host Name, please do so.
- **Set Username and Password Connection (PPPoE)** prompts you to enter your Username and Password. You must also verify the Password. If your ISP requires a Service Name entry, please enter it here.
- **Set Username and Password Connection (PPTP)** prompts you to enter your PPTP IP Address, PPTP Subnet Mask, PPTP Gateway IP Address, PPTP Server IP Address, Username, and Password. You must also verify the Password.
- **Set Username and Password Connection (L2TP)** prompts you to enter your L2TP IP Address, L2TP Subnet Mask, L2TP Gateway IP Address, L2TP Server IP Address, Username and Password. You must also verify the Password.
- **Set Static IP Address Connection** prompts you to enter the IP address, Subnet Mask, Gateway Address, Primary and Secondary DNS address information.
- **Setup Complete** will appear after all of the settings have been entered. Click **Connect** to save your settings and reboot the router.

**DHCP CONNECTION (DYNAMIC IP ADDRESS)**

To set up this connection, please make sure that you are connected to the D-Link Router with the PC that was originally connected to your broadband connection. If you are, then click the Clone MAC button to copy your computer's MAC Address to the D-Link Router.

MAC Address:

Host Name:

Note: You may also need to provide a Host Name. If you do not have or know this information, please contact your ISP.

**SET USERNAME AND PASSWORD CONNECTION (PPPoE)**

To set up this connection you will need to have a Username and Password from your Internet Service Provider. If you do not have this information, please contact your ISP.

User Name:

Password:

Verify Password:

Service Name:  (optional)

Note: You may also need to provide a Service Name. If you do not have or know this information, please contact your ISP.

**SET USERNAME AND PASSWORD CONNECTION (PPTP)**

To set up this connection you will need to have a Username and Password from your Internet Service Provider. You also need PPTP IP address. If you do not have this information, please contact your ISP.

PPTP IP Address:

PPTP Subnet Mask:

PPTP Gateway IP Address:

PPTP Server IP Address (may be same as gateway):

User Name:

Password:

Verify Password:

**SET USERNAME AND PASSWORD CONNECTION (L2TP)**

To set up this connection you will need to have a Username and Password from your Internet Service Provider. You also need L2TP IP address. If you do not have this information, please contact your ISP.

L2TP IP Address:

L2TP Subnet Mask:

L2TP Gateway IP Address:

L2TP Server IP Address (may be same as gateway):

User Name:

Password:

Verify Password:

**SET STATIC IP ADDRESS CONNECTION**

To set up this connection you will need to have a complete list of IP information provided by your Internet Service Provider. If you have a Static IP connection and do not have this information, please contact your ISP.

IP Address:

Subnet Mask:

Gateway Address:

Primary DNS Address:

Secondary DNS Address:  (optional)

**SETUP COMPLETE!**

The Setup Wizard has completed - Click the Connect button to save your settings and reboot the router.



## Wireless Security Setup Wizard

The Wireless Security Setup Wizard will assist you with setting up your wireless network. The step by step guide will ask you for the necessary information to secure your wireless network. The Wireless Security Setup Wizard guides you through the following steps:

To begin, click on the **Launch Wireless Security Setup Wizard** button.

- The **Welcome To The D-Link Wireless Security Setup Wizard** screen appears, click Next to continue.
  
- **Step 1: Name Your Wireless Network** prompts you to enter a wireless network name for your network. This name is also referred to as SSID. For security purposes, it is highly recommended that you do not use the default name.
  
- **Step 2: Select A Channel for your Wireless Network** prompts you to select the channel that will be used by your router to communicate to wireless devices.
  
- **Step 3: Secure Your Wireless Network** prompts you to select the level of security that you want to use on your wireless network.

**WELCOME TO THE D-LINK WIRELESS SECURITY SETUP WIZARD**

This wizard will guide you through a step-by-step process to setup your wireless network and make it secure.

- Step 1: Name your Wireless Network
- Step 2: Select a Channel for your Wireless Network
- Step 3: Secure your Wireless Network
- Step 4: Set your Wireless Security Password

Next Cancel

**STEP 1: NAME YOUR WIRELESS NETWORK**

Your wireless network needs a name so it can be easily recognized by wireless clients. For security purposes, it is highly recommended to change the pre-configured network name of [default].

Wireless Network Name (SSID): default

Prev Next Cancel

**STEP 2: SELECT A CHANNEL FOR YOUR WIRELESS NETWORK**

A wireless network uses specific channels in the 2.4GHz wireless spectrum to handle communication between clients. Choosing a clear channel can help optimize the performance and coverage of your wireless network.

Wireless Channel: 2.457 GHz - CH 10

Prev Next Cancel

**STEP 3: SECURE YOUR WIRELESS NETWORK**

In order to protect your network from hackers and unauthorized users, it is highly recommended you choose one of the following wireless network security settings.

There are three levels of wireless security - Good Security, Better Security, or Best Security. The level you choose depends on the security features your wireless adapters support.

**BEST**  Select this option if your wireless adapters SUPPORT WPA2

**BETTER**  Select this option if your wireless adapters SUPPORT WPA

**GOOD**  Select this option if your wireless adapters DO NOT SUPPORT WPA

**NONE**  Select this option if you do not want to activate any security features

For information on which security features your wireless adapters support, please refer to the adapters' documentation.

Note: All D-Link wireless adapters currently support WPA.

Prev Next Cancel



Depending upon your selection in Step 3, you will see one of the following screens.

- **Step 4: Set Your Wireless Security Password** prompts you to enter a wireless security password between 2 and 20 characters in length.

**STEP 4: SET YOUR WIRELESS SECURITY PASSWORD**

Once you have selected your security level - you will need to set a wireless security password. With this password, a unique security key will be generated.

Wireless Security Password:

(2 to 20 characters)

Note: You will need to enter the unique security key generated into your wireless clients enable proper wireless communication - not the password you provided to create the security key.

Prev Next Cancel

- If you selected **Best** security in step 3, this screen will appear providing you your pre-shared key information.

**SETUP COMPLETE!**

Below is a detailed summary of your wireless security settings. Please print this page out, or write the information on a piece of paper, so you can configure the correct settings on your wireless client adapters.

Wireless Network Name (SSID): default

Encryption: WPA-PSK/TXIP (also known as WPA Personal)

Pre-Shared Key: cLQK22dVxC

Prev Cancel Save

- If you selected **Better** security in step 3, this screen will appear providing you your pre-shared key information.

**SETUP COMPLETE!**

Below is a detailed summary of your wireless security settings. Please print this page out, or write the information on a piece of paper, so you can configure the correct settings on your wireless client adapters.

Wireless Network Name (SSID): default

Encryption: WPA-PSK/TXIP (also known as WPA Personal)

Pre-Shared Key: cLQK22dVxC

Prev Cancel Save

- If you selected **Good** security in step 3, this screen will appear providing you your WEP key information.

**SETUP COMPLETE!**

Below is a detailed summary of your wireless security settings. Please print this page out, or write the information on a piece of paper, so you can configure the correct settings on your wireless client adapters.

Wireless Network Name (SSID): default

Wep Key Length: 128 bits

Default WEP Key to Use: 1

Authentication: Open

Wep Key: A58B3 99A49 6D1F2 8ED29 0146B 0

Prev Cancel Save

- If you selected **None** security in step 3, this screen will appear providing you your wireless network name.

**SETUP COMPLETE!**

Below is a detailed summary of your wireless security settings. Please print this page out, or write the information on a piece of paper, so you can configure the correct settings on your wireless client adapters.

Wireless Network Name (SSID): default

Encryption: WPA-PSK/TXIP (also known as WPA Personal)

Pre-Shared Key: F8B,22vAX

Prev Cancel Save

## WAN

The WAN section is where your Internet Connection mode is selected. Your Internet Service Provider (ISP) determines the type of connection that you use.

## Modes

There are five connection modes to choose from as shown below. If you are unsure of your connection settings, contact your Internet Service Provider (ISP) and you can enter the necessary information on the QIG or print this page and write the settings for future reference.

Primary DNS Server: \_\_\_\_\_

Secondary DNS Server: \_\_\_\_\_

- Static:** Used when your ISP provides you a set IP address that does not change. The IP information is manually entered in your IP configuration settings.

IP Address: \_\_\_\_\_

Subnet Mask: \_\_\_\_\_

Default Gateway: \_\_\_\_\_

- DHCP:** A method of connection where the ISP assigns your IP address when your computer requests one from the ISP's server. Some ISP's require you to make some settings on your side before your computer can connect to the Internet.

Host Name: \_\_\_\_\_

- PPPoE:** A method of connection that requires you to enter a **Username** and **Password** (provided by your Internet Service Provider) to gain access to the Internet.

Username: \_\_\_\_\_

Password: \_\_\_\_\_

Service Name (Optional): \_\_\_\_\_

- PPTP:** A method of connection that requires you to enter information provided by your Internet Service Provider to gain access to the Internet.

PPTP IP Address: \_\_\_\_\_

PPTP Subnet Mask: \_\_\_\_\_

PPTP Gateway IP Address: \_\_\_\_\_

PPTP Server IP Address: \_\_\_\_\_

Username: \_\_\_\_\_

Password: \_\_\_\_\_

- L2TP:** A method of connection that requires you to enter information provided by your Internet Service Provider to gain access to the Internet.

L2TP IP Address: \_\_\_\_\_

L2TP Subnet Mask: \_\_\_\_\_

L2TP Gateway IP Address: \_\_\_\_\_

L2TP Server IP Address: \_\_\_\_\_

Username: \_\_\_\_\_

Password: \_\_\_\_\_

The screenshot shows the D-Link configuration interface for the WAN section. It includes a navigation menu with 'BASIC', 'ADVANCED', 'TOOLS', 'STATUS', and 'HELP'. The 'BASIC' tab is selected, and the 'WAN' sub-tab is active. The 'Internet Connection Settings' section provides instructions on choosing a connection type (Static IP, DHCP, or PPPoE) and includes a note about PPPoE client software. The 'MODES' section allows selecting the WAN mode (Static, DHCP, or PPPoE) and includes fields for DNS servers. The 'DHCP WAN MODE' section includes a host name field and buttons for 'Renew' and 'Release'. A copyright notice for 2004 D-Link Systems, Inc. is visible at the bottom.

*Basic > WAN*

All five modes have some common configuration options. The Primary and Secondary DNS Server settings are required for Static configurations and optional for DHCP and PPPoE configurations. The Advanced options on the following page can be modified for any of the five connection modes.

You should be able to get the **Primary DNS and Secondary DNS Servers** settings from your router configuration settings, ISP, or your network administrator. Only the primary DNS server address is required, though it is best to have both the primary and secondary addresses.

## Advanced

The Advanced options apply to all WAN modes.

### Use the Default MTU:

This option is enabled by default allowing the router to select the typical MTU settings for the selected WAN interface. If this option is unchecked, the router will use the value assigned in the MTU field.

### MTU:

The MTU (Maximum Transmission Unit) is a parameter that determines the largest packet size (in bytes) that the router will send to the WAN. If LAN devices send larger packets, the router will break them into smaller packets. Ideally, you should set this to match the MTU of the connection to your ISP. Typical values are 1500 bytes for an Ethernet connection and 1492 bytes for a PPPoE connection. If the router's MTU is set too high, packets will be fragmented downstream. If the router's MTU is set too low, the router will fragment packets unnecessarily and in extreme cases may be unable to establish some connections. In either case, network performance can suffer.

### WAN Port Speed:

The WAN Port Speed is set to auto by default. If you have trouble connecting the WAN port, you can select the connection type (10 or 100Mbps).

### Respond to WAN Ping:

This option is disabled by default. By disabling the WAN ping, the router will not respond to requests from a ping command received via the Internet. Pinging public WAN IP addresses is a common method used by hackers to test whether your WAN IP address is valid.

### MAC Cloning Enabled:

Some ISP's may check your computer's MAC address. Each networking device has its own unique MAC address defined by the hardware manufacturer. Some ISP's record the MAC address of the network adapter in the computer used to initially connect to their service. The ISP will then only grant Internet access to requests from a computer with this particular MAC address. The D-Link router has a different MAC address than the computer that initially connected to the ISP. To resolve this problem, enable this option.

### MAC Address:

When MAC Cloning is enabled, you can enter in a MAC address manually in this field or click the Clone Your Computer's MAC Address button.

### Clone Your PC's MAC Address:

When this button is clicked, the WAN port will use the MAC Address of the network adapter in the computer that you are using to access the router.

The screenshot shows the router's configuration interface. The top section is titled 'MODES' and contains the following options:

- Choose the mode to be used by the router to connect to the Internet.
- WAN Mode:  Static  DHCP  PPPoE  PPTP  L2TP
- Use these DNS Servers:
- Primary DNS Server: [0.0.0.0]
- Secondary DNS Server: [0.0.0.0]
- << Advanced
- Use the default MTU:
- MTU: [1500] (bytes)
- WAN Port Speed: [Auto]
- Respond to WAN Ping:
- MAC Cloning Enabled:
- MAC Address: [00:00:00:00:00:00]
- Clone Your PC's MAC Address

The bottom section is titled 'STATIC WAN MODE' and contains the following options:

- Enter the static address information provided by your Internet Service Provider (ISP).
- IP Address: [0.0.0.0]
- Subnet Mask: [0.0.0.0]
- Default Gateway: [0.0.0.0]

*Basic > WAN > Advanced*

## Static WAN Mode

Used when your ISP provides you a set IP address that does not change. The IP information is manually entered in your IP configuration settings.

**IP Address:** Input the IP Address provided from your router configuration settings, ISP or network administrator.

**Subnet Mask:** Input the Subnet mask provided from your router configuration settings, ISP or network administrator.

**Default Gateway:** Input the Gateway address provided from your router configuration settings, ISP or network administrator.

## DHCP WAN Mode

A method of connection where the ISP assigns your IP address when your computer requests one from the ISP's server. Some ISP's require you to make some settings on your side before your computer can connect to the Internet.

**Host Name:** Some ISP's may check your computer's HOST name. The HOST name identifies your system to the ISP's server. This way they know your computer is eligible to receive an IP address. In other words, they know that you are paying for their service.

**DHCP Connection:** The **Release** button will release the current IP address of the router. The **Renew** button will request an IP address.

The screenshot shows the 'MODES' section with 'Static' selected as the WAN Mode. Below it, there are fields for 'Primary DNS Server' and 'Secondary DNS Server', both set to 0.0.0.0. An 'Advanced >>' button is visible at the bottom of this section.

The 'STATIC WAN MODE' section below it prompts the user to 'Enter the static address information provided by your Internet Service Provider (ISP)'. It contains three input fields: 'IP Address' (0.0.0.0), 'Subnet Mask' (0.0.0.0), and 'Default Gateway' (0.0.0.0).

*Basic > WAN > Static*

The screenshot shows the 'MODES' section with 'DHCP' selected as the WAN Mode. Below it, there are fields for 'Primary DNS Server' and 'Secondary DNS Server', both set to 0.0.0.0. An 'Advanced >>' button is visible at the bottom of this section.

The 'DHCP WAN MODE' section below it has a 'Host Name' field. Under 'DHCP Connection', there are 'Renew' and 'Release' buttons. A note explains that clicking 'Release' will release the IP address, and clicking 'Renew' will immediately renew it. Below this, there are fields for 'Enable BigPond' (unchecked), 'BigPond Server' (isp-server), 'BigPond User Id', 'BigPond Password', and 'Verify Password'. At the bottom, there are 'Connect' and 'Disconnect' buttons. A final note states: 'Clicking the Connect button above will attempt an immediate connection to a remote BigPond server if one is not already active. Clicking the Disconnect button will immediately terminate any active connection. These buttons will be enabled after the router reboots with this configuration.'

*Basic > WAN > DHCP*

## PPPoE WAN Mode

A method of connection that requires you to enter a **Username** and **Password** (provided by your Internet Service Provider) to gain access to the Internet.

<b>Username:</b>	The username that you use to login to your Internet connection.
<b>Password:</b>	Enter the password associated with your username.
<b>Verify Password:</b>	Retype the password for verification.
<b>Service Name:</b>	If your ISP requires a service name, enter it here.
<b>Reconnect Mode:</b>	Typically PPPoE connections are not always on. The D-Link Router allows you to set the connection mode: <ul style="list-style-type: none"> <li>• <b>Always on:</b> A connection to the Internet is always maintained.</li> <li>• <b>On demand:</b> A connection to the Internet is made as needed.</li> <li>• <b>Manual:</b> You have to open up the Web-based management interface and click the Connect button manually any time that you wish to connect to the Internet.</li> </ul>
<b>Maximum Idle Time:</b>	Defines how long the machine can be idle before the PPPoE connection is disconnected.
<b>PPPoE Connection:</b>	The <b>Disconnect</b> button will immediately terminate any active connection. <i>Note: These buttons become enabled after the router has been rebooted with the PPPoE mode selected.</i>

The screenshot shows two configuration screens. The top screen, titled 'MODES', allows selecting the WAN Mode. 'PPPoE' is selected with a radio button. Below it, there are fields for 'Primary DNS Server' and 'Secondary DNS Server', both set to '0.0.0.0'. An 'Advanced >>' button is at the bottom. The bottom screen, titled 'PPPoE WAN MODE', prompts for ISP information. It includes fields for 'Username', 'Password', 'Verify Password', and 'Service Name'. The 'Reconnect Mode' is set to 'On demand'. The 'Maximum Idle Time' is set to '0' minutes. At the bottom, there are 'Connect' and 'Disconnect' buttons. A note at the bottom states: 'Clicking the Connect button above will attempt an immediate connection to a remote PPPoE server if one is not already active. Clicking the Disconnect button will immediately terminate any active connection. These buttons will be enabled after the router reboots with this configuration.'

Basic > WAN > PPPoE

## PPTP WAN Mode

A method of connection that requires you to enter your **PPTP IP Address**, **PPTP Subnet Mask**, **PPTP Gateway IP Address**, **PPTP Server IP Address**, **Username** and **Password** (provided by your Internet Service Provider) to gain access to the Internet.

<b>PPTP IP Address:</b>	Enter the IP Address provided by your ISP.
<b>PPTP Subnet Mask:</b>	Enter the Subnet mask provided by your ISP.
<b>PPTP Gateway IP Address:</b>	Enter the Gateway address provided by your ISP.
<b>PPTP Server IP Address:</b>	Enter the IP Address of the PPTP server you are connecting to. This information is provided by your ISP.
<b>Username:</b>	The username that you use to login to your Internet connection.
<b>Password:</b>	Enter the password associated with your username.
<b>Verify Password:</b>	Retype the password for verification.
<b>Maximum Idle Time:</b>	Defines how long the machine can be idle before the PPTP connection is disconnected.
<b>PPTP Connection:</b>	The <b>Disconnect</b> button will immediately terminate any active connection. <i>Note: These buttons become enabled after the router has been rebooted with the PPTP mode selected.</i>

The screenshot shows two parts of the configuration interface. The top part, titled 'MODES', allows selecting the WAN mode. 'PPTP' is selected with a radio button. Below this, there are fields for 'Primary DNS Server' and 'Secondary DNS Server', both set to '0.0.0.0'. An 'Advanced >>' button is at the bottom. The bottom part, titled 'PPTP WAN MODE', prompts for ISP information. Fields include: PPTP IP Address (0.0.0.0), PPTP Subnet Mask (255.255.255.0), PPTP Gateway IP Address (0.0.0.0), PPTP Server IP Address (0.0.0.0), Username, Password (masked with asterisks), and Verify Password (masked with asterisks). There are radio buttons for 'Reconnect Mode' (Always on, On demand, Manual) and a 'Maximum Idle Time' field (0 minutes). At the bottom, there are 'Connect' and 'Disconnect' buttons. A note at the bottom states: 'Clicking the Connect button above will attempt an immediate connection to a remote PPTP server if one is not already active. Clicking the Disconnect button will immediately terminate any active connection. These buttons will be enabled after the router reboots with this configuration.'

*Basic > WAN > PPTP*



## L2TP WAN Mode

A method of connection that requires you to enter your **L2TP IP Address**, **L2TP Subnet Mask**, **L2TP Gateway IP Address**, **L2TP Server IP Address**, **Username** and **Password** (provided by your Internet Service Provider) to gain access to the Internet.

<b>L2TP IP Address:</b>	Enter the IP Address provided by your ISP.
<b>L2TP Subnet Mask:</b>	Enter the Subnet mask provided by your ISP.
<b>L2TP Gateway IP Address:</b>	Enter the Gateway address provided by your ISP.
<b>L2TP Server IP Address:</b>	Enter the IP address of the L2TP server you are connecting to. This information is provided by your ISP.
<b>User Name:</b>	The username that you use to login to your Internet connection.
<b>Password:</b>	Enter the password associated with your username.
<b>Verify Password:</b>	Retype the password for verification.
<b>Maximum Idle Time:</b>	Defines how long the machine can be idle before the L2TP connection is disconnected.
<b>L2TP Connection:</b>	The <b>Disconnect</b> button will immediately terminate any active connection. <i>Note: These buttons become enabled after the router has been rebooted with the L2TP mode selected.</i>

**MODES**  
Choose the mode to be used by the router to connect to the Internet.

WAN Mode:  Static  DHCP  PPPoE  PPTP  L2TP

Use these DNS Servers:

Primary DNS Server:

Secondary DNS Server:

**Advanced >>**

---

**L2TP WAN MODE**  
Enter the information provided by your Internet Service Provider (ISP).

L2TP IP Address:

L2TP Subnet Mask:

L2TP Gateway IP Address:

L2TP Server IP Address:

Username:

Password:

Verify Password:

Reconnect Mode:  Always on  On demand  Manual

Maximum Idle Time:  (minutes, 0=infinite)

L2TP Connection:

Clicking the Connect button above will attempt an immediate connection to a remote L2TP server if one is not already active. Clicking the Disconnect button will immediately terminate any active connection.  
These buttons will be enabled after the router reboots with this configuration.

Basic > WAN > L2TP

## LAN

Your internal network settings are configured based on the IP Address and Subnet Mask assigned in this section. The IP address is also used to access this Web-based management interface. It is recommended that you use the default settings if you do not have an existing network.

### LAN Settings

<b>IP Address:</b>	The IP address of the router on the local area network. The local network settings are based on the address assigned here.
<b>Default Subnet Mask:</b>	The subnet mask of your router on the local area network.
<b>RIP Announcement:</b>	Used with multiple routers to broadcast routing information.
<b>Gateway Metric:</b>	This option is used if you have multiple routers.

**GAMERLOUNGE** NETWORKING EVOLVED **D-Link**

BASIC ADVANCED TOOLS STATUS HELP

**BASIC**

WIZARD  
WAN  
LAN  
DHCP  
WIRELESS  
WIRELESS SECURITY

**LAN**

**Network Settings**

Use this section to configure your internal network settings of your router. The IP Address that is configured here is the IP Address that you use to access the Web-based management interface. If you do change the default IP Address, you may need to adjust your PC's network settings to access the network again.

**LAN SETTINGS**

IP Address:

Default Subnet Mask:

RIP Announcement:

Gateway Metric:

Copyright © 2004 D-Link Systems, Inc.

Basic > LAN

D-Link Systems, Inc.

## DHCP

The DHCP section is where you configure the built-in DHCP Server to assign IP addresses to the computers and other devices on your local area network.

### DHCP Settings

#### Enable DHCP Server:

Once your D-Link Router is properly configured and this option is enabled, the DHCP Server function will assign your network devices the necessary information to connect to the LAN and Internet. This eliminates the need to manually configure each device on your network with IP settings.

*Note: The devices on your network must have TCP/IP bound to the Ethernet connection with the “DHCP” or “Obtain an IP address automatically” option enabled.*

#### DHCP IP Address Range:

This option defines the range of addresses available for the Router to assign to your internal network. If you have any devices using static IP addresses, be sure the addresses do not fall within the range defined here. A Static IP address is one that is entered in manually on the device.

Example:

Your D-Link Router uses an IP address of 192.168.0.1. You've assigned a computer designated as a Web server with a static IP address of 192.168.0.3. You've assigned another computer designated as an FTP server with a static IP address of 192.168.0.4. The starting IP address for your DHCP server needs to be 192.168.0.5 or above.

#### DHCP Lease Time:

The amount of time a computer may have an IP address before it is required to renew the lease. The lease functions just as a lease on an apartment would. The initial lease designates the amount of time before the lease expires. If the tenant wishes to retain the address when the lease expires then a new lease is established. If the lease expires and the address is no longer needed, then another tenant may use the address.

### Number of Dynamic DHCP Clients

In this section, you can see what LAN devices are currently leasing IP addresses. The DHCP Client table displays the number of clients that are receiving an IP address from the router. The computer name, MAC address, and IP address assigned to each computer are displayed here as well. You can **Revoke** IP addresses in this section. The **revoke** option allows you to take away a leased IP address from a client. This feature is useful for freeing up addresses when the client table is full or nearly full. Be sure to only revoke addresses from devices that are no longer needed on the network.

**ENABLE**

Enable DHCP Server :

---

**DHCP SETTINGS**

DHCP IP Address Range :  to  (addresses within the LAN subnet)  
DHCP Lease Time :  (minutes)

---

**NUMBER OF DYNAMIC DHCP CLIENTS : 1**

Computer Name	MAC Address	IP Address	Revoke
Multimedia	00:11:95:7C:01:FA	192.168.0.101	Revoke

---

**ADD STATIC DHCP CLIENT**

Enable :   
IP Address :  <<   
MAC Address :   
  
Computer Name :

---

**STATIC DHCP CLIENT LIST**

Enable	Computer Name	MAC Address	IP Address
--------	---------------	-------------	------------

*Basic > DHCP*

**DHCP SETTINGS**

DHCP Server Enabled :   
DHCP IP Address Range :  to  (addresses within the LAN subnet)  
DHCP Lease Time :  (minutes)



## Add Static DHCP Client

Static DHCP Clients receive the same IP address all the time. This is almost the same as if a device has a static IP address except that it must still actually request an IP address from the D-Link Router. The D-Link Router will provide the device the same IP address all the time. Servers on your network should either use a static IP address or this option. To input the MAC address of your system, enter it in manually or connect to the D-Link Router's Web-Management interface from the system and click the Copy Your PC's MAC Address button.

A MAC address is usually located on a sticker on the bottom of a network device. The MAC address is comprised of twelve digits. Each pair of hexadecimal digits are usually separated by dashes or colons such as 00-0D-88-11-22-33 or 00:0D:88:11:22:33. If your network device is a computer and the network card is already located inside the computer, you can connect to the D-Link Router from the computer and use the **Copy Your PC's MAC Address** option to enter the MAC address.

Example: You have an FTP server that you want to share files over the Internet. You can connect to the D-Link Router from the computer designated as the FTP server.

1. Enter a designated IP address somewhere between the Starting IP and Ending IP addresses.
2. Click the **Copy Your PC's MAC Address** button and the D-Link Router will detect the MAC address and enter it automatically.
3. The computer name can be entered in for reference but is not required.
4. Click the OK button and then click on the Save Settings button at the top of the page.

The IP address will now only be assigned to the designated computer and it will always receive the same IP address as long as it uses the same Ethernet adapter.

*Note: If you replace the Ethernet adapter in a computer that is using Static DHCP, you will need to Copy the PC's MAC Address again because every Ethernet adapter has a unique MAC address. The same goes for any network device. If you replace a network device such as a print server, you will need to input the MAC address of the new print server into the Static DHCP configuration.*

## Static DHCP Client List

Entries on this list can be enabled/disabled by toggling the Enable checkbox. Entries can be modified by clicking on the paper and pencil icon. To delete an entry, click on the trash can icon. After you've completed all modifications or deletions, you must click the **Save Settings** button at the top of the page to save your changes. The router must reboot before new settings will take effect. You will be prompted to **Reboot the Device** or **Continue**. If you need to make additional settings changes, click **Continue**. If you are finished with your configuration settings, click the **Reboot the Device** button.

NUMBER OF DYNAMIC DHCP CLIENTS : 1			
Computer Name	MAC Address	IP Address	
pn-multimedia4	00:0C:76:58:6A:1B	192.168.0.165	Revoke

ADD STATIC DHCP CLIENT	
Enable :	<input checked="" type="checkbox"/>
IP Address :	0.0.0.0 << Select Machine
MAC Address :	00:00:00:00:00:00
<b>Copy Your PC's MAC Address</b>	
Computer Name :	
<input type="button" value="Save"/> <input type="button" value="Clear"/>	

## Wireless

The wireless section is used to configure the wireless settings for your D-Link Router. Please note that changes made on this section may also need to be duplicated on your Wireless Client.

### Basic Wireless Settings

**Enable Wireless Radio:**

This option turns off and on the wireless connection feature of the router. If this is not enabled, you cannot connect using a wireless network adapter.

**Wireless Network Name:**

When you are browsing for available wireless networks, this is the name that will appear in the list (unless Visibility Status is set to Invisible, see below). This name is also referred to as the SSID.

**Visibility Status:**

The Invisible option allows you to hide your wireless network. When this option is set to Visible, your wireless network name is broadcast to anyone within the range of your signal. If you're not using encryption then they could connect to your network. When Invisible mode is enabled, you must enter the Wireless Network Name (SSID) manually to connect to the network.

**Auto Channel Select:**

With this box selected, the router will automatically choose the best channel.

**Channel:**

Select the channel with the clearest signal.

**Transmission Rate:**

By default the transmission rate will automatically select the fastest rate. You have the option of selecting the speed if necessary.


**802.11 Mode:**

If all of your devices can connect in 802.11g Mode then leave the setting at 802.11g only. If you have some devices that are 802.11b then you can change the mode to Mixed.

**Super G™ Mode:**

Super G Turbo Modes must use channel 6 for transmission and 802.11 Mode must be set to 802.11g.

- **Super G without Turbo:** Performance enhancing features such as Packet Bursting, FastFrames, and Compression.
- **Super G with Static Turbo:** Mode is not backwards compatible with non-Turbo (legacy) devices. Static turbo mode is always on and is only enabled when all devices on the wireless network are Super G with Static Turbo enabled.
- **Super G with Dynamic Turbo:** Mode is backwards compatible with non-Turbo (legacy) devices. Dynamic Turbo mode is only enabled when all devices on the wireless network are Super G with Dynamic Turbo enabled.

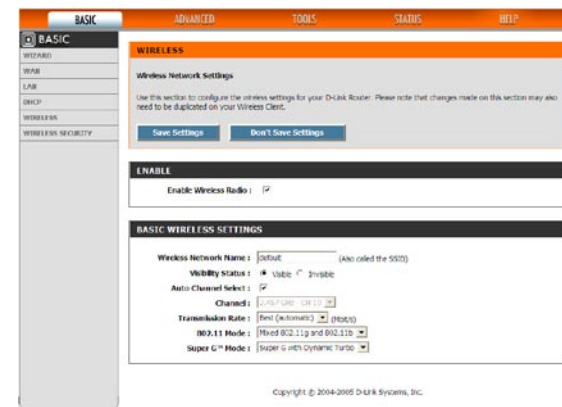

*Basic > Wireless*

## Wireless Security Mode

To protect your privacy, use the wireless security mode to configure the wireless security features. This device supports three wireless security modes including: WEP, WPA-Personal, and WPA-Enterprise. WEP is the original wireless encryption standard. WPA provides a higher level of security. WPA-Personal does not require an authentication server. The WPA-Enterprise option does require a RADIUS authentication server.

### WEP

A method of encrypting data for wireless communication intended to provide the same level of privacy as a wired network. WEP is not as secure as WPA encryption. To gain access to a WEP network, you must know the key. The key is a string of characters that you create. When using WEP, you must determine the level of encryption. The type of encryption determines the key length. 128-bit encryption requires a longer key than 64-bit encryption. Keys are defined by entering in a string in HEX (hexadecimal - using characters 0-9, A-F) or ASCII (American Standard Code for Information Interchange – alphanumeric characters) format. ASCII format is provided so you can enter a string that is easier to remember. The ASCII string is converted to HEX for use over the network. Four keys can be defined so that you can change keys easily. A default key is selected for use on the network.

Example:

64-bit hexadecimal keys are exactly 10 characters in length.  
(12345678FA is a valid string of 10 characters for 64-bit encryption)

128-bit hexadecimal keys are exactly 26 characters in length.  
(456FBCDF123400122225271730 is a valid string of 26 characters for 128-bit encryption)

64-bit ASCII keys are exactly 5 characters in length  
(DMODE is a valid string of 5 characters for 64-bit encryption)

128-bit ASCII keys are exactly 13 characters in length  
(2002HALOSWIN1 is a valid string of 13 characters for 128-bit encryption)

**WIRELESS SECURITY MODE**

Security Mode :  None  WEP  WPA-Personal  WPA-Enterprise

**WEP**

WEP is the wireless encryption standard. To use it you must enter the same key(s) into the router and the wireless stations. For 64 bit keys you must enter 10 hex digits into each key box. For 128 bit keys you must enter 26 hex digits into each key box. A hex digit is either a number from 0 to 9 or a letter from A to F. For the most secure use of WEP set the authentication type to "Shared Key" when WEP is enabled.

You may also enter any text string into a WEP key box, in which case it will be converted into a hexadecimal key using the ASCII values of the characters. A maximum of 5 text characters can be entered for 64 bit keys, and a maximum of 13 characters for 128 bit keys.

WEP Key Length : 64 bit (10 hex digits) (length applies to all keys)

WEP Key 1 :

WEP Key 2 :

WEP Key 3 :

WEP Key 4 :

Default WEP Key : WEP Key 1

Authentication : Open

## WPA-Personal

This option uses Wi-Fi Protected Access with a Pre-Shared Key (PSK).

**Pre-Shared Key:** The key is entered as a pass-phrase of up to 63 characters in ASCII format at both ends of the wireless connection. The pass-phrase cannot be shorter than 8 characters. The pass-phrase is used to generate session keys that are unique for each wireless client.

**Cipher Type:** The encryption algorithm used to secure the data communication. TKIP (Temporal Key Integrity Protocol) provides per packet key generation and is based on WEP. AES (Advanced Encryption Standard) is a very secure block based encryption.

**Group Key Update Interval:** The amount of time before the group key used for broadcast and multicast data is changed.

## WPA-Enterprise

This option works with a RADIUS server to authenticate wireless clients. Wireless clients should have established the necessary credentials before attempting to authenticate to the Server through the Gateway. Furthermore, the RADIUS Server may need to be configured to allow this Gateway to authenticate users.

**Cipher Type:** The method in which the pre-shared key is changed.

**Group Key Update Interval:** The amount of time before the group key used for broadcast and multicast data is changed.

**Authentication Timeout:** Amount of time before a client is required to re-authenticate.

**RADIUS Server IP Address:** The IP address of the authentication server.

**RADIUS Server Port:** The port number used to connect to the authentication server.

**RADIUS Server Shared Secret:** A passphrase that must match with the authentication server.

**MAC Address Authentication:** If this is selected then the user will need to connect from the same computer whenever logging into the wireless network.

**WIRELESS SECURITY MODE**

Security Mode:  None  WEP  WPA-Personal  WPA-Enterprise

---

**WPA**

WPA requires stations to use high grade encryption and authentication. NOTE: WDS will not function with WPA security.

WPA Mode:

Cipher Type:

Group Key Update Interval:  (seconds)

---

**PRE-SHARED KEY**

Pre-Shared Key:

**WIRELESS SECURITY MODE**

Security Mode:  None  WEP  WPA-Personal  WPA-Enterprise

---

**WPA**

WPA requires stations to use high grade encryption and authentication. NOTE: WDS will not function with WPA security.

WPA Mode:

Cipher Type:

Group Key Update Interval:  (seconds)

---

**EAP (802.1X)**

When WPA enterprise is enabled, the router uses EAP (802.1x) to authenticate clients via a remote RADIUS server.

Authentication Timeout:  (minutes)

RADIUS server IP Address:

RADIUS server Port:

RADIUS server Shared Secret:

MAC Address Authentication:

[Advanced >>](#)

# Advanced

The Advanced options allow you to configure a variety of advanced features including ports, application priority, Internet access, filters, and advanced wireless settings.

## Virtual Server

The Virtual Server option gives Internet users access to services on your LAN. This feature is useful for hosting online services such as FTP, Web, or Game Servers. For each Virtual Server, you define a public port on your router for redirection to an internal LAN IP Address and port.

Example: You are hosting a Web Server on a PC that has Private IP Address of 192.168.0.50 and your ISP is blocking Port 80.

1. Name the Virtual Server Rule (ex. Web Server)
2. Enter in the IP Address of the machine on your LAN – 192.168.0.50
3. Enter the Private Port as [80]
4. Enter the Public Port as [8888]
5. Select the Protocol - TCP
6. Ensure the schedule is set to Always
7. Check the Add Rule to add the settings to the Virtual Server List
8. Repeat these steps for each Virtual Server Rule you wish to add. After the list is complete, click Save Settings at the top of the page.

With this Virtual Server Rule all Internet traffic on Port 8888 will be redirected to your internal web server on port 80 at IP Address 192.168.0.50.

*Advanced > Virtual Server*

## Add/Edit Virtual Server

<b>Virtual Server Rule:</b>	Name of the virtual server, such as Web Server.
<b>IP Address:</b>	The IP address of the system on your internal network that will provide the virtual service, such as 192.168.0.50.
<b>Protocol:</b>	Select the protocol used by the service.
<b>Private Port:</b>	The port that will be used on your internal network.
<b>Public Port:</b>	The port that will be accessed from the Internet.
<b>Schedule:</b>	Select a schedule for when this rule is in effect. If you do not see the schedule you need in the list of schedules, go to the Tools -> Schedules screen and create a new schedule.
<b>Save:</b>	Saves the new rule or modified existing rule to the Rules list. When you are done editing the settings, you must click the Save Settings button at the top of the page to make the changes effective and permanent.

## Virtual Servers List

Entries on this list can be enabled/disabled by toggling the Enable checkbox. Entries can be modified by clicking on the paper and pencil icon. To delete an entry, click on the trash can icon. After you've completed all modifications or deletions, you must click the **Save Settings** button at the top of the page to save your changes. The router must reboot before new settings will take effect. You will be prompted to **Reboot the Device** or **Continue**. If you need to make additional settings changes, click **Continue**. If you are finished with your configuration settings, click the **Reboot the Device** button.

## Special Applications

The Special Application section is used to open single or multiple ports on your router when the router senses data sent to the Internet on a 'trigger' port or port range. Special Applications rules apply to all computers on your internal network.

### Application Level Gateway (ALG) Configurations

Here you can enable or disable ALG's. Some protocols and applications require special handling of the IP payload to make them work with network address translation (NAT). Each ALG provides special handling for a specific protocol or application. A number of ALGs for common applications are enabled by default.

<b>PPTP:</b>	Allows multiple machines on the LAN to connect to their corporate network using PPTP protocol.
<b>IPSec VPN:</b>	Allows multiple VPN clients to connect to their corporate network using IPSec. Some VPN clients support traversal of IPSec through NAT. This ALG may interfere with the operation of such VPN clients. If you are having trouble connecting with your corporate network, try turning this ALG off. <i>Please check with the system administrator of your corporate network whether your VPN client supports NAT traversal.</i>
<b>RTSP:</b>	Allows applications that use Real Time Streaming Protocol to receive streaming media from the internet. QuickTime and Real Player are some of the common applications using this protocol.
<b>FTP:</b>	Allows FTP clients and servers to transfer data across NAT. Refer to the Advanced -> Virtual Server page if you want to host an FTP server.
<b>NetMeeting:</b>	Allows Microsoft NetMeeting clients to communicate across NAT. Note that if you want your buddies to call you, you should also set up a virtual server for NetMeeting. Refer to the Advanced -> Virtual Server page for information on how to set up a virtual server.
<b>SIP:</b>	Allows devices and applications using VoIP (Voice over IP) to communicate across NAT. Some VoIP applications and devices have the ability to discover NAT devices and work around them. This ALG may interfere with the operation of such devices. If you are having trouble making VoIP calls, try turning this ALG off.
<b>MMS:</b>	Allows Windows Media Player, using MMS protocol, to receive streaming media from the internet.
<b>L2TP:</b>	Allows multiple machines on the LAN to connect to their corporate network using the L2TP protocol.
<b>Windows Messenger:</b>	Allows all of the Windows Messenger functions to work properly through the router.

**APPLICATION LEVEL GATEWAY (ALG) CONFIGURATION**

PPTP:     IPSec VPN:     RTSP:     Windows Messenger:   
 FTP:     NetMeeting:     SIP:   
 AOL:     MMS:     L2TP:

**ADD SPECIAL APPLICATIONS RULE**

Enable:   
 Name:  << Select Special Application >>  
 Trigger Port Range:  (ex. 100-200,588)  
 Trigger Protocol: Both  
 Input Port Range:  (ex. 100-200, 588)  
 Input Protocol: Both  
 Schedule: Always  
 Save Clear

**SPECIAL APPLICATIONS RULES LIST**

Enable	Name	Trigger Protocol/Ports	Input Protocol/Ports	Schedule
--------	------	------------------------	----------------------	----------

*Advanced > Special Applications*



## Add/Edit Special Applications Rule

The Special Application section is used to open single or multiple ports on your router when the router senses data sent to the Internet on a “trigger” port or port range. Special Applications rules apply to all computers on your internal network.

<b>Rule Name:</b>	Enter a name for the Special Application Rule, for example <b>Game App</b> , which will help you identify the rule in the future. You can also select from a list of common applications, and the remaining configuration values will be filled in accordingly.
<b>Trigger Port Range:</b>	Enter the outgoing port range used by your application.
<b>Trigger Port Protocol:</b>	Select the outbound protocol used by your application.
<b>Input Port Range:</b>	Enter the port range that you want to open up to Internet traffic.
<b>Input Port Protocol:</b>	Select the protocol used by the Internet traffic coming back into the router through the opened port range.
<b>Schedule:</b>	Select a schedule for when this rule is in effect. If you do not see the schedule you need in the list of schedules, go to the Tools -> Schedules screen and create a new schedule.
<b>Save:</b>	Saves the new rule or modified existing rule to the Rules list. When you are done editing the settings, you must click the Save Settings button at the top of the page to make the changes effective and permanent.

## Special Applications Rules List

Entries on this list can be enabled/disabled by toggling the Enable checkbox. Entries can be modified by clicking on the paper and pencil icon. To delete an entry, click on the trash can icon. After you’ve completed all modifications or deletions, you must click the **Save Settings** button at the top of the page to save your changes. The router must reboot before new settings will take effect. You will be prompted to **Reboot the Device** or **Continue**. If you need to make additional settings changes, click **Continue**. If you are finished with your configuration settings, click the **Reboot the Device** button.



## Gaming

The Gaming section is used to open multiple ports or a range of ports in your router and redirect data through those ports to a single PC on your network. This feature allows you to enter ports in various formats:

### Add/Edit Game Rule

- Rule Name:** Give the Gaming Rule a name that is meaningful to you, such as Game Server. You can also select from a list of pre-defined rules for many popular games. If you have any trouble with pre-defined rules, verify whether the port values have changed since the list was created. You also must fill in the IP address field.
- IP Address:** Enter the local network IP address of the system hosting the game server, such as 192.168.0.50.
- TCP Ports To Open:** Enter the TCP ports to open, such as 6159-6180, 99
- UDP Ports To Open:** Enter the UDP ports to open, such as 6159-6180, 99
- Schedule:** Select a schedule for when this rule is in effect. If you do not see the schedule you need in the list of schedules, go to the Tools -> Schedules screen and create a new schedule.
- Save:** Saves the new rule or modified existing rule to the Rules list. When you are done editing the settings, you must click the Save Settings button at the top of the page to make the changes effective and permanent.

Enable	Name	IP Address	TCP Ports	UDP Ports	Schedule
--------	------	------------	-----------	-----------	----------

*Advanced > Gaming*

### Game Rules List

Entries on this list can be enabled/disabled by toggling the Enable checkbox. Entries can be modified by clicking on the paper and pencil icon. To delete an entry, click on the trash can icon. After you've completed all modifications or deletions, you must click the **Save Settings** button at the top of the page to save your changes. The router must reboot before new settings will take effect. You will be prompted to **Reboot the Device** or **Continue**. If you need to make additional settings changes, click **Continue**. If you are finished with your configuration settings, click the **Reboot the Device** button.

## GameFuel™

The GameFuel™ option helps improve your network gaming performance by prioritizing applications. By default the GameFuel settings are disabled and application priority is not classified automatically.

### GameFuel™ Setup

#### Enable GameFuel:

This option is disabled by default. Enable this option for better performance and experience with online games and other interactive applications, such as VoIP.

#### Automatic Classification:

This option is enabled by default when the GameFuel option is enabled. This option will allow your router to automatically determine which programs should have network priority.

#### Dynamic Fragmentation:

This option should be enabled when you have a slot Internet uplink. It helps to reduce the impact that large low priority network packets can have on more urgent ones.

#### Automatic Uplink Speed:

This option is enabled by default when the GameFuel option is enabled. This option will allow your router to automatically determine the uplink speed of your Internet connection.

#### Measured Uplink Speed:

This displays the detected uplink speed.

#### Uplink Speed:

The speed at which data can be transferred from the router to your ISP. This is determined by your ISP. ISP's often speed as a download/upload pair. For example, 1.5Mbps/284Kbits. Using this example, you would enter 284. Alternatively you can test your uplink speed with a service such as [www.dsreports.com](http://www.dsreports.com).

#### Connection Type:

By default, the router automatically determines whether the underlying connection is an xDSL/Frame-relay network or some other connection type (such as cable modem or Ethernet), and it displays the result as **Detected xDSL or Frame Relay Network**. If you have an unusual network connection in which you are actually connected via xDSL but for which you configure either "Static" or "DHCP" in the WAN settings, setting this option to **xDSL or Other Frame Relay Network** ensures that the router will recognize that it needs to shape traffic slightly differently in order to give the best performance. Choosing **xDSL or Other Frame Relay Network** causes the measured uplink speed to be reported slightly lower than before on such connections, but gives much better results.

#### Detected XDSL or other Frame Relay Network:

When **Connection Type** is set to **automatic**, the automatically detected connection type is displayed here.

The screenshot shows the configuration interface for GameFuel. It is divided into two main sections: 'ENABLE' and 'GAMEFUEL SETUP'. In the 'ENABLE' section, there is a checkbox for 'Enable GameFuel' which is checked. The 'GAMEFUEL SETUP' section contains several options: 'Automatic Classification' (checked), 'Dynamic Fragmentation' (checked), 'Automatic Uplink Speed' (checked), 'Measured Uplink Speed' (displayed as 'Not Estimated kbps'), 'Uplink Speed' (displayed as '1.28 kbps' with a 'Select Transmission Rate' dropdown), 'Connection Type' (set to 'Auto-detect'), and 'Detected xDSL Or Other Frame Relay Network' (set to 'No').

*Advanced > GameFuel*

## Add/Edit GameFuel™ Rule

Automatic classification should be adequate for most applications. GameFuel rules identify a specific message flow and assign priority to that flow.

<b>Name:</b>	Create a name for the rule that is meaningful to you.
<b>Priority:</b>	The priority of the message flow is entered here. 0 receives the highest priority (most urgent) and 255 receives the lowest priority.
<b>Protocol:</b>	The protocol used by the messages.
<b>Source IP Range:</b>	The rule applies to a flow of messages whose LAN-side IP address is within the range set here.
<b>Source Port Range:</b>	The rule applies to a flow of messages whose LAN-side port number is within the range set here.
<b>Destination IP Range:</b>	The rule applies to a flow of messages whose WAN-side IP address is within the range set here.
<b>Destination Port Range:</b>	The rule applies to a flow of messages whose WAN-side port number is within the range set here.
<b>Save:</b>	Saves the new rule or modified existing rule to the Rules list. When you are done editing the settings, you must click the Save Settings button at the top of the page to make the changes effective and permanent.

## GameFuel Rules List

Entries on this list can be enabled/disabled by toggling the Enable checkbox. Entries can be modified by clicking on the paper and pencil icon. To delete an entry, click on the trash can icon. After you've completed all modifications or deletions, you must click the **Save Settings** button at the top of the page to save your changes. The router must reboot before new settings will take effect. You will be prompted to **Reboot the Device** or **Continue**. If you need to make additional settings changes, click **Continue**. If you are finished with your configuration settings, click the **Reboot the Device** button.

GAMEFUEL RULES LIST					
Enable	Name	Priority	Source IP Range	Destination IP Range	Protocol / Ports

# Routing

## Add/Edit Route

Adds a new route to the IP routing table or edits an existing route.

<b>Enable:</b>	Specifies whether the entry will be enabled or disabled.
<b>Destination IP:</b>	The IP address or network that the packets will be attempting to access  <i>Note: 192.168.1.0 with a Netmask of 255.255.255.0 means traffic will be routed to the entire 192.168.1.x network.</i>
<b>Netmask:</b>	Used to specify which portion of the Destination IP signifies the network trying to be accessed and which part signifies the host that the packets will be routed to  <i>Note: 255.255.255.255 is used to signify only the host that was entered in the Destination IP field.</i>
<b>Gateway:</b>	Specifies the next hop to be taken if this route is used. A gateway of 0.0.0.0 implies there is no next hop, and the IP address matched is directly connected to the router on the interface specified: LAN or WAN.
<b>Interface:</b>	Specifies the interface, LAN or WAN, that the IP packet must use to transit out of the router when this route is used.
<b>Metric:</b>	The amount of hops it will take to reach the Destination IP or network. A hop is considered to be traffic passing through a router from one network to another. If there is only one router between your network and the Destination network, then the Metric value would be 1.
<b>Save:</b>	Saves the new rule or modified existing rule to the Rules list. When you are done editing the settings, you must click the Save Settings button at the top of the page to make the changes effective and permanent.

## Route List

This section shows the current routing table entries. Certain required routes are predefined and cannot be changed. Entries on this list that can be modified can be enabled/disabled by toggling the Enable checkbox. Editable entries can be modified by clicking on the paper and pencil icon. To delete an editable entry, click on the trash can icon. After you've completed all modifications or deletions, you must click the **Save Settings** button at the top of the page to save your changes. The router must reboot before new settings will take effect. You will be prompted to **Reboot the Device** or **Continue**. If you need to make additional settings changes, click **Continue**. If you are finished with your configuration settings, click the **Reboot the Device** button.

**ADD ROUTE**

Enable:

Destination IP:

Netmask:

Gateway:

Interface:

Metric:

---

**ROUTES LIST**

Enable	Destination IP	Netmask	Gateway	Metric	Interface
<input checked="" type="checkbox"/>	192.168.0.2	255.255.255.255	0.0.0.0	1	LAN
<input checked="" type="checkbox"/>	192.168.0.255	255.255.255.255	0.0.0.0	1	LAN
<input checked="" type="checkbox"/>	192.168.0.1	255.255.255.255	0.0.0.0	1	LAN
<input checked="" type="checkbox"/>	192.168.0.0	255.255.255.0	0.0.0.0	1	LAN

*Advanced > Routing*

## Access Control

The Access Control section allows you to control access in and out of your network. Use this feature as Parental Controls to only grant access to approved sites, limit web access based on time or dates, and/or block access from applications like P2P utilities or games.

### Enabled

By default the Access Control feature is disabled. If you enable Access Control, every device on the LAN must either have a static IP address (that is one that is not in the DHCP range) or must be in the Static DHCP Client List (see Basic > DHCP).

When Access Control is disabled, every device on the LAN is permitted to access the Internet. However, if you enable Access Control, every device on the LAN that needs to access the Internet must have an Access Control rule that explicitly permits it to access the Internet. Devices that do not have an Access Control Rule cannot access the Internet. When Access Control is enabled, the options below will appear:

### Add/Edit Access Control Rule

- Policy Name:** Create a name for this access control policy that is meaningful to you. Typically this would be a system name or user name such as Rob's PC.
- Address Type:** Select IP, MAC, or Others to apply this rule to the corresponding address type.
- IP Address:** The local network IP address of the machine that you want the access control rule to apply to. Example: 192.168.0.50. Make sure that this is a static IP address or the system is in the static DHCP Client list (See Basic > DHCP).
- Machine Address:** The MAC address of the machine that you want the access control rule to apply to.
- Schedule:** Select a schedule of times when you want the policy to apply. If you do not see the schedule you need in the list of schedules, go to the Tools > Schedules screen and create a new schedule.
- Apply Web Filter:** With this option enabled, the specified system will only have access to the Web sites listed in the Web filter section.
- Log Internet Access:** If this option is enabled, all of the Web sites visited by the specified machine will be logged.
- Filter Ports:** By clicking the Filter Ports >> button you can specify that the rule enables access only to specific IP addresses and ports.
- Save:** Saves the new or edited access control rule in the Access Control Rules List. Repeat the process, creating an Access Control Rule for each of the devices on your LAN that needs access to the Internet. When finished updating Access Control Rules, you must still click the Save Settings button at the top of the page to make changes effective and permanent.

The screenshot shows the configuration interface for Access Control. The top section is titled 'ENABLE' and has a checkbox for 'Enable Access Control' which is checked. Below this is the 'ADD ACCESS CONTROL RULE' section. It includes a checkbox for 'Enable' (checked), a text field for 'Policy Name', a dropdown for 'Address Type' (set to 'IP'), and text input fields for 'IP Address' (0.0.0.0) and 'Machine Address' (with a 'Select Machine' dropdown). A 'Copy Your PC's MAC Address' button is visible. There are checkboxes for 'Apply Web Filter' and 'Log Internet Access', both currently unchecked. A 'Filter Ports >>' button is present, with a note: 'Block access to specific IP addresses and ports.' At the bottom of this section are 'Save' and 'Clear' buttons. Below the rule configuration is the 'ACCESS CONTROL RULES LIST' table with columns: Enable, Policy, Machine, Schedule, Web Filtering, and Logged.

*Advanced > Access Control*

## Access Control Rules List

This section shows the current Access Control rules. Any device that does not have a rule, cannot access the Internet. Entries can be modified by clicking on the paper and pencil icon. To delete an entry, click on the trash can icon. After you've completed all modifications or deletions, you must click the **Save Settings** button at the top of the page to save your changes. The router must reboot before new settings will take effect. You will be prompted to **Reboot the Device** or **Continue**. If you need to make additional settings changes, click **Continue**. If you are finished with your configuration settings, click the **Reboot the Device** button.

## Web Filter

The Web Filter section is where you add the Web site to be used for Access Control.

### Add/Edit Web Site

This field is where you can add Web sites to the Allowed Web List. The Allowed Web List is used for systems that have the Web filter option enabled in Access Control.

**Enable:** Entries in the Allowed Web Site List can be activated or deactivated with this checkbox. New entries are activated by default.

**Web Site:** Enter the URL (address) of the web site that you want to allow (such as **google.com**). Enter the most inclusive domain name. For instance, entering dlink.com will give you access to www.dlink.com and support.dlink.com. **Do not enter** the **http://** preceding the URL.

*Note: Many web sites construct pages with images and content from other web sites. Access will be forbidden if you do not enable all of the web sites used to construct a page. For example, to access my.yahoo.com, you must enable access to yahoo.com, yimg.com, and doubleclick.net.*

**Save:** Saves the new or modified Allowed Web Site in the Allowed Web Site List. When you are done editing the settings, you must click the Save Settings button at the top of the page to make the changes effective and permanent.

### Allowed Web Site List

This section lists the currently allowed web sites. Entries can be modified by clicking on the paper and pencil icon. To delete an entry, click on the trash can icon. After you've completed all modifications or deletions, you must click the **Save Settings** button at the top of the page to save your changes. The router must reboot before new settings will take effect. You will be prompted to **Reboot the Device** or **Continue**. If you need to make additional settings changes, click **Continue**. If you are finished with your configuration settings, click the **Reboot the Device** button.

ADD WEB SITE

Enable:

Web Site:  (eg: www.dlink.com)

Save Clear

ALLOWED WEB SITE LIST

Enable	Web Site
--------	----------

*Advanced > Web Filter*

## Mac Address Filters

The MAC (Media Access Controller) Address filter section is used to control network access based on the MAC Address of the network adapter. A MAC address is a unique ID assigned by the manufacturer of a networking device. This feature can be configured to ALLOW or DENY network/Internet access.

### Filter Settings

- Enable MAC Address Filter:** When this is enabled, depending on the mode selected, computers are granted or denied network access based on their MAC address.
- Mode:** When Allow is selected, only computers with MAC addresses listed in the MAC Address List are granted network access. When Deny is selected, any computer with a MAC address listed in the MAC Address List
- Filter Wireless Clients:** When this is selected, the MAC address filters will be applied to wireless network clients.
- Filter Wired Clients:** When this is selected, the MAC address filters will be applied to wired network clients.

### Add MAC Address

- Enable:** MAC address entries are activated or deactivated with this checkbox.
- MAC Address:** Enter the MAC address of the desired computer or connect to the router from the desired computer and click Copy Your PC's MAC Address button.
- Save:** Saves the new or modified MAC address in the MAC Address List. When you are done editing the settings, you must click the Save Settings button at the top of the page to make the changes effective and permanent.

### MAC Address List

This section lists the current MAC address filters. Entries can be modified by clicking on the paper and pencil icon. To delete an entry, click on the trash can icon. After you've completed all modifications or deletions, you must click the **Save Settings** button at the top of the page to save your changes. The router must reboot before new settings will take effect. You will be prompted to **Reboot the Device** or **Continue**. If you need to make additional settings changes, click **Continue**. If you are finished with your configuration settings, click the **Reboot the Device** button.

The screenshot displays the configuration interface for MAC Address Filters, organized into four main sections:

- ENABLE:** Contains a checkbox labeled "Enable MAC Address Filter" which is checked.
- FILTER SETTINGS:** Includes a "Mode" dropdown menu set to "only allow listed machines", and two checkboxes: "Filter Wireless Clients" (checked) and "Filter Wired Clients" (checked).
- ADD MAC ADDRESS:** Features an "Enable" checkbox (checked), a "MAC Address" input field with a "Select Machine" dropdown arrow, a "Copy Your PC's MAC Address" button, and "Save" and "Clear" buttons.
- MAC ADDRESS LIST:** Shows a heading "Deny access to everyone except the machines in this list:" and an "Enable" checkbox next to the text "MAC Address".

*Advanced > MAC Address Filter*



## Firewall

A firewall protects your network from the outside world. The D-Link Gaming Router offers a firewall type functionality. The SPI feature helps prevent cyber attacks. Sometimes you may want a computer exposed to the outside world for certain types of applications. If you choose to expose a computer, you can enable DMZ. DMZ is short for Demilitarized Zone. This option will expose the chosen computer completely to the outside world.

### Firewall Settings

**Enable SPI:** SPI (Stateful Packet Inspection, also known as dynamic packet filtering) helps to prevent cyber attacks by tracking more state per session. It validates that the traffic passing through the session conforms to the protocol. When SPI is enabled, the extra state information will be reported on the Status > Active sessions page.

**Enable DMZ:** If an application has trouble working from behind the router, you can expose one computer to the Internet and run the application on that computer.

*Note: Placing a computer in the DMZ may expose that computer to a variety of security risks. Use of this option is only recommended as a last resort.*

**DMZ IP Address:** Specify the IP address of the computer on the LAN that you want to have unrestricted Internet communication. If this computer obtains its IP address automatically using DHCP, be sure to make a static reservation on the Basic > DHCP page so that the IP address of the DMZ machine does not change.

After you've completed all modifications or deletions, you must click the **Save Settings** button at the top of the page to save your changes. The router must reboot before new settings will take effect. You will be prompted to **Reboot the Device** or **Continue**. If you need to make additional settings changes, click **Continue**. If you are finished with your configuration settings, click the **Reboot the Device** button.

FIREWALL SETTINGS

Enable SPI :

Enable DMZ :

DMZ IP Address :

*Advanced > Firewall*



## Inbound Filters

The Inbound Filters option is an advanced method of controlling data received from the Internet. With this feature you can configure inbound data filtering rules that control data based on IP Address, Protocol, and/or Port.

The Inbound Filter option is best suited for custom applications. For most applications you should use Virtual Server, Special Applications, or the Gaming section to create rules that will allow applications to communicate through the router.

### Add/Edit Inbound Filter Rule

- Enable:** Enables inbound filtering.
- Name:** Enter a name for the rule that is meaningful to you.
- Action:** The rule can be set to either allow or deny applicable messages.
- Source IP Range:** Defines the range of Internet addresses this rule applies to.
- Protocol:** Select the protocol used for this rule.
- Source Port Range:** Enter the range of ports that this rule applies to.
- Public Port Range:** Enter the range of WAN side ports associated with the servers on the LAN that this rule applies to.
- Schedule:** Select a schedule for the times when this rule should be in effect. If you do not see the schedule you need in the list of schedules, go to the Tools > Schedules screen and create a new schedule.
- Log:** Check this option if you want the router to add an entry to the log whenever a rule is enforced.
- Save:** Saves the new rule or modified existing rule to the Rules list. When you are done editing the settings, you must click the Save Settings button at the top of the page to make the changes effective and permanent.

### Inbound Filter Rules List

This section lists the current Inbound Filter rules. Entries can be modified by clicking on the paper and pencil icon. To delete an entry, click on the trash can icon. After you've completed all modifications or deletions, you must click the **Save Settings** button at the top of the page to save your changes. The router must reboot before new settings will take effect. You will be prompted to **Reboot the Device** or **Continue**. If you need to make additional settings changes, click **Continue**. If you are finished with your configuration settings, click the **Reboot the Device** button.

ADD INBOUND FILTER RULE

**Enable:**   
**Name:**   
**Action:** Deny   
**Source IP Range:** 0.0.0.0  to 255.255.255.255   
**Protocol:** Any   
**Source Port Range:** 1  to 65535   
**Public Port Range:** 1  to 65535   
**Schedule:** Always   
**Log:**

INBOUND FILTER RULES LIST

Enable	Name	Action	Source IP	Protocol / Ports	Schedule	Log?

*Advanced > Inbound Filters*

## Configuring an Inbound Filter Rule

When the Rule List is empty or none of the rules are enabled, all inbound data that corresponds to a connection that originated from inside the router or which corresponds to a Virtual Server, Gaming, or Special Application Rule is **ALLOWED** by default.

When rules are configured, the router compares incoming data packets against the rules in the list. It is very important to understand that the router examines each rule one by one in the order that they are listed in the Rule list until it finds a match. The packet will either be **DENIED** (Dropped) or **ALLOWED**. Once a match has been made, no further rules will be examined for that packet. If no rules match the data packet, it is **ALLOWED**. This means that to allow only a specific subset of traffic usually requires more than one rule to be entered.

Example:

You have configured a game server, using the **Advanced > Gaming** page, to play HALO: Combat Evolved with some friends. You would like to limit the access to your network and server to specific times of the day and only to your friends.

Next you would define a schedule on the **Tools > Schedule** page, called Gametime, which specifies a schedule of Friday and Saturday between 7PM and 11PM.

All of your friends use the same service provider and have IP addresses 67.150.220.117, 67.150.231.43, and 67.150.231.75. You have an option of defining a set of rules to match each one of these addresses individually or you may just decide that using an IP range that covers all of them is sufficient for your needs.

The first rule is to configure a **DENY** rule that will catch all of the traffic that arrives on these ports but does not match data from the sources you want to have access to your network. It is important to enter the **DENY** rule first since all subsequent rules will be added higher in the list and will be checked first. It should look similar to the figure on the right.

Notice that it covers all Source IP Address, Source Ports, and Times (Always), but is specifically tied to the Public Ports defined in the Game Rule List. This is because you do not want to accidentally block traffic for other applications. It is a good idea to turn on the log for this rule so that you can check in the log for anything that is filtered inappropriately.

Next configure the **ALLOW** rules. In the example on the right, two rules are used to cover the three IP addresses.

GAME RULES LIST					
Enable	Name	IP Address	TCP Ports	UDP Ports	Schedule
<input checked="" type="checkbox"/>	Halo: Combat Evolved	192.168.0.20		2302, 2303	Always

INBOUND FILTER RULES LIST						
Enable	Name	Action	Source IP	Protocol / Ports	Schedule	Log?
<input checked="" type="checkbox"/>	HALO: CE DENY	Deny	0.0.0.0-255.255.255.255	UDP/ 1-65535/ 2302-2303	Always	Yes

INBOUND FILTER RULES LIST						
Enable	Name	Action	Source IP	Protocol / Ports	Schedule	Log?
<input checked="" type="checkbox"/>	HALO: CE 2	Allow	67.150.231.1-67.150.231.255	UDP/ 1-65535/ 2302-2303	GAMETIME	No
<input checked="" type="checkbox"/>	HALO: CE 1	Allow	67.150.220.117-67.150.220.117	Any/ 1-65535/ 2302-2303	GAMETIME	No
<input checked="" type="checkbox"/>	HALO: CE DENY	Deny	0.0.0.0-255.255.255.255	UDP/ 1-65535/ 2302-2303	Always	Yes

## Advanced Wireless

### Advanced Wireless Settings

**Fragmentation Threshold:** This setting should remain at its default setting of 3200. If you experience a high packet error rate, you may slightly adjust your “Fragmentation” value somewhere in the between the recommended range of 256 to 3200. Setting the Fragmentation value too low may result in poor performance.

**RTS Threshold:** This setting should remain at its default setting of 3200. If you encounter inconsistent data flow, only minor modifications to the value are recommended.

**Beacon Period:** Beacons are packets sent by a wireless router to synchronize wireless devices. Specify a Beacon Period value between 20 and 1000. The default value is set to 100 milliseconds.

**DTIM Interval:** The default value is set to 1. Valid settings are between 1 and 255. A DTIM is a countdown informing clients of the next window for listening to broadcast and multicast messages. When the wireless router has buffered broadcast or multicast messages for associated clients, it sends the next DTIM with a DTIM Interval value. Wireless clients hear the beacons and awaken to receive the broadcast and multicast messages.

**802.11d Enable:** This enables 802.11d operation. **802.11d** is a wireless specification developed to allow implementation of wireless networks in countries that cannot use the 802.11 standard. This feature should only be enabled if you are in a country that requires it.

**WDS Enable:** When WDS is enabled, this access point functions as a wireless bridge and is able to wirelessly communicate with other AP’s via WDS links.

*Note: WDS is incompatible with WPA. Both features cannot be used at the same time. A WDS link is bidirectional so this AP must know the MAC address (creates the WDS link) of the other AP, and the other AP must have a WDS link back to this AP (the router).*

**WDS AP MAC Address:** Specifies one-half of the WDS link. The other AP must also have the MAC address of this AP (the router) to create the WDS link back to the router.

ADVANCED WIRELESS SETTINGS

Fragmentation Threshold : 3200 (256..65535)

RTS Threshold : 3200 (1..65535)

Beacon Period : 100 (1..65535)

DTIM Interval : 1 (1..255)

802.11d Enable :

WDS Enable :

WDS AP MAC Address : 1:

2:

3:

4:

5:

6:

(Leave blank to disable WDS for that slot)

*Advanced > Advanced Wireless*

# Tools

## Admin

The Admin option is used to set a password for access to the Web-based management. By default there is no password configured. It is highly recommended that you create a password to keep your new router secure.

## Password

**Password:** Enter a password the will grant access to the Web-based management interface.

## Administration

**Gateway Name:** The name of the router can be changed here.

**Enable Remote Management:** Enabling this allows you to manage the router from anywhere with an Internet connection.

**Remote Management Server Port:** The port that will be accessed from the Internet.

**Admin Idle Timeout:** The amount of time before the administration session is closed when there is no activity. **Note: This applies to local or remote administration.**

## Save and Restore Configuration

**Save Settings:** This option allows you to save the router configuration to a file on your computer. Be sure to save the configuration before performing a firmware upgrade.

**Restore Settings:** Use this option to load previously saved router configuration settings.

The screenshot displays three sections of the configuration interface:

- PASSWORD:** A section with the instruction "Please enter the same password into both boxes, for confirmation." It contains two input fields labeled "Password:" and "Verify Password:".
- ADMINISTRATION:** A section with four fields: "Gateway Name:" (containing "GamerLounge"), "Enable Remote Management:" (a checkbox), "Remote Admin Port:" (containing "8080"), and "Admin Idle Timeout:" (containing "15" with "(minutes)" next to it).
- SAVE AND RESTORE CONFIGURATION:** A section with a "Browse..." button, a "Restore Configuration from File" button, a "Save Configuration" button, and a "Cancel" button.

*Tools > Admin*

## Time

The Time Configuration option allows you to configure, update, and maintain the correct time on the internal system clock. From this section you can set the time zone that you are in and set the Time Server. Daylight Saving can also be configured to automatically adjust the time when needed.

### Time Configuration

<b>Time Zone:</b>	Select your local time zone from pull down menu.
<b>Daylight Saving Enable:</b>	Check this option if your location observes daylight saving time.
<b>Daylight Saving Offset:</b>	Select the time offset if your location observes daylight saving time.
<b>Synchronize time with NTP server:</b>	Select this option if you want the router's clock synchronized to a Time Server over the Internet. If you are using schedules or logs, this is the best way to ensure that the schedules and logs are kept accurate
<b>NTP Server:</b>	Select a Time Server for synchronization. You can type in the address of a time server or select one from the list. If you have trouble using one server, select another.

### Set the Date and Time

If you do not have the NTP Server option in effect, you can either manually set the time for your router here or you can click the Copy Your Computer's Time Settings button to copy the time from the computer you are using (Note: Be sure the computer's time is set correctly).

*Note: If the router loses power for any reason, it cannot keep its clock running and will not have the correct time when it is started again. To maintain the correct time for schedules and logs, either you must enter the correct time after you restart the router or you must enable the NTP Server option.*

The screenshot shows two panels from the router's configuration interface. The top panel, titled "TIME CONFIGURATION", includes a "Time Zone" dropdown menu set to "(GMT-08:00) Pacific Time (US/Canada), Tijuana", a "Daylight Saving Enable" checkbox, a "Daylight Saving offset" dropdown set to "+1:00", an "Enable NTP server" checkbox, and an "NTP Server Used" field with a "Select NTP Server" dropdown. The bottom panel, titled "SET THE DATE AND TIME", shows the "Current Gateway Time" as "Monday, October 11, 2004 9:20:14 PM". It features dropdown menus for Year (2004), Month (Oct), Day (11), Hour (9), Minute (20), and Second (13), along with a PM/AM selector. At the bottom of this panel are two buttons: "Set the Time" and "Copy Your Computer's Time Settings".

*Tools > Time*

## Schedules

Schedules can be created for use with enforcing rules. For example, if you want to restrict web access to Mon-Fri from 3pm to 8pm. You could create a schedule selecting Mon, Tue, Wed, Thu, and Fri and enter a Start Time of 3pm and End Time of 8pm.

### Add/Edit Schedule Rule

<b>Schedule Name:</b>	Name the schedule, such as Weekday rule.
<b>Day(s):</b>	Place a checkmark in the boxes for the desired days or select the All Week radio button to select all seven days of the week.
<b>All Day:</b>	Select this option if you want this schedule in effect all day for the selected day(s).
<b>Start Time:</b>	If you don't use the All Day option, then you enter in the time here. The start time is entered in two fields. The first box is for the hour and the second box is for the minute. Email events are triggered only by the start time.
<b>End Time:</b>	The end time is entered in the same format as the start time. The hour in the first box and the minutes in the second box. The end time is used for most other rules, but is not used for email events.
<b>Save:</b>	Saves the new or modified Schedule in the Schedule Rules List. When you are done editing the settings, you must click the Save Settings button at the top of the page to make the changes effective and permanent.

### Schedule Rules List

This list displays all of the currently defined schedules. Entries can be modified by clicking on the paper and pencil icon. To delete an entry, click on the trash can icon. After you've completed all modifications or deletions, you must click the **Save Settings** button at the top of the page to save your changes. The router must reboot before new settings will take effect. You will be prompted to **Reboot the Device** or **Continue**. If you need to make additional settings changes, click **Continue**. If you are finished with your configuration settings, click the **Reboot the Device** button.

ADD SCHEDULE RULE

Name:

Day(s):  All Week  Select Day(s)

Sun  Mon  Tue  Wed  Thu  Fri  Sat

All Day - 24 hrs:

Start Time:  :  AM (hour:minute, 12 hour time)

End Time:  :  AM (hour:minute, 12 hour time)

---

SCHEDULE RULES LIST

Name	Day(s)	Time Frame

*Tools > Schedules*

## Syslog

This section allows you to archive your log files to a Syslog Server.

- Enable Logging To Syslog Server:** Enable this option to output the router logs to a Syslog Server on your network.
- Syslog Server IP Address:** Enter the IP address of the Syslog Server.

ENABLE

Enable Logging To Syslog Server:

---

SYSLOG SETTINGS

Syslog Server IP Address:

*Tools > Syslog*

## Email

The Email feature can be used to send the system log files, router alert messages, and firmware update notification to your email address.

### Email Settings

- Enable Email Notification:** When this option is enabled, router activity logs are e-mailed to a designated email address.
- From Email address:** This email address will appear as the sender when you receive a log file or firmware upgrade notification via email.
- To Email address:** Enter the email address where you want the email sent.
- SMTP Server Address:** Enter the SMTP server address for sending email.
- Enable Authentication:** If your SMTP server requires authentication, select this option.
- Account Name:** Enter your account for sending email.
- Password:** Enter the password associated with the account.
- Verify Password:** Re-type the password associated with the account.

ENABLE

Enable Email Notification:

---

EMAIL SETTINGS

From Email Address:

To Email Address:

SMTP Server Address:

Enable Authentication:

Account Name:

Password:

Verify Password:

---

EMAIL LOG WHEN FULL OR ON SCHEDULE

On Log Full:  On Schedule:

Schedule:

*Tools > Email*

### Email Log When Full or on Schedule

- On Log Full:** When this option is selected, logs will be sent via email when the log is full.
- On Schedule:** Selecting this option will send the logs via email according to schedule.
- Schedule:** This option is enabled when On Schedule is selected. You can select a schedule from the list of defined schedules. To create a schedule, go to Tools > Schedules.



## System

The System Settings section allows you to reboot the device or restore the router to the factory default settings. Restoring the unit to the factory default settings will erase all settings including any rules that you've created.

### System Commands

**Reboot the Device:** This will restart the router. Useful for restarting when you are not near the device.

**Restore all Settings to the Factory Defaults:** This option will restore all configuration settings back to the factory defaults. Any settings that have not been saved will be lost. If you want to save your router configuration settings, you can do so from the Admin page.



*Tools > System*

## Firmware

The Firmware Upgrade section can be used to update your router to the latest firmware code to improve functionality and performance. To check for the latest firmware, click the Check Online Now button. If you would like to be notified when new firmware is released, place a checkmark in the box next to Email Notification of Newer Firmware Version.

### Firmware Information

This section displays the Current Firmware Version and the Latest Firmware Version. To verify the latest firmware version, the gaming router checks the Internet. To check for the latest version, click the **Check Online Now for Latest Firmware Version** button.

### Firmware Upgrade

To upgrade the firmware, follow these steps:

1. Click the [Browse] button to locate the D-Link upgrade file on your computer.
2. Once you have found the file to be used, click the Upload button below to start the firmware upgrade process.
3. Wait for the router to reboot
4. Confirm updated firmware revision on status page

Firmware Version: 1.3, 18 Mar 2005

### Firmware Upgrade Notification Options

#### Automatically Check Online for Latest Firmware Version:

When this option is enabled, your router will check online periodically to see if a newer version of the firmware is available.

#### Email Notification of Newer Firmware Version:

When this option is enabled, an email will be sent to the email address configured in the email section whenever new firmware is available.

The screenshot shows the router's configuration interface for firmware. It is divided into three main sections:

- FIRMWARE INFORMATION:** Displays 'Current Firmware Version : 1.3' and 'Latest Firmware Version : 1.3'. Below this is a blue button labeled 'Check Online Now for Latest Firmware Version'.
- FIRMWARE UPGRADE:** Contains a red note: 'Note: Some firmware upgrades reset the router's configuration options to the factory defaults. Before performing an upgrade, be sure to save the current configuration from the Tools -> Admin screen.' Below the note is a text box for the firmware file name, with 'Browse...' and 'Upload' buttons.
- FIRMWARE UPGRADE NOTIFICATION OPTIONS:** Contains two checkboxes: 'Automatically Check Online for Latest Firmware Version' (checked) and 'Email Notification of Newer Firmware Version' (unchecked).

*Tools > Firmware*

## Dynamic DNS

The DDNS feature allows you to host a server (Web, FTP, Game Server, etc...) using a domain name that you have purchased (www.whateveryournameis.com) with your dynamically assigned IP address. Most broadband Internet Service Providers assign dynamic (changing) IP addresses. Using a DDNS service provider, your friends can enter in your domain name to connect to your server no matter what your IP address is.

<b>Enable Dynamic DNS:</b>	Enable this option only if you have purchased your own domain name and registered with a dynamic DNS service provider.
<b>Server Address:</b>	Select a dynamic DNS service provider from the pull-down list.
<b>Host Name:</b>	Enter your host name.
<b>Username or Key:</b>	Enter the username or key provided by your service provider.
<b>Password or Key:</b>	Enter the password or key provided by your service provider.
<b>Verify Password or Key:</b>	Re-type the password or key provided by your service provider.
<b>Timeout:</b>	The time between periodic updates to the Dynamic DNS, if your dynamic IP address has not change. The timeout period is entered in hours.

*Note: Option will disable it self if Username and Password or keys are incorrect.*

**ENABLE**

Enable Dynamic DNS :

---

**DYNAMIC DNS**

Server Address :

Host Name :

Username or Key :

Password or Key :

Verify Password or Key :

Timeout :  (hours)

*Tools > Dynamic DNS*

# Status

The Status items are mainly informational.

## Device Info

The Device Info page displays your Router settings. Options cannot be modified from this page.

### General

<b>Time:</b>	Displays the time and date that the router is set to.
<b>Firmware Version:</b>	Displays the currently loaded firmware version.

### WAN

<b>Connection Type:</b>	The Internet connection type that is being used.
<b>MAC Address:</b>	The MAC address that is seen over the Internet.
<b>IP Address:</b>	The IP address being used on the WAN port.
<b>Subnet Mask:</b>	The subnet mask used on the WAN port.
<b>Default Gateway:</b>	The default gateway of the WAN port.
<b>Primary DNS Server:</b>	The Primary DNS Server address.
<b>Secondary DNS Server:</b>	The Secondary DNS Server address.

### LAN

<b>MAC Address:</b>	The MAC address displayed for your local area network.
<b>IP Address:</b>	The IP address of the router on your local area network.
<b>Subnet Mask:</b>	The subnet mask of the router on your local area network.
<b>DHCP Server:</b>	Indicates if the router is acting as a DHCP server on the local area network.

GENERAL	
Time :	Saturday, January 31, 2004 2:21:45 PM
Firmware Version :	1.3, 18 Mar 2005
WAN	
Connection Type :	DHCP
MAC Address :	00:11:95:8B:EB:D2
IP Address :	0.0.0.0
Subnet Mask :	0.0.0.0
Default Gateway :	0.0.0.0
Primary DNS Server :	0.0.0.0
Secondary DNS Server :	0.0.0.0
Bigpond Server :	Disabled
LAN	
MAC Address :	00:11:95:8B:EB:D3
IP Address :	192.168.0.1
Subnet Mask :	255.255.255.0
DHCP Server :	Enabled
WIRELESS LAN	
Wireless Radio :	On
MAC Address :	00:0FA3:1A:DS:F9
Network Name (SSID) :	default
Channel :	6
Turbo Mode :	Enabled
Security Type :	WPA-Personal

*Status > Device Info*

## Wireless LAN

<b>Wireless Radio:</b>	Indicates whether wireless networking is on or off.
<b>MAC Address:</b>	The MAC address displayed for your wireless network.
<b>Network Name (SSID):</b>	The Network Name, also referred to as SSID, of your wireless network.
<b>Channel:</b>	The channel being used by the router for broadcasting on the wireless network.
<b>Turbo Mode:</b>	Indicates whether Turbo Mode is enabled or disabled.
<b>Security Type:</b>	Indicates the type of wireless security being used.

## Wireless

This screen displays the number of wireless clients that are connected to the router, the MAC address of each system connecting wirelessly, and the IP address of each system connecting wirelessly.

## Routing

This page displays the routing details configured for the router.

A gateway value of 0.0.0.0 means there is no next hop. The IP address is directly connected to the router on the interface specified, LAN or WAN. A value of 0.0.0.0 in both the destination IP and netmask means that this is the default route.

ROUTING TABLE				
Destination IP	Netmask	Gateway	Metric	Interface
192.168.0.2	255.255.255.255	0.0.0.0	1	LAN
192.168.0.255	255.255.255.255	0.0.0.0	1	LAN
192.168.0.1	255.255.255.255	0.0.0.0	1	LAN
192.168.0.0	255.255.255.0	0.0.0.0	1	LAN

*Status > Routing*

## Logs

The router automatically logs (records) events of possible interest in its internal memory. If there isn't enough internal memory for all events, logs of older events are deleted but logs of the latest events are retained. The Logs option allows you to view the router logs. You can define what types of events you want to view and the level of the events to view. This router also has external Syslog Server support so you can send the log files to a computer on your network that is running a Syslog utility.

## Log Options

### What to View:

You can select the types of messages that you want to display from the log. Firewall & Security, System, and Router Status messages can be selected.

### View Levels:

There are three levels of message importance: Informational, Warning, and Critical. Select the levels that you want displayed in the log.

### Apply Log Settings Now:

Will filter the log results so that only the selected options appear.

## Log Details

### Refresh:

Updates the log details on the screen so it displays any recent activity.

### Clear:

Clears all of the log contents.

### Email Now:

This option will send a copy of the router log to the email address configured in the Tools > Email screen.

### Save Log:

This option will save the router to a log file on your computer.

## Statistics

### Network Traffic Stats

#### Refresh Statistics:

Updates the screen with the latest router statistics.

#### Clear Statistics:

Clears all of the values on the screen.

**LOG OPTIONS**

<b>What to Log:</b>	<input checked="" type="checkbox"/> Firewall & Security	<input checked="" type="checkbox"/> System	<input checked="" type="checkbox"/> Gateway Status
<b>Logging Levels:</b>	<input checked="" type="checkbox"/> Critical	<input checked="" type="checkbox"/> Warning	<input checked="" type="checkbox"/> Informational

**LOG DETAILS**

```

[INFO] Mon Oct 11 20:29:05 2004 Log viewed by IP address 192.168.0.165
[WARN] Mon Oct 11 20:04:05 2004 Authentication by IP address 192.168.0.165 - Successful
[INFO] Mon Oct 11 19:58:09 2004 Lease 192.168.0.165 renewed by client 000C76586A1B
[INFO] Mon Oct 11 19:58:08 2004 Assigned new lease 192.168.0.165 to client 000C76586A1B
[INFO] Mon Oct 11 19:57:00 2004 Initialization complete, starting DHCP server
[INFO] Mon Oct 11 19:56:55 2004 Gateway initialized
[INFO] Mon Oct 11 19:56:53 2004 Allowed Internet access to everyone
          
```

*Status > Logs*

## LAN Statistics

<b>Sent:</b>	The number of packets transmitted to the local area network.
<b>Received:</b>	The number of packets received from the local area network.
<b>TX Packets Dropped:</b>	The number of transmit packets dropped on the local area network.
<b>RX Packets Dropped:</b>	The number of receive packets dropped on the local area network.
<b>Collisions:</b>	The number of collisions on the local area network.
<b>Errors:</b>	The number of errors occurring on the local area network.

## WAN Statistics

<b>Sent:</b>	The number of packets transmitted to the Internet.
<b>Received:</b>	The number of packets received from the Internet.
<b>TX Packets Dropped:</b>	The number of transmit packets sent to the WAN port that were dropped.
<b>RX Packets Dropped:</b>	The number of receive packets sent to the WAN port that were dropped.
<b>Collisions:</b>	The number of collisions involving packets intended for the WAN port.
<b>Errors:</b>	The number of errors occurring with packets intended for the WAN port.

## Wireless Statistics

<b>Sent:</b>	The number of packets sent to the wireless network.
<b>Received:</b>	The number of packets received from the wireless network.
<b>TX Packets Dropped:</b>	The amount of transmit packets dropped.
<b>Errors:</b>	The number of errors relating to packets to/from the wireless network.

## Active Sessions

The Active Session page displays the full details of active sessions to your router.



# Appendix

## Securing Your Network

### 1. Change Admin Password

Changing the password to access your new router is the first step in securing your network. This can be done through the Wizard or on the Admin Page of the Tools tab. There is no password by default and hackers will know this when trying to access your network. Make sure that the password you choose is not commonly known or something that is easy to guess such as your last name or your pet's name. Try using a combination of letters and numbers to deter intruders from hacking into your network. Your private information should be kept private.

### 2. Disable DHCP and use Static IP addresses or Use Static DHCP and limit scope to the amount of users on your network.

In the event that an intruder manages to gain access to your network, having DHCP enabled makes it easier for the intruder to access other computers on your network. There are two methods for getting around this. One is to disable DHCP and use static IP addressing on all the devices connected to your network. This would mean that the intruder would have to know what IP network your devices are on in order to access them. The second way is to change the scope of the DHCP server to only include enough IP addresses for the devices in your network. You can then use the Static DHCP feature of the router to assign an IP address to each device on your network. Static DHCP still dynamically assigns an IP address to your network devices but only allows for those defined devices to obtain an IP address.

### 3. Change the default LAN IP address

Change the default LAN IP address from 192.168.0.1 to an alternate IP address. There are 3 ranges of IP addresses that have been reserved for use on Private Networks.

**10.0.0.0** - **10.255.255.255 (10.0.0.0/8)**

**172.16.0.0** - **172.31.255.255 (172.16.0.0/12)**

**192.168.0.0** - **192.168.255.255 (192.168.0.0/16)**

D-Link routers use 192.168.0.1 as their default LAN IP address. Choosing an alternate IP address lessens the probability of an intruders knowing what IP network your devices are on.

#### 4. Changing the Wireless Network Name (SSID - used for wireless devices only)

It is always a good idea to change the wireless network name (SSID) from the default value. Leaving it in the default state is usually a good indication to intruders that all settings (including security) are probably defaults. This setting identifies your wireless network. Make sure that the name you choose is not commonly known or something that is easy to guess. Try using a combination of letters and numbers to add complexity to it.

#### 5. Set the Visibility Status to Invisible

Wireless routers typically broadcast the wireless network name (SSID) to users attempting to connect to a wireless network. By setting the Visibility Status to Invisible, all devices attempting to connect to the router will need to know the wireless network name (SSID) in order to connect.

#### 6. Enable WPA Personal or Enterprise

Along with changing the wireless network name and setting the visibility status to invisible, we highly recommend that you enable some sort of encryption feature. There are different methods of securing wireless transmissions, but the most effective is WPA-Personal and WPA-Enterprise. WPA-Personal is easier to configure but does not offer the extensive level of security that WPA Enterprise does. If you have the infrastructure to support WPA Enterprise, we recommend that you use this method. If not, then WPA-Personal will suffice.

#### 7. Set up MAC Filtering

Each networking device (router, access point, wireless card, etc.) on a network contains a unique hexadecimal number that identifies that specific product. This number is referred to as a MAC address. MAC filtering allows you to create a list of the MAC address of each device on your network and only allows these specific devices to associate with your network. With this feature enabled, devices attempting to connect to your network with a MAC address that is not in the list you created, will be denied access.

# Glossary

## A

---

**Access Control List** - ACL. Database of network devices that are allowed to access resources on the network.

**Access Point** - AP. Device that allows wireless clients to connect to it and access the network

**Ad-hoc network** - Peer-to-Peer network between wireless clients

**Address Resolution Protocol** - ARP. Used to map MAC addresses to IP addresses so that conversions can be made in both directions.

**ADSL** - Asymmetric Digital Subscriber Line

**Advanced Encryption Standard** - AES. Government encryption standard

**Alphanumeric** - Characters A-Z and 0-9

**Antenna** - Used to transmit and receive RF signals.

**AppleTalk** – A set of Local Area Network protocols developed by Apple for their computer systems

**AppleTalk Address Resolution Protocol** – AARP. Used to map the MAC addresses of Apple computers to their AppleTalk network addresses, so that conversions can be made in both directions.

**Application layer** - 7th Layer of the OSI model. Provides services to applications to ensure that they can communicate properly with other applications on a network.

**ASCII** - American Standard Code for Information Interchange. This system of characters is most commonly used for text files

**Attenuation** – The loss in strength of digital and analog signals. The loss is greater when the signal is being transmitted over long distances.

**Authentication** –To provide credentials, like a Password, in order to verify that the person or device is really who they are claiming to be

**Automatic Private IP Addressing** - APIPA. An IP address that a Windows computer will assign itself when it is configured to obtain an IP address automatically but no DHCP server is available on the network

## B

---

**Backward Compatible** - The ability for new devices to communicate and interact with older legacy devices to guarantee interoperability

**Bandwidth** - The maximum amount of bytes or bits per second that can be transmitted to and from a network device

**Basic Input/Output System** – BIOS. A program that the processor of a computer uses to startup the system once it is turned on

**Baud** – Data transmission speed

**Bit rate** – The amount of bits that pass in given amount of time

**bit/sec** – bits per second

**BOOTP** – Bootstrap Protocol. Allows for computers to be booted up and given an IP address with no user intervention

**Bottleneck** – A time during processes when something causes the process to slowdown or stop all together

**Broadband** – A wide band of frequencies available for transmitting data

**Broadcast** – Transmitting data in all directions at once

**Browser** – A program that allows you to access resources on the web and provides them to you graphically

## C

---

**Cable modem** – A device that allows you to connect a computer up to a coaxial cable and receive Internet access from your Cable provider

**CardBus** – A newer version of the PC Card or PCMCIA interface. It supports a 32-bit data path, DMA, and consumes less voltage

**Carrier Sense Multiple Access/Collision Avoidance** – CSMA/CA

**Carrier Sense Multiple Access/Collision Detect** – CSMA/CD

**CAT 5** – Category 5. Used for 10/100 Mbps or 1Gbps Ethernet connections

**Client** – A program or user that requests data from a server

**Collision** – When do two devices on the same Ethernet network try and transmit data at the exact same time.

**Cookie** – Information that is stored on the hard drive of your computer that holds your preferences to the site that gave your computer the cookie

**CSMA/CA** – Carrier Sense Multiple Access/Collision Avoidance

**CSMA/CD** – Carrier Sense Multiple Access/Collision Detection

## D

**Data** – Information that has been translated into binary so that it can be processed or moved to another device

**Data Encryption Standard** – Uses a randomly selected 56-bit key that must be known by both the sender and the receiver when information is exchanged

**Data-Link layer** – The second layer of the OSI model. Controls the movement of data on the physical link of a network

**Database** – Organizes information so that it can be managed updated, as well as easily accessed by users or applications.

**DB-25** – A 25 pin male connector for attaching External modems or RS-232 serial devices

**DB-9** – A 9 pin connector for RS-232 connections

**dBd** - decibels related to dipole antenna

**dBi** - decibels relative to isotropic radiator

**dBm** - decibels relative to one milliwatt

**Decrypt** – To unscramble an encrypted message back into plain text

**Default** – A predetermined value or setting that is used by a program when no user input has been entered for this value or setting

**Demilitarized zone – DMZ.** A single computer or group of computers that can be accessed by both users on the Internet as well as users on the Local Network, but that is not protected by the same security as the Local Network.

**DHCP – Dynamic Host Configuration Protocol.** Used to automatically assign IP addresses from a predefined pool of addresses to computers or devices that requests them

**Digital certificate** – An electronic method of providing credentials to a server in order to have access to it or a network

**Direct Sequence Spread Spectrum** – DSSS. Modulation technique used by 802.11b wireless devices

**DNS – Domain Name System.** Translates Domain Names to IP addresses

**DOCSIS** – Data Over Cable Service Interface Specifications. The standard interface for cable modems

**Domain name** – A name that is associated with an IP address

**Download** – To send a request from one computer to another and have the file transmitted back to the requesting computer

**DSL** – Digital Subscriber Line. High bandwidth Internet connection over telephone lines

**Duplex** – Sending and Receiving data transmissions at the same time

**Dynamic DNS service** – DDNS is provided by companies to allow users with Dynamic IP addresses to obtain a Domain Name that will always be linked to their changing IP address. The IP address is updated by either client software running on a computer or by a router that supports DDNS, whenever the IP address changes

**Dynamic IP address** – IP address that is assigned by a DHCP server and that may change. Cable Internet providers usually use this method to assign IP addresses to their customers.

## E

---

**EAP** – Extensible Authentication Protocol

**Email** – Electronic Mail is a computer-stored message that is transmitted over the Internet

**Encryption** – Converting data into cyphertext so that it cannot be easily read

**Enterprise** – Large organizations that use computers

**Ethernet** – The most widely used technology for Local Area Networks.

## F

---

**Fiber optic** – A way of sending data through light impulses over glass or plastic wire or fiber

**File server** – A computer on a network that stores data so that the other computers on the network can all access it

**File sharing** – Allowing data from computers on a network to be accessed by other computers on the network will different levels of access rights

**Firewall** – A device that protects resources of the Local Area Network from unauthorized users outside of the local network

**Firmware** – Programming that is inserted into a hardware device that tells it how to function

**Fragmentation** – Breaking up data into smaller pieces to make it easier to store

**FTP** – File Transfer Protocol. Easiest way to transfer files between computers on the Internet

**Full-duplex** – Sending and Receiving data at the same time

## G

---

**Gain** – The amount an amplifier boosts the wireless signal

**Gateway** – A device that connects your network to another, like the internet

**Gbps** – Gigabits per second

**Gigabit Ethernet** – Transmission technology that provides a data rate of 1 billion bits per second

**Graphical user interface** – GUI

## H

---

**H.323** – A standard that provides consistency of voice and video transmissions and compatibility for videoconferencing devices

**Half-duplex** – Data cannot be transmitted and received at the same time

**Hashing** – Transforming a string of characters into a shorter string with a predefined length

**Hexadecimal** – Characters 0-9 and A-F

**HomePNA** – Networking over telephone lines

**HomeRF** – Networking standard that combines 802.11b and DECT (Digital Enhanced Cordless Telecommunication) that provides speeds up to 1.6 Mbps and a distance of 150 ft using a Frequency Hopping transmission method

**Hop** – The action of data packets being transmitted from one router to another

**Host** – Computer on a network

**HTTP** – Hypertext Transfer Protocol is used to transfer files from HTTP servers (web servers) to HTTP clients (web browsers)

**HTTPS** – HTTP over SSL is used to encrypt and decrypt HTTP transmissions

**Hub** – A networking device that connects multiple devices together

**I**

---

**ICMP** – Internet Control Message Protocol

**IEEE** – Institute of Electrical and Electronics Engineers

**IETF** – Internet Engineering Task Force

**IGMP** – Internet Group Management Protocol is used to make sure that computers can report their multicast group membership to adjacent routers

**IIS** – Internet Information Server is a WEB server and FTP server provided by Microsoft

**IKE** – Internet Key Exchange is used to ensure security for VPN connections

**Infrastructure** – In terms of a wireless network, this is when wireless clients use an Access Point to gain access to the network

**Internet** – A system of worldwide networks which use TCP/IP to allow for resources to be accessed from computers around the world

**Internet Explorer** – A World Wide Web browser created and provided by Microsoft

**Internet Protocol** – The method of transferring data from one computer to another on the Internet

**Internet Protocol Security** – IPsec provides security at the packet processing layer of network communication

**Internet Service Provider** – An ISP provides access to the Internet to individuals or companies

**Interoperability** – The ability for products to interact with other products without much customer interaction

**Intranet** – A private network



**Intrusion Detection** – A type of security that scans a network to detect attacks coming from inside and outside of the network

**IP** – Internet Protocol

**IP address** – A 32-bit number, when talking about Internet Protocol Version 4, that identifies each computer that transmits data on the Internet or on an Intranet

**IPsec** – Internet Protocol Security

**IPv6** – Internet Protocol Version 6 uses 128-bit addresses and was developed to solve the problem that we face of running out of IP version 4 addresses

**IPX** – Internetwork Packet Exchange is a networking protocol developed by Novell to enable their Netware clients and servers to communicate

**ISP** – Internet Service Provider

## J

---

**Java** – A programming language used to create programs and applets for web pages

## K

---

**Kbps** – Kilobits per second

**Kbyte** - Kilobyte

**Kerberos** – A method of securing and authenticating requests for services on a network

## L

---

**LAN** – Local Area Network

**Latency** – The amount of time that it takes a packet to get from the one point to another on a network. Also referred to as delay

**LED** - Light Emitting Diode

**Legacy** – Older devices or technology

**Local Area Network** – A group of computers in a building that usually access files from a server

## M

---

**MAC address** – A unique hardware address for devices on a Local Area Network

**MDI** – Medium Dependent Interface is an Ethernet port for a connection to a straight-through cable

**MDIX** - Medium Dependent Interface Crossover, is an Ethernet port for a connection to a crossover cable

**Megabit** - Mb

**Megabyte** - MB

**Megabits per second** - Mbps

**MIB** – Management Information Base is a set of objects that can be managed by using SNMP

**Modem** – A device that Modulates digital signals from a computer to an analog signal in order to transmit the signal over phone lines. It also Demodulates the analog signals coming from the phone lines to digital signals for your computer

**MPPE** – Microsoft Point-to-Point Encryption is used to secure data transmissions over PPTP connections

**MTU** – Maximum Transmission Unit is the largest packet that can be transmitted on a packet-based network like the Internet

**Multicast** – Sending data from one device to many devices on a network

## N

---

**NAT** – Network Address Translation allows many private IP addresses to connect to the Internet, or another network, through one IP address

**NetBEUI** – NetBIOS Extended User Interface is a Local Area Network communication protocol. This is an updated version of NetBIOS

**NetBIOS** – Network Basic Input/Output System

**Netmask** – Determines what portion of an IP address designates the Network and which part designates the Host

**NetWare** – A Server Software developed by Novell

**Network Interface Card** – A card installed in a computer or built onto the motherboard that allows the computer to connect to a network

**Network layer** – The third layer of the OSI model which handles the routing of traffic on a network

**Network Time Protocol** – Used to synchronize the time of all the computers in a network

**NIC** – Network Interface Card

**NTP** – Network Time Protocol

## O

---

**OFDM** – Orthogonal Frequency-Division Multiplexing is the modulation technique for both 802.11a and 802.11g

**OSI** – Open Systems Interconnection is the reference model for how data should travel between two devices on a network

**OSPF** – Open Shortest Path First is a routing protocol that is used more than RIP in larger scale networks because only changes to the routing table are sent to all the other routers in the network as opposed to sending the entire routing table at a regular interval, which is how RIP functions

## P

---

**Password** - A sequence of characters that is used to authenticate requests to resources on a network

**Personal Area Network** – The interconnection of networking devices within a range of 10 meters

**Physical layer** – The first layer of the OSI model. Provides the hardware means of transmitting electrical signals on a data carrier

**PoE** – Power over Ethernet is the means of transmitting electricity over the unused pairs in a category 5 Ethernet cable

**POP 3** – Post Office Protocol 3 is used for receiving email

**PPP** – Point-to-Point Protocol is used for two computers to communicate with each other over a serial interface, like a phone line

**PPPoE** – Point-to-Point Protocol over Ethernet is used to connect multiple computers to a remote server over Ethernet

**PPTP** – Point-to-Point Tunneling Protocol is used for creating VPN tunnels over the Internet between two networks

**Preamble** – Used to synchronize communication timing between devices on a network

## Q

---

**QoS** – Quality of Service

## R

---

**RADIUS** – Remote Authentication Dial-In User Service allows for remote users to dial into a central server and be authenticated in order to access resources on a network

**Rendezvous** – Apple's version of UPnP, which allows for devices on a network to discover each other and be connected without the need to configure any settings

**Repeater** – Retransmits the signal of an Access Point in order to extend its coverage

**RIP** – Routing Information Protocol is used to synchronize the routing table of all the routers on a network

**RJ-11** – The most commonly used connection method for telephones

**RJ-45** - The most commonly used connection method for Ethernet

**RS-232C** – The interface for serial communication between computers and other related devices

**RSA** – Algorithm used for encryption and authentication

## S

---

**Samba** – A freeware program that allows for resources to be shared on a network. Mainly used in Unix based Operating Systems

**Server** – A computer on a network that provides services and resources to other computers on the network

**Session key** – An encryption and decryption key that is generated for every communication session between two computers

**Session layer** – The fifth layer of the OSI model which coordinates the connection and communication between applications on both ends

**Simple Mail Transfer Protocol** – Used for sending and receiving email

**Simple Network Management Protocol** – Governs the management and monitoring of network devices

**SMTP** – Simple Mail Transfer Protocol

**SNMP** – Simple Network Management Protocol

**SOHO** – Small Office/Home Office

**SPI** – Stateful Packet Inspection

**SSH** – Secure Shell is a command line interface that allows for secure connections to remote computers

**SSID** – Service Set Identifier is a name for a wireless network

**Stateful inspection** – A feature of a firewall that monitors outgoing and incoming traffic to make sure that only valid responses to outgoing requests for incoming packets are allowed to pass through the firewall

**Subnet mask** – Determines what portion of an IP address designates the Network and which part designates the Host

## T

---

**TCP** – Transmission Control Protocol

**TCP/IP** – Transmission Control Protocol/Internet Protocol

**TFTP** – Trivial File Transfer Protocol is a utility used for transferring files that is simpler to use than FTP but with less features

**Throughput** – The amount of data that can be transferred in a given time period

**Traceroute** – A utility displays the routes between your computer and specific destination

## U

---

**UDP** – User Datagram Protocol

**UNC** – Universal Naming Convention allows for shares on computers to be identified without having to know what storage device it's on

**Unicast** – Communication between a single sender and receiver

**Universal Plug and Play** – A standard that allows network devices to discover each other and configure themselves to be a part of the network

**UPnP** – Universal Plug and Play

**URL** – Uniform Resource Locator is a unique address for files accessible on the Internet

**UTP** – Unshielded Twisted Pair

## V

---

**Virtual LAN** -

**Virtual Private Network** – A secure tunnel over the Internet to connect remote offices or users to their company's network

**VLAN** – Virtual LAN

**Voice over IP** – Sending voice information over the Internet as opposed to the PSTN

**VoIP** – Voice over IP

## W

---

**Wake on LAN** – Allows you to power up a computer through its Network Interface Card

**WAN** – Wide Area Network

**Web browser** – A utility that allows you to view content and interact with all of the information on the World Wide Web

**WEP** – Wired Equivalent Privacy is security for wireless networks that is supposed to be comparable to that of a wired network

**Wi-Fi** – Wireless Fidelity

**Wi-Fi Protected Access** – An updated version of security for wireless networks that provides authentication as well as encryption

**Wide Area Network** - A network spanning a large geographical area or consisting of more than one LAN.

**Wireless ISP** – A company that provides a broadband Internet connection over a wireless connection

**Wireless LAN** – Connecting to a Local Area Network over one of the 802.11 wireless standards

**WISP** – Wireless Internet Service Provider

**WLAN** – Wireless Local Area Network

## Y

---

**Yagi antenna** – A directional antenna used to concentrate wireless signals on a specific location

# Technical Specifications

## Hardware Interface

- 4 x 10/100/1000 Auto-Sensing Gigabit Ethernet LAN Ports
- 1 x 10/100 Auto-Sensing Fast Ethernet

## WAN Port

- D-Link 108G Wireless Technology

## Software Features

- GameFuel™ Priority – Technology
- Up to 256 Firewall Port Configurations
- Access Control Policies (Parental Controls)
- Internal and External System Logging
- Static / Dynamic Routing
- Oversized NAT table
- Email Alerts
- Wireless Distribution System (WDS)

## Dimensions

- L = 7.5 inches (190.5mm)
- W = 4.6 inches (116.84mm)
- H = 1.375 inches (35mm)

## Security

- WPA-Enterprise
- WPA-Personal
- 64/128-bit WEP
- MAC Filtering

## External Antenna Type

- 1 - 5dBi detachable antenna

**Standards**

- IEEE 802.11g
- IEEE 802.11b
- IEEE 802.3
- IEEE 802.3u

**LEDs**

- Power
- WAN
- WLAN (Wireless Connection)
- LAN

**Wireless Signal Rates<sup>1</sup> with Automatic Fallback**

- D-Link 108G: 108Mbps
- 54Mbps · 48Mbps
- 36Mbps · 24Mbps
- 18Mbps · 12Mbps
- 11Mbps · 9Mbps
- 6Mbps · 5.5Mbps
- 2Mbps · 1Mbps

**Power Input**

- External Power Supply DC 5V, 2.5A

**Warranty**

- 1-Year

<sup>1</sup>Maximum wireless signal rate derived from IEEE Standard 802.11g specifications. Actual data throughput will vary. Network conditions and environmental factors lower actual data throughput rate.



# Contacting Technical Support

You can find software updates and user documentation on the D-Link website.

D-Link provides free technical support for customers within the United States and within Canada for the duration of the warranty period on this product.

U.S. and Canadian customers can contact D-Link technical support through our web site, or by phone.

## **Tech Support for customers within the United States:**

*D-Link Technical Support over the Telephone:*

(877) 453-5465

24 hours a day, seven days a week.

*D-Link Technical Support over the Internet:*

<http://support.dlink.com>

[email:support@dlink.com](mailto:support@dlink.com)

## **Tech Support for customers within Canada:**

*D-Link Technical Support over the Telephone:*

(800) 361-5265

Monday to Friday 7:30am to 12:00am EST

*D-Link Technical Support over the Internet:*

<http://support.dlink.ca>

[email:support@dlink.ca](mailto:support@dlink.ca)

When contacting technical support, please provide the following information:

- *Serial number of the unit*
- *Model number or product name*
- *Software type and version number*

# Warranty

Subject to the terms and conditions set forth herein, D-Link Systems, Inc. (“D-Link”) provides this Limited warranty for its product only to the person or entity that originally purchased the product from:

- D-Link or its authorized reseller or distributor and
- Products purchased and delivered within the fifty states of the United States, the District of Columbia, U.S. Possessions or Protectorates, U.S. Military Installations, addresses with an APO or FPO.

**Limited Warranty:** D-Link warrants that the hardware portion of the D-Link products described below will be free from material defects in workmanship and materials from the date of original retail purchase of the product, for the period set forth below applicable to the product type (“Warranty Period”), except as otherwise stated herein.

1-Year Limited Warranty for the Product(s) is defined as follows:

- Hardware (excluding power supplies and fans) One (1) Year
- Power Supplies and Fans One (1) Year
- Spare parts and spare kits Ninety (90) days

D-Link’s sole obligation shall be to repair or replace the defective Hardware during the Warranty Period at no charge to the original owner or to refund at D-Link’s sole discretion. Such repair or replacement will be rendered by D-Link at an Authorized D-Link Service Office. The replacement Hardware need not be new or have an identical make, model or part. D-Link may in its sole discretion replace the defective Hardware (or any part thereof) with any reconditioned product that D-Link reasonably determines is substantially equivalent (or superior) in all material respects to the defective Hardware. Repaired or replacement Hardware will be warranted for the remainder of the original Warranty Period from the date of original retail purchase. If a material defect is incapable of correction, or if D-Link determines in its sole discretion that it is not practical to repair or replace the defective Hardware, the price paid by the original purchaser for the defective Hardware will be refunded by D-Link upon return to D-Link of the defective Hardware. All Hardware (or part thereof) that is replaced by D-Link, or for which the purchase price is refunded, shall become the property of D-Link upon replacement or refund.

**Limited Software Warranty:** D-Link warrants that the software portion of the product (“Software”) will substantially conform to D-Link’s then current functional specifications for the Software, as set forth in the applicable documentation, from the date of original retail purchase of the Software for a period of ninety (90) days (“Warranty Period”), provided that the Software is properly installed on approved hardware and operated as contemplated in its documentation. D-Link further warrants that, during the Warranty Period, the magnetic media on which D-Link delivers the Software will be free of physical defects. D-Link’s sole obligation shall be to replace the non-conforming Software (or defective media) with software that substantially conforms to D-Link’s functional specifications for the Software or to refund at D-Link’s sole discretion. Except as otherwise agreed by D-Link in writing, the replacement Software is provided only to the original licensee, and is subject to the terms and conditions of the license granted by D-Link for the Software. Software will be warranted for the remainder of the original Warranty Period from the date or original retail purchase. If a material non-conformance is incapable of correction, or if D-Link determines in its sole discretion that it is not practical to replace the non-conforming Software, the price paid by the original licensee for the non-conforming Software will be refunded by D-Link; provided that the non-conforming Software (and all copies thereof) is first returned to D-Link. The license granted respecting any Software for which a refund is given automatically terminates.

**Non-Applicability of Warranty:** The Limited Warranty provided hereunder for hardware and software of D-Link’s products will not be applied to and

does not cover any refurbished product and any product purchased through the inventory clearance or liquidation sale or other sales in which D-Link, the sellers, or the liquidators expressly disclaim their warranty obligation pertaining to the product and in that case, the product is being sold “As-Is” without any warranty whatsoever including, without limitation, the Limited Warranty as described herein, notwithstanding anything stated herein to the contrary.

**Submitting A Claim:** The customer shall return the product to the original purchase point based on its return policy. In case the return policy period has expired and the product is within warranty, the customer shall submit a claim to D-Link as outlined below:

- The customer must submit with the product as part of the claim a written description of the Hardware defect or Software nonconformance in sufficient detail to allow D-Link to confirm the same.
- The original product owner must obtain a Return Material Authorization (“RMA”) number from the Authorized D-Link Service Office and, if requested, provide written proof of purchase of the product (such as a copy of the dated purchase invoice for the product) before the warranty service is provided.
- After an RMA number is issued, the defective product must be packaged securely in the original or other suitable shipping package to ensure that it will not be damaged in transit, and the RMA number must be prominently marked on the outside of the package. Do not include any manuals or accessories
- The customer is responsible for all in-bound shipping charges to D-Link. No Cash on Delivery (“COD”) is allowed. Products sent COD will either be rejected by D-Link or become the property of D-Link. Products shall be fully insured by the customer. D-Link will not be held responsible for any packages that are lost in transit to D-Link. The repaired or replaced packages will be shipped to the customer via UPS Ground or any common carrier selected by D-Link, with shipping charges prepaid. Expedited shipping is available if shipping charges are prepaid by the customer and upon request.
- Return Merchandise Ship-To Address
  - USA:** 17595 Mt. Herrmann, Fountain Valley, CA 92708
  - Canada:** 2180 Winston Park Drive, Oakville, ON, L6H 5W1
 (Visit <http://www.dlink.ca> for detailed warranty information within Canada)

D-Link may reject or return any product that is not packaged and shipped in strict compliance with the foregoing requirements, or for which an RMA number is not visible from the outside of the package. The product owner agrees to pay D-Link’s reasonable handling and return shipping charges for any product that is not packaged and shipped in accordance with the foregoing requirements, or that is determined by D-Link not to be defective or non-conforming.

**What Is Not Covered:** This limited warranty provided by D-Link does not cover: Products, if in D-Link’s judgment, have been subjected to abuse, accident, alteration, modification, tampering, negligence, misuse, faulty installation, lack of reasonable care, repair or service in any way that is not contemplated in the documentation for the product, or if the model or serial number has been altered, tampered with, defaced or removed; Initial installation, installation and removal of the product for repair, and shipping costs; Operational adjustments covered in the operating manual for the product, and normal maintenance; Damage that occurs in shipment, due to act of God, failures due to power surge, and cosmetic damage; Any hardware, software, firmware or other products or services provided by anyone other than D-Link; Products that have been purchased from inventory clearance or liquidation sales or other sales in which D-Link, the sellers, or the liquidators expressly disclaim their warranty obligation pertaining to the product. Repair by anyone other than D-Link or an Authorized D-Link Service Office will void this Warranty.

**Disclaimer of Other Warranties:** EXCEPT FOR THE LIMITED WARRANTY SPECIFIED HEREIN, THE PRODUCT IS PROVIDED “AS-IS” WITHOUT ANY WARRANTY OF ANY KIND WHATSOEVER INCLUDING, WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT. IF ANY IMPLIED WARRANTY CANNOT BE DISCLAIMED IN ANY TERRITORY WHERE A PRODUCT IS SOLD, THE DURATION OF SUCH IMPLIED WARRANTY SHALL BE LIMITED TO NINETY (90) DAYS. EXCEPT AS EXPRESSLY COVERED UNDER THE LIMITED WARRANTY PROVIDED HEREIN, THE ENTIRE RISK AS TO THE QUALITY, SELECTION AND PERFORMANCE OF THE PRODUCT IS WITH THE PURCHASER OF THE PRODUCT.

**Limitation of Liability:** TO THE MAXIMUM EXTENT PERMITTED BY LAW, D-LINK IS NOT LIABLE UNDER ANY CONTRACT, NEGLIGENCE, STRICT LIABILITY OR OTHER LEGAL OR EQUITABLE THEORY FOR ANY LOSS OF USE OF THE PRODUCT, INCONVENIENCE OR DAMAGES OF ANY CHARACTER, WHETHER DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL (INCLUDING, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF GOODWILL, LOSS OF REVENUE OR PROFIT, WORK STOPPAGE, COMPUTER FAILURE OR MALFUNCTION, FAILURE OF OTHER EQUIPMENT OR COMPUTER PROGRAMS TO WHICH D-LINK’S PRODUCT IS CONNECTED WITH, LOSS OF INFORMATION OR DATA CONTAINED IN, STORED ON, OR INTEGRATED WITH ANY PRODUCT RETURNED TO D-LINK FOR WARRANTY SERVICE) RESULTING FROM THE USE OF THE PRODUCT, RELATING TO WARRANTY SERVICE, OR ARISING OUT OF ANY BREACH OF THIS LIMITED WARRANTY, EVEN IF D-LINK HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. THE SOLE REMEDY FOR A BREACH OF THE FOREGOING LIMITED WARRANTY IS REPAIR, REPLACEMENT OR REFUND OF THE DEFECTIVE OR NON-CONFORMING PRODUCT. THE MAXIMUM LIABILITY OF D-LINK UNDER THIS WARRANTY IS LIMITED TO THE PURCHASE PRICE OF THE PRODUCT COVERED BY THE WARRANTY. THE FOREGOING EXPRESS WRITTEN WARRANTIES AND REMEDIES ARE EXCLUSIVE AND ARE IN LIEU OF ANY OTHER WARRANTIES OR REMEDIES, EXPRESS, IMPLIED OR STATUTORY.

**Governing Law:** This Limited Warranty shall be governed by the laws of the State of California. Some states do not allow exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the foregoing limitations and exclusions may not apply. This limited warranty provides specific legal rights and the product owner may also have other rights which vary from state to state.

**Trademarks:** D-Link is a registered trademark of D-Link Systems, Inc. Other trademarks or registered trademarks are the property of their respective manufacturers or owners.

**Copyright Statement:** No part of this publication or documentation accompanying this Product may be reproduced in any form or by any means or used to make any derivative such as translation, transformation, or adaptation without permission from D-Link Corporation/D-Link Systems, Inc., as stipulated by the United States Copyright Act of 1976. Contents are subject to change without prior notice. Copyright© 2002 by D-Link Corporation/D-Link Systems, Inc. All rights reserved.

**CE Mark Warning:** This is a Class B product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

**FCC Statement:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

For detailed warranty outside the United States, please contact corresponding local D-Link office.

**FCC Caution:**

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment; such modifications could void the user's authority to operate the equipment.

(1) The devices are restricted to indoor operations within the 5.15 to 5.25GHz range. (2) For this device to operate in the 5.15 to 5.25GHz range, the devices must use integral antennas.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference.

**IMPORTANT NOTE:**

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. The antenna(s) used for this equipment must be installed to provide a separation distance of at least eight inches (20 cm) from all persons.

This equipment must not be operated in conjunction with any other antenna.

# Registration



Product registration is entirely voluntary and failure to complete or return this form will not diminish your warranty rights.