

Thank you for choosing our product

Pyle Audio
1600 63rd st , Brooklyn, NY, 11204
(718)236-8000

Warning


This product contains small items that could be a choking hazard if swallowed. Keep these items away from young children!

1. Make sure these instructions are read and completely understood before attempting installation. If you are unsure of any part of this installation, contact a professional installer for assistance.
2. The wall or mounting surface must be capable of supporting the combined weight of the mount and the display; otherwise the structure must be reinforced.
3. Safety gear and proper tools must be used. A minimum of two people are required for this installation. Failure to use safety gear can result in property damage, serious injury or death.



INSTALLATION GUIDE

Item No.:PSW128ST

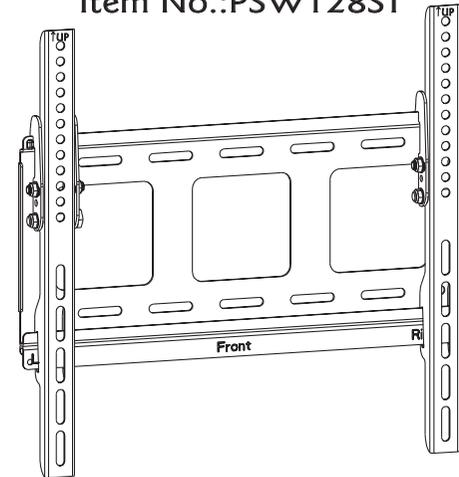

- TV Size Range: 23" ~ 37"
- Maximum Weight Capacity: 35kg/77lbs
- Adjustable angle: 0°~5°
- Locked by locking bar on the bottom


www.pyleaudio.com

MADE IN CHINA

CAUTION


This product was designed to be installed on wood stud walls and solid concrete walls. Before installing make sure the supporting surface will support the combined load of the equipment and hardware. Never exceed the Maximum Load Capacity. This product is intended for indoor use only. Use of this product outdoors could lead to product failure or personal injury.

Hardware Kit:

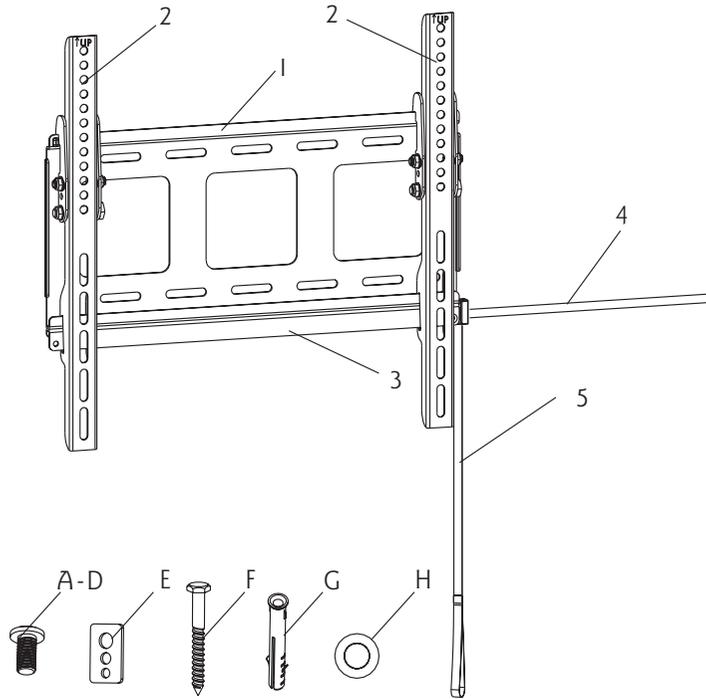

ID	Qty	Description
1	1	Wall plate
2	2	Bracket
3	1	Locking bar
4	1	Rotating rod
5	1	Ribbon
A	4	M4×12mm bolt
B	4	M4×16mm bolt

ID	Qty	Description
C	4	M5×16mm bolt
D	4	M6×16mm bolt
E	4	Square washer
F	4	Long bolt
G	4	Wall anchor
H	4	Long bolt washer

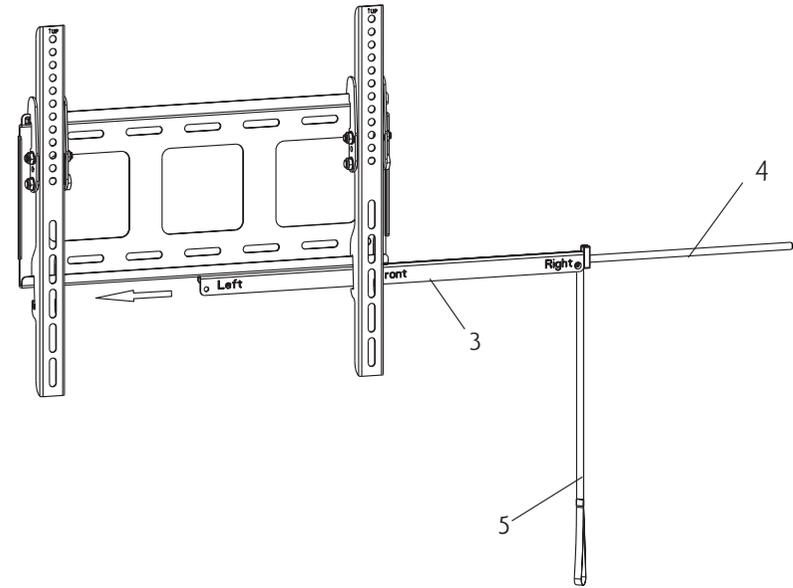


If you think the ribbon(5) is too long, You could hide it at the back of the television, once you want to uninstall the TV, it could help you to take out the locking bar(3).


Part 3-Mounting the flat panel screen

Hook the top of brackets(2) onto the top flange of wall plate(1). Then swing the screen down.

NOTE: Always use an assistant or mechanical lifting equipment to safely lift and position heavy equipment.

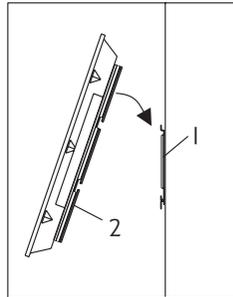


Use the Locking bar(3) to prevent the TV from being removed or accidentally knocked off of the wall plate. When the locking bar half inserts into the wall plate, you can use the rotating rod(4) to make it fully inserted.

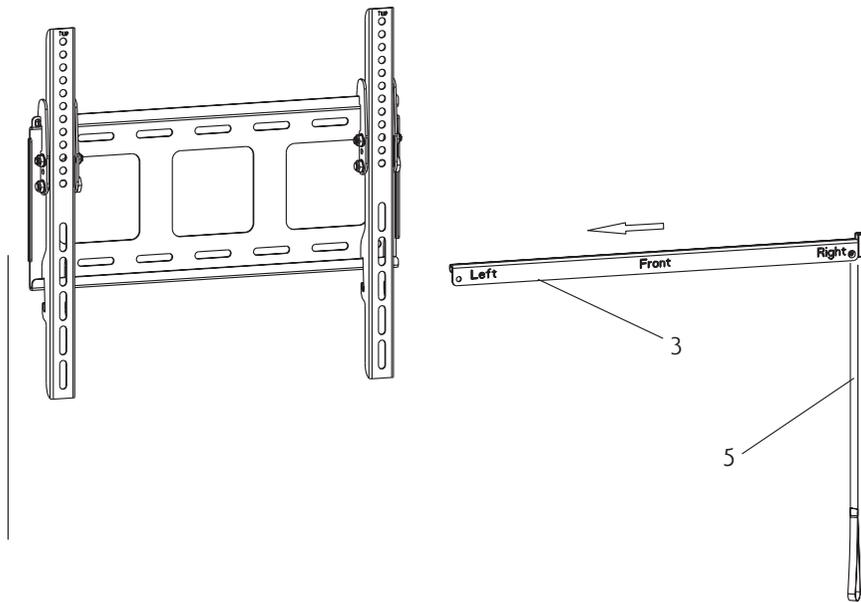


Part 1a-Wood Stud Mounting

Use wall plate(1) as a template, make sure it is level, and mark four mounting holes along the center lines of the wood studs. Drill four 3/16" (5mm) dia. holes 2"(50mm) deep. Level wall plate(1) and attach to wall with four long bolts(F) and four washers(H). Tighten screws firmly. Do not overtighten.

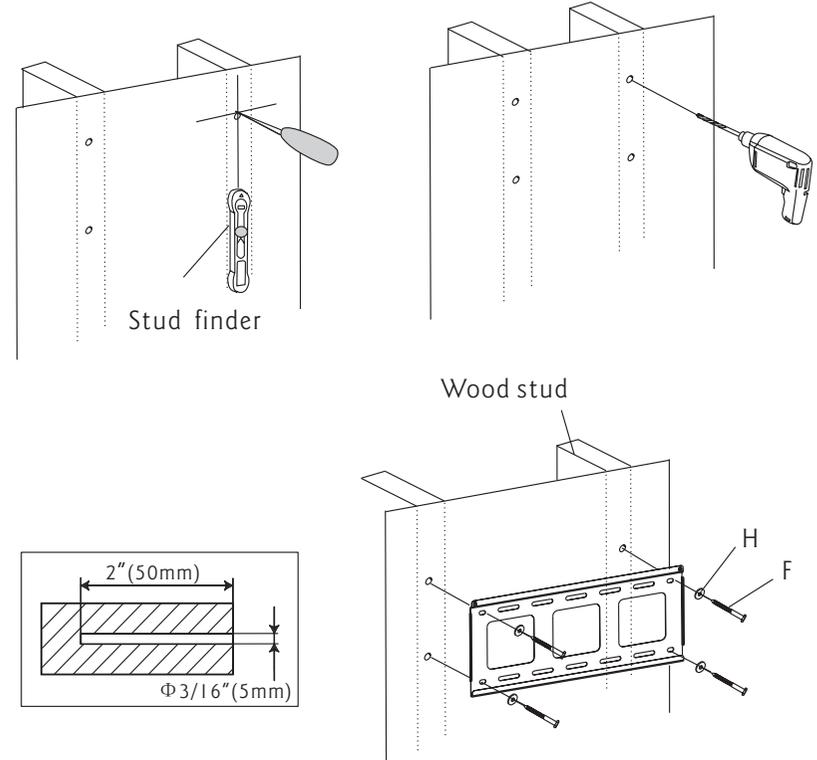

Part 1b-Concrete Wall Mounting

Level wall plate(I) and use it as a template to mark four holes. Drill four 3/8" (10mm) dia. holes 2"(50mm) deep. Insert four anchors(G) into holes and secure wall plate with four long bolts(F) and four washers(H). Tighten screws firmly. Do not overtighten.

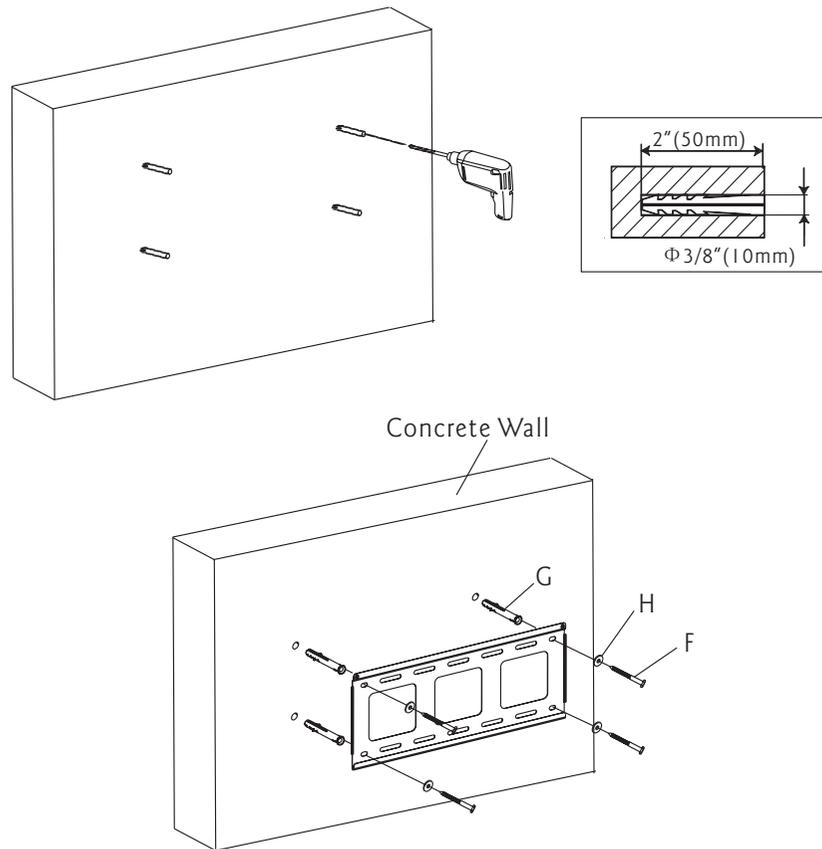

Part 2-Attaching Brackets To Screen

Center brackets vertically on back of screen. Select the small(A or B) or medium(C or D). Attach brackets to screen using four selected screws and four square washers(E) at the top and bottom of each bracket. Tighten screws firmly. Do not overtighten.

