



 **KYOCERA**

JAX

S1360

User Guide

assurance
wireless *Virginia*
brought to you by 2008

Table of Contents

1	Get Started	4	Volume	21	
	Phone Accessories	4	Ringtones	21	
	Program Your Phone	4	Keyguard	22	
	Phone Battery	5	Text Entry	22	
	Phone Overview	6	Phone Info	23	
	Main Menu	8	Lock Phone	23	
	Guide Conventions	9	Reset/Delete	24	
2	Call Features	10	Others Settings	24	
	Power Phone Up	10	7	Contacts	30
	Make Phone Calls	10		Access Contacts	30
	Answer Phone Calls	10		Add Contacts	30
	End Phone Calls	11		Use Contacts	31
	In-call Options	11		Customize Contacts	32
	Volume Control	11		Contact Groups	33
	Use Speed Dialing	11		Speed Dial List	33
	Use Plus (+) Code Dialing	12		Dial Services	33
	Missed Call Notification	12		ICE Contacts	34
	3-Way Calling	12	8	Messaging	35
	Emergency Services	12		Messaging Menu	35
3	Text Entry	13		Use Voicemail	35
	Text Entry Modes	13		Send Messages	36
	Text Entry Quick Reference	15		Threaded Messaging	36
4	My Stuff	16		Message Settings	37
	My Stuff Menu	16		Simple Data Exchange	39
	Ringtones	16	9	Tools	40
	Ringback Tones	16		Tools Menu	40
5	My Account	17		Alarm	41
	Check your Account Balance	17		Calendar	41
	Top-Up your Account	17		Bluetooth	43
	For More Information	18		Use Calculator	44
6	Settings	19		Countdown	44
	Settings Menu	19		Use Stopwatch	45
	Display	20		World Clock	45

Notepad	45
Voice Services	46
10 History	48
Work with History	48
11 Web	49
Surf the Web	49
Search the Web	49
12 Get Help	50
Customer Support	50
Qualified Service	50
Phone Accessories	50
Become a Product Evaluator	50
Important Safety Information	51
General Precautions	51
Maintaining Safe Use of and Access to Your Phone	51
Using Your Phone With a Hearing Aid Device	53
Caring for the Battery	54
Radio Frequency (RF) Energy	55
Owner's Record	57
Manufacturer's Warranty	58
End User License Agreement	60
Index	63

1 Get Started

Phone Accessories

To shop for accessories for your phone, visit www.assurancewireless.com or kyocera.superiorcommunications.com.

Program Your Phone

Before you start using your Assurance Wireless phone, you will need to perform a few simple steps to set it up on the network:

1. Turn your phone on by pressing the End/Power key (). Your phone will automatically attempt Hands-Free Activation.
2. Follow the onscreen instructions to complete the activation process. You can also refer to the “Activation Guide” included with your phone.
3. Once completing activation and software update checks, the phone will reboot.
4. In order to complete your activation, you will need to dial 611 from your Assurance Wireless phone or 1-888-321-5880 from any other phone. You will need the Account PIN you received in your Approval Letter.

 **Tip:** Do not press  while the phone is being activated. Pressing  cancels the activation process.

 **Note:** If you are having any difficulty with activation, contact Assurance Wireless Customer Care at 1-888-321-5880 for assistance.

Phone Battery

Install the Battery

To install the battery:

1. Hold the phone face down.
2. Find the notch directly below the back cover. It is square. Using your thumbnail, pry the cover up from the bottom to remove.
3. Place the battery in the battery casing. The metal contacts of the battery must make contact with the metal contacts of the battery casing.
4. Replace the battery cover by sliding the notches into the openings on the top of the battery casing.
5. Snap the cover into place.



Charge the Battery

You must have at least a partial charge in the battery to make or receive calls.

To charge the battery:

1. Connect the AC adapter to the microUSB jack on the side of the phone.
2. Plug the adapter into a wall outlet.



The battery icon in the upper-right corner of the screen tells you whether the phone is:

- Charging (the icon is animated)
- Partially charged 
- Fully charged 


You can safely recharge the battery at any time, even if it has a partial charge.

⚠ Note: Before removing the battery, make sure the phone is powered off.

Phone Overview

Get to Know Your Phone

- ① Earpiece.
- ② Display screen.
- ③ **Volume key** raises or lowers ringtone or call volume.
- ④ **Left softkey** selects items that appear on the lower left of the display. At the home screen, you can select **MENU**.
- ⑤ **Speakerphone key** activates the speakerphone and answers incoming calls.
- ⑥ **Navigation key** scrolls through lists and text entry fields and acts as a shortcut key from the home screen.
- ⑦ **Talk key** starts or answers a call. Press once to display the Recent History list and twice to redial the last number dialed. Press and hold to activate voice dialing.
- ⑧ **Keypad** for entering numbers, letters, or symbols.
- ⑨ *** Shift key** changes the text mode in text entry. Press and hold to call your In Case of Emergency (ICE) contacts.
- ⑩ Jack for a hands-free headset (sold separately).
- ⑪ Jack for AC adapter (included) and microUSB cable (sold separately).
- ⑫ **Right softkey** selects items that appear on the lower right of the display. At the home screen, you can select **CONTACTS**.
- ⑬ **OK key** selects a menu item or option.
- ⑭ **Back key** erases characters in text entry and returns you to the previous screen when navigating through menus. Press and hold to activate the keyguard.
- ⑮ **End/Power key** turns the phone on and off, ends a call or browser session, and returns you to the home screen.
- ⑯ **# Space key** enters a space during text entry. Press and hold to call emergency number.
- ⑰ Microphone.

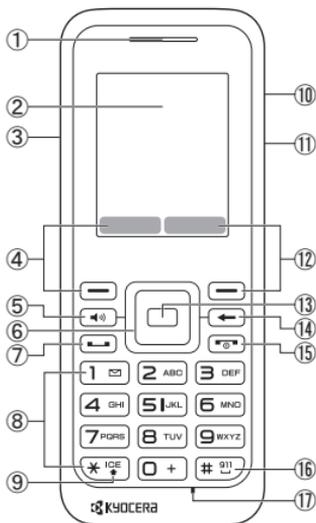

Warning: Inserting an accessory into the incorrect jack will damage the phone.

Screen Icons

These icons may appear on your phone's screen.

	Your phone's current signal strength. (More bars = stronger signal.)
	Your phone cannot find a usable signal.
	Data service is available. When active, the icon is animated.
	Data service is currently dormant.
	Data service is currently unavailable.
	You have one or more missed voice calls.
	You have event notifications.
	You have one or more new messages waiting.
	You have one or more new voicemail messages waiting.
	You have one or more new urgent messages waiting.
	You have different kinds of alerts waiting.
	You have different kinds of alerts (including urgent messages) waiting.
	Your phone's Bluetooth feature is enabled.
	Your phone is connected to a Bluetooth device.
	Your phone is visible to other Bluetooth devices.

	Your phone is connected to or communicating with a Bluetooth device via Hands-free Profile (HFP).
	Your phone's current battery charge level. (The icon to the left shows the battery is fully charged.)
	The volume level is set to between 1 and 8 and vibrate is turned on.
	1 Beep and vibrate are set.
	Your phone's ringtone is turned off.
	Your phone's sound is turned off but vibrate is turned on.
	Your phone's sound is turned off.
	Your phone's location feature is on and available for location-based.
	Your phone's location feature is off. Your location is available only for 911.
	Your phone is connected to a TTY device.
	An alarm or countdown is set.
	Your phone's HAC (hearing aid compatibility) setting is enabled.
	Your phone is in airplane mode.

Main Menu

At the home screen, press (OK key) to access the main menu.

Home Screen >	Level 1 >	Level 2
OK key	 My Stuff	Access these options: Ringtones, Graphics, and Ringback Tones.
	 My Account	Access account information and Top-Up your account.
	 Settings	Access these options: Display, Volume, Ringtones, Keyboard, Text Entry, Phone Info, Lock Phone, Reset/Delete, and Others.
	 Contacts	Access your Contacts list.
	 Missed Alerts	Access your missed call alerts.
	 Messaging	Access these options: Voicemail, Send Message, and Messages.
	 Tools	Access these options: Activate This Device, Alarm, Calendar, Bluetooth, Update Phone, Voice Services, Calculator, Countdown, Stopwatch, World Clock, and Notepad.
	 History	Access your recent history.
 Web	Browse the web.	

Guide Conventions

In this guide, the following conventions are used when describing phone features.

Navigate Through the Menus

- **Select** means to press the **Left** softkey, **Right** softkey or **OK** key to select an item seen on the display. For example, “Select **MENU**” tells you to physically press the left softkey to choose **MENU** from the display.
- **Press** means to press a phone key. For example, “Press  to make a phone call” tells you to physically press the **Talk key** on your phone.
- **Scroll** means to use the **Navigation key** to move through a list on the display. For example, “Scroll through your contacts list to choose a contact” means to physically press the **Navigation key** up or down to scroll through the list on the display.
- **>** (greater than symbol) tells you to select an option from a menu or list. For example, “Select **MENU >Settings**” means to:
 1. Press the left softkey to select **MENU**.
 2. Scroll to the **Settings** option.
 3. Press  (**OK** key) to select **Settings**.

Back Up Within a Menu

- Press  to go to the previous menu.
- Press  to return to the home screen.

2 Call Features

This section describes the basic features related to calls.

Power Phone Up

- To turn your phone on, press  and wait until the phone display lights up.
- To turn your phone off, press and hold  for two seconds until you see the powering-down animation on the display screen.

Make Phone Calls

Make sure you are in an area where a signal can be received. Look for the signal strength icon on the home screen. The more bars, the stronger the signal. If there are no bars, move to where the signal strength is better.

When the phone has been idle for a time, it changes to power save mode. Press any key to return to normal operating mode. There are several ways you can make a phone call.

Call Using a Number

1. Enter a phone number.
2. Press .

Call Using a Contact

1. From the home screen, select **CONTACTS**.
2. Highlight a contact and press .

Call Using Voice Recognition

You can use voice recognition to call a contact from your contact list or to dial a phone number. For more information, see “Voice Recognition” on page 46.

Redial a Number

1. Press  to open your history.
2. Highlight a phone number or contact and press .

 **Note:** To redial the last number called, received, or missed, press  twice.

Answer Phone Calls

When a call comes in, the phone rings, vibrates, or lights up. The phone number of the caller also appears if it is not restricted. If the number is stored in your contacts list, the contact's name appears. There are two ways to answer a phone call.

Answer Using Earpiece

- Press .

Answer Using Speakerphone

- Press .

End Phone Calls

- Press .

In-call Options

Selecting **OPTIONS** during a call displays a list of available in-call features.

To select an option, highlight the option and press .

- **Transfer Audio** to switch the call to a Bluetooth device (if applicable).
- **Save** to save the current call's phone number in your Contacts.
- **Contact Details** to display information about the caller stored in your Contacts (if applicable).
- **Main Menu** to display the phone's main menu.
- **3-Way Call** to open a call with two other parties.
- **Contacts** to display your Contacts list.
- **Voice Memo** to record the other party's voice.
- **Phone Info** to display information about your phone.

Volume Control

Adjust Volume during a Call

- Press the **Volume key** up or down to adjust the earpiece volume during a call.

Use the Speakerphone

Your phone has a built-in speakerphone.

- To turn on the speakerphone, press . The speakerphone icon appears on the home screen when the speakerphone is on.
- To turn off the speakerphone, press  again.

 **Note:** If you press  during an incoming call, you will answer the call.

Silence an Incoming Call

- To silence the phone without answering the call, press  or press the **Volume key** up or down.
- To silence the phone and answer the call, press  or press the **Volume key** up or down and then press .

Use Speed Dialing

Speed dialing allows you to assign a one- or two-digit shortcut to a contact. Before you can use speed dialing you must save a phone number as a contact and assign a speed dial location to it. See “Assign Speed Dials to Contacts” on page 32.

To call a contact that has a speed dial location:

1. Enter the one- or two-digit speed dial location.
2. Press .

Use Plus (+) Code Dialing

When placing international calls, use Plus Code Dialing to automatically enter the international access code for your location (for example, 011 for international calls made from the U.S.).

1. Press and hold  to display "+" on your phone screen.
2. Enter the country code and phone number, and then press . (The phone automatically prepends the access code for international dialing, followed by the country code and phone number.)

Missed Call Notification

When an incoming call is not answered, your screen displays the Missed Call log. Press  to dial the phone number.

To display a Missed Alerts entry from the home screen:

1. Select **Missed Alerts** from the main menu.
2. Highlight the entry you wish to view and press .

3-Way Calling

With 3-Way Calling, you can talk to two people at the same time.

1. Enter a number and press .
2. Once you have established the connection, press . (This puts the first caller on hold.)

3. Select **Contacts**, **Recent History**, or **Enter Phone#**.
4. Select a number from your **Contacts** or **Recent History**, or enter a number directly, and then press .
5. When you're connected to the second party, press  again to begin your 3-way call.

 **Note:** When using this feature, the normal airtime rates will be charged for each of the two calls.

Emergency Services

Call Emergency Service

You can call an emergency number even if your phone is locked or your account is restricted. When you call, your phone enters emergency mode. This enables the emergency service exclusive access to your phone to call you back, if necessary. To make or receive regular calls after dialing the number, you must exit this mode.

To dial an emergency number:

- Press and hold  and select **OK**.
– or –
Press    .

Exit Emergency Services

When you have completed the emergency call:

- Press  and then press .

3 Text Entry

Text Entry Modes

You can enter letters, numbers, and symbols whenever you are prompted to enter text.

1. From a screen where you can enter text, select **OPTIONS** to change the text mode. (If you are in the message entry screen, select **OPTIONS > Text Mode**.)
2. Select one of the following options:
 - **Abc** to enter characters by using the alphabet mode.
 - **T9Word** to enter text using a predictive text system that reduces the number of key presses required while entering a word.
 - **123** to enter numeric characters.
 - **Symbols** to enter symbols.
 - **Smileys** to enter smile icons.
 - **Emoticons** to enter “emoticons” (if applicable).
 - **Paste List** to paste copied or cut text (if applicable).
 - **Web Shortcuts** to enter Web shortcuts (for example, www., http://, or .com).
 - **Text Options** to display the text entry options menu (if applicable). See “Text Entry” on page 22.

Enter Numbers with Number Keypad

From the text entry field, select **OPTIONS > Text Mode > 123** to enter a number when you press a key once. The **123** icon indicates you are in **numeric** input mode.

Enter Letters with Number Keypad

From the text entry field, select **OPTIONS > Text Mode > Abc** to enter letters. You can enter text in the following ways:

- To enter a letter, press a key once for the first letter, twice of the second letter, and so on. If your phone is set to Spanish, accented letters are available. Wait for the cursor to move right and enter the next character. Press  to enter a space.
- To change case mode, press .
- To enter a number, press and hold a number key until the number appears on the screen.

 **Tip:** The **Abc/ABC/abc** icon on the bottom right corner of the screen indicates you are in **Abc** input mode.

Rapid Entry (T9) with Number Keypad

From the text entry field, select **OPTIONS** > **Text Mode** > **T9Word** to check words you are trying to spell against a dictionary of common words. You can enter text in the following ways:

- To enter words, press a key once. For example, to enter the word “any” press the 2 > 6 > 9 keys. If the word doesn’t match what you want, scroll up or down to look at other word matches. When you see the word you want, press .
- To change case mode, press .
- To enter a number, press and hold a number key until the number appears on the screen.

 **Tip:** The **T9Word/T9WORD/T9word** icon on the bottom right corner of the screen indicates you are in T9 input mode.

Enter Symbols with Number Keypad

While entering text in **Abc** mode, you can enter symbols by pressing  until you see the symbol you want.

To access the full set of symbols:

1. From the text entry field, select **OPTIONS** > **Text Mode** > **Symbols**.
2. Scroll up or down to view the list of symbols.
3. Highlight your desired symbol and press  to enter it.

Text Entry Quick Reference

This table gives instructions for entering text.

To..	Do this..
Enter a letter	Use Abc or T9Word mode and press a key until you see the letter you want.
Enter a number	Use 123 mode and press a key.
Enter a symbol	Use Symbols mode and highlight a symbol you want and press  .
Enter a smiley	Use Smileys mode and highlight a smiley you want and press  .
Enter an emoticon	Use Emoticons mode and highlight an emoticon you want and press  .
Enter a web shortcut	Use Web Shortcut mode and highlight a word you want and press  .
Enter a space	Press  .
Erase a character	Press  .
Erase all characters	Press and hold  .
Move the cursor right or left	Scroll left or right.
Move the cursor up or down	Scroll up or down.
Change case mode	Press  .
Capitalize any letter	In Abc or T9Word mode, press  . Choose uppercase (ABC or T9WORD).
Lowercase any letter	In Abc or T9Word mode, press  . Choose lowercase (abc or T9word).
Initial caps	In Abc or T9Word mode, press  . Choose sentence case (Abc or T9Word).
Select options on the bottom of the screen	Press the appropriate left or right softkey.

4 My Stuff

This section describes how your phone can retrieve and playback media files and other downloads.

My Stuff Menu

Select **My Stuff** from the main menu to access the following functions:

Level 1 >	Level 2 >	Level 3
My Stuff	Ringtones	Displays your ringtones and the Get New option.
	Graphics	Displays your graphics.
	Ringback Tones	Launch application to purchase Ringback Tone .

Ringtones

Ringtones stores your downloaded ringtones.

You can download ringtones to your phone from the Assurance Wireless Website at www.assurancewireless.com, or directly from your phone. Charges apply.

Download a Ringtone

Before downloading, make sure you have enough money in your cash balance; otherwise you can Top-Up your account.

1. From **Ringtones**, select **Get New** and search for a ringtone.
2. Follow the prompts to purchase and download the selected ringtone.

Assign a Ringtone

1. From **Ringtones**, select a ringtone.
2. Select **Assign** and choose how you want to assign the ringtone.

Ringback Tones

Select **Ringback Tones** to purchase ringback tones for your account. For more information about your account, go to www.assurancewireless.com.

5 My Account

You can manage your Assurance Wireless account directly from your phone. The basic tasks are summarized in this chapter. For more information about your account, go to www.assurancewireless.com.

Check your Account Balance

You can check your Assurance Wireless account status by selecting **My Account > Balance + Usage** from the main menu. Your account information appears. When your account is low or empty, you receive a notification to Top-Up.

 **Note:** Additional charges may apply for multiple balance checks in one day. Visit www.assurancewireless.com for more details.

Top-Up your Account

Top-Up is how you add money to your Assurance Wireless account. You can Top-Up your Assurance Wireless account right from your phone. First, buy a Top-Up card from one of the thousands of retailers that carry them or register your debit card, credit card, or PayPal account at www.assurancewireless.com.

 **Note:** You cannot register a debit or credit card from your phone, and must register online first before you can Top-Up with this method via the phone. When your balance is low, you can Top-Up your Assurance Wireless account from your phone.

Top-Up with a Top-Up Card

1. From the main menu, select **My Account**.
2. Highlight **Top-Up** link and press .
3. Enter your Account PIN and select **DONE**.
4. Scroll down to select **Login** and press .
5. Enter your Top-Up card's PIN number and press .
6. Scroll down to select **Top-Up Now** and press .
7. You are now Topped-Up. Press to exit.

Top-Up with a Debit Card, Credit Card, or PayPal Account

1. From the main menu, select **My Account**.
2. Highlight **Top-Up** link and press .
3. Enter your Account PIN and select **DONE**.
4. Scroll down to select **Login** and press .
5. Scroll down to select either **Credit Card** or **PayPal** and press .
6. Enter the amount you want to Top-Up and press . (A minimum Top-Up of \$10 may be required.)
7. Scroll down to select **Top-Up Now** and press .
8. You are now Topped-Up. Press to exit.

 **Note:** You can also Top-Up over the Web at www.assurancewireless.com.

For More Information

For more information about your Assurance Wireless account or Assurance Wireless service, visit www.assurancewireless.com.

6 Settings

Settings Menu

Select **Settings** from the main menu to access the following functions:

Level 1 >	Level 2 >	Level 3
Settings	Display	Access these options: Graphic, Brightness, Backlight, Notification, Picture ID, Power Save Mode, Keypad Light, Clock/Calendar, and Greeting.
	Volume	Access these options: Incoming Ringtone, Playback Volume, Power Up/Down, Key Beeps, and Escalate Setting.
	Ringtones	Access these options: Incoming Calls, Voicemail, Messages, Calendar, and Power Up/Down.
	Keyguard	Access these options: On or Off.
	Text Entry	Access these options: Word Complete, Next Word Complete, Phrase Complete, Word Scan, Word Choice List, Input Language, My Words, and Help.
	Phone Info	Access these options: My Phone#, Memory Status, Icon Glossary, Version, Advanced, My Account, and UL Environment Certification.
	Lock Phone	Access these options: Lock Now, Change Lock Code, and Lock Code Hint.
	Reset/Delete	Access these options: Reset Settings, Reset Phone, Delete Stuff, and Change Lock Code.
	Others	Access these options: Accessibility, Airplane Mode, Alerts, Call Setup, Data Settings, Headset Mode, Language, Location, and Navigation Keys.

Display

Adjusting your phone's display settings not only helps you see what you want, they can also help increase battery life.

Set Graphics

From **Graphic**, select a graphic on the home screen.

Set Main Menu View

From the home screen, select **MENU**.
Select one of the following:

- **GRID VIEW** displays icons of each menu item, with its name at the bottom of the screen.
- **LIST VIEW** displays a list of all menu items.

Set Brightness

1. From **Brightness**, scroll to change the brightness level.
2. Select a brightness level.

Backlight

You can adjust Backlight to maximize brightness or maximize battery life.

Set Backlight Dim Duration

1. From **Backlight**, select **Backlight Dim**.
2. Select **Always Bright**, **Always Dim**, or a preset length of time to elapse before the screen backlight dims.

Set Backlight Off Duration

1. From **Backlight**, select **Backlight Off**.
2. Select a preset length of time to elapse before the screen and keypad backlights turn off.

Set the Notification Pop-up

This option allows you to enable or disable notification pop-up when you receive a new notification (except for incoming call and alarm) while an application is running.

- From **Notification**, select **Enable Pop-up** or **Disable Pop-up**.

Set a Picture ID

You can select Picture IDs for your contacts, unsaved numbers, private or unknown numbers.

1. From **Picture ID**, select **Contact**, **Unsaved Numbers**, or **Private / Unknown**. (If you select **Contact**, select an entry.)
2. Scroll up or down to select a picture ID option and select an image to assign.

Set Power Save Mode

This feature helps conserve your battery power by automatically adjusting the backlight and keypad setting of your phone.

1. From **Power Save Mode**, select **On**.
2. Read the message and select **CONTINUE**.

Set Keypad Light

- From **Keypad Light**, select **On**.

Set the Clock/Calendar

- From **Clock/Calendar**, select a clock/calendar display option.

Set a Custom Greeting

You can display your own custom greeting on the home screen.

1. From **Greeting**, select **Custom**.
2. Enter a custom greeting.
3. Select **DONE** to save your greeting.

Volume

Adjust your phone's volume settings to suit your needs and your environment.

Adjust Volume

1. From **Volume**, select **Incoming Ringtone**, **Playback Volume**, **Power Up/Down**, or **Key Beeps**.

- If you select **Power Up/Down**, select **On** or **Off**.
 - If you select **Key Beeps**, select **Tone Volume** or **Tone Type**.
2. Scroll up or down to select a volume level.

 **Tip:** You can adjust the ringtone volume from the home screen (or the earpiece volume during a call) by using the volume key.

Set Escalate Setting

1. From **Volume**, select **Escalate Setting** > **Escalate**.
2. Select **On** or **Off**.
 - If you select **On**, select **Time Interval** to select a volume increase time interval.

 **Warning:** Turning off escalating ringer will make your phone ring loudly. Unexpected loud sounds could damage your hearing.

Ringtones

You can assign a ringtone or vibration pattern to incoming calls, messages, etc. and also enable audio guidance.

Select Ringtones for Incoming Calls and Messages

1. From **Ringtones**, select **Incoming Calls** or **Messages**.
2. Select **Contacts**, **Unsaved Numbers**, or **Private / Unknown**.

- If you select **Contacts**, select **All Contacts**, or select **One Contact** to select an entry.
3. Scroll up or down to select a ringtone option and select a ringtone.

Select Ringtones for Voicemail, Calendar, and Power Up/Down

1. From **Ringtones**, select **Voicemail**, **Calendar**, or **Power Up/Down**.
2. Select **Downloaded**, **Preloaded Ringtones**, or **No Ringtone**.
3. Scroll up or down to select a ringtone option and select a ringtone.

Keyguard

Use **Keyguard** to lock the keypad immediately or to automatically lock the keypad after a period of inactivity to prevent accidental key presses.

Enable Keyguard

- From **Keyguard**, select **On**.
 - or –
- From the home screen, press and hold .

Unlock Keyguard

- From the home screen, press  and then press  to unlock the keypad.

Text Entry

You can configure settings for text entry. From **Text Entry**, select one of the following:

- **Word Complete** to suggest possible words based on letters you have entered.
- **Next Word Complete** to automatically display the word that may follow the current text input.
- **Phrase Complete** to set the phone to predict possible phrases after one word with a space is entered.
- **Word Scan** to allow the predictive text input system to recognize words by searching Contacts.
- **Word Choice List** to select whether to display the word choice list.
- **Input Language** to select the language to enter (English or Spanish).
- **My Words** to edit or delete custom words you have added to the predictive text database.
- **Select Text** to select text for copying, cutting or adding (if applicable).
- **Delete All** to delete all text (if applicable).
- **Help** to view the T9 instructions.

Phone Info

View Phone Number

- Select **My Phone#** to view your phone's phone number, MSID, and other information.

Check your Phone Memory

- Select **Memory Status** to check the memory usage of your phone.

View Phone Icons

- Select **Icon Glossary** to view the icons used in your phone.

View Version Information

- Select **Version** to check your phone's software and hardware information.

View Advanced Information

- Select **Advanced** to view your phone's advanced information.

My Account

- Select **My Account** to manage your account.

UL Environment Certification

- Select **UL Environment Certification** to display the UL Environment Certification mark.

Lock Phone

The **Lock Phone** settings menus let you set phone security, lock code, and more.

Set Lock Phone

When your phone is locked, you can only make calls to 911 or ICE Contact.

1. From **Lock Phone**, enter your four-digit lock code.
2. Select **Lock Now**.

Unlock the Phone

1. From the home screen, select **UNLOCK**.
2. Enter your four-digit lock code.

Change Lock Code

1. From **Lock Phone**, enter your four-digit lock code.
2. Select **Change Lock Code**.
3. Enter a new four-digit code.
4. Re-enter your new lock code. (You will be prompted to create a lock code hint to help you remember your new lock code.)
5. Select **YES** to create a lock code hint or **NO** to return to the previous menu.

Reset/Delete

Delete Phone Content

You can quickly and easily delete all the content that you have created or stored in your phone.

1. From **Reset/Delete**, enter your four-digit lock code.
2. Select **Delete Stuff**.
3. Select one of the following:
 - **Messages** to delete all messages.
 - **Call Logs** to delete all call histories from the phone.
 - **Browser Cookies and Cache** to delete all Web cookies and all Web cache memory saved in the phone.
 - **Downloaded Content** to delete all data downloaded to your phone.
 - **Contacts** to delete all of your Contacts including speed dial numbers saved in your Contacts.
 - **Voice Memo** to delete all voice data and call memos saved in the phone.
 - **All Stuff** to delete all user-added data.
4. Read the message and select **DELETE**.

Reset Your Phone and Phone Content

This option lets you clear different types of personal information stored on your phone, reset your phone to factory settings, or both.

1. From **Reset/Delete**, enter your four-digit lock code.
2. Select one of the following:
 - **Reset Settings** to restore all the factory defaults, including ringtone types and display settings. Contacts, History, Calendar, and Messaging are not affected.
 - **Reset Phone** to reset all settings and erase all data on your phone.
3. Read the message and select **RESET SETTINGS** or **RESET PHONE**.

Others Settings

You can customize additional settings on your phone such as accessibility, airplane mode, alerts settings, call setup options, data settings, headset mode, display language, location mode, and navigation key shortcut.

Accessibility Settings

The **Accessibility** menu lets you enable and manage accessibility-related features.

Voice Guide

Voice Guide allows you to hear voice prompts and spoken numbers or key names as you press a key, and also to hear menus and options. Contacts names, email addresses, URLs, etc., as you select each item onscreen. (The default setting is **Off**.)

To enable Voice Guide:

1. From **Accessibility**, select **Voice Services > Voice Guide > Speech Output**.
2. Select **On** or **Off**.

To adjust the Speech Rate:

1. From **Accessibility**, select **Voice Services > Voice Guide > Speech Rate**.
2. Select **Slow**, **Normal**, or **Fast**.

Voice Recognition Settings

You can control the settings associated with voice recognition. See “Voice Recognition” on page 46 for more information.

- From **Accessibility**, select **Voice Services > Voice Recognition** to display the voice recognition settings menu.

To change the voice recognition confirmation:

1. From **Voice Recognition**, select **Confirmation**.
2. Select one of the following:
 - **Automatic** to ask for confirmation only when the system is not sure what you said.
 - **Always Confirm** to always ask for confirmation.

- **Never Confirm** to never ask for confirmation.

To adapt the system to your voice:

1. From **Voice Recognition**, select **Adaptation > Adapt Voice**.
2. Select **START** and repeat each word, phrase, or telephone number you hear.

To reset the adaptation:

1. From **Voice Recognition**, select **Adaptation**.
2. Select **Reset Voice > YES**.

To change the audio mode:

1. From **Voice Recognition**, select **Audio Modes**.
2. Select one of the following:
 - **Expert Mode** to sound a beep only.
 - **Prompt Mode** to prompt for required information.
 - **Readout Mode** to prompt for required information and to read the text displayed on the main screen.

To change the dialing region:

1. From **Voice Recognition**, select **Dialing Region**.
2. Select one of the following:
 - **North America** to recognize only numbers valid in North America.
 - **Other** to recognize any number regardless of location.

To display the software version:

- From **Voice Recognition**, select **About**.

Connect to TTY Device

You can connect the phone to a teletype (TTY) device for the hearing impaired. (TTY device sold separately.)

 **Note:** Enable TTY only when using the phone with a TTY device.

1. Connect the TTY device to your phone.
2. From **Accessibility**, select **TTY**.
3. Select **OK** to clear the notification.
4. Select one of the following:
 - **TTY Off** to disable TTY.
 - **TTY VCO** to enable TTY mode in Voice Carry Over mode.
 - **TTY HCO** to enable TTY mode in Hearing Carry Over mode.
 - **TTY Full** to enable all TTY settings.

Vibrate Type

You can select vibration patterns for incoming calls, messages, alarms, and scheduled events.

1. From **Accessibility**, select **Vibrate Type**.
2. Select **Incoming Calls**, **Voice mail**, **Messages**, or **Alarm/Calendar**.
3. Select a vibration pattern.

Screen Contrast

You can make your screen easier to read with a high contrast color scheme.

1. From **Accessibility**, select **Screen Contrast**.
2. Select **Standard Color** or **High Contrast BW**.

Connect to Hearing Aid Device

With a hearing aid device (sold separately) connected, you can enable the hearing aid feature.

1. Connect the hearing aid device to your phone.
2. From **Accessibility**, select **Hearing Aid**.
3. Select **OK** to clear the notification.
4. Select **On**.

Airplane Mode

Airplane Mode allows you to use many of your phone's features, such as games and voice memos, when you are on an airplane or in any other area where making or receiving calls or data is prohibited. When you set your phone to Airplane Mode, it cannot send or receive any calls or access online information.

1. From **Airplane Mode**, select **OK** to clear the notification.
2. Select one of the following:
 - **On** to activate Airplane Mode. Airplane Mode will be deactivated when you turn the phone off.

- **Off** to deactivate Airplane Mode.
- **On Power-up** to activate Airplane Mode each time you turn the phone on.

 **Tip:** While in Airplane Mode, your phone's screen will display the airplane mode icon .

Alerts

You can change the alert settings according to your needs.

Alerts Notification

Set your phone to alert you with an audible tone when you change service areas, once a minute during a voice call, or when a call has been connected.

1. From **Alerts**, select **Beep Each Minute**, **Out of Service**, or **Connect**.
2. Select **On** or **Off**.

Voicemail or Message Alerts

You can set how often your phone alerts you when there is a new voicemail or message notification.

1. From **Alerts**, select **Repeated Tone > Voicemail or Messages**.
2. Select **Single Tone** (once only) or **Repeated Tone** (once every minute).

Persistent Alerts

You can set the type of Alert you would like to receive.

1. From **Alerts**, select **Persistent Alerts**.
2. Select **Audible Tone** or **Vibrate**.
3. Select **On** or **Off**.

Call Setup Options

You can configure various call-related settings.

Abbreviated Dialing

Abbreviated Dialing is similar to speed dialing. You can use either of the following abbreviated dialing features:

- **Contacts Match** - Retrieve any number saved in your Contacts by entering four or more digits of any part of the number.
- **Prepend** - Prepend the first five or six digits (for example, the area code and prefix) to any four or five digits you enter.

To activate the Prepend feature:

1. From **Call Setup**, select **Abbrev. Dial**.
2. Select **Prepend > On**.
3. Enter a five- or six-digit number and select **OK**.

To place a call using Abbreviated Dialing:

1. Enter the four or more digits of any part of a Contacts entry's phone number to use the Contacts Match feature.

– or –

Enter the last four or five digits of the number to use the Prepend feature.

2. Press  to call the displayed number.

Call Answer Mode

You can select how to answer incoming calls on your phone.

1. From **Call Setup**, select **Call Answer**.
2. Select **Talk Key** or **Any Key**.

Auto-Answer Mode

Set your phone to automatically pick up incoming calls. Remember, your phone will answer calls in auto-answer mode even if you are not present.

1. From **Call Setup**, select **Auto-Answer**.
2. Select one of the following:
 - **Hands-free** to answer calls automatically when the phone is connected to an optional headset or hands-free device.
 - **Speakerphone** to answer calls automatically in speakerphone mode.
3. Select the time you would like your phone to wait before answering.

Data Settings

Although your phone's data services are turned off by default, you may enable them at any time.

To enable data services:

1. From **Data Settings**, select **Data > On**.
2. Read the message and select **YES**.

To disable data services:

1. From **Data Settings**, select **Data > Off**.
2. Read the disclaimer and select **DISABLE**.

Net Guard

The Net Guard helps you avoid accidental connections when you connect to the Web.

To enable or disable Net Guard:

1. From **Data Settings**, select **Net Guard**.

2. Select **On** or **Off**.



Note: When enabled, Net Guard appears only once as long as you have not turned the phone off and on.

Update Data Profile

If you choose to change your user name and select a new one online, or make any changes to your services, you must then update the profile on your phone.

- From **Data Settings**, select **Update Data Profile**. (To cancel, press  before completing the update.)

Headset Mode

You can set the sound output destination of incoming ringtone on your phone. From **Headset Mode**, select one of the following:

- **Normal** to play the ringtone for incoming calls through both the headset and the speaker.
- **Headset Only** to play the ringtone for incoming calls only through the headset.

Display Language

You can choose to display your phone's onscreen menus in English or in Spanish.

To assign a language for the phone's display:

1. From **Others**, select **Language**.
2. Select **English** or **Español**.

Location

Before using any of the location-based services, you must turn on your phone's location feature.

To enable your phone's location feature:

1. From **Location**, select **On/Off**.
2. Select **OK** to clear the notification.
3. Select **On**.

 **Tip:** When the Location feature is on, your phone's home screen will display the  icon. When Location is turned off, your phone will display the  icon.

To send the GPS log to other devices:

1. From **Location**, select **NMEA Output**.
2. Select **USB**.

 **Note:** Turning Location on will allow the network to detect your position using GPS technology, making some applications and services easier to use. Turning Location off will disable the GPS location function for all purposes except 911, but will not hide your general location based on the cell site serving your call. No application or service may use your location without your request or permission. GPS-enhanced 911 is not available in all areas.

Navigation Key Shortcut

You can use the navigation keys as shortcuts to access specific menu items directly from the home screen. You can reassign the default shortcuts to the menu items you choose.

1. From **Navigation Keys**, select the navigation key you wish to reassign.
2. Scroll up or down to highlight a function.
3. Select **ASSIGN** to save. (For options with submenu levels, such as Settings, you can assign submenu options by navigating to the desired option.)

7 Contacts

Use **Contacts** to store information about a person or company.

Access Contacts

Access Contacts List

1. From the home screen, select **CONTACTS**.
– or –
Select **Contacts** from the main menu.
2. Enter the first letter of your desired contact and scroll to highlight it.
3. Do one of the following:
 - Press  to call the contact.
 - Press  to view the contact's details.
 - Select **Add New...** to create a new contact.
 - Select **OPTIONS** to access more functions.

View Contact Details

1. From the home screen, select **CONTACTS**.
2. Select a contact to show the details.

Add Contacts

Add Contacts from Home Screen

1. From the home screen, enter a phone number to save.
2. Select **OPTIONS > Save**.
3. Select **New Entry** or **Existing Entry**.
4. If you chose **New Entry**, select a number type, and then enter the new entry name.
– or –
If you chose **Existing Entry**, select an entry to which you want to save the number, and then highlight a number type and press .
5. When done, select **DONE**.

Add Contacts from Contacts Menu

1. From the Contacts list, select **Add New... > New Contact**.
2. Enter a name for the contact. Scroll down to the next field when done.
3. Enter a primary number for the contact and select a number type for the entry.
4. Enter additional phone numbers, email addresses, and other contact details. (Scroll up or down to move through the contact fields.)
5. When done, select **DONE**.

Add a Code or Extension

When saving the phone number of an automated service, you may include a pause for dialing an extension.

1. From the home screen, enter a phone number.
2. Select **OPTIONS** and a type of pause:
 - **Hard Pause** causes the phone to wait until you select **SEND TONES** while making the call.
 - **2-Sec. Pause** causes the phone to stop dialing for two seconds.
3. Enter the remaining numbers and select **OPTIONS > Save**.
4. Complete the contact information and select **DONE**.

Use Contacts

Call Contacts

1. From the Contacts list, highlight a contact.
2. Press  to dial the entry's default phone number.
 - or –
 - To dial another number from the same entry, select an entry to display the contact details screen, highlight a number and then press .

Send a Text Message to Contacts

1. From the Contacts list, select a contact.
2. At the contact details screen, highlight a number or email address.
3. Select **SEND MESSAGE**.
4. Complete your text message and select **SEND**.

Send a Contact

1. From the Contacts list, select a contact.
2. Select **OPTIONS > Send Contact** to send to a Bluetooth-enabled device.
3. Complete the appropriate task to send the contact information.

Customize Contacts

Edit Contact Details

1. From the Contacts list, highlight a contact.
2. Select **OPTIONS > Edit Contact**.
3. Enter additional phone numbers, email addresses, and other contact details. (Scroll up or down to move through the contact fields.)
4. When done, select **DONE**.

Assign Number Types

1. From the Contacts list, select a contact.
2. At the contact details screen, select **OPTIONS > Edit**.
3. Highlight the number and select **OPTIONS > Set # Type**.
4. Select a number type. The appropriate icon appears next to the number in your contacts list.
5. Select **DONE**.

Assign Ringtones to Contacts

1. From the Contacts list, select a contact.
2. At the contact details screen, select **Set Ringtones**.
3. Select **Incoming Calls** or **Message > Change**.
4. Select a ringtone from the list. (Scroll to select a ringtone.)

Assign Pictures to Contacts

1. From the Contacts list, select a contact.
2. At the contact details screen, scroll up to select .
3. Select **Choose Photo**.
4. Select a picture from the list. (Scroll to select a picture.)

Add a Prefix to Phone Numbers

Use **Prepend** to add a prefix, such as an area code, to a phone number:

1. From the Contacts list, select a contact.
2. At the contact details screen, highlight a number.
3. Select **OPTIONS > Prepend** to enter the prefix at the beginning of the number.

Assign Speed Dials to Contacts

1. From the Contacts list, select a contact.
2. At the contact details screen, highlight a number.
3. Select **OPTIONS > Set Speed Dial**.
4. Select a location from the list to assign the speed dial number.

Delete Contacts

1. From the Contacts list, select a contact.
2. Select **OPTIONS > Delete Contact > DELETE.**

 **Note:** You cannot recover deleted information.

Contact Groups

You can assign your contacts to groups.

Create a New Group

1. From the Contacts list, select **Add New... > New Group.**
2. Read the message and select **START.**
3. Select contacts from the list provided. A checkmark appears next to each selection. (You can also remove checkmarks.)
4. When finished, select **CONTINUE.**
5. Enter a name for the group and select **SAVE.**

Remove Contacts from Groups

1. From the Contacts list, highlight a group.
2. Select **OPTIONS > Edit Group.**
3. Highlight a member and select **OPTIONS > Remove from Group > YES.**
4. Repeat step 3 to remove additional members.

5. When finished, select **SAVE.**

Delete a Group

1. From the Contacts list, highlight a group.
2. Select **OPTIONS > Delete Group > DELETE.**

Speed Dial List

Assign Speed Dial Numbers

1. From the Contacts list, select **OPTIONS > Settings > Speed Numbers.**
2. Highlight an unassigned number (marked as empty) and select **ASSIGN.**
3. At the contacts list, select a contact.

Clear Speed Dial Numbers

1. From the Contacts list, select **OPTIONS > Settings > Speed Numbers.**
2. Highlight an assigned number and select **OPTIONS > Remove.**

Dial Services

Your Contacts list is preprogrammed with contact numbers for various services.

1. From the Contacts list, select **OPTIONS > Settings > Services.**
2. Select a service and press .

ICE Contacts

Your phone is equipped with a key that displays the ICE (In Case of Emergency) contacts, which could be very helpful in case of emergency.

Add an ICE Contact

1. From the Contacts list, select **OPTIONS** > **Settings** > **ICE** > **ICE Contacts**.
2. Highlight **Add to ICE Contacts** under “Call” or “Text” field and select **ASSIGN**.
3. Select the entry to register as ICE contact.

Call an ICE Contact

1. From the home screen, press and hold .
2. Read the message and select **OK**.

Replace or Remove an ICE Contact

1. From the Contacts list, select **OPTIONS** > **Settings** > **ICE** > **ICE Contacts**.
2. Highlight an entry and select **OPTIONS**.
3. Select **Replace** to select another contact. Select a new contact from the displayed list.

– or –

Select **Remove** > **YES** to remove the selected contact.

Emergency Message

To send an emergency message:

1. From the Contacts list, select **OPTIONS** > **Settings** > **ICE**.
2. Select **SEND TEXT** > **OK**.

 **Note:** When Location settings is turned off, it will be automatically turned on.

To enter or edit the emergency message:

1. From the Contacts list, select **OPTIONS** > **Settings** > **ICE**.
2. Select **Emergency Message** > **EDIT**.
3. Enter or edit the message and select **DONE**.

ICE Information

1. From the Contacts list, select **OPTIONS** > **Settings** > **ICE**.
2. Select **My Information** > **EDIT**.
3. Enter or edit the necessary information and select **DONE**.

8 Messaging

Use **Messaging** to send, receive, and erase messages from your phone.

Messaging Menu

Select **Messaging** from the main menu to access the following functions:

Level 1 >	Level 2 >	Level 3
Messaging	Voicemail	Access these options: Call Voicemail and Voicemail Details .
	Send Message	Compose a text message.
	Messages	Shows a list of threads.

Use Voicemail

Set Up your Voicemail

You should set up your Voicemail and personal greeting as soon as your phone is activated. Always use a password to protect against unauthorized access.

1. Press and hold .
2. Follow the voice prompts to create your password and record your name and greeting.

 **Note:** It is strongly recommended that you set a voicemail password. Without a password, anyone who has access to your phone can access your messages.

Check your Voicemail

When you receive a voicemail message, a notification with a voicemail message icon  appears at the top of your screen.

1. At the voicemail notification, press .
2. Enter your voicemail password if prompted.
3. Follow the voice prompts to listen to and manage your voicemail messages.

Retrieve Your Voicemail Messages

You can review your messages directly from your wireless phone or from any other touch-tone phone.

From your wireless phone:

- Press and hold .

- To use the phone's menu, select **Messaging > Voicemail > Call Voicemail**.

From any other phone:

1. Dial your wireless phone number.
2. When your voicemail answers, press the asterisk key (*).
3. Enter your password.

Check Voicemail Details

You can review your voicemail messages on your wireless phone.

- From **Messaging**, select **Voicemail > Voicemail Details**.

Send Messages

You can send and receive text messages with most mobile phones and email addresses.

Create a Text Message

1. From **Messaging**, select **Send Message**.
2. Select a recipient from the list or from the following options:
 - **Go to Contacts** to select a recipient from your Contacts. (Qualifying Contacts entries must contain a phone number or an email address.)
 - **MULTIPLE** to select multiple recipients. Select **CONTINUE** when you have finished selecting and entering recipients.

- **NEW ADDRESS** to enter a recipient's phone number or email address directly. Select **CONTINUE** to proceed.

3. Enter the message. (Select **OPTIONS** to access more features.)
4. When done, select **SEND**.

Access Messages

Read and reply to the messages you have received.

To read a message:

- When you receive a message, your phone will display a notification message. Use your navigation key or select **View**.

To reply to a message:

1. While the message is displayed, select **REPLY**.
2. Compose a reply.
3. When done, select **SEND**.

 **Note:** The Kyocera JAX is not capable of receiving picture and video messages.

Threaded Messaging

Threaded messaging lets you follow a chain of messages to and from a particular contact.

To display the thread list:

- From **Messaging**, select **Messages**.

View Messages

Select a thread to display the messages sent to and received from a particular contact, in reverse chronological order. Failed, pending, and draft messages are also listed.

- **Me** - Message you sent.
- **Me (Failed)** - Message you did not send successfully.
- **Me (Pending)** - Message you have not sent yet because your phone has no network connection. The message will be sent automatically when your phone reconnects to the network.
- **Me (Draft)** - Message you saved as a draft. Only one draft can be saved in each thread, and that draft appears at the top of the thread.

Threaded Messaging Options

When you are viewing a messaging thread list, select **OPTIONS**. You can choose from the following options. (Options will vary according to screen.)

- **Forward** to forward the selected message.
- **Lock** to lock the selected message.
- **Unlock** to unlock the selected message.
- **Unlock All** to unlock all messages.

 **Note:** Messages are automatically deleted starting with the oldest. To save messages, lock them.

- **Delete** to delete the selected message.

- **Call** to dial the phone number appearing in the selected message.
- **Launch** to open the URL appearing in the selected message.
- **Save Number** to save the phone number appearing in the selected message.
- **Save Email** to save the email address appearing in the selected message.
- **Manage Text Blocking** to block text messages from specific phone numbers or email addresses.
- **Block This Sender** to block text messages from the phone number or email address of the selected message's sender.
- **Settings** to display the Messaging Settings menu.
- **Combine/Uncombine** to display segmented messages as one message or vice versa.
- **More Information** to display more information when receiving an Emergency Alert message. See “Emergency Alerts” on page 38.

Message Settings

Messaging settings allow you to set how the phone handles incoming and outgoing messages.

Clear Alerts Icon

Clear Alerts Icon will clear the envelope icon on the display.

1. From **Messaging**, select **OPTIONS > Clear Alerts Icon**.
2. Select **YES**.

Message Alerts

You can set how often your phone alerts you when there is a new message notification.

1. From **Messaging**, select **OPTIONS > Repeated Tone > Messages**.
2. Select **Single Tone** (once only) or **Repeated Tone** (once every minute).

Callback Number

With this feature, you can specify the callback number your recipients see when you send messages.

1. From **Messaging**, select **OPTIONS > Callback Number**.
2. Select **None, My Phone Number**, or **Other**. (If you select **Other**, enter a callback number.)

Set your Signature

Add a customized signature to each message you send.

1. From **Messaging**, select **OPTIONS > Signature**.
2. Select **On** (If you do not wish to attach a signature to your outgoing messages, select **Off**.)
3. Enter a signature and select **OK**.

Edit Preset Messages

Your phone comes with preset messages, such as “Give me a call” which you can insert into the body of a text message.

1. From **Messaging**, select **OPTIONS > Preset Messages**. (The list of preset messages will be displayed.)
2. Select **OPTIONS** and do one of the following:
 - Select **Send Message** to insert a preset message to your text message.
 - Select **Edit** to edit the text.
 - Select **Delete** to delete the preset message.
 - Select **Reset all messages** to reset all messages.
 - Select **Select Language** to change the language of the preset message.

Emergency Alerts

Your phone is compatible with federally supervised cell phone alert services which send out broadcast SMS messages for public warning.

1. From **Messaging**, select **OPTIONS > Emergency Alerts**.
2. Check the box next to the options you wish to select:
 - **Presidential Alerts** to deliver a national Presidential alert. Presidential Alerts is always grayed out (not selectable) and cannot be excluded.

- **Imminent Threat - Extreme** to deliver emergency alerts in an extreme emergency situation (an extraordinary threat to life or property).
- **Imminent Threat - Severe** to deliver emergency alerts in a severe emergency situation (a significant threat to life or property).
- **Amber Alerts** to deliver alerts related to missing or endangered children.
- **Emergency Alerts Test Messages** to send a test message to make sure that the alert messages can be successfully received.

Long Message Reassembly

When you receive a long message, it is divided into up to 15 messages and delivered to your phone. You can choose to combine them to display as one message rather than segmented ones.

1. From **Messaging**, select **OPTIONS > Long Message Re-assembly**.
2. Select **On** or **Off**.

Simple Data Exchange

This feature makes it easy to select certain information in a message and automatically save it or use it in a related application.

Simple Data Exchange works with these types of information:

- Email addresses
- Street addresses
- Phone numbers
- Web addresses (URLs)

Data Exchange Options

1. When viewing a message, highlight an email address, a street address, a phone number, or a Web address (URL) and press .
2. You will find the list of available options.
3. Select an option and complete the appropriate task.

9 Tools

Tools Menu

Select **Tools** from the main menu to access the following functions:

Level 1 >	Level 2 >	Level 3
Tools	Activate This Device	Launch the Device Self Service application.
	Alarm	Set an alarm.
	Calendar	Access your calendar.
	Bluetooth	Access these options: On/Off , Visibility , Add New, Trusted Devices , and My Bluetooth Info .
	Update Phone	Access these options: Update Firmware and Update PRL .
	Voice Services	Access these options: Voice Recognition and Voice Memo .
	Calculator	Perform basic calculations.
	Countdown	Set a countdown timer.
	Stopwatch	Use a stopwatch timer.
	World Clock	View times from different time zones.
Notepad	Use the note pad.	

Alarm

Your phone comes with a built-in alarm that has multiple alarm capabilities.

Set an Alarm

1. From **Alarm**, select an alarm number.
2. Turn the alarm on or off by selecting the **Alarm** field.
3. Enter a description by selecting the **Description** field.
4. Select a time by selecting the **Time** field.
 - Scroll left or right to move between hour, minute and AM/PM fields.
 - Scroll up or down to change hour, minute and AM/PM.
5. Select a repeat status by selecting the **Repeat** field.
6. Select a ringtone option by selecting the **Ringtone** field.
7. Select a volume level by selecting the **Volume** field.
8. Select a ringtone length by selecting the **Ringtone Length** field.
9. Select a snooze interval by selecting the **Snooze Interval** field.
10. Select the number of times the snooze should repeat by selecting the **Snooze Times** field.
11. Select **SAVE**.

 **Tip:** From Alarm, select **ON** or **OFF** to toggle the alarm on and off.

Calendar

Use **Calendar** to schedule events and set reminder alerts.

Create an Event

1. From **Calendar**, highlight a day to which you would like to add an event.
2. Select **OPTIONS > Add Schedule** and enter a description. Scroll down to move to the next field when done.
3. Select a category by selecting the **Category** field.
4. Select a priority by selecting the **Priority** field.
5. Select a start and end time by selecting the **Start** and **End** fields.
6. Enter a location by selecting the **Location** field. Select **EDIT** to enter a text.
7. Select a ringtone option by selecting the **Ringtone** field.
8. Select an alarm time by selecting the **Alarm Time** field.
9. Select a repeat status by selecting the **Repeat** field.
10. Select **SAVE**.

 **Tip:** To change the calendar display views, select **MONTH** or **WEEK** repeatedly to toggle between monthly and weekly views.

Add a To Do List Item

1. From **Calendar**, highlight a day to which you would like add a To Do list item and select **OPTIONS**.
2. Scroll right to select **Add To Do** and enter a description. Scroll down to move to the next field when done.
3. Select a category by selecting the **Category** field.
4. Select a priority by selecting the **Priority** field.
5. Select a time and date for the item by selecting the **Due Time/Date** field.
6. Select a status for the item by selecting the **Status** field. When you add an item, set it to **Needs Action**.
7. Select **SAVE**.

Calendar Alerts

If you have an event on the Calendar, your phone alerts you with a ringing or vibrating alarm and displays a summary of the event. To respond to the alarm, do one of the following:

- Select **SNOOZE** or **Snooze** to stop the alarm and start snooze mode.
- Select **DISMISS** to clear the alarm.
- Select **View** to display the event detail screen.

View Events

1. From **Calendar**, select the day for which you would like to view events or select **OPTIONS** > **Schedule List** or **To Do List**.
2. Highlight an event and press . The event's details are displayed. You can edit the event on this screen.

Delete Events

1. From **Calendar**, select the day for which you would like to delete an event or select **OPTIONS** > **Schedule List** or **To Do List**.
2. Highlight an event and select **OPTIONS** > **Delete**.
3. Select one of the following:
 - **This** to delete the highlighted event.
 - **Select** to delete multiple events.
 - **All on This List** to delete all events on the list.
 - **All Completed Events** to delete completed To Do List items.
4. Select **YES**.

Delete Old Events or All Events

1. From **Calendar**, select **OPTIONS** > **Delete Memory**.
2. Select **Delete Old** or **Delete All**.
3. Select **YES**.

Bluetooth

Bluetooth® is a short-range communications technology that allows you to connect wirelessly to a number of Bluetooth devices, such as headsets and hands-free car kits, and Bluetooth-enabled handhelds, computers, and wireless phones. The Bluetooth communication range is usually approximately 30 feet.

Turn Bluetooth On and Off

By default, your phone's Bluetooth feature is turned off. Turning Bluetooth on enables your phone's Bluetooth functions.

1. From **Bluetooth**, select **On/Off**.
2. Select **ON** to enable Bluetooth. Select **OFF** to disable Bluetooth.

Make Your Phone Discoverable

To make your phone discoverable, you must set your phone's visibility to other than **Hidden**.

1. From **Bluetooth**, select **Visibility**.
2. Select **Visible for 3 min** or **Always visible**.

Bluetooth Menu

The Bluetooth menu allows you to set up many of the characteristics of your phone's Bluetooth feature.

From **Bluetooth**, select from the following options:

- Select **On/Off** to enable or disable Bluetooth.
- Select **Visibility > Hidden, Visible for 3 min**, or **Always visible** to set your Bluetooth visibility.
- Select **Add New** to add a new Bluetooth device.
- Select **Trusted Devices** to display a list of trusted Bluetooth devices.
- Select **My Bluetooth Info** to display your phone's Bluetooth name, address, class, and supported profiles.

Pair Bluetooth Devices

The Bluetooth pairing process allows you to establish trusted connections between your phone and another Bluetooth device. When devices are paired, a passkey (PIN) is shared between devices, allowing for fast, secure connections while bypassing the discovery and authentication process.

1. From **Bluetooth**, select **Add New**.
2. Select the device you wish to pair with.
3. If prompted, accept the connection on the receiving device, and enter the same passcode on both your phone and the other device, or confirm the auto-generated passcode, and then select **OK**.

4. Edit the device name and select **SAVE**.

 **Note:** Due to different specifications and features of other Bluetooth compatible devices, display and operations may be different, and functions such as transfer or exchange may not be possible.

View the Trusted Devices List

This list displays a list of devices which are paired with your phone and set as trusted devices. From **Bluetooth**, select **Trusted Devices**.

- Select **CONNECT...** to connect to the selected Bluetooth device.
- Select **TRANSFER...** to send data saved on your phone to the selected Bluetooth device.
- Select **OPTIONS** to access more features:
 - **Add New** to add a new Bluetooth device.
 - **Delete** or **Delete All** to delete the selected device or all devices from the list.
 - **Auto-Accept** to configure your phone's accessibility to other Bluetooth devices.
 - **View/Edit Info** to view or edit the information of the selected device.
 - **Help** to display the Trusted Devices list help.

Send Items via Bluetooth

1. From **Bluetooth**, select **Trusted Devices**.
2. Select the device from the Trusted Devices list and select **TRANSFER...**
3. Select **Send Contacts**, **Send Name Card** or **Exchange Name Cards**.
4. Follow the onscreen instructions to select items to send.
5. Read the message and select **SEND**.

Use Calculator

1. From **Calculator**, enter the first number.
2. Select a mathematical operation:
 - Scroll left to multiply.
 - Scroll right to divide.
 - Scroll up to add.
 - Scroll down to subtract.Your selection will appear highlighted.
3. Enter the second number, and press to view the result.
4. Select **CLEAR** to clear all numbers.

Countdown

This feature allows you to use your phone as a countdown timer to alert you when a specified period of time has elapsed.

1. From **Countdown**, select a countdown timer number.
2. Enter the time length by selecting the **Time** field.

- Scroll left or right to move between minutes or seconds fields.
 - Scroll up or down to change minutes or seconds.
3. Turn the alarm On or Off by selecting the **Alarm** field.
 4. Select **SAVE**.
-  **Tip:** When the countdown is complete, select **DISMISS** to silence the alarm.

Use Stopwatch

From **Stopwatch**, select from the following options:

- **MODE** selects split timing or lap timing.
- **START** begins counting.
- **SPRIT** or **LAP** records the time.
- **STOP** pauses counting.
- **RESET** clears the stopwatch.

World Clock

Use **World Clock** to view the local time in various cities around the world.

- From **World Clock**, scroll left or right to view the time in different locations.

 **Note:** Select **OPTIONS > Standard** or **Summer** to change between daylight saving time and standard time.

Notepad

Your phone offers a simple notepad to allow you store your notes.

Write a Note

1. From **Notepad**, select **Add New...**
2. Enter a note and select **OK**.

View a Note

- From **Notepad**, select a note to open note.

Edit a Note

1. From **Notepad**, highlight a note you want to edit and select **EDIT**.
2. Edit the note and select **OK**.

Delete a Note

1. From **Notepad**, highlight a note you want to delete.
2. Select **DELETE > This**.
3. Select **YES**.

Delete All Notes

1. From **Notepad**, select **DELETE > All**.
2. Select **YES**.

Voice Services

Your phone's voice services let you place calls using your voice, store voice reminders, and record memos right on your phone.

Voice Recognition

You can use your phone's built-in automatic speech recognition (ASR) software to dial a phone number or to launch phone functions. All you have to do is to talk into the phone, and ASR will recognize your voice and complete tasks by itself.

To control the settings associated with voice recognition, see "Voice Recognition Settings" on page 25.

Start Voice Recognition

Do one of the following to start Voice Recognition:

- Press and hold  or .
- From the Tools menu, select **Voice Services > Voice Recognition**.

Use Voice Recognition

1. Start **Voice Recognition**.
2. When prompted to speak, say a command from the displayed list on screen. When the application recognizes the command, it executes the command right away.

 **Tip:** During ASR operation, select **TUTORIAL** or **HELP** to get instructions for using the software.

Call a Contact or a Number By Voice Recognition

1. Start **Voice Recognition**.
2. When prompted to speak, say **Call <Name or #>**. For example, to call John Smith's mobile phone, say "**Call John Smith Mobile**." Your phone will automatically call the said contact.

 **Note:** If the application cannot recognize the number or name, it displays several possible matches. Say **Yes** or **No**.

Send Text Message By Voice Recognition

1. Start **Voice Recognition**.
2. When prompted to speak, say **Send Message <Name or #>**. For example, to send a text message to Joe, say "**Send Message Joe**."

 **Note:** If the application cannot recognize the number or name, it displays several possible matches. Say **Yes** or **No**.

3. The compose message screen appears. The contact name or number that you said is displayed on the **To** box. Complete your message.
4. Select **SEND** to send the text message.

Search Contact Details By Voice Recognition

1. Start **Voice Recognition**.
2. When prompted to speak, say **Lookup <Name>**. For example, to search for Jessica's contact details, say "**Lookup Jessica**." The contact details screen is displayed.

Open Menus By Voice Recognition

1. Start **Voice Recognition**.
2. When prompted to speak, say **Go To <Menu>**. For example, to open Settings, say "**Go To Settings**." The phone opens the selected menu.

 **Tip:** Say "More Options" to display additional application names.

Check Item By Voice Recognition

1. Start **Voice Recognition**.
2. When prompted to speak, say **Check <Item>**. For example, to check the signal strength status, say "**Check Signal Strength**" to display information on screen.

Available checkable items are as follows: **Status**, **Time**, **Signal Strength**, **Network**, **Battery**, and **My Phone Number**.

View Voice Recognition Tutorial

1. Start **Voice Recognition**.
2. Select **TUTORIAL**.

Configure Voice Recognition Settings

1. Start **Voice Recognition**.
2. Select **SETTINGS**.
3. Select to configure one of the following settings:
 - **Confirmation** to control when the system asks you to confirm a name or number.
 - **Adaptation** to improve the accuracy of the application's speech recognition.
 - **Audio Modes** to set the mode of audio assistance.
 - **Dialing Region** to specify the dialing region.
 - **About** to view the software version.

Voice Memo

Use **Voice Memo** to record and play back audio memos.

Record Voice Memos

1. From **Voice Services**, select **Voice Memo > Record**.
2. Record your voice memo.
3. Select **STOP** when done.

Play Voice Memos

1. From **Voice Services**, select **Voice Memo > List** and highlight a memo.
2. Select **PLAY** to play the memo or **OPTIONS** to access more features.

10 History

Work with History

View History List

- From the home screen, press .
- or –
- Select **History** from the main menu.

History Icons

You can determine if an entry was an incoming, outgoing, or missed call from the icons shown below.



= Incoming Call



= Outgoing Call



= Missed Call

View History Thread

The History thread screen shows all history for a selected entry.

- From the History list, highlight an entry and press .



Tip: Text messages are included in the History thread.

Make a Call From History

1. From the History list, highlight an entry.
2. Press  to call the number or select **OPTIONS** to access more features.

History List Options

When you are viewing a history list, select **OPTIONS**. You have the following options:

- **New Group** to create a new group entry.
- **Contact Details** to display information about the entry if it has already been saved in your Contacts.
- **Save Contact** to save a phone number.
- **Delete** to delete the entry.
- **Delete All** to delete all History entries.
- **Prepend** to add numbers to the beginning of the selected number.

Delete a Single Record

1. From the History list, highlight an entry.
2. Select **OPTIONS** > **Delete** > **DELETE**.

Delete All History Records

1. From the History list, highlight an entry.
2. Select **OPTIONS** > **Delete All** > **DELETE**.

11 Web

Surf the Web

You can use your phone to browse the Internet if you have obtained phone Internet services from your service provider and if over-the-air Internet access is available in your area.

Launch Browser

- Select **Web** from the main menu.

 **Note:** If Net Guard is enabled and displayed, select **YES** to continue and launch the browser.

Browse the Web

A browser home page with a list of bookmarks and some browser menu options appear when you are connected to the Web. The lock icon appears in a secure session. You can do the following:

- To choose a site, scroll to the link and press the appropriate softkey.
- To scroll line by line through websites, use the navigation key.
- Press  to return to the previous screen.
- Press  to exit.
- Select **Navigation** to use the navigation window.
- Select **Options** to access more browser features.

Add a Bookmark

1. Surf to the Web page you want to bookmark and select **Options** > **Add this page to Bookmarks**.
2. Edit the bookmark's details, if needed.
3. Select **SaveChange** to save the bookmark.

 **Tip:** To access your saved bookmarks, select **Options** > **View all bookmarks** from any web page.

Search the Web

- From **Web**, select **Options** > **Search the web** to go directly to the browser's search page.

 **Tip:** You can also press and hold  from the home screen to search the web.

12 Get Help

Customer Support

To contact Assurance Wireless's customer support department for information about your phone, account history, call coverage area, and specific features available to you, such as call forwarding or voicemail:

- Go to www.assurancewireless.com.
- Dial *VM from your Assurance Wireless phone.
- Dial 1-888-321-5880 from any phone.

For questions about the phone features, refer to the materials provided with your phone, or visit

www.assurancewireless.com.

For additional questions, you may contact the Kyocera Communications Inc. Customer Care Center in any of the following ways:

- Web site: www.kyocera-wireless.com.
- Email: phone-help@kyocera-wireless.com.
- Phone: 1-800-349-4478 (U.S. and Canada) or 1-858-882-1401.

Before requesting support, please try to reproduce and isolate the problem. When you contact the Customer Care Center, be ready to provide the following information:

- The name of your service provider: Assurance Wireless.
- The actual error message or problem you are experiencing.

- The steps you took to reproduce the problem.
- The phone's mobile equipment ID (MEID). To locate the MEID, select **MENU > Settings > Phone Info > My Phone#** and scroll down.

Qualified Service

If the problem with your phone persists, return the phone with all accessories and packaging to the dealer for qualified service.

Phone Accessories

To shop for accessories for your phone, visit www.assurancewireless.com or kyocera.superiorcommunications.com.

Become a Product Evaluator

To participate in the testing and evaluation of Kyocera Communications Inc. products, including cellular or PCS phones, visit beta.kyocera-wireless.com.

Important Safety Information

This section contains important operational and safety information that will help you safely use your phone. Failure to read and follow the information provided in this section may result in serious bodily injury, death, or property damage.

General Precautions

There are several simple guidelines to operating your phone properly and maintaining safe, satisfactory service.

- To maximize performance, do not touch the portions of your phone where the internal antennas are located while using the phone.
- Speak directly into the mouthpiece.
- Avoid exposing your phone and accessories to rain or liquid spills. If your phone does get wet, immediately turn the power off and remove the battery.
- Do not expose your phone to direct sunlight for extended periods of time (such as on the dashboard of a car).
- Although your phone is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending, or sitting on it.
- Any changes or modifications to your phone not expressly approved in this document could void your warranty for this equipment and void your authority to operate this equipment.

 **Note:** For the best care of your phone, only Kyocera-authorized personnel should service your phone and accessories. Failure to do so may be dangerous and void your warranty.

Maintaining Safe Use of and Access to Your Phone

Do Not Rely on Your Phone for Emergency Calls

Mobile phones operate using radio signals, which cannot guarantee connection in all conditions. Therefore you should never rely solely upon any mobile phone for essential communication (e.g., medical emergencies). Emergency calls may not be possible on all cellular networks or when certain network services or mobile phone features are in use. Check with your local service provider for details.

Using Your Phone While Driving

Talking on your phone while driving (or operating the phone without a hands-free device) is prohibited in some jurisdictions. Laws vary as to specific restrictions. Remember that safety always comes first.

Following Safety Guidelines

To operate your phone safely and efficiently, always follow any special regulations in a given area. Turn your phone off in areas where use is forbidden or when it may cause interference or danger.

Using Your Phone Near Other Electronic Devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, RF signals from wireless phones may affect inadequately shielded electronic equipment.

RF signals may affect improperly installed or inadequately shielded electronic operating systems or entertainment systems in motor vehicles. Check with the manufacturer or their representative to determine if these systems are adequately shielded from external RF signals. Also check with the manufacturer regarding any equipment that has been added to your vehicle.

Consult the manufacturer of any personal medical devices, such as pacemakers and hearing aids, to determine if they are adequately shielded from external RF signals.



Note: Always turn off the phone in healthcare facilities, and request permission before using the phone near medical equipment.

Turning Off Your Phone Before Flying

Turn off your phone before boarding any aircraft. To prevent possible interference with aircraft systems, the U.S. Federal Aviation Administration (FAA) regulations require you to have permission from a crew member to use your phone while the plane is on the ground. To prevent any risk of interference, FCC regulations prohibit using your phone while the plane is in the air.

Turning Off Your Phone in Dangerous Areas

To avoid interfering with blasting operations, turn your phone off when in a blasting area or in other areas with signs indicating two-way radios should be turned off. Construction crews often use remote-control RF devices to set off explosives.

Turn your phone off when you're in any area that has a potentially explosive atmosphere. Although it's rare, your phone and accessories could generate sparks. Sparks can cause an explosion or fire, resulting in bodily injury or even death. These areas are often, but not always, clearly marked. They include:

- Fueling areas such as gas stations.
- Below deck on boats.
- Fuel or chemical transfer or storage facilities.

- Areas where the air contains chemicals or particles such as grain, dust, or metal powders.
- Any other area where you would normally be advised to turn off your vehicle's engine.

 **Note:** Never transport or store flammable gas, flammable liquids, or explosives in the compartment of your vehicle that contains your phone or accessories.

Restricting Children's Access to Your Phone

Your phone is not a toy. Do not allow children to play with it as they could hurt themselves and others, damage the phone or make calls that could potentially cost you money.

Using Your Phone With a Hearing Aid Device

When some wireless phones are used with certain hearing devices (including hearing aids and cochlear implants), users may detect a noise which can interfere with the effectiveness of the hearing device.

Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference noise they may generate. ANSI standard C63.19 was developed to provide a standardized means of measuring both wireless phone and

hearing devices to determine usability rating categories for both.

Ratings have been developed for mobile phones to assist hearing device users find phones that may be compatible with their hearing device. Not all phones have been rated for compatibility with hearing devices. Phones that have been rated have a label located on the box. **Your JAX has an M4 and a T4 rating.**

These ratings are not guarantees. Results will vary depending on the user's hearing device and individual type and degree of hearing loss. If a hearing device is particularly vulnerable to interference noise; even a phone with a higher rating may still cause unacceptable noise levels in the hearing device. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

M-Ratings: Phones rated M3 or M4 meet FCC requirements for hearing aid compatibility and are likely to generate less interference to hearing devices than unrated phones. (M4 is the better/higher of the two ratings.)

T-Ratings: Phones rated T3 or T4 meet FCC requirements and are likely to be more usable with a hearing device's telecoil ("T Switch" or "Telephone Switch") than unrated phones. (T4 is the better/higher of the two ratings. Note that not all hearing devices have telecoils in them.)

 **Note:** This phone has been tested and rated for use with hearing aids for some

of the wireless technologies that it uses. However, there may be some newer wireless technologies used in this phone that have not been tested yet for use with hearing aids. It is important to try the different features of this phone thoroughly and in different locations, using your hearing aid or cochlear implant, to determine if you hear any interfering noise. Consult your service provider or the manufacturer of this phone for information on hearing aid compatibility. If you have questions about return or exchange policies, consult your service provider or phone retailer.

Hearing aid devices may also be measured for immunity to interference noise from wireless phones and should have ratings similar to phones. Ask your hearing healthcare professional for the rating of your hearing aid. Add the rating of your hearing aid and your phone to determine probable usability:

- Any combined rating equal to or greater than six offers excellent use.
- Any combined rating equal to five is considered normal use.
- Any combined rating equal to four is considered usable.

Thus, if you pair an M3 hearing aid with an M3 phone, you will have a combined rating of six for “excellent use.” This is synonymous for T ratings.

More information about hearing aid compatibility may be found at:

www.fcc.gov, www.fda.gov, and www.accesswireless.org.

Getting the Best Hearing Device Experience With Your Phone

To further minimize interference, move the phone around to find the point with least interference.

Caring for the Battery

Protecting Your Battery

The guidelines listed below help you get the most out of your battery’s performance.

- Recently there have been some public reports of wireless phone batteries overheating, catching fire, or exploding. It appears that many, if not all, of these reports involve counterfeit or inexpensive, aftermarket-brand batteries with unknown or questionable manufacturing standards. Use only manufacturer-approved batteries and accessories. Buying the right batteries and accessories is the best way to ensure they’re genuine and safe.
- Do not disassemble or open, crush, bend or deform, or puncture or shred the battery.
- Do not modify or remanufacture, attempt to insert foreign objects into the battery, immerse or expose to water or other liquids, expose to fire, explosion, or other hazard.

- Avoid dropping the phone or battery. If the phone or battery is dropped, especially on a hard surface, and the user suspects damage, take it to a service center for inspection.
- Improper battery use may result in a fire, explosion or other hazard.
- Do not short-circuit a battery or allow metallic conductive objects to contact battery terminals.
- Keep the metal contacts on top of the battery clean.
- Battery usage by children should be supervised.

Charging

- In order to avoid damage, charge the battery only in temperatures that range from 32° F to 113° F (0° C to 45° C).
- Don't use the battery charger in direct sunlight or in high humidity areas, such as the bathroom.
- The battery may need recharging if it has not been used for a long period of time.
- It's best to replace the battery when it no longer provides acceptable performance. It can be recharged hundreds of times before it needs replacing.

Storing

- Don't store the battery in high temperature areas for long periods of

time. It's best to follow these storage rules:

- Less than one month:
-4° F to 140° F (-20° C to 60° C)
- More than one month:
-4° F to 113° F (-20° C to 45° C)

Disposal of Lithium Ion (Li-Ion) Batteries

- Promptly dispose of used batteries in accordance with local regulations.
- Never dispose of the battery by incineration.
- Do not handle a damaged or leaking Li-Ion battery as you can be burned.
- For safe disposal options of your Li-Ion batteries, contact your nearest authorized service center.

⚠ Special Note: Be sure to dispose of your battery properly. In some areas, the disposal of batteries in household or business trash may be prohibited.

Radio Frequency (RF) Energy

Understanding How Your Phone Operates

Your phone is basically a radio transmitter and receiver. When it's turned on, it receives and transmits radio frequency (RF) signals. When you use your phone, the system handling your call controls the

power level. This power can range from 0.006 watt to 0.2 watt in digital mode.

Knowing Radio Frequency Safety

The design of your phone complies with updated NCRP standards described below.

In 1991–92, the Institute of Electrical and Electronics Engineers (IEEE) and the American National Standards Institute (ANSI) joined in updating ANSI's 1982 standard for safety levels with respect to human exposure to RF signals. More than 120 scientists, engineers and physicians from universities, government health agencies and industries developed this updated standard after reviewing the available body of research. In 1993, the Federal Communications Commission (FCC) adopted this updated standard in a regulation. In August 1996, the FCC adopted hybrid standard consisting of the existing ANSI/IEEE standard and the guidelines published by the National Council of Radiation Protection and Measurements (NCRP).

Body-Worn Operation

To maintain compliance with FCC RF exposure guidelines, if you wear a handset on your body, use a Kyocera-supplied or Kyocera-approved carrying case, holster or other body-worn accessory. If you do not use a body-worn accessory, ensure the antennas are at least **0.59 inches (1.5**

centimeters) from your body when transmitting. Use of non-Kyocera-approved accessories may violate FCC RF exposure guidelines. Other accessories used with this phone for body-worn operations must not contain any metallic components and must provide at least **0.59 inches (1.5 centimeters)** separation distance between the antennas and the user's body.

For more information about RF exposure, visit the FCC website at www.fcc.gov.

Specific Absorption Rates (SAR) for Wireless Phones

The SAR value corresponds to the relative amount of RF energy absorbed into the head of a user of a wireless handset.

The SAR value of a phone is the result of an extensive testing, measuring and calculation process. It does not represent how much RF the phone emits. All phone models are tested at their highest value in strict laboratory settings. But when in operation, the SAR of a phone can be substantially less than the level reported to the FCC. This is because of a variety of factors including its proximity to a base station antenna, phone design and other factors. What is important to remember is that each phone meets strict federal guidelines. Variations in SARs do not represent a variation in safety.

All phones must meet the federal standard, which incorporates a substantial margin of safety. As stated above, variations in SAR

values between different model phones do not mean variations in safety. SAR values at or below the federal standard of 1.6 W/kg are considered safe for use by the public. The highest reported SAR values of the JAX are:

Head: 1.28 W/kg

Body-worn: 1.26 W/kg

FCC Radio Frequency Emission

This phone meets the FCC Radio Frequency Emission Guidelines.

FCC ID number: V65S1360

More information on the phone's SAR can be found from the following FCC website: <http://www.fcc.gov/oet/ea/>.

FCC Notice

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

 **Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient the direction of the internal antennas.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Owner's Record

The model number, regulatory number, and serial number are located on a nameplate inside the battery compartment. Record the serial number in the space provided below. This will be helpful if you need to contact us about your phone in the future.

Model: JAX (S1360)

Serial No.:

Manufacturer's Warranty

Kyocera Communications Inc. ("KYOCERA") offers you a limited warranty that the enclosed product or products (the "Product") will be free from defects in material and workmanship for a period that expires one year from the date of sale of the Product to you, provided that you are the original end-user purchaser of the Product and provided that your purchase was made from an authorized supplier. Transfer or resale of a Product will automatically terminate warranty coverage with respect to that Product.

This limited warranty is not transferable to any third party, including but not limited to any subsequent purchaser or owner of the Product. KYOCERA shall, at its sole and absolute discretion, either repair or replace a Product (which unit may use refurbished parts of similar quality and functionality) if found by KYOCERA to be defective in material or workmanship, or if KYOCERA determines that it is unable to repair or replace such Product, KYOCERA shall refund the purchase price for such Product, provided that the subject Product (i) is returned, with transportation prepaid, to a KYOCERA authorized service center within the one year warranty period, and (ii) is accompanied by a proof of purchase in the form of a bill of sale or receipted invoice which evidences that the subject Product is within the one year warranty period ("Proof of Purchase"). After the one year warranty period, you must pay all shipping, parts and labor charges. This limited warranty does not cover and is void with respect to the following:

(i) Products which have been improperly

installed, repaired, maintained or modified (including the antenna); (ii) Products which have been subjected to misuse (including Products used in conjunction with hardware electrically or mechanically incompatible or Products used with software, accessories, goods or ancillary or peripheral equipment not supplied or expressly authorized by KYOCERA for use), abuse, accident, physical damage, abnormal use or operation, improper handling or storage, neglect, exposure to fire, water or excessive moisture or dampness or extreme changes in climate or temperature; (iii) Products operated outside published maximum ratings; (iv) cosmetic damage; (v) Products on which warranty stickers or Product serial numbers have been removed, altered, or rendered illegible; (vi) customer instruction; (vii) cost of installation, set up, removal or reinstallation; (viii) signal reception problems (unless caused by defect in material or workmanship); (ix) damage the result of fire, flood, acts of God or other acts which are not the fault of KYOCERA and which the Product is not specified to tolerate, including damage caused by mishandling and blown fuses; (x) consumables (such as memory cards, fuses, etc.); (xi) third party software or applications, data and equipment not originally supplied with the Product; (xii) any Product in which the software has not been updated to the current version; (xiii) any Product in which the operating system has been unlocked (allowing installation of a third party operating system); or (xiv) any Products which have been opened, repaired, modified or altered by

anyone other than KYOCERA or a KYOCERA authorized service center. Before returning any Product for service, be sure to back up data and remove any confidential, proprietary, or personal information from the Product. KYOCERA is not responsible for damage to or loss of any software, applications, data or removable storage media.

USE ONLY KYOCERA APPROVED ACCESSORIES WITH KYOCERA PHONES. USE OF ANY UNAUTHORIZED ACCESSORIES MAY BE DANGEROUS AND WILL INVALIDATE THE PHONE WARRANTY IF SAID ACCESSORIES CAUSE DAMAGE OR A DEFECT TO THE PHONE.

KYOCERA SPECIFICALLY DISCLAIMS LIABILITY FOR ANY AND ALL DIRECT, INDIRECT, SPECIAL, GENERAL, PUNITIVE, EXEMPLARY, AGGRAVATED, INCIDENTAL OR CONSEQUENTIAL DAMAGES, EVEN IF ADVISED OF THE POSSIBILITY THEREOF, WHETHER FORESEEABLE OR UNFORESEEABLE OF ANY KIND WHATSOEVER, INCLUDING BUT NOT LIMITED TO LOSS OF PROFITS, UNANTICIPATED BENEFITS OR REVENUE, ANTICIPATED PROFITS ARISING OUT OF USE OF OR INABILITY TO USE ANY PRODUCT (FOR EXAMPLE, WASTED AIRTIME CHARGES DUE TO THE MALFUNCTION OF A PRODUCT) OR CONTRIBUTION OR INDEMNITY IN RESPECT OF ANY CLAIM RELATED TO A PRODUCT.

REPAIR OR REPLACEMENT OF A DEFECTIVE PRODUCT OR REFUND OF THE PURCHASE PRICE RELATING TO A DEFECTIVE PRODUCT, AS PROVIDED

UNDER THIS WARRANTY, ARE YOUR SOLE AND EXCLUSIVE REMEDIES FOR BREACH OF THE LIMITED WARRANTY, AND SUBJECT TO THIS WARRANTY, THE PRODUCTS ARE APPROVED AND ACCEPTED BY YOU "AS IS".

KYOCERA MAKES NO OTHER WARRANTIES, REPRESENTATIONS OR CONDITIONS OF ANY KIND, ORAL OR VERBAL, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, WITH RESPECT TO THE PRODUCTS, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OR CONDITION OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR AGAINST INFRINGEMENT OR ANY IMPLIED WARRANTY OR CONDITION ARISING OUT OF TRADE USAGE OR OUT OF A COURSE OF DEALING OR COURSE OF PERFORMANCE. NO DEALER, DISTRIBUTOR, AGENT OR EMPLOYEE IS AUTHORIZED TO MAKE ANY MODIFICATION OR ADDITION TO THIS WARRANTY.

Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This limited warranty gives you specific legal rights, and you may also have other rights which vary from jurisdiction to jurisdiction. For warranty service information, please call the following telephone number from anywhere in the continental United States and Canada: 1-800-349-4478 or 858-882-1401.

End User License Agreement

Kyocera Communications, Inc. ("Kyocera")
End User License Agreement
CAREFULLY READ THE FOLLOWING TERMS AND CONDITIONS ("AGREEMENT") BEFORE USING OR OTHERWISE ACCESSING THE SOFTWARE OR SERVICES PROVIDED WITH YOUR KYOCERA DEVICE. THE SOFTWARE AND SERVICES PROVIDED WITH YOUR KYOCERA DEVICE ARE SOLELY FOR PERSONAL USE BY YOU, THE ORIGINAL END USER, AS SET FORTH BELOW. BY ACTIVATING, USING, DOWNLOADING OR INSTALLING THIS KYOCERA DEVICE AND/OR THE SOFTWARE PROVIDED WITH IT, YOU ARE AGREEING TO BE BOUND BY THE TERMS OF THIS LICENSE AGREEMENT. IF YOU DO NOT AGREE TO THE TERMS AND CONDITIONS OF THIS AGREEMENT, DO NOT USE, DOWNLOAD OR OTHERWISE ACCESS THE SOFTWARE OR SERVICES AND (I) PROMPTLY RETURN THE SOFTWARE OR SERVICE TO KYOCERA OR DELETE IT; OR (II) IF YOU HAVE PURCHASED THE KYOCERA DEVICE ON WHICH THE SOFTWARE OR SERVICE IS PRE-INSTALLED, PROMPTLY RETURN THE DEVICE AND THE ACCOMPANYING SOFTWARE (INCLUDING DOCUMENTATION AND PACKAGING) TO KYOCERA OR THE KYOCERA AUTHORIZED DISTRIBUTOR FROM WHICH YOU PURCHASED THE KYOCERA DEVICE.

License: Subject to the terms and conditions of this Agreement and any other terms that may

be incorporated by reference or otherwise presented to you prior to your use of the Software, Kyocera grants you a limited, non-exclusive, license to use Kyocera and third party proprietary software and services found on your Kyocera device and/or packaged with your Kyocera device, including any updates to such material by whatever means provided, and any related documentation ("Software"). You may use the Software only as expressly authorized by this Agreement.

Limitations: This Software is licensed for use only on the single Kyocera device you originally purchased. You acknowledge and agree that ownership of the Software and all other rights associated with the Software not expressly granted in this Agreement are retained by Kyocera or its suppliers or licensors. You are not permitted to, in any way, distribute the Software or make it available over a network for use on more than the single Kyocera device for which it was originally supplied. The Software may be copied only as permitted by applicable law and as necessary for backup purposes. You may not remove any proprietary notices or labels on the Software or any copies thereof. You may not in any way, modify, reverse engineer, decompile, disassemble or create derivative works based on the Software (except to the extent that this restriction is expressly prohibited by law). You agree that you will not attempt to circumvent, disable or modify any security technology associated with the Software. You may use the Software only in a manner that complies with all applicable laws in the jurisdictions in

which you use it, including, but not limited to, applicable restrictions concerning copyright and other intellectual property rights and/or the export control regulations.

Some of the Software packaged with your Kyocera device may be provided by third parties (“Third Party Software”). Third Party Software may also be available from third party content distributors such as application stores. Third Party content may be subject to different or additional terms and conditions as determined by the Third Party Software provider. **THIRD PARTY SOFTWARE IS NOT A KYOCERA PRODUCT. KYOCERA IS NOT RESPONSIBLE FOR AND HAS NO LIABILITY WITH REGARD TO THIRD PARTY SOFTWARE.**

Open Source Software: The Software contains certain open source software which may be subject to the GNU General Public License (“GPL”), GNU Library/ Lesser General Public License (“LGPL”) and/or other copyright licenses, disclaimers and notices (“Open Source License Terms”). The applicable Open Source License Terms for the corresponding Open Source Software are reproduced and available at <http://www.opensource.org/licenses>. Please refer to the Open Source License Terms regarding your rights under such licenses to the Open Source Software. To the extent any such agreement requires that Kyocera provide you the rights to copy, modify, distribute or otherwise use any Open Source Software that are inconsistent with the limited rights granted to you in this Agreement, then such rights in the applicable Open Source License shall take precedence over the rights

and restrictions granted in this Agreement, but solely with respect to such Open Source Software.

Disclaimer of Warranty and Liability: THE SOFTWARE IS PROVIDED “AS IS” WITHOUT WARRANTY OF ANY KIND. KYOCERA FURTHER DISCLAIMS ALL WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, NONINFRINGEMENT, TITLE, ACCURACY, CORRESPONDENCE WITH DESCRIPTION AND SATISFACTORY QUALITY. TO THE MAXIMUM EXTENT PERMISSIBLE BY LAW, THE ENTIRE RISK ARISING OUT OF THE USE OR PERFORMANCE OF THE SOFTWARE REMAINS WITH YOU. IN NO EVENT WILL KYOCERA, ITS EMPLOYEES, OFFICERS, SHAREHOLDERS, LICENSORS, SUPPLIERS, CARRIER OR DISTRIBUTOR CUSTOMERS OR AFFILIATES BE HELD LIABLE FOR ANY CONSEQUENTIAL, INCIDENTAL, INDIRECT, SPECIAL, PUNITIVE, OR OTHER DAMAGES WHATSOEVER (INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, LOSS OF BUSINESS INFORMATION, OR OTHER PECUNIARY LOSS) ARISING OUT OF THIS AGREEMENT OR THE USE OF OR INABILITY TO USE THE SOFTWARE, WHETHER BASED IN CONTRACT, TORT (INCLUDING NEGLIGENCE), STRICT PRODUCT LIABILITY OR ANY OTHER THEORY, EVEN IF KYOCERA HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES AND EVEN IF ANY LIMITED

REMEDY IS DEEMED TO HAVE FAILED ITS ESSENTIAL PURPOSE. KYOCERA'S TOTAL LIABILITY FOR ANY DAMAGES UNDER THIS AGREEMENT SHALL NEVER EXCEED THE PURCHASE PRICE YOU PAID FOR THE KYOCERA DEVICE.

No software is fault free. The Software is designed for use in systems that do not require fail-safe performance. You may not use the software in any device or system in which a malfunction of the software would result in foreseeable risk of loss, injury or death to any person. This includes operation of nuclear or infrastructure facilities, medical equipment, aircraft navigation or communication systems or use in risky or dangerous situations or environments.

Consent to Use of Data: You agree that Kyocera, its affiliates and its designated agents may collect and use technical and related information, gathered in any manner, as part of its product support services. Kyocera, its affiliates and designated agents may use this information solely to improve its products or to provide customized services or technologies to you. Kyocera will collect and use this information in accordance with its privacy policy and accordance with applicable data protection laws. Kyocera, its affiliates and designated agents may disclose this information to others, but not in a form that personally identifies you.

Modification of Software and Terms of Use: Kyocera reserves the right to from time to time modify any portion of the Software. Kyocera may be required to take these actions due to restrictions from third party licensors or due to

safety or security concerns or government restrictions or court orders.

Kyocera reserves the right to modify the terms of this Agreement at its sole discretion. Any such modification will be effective upon Kyocera or a Kyocera affiliate or agent sending notice to you by email, text message, other electronic communication or postal mail. Your continued use of the Software after such notice will constitute your binding acceptance of the Agreement as revised. Additionally, some Software may be subject to different or additional terms presented to you through a separate click-through or other type of agreement or notice prior to your use of such Software.

Termination: This License Agreement will automatically terminate without notice from or action by Kyocera if you fail to comply with any term hereof.

Governing Law: This Agreement is governed by the laws of State of California except any conflict of law provisions. The U.N. Convention on Contracts for the International Sales of Goods is hereby excluded in its entirety from this Agreement.

Severability: If any provision of this Agreement is found to be invalid, illegal or unenforceable, the validity, legality or enforceability of the remaining provisions will not in any way be impacted or impaired.

Entire Agreement: By using or otherwise accessing the Software, you agree that this Agreement sets forth the entire agreement between you and Kyocera with regard to the Software and supersedes all prior agreements, notwithstanding the terms of any such agreements.

Index

A

- abbreviated dialing, 27
- accessibility, 24
- accessories
 - headsets, 28
 - hearing aid, 26, 53
 - TTY device, 26
- airplane mode, 26
- alarm, 41
- alerts
 - event, 42
 - notification, 27
- Assurance Wireless
 - account information, 17

B

- backlight, 20
- battery
 - charging, 5, 55
 - disposal, 55
 - installing, 5
 - recharging, 5
 - safety guidelines, 54
- Bluetooth
 - activating, 43
 - pairing, 43
 - trusted devices list, 44
 - visibility, 43
- bookmarks, 49
- browser
 - bookmarks, 49
 - launching, 49
 - navigating, 49
 - searching, 49

C

- calculator, 44
- calendar
 - adding a To do, 42
 - adding an event, 41
 - alerts, 42
 - deleting events, 42
 - viewing events, 42
- calls
 - answering, 10
 - any key answer, 27
 - auto answer, 28
 - call answer mode, 27
 - emergency, 12
 - ending, 11
 - history, 48
 - making, 10
 - plus code dialing, 12
 - redialing, 10
 - silencing, 11
 - voice recognition, 46
- clock
 - display, 21
 - world clock, 45
- contact groups, 33
- contacts
 - adding, 30
 - adding prefixes, 32
 - assigning pictures, 32
 - assigning ringtones, 32
 - calling, 31
 - deleting, 33
 - dialing services, 33
 - editing, 32

- ICE contacts, 34
 - number types, 32
 - sending messages, 31
 - viewing, 30
 - voice search, 46
- contacts list, 30
- countdown timer, 44
- customer support, 50
- D**
- data settings
 - disable, 28
 - enable, 28
 - net guard, 28
 - update data profile, 28
- display
 - brightness, 20
 - language, 28
 - main view, 20
- downloading, 16
- E**
- earpiece, 10
- emergency calls, 12
- emergency message, 34
- emergency services, 12
- End User License Agreement, 60
- G**
- greeting, 21
- groups
 - adding contacts, 33
 - deleting, 33
 - editing, 33
- H**
- headset mode, 28
- hearing aid device, 26, 53

- help
 - getting, 50
- history
 - deleting, 48
 - icons, 48
 - list, 48
 - options, 48
- I**
- icons, 7, 23
- important safety information, 51
- in case of emergency (ICE) contacts
 - adding, 34
 - calling, 34
 - emergency message, 34
 - information, 34
- Internet, 49
- K**
- keyguard
 - activating, 22
 - unlocking, 22
- keypad light, 21
- L**
- language, 28
- location information, 29
- lock code, 23
- locking your phone, 23
- M**
- manufacturer's warranty, 58
- menus
 - main, 8
 - messaging, 35
 - my stuff, 16
 - navigation, 9
 - setting main view, 20
 - settings, 19

- tools, 40
- messaging
 - accessing messages, 36
 - clear alerts icon, 37
 - creating a text message, 36
 - emergency alerts, 38
 - long message reassembly, 39
 - message alerts, 38
 - preset messages, 38
 - replying, 36
 - settings, 37
 - threaded messaging, 36
- missed alerts, 12
- missed call notification, 12
- my account, 17
 - check balance, 17
 - top-up, 17, 18
- my phone number, 23

N

- navigation shortcuts, 29
- notepad, 45
- notification pop-up, 20
- number prefixes, 32
- number types, 32

P

- phone
 - accessories, 4, 50
 - answering calls, 10
 - changing lock code, 23
 - codes, 31
 - deleting content, 24
 - extensions, 31
 - icons, 7
 - locking, 23
 - making calls, 10
 - overview, 6

- phone information, 23
- programming, 4
- resetting, 24
- service, 50
- turn on and off, 10
- unlocking, 23
- power save mode, 21

R

- resetting phone, 24
- ringtones
 - downloading, 16

S

- services
 - dialing, 33
- settings
 - accessibility, 24
 - alerts, 27
 - call setup options, 27
 - data settings, 28
 - display, 20
 - location, 29
 - ringtones, 16
 - text entry, 22
 - volume, 21
- simple data exchange, 39
- speakerphone, 10, 11
- speed dial list
 - adding contact, 32, 33
 - clearing, 33
 - using, 11
- stopwatch, 45
- symbols, 14

T

- text entry, 13, 15
 - letters, 13

- modes, 13
- numbers, 13
- rapid entry, 14
- symbols, 14
- text messages, 36
- tools, 40
 - alarm, 41
 - Bluetooth, 43
 - calculator, 44
 - calendar, 41
 - countdown, 44
 - notepad, 45
 - stopwatch, 45
 - voice memo, 47
 - voice recognition, 46
 - world clock, 45
- top-up, 17
- TTY device, 26

V

- vibrate type, 26
- voice guide, 25
- voice memo
 - playing, 47
 - recording, 47
- voice recognition
 - adaptation, 25
 - audio modes, 25
 - finding contacts, 46
 - opening menus, 47
 - sending message, 46
 - settings, 25, 47
 - using, 46
- voicemail
 - checking, 35
 - notification, 35
 - setting up, 35

- volume
 - adjusting, 11, 21
 - earpiece, 11
 - escalate setting, 21
 - incoming ringtone, 21
 - keypad, 21
 - playback volume, 21
 - power up/down, 21

W

- warranty, 58
- web browser, 49
- world clock, 45

© 2013 Kyocera Corporation. All rights reserved. Assurance Wireless is a trademark of Virgin Mobile USA, L.P. The "Virgin" name and the Virgin signature logo are registered trademarks of Virgin Enterprises Limited and are used under license. All other trademarks are the property of their respective owners. KYOCERA is a registered trademark of Kyocera Corporation.

This product contains NetFront Browser of ACCESS CO., LTD. ACCESS and NetFront are trademarks or registered trademarks of ACCESS CO., LTD. in Japan and other countries. This software is based in part on the work of the Independent JPEG Group.

The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Kyocera Corporation is under license. Other trademarks and trade names are those of their respective owners.

Nuance, the Nuance logo, VSuite and T9® are trademarks or registered trademarks of Nuance Communications, Inc. or its subsidiaries in the United States of America and/or other countries. Copyright © 2008-2013 Nuance Communications, Inc. All rights reserved.