

# **Diagnostic/IPR Media User's Guide**

## **PA-RISC Computer Systems**



**B6191-90015a**

**June 1999**

© Copyright 1999 Hewlett-Packard Company

---

## Legal Notices

The information contained in this document is subject to change without notice.

*Hewlett-Packard makes no warranty of any kind with regard to this manual, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose.* Hewlett-Packard shall not be liable for errors contained herein or direct, indirect, special, incidental or consequential damages in connection with the furnishing, performance, or use of this material.

Copyright © 1999 Hewlett-Packard Company.

This document contains information which is protected by copyright. All rights are reserved. Reproduction, adaptation, or translation without prior written permission is prohibited, except as allowed under the copyright laws.

### Corporate Offices:

*Hewlett-Packard Co.  
3000 Hanover St.  
Palo Alto, CA 94304*

Use, duplication or disclosure by the U.S. Government Department of Defense is subject to restrictions as set forth in paragraph (b)(3)(ii) of the Rights in Technical Data and Software clause in FAR 52.227-7013.

Rights for non-DOD U.S. Government Departments and Agencies are as set forth in FAR 52.227-19(c)(1,2).

Use of this manual and flexible disc(s), compact disc(s), or tape cartridge(s) supplied for this pack is restricted to this product only. Additional copies of the programs may be made for security and back-up purposes only. Resale of the programs in their present form or with alterations, is expressly prohibited.

A copy of the specific warranty terms applicable to your Hewlett-Packard product and replacement parts can be obtained from your local Sales and Service Office.

© Copyright 1980, 1984, 1986 AT&T Technologies, Inc. UNIX and System V are registered trademarks of AT&T in the USA and other countries.

UNIX is a registered trademark in the United States and other countries, licensed exclusively through X/Open Company Limited.

© Copyright 1979, 1980, 1983, 1985-1990 Regents of the University of California. This software is based in part on the Fourth Berkeley Software Distribution under license from the Regents of the University of California.

Copyright © The Regents of the University of Colorado, a body corporate 1979

This document has been reproduced and modified with the permission of the Regents of the University of Colorado, a body corporate.

PostScript is a trademark of Adobe Systems, Inc.

Intel is a registered trademark and Intel 80386 is a trademark of Intel Corporation.

Ethernet is a trademark of Xerox Corporation.

© Copyright 1985-1986, 1988 Massachusetts Institute of Technology. X Window System is a trademark of the Massachusetts Institute of Technology.

MS-DOS and Microsoft are U.S. registered trademarks of Microsoft Corporation.

OSF/Motif is a trademark of the Open Software Foundation, Inc. in the U.S. and other countries. Certification for conformance with OSF/Motif user environment pending.



<b>1. Diagnostic/IPR Media Product Overview</b>	
Design of the Diagnostic/IPR Media . . . . .	12
Media Layout. . . . .	12
<b>2. Hardware Support Tools Overview</b>	
Support Tools Manager (STM) System . . . . .	14
Initial System Loader (ISL) Standalone Environment . . . . .	15
Hardware Support Tools Usage. . . . .	16
Will the OS boot? . . . . .	16
Will ISL boot from the main disk? . . . . .	16
Will the Diagnostic/IPR Media boot? . . . . .	17
Which online tools should be used? . . . . .	18
<b>3. Using the Diagnostic/IPR Media to Run Offline Diagnostics</b>	
How to Run ODE's Command Line Interface. . . . .	21
Test Module Manager (TMMGR) . . . . .	23
Running TMMGR. . . . .	23
Environment Variables. . . . .	26
Commands. . . . .	27
Updating Processor Firmware Using the Diagnostic/IPR Media . . . . .	30
<b>4. Support Tools Manager (STM)</b>	
Running STM . . . . .	34
Three Interfaces . . . . .	35
System Map and Device Icons . . . . .	36
System Map in xstm . . . . .	36
System Map in mstm . . . . .	37
System Map in cstm . . . . .	38
Kinds of Support Tools. . . . .	39
Menus and Commands. . . . .	40
xstm Menus and Commands . . . . .	40
mstm Menus and Commands. . . . .	41
cstm Menus and Commands. . . . .	45
Getting Result Information (Logs) . . . . .	46
Remote Execution. . . . .	47
Distributed Structure . . . . .	48
Improving Performance . . . . .	48
Getting Help . . . . .	49
Kinds of Help. . . . .	49
Common Problems . . . . .	51
Exercisers sometimes enter a "Hung" state. . . . .	51
The user interface will not connect to a machine. . . . .	51
A device in the STM map is "Unknown" or its icon is blank. . . . .	52
Slow response to user commands. . . . .	52
SCSI Tape and Disk Tools report SCSI commands as failed in the Test Activity Logs. . . . .	53
No tools are available for a particular device. . . . .	53
The "Device — >Select Class" command did not work.. . . .	53

<b>5. Using the Diagnostic/IPR Media to Install Diagnostics on Your System</b>	
Support Tools Manager (HP-UX 9000 Series 800/700) .....	56
EMS Hardware Monitors .....	57
HP Predictive Support. ....	58
How the Process Works .....	58
What HP Predictive Support Covers. ....	58
LIF-LOAD (HP-UX 9000 Series 800 and 700 Systems) .....	60
Installing Online Support Tools from the Diagnostic/IPR Media (CD-ROM) .....	61
 <b>A. Disk Copy Utility — To make an image of a disk after install or upgrade (HP-UX 10.x to 11.x)</b>	
Operating Environment .....	72
Quick Start Instructions .....	73
Executing COPYUTIL .....	73
 <b>B. EMS Hardware Monitors</b>	
Enabling Hardware Monitoring .....	78

---

## Printing History

**Table 1**

June 1999	.....	Edition 1
-----------	-------	-----------

This printing date and part number indicate the current edition. The printing date changes when a new edition is printed. (Minor corrections and updates which are incorporated at reprint do not cause the date to change.) The part number changes when extensive technical changes are incorporated.

New editions of this manual will incorporate all material updated since the previous edition.

Internal Date: May 28, 1999

### HP Printing Division:

*Systems Supportability Lab  
Hewlett-Packard Co.  
19091 Pruneridge Ave.  
Cupertino, CA 95014*Printing History



---

## About This Manual

The Diagnostic/IPR Media performs two functions:

- The Diagnostic/IPR Media is the `swinstall` format distribution media for the following hardware support products for 10.01, 10.10, 10.20, 10.30, and 11.x HP-UX systems; it is also the `update` format distribution media for the 9.04 and 9.07 HP-UX systems)
  - Online diagnostics subsystem)
  - Support Tools Manager (HP-UX 10.x and 11.x))
  - EMS Hardware Monitors (HP-UX 10.20 and 11.x only)
  - HP Predictive Support tools (Series 800 only)
  - LIF-resident offline diagnostics
  - IPR patches
- It is the platform for running offline diagnostics for all PA-RISC systems.

This manual is intended to provide an overview of how to use the Diagnostic Media for these two functions.

The following is a summary of the contents of the chapters in this manual:

**Chapter 1** Diagnostic/IPR Media product overview

**Chapter 2** Hardware support tools overview

---

<b>NOTE</b>	Chapter 2, “Hardware Support Tools Overview,” provides a simplified approach to starting the hardware problem solving process, using the tools provided on the Diagnostic/IPR Media. This is not intended as a comprehensive troubleshooting guide, nor as a tutorial on the products themselves. It is merely intended as an aid in beginning the process, and in explaining briefly how the various tools can be used.
-------------	--

---

**Chapter 3** Using the Diagnostic/IPR Media to run offline diagnostics

**Chapter 4** Support Tools Manager (STM)

**Chapter 5** Using the Diagnostic/IPR Media to install the diagnostic products on your system

**Appendix A** Disk Copy Utility - To make an image of a disk after install or upgrade (HP-UX to 11.x)

**Appendix B** EMS Hardware Monitors

**Problem Reporting.** If you have any problems with the software or documentation, please contact your local Hewlett-Packard Sales Office or Customer Service Center.

**Reader Comments.** We welcome your comments about our documentation. If you have editorial suggestions or recommended improvements for this document, please write to us. You can reach us through e-mail at: [hardwaredocs@cup.hp.com](mailto:hardwaredocs@cup.hp.com) or by sending your letter to: Information Engineering Group, M/S 5657, Hewlett-Packard Company, 8000 Foothills Blvd, Roseville, CA 95747-6588 USA.

Please include the following information in your message:

- Title of the manual you are referencing.
- Manual part number (from the title page).
- Edition number or publication date (from the title page).
- Your name.
- Your company's name.

SERIOUS ERRORS, such as technical inaccuracies that may render a program or a hardware device inoperative, should be reported to your HP Response Center or directly to a Support Engineer.

**Current Information on the Web.** This manual contains information that was current at the time of publication.

For the most current information on Support Tools, see our Web site, "Systems Hardware, Diagnostics, and Monitoring," at <http://www.docs.hp.com/hpux/systems/>. This Web site also contains additional documents, such as tutorials, quick reference guides, and release information.

# 1 Diagnostic/IPR Media Product Overview

---

The Diagnostic/IPR Media allows you to diagnose and fix problems when the operating system cannot be booted from the system disk. The Diagnostic/IPR Media runs on minimal hardware, with or without the system disk.

The Diagnostic/IPR Media performs two functions:

- The Diagnostic/IPR Media is the `swinstall` format distribution media for the following hardware support products for 10.01, 10.10, 10.20, 10.30, and 11.x HP-UX systems; it is also the `update` format distribution media for the 9.04 and 9.07 HP-UX systems)
  - Online diagnostics subsystem
  - Support Tools Manager (HP-UX 10.x and 11.x)
  - EMS Hardware Monitors (HP-UX 10.20 and 11.x only)
  - HP Predictive Support tools (Series 800 only)
  - LIF-resident offline diagnostics
  - IPR patches
- It is the platform for running offline diagnostics for all PA-RISC systems.

The Diagnostic/IPR Media is primarily intended for HP-UX systems; however, it is used for running offline diagnostics on MPE/iX systems.

---

NOTE	<b>If you have an HP Hardware and Software Support Agreement, then be sure to install HP Predictive Support along with the HP-UX Support Tools. For details, see the <i>HP Predictive Support/UX User's Guide</i> (part number: H2571-90008).</b>
------	---

---

## Design of the Diagnostic/IPR Media

The following subsections discuss the physical layout of the Diagnostic/IPR Media.

### Media Layout

The Diagnostic/IPR Media contains Software Distributor (SD) bundles, which contain all of the online tools to be loaded onto your system, including the following:

- Online diagnostics subsystem)
- Support Tools Manager (HP-UX 10.x and 11.x))
- EMS Hardware Monitors (HP-UX 10.20 and 11.x only)
- HP Predictive Support tools (Series 800 only)
- LIF-resident offline diagnostics
- IPR patches

In general terms, the Diagnostic/IPR Media is organized as follows (details of organization for your particular media type may vary):

LIF	SD Products (filesystem contains online diagnostic bundles at /mountpoint/diagnostics)
-----	--

## 2 Hardware Support Tools Overview

---

The purpose of this chapter is to give a brief high-level overview of the recommended use of HP hardware support tools. This is not intended as a comprehensive troubleshooting guide, nor as a tutorial on the products themselves. It is merely intended as an aid in beginning the process, and in explaining briefly how the various tools can be used.

There are several support tools platforms provided by HP, each targeted at a different troubleshooting situation or type of user. A brief description of these products follows. In addition, each system provides a help facility to assist users in getting started, determining what tools are available and how to run them, etc.

For the HP-UX 10.01, 10.10, 10.20, 10.30, and 11.x releases, the Support Tools Manager (STM) diagnostic systems is available. The STM diagnostic system is the diagnostic system used for information, verification, and diagnosis. The STM system provides a map of the system, and lets you know what tools are available for each component, at the time it is accessed.

---

<b>NOTE</b>	<p>Included on the Diagnostic/IPR Media are the EMS Hardware Monitors -- an important new tool for maintaining system availability. The EMS hardware monitors allow you to monitor the operation of a wide variety of hardware products and be alerted immediately if any failure or other unusual event occurs.</p> <p>For more information, see Appendix B, "EMS Hardware Monitors." in this manual.</p>
-------------	--

---

## Support Tools Manager (STM) System

The Support Tools Manager (STM) is an online support tools platform that is currently available on HP9000 series 700 and 800 machines. STM provides automatic configuration mapping, and a set of verifiers, exercisers, information modules, expert tools, utilities, and firmware update tools for various devices on HP-UX systems. STM provides three user interfaces: a graphical interface for X-based terminals (XSTM), a menu interface for HP ASCII terminals (MSTM), and a command line interface for all ASCII terminals (CSTM). The graphical and menu interfaces are designed to be intuitive and usable by novices. The command line interface is provided mainly as a convenient method of driving STM via scripts. STM is invoked via the "xstm", "mstm", or "cstm" commands, depending on which interface is desired.

The STM verifiers are designed to quickly determine whether or not a specific device is operational by performing tasks similar in nature to the way applications use the device. No license is required to run the verifiers.

The STM exercisers are designed to stress devices in order to facilitate the reproduction of intermittent problems. The exercisers on HP-UX 9.X systems require a license to run.

The STM information modules create a log of information specific to one device, including:

- The product identifier
- A description of the device
- The hardware path to the device
- The vendor
- On-board log information (if applicable)
- Miscellaneous information associated with the device

Typically, the firmware revision code, if firmware is present in the device, will also be displayed.

The STM expert tools are device specific troubleshooting utilities for use by sophisticated users. Their functionality varies from tool to tool, but they are intended to be interactive, and rely on you to provide information necessary to perform a particular task. These tools require you to have the appropriate license if you wish to run them.

The STM utilities are support tools which are not device specific. Current tools include log viewing and disk backup tools.

The STM firmware update tool initiates the firmware update process for a selected device. Most require that you have the appropriate license in order to run them.

## Initial System Loader (ISL) Standalone Environment

The ISL standalone environment consists of the Initial System Loader, ISL-based tools which run directly from ISL, and the Offline Diagnostic Environment (ODE). On most PA-RISC machines, ISL is the first program run after execution of the firmware. ISL implements a command line interface which allows the user to obtain information on the bootup characteristics of the system; to modify these characteristics; and to load and execute programs such as the operating system, ISL-based tools, and the Offline Diagnostics Environment.

ISL-based tools consist of a set of diagnostics that diagnose the Central Processing Unit (CPU), memory, and portions of the I/O system on older series 700, 800, and 900 machines; and the Offline Diagnostics Environment (ODE).

The Offline Diagnostics Environment is an offline support tools platform that is run from ISL and is available on series 700, 800, and 900 machines. ODE provides a common user-friendly interface for diagnostics and utilities developed to run in this environment. Diagnostics and utilities provided under ODE include:

- MAPPER - a utility for mapping out the physical layout of the SPU and its peripherals
- IOTEST - a utility for testing I/O cards using IODC
- PERFVER - a utility for testing peripherals attached to the boot path
- A set of diagnostics/utilities for testing disks.
- A set of diagnostics for testing CPU, memory, and selected I/O modules.

A license is required to run most of the ODE diagnostics and utilities.

The main purpose of the offline tools is to enable the user to troubleshoot a system which cannot be tested via the online tools, generally because a hardware problem exists which prevents the system from booting. The offline environment is also useful for some types of testing in which it is not desirable to have to boot the system first, as is often the case in manufacturing applications.

## Hardware Support Tools Usage

Each one of the products described above plays a role in the overall system troubleshooting strategy. Figure 2-1 contains a simple flow diagram that outlines the intended use of the hardware support tools. Please note that this diagram is not intended to cover every aspect and corner case of system troubleshooting, but rather to provide an overall picture of what roles the various products play in troubleshooting systems.

As can be seen from the flow diagram, the basic assumption is that if the system can boot to the operating system prompt, it is generally desirable to do so. In a majority of cases, the system is probably already booted and it is not desirable to take it down to run diagnostics. If there are problems with the hardware, the online support tools should be used to attempt to troubleshoot them. If the system will not boot, the offline tools from the Diagnostic/IPR Media should be used to troubleshoot the problem with the intent of getting the system to boot again. Once booted, the online tools can be used if any further testing is desired.

Of course, before altering the state of a system that is exhibiting problems, it is crucial to record any error messages, symptoms, etc., before proceeding. This information may be very valuable later on in determining what action to take to isolate the problem cause.

The following key decisions drive the troubleshooting strategy as outlined in the flow diagram:

### Will the OS boot?


This step determines whether or not the online versus offline support tools can be used. If the OS cannot boot, the offline tools are the only option. If the OS can boot, the recommendation is to use the online tools. Of course, the user still has the option of taking down the system and using the offline tools if it is so desired.

### Will ISL boot from the main disk?

If the machine will boot to ISL from the main disk, the user would typically run the offline tools to troubleshoot the problem that is preventing the system from booting to the OS. The hardware problems that would be common here would be problems with the boot disk or other disks on the system that are used during boot; problems with the boot path that only manifest themselves under a load; configuration problems, etc. Great care must be taken when running the ODE disk tools, since they can alter data on the disk. Backups of all OS and user files should be available, in case they need to be restored after the disk is repaired.

After ODE has been run and any problems that were encountered are fixed, the user should again try to boot to the OS. If boot is successful, the online tools can be used for any further testing that is desired. If the OS will still not boot, the user should continue the troubleshooting process by turning to the Diagnostic/IPR Media.

**Figure 2-1 Hardware Support Tools Usage Flow Diagram**

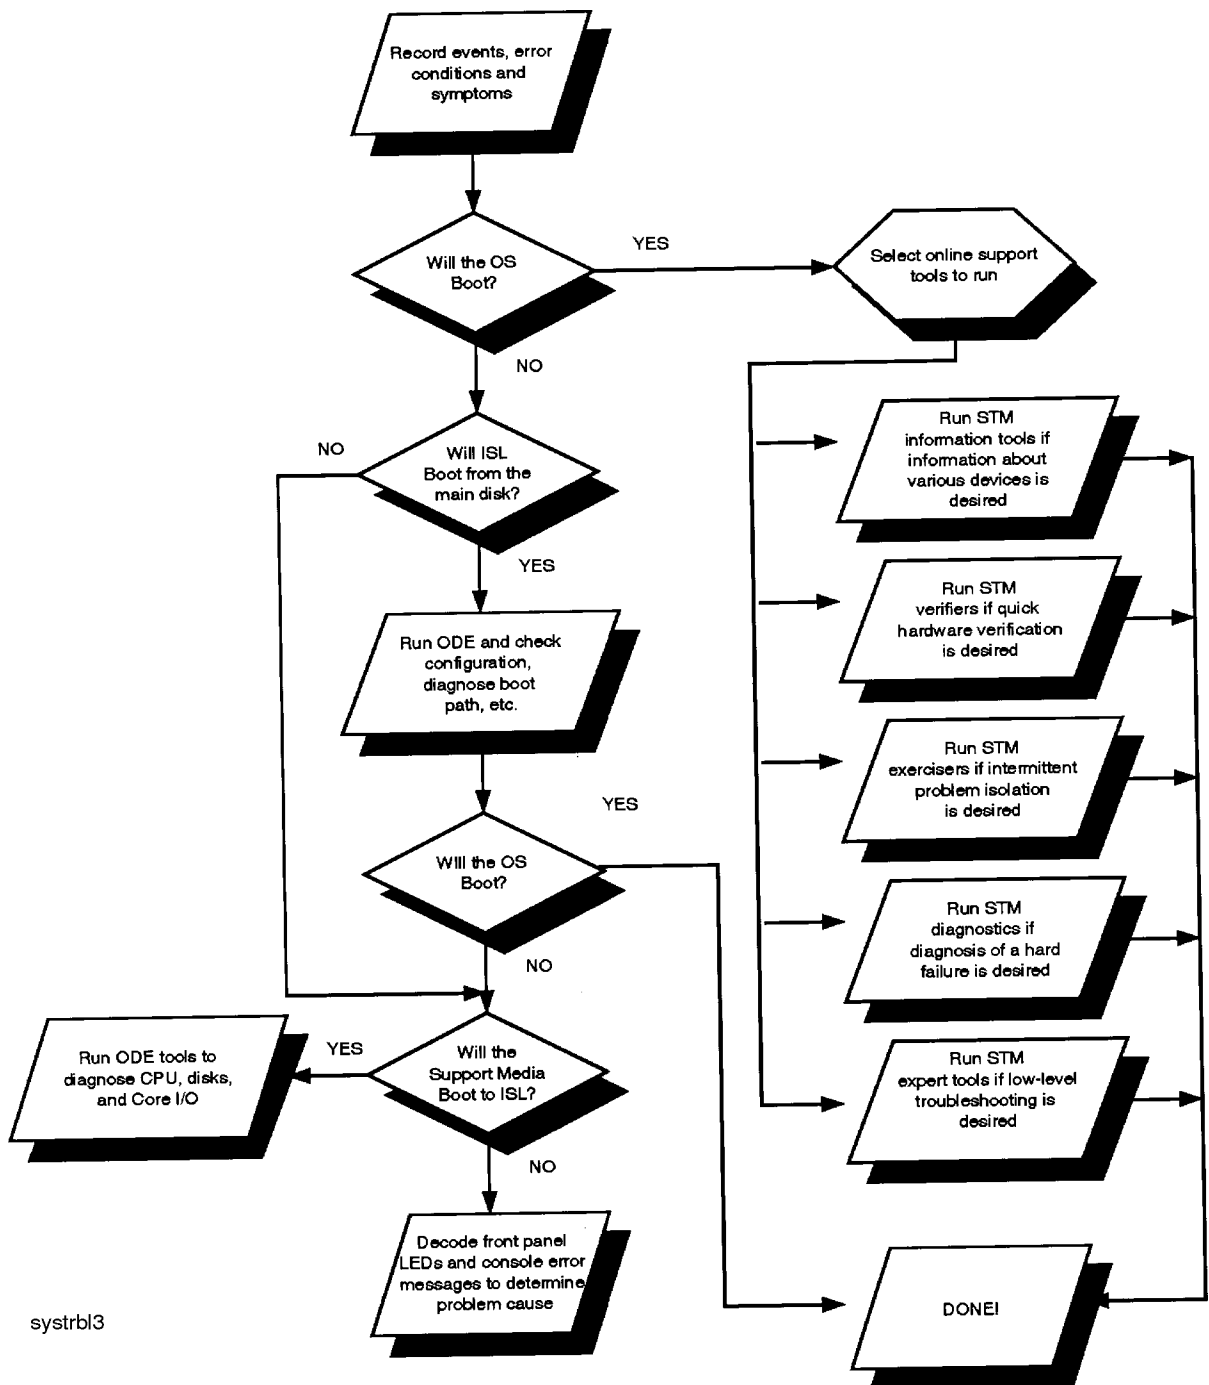

## Will the Diagnostic/IPR Media boot?

If the machine will not boot to ISL from the main disk, or even if it will boot ISL, but still won't boot the OS, the user has little choice but to either start swapping suspect hardware, using the error codes displayed on the front panel LEDs and console error messages for guidance, or attempt to boot from the Diagnostic/IPR Media. This decision is likely to be

influenced by the type of machine that is having the problem and the error symptoms. If the user is troubleshooting a high-end server with many Field Replaceable Units (FRUs), it is usually beneficial to use the Diagnostic/IPR Media approach to try and isolate the most likely failing FRU. If, on the other hand, the machine is a workstation with CPU, memory, and I/O all in one FRU, it may be desirable at this point to just replace the board and see if that takes care of the problem.

If the user elects to boot from the Diagnostic/IPR Media, and does so successfully, the problem is likely to be with the main disk or the I/O path to it, although it could still be a memory or SPU problem that is not manifested in the Diagnostic/IPR Media environment. In this case, the tools on the Diagnostic/IPR Media should be used to test the SPU, boot path components, the main disk and, if necessary, perform data recovery operations on the main disk.

If the machine will not even boot to ISL from the Diagnostic/IPR Media, the front panel LEDs and console error messages should contain error information that may help to isolate the most probable cause. The typical approach at this point is to go to a minimum configuration (e.g., just the boot device and the console) and start swapping hardware to try to get to the point where the system can at least boot ISL.

## Which online tools should be used?

If the system can be booted to the OS, the user has several online tools available to troubleshoot problems. The following are the strategic uses for each set of tools:

1. STM verifiers are useful primarily for finding reproducible problems that are causing a particular device to fail. They will run a quick verification on selected devices and indicate whether they are basically functioning properly or not. This type of testing is probably most useful when new hardware is added or configuration changes have been made and need to be verified.
2. STM exercisers are designed to help the user reproduce intermittent problems by stressing various system components and devices. In general, if the user has no good evidence that seems to indicate where the problem is, the exercisers should be used to try and isolate the problem to a specific device or area of the system.
3. STM diagnostics provide fault isolation capabilities for some devices. Typically, diagnostics are only available for hardware which comprises numerous FRUs.
4. STM information tools provide comprehensive information about specific devices. They typically also provide basic verification that the device is responding.
5. STM expert tools are used for interactive testing of a particular device, in order to isolate a particular problem.

---

NOTE	Included on the Diagnostic/IPR Media are the EMS Hardware Monitors -- an important new tool for maintaining system availability. The EMS hardware monitors allow you to monitor the operation of a wide variety of hardware products and be alerted immediately if any failure or other unusual event occurs.
------	---

---

### 3 Using the Diagnostic/IPR Media to Run Offline Diagnostics

The Offline Diagnostics Environment (ODE) consists of a Test Controller (TC), a System Library (SysLib), and any number of Test Modules (TMs), all resident on the Diagnostic/IPR Media in the LIF. It provides you with a consistent interface for executing the ISL-based support tools from the Diagnostic/IPR Media, in the event that your system is offline.

The TC provides the user with two basic interfaces: a pure command-line interface for expert users, and a menu-oriented interface for less experienced users. In the command-line interface, users can select and run specific tests and/or utilities. In the menu-oriented interface, users select specific hardware modules to test, and do not have to know which diagnostic is associated with a particular module.


---

**NOTE** ODE utilities like MAPPER and FUPDATE (formerly UPDATE) can only be run from the command-line interface.

---

Figure 3-1 provides a graphic representation of the relationship that exists between the ODE Test Controller (TC) and the underlying Test Modules (TMs):

**Figure 3-1 Relationship Between ODE Test Controller and Test Modules**

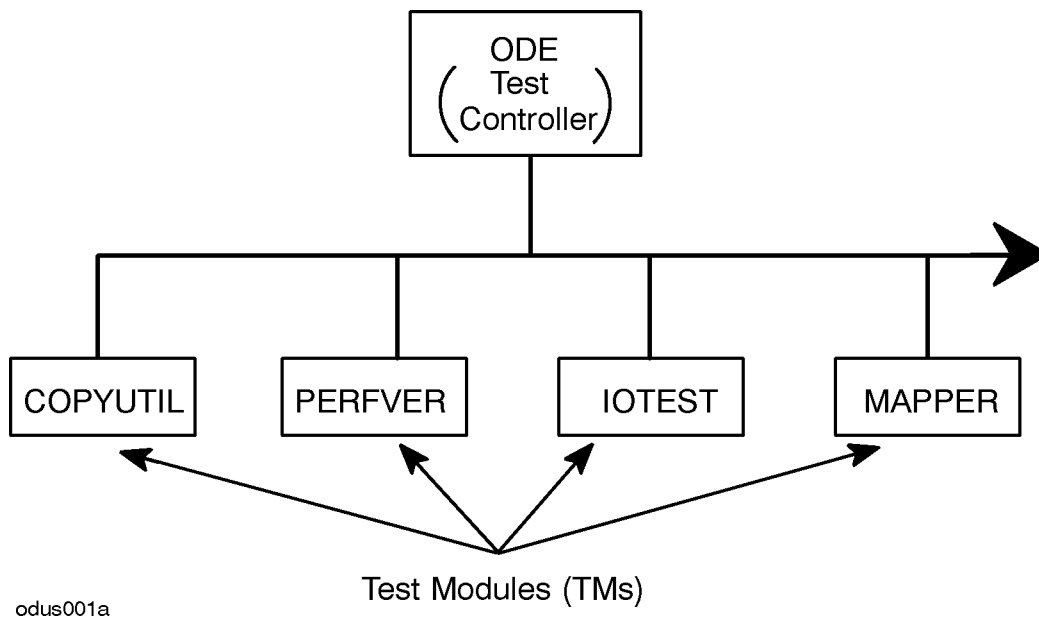


---

**NOTE** To see ISL-based programs, type `ls` at the ISL prompt. To see ODE-based programs, start ODE from the ISL prompt, and then type `ls` at the ODE prompt.

---

---

<b>NOTE</b>	<b>Changes to Offline Diagnostics as of June 1999 (IPR 9906):</b>
	<ul style="list-style-type: none"><li>• The <code>UPDATE</code> utility for ODE has been replaced by <code>FUPDATE</code>. <code>FUPDATE</code> is backward compatible with existing computer systems</li><li>• For 64-bit systems like N-Class, there will be a different version of the offline diagnostic programs. The 64-bit version will have a “2” appended to its name. For example, the 64-bit version of <code>MAPPER</code> is <code>MAPPER2</code>.</li><li>• The ODE module <code>TMMGR</code> (TM Manager) will only be updated to support new 32-bit systems (such as the J5000, J7000, C3000, and B1000). <code>TMMGR</code> will NOT be updated to support new 64-bit systems (such as the L-Class and N-Class).</li></ul>

---

---

## How to Run ODE's Command Line Interface

To start ODE's command line interface, do the following:

1. If you are at the PDC prompt (e.g., BOOTADMIN>), type `search` for a list of bootable devices:

```
BOOTADMIN>search
```

2. Select the tape or CD device, depending upon your Diagnostic/IPR Media, and boot from that device:

```
BOOTADMIN>boot SCSI.3.3
```

3. At the ISL> prompt, type the following:

```
ISL>ODE
```

The following prompt will then be displayed:

```
ODE>
```

4. Type the following, for a list of available commands with a capsule description of each:

```
ODE>help
```

The following information will be displayed:

### MAIN HELP SCREEN

#### Basic Commands

HELP Prints detailed information to the screen, when "help <command>" or "help <var>" is typed

LS List modules available on boot medium

<Module\_Name> Load and initialize a module by typing its name  
(For more help, type "help module\_name")

RUN Run a module (after setting desired environment variables)

Control-Y|Control-C Abort an ODE command; pause a module run

RESUME Restart a paused module

DISPLOG After running a module, display contents of a log

EXIT Return to next higher level prompt

#### Environmental Variables

-

SHOWSTATE Display the value of the following environment variables:

LOOP Run a test this many times

ERRPRINT [ON|OFF] Print low-level error messages to console  
(primarily for manufacturing use)

ERRNUM [ON|OFF] Print one-line, numbered errors to the console

ERRPAUSE [ON|OFF] Pause module upon error detection

ERRONLY [ON|OFF] Print ONLY error messages; disable non-error  
and isolation message printing

INFOPRINT [ON|OFF] Print informational messages to the console

ISOPRINT [ON|OFF] Print fault isolation messages to the console

ISOPAUSE [ON|OFF] Pause module when isolation message is generated

LOGSIZE Set the size of a message log

DEFAULT Reset environment variables to default state

5. For more information on any of these commands or options, type `help <command>` or `help <var>`, as appropriate.
6. To list the ODE modules that will run on the current SPU, type `ls` at the ODE prompt.

7. Select the test module on the LIF that you wish to run, and decide whether you wish to run it interactively, or non-interactively.

8. If you wish to run interactively, type the following at the ODE prompt:

```
ODE><module_name>
```

This command loads the module from LIF into memory, and initializes it, displaying the `module_name` prompt:

```
MODULE_NAME>
```

To run interactively, type `help` for a list of commands which are valid for use with selected module:

```
MODULE_NAME>help
```

9. To run non-interactively, type the following at the ODE prompt:

```
ODE>run module_name
```

---

## Test Module Manager (TMMGR) .

TMMGR (pronounced TM Manager) is a special ODE module that implements an ease-of-use user interface for ODE. TMMGR is a hybrid menu/command interface that enables the user to test specific hardware modules without having to know which diagnostic to load and launch — instead, the user simply selects from a menu the specific hardware module to test, and the appropriate diagnostic is executed. TMMGR provides the user with a consistent set of commands, as well as context-sensitive help. Note, TMMGR can only be run from the Support CD-ROM.

---

NOTE	As of the June 1999 release (IPR 9906), the ODE module TMMGR (TM Manager) will only be updated to support new 32-bit systems (such as the J5000, J7000, C3000, and B1000). TMMGR will NOT be updated to support new 64-bit systems (such as the L-Class and N-Class).
------	---

---

### Running TMMGR

To launch TMMGR, enter the following:

ODE>MENU

After TMMGR loads and configures the system (this may take several minutes), it allows the user to interact with ODE through several different screens. Following is a brief summary of each screen:

**System Screen** The system screen is the first screen displayed to the user. It provides a map of all hardware modules in the system and allows the user to select and test sets of modules.

**Test Screen** A test screen displays a list of tests for a particular module. It allows the user to select and run a set of tests for a specific module.

**Logging Screen** The logging screen displays of log of all test activity. The user can use this screen to get detailed error or isolation information from a particular TM.

**Environment Screen** The environment screen displays a list of environment variables accessible to the user. From this screen the user can adjust certain aspects of TMMGR.

For all screens, the set of available user commands is displayed across the top of the display. These are the only commands that can be entered at the command prompt. To get a summary of each available command, use the `HELP` command with no parameter. To display detailed information about a specific command, use the `HELP` command with the command's name as the parameter. Note, some screens may contain more than one page of information. To display the previous or subsequent page, use the `PREV` or `NEXT` commands or their respective shortcuts, `Ctrl-P` or `Ctrl-N`. To quickly go to the first or last page of a

screen, use the `FIRST` or `LAST` commands. User commands at the command prompt may be chained together using a semicolon as a separator. For example, to select items 1 and 5 and then run them, the following could be entered at the command prompt:

```
Command-> select 1 5;run <cr>
```

## System Screen

Below is an example of the system screen:

Commands: `EXIT`, `NEXT`, `LAST`, `LOG`, `ENV`, `RUN`, `SELECT`, `INFO`, `REFRESH`, `HELP`

\*\* HP 9000/712 \*\*

Selection	Module/Device	Path	Status
1	Processor [1 Found]		N/A
2 *	Memory [1 Controller Found]		READY
3	Builtin Graphics	1	N/A
4 *	Core Bus Adapter	2	READY
5 *	Core SCSI	2/0/1	READY
6 *	Core LAN	2/0/2	READY
7 *	Core RS-232	2/0/4	READY
8 *	Core Centronics	2/0/6	READY
9 *	Audio	2/0/8	READY
10 *	Core Floppy	2/0/10	READY
11 *	Core PS/2	2/0/11	READY
12 *	Core PS/2	2/0/12	READY
13 *	Core Bus Adapter	6	READY

%< Page 1 of 2 >

%< Test Loops Completed: 0 >

Command->

The system screen shows a map of the computer system displaying a short description of each HP- architected module, its architected path, and its status. The status field gives information about the test state of the hardware module. The status field may have the following values:

<b>N/A</b>	The TM for this module is not available. Either the TM does not exist on the LIF volume, or the TM is unable to be executed.
<b>READY</b>	No tests for this module have been launched. The TM for this module is ready for execution.
<b>PASSED</b>	All tests run on this module passed.
<b>FAILED</b>	One or more tests run on this module failed.
<b>ABORTED</b>	The user aborted test execution, or all tests run were aborted by the system
<b>SKIPPED</b>	Tests for this module were launched, but all were skipped.

An asterisk next to a selection number indicates that this module is selected for testing. The set of all selected modules will be tested when the user executes the `RUN` command. Use the `SELECT` command to alter the set of selected modules. To launch the tests for all selected modules, enter `RUN` at the command prompt. This will run all default or

user-selected tests for all selected hardware modules. Note, not all available tests for a module may be considered default. At any time the user may hit Ctrl-C to abort test execution. To do detailed testing on just one particular module, one can enter the module's selection number at the command prompt. This will cause the module's test screen to be displayed.

## Test Screen

Below is an example test screen:

Commands: EXIT, LOG, ENV, RUN, SELECT, INFO, REFRESH, HELP

\*\* Memory Controller @ 9 \*\*

Test	Description	Status
1 *	Single Bit Error Test	READY
2 *	Walking Ones Test	READY
3 *	Refresh Test	READY
4 *	Read Hammer Write Test	READY
5 *	Write Hammer Read Test	READY
6 *	Full Address Test	READY
7 *	Marching Ones Test	READY
8 *	Pseudorandom Architected Test	READY
9 *	Binary Tree Test	READY

%< Page 1 of 1 >

%< Test Loops Completed: 0 >

Command->

The test screen displays all the tests for a selected module and indicates which ones are selected for testing. By default, not all tests may be tagged. For example, tests that require special loopback connectors may not be selected by default. Therefore, if one wants to ensure that a specific set of tests is run for a particular module, one should enter the test screen for that module and select the appropriate tests. The test screen also displays the status of each test. The status field may have the following values:

<b>READY</b>	This test has not been run. It is ready for execution.
<b>PASSED</b>	The test passed.
<b>FAILED</b>	The test failed.
<b>ABORTED</b>	The user aborted test execution, or the test was aborted by the system
<b>SKIPPED</b>	The test was skipped.

The user can execute the `RUN` command to run the set of selected tests. At any time the user may hit Ctrl-C to abort test execution. Use the `EXIT` command to return to the system screen. The current set of selected tests will be preserved. Thus, on a subsequent `RUN` from the system screen, only the user-selected tests will be executed.

## Logging Screen

To enter the logging screen, type `LOG` at the command prompt. The logging screen displays detailed information that each TM may have output during its execution. One can display the various pages of the log to correlate a failing test with any associated error information that the TM may have output.

## Environment Screen

To enter the environment screen, type `ENV` at the command prompt. The following is an example environment screen:

Commands: `EXIT`, `ERRCOUNT`, `ROWS`, `SCROLL`, `TERM`, `LOOP`, `REFRESH`, `HELP`

** Environment Variables **		
Variable	Description	State
<code>ERRCOUNT</code>	Number of errors that stop test execution	0
<code>ROWS</code>	Number of console text rows	24
<code>SCROLL</code>	Activates scrolling during screen redraws	ON
<code>TERM</code>	Terminal type	UNKNOWN
<code>LOOP</code>	Number of times to loop test execution	1

%< Page 1 of 1 >

Command->

The environment screen displays each environment variable, an associated description, and its current state. Use the `HELP` command to get more online information about each environment variable.

## Environment Variables

This section gives a brief discussion of each environment variable. Note, the command syntax for each variable indicates its legal states. A `|` in the command syntax means or.

### ROWS

`ROWS <integer>`

---

<b>NOTE</b>	<code>&lt;integer&gt;</code> must be 12 or greater.
-------------	---

---

The `ROWS` environment variable indicates the number of text rows supported by the current console display.

### SCROLL

`SCROLL ON|OFF`

The `SCROLL` environment variable controls how screen redraws are performed. When the state of `SCROLL` is `ON`, the screen is redrawn by scrolling the current text off the top of the console display.

When the state of `SCROLL` is `OFF`, the console display is updated using special terminal-specific control mechanisms (allowing the redraw to occur much faster). If one wants to save previous screen displays in terminal display memory, or if one is using a terminal not supported by TMMGR, `SCROLL` should be set to `ON`. Note, if the current terminal type is unknown, one will not be able to change the state of `SCROLL` to `OFF`.

## LOOP

`LOOP <integer>|FOREVER`

The `LOOP` environment variable indicates how many times to loop on test execution before control is returned to the user. To loop forever, the state of `LOOP` should be set to `FOREVER`. When in this state, the user must hit `<Ctrl>-Y` or `<Ctrl>-C` to stop test execution. Note, the effect of the `LOOP` environment variable is context-dependent. If test execution is launched from the system screen, the `LOOP` state indicates how many times the tests for the tagged modules will be executed. If test execution is launched from a test screen, the `LOOP` state indicates how many times the tagged tests will be executed.

## TERM

`TERM HP|UNKNOWN`

The `TERM` environment variable indicates the current type of the console. Currently, only HP serial terminals are fully supported by TMMGR. If one is using a non HP terminal or a graphics display, `TERM` should be set to `UNKNOWN`.

## ERRCOUNT

`ERRCOUNT <integer>`

The `ERRCOUNT` environment variable indicates how many test errors can be generated before test execution is stopped and control returned to the user. If one does not want error generation to stop test execution, the state of `ERRCOUNT` should be set to 0.

## Commands

This section gives a brief description of each user command supported by TMMGR. The following conventions are used in the command syntax:

| or  
[] items within brackets are optional  
... item to the left can be repeated 0 or more times  
{ } groups items together

### FIRST

`FIRST`

Use this command to display the first page of the system screen, the environment screen, the logging screen, or a test screen.

### LAST

`LAST`

Use this command to display the last page of the system screen, the environment screen, the logging screen, or a test screen.

## NEXT

NEXT (N)

Use this command to display the next page of the system screen, the environment screen, the logging screen, or a test screen. Note, <Ctrl>-N (N) can be used as a shortcut for this command.

## PREV

PREV (P)

Use this command to display the previous page of the system screen, the environment screen, the logging screen, or a test screen. Note, <Ctrl>-P (P) can be used as a shortcut for this command.

## REFRESH

REFRESH

Use this command to redraw the current console display. Using this command may become necessary if the console display becomes unsynchronized with internal program data structures.

## ENV

ENV

Use this command to go to the environment screen. The environment screen allows one to view and modify all environment variables.

## SELECT

SELECT

<num> is an integer indicating any valid selection number. <range> is a range of selection numbers of the form A/B (A %< B). Use this command to select a group of modules to test or a group of tests to execute. A group of modules or tests is specified by explicitly specifying a list of selection numbers and/or a range of selection numbers. All tests or testable modules can be selected at once by using the command parameter, ALL. To deselect a group of modules or tests, one can prepend - to each element in the group specification. Note, elements of a group specification are processed from left to right. This fact can be used to specify groups with minimal effort.

Examples:

To select modules or tests 1, 4, 6, 7, 8, and 9, enter:

```
-> select 1 4 6 7 8 9 <cr>      or      -> select 1 4 6/9 <cr>
```

To select all modules or tests except 3 and 4, enter:

```
-> select all -3 -4 <cr>
```

## EXIT

EXIT [ALL]

Use this command to return back to the previous screen. To exit all the way back to ISL, type EXIT ALL.

## LOG

LOG

Use this command to go to the logging screen. The pages within the logging screen show detailed output from each test previously run.

## RUN

RUN

Use this command to execute the currently tagged tests or to execute the tests for the currently tagged modules.

## HELP

HELP [<name>]

<name> is the name of a valid command for the current page in the current screen. Use this command to display help information for the various commands valid for the current page in the current screen. Executing this command with no parameter will display a short summary of each valid command.

## INFO

INFO <num>

---

**NOTE**           <num> is a valid module or test selection number.

---

Use this command to display general information about a module or test. The desired module or test should be specified by its associated selection number as indicated on screen.

---

## Updating Processor Firmware Using the Diagnostic/IPR Media

---

<b>CAUTION</b>	<b>If you should run ODE support tools with the wrong revision of processor firmware (PDC) on your system, you could cause an HPMC.</b> The following procedure will ensure that your ODE support tools and your PDC are running compatible versions.
----------------	---

---

---

<b>NOTE</b>	As of the June 1999 release (IPR 9906), the <code>UPDATE</code> utility for ODE has been replaced by <code>FUPDATE</code> . <code>FUPDATE</code> is backward compatible with existing computer systems
-------------	--

---

Following is the procedure for updating the PDC on your system, prior to running any ODE support tools:

1. At the prompt, type `swinstall`. Three windows will be displayed.
2. Move the cursor to the window displaying the `Machine` and `Depot` dialog boxes.
3. Enter the appropriate information in the `Machine` field (this is the machine you are loading PDC update script onto; the default is the machine on which you are running the Diagnostic/IPR Media).
4. Enter the appropriate information in the `Depot` field (this is the media — that is, the tape or CD-ROM — from which you are loading the PDC update script).
5. Move the cursor to `Change Software View` and select it.
6. Select `Products`.
7. Move the highlight bar to `PROC_FIRMWARE`.
8. Move the cursor to the `Actions` pulldown menu, and select `Install`.  
You should see the messages `Loading` and then `Done`.
9. Once you see the message `Done` displayed, you should exit.
10. Type `cd usr/sbin/diag/firmware` at the prompt.

You should see the following three files listed:

```
FRMW_LIF      README      cp_lif_tape
```

11. Be sure you have a blank tape inserted into the drive; then type `cp_lif_tape`.
12. You will be prompted to enter the tape drive address (a typical address would be `0m`).  
The `cp_lif_tape` script will copy the LIF file `FRMW_LIF` to a DAT tape.
13. Once you have made the DAT tape with `FRMW_LIF` on it, you should insert that tape into a bootable DAT tape drive connected to the system whose firmware you wish to change.

14. It is necessary that you shutdown the operating system on the system whose firmware you wish to change. This can be done with the `reboot -h` command.
15. Once the system's operating system is shutdown, you can then cycle the power of the system by pushing the power button OFF and then ON. The system should then begin to boot. If you look at the console, you will observe the system eventually display a boot prompt or indicate that in 10 seconds it will autoboot unless you hit a key.
16. If you see the 10 second message, you should hit a key to get to the boot prompt.
17. At the boot prompt, you have to tell the system which path to boot from. You will want to boot from the path that points to the DAT tape drive in which you placed the DAT tape that you made earlier.
18. If you do not know the path to the DAT tape drive, type `search` at the boot prompt and then hit `Return`. The system will display all the bootable devices it can find. The DAT tape will be a sequential boot device.
19. Once you have selected the boot path for the DAT tape drive, you should issue a boot command using that path.
20. As the system boots, it may prompt you to know if it should interact with ISL or not. If the system prompts you for such information, you should type `y`. Next, you should see the `ISL` prompt.
21. At the `ISL` prompt, you should type `ODE` and hit `Return`.
22. At the `ODE` prompt, you should type `README`. The `README` utility will display an index indicating which image files on the LIF are for which systems, along with the versions associated with those image files.
23. If you would like to see more detailed information about a particular firmware revision, you can use the `README` utility commands to scroll through appropriate text files.
24. Once you have determined which image file(s) are appropriate for your system, you should exit the `README` utility and type `FUPDATE` (or `UPDATE`) at the `ODE` prompt.
25. At the `FUPDATE` (or `UPDATE`) prompt, you should type the `IMAGE` command, followed by the image filename(s) you determined was correct for your system. If your system requires more than one image file, you should list the filenames in the order they appeared in the `README` index.

---

<b>CAUTION</b>	<b>IF YOU SELECT THE WRONG IMAGE FILE(S), YOU CAN RENDER YOUR SYSTEM UNUSABLE!</b>
----------------	--

---

26. Once you have entered the `IMAGE` command, you can type the `RUN` command to start the processor firmware update process on the system.
27. You will be prompted by the `FUPDATE` (or `UPDATE`) utility and you should respond as appropriate. Once the update process is complete, the `UPDATE` utility will reboot your system so that the new firmware can begin to operate.

**THIS ENDS THE PROCEDURE FOR UPDATING THE PDC ON YOUR SYSTEM FROM THE SUPPORT MEDIA.**



# 4 Support Tools Manager (STM)

---

The Support Tools Manager (STM) is a platform for online support tools currently available for HP9000 Series 700 and 800 machines.

Upon startup, you connect to a local or remote system. STM displays a map of the hardware configuration. You use this system map to select one or more devices, then run the desired tool (such as a verifier, exerciser, or expert tool) on the selected device(s). Results are displayed on the system map.

---

<b>NOTE</b>	For the most current information on Support Tools, see our Web site, "Systems Hardware, Diagnostics, and Monitoring," at <a href="http://www.docs.hp.com/hpux/systems/">http://www.docs.hp.com/hpux/systems/</a> . This Web site also contains additional documents, such as tutorials, quick reference guides, and release information.
-------------	--

---

This chapter introduces STM and covers the following topics:

- Running STM
- Three Interfaces
- System Map and Device Icons
- Menus and Commands
- Getting Result Information (Logs)
- Remote Execution
- Getting Help
- Common Problems

## Running STM

*To start STM and run support tools:*

1. Enter the command appropriate for your terminal.

- For X Windows terminals and workstations, enter `/usr/sbin/xstm`.
- For non-graphics terminals, enter `/usr/sbin/mstm` (menu-based version) or `/usr/sbin/cstm` (command-line version).

You can also enter `/usr/bin/stm`. This command will start the X-windows interface, if the `DISPLAY` environment variable is set; otherwise, the menu interface will be started.

2. If you want to test a remote machine, select the computer system to test. The remote machine must be running a compatible version of STM (i.e., the version running on the system you wish to connect to must be identical to, or a later version than, the version running on the system you are connecting from).
3. Select one or more devices from the system map that is displayed.
4. Choose a support tool (for example a verifier) to run on the selected device(s).
5. Results appear on the system map (for example on xstm, a green icon indicates that a device successfully passed the test).
6. If the device fails, see the device Failure Log for the cause of the failure and suggested actions.
7. If a test result is anything other than Successful or Failure, look at the Test Activity Log for the device.

The specific steps depend on whether you are running xstm, mstm, or cstm. For example, in xstm, commands are accessed by means of pull-down menus. In mstm, you traverse menus and select commands by pressing function keys. In cstm, you enter the command name (or its abbreviated form) at the prompt.

For detailed instructions, use the STM online help system. (See “Getting Help” later in this chapter.)

## Three Interfaces

You can access the Support Tools Manager (STM) through any of three interfaces. Choose the interface appropriate for your needs, preferences, and resources. If possible, use `xstm`.

*xstm (X Window graphical)*

- X Window graphics terminals or workstations
- **Command:** `/usr/sbin/xstm` or `/usr/sbin/stm/ui/bin/stm -x`

*mstm (menu-based)*

- Non-graphics terminals
- **Command:** `/usr/sbin/mstm` or `/usr/sbin/stm/ui/bin/stm -m`

*cstm (command line)*

- For running scripts
- **Command:** `/usr/sbin/cstm` or `/usr/sbin/stm/ui/bin/stm -c`

Displays from the three interfaces are shown in the rest of this chapter.

## System Map and Device Icons

When you first connect to a computer system, you see a system map showing all the hardware entities in the system (CPU, memory, device adapters, and I/O devices).


You use the system map to select the devices to test. After a test runs, the system map displays the results. For example, a device icon in xstm is green for Successful and red for Failure.

### System Map in xstm

In xstm, the system map is composed of device icons (see Figure 4-1). You left-click on a device icon to select that device and unselect all others.

Do a Control-left-click on a device icon to toggle the select of that device and leave all other selected devices in their current state.

**Figure 4-1 xstm System Map**

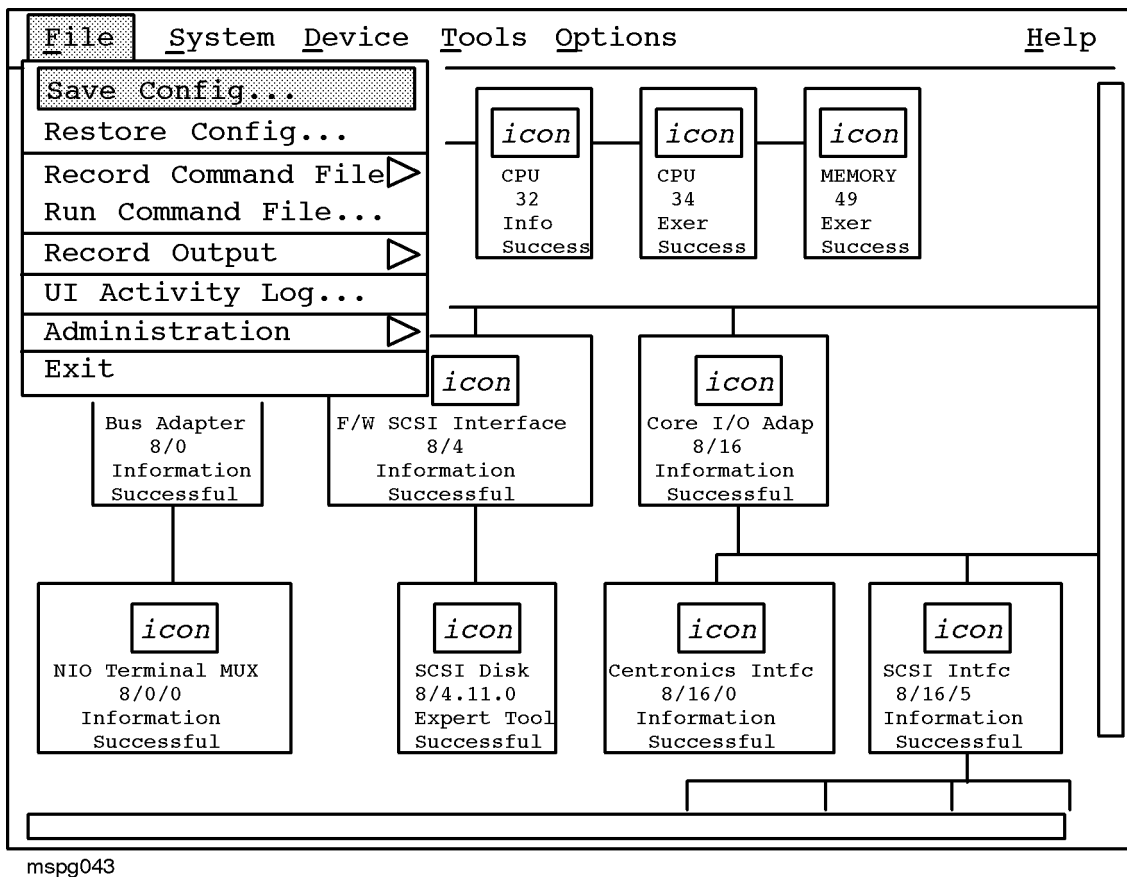

## System Map in mstm

The following figure shows a system map in mstm:

**Figure 4-2**

/usr/sbin/stm/ui/bin/stm  
hpdst199

File	System	Device	Tools	Options	Help
====	=====	=====	=====	=====	=====
Path	Product		Last Active	Last Op	
=====	=====		Tool	Status	
8	Bus Adapter		Information	Successful	
8/0	Bus Adapter		Information	Successful	
8/0/0	NIO Terminal Multiplexor		Information	Successful	
8/4	Fast/Wide SCSI Interface		Information	Successful	
8/4.3.0	SCSI Disk		Exercise	Aborted	
8/4.4.0	SCSI Disk		Verify	Successful	
8/4.10.0	SCSI Disk		FW Update	Successful	
8/4.11.0	SCSI Disk		FW Update	Successful	
8/16	Core I/O Adapter		Information	Successful	
8/16/0	Centronics Interface		Information	Successful	
8/16/5	SCSI Interface		Information	Successful	
8/16/5.1.0	SCSI Tape		Verify	Query Pending	
8/16/5.2.0	SCSI Disk		Information	Successful	
8/16/6	LAN Interface		Exercise	Abort Pending	
8/16/7	Built-in Keyboard/Mouse		Information	Successful	
8/20	Core I/O Adapter		Information	Successful	
8/20/2	RS-232 Interface		Information	Successful	
8/20/5	EISA Adapter		Information	Successful	
10	Bus Adapter		Information	Successful	
32	CPU		Exercise	Successful	
34	CPU		Exercise	Successful	
49	MEMORY		Exercise	Successful	

Navigation of the system map is done by using the Up/Down/Left/Right arrow keys and the Prev/Next or Page Up/Page Down keys.

To select a specific device for testing, place the cursor on the specific device and press Return; all other devices are unselected. (To select a device and leave all other selected devices in their current state, place the cursor on the specific device and press the space bar.):

You can use the TAB key to activate a pull down menu which allows you to select the specific tool that you want to run on the selected device(s). :

## System Map in cstm

The cstm system map is almost identical to the mstm system map. The main difference is that cstm provides each device with a device number:

**Figure 4-3**

```
                                /usr/sbin/stm/ui/bin/stm
                                hpdstl99
```

Dev Num	Path	Product	Last Active Tool	Last Op Status
===	=====	=====	=====	=====
1	8	Bus Adapter	Information	Successful
2	8/0	Bus Adapter	Information	Successful
3	8/0/0	NIO Terminal Multiplexor	Information	Successful
4	8/4	Fast/Wide SCSI Interface	Information	Successful
5	8/4.3.0	SCSI Disk	Exercise	Aborted
6	8/4.4.0	SCSI Disk	Verify	Successful
		.		
		.		
		.		

You select devices by using the `select` command with a device number or path modifier. A minus sign (-) in front of a parameter unselects it. Examples:

```
select device 1
select path 5/4.3.2
select device -1
select path -5/4.3.2
```

---

## Kinds of Support Tools

To use the diagnostics and support tools, the user first invokes one of the user interface modules (`xstm`, `mstm`, or `cstm`), selects one or more devices, and invokes one of the following tools to specify what type of operation is to be performed on the device(s):

- Information** Creates a log of information specific to one device, including the product identifier, a description of the device, the hardware path to the device, the vendor, and the firmware revision code, if firmware is present in the device.
- Verify** If available, performs a simple test of component function, providing a "pass/fail" indication of device condition; typically, this is the first level test of a device's condition.
- Diagnose** If available, runs a diagnostic program on the device, which is designed to detect and isolate faulty hardware on that device. Diagnose tools require a Support Class or Node license.
- Exercise** If available, stresses the device or subsystem. This function is useful in providing very high confidence verification, and in detecting intermittent errors.
- Firmware Update** Initiates the firmware update process for a selected device. While the user interface to the firmware update tools is generic, the tools themselves are device-specific.
- Expert Tools** Are device specific troubleshooting utilities for use by sophisticated users. Their functionality varies from tool to tool, but they are intended to be interactive, and rely on you to provide information necessary to perform a particular task. Expert tools require a Support Class or Node license, or in some cases an HP-only license.
- Utilities** Are support tools which are not device specific. Current tools include `logtool` (for reading system logs) and a disk copy utility. Most utilities do not require a license.

Verifiers, exercisers and information tools require no license to run. Some of the other tools may require a license. To see the license level required for the tools available on a device, perform a "current device status" request on the device. For example in `xstm`, select the device, then select "Current Device Status" from the Device pull-down menu.

## Menus and Commands

The xstm, mstm, and cstm interfaces all have different ways to display menus and accept commands from the user.

The following subsections detail the xstm, mstm, and cstm menus and commands.

## xstm Menus and Commands

In xstm, commands are accessed by means of pull-down menus.

### Figure 4-4 xstm Menus and Commands

## Menu Bar

<b>File</b>	<b>System</b>	<b>Device</b>	<b>Tools</b>	<b>Options</b>	<b>Help</b>
Save Config...	Sel System to Test→	Current Device Status	Information→*	Tool Options→	On Item...
Restore Config...	Save Map...	Clear Tool Status	Verify→*	Map...	On Tasks...
Record Command File→	Print Map...	Select All	Diagnose→*	General...	On Application...
Run Command File...	Remap System	Select Class...	Exercise→*		On Menus/
Record Output→	Map Log	Unselect All	Firmware Update→*		Commands...
UI Activity Log	License→	Unselect Class...	Expert Tool→*		On Home Topic...
Administration→	System Activity Log...		Utility→*		On Help...
Exit	Daemons→		Latest Logs→		On Version...
			ToolManagement→		

The entries above marked with  $\rightarrow$  display one of the cascade menus shown below. Each tool (marked with  $*$ ) generates the cascade menu below labeled  $*(\text{Tools})\rightarrow$ .

## Cascade Menus

<b>Record Command File →</b>	<b>Sel System to Test →</b>	<b>*(Tools) →</b>	<b>Tool Options →</b>
Start Recording...	Connect to Systems...	Run	Information...
Stop Recording	Select Current System...	[Information Log]	Verify...
	Disconnect Systems...	Activity Log	Diagnose...
		Failure Log	Exercise...
		Info	Firmware Update...
<b>Record Output →</b>	<b>License →</b>	<b>Latest Logs →</b>	Expert Tool...
Start Recording...	Display	Activity Log	Utility...
Stop Recording	Install...	Failure Log	Tool Launch...
Record Map	Install HP—Only...		
	Deinstall		
<b>Administration →</b>	<b>Daemons →</b>		
Read UUT Config File	Daemon Starup...	<b>Tool Management →</b>	
Update Tool Info	Daemon Shutdown...	Abort Tool	
STM Startup	Daemon Kill...	Suspend Tool	
STM Shutdown	Daemon Activity Log...	Resume Tool	
Local UUT Logs →		Kill Tool	
		Abort Utility...	
		Kill Utility...	
		Display "Query Pending"	
<b>Local UUT Logs →</b>			
Map Log			
System Activity Log			
syslog			

## mstm Menus and Commands

In mstm, you traverse screens and menus, and select commands from pulldown menus, which are similar to those found in xstm:

### Figure 4-5 mstm Menu Bar and Softkeys

[illegible]

### Figure 4-6 mstm Pulldown Menu Example

[illegible]

## Screen Navigation

There are two types of screen navigation:

- Navigating between screens
- Navigating within screens

To navigate between one screen and another, use the Tab key.

To navigate from one portion to another portion of the same screen, use the Prev and Next keys (or, alternatively, the Cursor Up and Cursor Down keys).

## Menu Bar

The following table summarizes the use of the menu bar.

**Table 4-1 Menu Bar Navigation**

<b>To do this:</b>	<b>Do this:</b>
<b>Position the cursor on the menu bar</b>	Use the Tab key (or the Menu Bar on/off function key).
<b>Move to a pulldown menu</b>	Use the cursor arrow keys.
<b>Expand a menu/sub-menu</b>	Use the Return key.
<b>Highlight a command or sub-menu</b>	Use the cursor keys.
<b>Perform a command</b>	Use the Return key.
<b>Invoke a menu directly:</b>	Use Alt function key; then hit non-underlined character in menu title.
<b>Activate a menu command/expand pulldown sub-menu:</b>	Hit the letter which is underlined in the command or sub-menu.

### Figure 4-7 mstm Menus and Commands

## Menu Bar

File	System	Device	Tools	Options	Help
Save Config...	Sel System to Test →	Current Device Status	Information → *	Tool Options →	On Tasks...
Restore Config...	Save Map...	Clear Tool Status	Verify → *	Map...	On Application...
Record Command File →	Print Map...	Select All	Diagnose → *	General...	On Menus/
Run Command File...	Remap System	Select Class...	Exercise → *		Commands...
Record Output →	Map Log	Unselect All	Firmware Update → *		On Home Topic...
UI Activity Log	License →	Unselect Class...	Expert Tool → *		On Shortcuts...
Administration →	System Activity Log...		Utility → *		On Keyboard...
Escape to OS	Daemons →		Latest Logs →		On Help...
Exit			Tool Management →		On Version...

The entries above marked with '->' display one of the cascade menus shown below. Each tool (marked with '\*') generates the cascade menu below labeled '\* (Tools)->'.

## Cascade Menus

<b>Record Command File →</b>	<b>Sel System to Test →</b>	<b>*(Tools) →</b>	<b>Tool Options →</b>
Start Recording...	Connect to Systems...	Run	Information...
Stop Recording	Select Current System...	[Information Log]	Verify...
	Disconnect Systems...	Activity Log	Diagnose...
		Failure Log	Exercise...
		Info	Firmware Update...
			Expert Tool...
<b>Record Output →</b>	<b>License →</b>	<b>Latest Logs →</b>	Utility...
Start Recording...	Display	Activity Log	Tool Launch...
Stop Recording	Install...	Failure Log	
Record Map	Install HP-Only...		
	Deinstall		
<b>Administration →</b>	<b>Daemons →</b>	<b>Tool Management →</b>	
Read UUT Config File	Daemon Startup...	Abort Tool	
Update Tool Info	Daemon Shutdown...	Suspend Tool	
STM Startup	Daemon Kill...	Resume Tool	
STM Shutdown	Daemon Activity Log...	Kill Tool	
Local UUT Logs →		Abort Utility...	
		Kill Utility...	
		Display "Query Pending"	
		Attach to Tool	
<b>Local UUT Logs →</b>			
Map Log			
System Activity Log			
syslog			
misp075a			

## mstm Shortcut Keys

A new 'shortcuts' feature has been added to mstm which lets you do frequently performed operations quickly. For example, to select all disks and then run the verify tool on them, the user would hit the keys 'dv<RETURN>' while the mstm map is displayed. For a list of the shortcut keys, hit the '?' key while the mstm map is displayed:

### Shortcut Keys

#### Device Selections

- (a) all devices
- (d) disks
- (m) memory
- (p) processors
- (t) tapes

#### Device Tools

- (v) verify
- (e) exercise
- (i) information
- (s) current device status

#### Utilities

- (l) logtool

#### Other Shortcut Keys

- (?) this help page
- <cr> execute shortcut key commands and exit from this help page.
- <back-space> delete the last shortcut key entered and undo its selection.

#### Notes

- The first device selection will unselect all currently selected devices.  
Subsequent selections will be additive.
- Only one tool or utility operation is allowed per shortcut operation.

#### Shortcut Key Examples:

- "av<cr>" Select all devices and run verifier.
- "l<cr>" Run logtool.
- "dte<cr>" Select only disk and tapes and run exerciser.

## cstm Menus and Commands

In cstm, you simply enter the command name (or its abbreviated form) at the prompt. There are no menus and you can enter any command at any time.

The following lists the cstm commands for the HP-UX 10.10 to 11.0 releases by category. The format is *command (abbreviation)*:


<b>File:</b>	<b>System:</b>	<b>Device:</b>
saveconfig (scfg)	connectsys (cs)	currdevstatus (cds)
restoreconfig (rcfg)	selcurrentsys (scs)	cleartoolstatus (cts)
recordcmdfile (rcf)	disconnectsys (ds)	select (sel)
stoprecordcmd (srcf)	savemap (smap)	selall (sall)
runcmdfile (rncf)	printmap (pmap)	selclass (scl)
recordoutput (ro)	remapsystem (rs)	unselall (usal)
stoprecordout (sro)	maplog (ml)	unselclass (uscl)
uiactlog (uial)	displaylic (dl)	
readuutconfig (ruc)	license (lic)	
updatetoolinfo (uti)	hplicense (hlic)	
stmstartup (ssu)	deinstalllic (dlic)	
stmshutdown (ssd)	sysactlog (sal)	
resetsysactlog (rsa)	daemonstartup (dsu)	
localmaplog (lml)	daemonshutdown (dsd)	
localsysactlog (lsal)	daemonkill (dk)	
syslog (sl)	daemonactlog (dacl)	
os (os)	map (map)	
exit (ex)		
<b>Tools:</b>	<b>Tools (Continued)</b>	<b>Options:</b>
information (info)	fwupdatefaillog (ffl)	infooptions (iop)
infolog (il)	fwupdateinfo (finf)	veroptions (vop)
infoactlog (ial)	experttool (xt)	diagoptions (dop)
infofaillog (ifl)	expactlog (xal)	exeroptions (eop)
infoinfo (iinf)	expfaillog (xfl)	fwupdateoptions (fop)
verify (ver)	expinfo (xinf)	expoptions (xop)
veractlog (val)	runutil (ru)	utiloptions (uop)
verfaillog (vfl)	utilactlog (ual)	launchoptions (lop)
verinfo (vinf)	utilfaillog (ufl)	mapoptions (mop)
diagnose (dgn)	utilinfo (uinf)	generaloptions (gop)
diagactlog (dal)	lateactlog (lal)	
diagfaillog (dfl)	latefaillog (lfl)	
diaginfo (dinf)	aborttool (abt)	
exercise (exc)	suspendtool (st)	<b>Help:</b>
exeractlog (eal)	resumetool (ret)	help
exerfaillog (efl)	killtool (klt)	help more
exerinfo (einf)	abortutil (abu)	help syntax
firmwareupdate (fwu)	killutil (klu)	help all
fwupdatelog (fal)	displayquery (dq)	help COMMAND (ACCEL)
	attach (at)	help help
	wait (wait)	version (vers)

## Getting Result Information (Logs)

Most of the time you will get the information you need by looking at the status of device icons on the system map. For example, a device icon in xstm is green for Successful and red for Failure.

If a device has a Failure, consult the device Failure Log for a message identifying likely causes for the failure and suggesting possible actions. Figure 4-8 shows a sample Failure Log in xstm.

**Figure 4-8 Sample Failure Log in xstm**

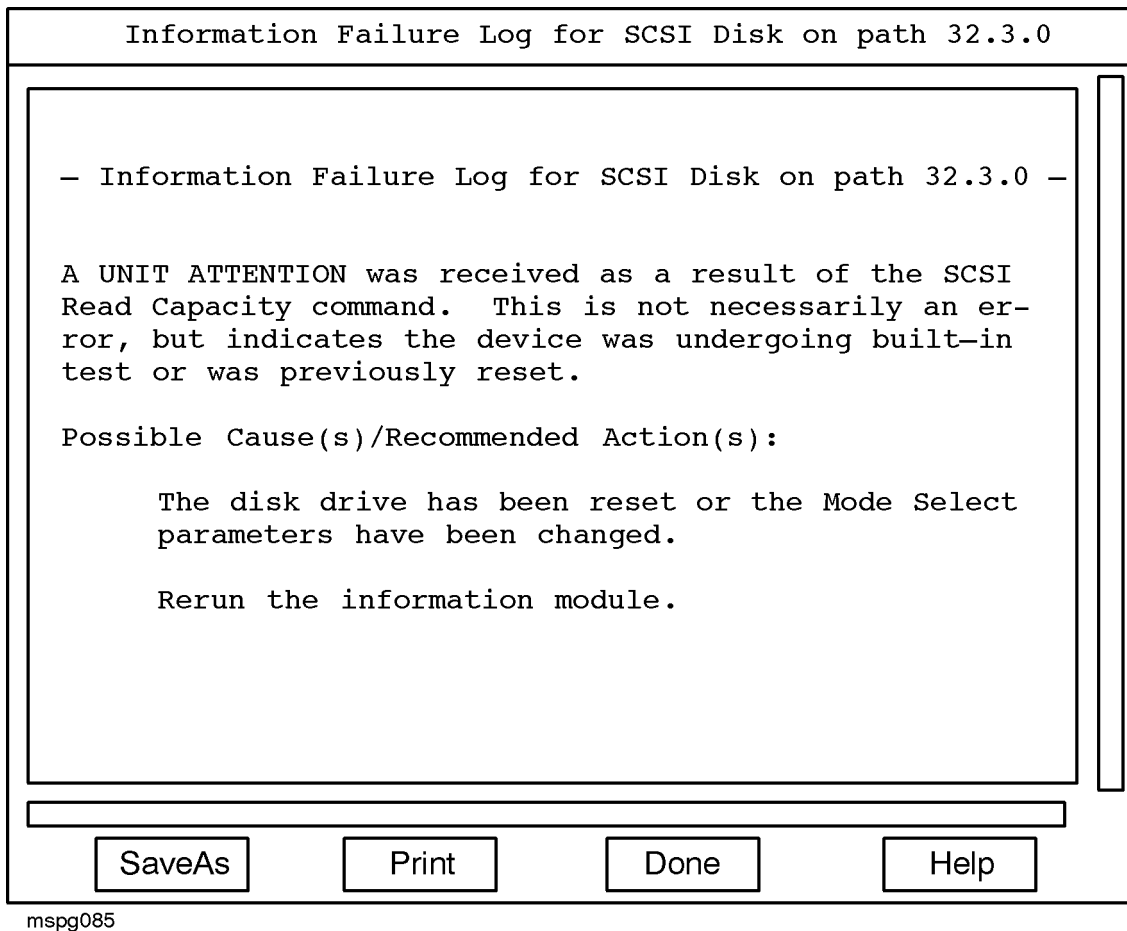

If a test result is anything other than Successful or Failure, look at the Test Activity Log for the device. For example, if a test results in a Incomplete status, the Test Activity Log will explain whether the problems is due to "malloc" failures or to missing device files, or other possible errors.

Other logs are available with a record of STM system events (for example, a User Interface Log).


## Remote Execution

You can run the STM user interface on one machine, and use it to run support tools on one or more remote machines. See Figure 4-9 for a display of possible connections.

The computer running the user interface is the *UI system* and the computer running the support tools is the *Unit Under Test* or *UUT*.

As always you can run the user interface and support tools on the same machine. In this case the UI machine and the UUT are one and the same.


**Figure 4-9 Possible UI and UUT Connections**

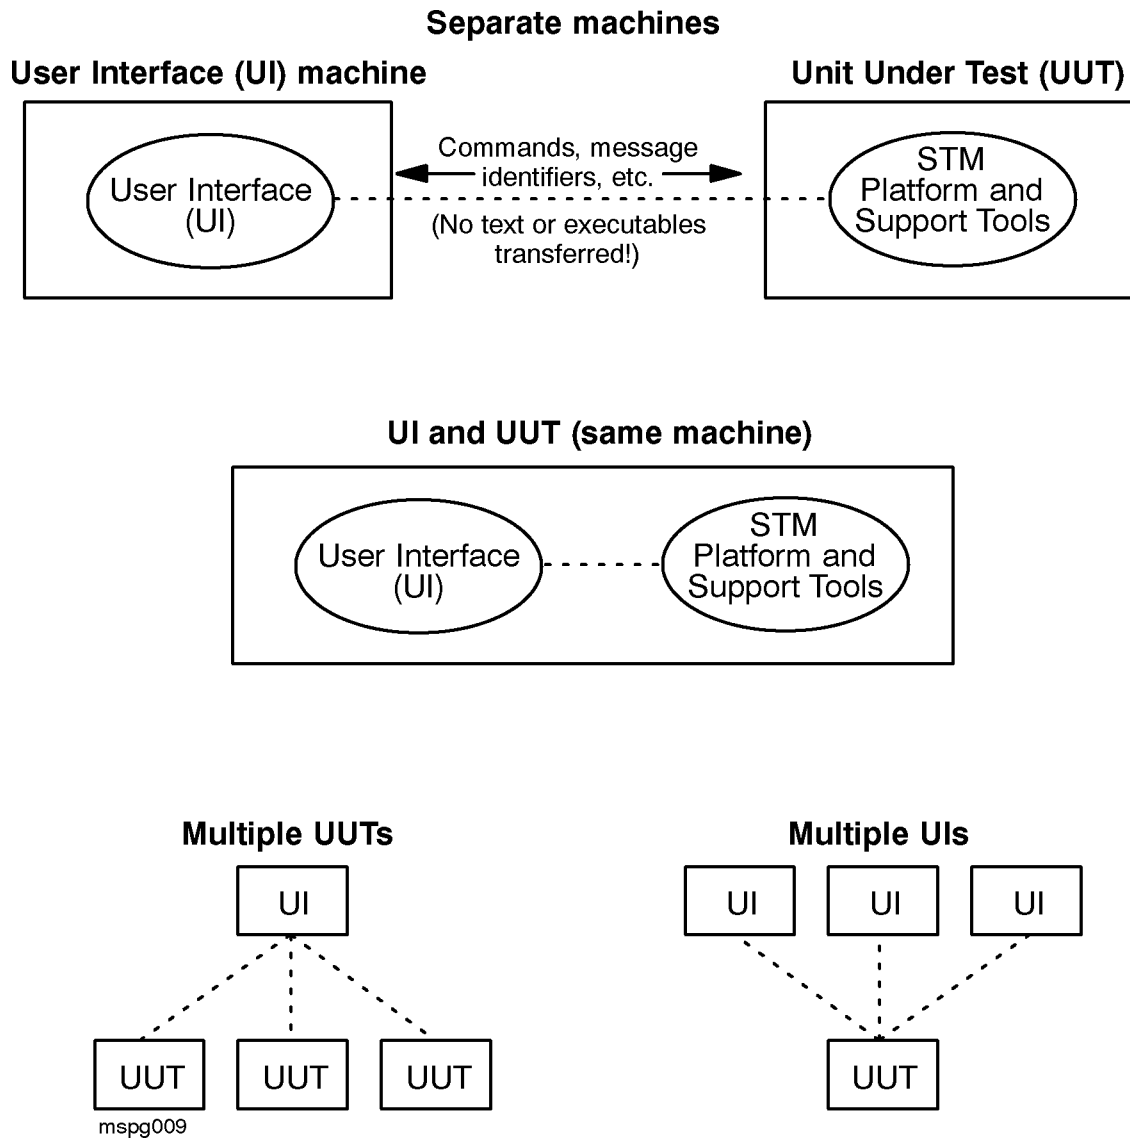

## Distributed Structure

Efficient remote execution is possible because STM has a distributed structure. Figure 4-10 shows how the parts of STM are distributed between the UI machine and the UUT.

**Figure 4-10 Diagram of STM's Distributed Structure**

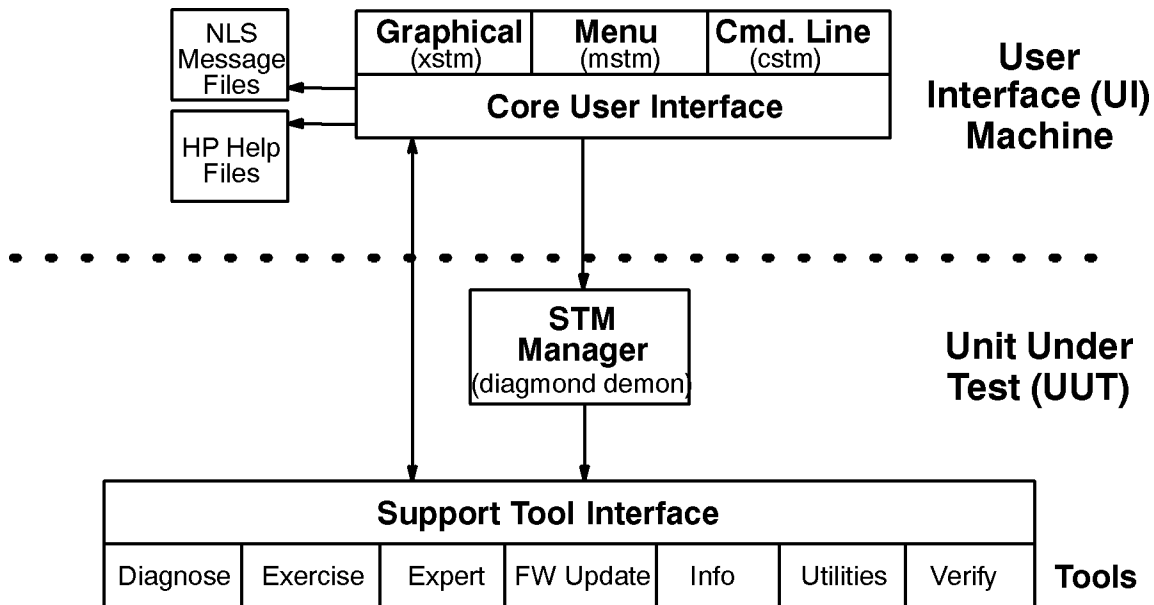

mshpg084

The UI system contains the binaries for the graphical, menu, and command line interfaces, as well as for the Core UI which underlies them. The UI also contains the text to be displayed (message catalogs and help volumes).

The Unit Under Test (UUT) contains the binaries for the support tools (Diagnose, FW Update, Exercise, Expert, etc) and the libraries which support them.

## Improving Performance

This distributed design makes for good performance. This is because data and code reside on the machine that makes use of them. The UI system has code for the UI, and message text for both the UI and support tools. The UUT system has the support tool executables. Little text is passed between the two machines, usually only the information required to locate a message.

## Getting Help

STM provides sophisticated and full-featured help systems for the main STM interface and for interactive tools such as Expert tools and Firmware Update tools. See Figure 4-11 for a sample help display in xstm.

To access an online help system:


- *xstm*: Use the "Help" menu at the far right of the menu bar.
- *mstm*: Press the "Help" function key.
- *xstm*: Enter the command `help`.

## Kinds of Help

Help for the main STM user interface covers the following:

- *On Item*: Context-sensitive information on parts of the interface (xstm only).
- *On Tasks*: Cookbook procedures for performing common system tasks using STM.
- *On Application*: General information about the Support Tool Manager
- *On Help*: Information about using the HP Help system.
- *On Version*: Copyright, version, and legal information about STM.

**Figure 4-11 Sample Online Help in xstm (for FW Update Tool)**

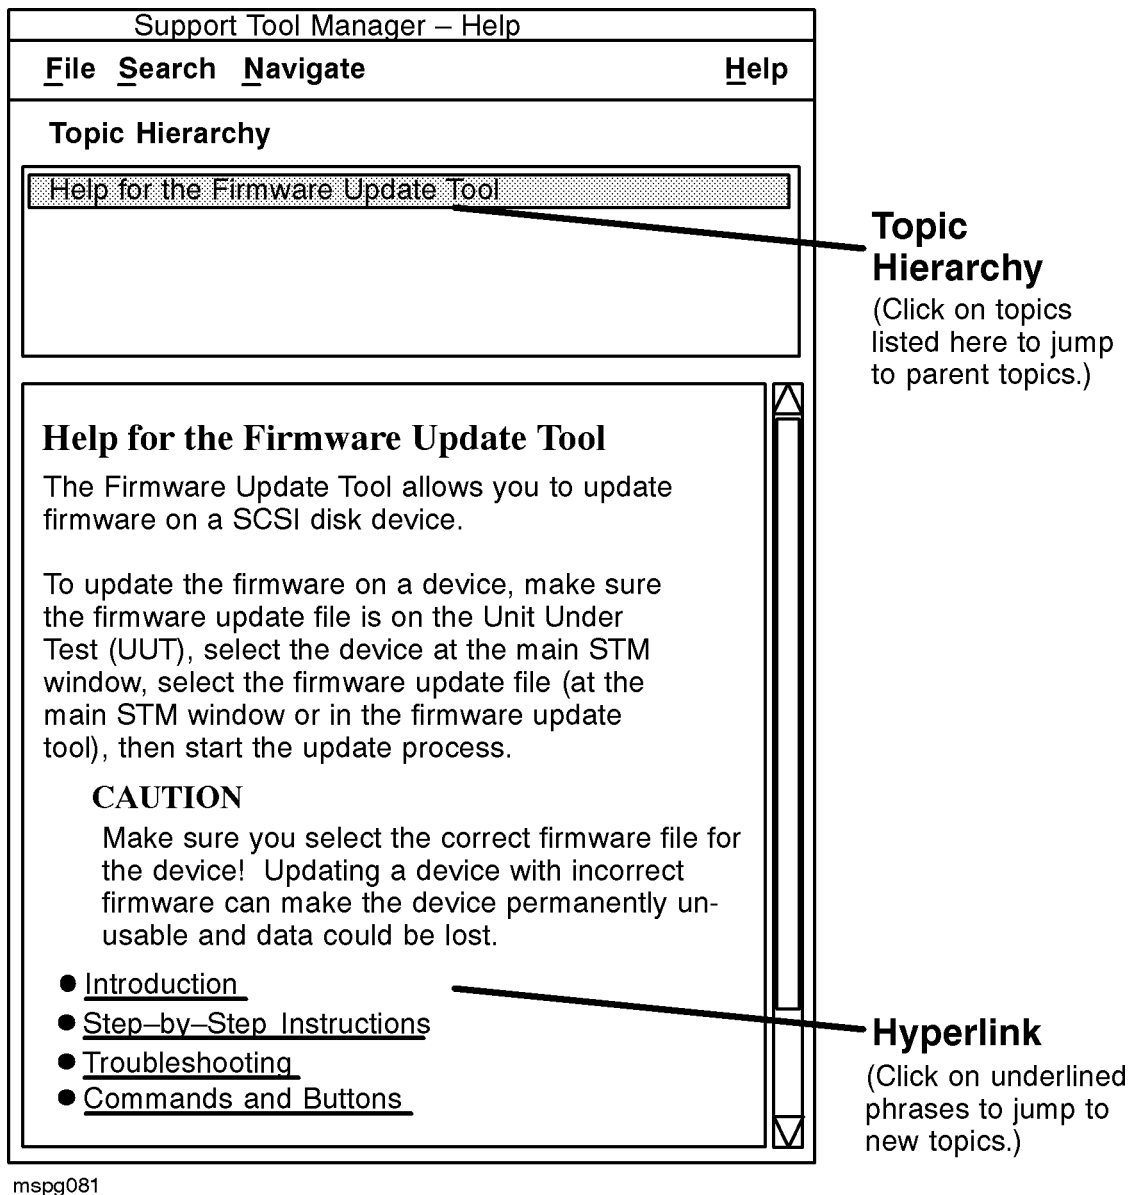

---

## Common Problems

### Exercisers sometimes enter a "Hung" state.

STM monitors the progress of all running tools and expects each tool to send a "heartbeat" every minute or so. If these heartbeat indications are not received within a two-minute window, the tool state is changed to "Hung". Two possible causes:

- *Cause 1: Not enough CPU time* The most probable cause is that the tool is not getting enough CPU time. This situation may occur if the computer is extremely busy or if several exercisers are executing simultaneously, especially with the "Maximum Stress" option.

If the cause of the problem is not enough CPU time, the tool will eventually make enough progress to send another heartbeat at which time its state will be changed back to "Running". You may choose to suspend or abort the tool and wait for the system to become less busy. If you want to run several exercisers simultaneously, use the "Medium Stress" option.

- *Cause 2: Tool has stopped executing* Only rarely would the tool stop executing. Typically, this behavior would be caused by a kernel driver that has stopped responding or something of that nature.

The tool may eventually start executing again if it becomes unblocked, at which time its state will be changed back to "Running". You may choose to abort the tool at this point. If the tool is blocked due to a kernel resource such as in a driver, you not be able to abort the tool. In this case, the tool will stay in an "abort pending" state indefinitely.

### The user interface will not connect to a machine.

This problem usually occurs when the machine address cannot be resolved or because the `diagmond` daemon is not running on the machine that is being connected to. Use `/etc/ping` to verify that the host address can be resolved.

If `ping` works, check to see if `diagmond` is running on the host machine. If it is not, log into the host machine, run STM on it, and use the "File — >Administration — >Local UUT Logs" command to view the log files on the host machine and determine what the problem is.

The remote machine must have:

- HP-UX 10.01 or higher.
- The bundle containing STM (OnlineDiag) loaded.
- The `diagmond` demon running.

The `diagmond` demon is automatically started for customers when they boot. It also happens automatically when you update the diagnostic system, as that also forces a reboot, which launches `diagmond`. If diagnostics are installed on the system but `diagmond` is not running, you can start it in one of two ways (you need to be root for both cases):

1. Type `/usr/sbin/stm/uut/bin/sys/diagmond`
2. Run `xstm`, `mstm`, or `cstm` and perform a local-startup:
  - `xstm`: File->Administration->Local Startup
  - `mstm`: file, admin, LOCAL STARTUP
  - `cstm`: localstartup (lsu)

If `diagmond` won't stay up, follow the standard procedure to figure out why. Run `xstm`, `mstm`, or `cstm` locally and look at the Local UUT Logs:

- `cstm`: localsyslog
- `mstm`: file, admin, local uut logs, sys act log
- `xstm`: File->Administration->Local UUT Logs->System Activity Logs

## **A device in the STM map is "Unknown" or its icon is blank.**

This problem typically occurs if the driver that is associated with the device is not recognized by STM. Please report all unknown devices through STARS. Include the following information:

- The contents of the Scan HW Log.
- The output of the "Device — >Current Device Status" STM command.
- The output of the `ioscan -kF` HP-UX command.
- The type of device and its product number (if known).

## **Slow response to user commands.**

When many tools are started simultaneously, STM may be slow to respond to user commands. This is due primarily to the messaging traffic between the tools and STM which is particularly heavy when tools are first run. During this time, one or more tools may enter a "Hung" state.

These problems should disappear once all of the tools have gotten through the start-up phase.

## **SCSI Tape and Disk Tools report SCSI commands as failed in the Test Activity Logs.**

Some of the SCSI disk and tape tools log errors in their Test Activity logs indicating that commands such as LOG SENSE and INQUIRY failed. This is usually because the drive being tested is an older drive which did not implement these commands in the form they are being used. If this is the case, the Cause/Action text in the log message will suggest this as a possible cause of the problem.

## **No tools are available for a particular device.**

Due to resource constraints, support tools for all device were not developed for this release. Tools for these devices will probably be available in subsequent releases.

Some tools may not be available because they require a license. Currently the only tools that require a license are expert tools. To see a list of the tools installed for a device and the license level, if any, required to run the tool, use the "Device — >Current Device Status..." command. The following is a display for a SCSI disk device:

```
Installed tools:
Diagnostic      : None
Verifier        : disk
Exerciser       : disk
Informaton     : scsi_disk
Expert Tool     : scsi_disk (Licensed)
Firmware Update : scsi_disk
```

## **The "Device — >Select Class" command did not work.**

This is usually because the "Device Type" and "Qualifier Type" you selected don't both match a device in the system. For example, selecting a type of "Disk" and a qualifier of "SCSI" will not select any devices because SCSI disks use qualifiers of "Hard," "Floppy," etc. Use the "Device — >Current Device Status" command to determine the valid type and qualifier that apply to a specific device.



# 5 Using the Diagnostic/IPR Media to Install Diagnostics on Your System

---

The Diagnostic/IPR Media is the `swinstall` format distribution media for the following hardware support products for 10.01, 10.10, 10.20, 10.30, and 11.x HP-UX systems; it is also the `update` format distribution media for the 9.04 and 9.07 HP-UX systems.

- Online diagnostics subsystem (STM)
- Support Tools Manager (HP-UX 10.x and 11.x)
- EMS Hardware Monitors (HP-UX 10.20 and 11.x only)
- HP Predictive Support tools (Series 800 only)
- LIF-resident offline diagnostics
- IPR patches

This chapter summarizes the hardware support products listed above, then describes how to install the online support tools from the Diagnostic/IPR Media.

## Support Tools Manager (HP-UX 9000 Series 800/700)

The Support Tools Manager (STM) on HP-UX 10.x and 11.x systems provides a simple interface to online diagnostics and support tools. For information on STM, see:

- Chapter 4, “Support Tools Manager (STM),” in this manual.
- The Web page for HP 9000/3000 Systems Hardware, Diagnostics and Monitoring at <http://www.docs.hp.com/hpux/systems/> - see the topics under “Diagnostics”
- The manpages `xstm(1M)`, `mstm(1M)`, and `cstm(1M)`.

## **EMS Hardware Monitors**

Included on the Diagnostic/IPR Media are the EMS Hardware Monitors -- an important new tool for maintaining system availability. The EMS hardware monitors allow you to monitor the operation of a wide variety of hardware products and be alerted immediately if any failure or other unusual event occurs. Hardware event monitoring is available to users running HP-UX 10.20 or 11.x (IPR 9902 or later; 9902 refers to the February 1999 release).

Hardware event monitoring provides a high level of protection against system hardware failure. By using hardware event monitoring, you can virtually eliminate undetected hardware failures that could interrupt system operation or cause data loss.

The EMS Hardware Monitors are installed with the Support Tools Manager. Once the monitoring software is installed, monitoring is automatically enabled and all supported hardware devices on your system are automatically monitored. (In releases earlier than June 1999, you must first enable hardware monitoring.)

For more information, see Appendix B (EMS Hardware Monitors) in this manual.

## HP Predictive Support

HP Predictive Support helps improve the reliability of your HP 9000 Series 800s by monitoring disk/tape drives and system memory for potential problems. If a potential problem is detected, HP Predictive Support transfers this information to the Hewlett-Packard Response Center.

HP Predictive Support monitors hardware by automatically collecting system information and comparing it against historical data and predetermined thresholds. Then it reports configuration changes, exceeded thresholds, and significant errors.

### How the Process Works

HP Predictive Support involves your entire HP support team to help you monitor, prevent, and resolve problems with your systems and peripherals:

- 1. Potential problem?** After analyzing your system and peripherals, HP Predictive Support sends any information on potential problems to the HP Response Center.
- 2. HP Response Center analyzes the problem.** An HP Response Center Engineer (RCE) analyzes the data and adds it to the system's history. If further action is needed, the RCE may ask the system administrator to perform remote diagnostics, or may forward the information to the HP Account CE.
- 3. HP Account CE may provide backup support.** The Account CE may suggest corrective actions to the system administrator, or schedule a visit within the support agreement coverage hours.

Usually, all of this activity occurs before there is any noticeable impact to system performance.

### What HP Predictive Support Covers

HP Predictive Support covers:

- **Disk drives**, by scanning the onboard logs of CS80 and SCSI/Fast-Wide SCSI disk drives, and system logs. The **DISCSCAN**, **SCSISCAN**, and **LOGSCAN** utilities provide coverage on disk drives.
- **Memory**, by scanning the memory logs with the **MEMSCAN** utility.
- **Tape drives**, by scanning system log files with the **LOGSCAN** utility.
- **Low Priority Machine Checks (LPMC)**, by scanning system log files with the **LOGSCAN** utility.

- **The inventory of software and patches** installed on your systems is tracked by the PROACTIVE patching utility.

The HP Response Center Engineers use this information to recommend patches for customers with high-end support agreements, such as *Personalized System Support* or *Business Continuity*.

## LIF-LOAD (HP-UX 9000 Series 800 and 700 Systems)

The LIF-LOAD product provides offline diagnostic tools by installing a subset of the Offline Diagnostics Environment (ODE) in the computer system's boot LIF volume. These tools are then available at ISL level at the next reboot of the computer system. These tools enable the user to verify the installation and operability of devices attached to HP Precision Architecture RISC (PA-RISC) computer systems, prior to booting the computer to the operating system level.

The following ODE tools are installed in the computer system's boot LIF volume:

- |                |   |
|----------------|---|
| <b>MAPPER</b>  | MAPPER is an ODE-based offline system configuration mapping utility. It identifies and displays components of PA-RISC systems. System components include hardware modules and peripheral devices. |
| <b>IOTEST</b>  | IOTEST is an ODE-based test module that runs supported IODC tests on modules.   |
| <b>PERFVER</b> | PERFVER is an ODE-based test module that runs supported IODC tests on devices.  |

The LIF-LOAD product is structured as follows:

SD-product: LIF-LOAD (for Series 800 and 700 systems)

After the LIF-LOAD product is installed, the ODE tools will be available at the ISL level at the next reboot of the computer system. For further information about ODE, refer to Chapter 3, "Using the Diagnostic/IPR Media to Run Offline Diagnostics."

---

<b>NOTE</b>	If the offline diagnostics failed to load onto your system, and the <code>swagent log</code> contains the error message: <code>There is not enough room in the bootlif to install the offline diagnostics.</code> , please read the following in order to manually install the offline diagnostics:
-------------	---

Requirements:

1. the root(/) disk has a 'Whole Disk' layout.
2. the bootlif has at least 4 megabytes of SWAP.

Instructions:

1. Carefully read and comprehend the `mkboot (1m)` manual page.

Please pay close attention to the `-f` option of `mkboot`.

2. From the console as root, issue the following commands:

```
shutdown 0
cd /usr/sbin/diag/lif
mkboot -vfb updatediaglif -p ISL -p HPUX -p AUTO /dev/rroot
reboot
```

You MUST immediately reboot the system following the `mkboot` command line.

---

---

## Installing Online Support Tools from the Diagnostic/IPR Media (CD-ROM)

The following procedure is an example using a graphical user interface on an X11 terminal.

---

**NOTE** Prior to executing the following procedure on a 9.04 system, run the following procedure to install the CD-ROM drivers and CDFS subsystem, assuming they are not already installed:

- Run SAM.
- Choose Kernel Configuration Menu.
- Choose the Subsystems submenu.
- Select the CD-ROM/9000 subsystem to install in the kernel (the Current State and Pending State fields should have values of Out and In, respectively).
- Choose Actions from the Kernel Configurations menu bar.
- Choose Add Subsystem to Kernel from the Actions pulldown menu.
- Choose Create a New Kernel from the Actions pulldown menu; after a new kernel is created, you are prompted to move the new kernel into place and reboot.
- Move the new kernel, as indicated, and reboot your system.

The dart32 CD-ROM should now be accessible. You may now execute the procedure immediately following the next note.

---

**NOTE** For further information on installing Predictive Support tools using the terminal version of `swinstall`, see the *HP Predictive Support/UX User's Guide*, part number: H2571-90008.

---

**NOTE** As of May 1999, the Support Tools can be downloaded from the HP Software Depot at <http://www.software.hp.com/>. At the site, select the product category named "Enhancement Releases". Then scroll down to the entry for "Support Tools for the HP 9000". Click on the entry for a description of the package. Installation instructions are also available at the site. When the Support Tools have been downloaded to the target system, move it to an appropriate directory (such as `/tmp`), then proceed with the procedure described in this manual.

If you can obtain the current Diagnostic/IPR Media, consider installing the Support Tools from it, instead of downloading them from the Web. The Diagnostic/IPR Media contains the required patches and may be easier to use.

---

1. Boot HP-UX
2. Insert the Diagnostic/IPR Media CD-ROM into the drive.
3. Find the device file for the CD-ROM drive by using the `ioscan -fn` or `ioscan -fnC disk` command.

The following is an example of information displayed by `ioscan` for a CD-ROM drive at address 2/0/1.3.0 on a series 700 system:

```
disk 3 2/0/1.3.0 sdisk CLAIMED DEVICE TOSHIBA CD-ROM XM-3301TA
      /dev/dsk/c0t3d0 /dev/rdisk/c0t3d0
```

In this example, the device file needed to install support tools from the Diagnostic/IPR Media is `/dev/dsk/c0t3d0`. (In the example commands that follow, substitute the CD-ROM device file for your system.)

4. Create a temporary read-only mount point in order to access the data on the CD-ROM, using commands similar to the following.

```
cd /
mkdir /diagtemp
mount -r /dev/dsk/c0t3d0 /diagtemp
```

In this example, we have used `diagtemp` as the name of the mount point.

---

**NOTE** If the `-r` option is not used, the following I/O error message appears and the CD-ROM will not mount:

```
mount: /dev/dsk/c0t3d0 on /diagtemp : I/O error
```

---

5. Confirm that the CD-ROM has been mounted, by entering the `mount` command and look for `/diagtemp`. The following is a sample output:  

```
/diagtemp on /dev/dsk/c0t3d0 ro on Thu Mar 25 15:46:16 1999
```
6. Determine which patches must be installed first before you install the diagnostics. (Without these patches, some versions of the Support Tools cannot be installed or will not operate correctly.) See the section “Required Patches” in the `DIAGNOSTICS.readme` file for the current release (IPR) of Support Tools. For IPR 9904, this file is located in the `DOCUMENTATION` directory on the CD-ROM. For IPR 9902 and IPR 9904, the files are available online at:  
[http://www.docs.hp.com/hpux/content/hardware/st/st\\_read.htm](http://www.docs.hp.com/hpux/content/hardware/st/st_read.htm)

7. If patches are required before loading the support tools, install them now. The recommended method is to install the patches from the Diagnostic/IPR Media. The patches are typically contained in the Hardware Critical (HWCR) or Hardware (HW) patch bundle for your system, for example `XSW800HWCR1020`. Most people will only want to install the individual patches required for STM rather than the entire HWCR bundle which can be many megabytes in size.

The following is a summary of the process for installing patches using the `swinstall` program. For details on using `swinstall`, see the steps on the next few pages.

- a. Set the `DISPLAY` variable (for a graphics interface) and enter the command  
`swinstall -i .`

- b. Set Source Depot Type to "Local CDROM". For the Source Depot Path, specify the path to the appropriate HWCR or HW patch bundle for your system. For example, `/diagtemp/XSW800HWCR1020`, `/diagtemp/XSW700HW1020`, or `/diagtemp/XSWHWCR1100`.
- c. Select the bundle from the `swinstall` display, then choose "Open Item" from the "Actions" menu. All the patches in the patches bundle are displayed.
- d. Select the patches required for STM by using the "Mark for Install" command in the "Actions" menu.
- e. Install the patches using the "Install (analysis)" command in the "Action menu. Respond to the prompts that are displayed.

An advantage of installing patches from the Diagnostic/IPR Media is that only one reboot is required for multiple kernel (OS) patches.

Alternately, you can obtain the patches through the HP Electronic Support Centers:

- For Americas and Asia-Pacific: <http://us-support.external.hp.com/>
- For Europe: <http://europe-support.external.hp.com/>

Log onto the appropriate URL and follow the directions given. One problem with loading individual patches from these patch machines is that a system reboot is required for every patch that requires a reboot (for example, patches to the kernel, indicated by "PHKL" in the patch name).

8. Install support tool files using `swinstall`.

For a graphical user interface, set the `DISPLAY` variable with a command like `export DISPLAY=your_workstation:0.0` .

Then, enter the command `swinstall -i`.


9. The "Specify Source" window appears. Change the "Source Depot Path" to the depot you wish to load; for example, `/diagtemp/DIAGNOSTICS/B.xx.xx`, where `xx.xx` represents 10.10, 10.20, or 11.00, depending upon which OS release your system is running.

---

<b>NOTE</b>	The following examples (Figures 5-1 to 5-4) use a source depot path for a B.10.20 bundle. Set your path appropriately for the OS version on your system (for example B.11.00, B.10.20, or B.10.10).
-------------	---

---

**Figure 5-1 Specify Source Window**

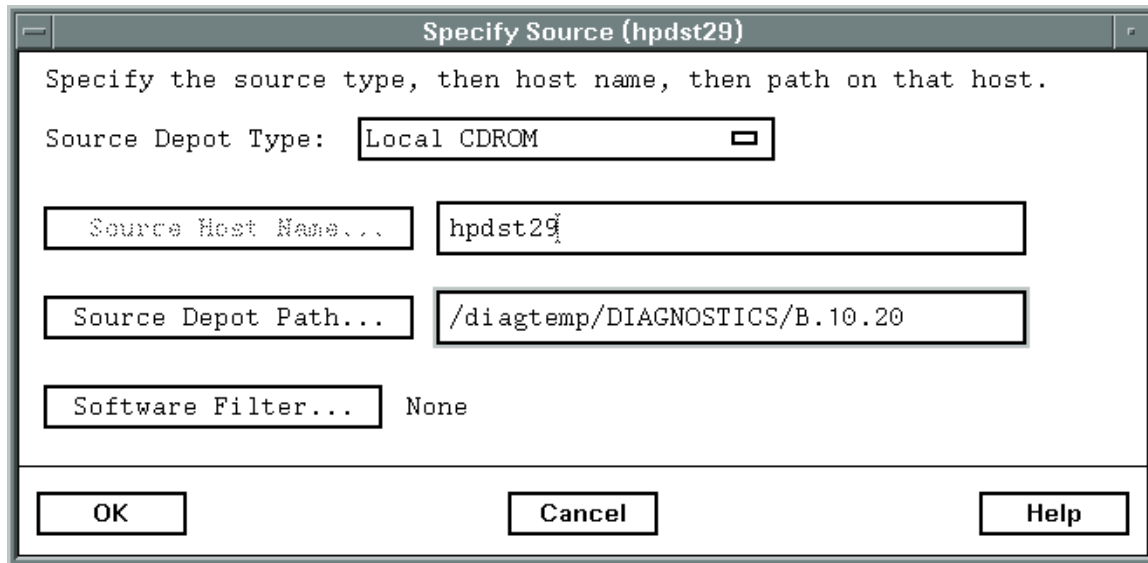

A screenshot of a Windows-style dialog box titled "Specify Source (hpdst29)". The dialog box has a standard title bar with minimize, maximize, and close buttons. The main area contains the instruction "Specify the source type, then host name, then path on that host." followed by four input fields. The first field is labeled "Source Depot Type:" and contains a dropdown menu with "Local CDROM" selected. The second field is labeled "Source Host Name..." and contains the text "hpdst29". The third field is labeled "Source Depot Path..." and contains the text "/diagtemp/DIAGNOSTICS/B.10.20". The fourth field is labeled "Software Filter..." and contains the text "None". At the bottom of the dialog box, there are three buttons: "OK", "Cancel", and "Help".

Specify Source (hpdst29)

Specify the source type, then host name, then path on that host.

Source Depot Type: Local CDROM

Source Host Name... hpdst29


Source Depot Path... /diagtemp/DIAGNOSTICS/B.10.20

Software Filter... None

OK Cancel Help


10. Click on the ok button. The "Software Selection Window" appears:

**Figure 5-2 Software Selection Window**

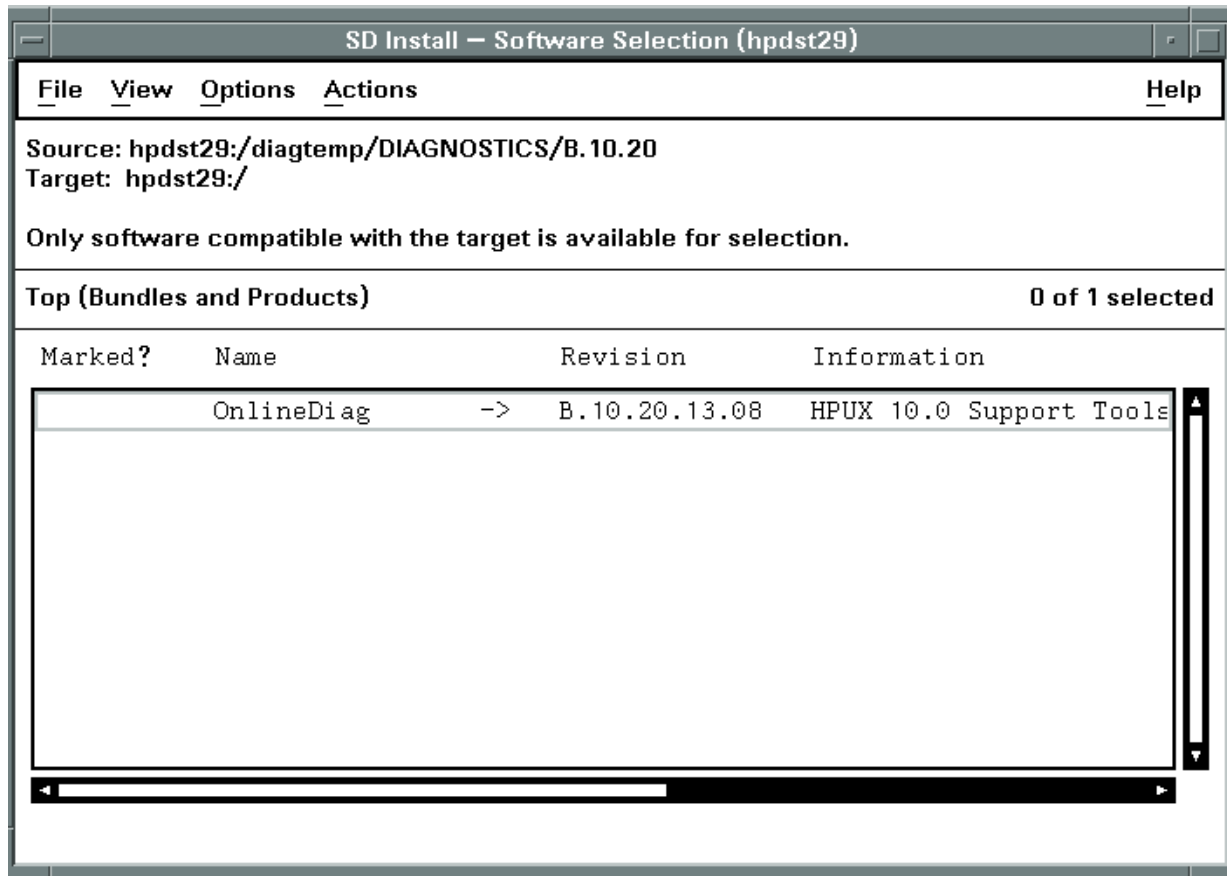

11. Select "OnlineDiag" and use the "Actions" menu option "Open Item" for a list of products available from the CD-ROM:

**Figure 5-3 Listing Available Online Diagnostic CD-ROM Products**

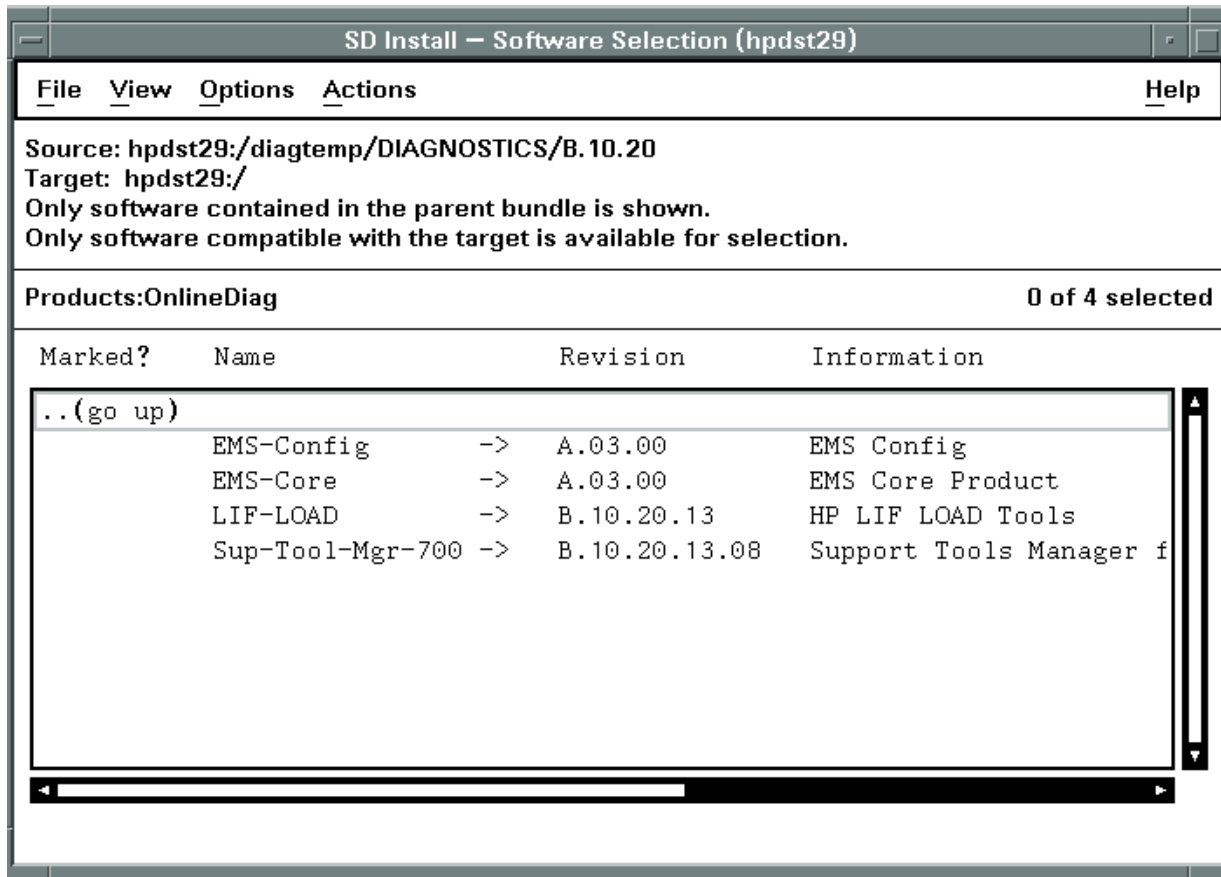


Highlight the product to be installed. Use the "Actions" menu option "Mark for Install" to indicate that the highlighted product is to be installed. Repeat the selection process until all the desired products have been marked for installation.

It is not necessary to select EMS-Config and EMS-Core products, since these are automatically installed when you install Support Tools Manager for HP-UX 10.20 or 11.x (IPR 9902 or later).


Most users select the offline diagnostics (LIF-LOAD) and the Support Tool Manager (Sup-Tool-Mgr-x00) to be installed as shown in the following example. If you have an S800 system, you may also choose HP Predictive Support (not shown in this example, since it is not available on S700 systems).

**Figure 5-4 Marking Products to Be Installed**

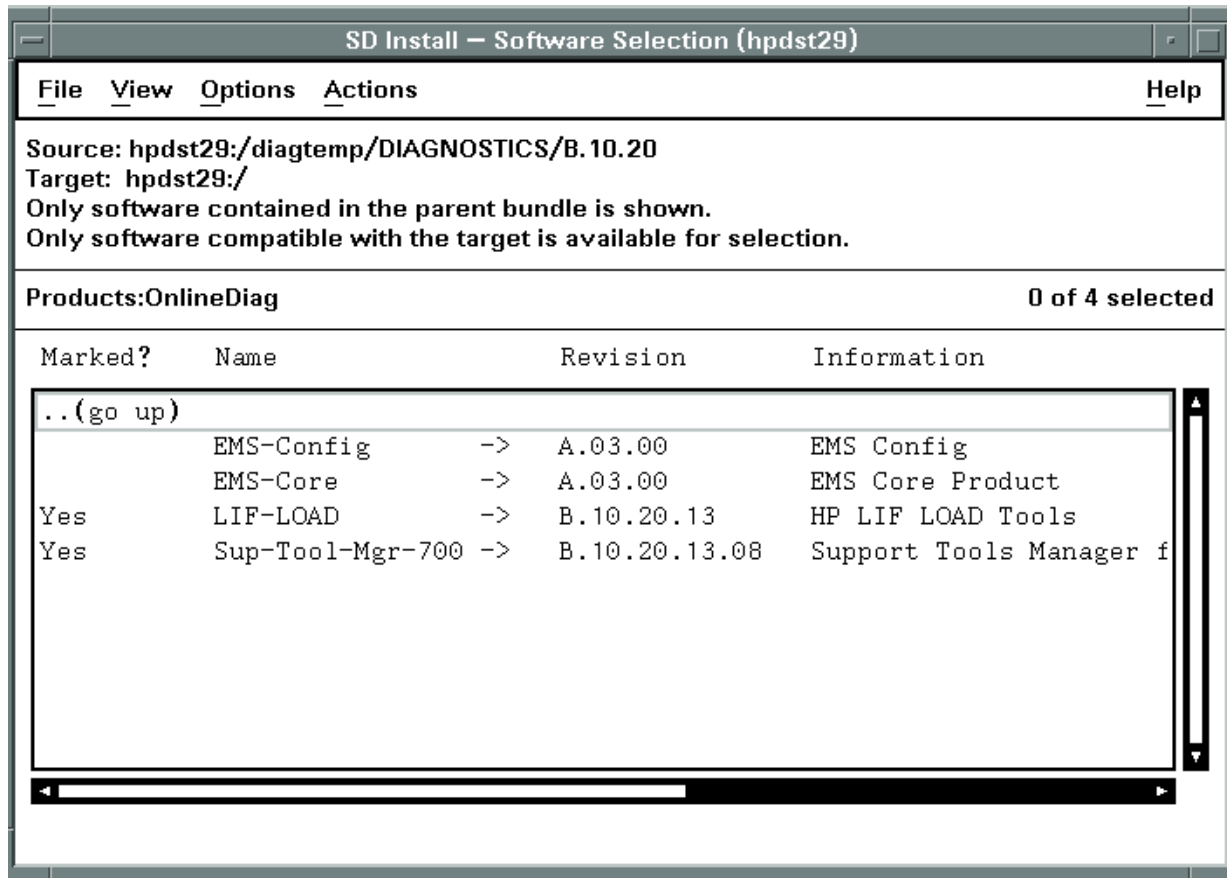


- 12.To install the selected products, use the "Actions" menu option "Install (analysis)" to begin the analysis phase of the installation:

**Figure 5-5 Install Analysis Window**

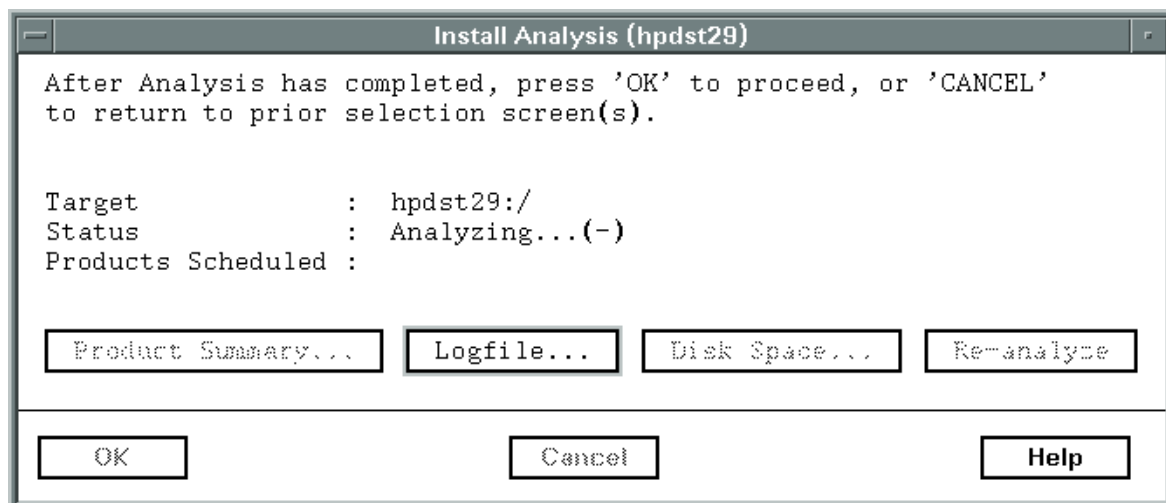


13. After the analysis has completed, click the **OK** button to start the installation. The first "Confirmation" window appears.

**Figure 5-6 First Confirmation Window**

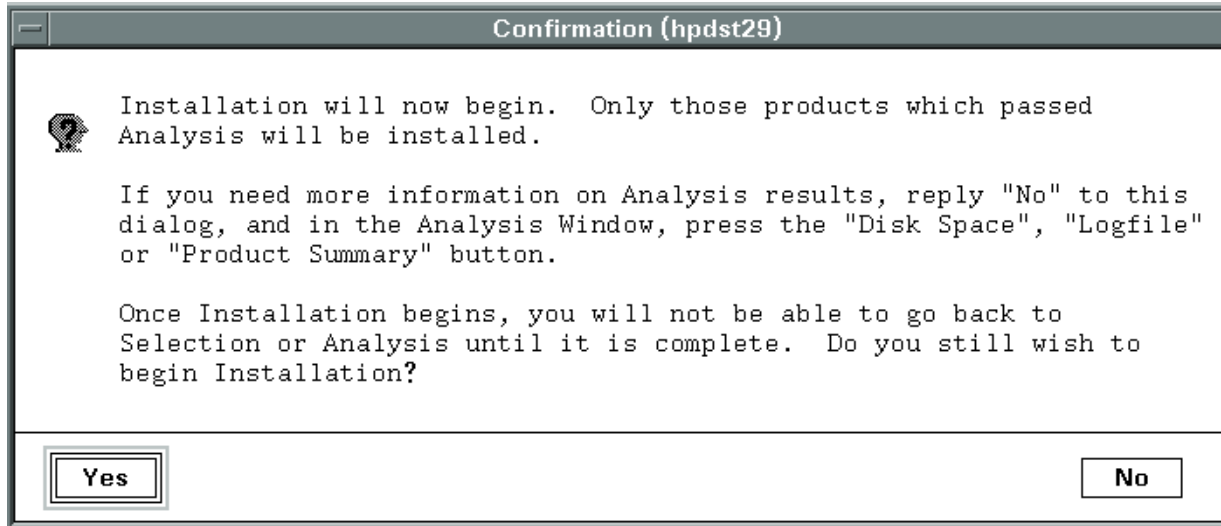

14. Click the **Yes** button to continue with the installation. A second "Confirmation Window" appears for 10.20 systems. (This window does not appear for 11.x systems, since a reboot is not required.)

**Figure 5-7 Second Confirmation Window**

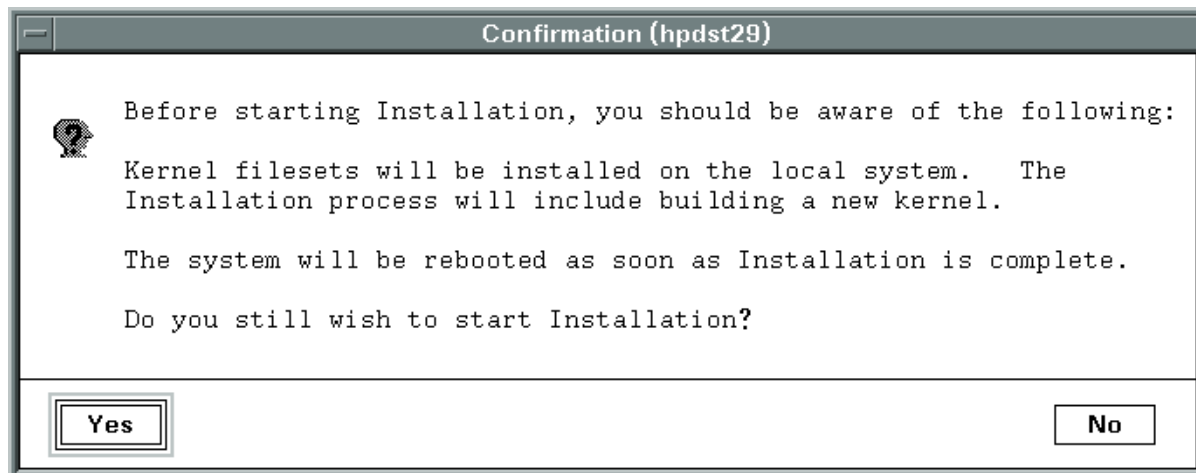

15. Click the **Yes** button to continue with the installation.
16. Once installation is complete, unmount the CD-ROM with the `umount` command, for example: `umount /dev/dsk/c0t3d0 .`
17. Eject the CD-ROM from the drive.

18. Check the Release Notes for other information on the products you installed. The Release Notes contain any special post-installation actions that may be required following this procedure.

- **STM:** /usr/sbin/stm/Rel\_NOTES.STM
- **EMS Hardware Monitors:** /usr/sbin/stm/Rel\_NOTES.HWE
- **Predictive Support:** /opt/pred/bin/Rel\_NOTES.PRED

19. For the February 1999 or April 1999 releases of the Diagnostic/IPR media, you should enable the EMS hardware monitors (the monitors are automatically enabled on June 1999 and later releases.) Follow this procedure to enable the monitors:

- a. Run the monitoring request manager by typing:  
/etc/opt/resmon/sbin/monconfig
- b. From the main menu selection prompt, enter E(nable Monitoring)
- c. See the “EMS Hardware Monitors User’s Guide” and other monitor documentation for information about configuring and using the monitors.

**THIS COMPLETES THE PROCEDURE FOR INSTALLING SUPPORT TOOLS..**

For the most current information on Support Tools, see our Web site, “Systems Hardware, Diagnostics, and Monitoring,” at <http://www.docs.hp.com/hpux/systems/>. This Web site also contains additional documents, such as tutorials, quick reference guides, and release information.



# **A Disk Copy Utility — To make an image of a disk after install or upgrade (HP-UX 10.x to 11.x)**

---

`COPYUTIL` is designed to copy data from a given disk to a tape and then at a later time, copy the data from the tape back to a disk. The utility can be used to save off a bootable copy of the operating system and if the system crashes, that version of the boot disk can be restored. Lastly, `COPYUTIL` can be used to transfer data from a bad disk to a new good disk.

---

<b>NOTE</b>	For systems going from HP-UX 10.x to HP-UX 11.x, CopyUtil can be used to make a system disk image so that the system can be dropped back to 10.x if for some reason 11.x is not desired.
-------------	--

---

The utility uses two commands, `BACKUP` and `RESTORE`, to perform the copying of information between devices. Both commands in effect perform the same function, copying. However the `BACKUP` command copies data from disk to tape and can tolerate read errors but will halt on a write error. The `RESTORE` command, on the other hand, copies data from tape back to disk and will not tolerate read errors, or write errors.

`COPYUTIL` supports all bootable disks on all HPPA supported systems. Thus, all SCSI2 hard drives and Disk Arrays are supported. CD-ROM drives and MO drives are not supported.

---

<b>CAUTION</b>	CopyUtil is designed to recover data off of defective disks. It is NOT intended to be a system-level backup tool.
----------------	---

---

## Operating Environment

COPYUTIL operates under ODE and thus it only operates in an offline environment. When COPYUTIL is executed, ODE handles all the I/O with the user and it handles several higher level commands like LOG, HELP, and so forth.

COPYUTIL is a TM running under ODE. This means COPYUTIL must first satisfy all of ODE's requirements. Since COPYUTIL is not a diagnostic all the hardware except the disk drive must be working properly, and the disk drive can only have software read errors that will not cause the system to halt.

---

<b>NOTE</b>	An online version of COPYUTIL, running under STM, is also available.
-------------	--

---

Though COPYUTIL is not a diagnostic, all Read errors are isolated down to the block address.

## Quick Start Instructions

### Executing COPYUTIL .

To execute COPYUTIL, boot to ISL, then type:

```
ISL> ode copyutil
```

```
*****
*****                                     *****
*****          Offline Diagnostic Environment          *****
*****                                     *****
*****          (C) Copyright Hewlett-Packard Co 1993   *****
*****          All Rights Reserved                     *****
*****                                     *****
*****  HP shall not be liable for any damages resulting *****
*****  use of this program.                            *****
*****                                     *****
*****          TC Version A.00.14                      *****
*****          SysLib Version A.00.37                  *****
*****                                     *****
*****
```

Type HELP for command information.

```
ISL_CMD> copyutil
```

Type HELP for command information.

```
*****
*****                                     *****
*****          COPYUTIL                               *****
*****                                     *****
*****          Copyright (C) 1994 by Hewlett-Packard *****
*****          Company                               *****
*****          All Rights Reserved                   *****
*****                                     *****
*****  HP shall not be liable for any damages resulting *****
*****  use of this program.                            *****
*****                                     *****
*****          Version A.00.22                        *****
*****                                     *****
*****
```

Please wait while I scan the device busses...

Ty	Indx	Path	Product ID	Bus	Size	Rev
D	0	2/0/1.0.0	QUANTUMLPS270S disc drive	SCSI	258 MB	5909
D	1	2/0/1.1.0	SEAGATEST3600N disc drive	SCSI	499 MB	9686
D	2	2/0/1.3.0	HPC2244 disc drive	SCSI	1.0 GB	0B04
D	3	2/0/1.4.0	QUANTUMLPS525S/A2565A disc drive	SCSI	499 MB	3100
T	4	2/0/1.5.0	HPC1504[X]/HPC1521B DDS tape	SCSI	N/A	1009
D	5	2/0/1.6.0	QUANTUMLPS270S disc drive	SCSI	258 MB	5909

Legend:

Ty = Device type. 'D' for Disk; 'T' for Tape.  
Indx = Index number used for referencing the device  
Rev = Firmware Revision of the device  
Size = Size of the Disk drive or "N/A" for a Tape drive.

Note: Due to different calculation methods used, the size of the device shown is only a rough approximation.

```
COPYUTIL>
```

## Quick Start Instructions

At this point, typing `UTILINFO` would give you a good idea of what to do, but let us assume we just want to copy data off the last Quantum disk drive (disk index 5) onto the DDS tape drive (tape index 4). To do that, use the `BACKUP` command.

```
COPYUTIL> backup

Enter the Disk Index ([q]/?): 5

Enter the Tape Index ([q]/?): 4

*****
*   Please Load into Tape Drive, Tape Volume 0 for Backup.
*****
If you have to, you may safely remove the SUPPORT MEDIA now.

Ready to continue ([y]/n/q/?): y
Checking for the beginning of tape:  DONE.
.....10% completed
.....20% completed
.....30% completed
.....40% completed
.....50% completed
.....60% completed
.....70% completed
.....80% completed
.....90% completed
.....100% completed

COPYUTIL>
```

You can now exit the program, switch off the power, replace the bad disk and start the program again.

```
COPYUTIL> exit
Replace the SUPPORT MEDIA now, if you removed it earlier.

ODE>
```

Assume you have restarted the program and it looks just like the last time. You now want to restore the data back onto the new disk drive. To do this, you use the `RESTORE` command.

```
COPYUTIL> restore

Enter the Tape Index ([q]/?): 4

Enter the Disk Index ([q]/?): 5

*****
*   Please Load into Tape Drive, Tape Volume 0 (or the Desire Tape).
*****
If you have to, you may safely remove the SUPPORT MEDIA now.

Ready to continue ([y]/n/q/?): y
Checking for the beginning of tape:  DONE.
.....10% completed
.....20% completed
.....30% completed
.....40% completed
.....50% completed
.....60% completed
.....70% completed
.....80% completed
.....90% completed
.....100% completed
```

Restored Successful.

COPYUTIL>

**You have now restored the data onto your new disk drive. You may wish to verify that the data on the tape and the disk are the same. You now have restored data and can exit the program and power cycle the machine.**

**Remember that if the BACKUP command could not read a block, the RESTORED block is all nulls.**

Disk Copy Utility — To make an image of a disk after install or upgrade (HP-UX 10.x to 11.x)

### **Quick Start Instructions**

# B EMS Hardware Monitors

---

Included on the Diagnostic/IPR Media are the EMS Hardware Monitors -- an important new tool for maintaining system availability. The EMS Hardware Monitors allow you to monitor the operation of a wide variety of hardware products and be alerted immediately if any failure or other unusual event occurs. Hardware event monitoring is available to users running HP-UX 10.20 or 11.x, with a Diagnostic/IPR Media of February 1999 or later..

Hardware event monitoring provides a high level of protection against system hardware failure. By using hardware event monitoring, you can virtually eliminate undetected hardware failures that could interrupt system operation or cause data loss.

---

## NOTE

### **Complete Information**

For complete information on installing and using EMS hardware event monitors, as well as a list of supported hardware, refer to the EMS Hardware Monitors Users Guide. An electronic copy of this book is included on the Diagnostic/IPR Media CD-ROM in the /Documentation directory.

You can also download the latest version of the book from the Systems Hardware, Diagnostics, and Monitoring section of Hewlett-Packard's online documentation web site at <http://www.docs.hp.com/hpux/systems/>.

This site also contains much additional information on the EMS product.

---

## Enabling Hardware Monitoring

The EMS Hardware Monitors are installed with the Support Tools Manager. Once the monitoring software is installed, you simply need to enable hardware monitoring and all supported hardware devices on your system will automatically be monitored.

On the June 1999 and later releases of the Diagnostic/IPR media, the monitors are automatically enabled when they are installed. On February 1999 and April 1999 releases, you must enable hardware event monitoring with the following procedure:

1. Run the monitoring request manager by typing:

`/etc/opt/resmon/sbin/monconfig`

2. From the main menu selection prompt, enter E(nable Monitoring).

The default monitoring requests will automatically provide the following notification methods for all monitors:

All events sent to text file `/var/opt/resmon/log/event.log`

Serious and Critical events sent to SYSLOG

Serious and Critical events sent to EMAIL address root

The Hardware Monitoring Request Manager, `/etc/opt/resmon/sbin/monconfig`, can be used to customize the monitoring requests and add new ones.

At the time of publication, monitors are provided to support the following:

- HP Disk Arrays
- Fibre Channel Interconnect
- Fibre Channel Interface Cards
- High Availability Storage System Enclosures
- SCSI Tape Products
- HP SCSI Disk Products
- HP Fibre Channel Disk Products
- Memory
- LPMCs
- Core hardware
- Kernel resources

In addition, a hardware status monitor is provided to monitor the current status of the products supported by the above list.

For detailed information concerning which products are supported by which monitors and additional dependencies, check the Systems Hardware, Diagnostics, and Monitoring section of Hewlett-Packard's online documentation website at

<http://www.docs.hp.com/hpux/systems/>.

---

<b>NOTE</b>	EMS Hardware Monitors are installed as part of the STM-UUT-RUN Fileset. However, the EMS Hardware Monitors are dependent on the EMS-Core and EMS-Config products and additional filesets in the Sup-Tool-Mgr Product.
-------------	---

---





---

## C

COPYUTIL (disk copy utility), 71  
  operating environment, 72  
cstm user interface, 35  
  menus and commands, 45  
  system map, 38

## D

device icons, 36  
diagnose tool (STM), 39  
Diagnostic/IPR Media  
  overview, 11  
  physical layout, 12  
  purpose, 11  
  will it boot?, 17  
diagnostics  
  installing, 55  
  overview, 13  
  usage, 16, 17  
disk copy utility (COPYUTIL), 71  
  executing, 73  
  quick start instructions, 73

## E

EMS hardware monitors, 57, 77  
  enabling, 78  
  installing, 61, 66  
exercise tool (STM), 39  
  entering a "hung" state, 51  
expert tool (STM), 39

## F

failure log, 46  
firmware  
  updating processor firmware, 30  
firmware update tool (STM), 39

## H

hardware monitors, 57, 77  
  enabling, 78  
  installing, 61, 66  
hardware support tools  
  installing, 55  
  overview, 13  
  usage, 16, 17

## I

information tool (STM), 39  
Initial System Loader (ISL), 15  
  ISL-based programs, 19  
  standalone environment, 15  
  will it boot?, 16  
installing hardware support tools  
  with the Diagnostic/IPR  
  Media, 55

IODC tests, 60

IOTEST, 60

## L

LIF-LOAD, 60

## M

MAPPER, 19, 60  
monitors, 57, 77  
  enabling, 78  
  installing, 61, 66  
mstm user interface, 35  
  menus and commands, 41  
  shortcut keys, 44  
  system map, 37

## O

offline diagnostics, 19  
  installing, 60  
Offline Diagnostics Environment  
  (ODE), 15, 19  
  installing, 60  
  menu/command user interface,  
  23  
  running the ODE command line  
  interface, 21  
  Test Module Manager  
  (TMMGR), 23  
online tools, 33  
  getting result information, 46  
  installing, 61  
  logs, 46  
  tool types, 18, 39  
Operating System (OS)  
  will it boot?, 16

## P

PERFVER, 60  
Predictive Support, 11, 58  
processor firmware  
  updating, 30

## S

support tools  
  installing, 55  
  overview, 13  
  usage, 16, 17  
Support Tools Manager (STM),  
  14, 33, 56  
  blank icon, 52  
  common problems, 51  
  device icons, 36  
  device-select class command  
  problem, 53  
  distributed structure, 48

failed SCSI commands, 53  
failure log, 46  
getting result information, 46  
installing, 61  
logs, 46  
menus and commands, 40  
no tools available, 53  
online help, 49  
remote execution, 47  
running, 34  
slow response, 52  
starting, 34  
system map, 36  
test activity log, 46  
tool types, 18, 39  
Unit Under Test (UUT)  
  machine, 47  
  unknown device, 52  
  User Interface (UI) machine, 47  
  user interfaces, 35  
  will not connect to a machine, 51  
system map, 36

## T

test activity log, 46  
Test Controller (TC), 19  
Test Module (TM), 19  
Test Module Manager (TMMGR),  
  23  
  Environment Screen, 26  
  Environment Variables, 26  
  running TMMGR, 23  
  System Screen, 24  
  Test Screen, 25

## U

Unit Under Test (UUT) machine,  
  47  
UPDATE, 19  
updating processor firmware, 30  
User Interface (UI) machine, 47  
utilities (STM), 39

## V

verify tool (STM), 39

## W

web site for diagnostics  
  information, 33, 77

## X

xstm user interface, 35  
  menus and commands, 40  
  system map, 36