

# PYLE®



# view

13.3" Flip Down TFT-LCD Color  
Monitor with IR



PLVW1345R

# **TABLE OF CONTENT**

## **1. INSTALLATION GUIDE**

## **2. FUNCTION KEYS**

2.1 FUNCTIONS OF FRONT PANEL

2.2 FUNCTIONS OF REMOTE CONTROL

## **3. TROUBLE SHOOTING**

3.1 NO POWER

3.2 NO FUNCTION OF REMOTE CONTROL


3.3 NO DISPLAY OR NOT CLEAR

## **4. ACCESSORIES**

## **5. SPECIFICATIONS**


## 1. INSTALLATION GUIDE

1. On a towel or soft cloth, gently place the monitor unit "facedown" on a stable work surface.
2. Locate the pigtail with the DIN connector.
3. Connect the DIN connector to the interface cable provided.
4. Connect the RED wire to the positive (+) battery terminal.
5. Connect the Black wire to a chassis electrical ground point.
6. Connect the cable with YELLOW RCA jack to Video Input sources for your Video Program material.
7. Connect the cable with RED and WHITE RCA jack to Audio sources for your Audio Program material.

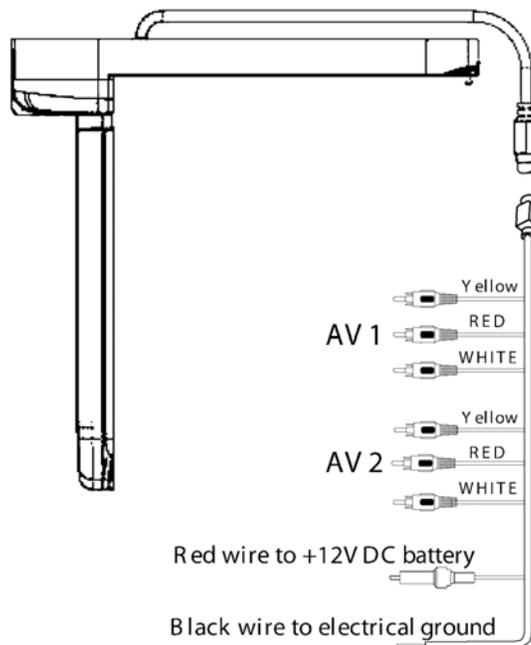

## **2. FUNCTION KEYS**

### **2.1 FUNCTIONS OF FRONT PANEL**

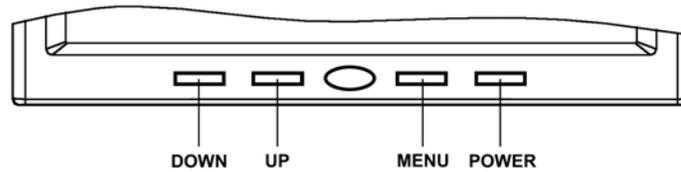


**POWER:** 1. Press the "POWER" button once; it will be "POWER ON."  
Press it again; it will be "POWER OFF."

**MENU:** 1. Pop up the OSD menus. Press the "Menu" button again to enter the OSD menus. When in sub-menu, press "EXIT" to go back to the main menu.

**UP/DN:** 1. Press the "UP/DOWN" key to increase or decrease value  
2. Make item selection in OSD menus to increase or decrease parameters as well..

### **2.2 FUNCTIONS OF REMOTE CONTROL**

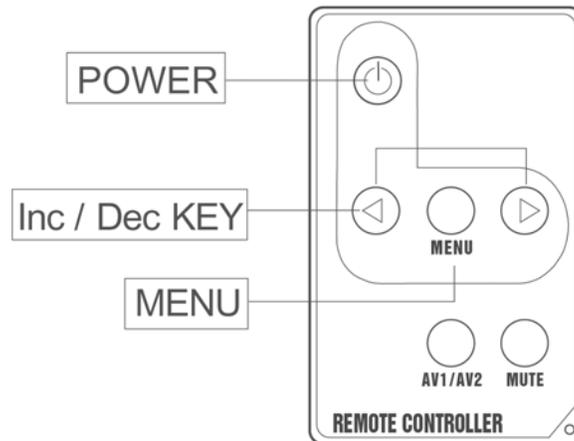

- Brightness: → Brightness adjustment
- Contrast: → Contrast adjustment
- Display adjust: → Sharpness hue, saturation adjustment
- OSD display: → OSD adjustment and display methods
- Input select: → Switch the source of signal AV1 and AV2 Inputs.
- Audio: → Only control Mute
- Recall: → Return to the initiatives
- Exit: → Exit

Press "Menu key", it will display a crosswise bar with digits. To use U/D key to adjust value and press "Menu key" to confirm the adjustment and then the crosswise bar and digits will disappear, or press "Exit" to leave OSD function directly.

### **3. TROUBLE SHOOTING**

### 3.1 NO POWER

1. Make sure the power cable has been plugged in.
2. Make sure the plug has 12V~14V, may use another electrical appliance to test it.

### 3.2 NO FUNCTION OF REMOTE CONTROL

1. Make sure the batteries are in good condition and installed properly.
2. Make sure the remote control is aiming at the receiver, and there are no obstacles in between.
3. Perhaps, it is too far away from the receiver. Normal distance is within 7 meters.

### 3.2 NO DISPLAY OR NOT CLEAR

1. Check the video signal wires if they are connected properly.
2. Check the antenna or adjust it.
3. Make sure the TV/Video being in proper position.

## **4. ACCESSORIES**

PS2/CAR CABLE  
INSTALLATION BRACKET  
USER MANUAL  
SCREW PACK  
REMOTE CONTROL

## **5. SPECIFICATIONS**

<b>ITEM</b>	<b>DESCRIPTION</b>
LCD Panel	13.3" TFT
Active Area:	270.3 (W) x 202.8 (H) mm
Resolution:	1024(H) x 3(RGB) x 768(V)
Display Colors:	262,144 colors
Pixel Pitch (mm):	0.264 (H) x 0.264 (V) mm
Backlight Unit:	CCFL Side-light type (single lamp)
Contrast Ratio:	200 : 1
Brightness (cd/m2):	180
Viewing Angle:	Horizontal:60 <sup>0</sup> (typ.,Lift side), 60 <sup>0</sup> (typ.,right side) Vertical: 30 <sup>0</sup> (typ.,up side), 45 <sup>0</sup> (typ.,down side)
Power Supply:	DC12V $\pm$ 10% less than 1.3A
IR Transmitter:	Yes
Power management:	15W power consumption (typ.), less than 3W when in backlight sleep mode.
User's Control:	Power on/off, OSD control
System:	1. Auto detection between NTSC/PAL 2. Sream is available
Dimensional Outline (mm):	329.0mm (W) x 360mm (H) x 42mm (D)
Weight	2.6 kg
Safety Certifications:	UL, FCC, CE, TUV
Environmental Condition:	Operation Temp.:0~50 degree C Storage Temp.: -20~60 degree C Humidity: 10~90%

\* Recommend for use with PYLE'S PLVWH1 wireless headphones.