


Wireless Forecast Station

La Crosse Technology, the world leader in atomic time and weather instruments, introduces the perfect Wireless Forecast Station for avid outdoorsmen. The advanced forecast icons feature a hunter icon who suggests what to wear to prepare for the outdoor temperature. The wireless temperature and humidity sensor monitors backyard conditions for precise, real-time weather. Track sunrise, sunset, moon phase, and monitor both indoor and outdoor humidity and temperature all on this easy-to-read display. Additional features include atomic time & date (sets itself), dual time alarms, barometric pressure in numbers, pressure graph with 12-hour history, and high/low temperature and humidity alarms.

Forecast Station & Outdoor Sensor

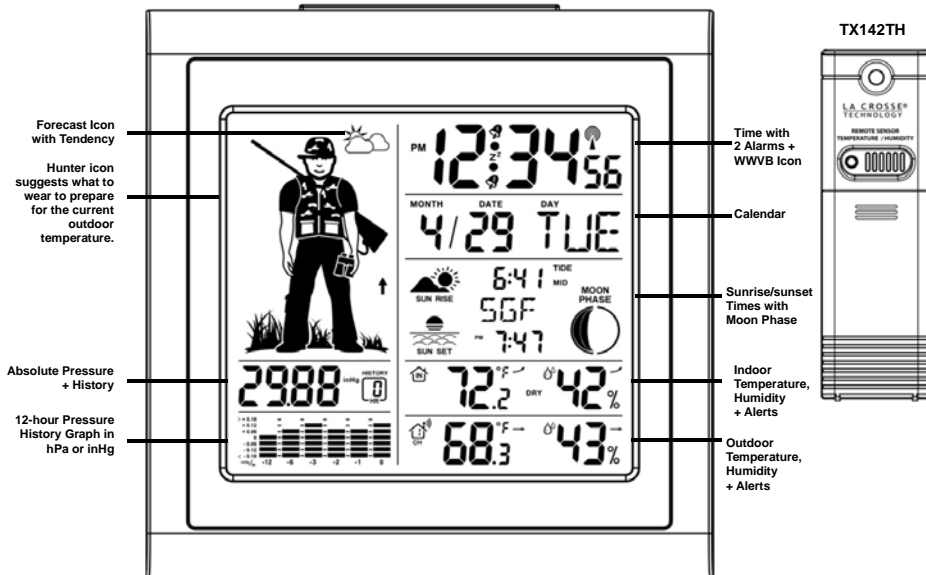

Get Started

Step 1: Insert 3 NEW AA batteries (not included) into the forecast station. Observe the correct polarity.

Step 2: Insert 2 NEW AA batteries (not included) into the outdoor sensor. Observe the correct polarity. The red LED light will flash when transmitting.

Restart: if there is no outdoor temperature data after 3 minutes.

- Remove batteries from the forecast station & sensor for 15 minutes.
- Return to **Step 1** above.

Table of Contents

Forecast Station & Outdoor Sensor	1
Get Started	1
Table of Contents	2
Features	3
Install Batteries in the Forecast Station & Sensor	3
Function Buttons	3
Program Menu	4
WWVB Reception ON/OFF	4
Time Zone	4
DST Indicator ON/OFF	4
12/24-Hour Time Format	4
Fahrenheit/Celsius	4
Set Time	5
Set Calendar	5
City Selection: Sunrise/Sunset Times	5
Tide	6
Moon Phase	6
Comfort Statement	6
Backlight	6
Alarms	7
Time Alarms	7
Set Time Alarm 1	7
Set Time Alarm 2	7
Snooze	7
Frost Alarm	7
Outdoor Temperature Alarms	8
Set Temperature Alarm 1	8
Set Temperature Alarms 2 and 3	8
Temperature Trend Indicators	8
Pressure Readings	8
Absolute Barometric Pressure Number	8
Pressure Unit of Measurement	9
Pressure History	9
Pressure History Graph	9
MIN/MAX Data	9
Low Battery Indicator	9
Weather Forecast & Hunter Icons	10
Weather Forecast (Snow, Sun, Partial Sun, Cloud, Rain)	10
Tendency Indicators	10
Hunter Clothing Index	10
Channel Selection and Auto-scroll	11
Use Multiple Sensors	11
WWVB Radio-controlled Time	11
WWVB Reception Icon	12
WWVB Manual Signal Search	12
Care and Maintenance	12
Position the Outdoor Sensor	12
Position the Forecast Station	13
Specifications	13
Warranty Information	14
FCC Statement	14
City Codes	15


Features

- Forecast icons change with barometric pressure (Snow, Sun, Partial Sun, Clouds and Rain)
- Advanced Hunter icon reacts to changes in outdoor temperature
- Barometric pressure with 12 hour history graph (inHg or hPa)
- Atomic 12/24 hour time and calendar: day, month, date (manual set option)
- Sun rise/set, moon phase for 250 pre-selected US cities
- Indoor temperature (°F/°C)
- Indoor humidity (%RH)
- Outdoor temperature (°F/°C)
- Outdoor humidity (%RH)
- Temperature and frost alarm icons
- Time alarm with snooze
- Indoor comfort level icon
- Temperature and humidity trend arrows
- Blue LED backlight
- Low battery indicators
- Monitor up to 3 separate sensors (sold separately)

Install Batteries in the Forecast Station & TX142TH Sensor


Forecast Station:

1. Remove battery cover. Slide tab to the right and pull out to remove battery cover.
 2. Install three new AA batteries according to the polarity markings.
- **Do Not Mix Old and New Batteries**
 - **Do Not Mix Alkaline, Lithium, Standard or Rechargeable Batteries**

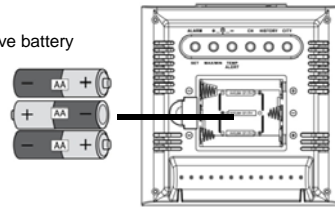


Outdoor Sensor:

1. Slide the battery cover down, then lift off the front of the TX142TH sensor.
2. **Note:** Be careful not to break the tabs on the battery cover.
3. Confirm the channel selector switch is on channel 1.
3. Insert two new AA batteries into the sensor.
- Observe the correct polarity (see marking inside battery compartment).
4. Keep sensor 5-10 ft. from the forecast station during setup.
5. After 15 minutes, if the outdoor temperature shows on the forecast station, move the outdoor sensor outside to a shaded location within range of the forecast station.

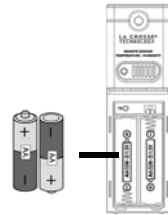

Function Buttons (on back of forecast station)

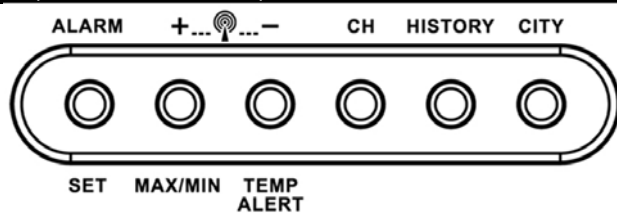

Program Menu (sets time, calendar, 12/24 hour time, °F/°C, and WWVB reception)

The **SET** button will moves through the items in the program menu. The + or - button will change these values.

- WWVB reception ON or OFF
- Time Zone (Seven Time Zones)
- Daylight Saving Indicator
- 12/24 hour time format
- Fahrenheit/Celsius selection
- Manual time set (Hour, Minutes, Seconds)
- Calendar set (Year, Month, Date)



WWVB Time Reception

The WWVB time reception defaults to ON. To turn the WWVB reception OFF:

1. Hold the SET button for 5 seconds.
2. **WWVB** and **ON** will flash in the time display.
3. Press and release the + or - button to turn this OFF.
4. Confirm with the SET button and move to the **Time Zone**.



Time Zone

This station offers seven time zones listed in letter format (default is EST):

TIME ZONE	
AST	Atlantic
EST	Eastern
CST	Central
MST	Mountain
PST	Pacific
AKT	Alaska
HAT	Hawaiian

1. **EST** will flash next to the date.
2. Press and release the + or - button to select a different Time Zone.
3. Confirm with the SET button and move to **Daylight Saving Indicator**.



DST Indicator

DST will default to the ON position as most of the country observes the DST change. The DST indicator should stay on all year so the forecast station knows when to switch into or out of daylight saving time. If you live in an area does not observe the DST change, switch this to the OFF position.

1. **DST** and **ON** will flash in the time display.
2. Press and release the + or - button to turn DST to OFF.
3. Confirm with the SET button and move to **12/24 hour time format**.



12/24 Hour Time Format

The time may be displayed in 12-hour or 24-hour format. Default is 12-hour time.

Note: When in 12-hour format AM or PM will show in front of the hour.

1. **12Hr** will flash in the time display.
2. Press and release the + or - button to select 24-hour time.
3. Confirm with the SET button and move to **Fahrenheit/Celsius**.



Fahrenheit/Celsius

Select the temperature to display in Fahrenheit or Celsius. Default is Fahrenheit.

1. **°F** will flash in the time display.
2. Press and release the + or - button to select Celsius.
3. Confirm with the SET button and move to **Set Time**.



Set Time

To set the time manually:

1. The **hour** digit will flash.
2. Press and release the **+** or **-** button to select the hour.
3. Press and release the **SET** button to move to the **minutes**.
4. The **minute's** digit will flash.
5. Press and release the **+** or **-** button to set the minutes.
6. Press and release the **SET** button to move to the **seconds**.
7. The **second's** digit will flash.
8. Press and release the **+** or **-** button to reset the seconds to zero.
9. Confirm with the **SET** button and move to **Set Calendar**.



Set Calendar

To set the calendar:

1. The **year** will flash.
2. Press and release the **+** or **-** button to set the year (between year 2010-2039).
3. Press the **SET** button again to confirm and to enter the **month** setting.
4. The **month** will flash.
5. Press and release the **+** or **-** button to set the month.
6. Press the **SET** button again to confirm and enter the **date** setting.
7. The **date** will flash.
8. Press and release the **+** or **-** button to set the date.
9. Confirm all calendar settings with the **SET** button to confirm and **exit** the program menu.



Note: If no buttons are pressed for 20 seconds, set mode will time out and return to live display mode, reflecting whatever adjustments were made before it timed out.

Note: Press the **+** or **-** button once to adjust by 1 unit or hold for fast scroll adjustment.

City Selection: Sun rise/set Times

Note: Preset city abbreviations are at the end of this manual. Choose the city closest to you in a north/south direction. This will provide the most accurate sunrise/sunset times.



To select a city location: Select your country, state, and then city location.

1. Hold the **CITY** button for 5 seconds.
 2. **USA** will flash next to the sunrise/sunset time.
 3. Press and release the **+** or **-** button to select USA, CAN or MEX as your **country**.
 4. Press the **CITY** button to confirm the country and select a **state**.
Note: When either Canada or Mexico is chosen, you will move directly to city selection.
 5. The **state** will flash. Press and release the **+** or **-** button to select a **state**.
 6. Press the **CITY** button to confirm the state and select a **city**.
 7. The **city** location will flash.
 8. Press and release the **+** or **-** button to select a **city** from the list at the end of this manual.
 9. Press the **CITY** button to confirm and **exit**.
- After a short calculation time, the forecast station shows the times for sunrise and sunset, moon phase and lunar tide.

USA

AK

ANC

Note: When DST is in affect the forecast station will need to receive the WWVB time signal to make the adjustment for DST. The WWVB signal includes an embedded bit to tell the station to adjust for DST. Until that signal is received the first time, the sunrise/sunset times will be one hour off.

Tide


The tides reflected on this station are based on the ebb and neap tides of the lunar month rather than the daily high and low tides. When the sun, moon and earth are lined up at new and full phases of the moon, tides will be higher. When the moon is at right angles to the sun and Earth at the first and last quarter, the tides are weaker.

- **Full & new moon** = spring tide (TIDE HI)
- **Quarter** = neap tide (TIDE LO)
- **Other** = mean water level (TIDE MID)

Moon Phase

The LCD Moon phase is divided by 6 sections, showing a total of 12 phases of the moon.

Note: With the moon shown against a light colored background, the phases will show opposite to a paper calendar. The segments that are highlighted portray the part of the moon that is lit. For instance, the moon will be blank during a new moon and dark during a full moon.

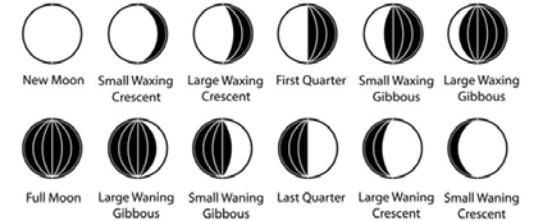

- **New Moon** occurs when the moon is between the earth and sun so the illuminated portion of the moon is on the back side facing the sun and we cannot see it. After a new moon, the illuminated (visible) portion will increase or wax until the full moon occurs.
- **Full Moon** occurs when the earth, moon and sun are in approximate alignment, with the moon and the sun on opposite sides of the earth. The illuminated portion of the moon faces the earth, giving us complete visibility of one side of the entire moon. After a full moon, the illuminated portion will decrease or wane until the new moon occurs.
- **First Quarter** and **Last Quarter** moons occur when the moon is at a 90 degree angle to the earth and sun. So we see half of the moon illuminated and half is in shadow.
- **Waxing** means growing or expanding illumination and happens after a new moon.
- **Waning** means decreasing illumination and occurs after a full moon.
- **Crescent** refers to the moon being less than half illuminated. Crescents can be waning or waxing.
- **Gibbous** describes a moon phase when more than half is illuminated. Gibbous can be waxing or waning.

Comfort Statement

The comfort statement is based on the **indoor humidity**.

- **WET:** Humidity is above 64%
- **COMFORTABLE:** Humidity is between 43% and 64%
- **DRY:** Humidity is below 42%



Backlight

Press the **SNOOZE/LIGHT** button on the top of the forecast station to activate the blue LED backlight for 5 seconds.

SNOOZE/LIGHT

Alarms (Time, Temperature, Frost)


There are 9 different alarms that may be individually set on this forecast station:

1. Time Alarm #1	With additional TX142TH or TX14TH sensors:
2. Time Alarm #2	
3. Frost Alarm	
4. High Temperature Alarm CH #1	
5. Low Temperature Alarm CH #1	
	6. High Temperature Alarm CH #2
	7. Low Temperature Alarm CH #2
	8. High Temperature Alarm CH #3
	9. Low Temperature Alarm CH #3

Time Alarms

This forecast station has two individual time alarms:

- Press and release the ALARM button to enter Alarm mode. Alarm 1 (A1) will show after the alarm time.
- Press and release the ALARM button again and Alarm 2 (A2) will show after the alarm time.

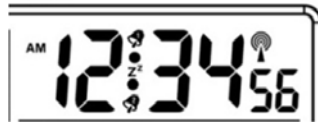

Set Time Alarm 1

Press and release the ALARM button once to enter Alarm 1 mode. The Alarm Time and **A1** will show.



- HOUR:** Hold the ALARM button for 3 seconds. The Hour will flash. Use the + or - button to set the Hour. Be sure to set the Hour correctly for AM or PM. Press and release the ALARM button once.
- MINUTES:** The Minutes will flash. Use the + or - button to set the Minutes. Press and release the ALARM button once.
- ACTIVATE:** Press and release the ALARM button to enter the correct Alarm mode. Press and release the + button and the alarm icon will appear (above the time, alarm 1, below the time, alarm 2). The number in the bell icon indicates which alarm is active.
- DEACTIVATE:** Press and release the ALARM button to enter the correct Alarm mode. Press and release the + button and the alarm icon(s) will disappear indicating alarm 1 and/or alarm 2 is off.



Alarm icon

Set Time Alarm 2

Press and release the ALARM button **twice** to enter Alarm 2 mode. The Alarm Time and **A2** will show. Follow steps 1-4 above to program alarm 2.


Snooze

Press the SNOOZE/LIGHT button on the top of the forecast station once to activate the snooze feature for 10 minutes when either alarm sounds. The alarm icon and the snooze icon **Zz** will flash when the snooze is active. Press any button to deactivate the snooze feature.

Frost Alarm

The Frost Alarm when active will sound when the outdoor temperature drops to 34°F (1.1 °C).

- ACTIVATE:** Press and release the TEMP ALERT button to activate the Frost Alarm on all channels (when multiple sensors in use). The Frost Alarm icon will appear in the outdoor temperature area when active.
- DEACTIVATE:** Press and release the TEMP ALERT button until the Frost Alarm icon no longer shows.



Outdoor Temperature Alarms

A high and low outdoor temperature alarm may be set on the forecast station.
Note: When multiple sensors are connected on different channels, a high and/or low temperature alarms may be set for each channel.



Set Temperature Alarm Channel 1

- Press and release the CH button to select channel 1 (when multiple sensors in use).
- Hold the TEMP ALERT button until the **High Temp Alert** icon appears and the temperature will flash. Use the + or - button to select your High Temp alarm value. Press and release the SET button to move to the Low Temp alarm.
- The **Low Temp Alert** icon will appear and the temperature will flash. Use the + or - button to select your Low Temp alarm value. Press and release the SET button to confirm and exit to current temperature.
- The Temp Alert icon will show in the outdoor temperature area when a temperature alarm is active. When the temperature alarm sounds, the Temp Alert icon and the temperature value will flash. Press any button to silence the alarm temporarily.



Temp Alert icon

Set Temperature Alarm Channel 2 & 3

- Use the CH button to select the channel. Follow steps 2-4 above to set temperature alarms on other channels.
- DEACTIVATE TEMPERATURE ALARM:** Press and release the TEMP ALERT button 3 times to deactivate all temperature alarms. The alert icons will disappear.

Temperature/Humidity Trend Indicators (arrows)

The temperature (2°F/1°C) and humidity (3% RH) trend indicators update every 30 minutes or less.

- Temperature has risen in the past 3 hours.
- Humidity has risen in the past 3 hours.
- Temperature has **not changed** in 3 hours.
- Humidity has **not changed** in 3 hours.
- Temperature has fallen in the past 3 hours.
- Humidity has fallen in the past 3 hours.

Pressure Readings

Absolute Barometric Pressure Number

Barometric pressure is read by the forecast station. The numeric pressure value adjusts automatically as the forecast station reads changes in air pressure. Since this number is **absolute pressure**, it may not be the same as a local reporting station that reads in *relative* pressure.

Note: The number **cannot** be calibrated.

- Absolute Pressure** is measured in a vacuum without the influences of terrain, weather, water, foliage and elevation. The air pressure it would be consistent at every elevation and decrease as it went higher.
- Relative Pressure** is a combination of air pressure and altitude. Relative air pressure will make readings in local areas relative to each other to allow for proper forecasting.

Pressure Unit of Measurement (InHg or hPa)

HISTORY



Hold the HISTORY button for 5 seconds to switch from InHg (inches or mercury) or hPa (Hectopascal) for the numeric pressure display and the pressure graph.

- **Inches of Mercury** is common for weather reports and aviation in the United States.
- **Hectopascal** is equivalent to millibar and commonly used to measure atmospheric pressure outside the United States.

Pressure History

Press and release the HISTORY button to view the past 12-hours of numeric pressure history.




- In the small box to the right of the numeric pressure a number from 0 to -12 will appear.
- 0 is current pressure. -1 through -12 reflects the history in one-hour increments.

Note: The history graph and forecast icons will not change when you view pressure history.

Pressure History Graph

The bar chart indicates the air pressure history trend over the last 12 hours in 5 steps, 0h, -1h, -2h, -3h, -6h & -12h.

- The columns represent the change in pressure readings (InHg or hPa) at specific times.
- The "0" in the middle of this scale is equal to the current pressure and each bar represents how high or low the past pressure was **compared** to the current pressure.



Read the graph from left to right. If the bars are rising, it means that the weather will improve. If the bars go down, it means the air pressure has dropped and the weather is expected to degrade.

Note: The bar graph will scroll continually to prevent LCD burnout.

MIN/MAX Data

The forecast station will show the daily minimum and maximum temperatures each day starting at midnight (12:00 AM). The forecast station automatically resets the min/max temperatures at midnight (12:00 AM).

- **View MIN/MAX data:** Press and release the MAX/MIN button to view the Maximum, Minimum, then Current Indoor and Outdoor Temperatures.
- **Multiple Sensors:** Press and release the CH button to select the desired outdoor channel to view the Minimum and Maximum Outdoor Temperatures. Press and release the MAX/MIN button to view the Maximum, Minimum then Current Temperatures for that channel.
- **Reset all MIN/MAX data:** Hold the MAX/MIN button for 5 seconds and the Indoor and all Outdoor Minimum and Maximum Temperatures will be reset manually to Current temperatures.



Low Battery Indicator

- When the low battery icon appears in the indoor (IN) reading section, replace the batteries in the forecast station.
- When the low battery icon appears in the outdoor (OUT) readings section, replace the batteries in the outdoor sensor.




Weather Forecast & Hunter Icons

Weather Forecast Icons (Sun, Partial Sun, Clouds, Rain and Snow)

The icons in the top right corner shown below forecast the weather for the next 12-24 hours. The icon is a prediction of the weather in terms of getting better or worse based on rising and falling barometric pressure.

INTELLIGENT WEATHER FORECAST

This station learns. Please allow 3 to 4 weeks for barometric calibration. This will ensure an accurate personal forecast for your location.

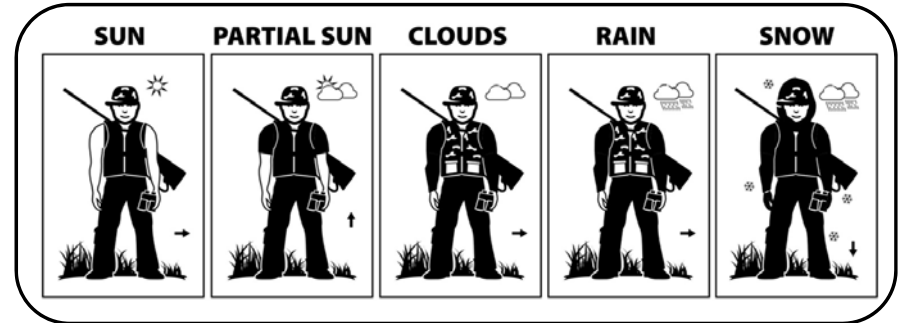


Weather Tendency Indicators (up and down arrows)

Working together with the weather forecast icons are the weather tendency indicators. When the indicator points upwards, the Air Pressure is increasing; weather is expected to improve. When indicator points downwards, Air Pressure is falling; weather is expected to degrade. An arrow to the right means no change.




Hunter Icon Clothing Index Based on Outdoor Temperature

- The hunter's clothing updates with changes in the measured Outdoor Temperature from the sensor on **channel 1**.
- The hunter icon represents CURRENT TRENDS in Temperature.

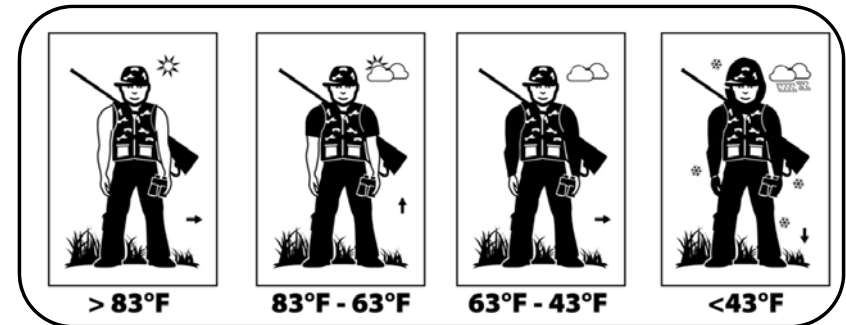

Channel Selection and Auto-scroll

- **Channels:** When more than one sensor is used, set each sensor to a different channel number then hold the CH button for 5 seconds to search for the sensors.
- **View Channels:** Press the CH button to select Ch1, Ch2, Ch3 or auto-channel scroll.
- **Auto scroll-channel** will show a circling arrow  below the channel number and will rotate through each channel approximately every 5-8 seconds



Setup with Multiple Outdoor Sensors

The forecast station will accommodate up to three remote outdoor sensors (TX142TH or TX14TH). The channel selection button allows you to easily see the temperature in various locations: outdoors, baby's room, greenhouse, basement, etc. Monitor remote temperature in up to 3 locations within a 200 ft. wireless range of the forecast station.

To connect multiple remote sensors to the forecast station:


1. Remove the battery cover from all the sensors (Leave battery covers off until all sensors are received by the forecast station).
2. Set the **first** outdoor sensor to Channel 1 and insert 2 AA batteries.
3. Set the **second** outdoor sensor to Channel 2 and insert 2 AA batteries.
4. Set the **third** outdoor sensor to Channel 3 and insert 2 AA batteries.
5. Press and hold the CH button on the forecast station for 5 seconds. The forecast station will search for all outdoor sensors.
6. Press the TX button on each outdoor sensor to transmit RF signal.
7. When RF connection is established, the respective temperature & humidity for each of the selected channels will appear on the main unit.
8. Allow the sensors and the forecast station to stay 5-10 feet apart for 15 minutes to establish a solid connection.
9. Install the battery covers on each sensor.
10. After 15 minutes place the remote sensors in appropriate locations (see "position the outdoor sensor").



Press and release the CH button to view channel 1, 2 or 3 on the forecast station when multiple sensors are used.

Note: You cannot change channels if only one sensor is connected.

Channel Scroll

Press and release the CH button until you see  appear in the outdoor data area. The forecast station will automatically rotate through the channels for all connected sensors.

Press and release the CH button to lock the forecast station into one channel. Then view channels individually with a press of the CH button.

WWVB Radio-controlled Time

The NIST radio station, WWVB, is located in Ft. Collins, Colorado, and transmits the exact time signal continuously throughout the United States at 60 kHz. The signal can be received up to 2,000 miles away through the internal antenna in the forecast station. However, due to the nature of the Earth's ionosphere, reception is very limited during daylight hours.

The forecast station will search for a signal every night when reception is best. The WWVB radio station derives its signal from the NIST Atomic Clock in Boulder, Colorado. A team of atomic physicists continually measures every second of every day to an accuracy of ten billionths of a second a day. These physicists have created an international standard, measuring a second as 9,192,631,770 vibrations of a Cesium 133 atom in a vacuum. This atomic clock regulates the WWVB sensor.

WWVB Reception Icon

Reception icon with full signal strength will appear on screen in front of the date when the reception of time is successful.



- The tower icon will show solid when the forecast station has received the WWVB signal.
- No tower icon is shown. The forecast station was unable to receive a signal at this time.
- Reposition the forecast station for better signal reception or try again at bedtime.
- The forecast station will start searching at UTC: 07:00 and if no reception on the first attempt they will try again at 08:00, 09:00, 10:00 and 11:00. Each attempt will be at least 2 minutes and the most will be 10 minutes.
- If there is no signal or too much interference the receiver will only be on for 2 minutes.
- If the signal is good it may catch a signal in ABOUT 2-3 minutes.
- If the signal is marginal it will try to catch a signal for up to 10 minutes.

WWVB Manual Signal Search

Normal mode: Hold the + and - buttons together for 3 seconds to enter manual search.

Reception mode: Hold the + and - buttons together for 3 seconds to exit searching for the WWVB signal.



- Recommended distance to any interfering sources like computer monitors or TV sets is a minimum of 6 feet (2 meters).
- Within ferro-concrete rooms (basements, superstructures), the received signal is naturally weakened. In extreme cases, please place the unit close to a window and/ or point its front or back towards the Fort Collins, Colorado, sensor.
- During nighttime, the atmospheric disturbances are usually less severe and reception is possible in most cases. A single daily reception is adequate to keep the accuracy deviation below 1 second.

Note: In case the forecast station is not able to detect the WWVB-signal (disturbances, transmitting distance, etc.), the time and date can be manually set (see "program menu").

Care and Maintenance

- **Do Not Mix Old and New Batteries**
- **Do Not Mix Alkaline, Lithium, Standard or Rechargeable Batteries**
- Do not expose the forecast station to extreme temperatures, vibration or shock. Keep dry.
- Clean forecast station with a soft damp cloth. Do not use solvents or scouring agents.
- The forecast station is not a toy. Keep it out of reach of children.
- The forecast station is not to be used for medical purpose or for public information. It is for home use only.
- The specifications of this forecast station may change without prior notice.
- Improper use or unauthorized opening of housing will void the warranty.
- If the forecast station does not work properly, change the batteries and/or check the a/c cord connection.

Position the Outdoor Sensor

Once the forecast station shows the outdoor temperature/humidity, place it and the sensor in the desired locations and wait approximately one hour before permanently mounting the sensor to ensure that there is proper reception. The sensor should be mounted vertically, in a shaded, protected area, where direct sunlight cannot reach the outdoor sensor, at least 6 feet from the ground to avoid damage and ensure accurate readings. The sensor is water resistant, not waterproof and should not be placed anywhere it will become submerged in water or subject to standing water or snow.


Choose a location for the sensor that is within range of the forecast station and under an overhang for accuracy. The maximum transmitting range in open air is over 200 feet (60 meters).

Option 1:

- Install one mounting screw (not included) into a wall leaving approximately ½ of an inch (12.7mm) extended.
- Place the sensor onto the screw, using the hanging hole on the backside.
- Gently pull the sensor down to lock the screw into place.

Option 2:

- Insert the mounting screw (not included) through the front of the sensor and into the wall.
- Tighten the screw to snug (do not over tighten).



The maximum transmitting range in open air is over 200 feet (60 meters). Obstacles such as walls, windows, stucco, concrete and large metal objects can reduce the range.

Position the Forecast Station

1. The forecast station has a wide base to sit on a desk or table.
2. Choose a location 6 feet or more from electronics such as cordless phones, gaming systems, televisions, microwaves, routers etc.
3. Place within range of the outdoor sensor.
4. The maximum transmitting range in open air is 200 feet (60 meters). Obstacles such as walls, windows, stucco, concrete and large metal objects can reduce the range.
5. For best WWVB reception orientate the forecast station with the front of the back facing Ft. Collins, Colorado.

Specifications

Indoor	
Temperature Range:	+32°F to +122°F (0°C to 50°C)
Humidity Range:	1%-99% (RH)
Interval:	About every 30 seconds
Outdoor	
Temperature Range:	-40°F to 140°F (-40°C to 60°C)
Humidity Range:	1%-99% (RH)
Distance:	Over 200 ft. (60 meters) RF 433MHz (open air)
Interval:	About every 50 seconds
Barometric Pressure	
Range:	23.62 to 32.48 inHg (800mb to 1100mb)
Interval:	About every 12 minutes
Power Requirements	
Wireless Forecast Station:	3-AA, IEC, LR6 batteries (not included)
TX142TH/TX14TH Sensor:	2-AA, IEC, LR6 batteries (not included)
Battery Life	
TX142TH Sensor:	Battery life is over 24 months when using reputable battery brands.
Wireless Forecast Station:	Battery life is over 24 months when using reputable battery brands.
Dimensions	
Wireless Forecast Station:	5.12" L x 2.36" W x 5.12" H (130 x 60 x 130 mm)
TX142TH Sensor:	1.58" L x .83" W x 5.08" H (40.132 x 21.082 x 129.032 mm)

Warranty Information

La Crosse Technology, Ltd. provides a 1-year limited time warranty (from date of purchase) on this product relating to manufacturing defects in materials & workmanship.

View full warranty details online at:

www.lacrossetechnology.com/warranty_info.pdf

For warranty work, technical support or other information contact:

La Crosse Technology, Ltd.
2830 South 26th St
La Crosse, WI 54601

Contact Support:

1-608-782-1610

Product Registration:

www.lacrossetechnology.com/support/register

Online Product Support:

www.lacrossetechnology.com/308-1451h

Protected under U.S. Patents:

5,978,738, 6,076,044, 6,597,990



Scan for online information

**FCC Statement**

This Device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) the device must accept any interference received, including interference that may cause undesired operation.

NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER AUTHORITY TO OPERATE THE EQUIPMENT

All rights reserved. This handbook must not be reproduced in any form, even in excerpts, or duplicated or processed using electronic, mechanical or chemical procedures without written permission of the publisher. This handbook may contain mistakes and printing errors. The information in this handbook is regularly checked and corrections made in the next issue. We accept no liability for technical mistakes or printing errors, or their consequences.

All trademarks are acknowledged.

City Codes

AK ALASKA	HI HAWAII
ANC ANCHORAGE	HNL HONOLULU
FAI FAIRBANKS	ITO HILO
AJN JUNEAU	OCG KAHULUI
OME NOME	WAI WAIMEA
AL ALABAMA	IA IOWA
BHM BIRMINGHAM	ALO WATERLOO
GAD GADSDEN	DSM DES MOINES
MGM MONTGOMERY	DVN DAVENPORT
MOB MOBILE	SUX SIOUX CITY
AR ARKANSAS	ID IDAHO
FSM FORT SMITH	BOI BOISE
LIT LITTLE ROCK	GIB GIBBONSVILLE
TXK TEXARKANA	PIH POCATELLO
	SZT SAND POINT
AZ ARIZONA	IL ILLINOIS
FLG FLAGSTAFF	CMI CHAMPAIGN
PHX PHOENIX	ORD CHICAGO
TUS TUCSON	SPI SPRINGFIELD
YUM YUMA	
CA CALIFORNIA	IN INDIANA
BFL BAKERSFIELD	EVV EVANSVILLE
BLH BLYTHE	HUF TERRE HAUTE
EKA EUREKA	IND INDIANAPOLIS
FAT FRESNO	SBN SOUTH BEND
FTB FORT BRAGG	
LAX LOS ANGELES	KS KANSAS
ROD REDDING	DDC DODGE CITY
SAC SACRAMENTO	K32 WICHITA
SAN SAN DIEGO	KCK KANSAS CITY
SBD SAN BERNADINO	OH1 WAKEENEY
SFO SAN FRANCISCO	TOP TOPEKA
CO COLORADO	KY KENTUCKY
DEN DENVER	FFT FRANKFORT
DRO DURANGO	LEX LEXINGTON
FNL FT COLLINS	LOU LOUISVILLE
GJT GRAND JUNCTION	
ITR BURLINGTON	LA LOUISIANA
PUB PUEBLO	BTR BATON ROUGE
	CWF LAKE CHARLES
CT CONNECTICUT	IER NATCHITOCHEES
HFD HARTFORD	NEW NEW ORLEANS
	SHV SHREVEPORT
DC DISTRICT OF COLUMBIA	MA MASSACHUSETTS
DCA WASHINGTON	BOS BOSTON
DE DELAWARE	MD MARYLAND
ON5 DOVER	BWI BALTIMORE
FL FLORIDA	ME MAINE
JAX JACKSONVILLE	AUG AUGUSTA
MIA MIAMI	BGR BANGOR
ORL ORLANDO	CAR CARIBOU
PNS PENSACOLA	PWM PORTLAND
TLH TALLAHASSEE	
TPA TAMPA	MI MICHIGAN
GA GEORGIA	AZO KALAMAZOO
ABY ALBANY	DET DETROIT
AGS AUGUSTA	FNT FLINT
ATL ATLANTA	LAN LANSING
CSG COLUMBUS	PZQ ROGERS CITY
MAC MACON	SAW MARQUETTE
SAV SAVANNAH	TVC TRAVERSE CITY

NV NEVADA	GMU GREENVILLE	SFF SPOKANE
AIN AUSTIN	SD SOUTH DAKOTA	TON TONASKET
CXP CARSON CITY	FSD SIOUX FALLS	YKM YAKIMA
ELY ELY	PIR PIERRE	WI WISCONSIN
LAS LAS VEGAS	RAP RAPID CITY	AUW WAUSAU
LWL WELLS		GRB GREEN BAY
RNO RENO	TN TENNESSEE	LSE LA CROSSE
NY NEW YORK	BNA NASHVILLE	MSN MADISON
ALB ALBANY	CHA CHATTANOOGA	MWC MILWAUKEE
BUF BUFFALO	DKK KNOXVILLE	SSQ SPOONER
JFK NEW YORK CITY	MEM MEMPHIS	WV WEST VIRGINIA
LKP LAKE PLACID		CRW CHARLESTON
SYR SYRACUSE	TX TEXAS	HLG WHEELING
OH OHIO	ABI ABILENE	WY WYOMING
CLE CLEVELAND	AMA AMARILLO	BYG BUFFALO
CMH COLUMBUS	AUS AUSTIN	CPR CASPER
ISZ CINCINNATI	BRO BROWNSVILLE	CYS CHEYENNE
TOL TOLEDO	DFW DALLAS/FT. WORTH	LAA LITTLE AMERICA
YNG YOUNGSTOWN	ELP EL PASO	WYE WEST YELLOWSTONE
	HOU HOUSTON	
OK OKLAHOMA	LRD LAREDO	
17K BOISE CITY	ODO ODESSA	
LAW LAWTON	SAT SAN ANTONIO	
OKC OKLAHOMA CITY		CANADA CITY LISTING
TUL TULSA	UT UTAH	EDM EDMONTON
OR OREGON	SAL SALINE	ALB CALGARY
BNO BURNS	SGU ST GEORGE	VAN VANCOUVER
EUG EUGENE	SLC SALT LAKE CITY	WIN WINNIPEG
MFR MEDFORD	TSN THOMPSON	FRE FREDERICTON
PDX PORTLAND		HAL HALIFAX
SLE SALEM	VA VIRGINIA	YEL YELLOWKNIFE
PA PENNSYLVANIA	DON VIENNA	OTT OTTAWA
CXY HARRISBURG	LYH LYNCHBURG	SUD SUDBURY
PHL PHILADELPHIA	ORF NORFOLK	THU THUNDER BAY
PIT PITTSBURGH	RIC RICHMOND	TOR TORONTO
SCR SCRANTON	ROA ROANOKE	CHT CHARLOTTE TOWN
PR PUERTO RICO	VT VERMONT	MON MONTREAL
SJU SAN JUAN	BTV BURLINGTON	QUE QUEBEC
	MPR MONTPELIER	REG REGINA
RI RHODE ISLAND	WA WASHINGTON	WHI WHITEHORSE
PVD PROVIDENCE	ABE ABERDEEN	MEXICO CITY LISTING
	ALW WALLA WALLA	CHH CHIHUAHUA
SC SOUTH CAROLINA	KTF KETTLE FALLS	DUR DURANGO
CHS CHARLESTON	MVN MT VERNON	MEX MEXICO CITY
CUB COLUMBIA	OLM OLYMPIA	GUA GADALUPE
	SEA SEATTLE	HER HERMOSILLO