



Phone User Guide

SCP-3200 by SANYO®

www.qwest.com

Copyright © 2007 Qwest Communications International, Inc. All rights reserved. No reproduction in whole or in part without prior written approval. Qwest is a trademark of Qwest Communications International Inc. Sprint is a trademark of Sprint Nextel. SANYO is a registered trademark of SANYO Electric Co., Ltd. All other trademarks are the property of their respective owners.

Table of Contents

Welcome to Qwest	.i
Introduction	.ii
Your Phone's Menu	.iii
Section 1: Getting Started	.1
1A. Setting Up Service	.2
Getting Started	.3
Setting Up Your Voicemail	.4
Account Passwords	.5
Getting Help	.6
Section 2: Using Your Phone	.7
2A. Phone Basics	.8
Front View of Your Phone	.9
Viewing the Display Screen	.12
Features of Your Phone	.15
Turning Your Phone On and Off	.17
Using Your Phone's Battery and Charger	.18
Navigating Through Phone Menus	.21
Displaying Your Phone Number	.22
Making and Answering Calls	.23
Entering Text	.39
2B. Controlling Your Phone's Settings	.45
Sound Settings	.46
Display Settings	.52
Location Settings	.58
Messaging Settings	.59
Airplane Mode	.62
TTY Use	.63
Phone Setup Options	.64

2C. Setting Your Phone's Security	72
Accessing the Security Menu	73
Using Your Phone's Lock Feature	73
Restricting Calls	75
Using Special Numbers	76
Erasing Phone Content	77
Resetting the Browser	78
Resetting Favorites	78
Resetting Default Settings	79
Resetting Your Phone	79
Resetting Your Picture Mail Account	80
Security Features for Sprint Vision	80
Using the Parental Control Feature	81
2D. Controlling Your Roaming Experience	83
Understanding Roaming	84
Setting Your Phone's Roam Mode	86
Using Call Guard	87
Using Data Guard	88
2E. Managing Call History	89
Viewing History	90
Call History Options	91
Making a Call From Call History	92
Saving a Phone Number From Call History	93
Prepending a Phone Number From Call History	94
Erasing Call History	94
2F. Using Contacts	95
Adding a New Contacts Entry	96
Assigning a Group Entry	97
Finding Contacts Entries	98
Contacts Entry Options	99
Editing a Contacts Entry	100
Erasing a Contacts Entry From the List	100
Assigning Speed Dial Numbers	101

Assigning an Image to a Contacts Entry	102
Selecting a Ringer Type for an Entry	102
Secret Contacts Entries	103
2G. Using the Phone's Calendar and Tools	104
Using Your Phone's Calendar	105
Using the Call Alarm Feature	108
Using Your Phone's Alarm Clock	111
Using Your Phone's Tools	112
Personal Information Management	115
2H. Using Your Phone's Voice Services	116
Using Voice-Activated Dialing	117
Managing Voice Memos	119
Setting Up Screen Call	123
2I. Using Ready Link	126
Getting Started With Ready Link	127
Making and Receiving a Ready Link Call	129
Adding and Editing Ready Link Contacts	136
Erasing Ready Link List Entries	141
Managing Ready Link Settings	143
2J. Using the Built-in Camera	147
Taking Pictures	148
Using the Settings & Info Menu	154
Storing Pictures	156
Sending Sprint Picture Mail	158
Managing Sprint Picture Mail	160
2K. Using Bluetooth	164
Turning Bluetooth On and Off	165
Using the Bluetooth Settings Menu	166
Bluetooth Profiles	169
Pairing Bluetooth Devices	170
Using the Trusted List Options	171
Sending Data via Bluetooth	172

Section 3: Qwest Service Features	173
3A. Qwest Service Features: The Basics	174
Using Voicemail	175
Using SMS Text Messaging	182
Making a Three-Way Call	185
Using Caller ID	186
Responding to Call Waiting	186
Using Call Forwarding	187
3B. Sprint Vision	188
Sprint Vision Applications	189
Getting Started With Sprint Vision	189
Accessing Messaging	195
Downloading Content	197
Exploring the Web	199
Section 4: Safety and Warranty Information	205
4A. Important Safety Information	206
General Precautions	207
Maintaining Safe Use of and Access to Your Phone	208
Using Your Phone With a Hearing Aid Device	210
Caring for the Battery	212
Radio Frequency (RF) Energy	213
Owner's Record	216
Phone Guide Proprietary Notice	216
4B. Manufacturer's Warranty	217
Manufacturer's Warranty	218
Index	221

Welcome to Qwest®

This guide will familiarize you with wireless service and your new phone through simple, easy-to-follow instructions. It's all right here – from setting up your account passwords and voicemail to using the most advanced features of your new phone.

Welcome and thank you for choosing Qwest®.

Introduction

This **Phone User Guide** introduces you to wireless service and all the features of your new phone. It's divided into four sections:

- ◆ **Section 1:** Getting Started
- ◆ **Section 2:** Using Your Phone
- ◆ **Section 3:** Qwest® Service Features
- ◆ **Section 4:** Safety and Warranty Information

Throughout this guide, you'll find tips that highlight special shortcuts and timely reminders to help you make the most of your new phone and service. The Table of Contents and Index will also help you quickly locate specific information.

You'll get the most out of your phone if you read each section. However, if you'd like to get right to a specific feature, simply locate that section in the Table of Contents and go directly to that page. Follow the instructions in that section, and you'll be ready to use your phone in no time.

WARNING

Please refer to the **Important Safety Information** section on page 206 to learn about information that will help you safely use your phone. Failure to read and follow the Important Safety Information in this phone guide may result in serious bodily injury, death, or property damage.

Your Phone's Menu

The following table outlines your phone's menu structure. For more information about using your phone's menus, see "Navigating Through Phone Menus" on page 21.

1: MISSED ALERTS		
2: CALL HISTORY		
1: OUTGOING		
2: INCOMING		
3: MISSED		
4: RECENT CALLS		
5: ERASE HISTORY		
1: Outgoing 4: Recent Calls	2: Incoming 5: All	3: Missed
3: CONTACTS		
1: FIND/ADD ENTRY		
2: GROUP		
3: SPEED DIAL #S		
4: MY NAME CARD		
5: SERVICES		
1: Customer Service 4: Operator	2: Dir Assistance	3: Account Info
4: MESSAGING		
1: SEND MESSAGE		
1: Text	2: Picture	
2: TEXT		
3: PIC. MAIL		
4: IM & EMAIL		
5: CHAT & DATING		

6: VOICEMAIL		
1: Call Voicemail 4: Clear Count	2: Call:Speaker On	3: Details
7: SETTINGS		
1: Notification	2: Preset Msgs	3: Text
5: MY CONTENT		
1: GAMES		
1: Get New	2: My Content Manager	
2: RINGERS		
1: Get New	2: My Content Manager	
3: SCREEN SAVERS		
1: Get New	2: My Content Manager	
4: APPLICATIONS		
1: Get New	2: My Content Manager	
6: PICTURES		
1: CAMERA		
Press Options (right softkey) and press the navigation key up and down to display the following options:		
1: Picture Mode		
1: Normal 4: Night/Dark	2: Beach/Snow 5: Soft Focus	3: Scenery
2: Zoom		
3: Self-Timer		
1: Off	2: 10 Seconds	3: 5 Seconds
4: Fun Tools		
1: Multiple Shots 4: Color Tone	2: Stitch Shot	3: Fun Frames
5: Image Controls		
1: Brightness	2: White Balance	

6: Camera Settings		
1: Resolution 4: Status Bar	2: Quality	3: Shutter Sound
7: Pics In Camera		
8: Key Guidance		
9: User Settings		
2: My PICTURES		
1: In Camera	2: SavedTo Ph.	
3: ONLINE ALBUMS		
1: View Albums	2: Upload	
4: SETTINGS&INFO		
1: Auto Delete 4: Account Info	2: Status Bar	3: Slideshow Intvl
7: WEB		
8: TOOLS		
1: VOICE MEMO		
1: Record	2: List	3: Screen Call
2: BLUETOOTH		
3: CALENDAR		
4: ALARM CLOCK		
5: COUNTDOWN		
6: STOP WATCH		
7: UPDATE PHONE		
8: WORLD CLOCK		
9: CALCULATOR		
0: PARENTAL CTRL		
1: Limit Use 4: Special #s	2: Lock Services 5: Edit Ph. Book	3: Change Lock

9: SETTINGS		
1: SOUNDS		
1: Ringer Type		
1: Incoming Calls 4: Messaging	2: Ready Link 5: Calendar/Alarm	3: Voicemail
2: Volume		
1: Ringer 4: Application	2: Advanced Ring. 5: StartUp/PwOff	3: Receiver 6: Key Beep
3: Vibrate Type		
1: Incoming Calls 4: Messaging	2: Ready Link 5: Calendar/Alarm	3: Voicemail
4: Alerts		
1: Service 4: Messaging	2: Ready Link 5: Minute Beep	3: Voicemail 6: Signal Fade
5: Others		
1: Tone Length 4: Power-off Tone	2: Tone Type 5: Voice Prompt	3: Start-up Tone 6: Key Press Echo
2: DISPLAY		
1: Backlight		
1: Main LCD	2: Key	3: Sub LCD
2: PWRsave Mode		
3: Greeting		
4: Background		
5: Animation		
1: Standby	2: Outgoing Calls	3: Service Search
6: Incoming Calls		
1: Preset 4: In Camera	2: My Content 5: Saved to Ph.	3: -Get New 6: Off
7: Screen Saver		
1: Preset 4: In Camera	2: My Content 5: Saved to Ph.	3: -Get New 6: Off

8: Clock/Calendar		
1: Digital Clock 1 4: World Clock 7: Off	2: Digital Clock 2 5: Calendar	3: Digital Clock 3 6: Default
9: Others		
1: Font Size 4: Sleep Mode	2: Match AreaCode	3: Return to Idle
3: DATA		
1: Enable Data (sign-out state)/Disable Data (sign-in state)		
2: Net Guard		
3: Update Profile		
4: READY LINK		
1: Enable/Disable		
2: List Update		
3: Sounds		
1: Ringer Type 4: Alerts	2: Ringer Volume	3: Vibrate Type
4: Speakerphone		
5: Default View		
6: Floor Display		
7: R-Link Guard		
8: Restart		
9: Help		
5: LOCATION		
6: BLUETOOTH		
1: Enable/Disable		
2: Visibility		
3: Voice Priority		
4: Device Name		
5: Device Info		

7: MESSAGING		
1: Notification		
2: Preset Msgs		
3: Text		
1: Send Callback#	2: Signature	3: Drafts Alert
8: SECURITY		
1: Lock Phone		
1: Unlocked	2: Lock Now	3: On Power-up
2: Picture Mail		
1: Lock Pictures	2: Reset Pic. Mail	
3: Erase/Reset		
1: Erase Ph. Book 4: Erase V. Data 7: Reset Browser 0: Reset Phone	2: Erase Content 5: EraseVoiceTag 8: Reset Favorit.	3: Erase Pictures 6: Erase Msgs 9: DefaultSetting
4: Others		
1: Change Lock 4: Found Me	2: Limit Use 5: Lock Services	3: Special #s
9: OTHERS		
1: Airplane Mode		
2: Roaming		
1: Set Mode	2: Call Guard	3: Data Guard
3: Text Entry		
1: Auto-Capital 4: Default Input 7: Add Word	2: My Words 5: Auto-Space 8: Auto-Complete	3: Inpt Language 6: T9 Settings 9: Help
4: Any Key Answer		
5: Auto Answer		
1: Hands-free	2: Speakerphone	

6: Open/Close Flip	
1: Open	2: Close
7: Abbrev. Dial	
8: Headset Mode	
1: Turbo Button	2: Ringer Sound
9: TTY	
10: Navigation Keys	
1: Left Navigation (Web) 3: Up Navigation (Send Text)	2: Right Navigation (Calendar) 4: Down Navigation (My Content)
11: Side Key Guard	
12: Set Time/Date	
13: Language	
1: English	2: Español
*: PHONE INFO	
1: Phone#/UserID	
2: Icon Glossary	
3: Version	
4: Advanced	

Section 1

Getting Started

Setting Up Service

In This Section

- ◆ **Getting Started** (page 3)
 - ◆ **Setting Up Your Voicemail** (page 4)
 - ◆ **Account Passwords** (page 5)
 - ◆ **Getting Help** (page 6)
-

Setting up service on your new phone is quick and easy. This section walks you through the necessary steps to unlock your phone, set up your voicemail, establish passwords, and contact Qwest for assistance with your wireless service.

Getting Started

Unlocking Your Phone

To unlock your phone, follow these easy steps:

1. Press **END** to turn the phone on.
2. Select **Unlock** (left softkey).

Note: To select a softkey, press the key directly below the softkey text that is displayed at the bottom left and bottom right of your phone's display screen. Softkey actions change according to the screen you're viewing and will not be displayed if there is no corresponding action available.

3. Enter your four-digit lock code. (For security purposes, the code is not visible as you type.)

Tip: If you can't recall your lock code, try using the last four digits of your wireless phone number or try 0000. If neither of these work, call Qwest Wireless® Repair at 1-888-879-0611.

Setting Up Your Voicemail

All unanswered calls to your phone are automatically transferred to your voicemail, even if your phone is in use or turned off. Therefore, you will want to set up your voicemail and personal greeting as soon as your phone is activated.

To set up your voicemail:

1. From standby mode, press and hold  **1**.
2. Follow the system prompts to:
 - Create your passcode.
 - Record your name announcement.
 - Record your greeting.
 - Choose whether to activate One-Touch Message Access (a feature that lets you access messages simply by pressing and holding  **1**, bypassing the need for you to enter your passcode).

Note:

Voicemail Passcode

If you are concerned about unauthorized access to your voicemail account, Qwest recommends that you enable your voicemail passcode. (Do not activate One-Touch Message Access.)

For more information about using your voicemail, see "Using Voicemail" on page 175.

Account Passwords

As a Qwest customer, you enjoy unlimited access to your personal account information, your voicemail account, and your Sprint Vision account. To ensure that no one else has access to your information, you will need to create passwords to protect your privacy.

Account Password

If you are the account owner, you'll have an account password to sign on to www.qwest.com and to use when calling Qwest Wireless Customer Service. Your default account password is the last four digits of your Social Security number.

Voicemail Password

You'll create your voicemail password (or passcode) when you set up your voicemail. See "Setting Up Your Voicemail" on page 4 for more information on your voicemail password.

Sprint Vision Password

If your service plan includes Sprint Vision, you can set up a Sprint Vision password. This optional password may be used to authorize purchase of downloadable content and to protect personal information on multi-phone accounts.

For more information, or to change your passwords, sign on to www.qwest.com or call Qwest Wireless® Repair at **1-888-879-0611**.

Getting Help

Visit www.qwest.com

You can go online to:

- Review coverage maps.
- Access your account information.
- Find information and accessories for your phone.
- And more.

Reaching Qwest Wireless Customer Service

You can reach Qwest online or by phone:

- Sign on to your account at www.qwest.com.
- Call us toll-free at **1-888-879-0611**.

Directory Assistance

Call Directory Assistance from your phone and you'll have access to a variety of services and information, including residential, business, and government listings. There is a per-call charge to use Directory Assistance, and you will be billed for airtime.

To call Directory Assistance:

▶ Press  **4**  **1**  **1**  **TALK** .

Operator Services

Operator Services provides assistance when placing collect calls or when placing calls billed to a local telephone calling card or third party.

To access Operator Services:

▶ Press  **+ 0**  **TALK** .

For more information or to see the latest in products and services, visit us online at www.qwest.com.

Section 2

Using Your Phone

Phone Basics

In This Section

- ◆ **Front View of Your Phone** (page 9)
 - ◆ **Viewing the Display Screen** (page 12)
 - ◆ **Features of Your Phone** (page 15)
 - ◆ **Turning Your Phone On and Off** (page 17)
 - ◆ **Using Your Phone's Battery and Charger** (page 18)
 - ◆ **Navigating Through Phone Menus** (page 21)
 - ◆ **Displaying Your Phone Number** (page 22)
 - ◆ **Making and Answering Calls** (page 23)
 - ◆ **Entering Text** (page 39)
-

Your phone is packed with features that simplify your life and expand your ability to stay connected to the people and information that are important to you. This section will guide you through the basic functions and calling features of your phone.

Front View of Your Phone



Key Functions

1. **Earpiece** lets you hear the caller and automated prompts.
2. **Signal Strength Indicator** represents the signal strength by displaying bars. The more bars displayed, the better the signal strength.
3. **Main LCD (display)** displays all the information needed to operate your phone, such as the call status, the Contacts list, the date and time, the signal and battery strength, etc.
4. **Navigation Key** allows you to scroll through menus quickly and easily. These keys can also be reassigned to create customized shortcuts.
5. **MENU/OK Key** lets you access the phone's menus and selects the highlighted choice when navigating through a menu.
6. **Softkey (left)** lets you select softkey actions or menu items corresponding to the bottom left line on the Main LCD.
7. **Ready Link/Voice Memo Key** allows you to access the Ready Link® list or Voice Memo menu. (See "Using Ready Link" on page 126 or "Managing Voice Memos" on page 119.)
8. **Camera Key** lets you access the Pictures menu and take pictures.
9. **TALK Key** allows you to place or receive calls, answer Call Waiting, use Three-Way Calling, or activate Voice Dial.
10. **Microphone** allows other callers to hear you clearly when you are speaking to them.
11. **Charger Jack** connects the phone to the phone charger (included).
12. **Keypad** lets you enter numbers, letters, and characters, and navigate within menus. Press and hold keys 2–9 for speed dialing.
13. **SPEAKER Key** lets you place or receive calls in speakerphone mode.

- 14. END/POWER Key** lets you turn the phone on or off, end a call, or return to standby mode. While in the main menu, it returns the phone to standby mode and cancels your input. When you receive an incoming call, press to enter silent mode and mute the ringer.
- 15. BACK Key** deletes characters from the display in text entry mode. When in a menu, pressing the Back key returns you to the previous menu. This key also allows you to return to the previous screen in a data session.
- 16. Side Camera Key** lets you access the camera mode and take pictures.
- 17. Softkey (right)** lets you select softkey actions or menu items corresponding to the bottom right line on the Main LCD.
- 18. Battery Strength Indicator** represents the amount of remaining battery charge currently available in your phone. When all bars are displayed in the battery icon, the phone's battery is fully charged. When no bars are displayed, the phone's battery is completely discharged.
- 19. Speaker** lets you hear the different ringers and sounds. You can mute the ringer when receiving incoming calls by pressing **END**, **BACK**, or the Side Volume key. The speaker also lets you hear the caller's voice in speakerphone mode.
- 20. LED Indicator** shows your phone's connection status at a glance.
- 21. Sub LCD** lets you monitor the phone's status and see who's calling without opening the phone.
- 22. Side Volume Key** allows you to adjust the ringer volume in standby mode (with the phone open) or adjust the voice volume during a call. The volume key can also be used to scroll up or down to navigate through the different menu options. Press and hold to make a voice dial or to redial with the phone closed.
- 23. Camera Lens**, as part of the built-in camera, lets you take pictures.
- 24. Mirror** allows you to see yourself while taking a self-portrait.

- 25. Internal Antenna** facilitates reception and transmission. To maximize call performance, do not obstruct the internal antenna area. (See page 23.)
- 26. Headset Jack** allows you to plug in an optional headset for convenient, hands-free conversations (for monaural headset only). **CAUTION!** Inserting an incorrect accessory into the headset jack may damage the phone.

Viewing the Display Screen

Your phone's display screen provides a wealth of information about your phone's status and options. This list identifies the symbols you'll see on your phone's display screen:

Tip: To view a list of your phone's icons and descriptions, from the main menu select **Settings > Phone Info > Icon Glossary**.



shows your current signal strength. The more lines you have, the stronger your signal.



indicates you are "roaming" off the home network.



means your phone cannot find a signal.



indicates a call is on hold.



tells you a call is in progress.



indicates the Ready Link service is available.



indicates the Ready Link service is available and the speakerphone mode is set to on.



indicates the Ready Link service is unavailable.



indicates Sprint Vision/Ready Link connection is active.



indicates Sprint Vision/Ready Link connection is dormant.



indicates Sprint Vision/Ready Link connection is disabled.



indicates you have missed voice calls.

-  indicates you have missed Ready Link calls.
-  indicates you have scheduled events or call alarms.
-  indicates you have alarm clock and/or countdown notifications.
-  indicates you have new text messages.
-  indicates you have new picture messages.
-  indicates you have new voicemail messages.
-  indicates you have urgent messages.
-  indicates you have two or more different types of missed calls, scheduled events, call alarms, or alarm clock notifications.
-  indicates the Bluetooth feature is enabled (blue icon).
-  indicates the handset is discoverable by another Bluetooth device.
-  indicates the handset is connected to a Bluetooth device (green icon).
-  indicates the handset is communicating with a Bluetooth device.
-  indicates your access to a secure site.
-  indicates battery charge level (icon shown is full). The more black you see, the more power you have left (icon is animated while charging).
-  shows your battery is charging in "Power Off" state.
-  indicates all the sound settings except Application Volume are off, and the vibrate feature is set.
-  indicates volume level (1 to 8) with vibrate is set.
-  indicates 1-beep feature is set.
-  indicates 1-beep and vibrate feature are set.
-  indicates all ringer settings are off.

-  indicates all ringer settings are off and the vibrate feature is set.
-  indicates all the sound settings are off.
-  indicates the Location feature of your phone is enabled.
-  indicates the Location feature of your phone is disabled.
-  indicates you have a new voice message when Screen Call is activated.
-  indicates the Screen Call Auto setting is on.
-  indicates your phone is in TTY mode.
-  indicates the alarm clock or countdown setting is on.
-  indicates the speakerphone mode is set to on.
-  indicates a call is in progress using the Bluetooth device.
-  indicates the wired car kit device is set to on.
-  indicates the wired headset device is set to on.

Note:

Display indicators help you manage your roaming charges by letting you know when you're off the home network and whether you're operating in digital or analog mode. (For more information, see Section 2D: Controlling Your Roaming Experience on page 83.)

Features of Your Phone

Congratulations on the purchase of your phone. The SCP-3200 by SANYO is lightweight, easy-to-use, and reliable, and it also offers many significant features and service options. The following list previews some of those features and provides page numbers where you can find out more:

- Dual-band/tri-mode capability allows you to make and receive calls while on the home network and to roam on other analog and 1900 and 800 MHz digital networks where roaming agreements have been implemented (page 83).
- Sprint Vision provides access to the wireless Internet in digital mode (page 188).
- SMS Text Messaging provides quick and convenient messaging capabilities (page 182).
- Games, ringers, screen savers, and other applications can be downloaded to make your phone as unique as you are (page 197). Additional charges may apply.
- Your Contacts list allows you to store up to 300 entries, with up to seven phone numbers per entry (page 33).

A separate Ready Link Contacts List (page 129) provides easy access to up to 200 Ready Link contacts.

- The built-in calendar offers several personal information management features to help you manage your busy lifestyle (page 105).
- Your phone is equipped with a Location feature for use in connection with location-based services (page 58).
- Your phone's external LCD display allows you to monitor the phone's status and to see who's calling without opening the phone.
- T9 Text Input lets you quickly type messages with one keypress per letter (page 40).

- Speed dial lets you dial phone numbers stored in your Contacts directory with one key press (page 36).
- Ready Link allows you to enjoy quick, two-way, “walkie-talkie-style” communication with one or several Ready Link users (page 126).
- The built-in camera allows you to take full-color digital pictures, view your pictures using the phone's display, and instantly send them to family and friends using Sprint Picture Mail service (page 147).
- The built-in Bluetooth technology allows you to connect wirelessly to a number of Bluetooth devices to share information more easily than ever before (page 164).

Turning Your Phone On and Off

Turning Your Phone On

To turn your phone on:

- ▶ Press **END**.

Once your phone is on, it may display “Looking for service...,” which indicates that your phone is searching for a signal. When your phone finds a signal, it automatically enters standby mode – the phone’s idle state. At this point, you are ready to begin making and receiving calls.

If your phone is unable to find a signal after 15 minutes of searching, a Power Save feature is automatically activated. When a signal is found, your phone automatically returns to standby mode.

In Power Save mode, your phone searches for a signal periodically without your intervention. You can also initiate a search for service by pressing any key (when your phone is turned on).

Tip:

The Power Save feature helps to conserve your battery power when you are in an area where there is no signal.

Turning Your Phone Off

To turn your phone off:

- ▶ Press and hold **END** for two seconds until you see the powering down animation on the display screen.

Your screen remains blank while your phone is off (unless the battery is charging).

Using Your Phone's Battery and Charger

WARNING

Use only Qwest-approved or manufacturer-approved batteries and chargers with your phone. The failure to use a Qwest-approved or manufacturer-approved battery and charger may increase the risk that your phone will overheat, catch fire, or explode, resulting in serious bodily injury, death, or property damage.

Battery Capacity

Your phone is equipped with a Lithium Ion (Li-Ion) battery. It allows you to recharge your battery before it is fully drained. The battery provides up to 3.8 hours of continuous digital talk time.

When there are approximately five minutes of talk time left, the phone sounds an audible alert and then powers down.

Note:

Long backlight settings, searching for service, vibrate mode, browser use, and other variables may affect the battery's talk and standby times.


Tip:

Be sure to watch your phone's battery level indicator and charge the battery before it runs out of power.

Installing the Battery

To install the Li-Ion battery:

1. Insert the battery into the opening on the back of the phone and gently press down.
2. Place the battery cover into the position as indicated in the diagram, and then slide it until you hear it snap into place.

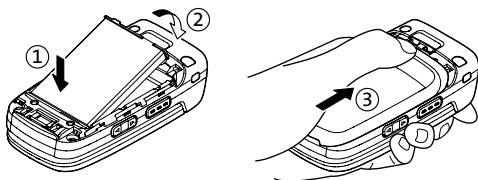


Removing the Battery

WARNING

Do not handle a damaged or leaking Li-Ion battery as you can be burned.

To remove your battery:

1. Make sure the power is off so that you don't lose any stored numbers or messages. Press the battery release latch, and then slide the battery cover and remove it.
2. Use your thumbnail to lift and then remove the battery as indicated in the diagram.

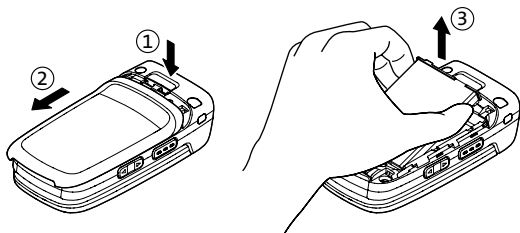

Charging the Battery

Your phone's Li-Ion battery is rechargeable and should be charged as soon as possible so you can begin using your phone.

Keeping track of your battery's charge is important. If your battery level becomes too low, your phone automatically turns off, and you will lose all the information you were just working on. For a quick check of your phone's battery level, glance at the battery charge indicator located in the upper-right corner of your phone's display screen. If the battery charge is getting too low, the battery icon () appears and the phone displays a warning message.

Always use a Qwest-approved or manufacturer-approved desktop charger, travel charger, or vehicle power adapter to charge your battery.

WARNING

Using the wrong battery charger could cause damage to your phone and void the warranty.

Using the Phone Charger

To use the phone charger provided with your phone:

1. Plug the phone charger into a wall outlet.
2. Plug the other end of the phone charger into the charger jack at the bottom of your phone (with the battery installed).
 - Charging when your phone is turned on:
The battery icon appears as follows while charging.
 >  >  > .
 - Charging when your phone is turned off:
The battery icon () appears on the display while charging.

The battery icon turns to  when charging is completed. With the Qwest-approved Li-Ion battery, you can recharge the battery before it becomes completely run down.

Navigating Through Phone Menus

The navigation key on your phone allows you to scroll through menus quickly and easily. The scroll bar at the right of the menu keeps track of your position in the menu at all times.

To navigate through a menu, simply press the navigation key up or down. If you are in a first-level menu, such as **Settings**, you may also navigate to the next or previous first-level menu by pressing the navigation key right or left.

For a diagram of your phone's menu, please see "Your Phone's Menu" on page iii.

Selecting Menu Items

As you navigate through the menu, menu options are highlighted. In the List View, select any numbered option by simply pressing the corresponding number on the phone's keypad. You may also select any item by highlighting it and pressing .

For example, if you want to view your last incoming call:

1. Press  to access the main menu.
2. Select **Call History** by pressing  when using the List View (page 54) or by highlighting it and pressing  when using the Grid View (default setting [page 54]). (It may already be highlighted.)
3. Select **Incoming** by pressing  or by highlighting it and pressing . (If you have received any calls, they are displayed on the screen.)

Note: For the purposes of this guide, the above steps condense into "Select **MENU > Call History > Incoming**."

Backing Up Within a Menu

To go to the previous menu:

- ▶ Press **BACK**.

To return to standby mode:

- ▶ Press **END**.

Displaying Your Phone Number

Just in case you forget your phone number, your phone can remind you.

To display your phone number:

- ▶ Select **MENU** > **Settings** > **Phone Info** > **Phone#/UserID**.
(Your phone number and other information about your phone and account will be displayed.)


Tip: You can also display your phone number through the Contacts menu. Select **MENU** > **Contacts** > **My Name Card**. To send your contact information using Bluetooth, select **Options** (right softkey) > **Send Contact**.

Note: To select menu options (such as **Settings**, above), highlight the option and press **MENU**. (If the menu options are numbered, you may also select an option simply by pressing the corresponding number key.)

Making and Answering Calls

Holding Your Phone

To maximize performance, do not obstruct the upper back portion of your phone where the internal antenna is located while using the phone.

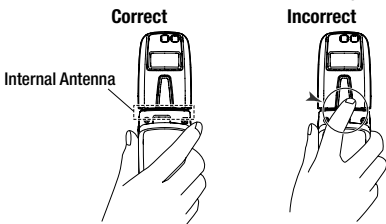

Making Calls

Placing a call from your phone is as easy as making a call from any landline phone. Just enter the number, press **TALK**, and you're on your way to clear calls.

To make a call using your keypad:

1. Make sure your phone is on.
2. Enter a phone number from standby mode. (If you make a mistake while dialing, press **BACK** to erase one digit at a time. Press and hold **BACK** to erase the entire number.)
3. Press **TALK**. (To make a call when you are roaming and Call Guard is enabled, see "Using Call Guard" on page 87.)
4. Press **END** or close the phone when you are finished.

Tip:

To redial your last outgoing call, press **TALK** twice.

When making calls off the home network, always dial using 11 digits (1 + area code + phone number).

You can also place calls from your phone by speed dialing numbers from your Contacts (page 36), using your Call History listings (page 92), and by using Voice-Activated Dialing (page 117).

To place a call with the phone closed:

1. Make sure your phone is on.
 2. Press and hold  on the left side of the phone.
 3. Follow the system prompts. (The call will be made in speakerphone mode, unless you have a headset attached to the phone.)
- ▶ Say the name of your registered Voice Dial entry (see the note below).

Tip:	This function is available only when the Side Key Guard setting is off. (See "Setting the Side Key Guard" on page 67.)
-------------	--

Note:	To use a Voice Dial, you must have stored Voice Dial entries. (See "Programming Voice Dial Tags" on page 118.)
--------------	--

Dialing Options

Dialing options are displayed when you press **Options** (right softkey) after entering numbers in the phone's standby mode.

To select an option, highlight it and press .

- **Abbrev. Dial** to use Ph.Book Match or Prepend feature. (See “Using Abbreviated Dialing” on page 37 and “Setting Abbreviated Dialing” on page 70.)
- **Call** to dial the phone number.
- **Call: Speaker On** to dial the phone number in speakerphone mode.
- **Send Message** to send an SMS Text message (page 182) or a Picture Mail (page 158).
- **Save Phone#** to save the phone number in your Contacts list. (See “Saving a Phone Number” on page 33.)
- **Find** to display Contacts list entries that end with the digits you entered. (See “Finding a Phone Number” on page 34.)
-  **Hard Pause** to insert a hard pause. (See “Dialing and Saving Phone Numbers With Pauses” on page 34.)
-  **2-Sec. Pause** to insert a two-second pause. (See “Dialing and Saving Phone Numbers With Pauses” on page 34.)
- **Hyphen** to insert a hyphen. (Hyphens are generally for visual appeal only; they are not necessary when entering numbers.)

Tip:

To speed dial a phone number, press and hold the appropriate speed dial key (locations 2-9). See “Assigning Speed Dial Numbers” on page 101.

Answering Calls

To answer an incoming call with the phone open:

1. Make sure your phone is on. (If your phone is off, incoming calls go to voicemail.)
2. Press  to answer an incoming call. (Depending on your phone's settings, you may also answer incoming calls by opening the phone or by pressing any number key. See "Setting the Open/Close Flip Option" on page 66 and "Setting Any Key Answer" on page 67 for more information.)

To answer an incoming call with the phone closed:

1. Make sure your phone is on. (If your phone is off, incoming calls go to voicemail.)
2. When your phone rings or vibrates, press and hold the Side Volume key ( ) on the left side of the phone. (The call will be answered in speakerphone mode.)

— or —

Open the phone to use the earpiece.

Note:	If the setting for Open Flip is set to "No Action," opening the phone will not answer the call.
--------------	---

Your phone notifies you of incoming calls in the following ways:

- The phone rings and/or vibrates.
- The LED Indicator flashes.
- The backlight illuminates.
- The screen displays an incoming call message.

If the incoming call is from a number stored in your Contacts, the entry's name is displayed. The caller's phone number may also be displayed, if available.

When receiving a call, the following options are also displayed by pressing

Options (right softkey). To select an option, highlight it and press .

- **Call Guard** to answer the call when you are in roaming mode.
(See "Using Call Guard" on page 87.)
- **Answer** to answer the call.
- **Answer: Speaker** to answer the call in speakerphone mode.
- **Answer on Hold** to put the call on hold.
- **Screen Call** to answer the call by using a prerecorded announcement.
(See "Setting Up Screen Call" on page 123.)
- **Quiet Ringer** to mute the ringer (if available).

Tip:

Your phone offers additional ways to answer calls. (See page 65 for Auto-Answer and page 67 for Any Key Answer.)

Answering a Roam Call With Call Guard Enabled

Call Guard is an option that helps you manage your roaming charges when making or receiving calls while outside the home network. Please see Section 2D: Controlling Your Roaming Experience for more information about roaming.

To answer a call when you are roaming and Call Guard is enabled:

1. Press **TALK**.
2. Press **1** to proceed while the pop-up message is displayed.

Note: When your phone is off, incoming calls go directly to voicemail.

Using the Speakerphone

The speakerphone feature lets you hear audio through the speaker and talk without holding the phone.

To turn the speakerphone on during a call:

- ▶ Press **SPEAKER**.
- or –
- Press **Options** (right softkey) > select **Speaker On**.

To turn the speakerphone off during a call:

- ▶ Press **SPEAKER**.
- or –
- Press **Options** (right softkey) > select **Speaker Off**.

Tip: You can adjust the speakerphone volume using the Side Volume key or the navigation key.

WARNING Do not place the speaker near your ear when in use as it may damage your hearing.

Ending a Call

To disconnect a call when you are finished:

- ▶ Close the phone or press **END**.

Note: If the setting for Close Flip is not set to “End Call,” closing the phone will not end the call. (See “Setting the Open/Close Flip Option” on page 66.)

Changing the Ringer Volume

To change the ringer volume, press the Side Volume key when the phone is open and in standby mode.

Note: To change the ringer volume from the main menu, see “Adjusting the Phone’s Volume Settings” on page 50.

Adjusting Volume During a Conversation

When you need to adjust the receiver volume during a conversation, use the Side Volume key, or press the navigation key up or down while a call is in progress.

Muting a Call

There are times when it’s necessary to mute a call so that your caller does not hear you or certain background noises.

To mute a call:

- ▶ Press **Options** (right softkey) > select **Mute**. (When the phone is muted, “Muted” appears on the display.)

To unmute a call:

- ▶ Press **Options** (right softkey) > select **Unmute**.

Tip: During a call, both the left softkey and the Side Camera key function as the **Mute** key. Press either one to mute the phone’s microphone for privacy. Press it again to unmute the phone.

Missed Call Notification

When an incoming call is not answered, the Missed Call log is displayed on your screen.

To display the Missed Call entry from the notification screen:

- ▶ Press **Call** (left softkey).

To display a Missed Call entry from standby mode:

1. Select  > **Missed Alerts**.
2. Highlight the entry you wish to view and press .

Calling Emergency Numbers

You can place calls to 911 (dial    **TALK**), even if your phone is locked or your account is restricted.

Note: When you place an emergency call, your phone automatically enters Emergency mode.

During an emergency call, select **Options** (right softkey) to display your options. To select an option, highlight it and press .

- **Speaker On** to activate speakerphone mode. (If you are in speakerphone mode, the option is displayed as **Speaker Off** to deactivate.)
- **Unlock Phone** to unlock your phone (appears only if the phone is locked).
- **Close Menu** to close the pop-up menu (appears only if the phone is unlocked).

Tip: Select **My Phone** (left softkey) to display your phone number during an emergency call.

To exit Emergency mode:

1. Press **END** to end a 911 call.
2. Select **Options** (right softkey) to display the options menu.
3. Highlight **Exit Emergency** and press **MENU OK**.

Note:

When you are in Emergency mode, you can exit only from the options menu.

To select Emergency mode options:

1. Press **END** to end a 911 call.
2. Select **Options** (right softkey).
 - **Call 911** to call 911.
 - **Call 911: Spkr.** to call 911 in speakerphone mode.
 - **Exit Emergency** to exit Emergency mode.
3. Highlight an option and press **MENU OK**.

Enhanced 911 (E911) Information

This phone features an embedded Global Positioning System (GPS) chip necessary for utilizing E911 emergency location services where available.

When you place an emergency 911 call, the GPS feature of your phone begins to seek information to calculate your approximate location. Depending on several variables, including availability and access to satellite signals, it may take up to 30 seconds or more to determine and report your approximate location.

IMPORTANT

Always report your location to the 911 operator when placing an emergency call. Some designated emergency call takers, known as Public Safety Answering Points (PSAPs) may not be equipped to receive GPS location information from your phone.

In-Call Options

Selecting **Options** (right softkey) during a call displays a list of features you may use during the course of a call. To select an option, press the corresponding keypad number or highlight the option and press .

The following options are available through the Options menu:

- **Flash** to answer an incoming Call Waiting call or to connect a third party during Three-Way Calling.
- **Mute** or **Unmute** to mute or reactivate your phone's microphone.
- **Transfer Audio** to switch the call to an external device (if applicable).
- **Speaker On** or **Speaker Off** to activate or deactivate speakerphone mode.

WARNING

Because of higher volume levels, do not place the phone near your ear during speakerphone use.

- **Three-Way Call** to call a third party.
- **Missed Alerts** to display missed notifications.
- **Call History** to access the Call History menu. (See "Managing Call History" on page 89.)
- **Contacts** to access the Contacts menu. (See "Using Contacts" on page 95.)
- **Messaging** to access the Messaging menu. (See "Accessing Messaging" on page 195.)
- **Tools** to access the Tools menu. (See "Using the Phone's Calendar and Tools" on page 104.)
- **Settings** to access the Settings menu. (See "Controlling Your Phone's Settings" on page 45.)

Note:

The **Flash** menu appears only for Call Waiting and Three-Way Calling. The Three-Way Call menu does not appear in Roaming areas.

End-of-Call Options

To display the following options, press **Options** (right softkey) within 10 seconds after disconnecting a call. To select an option, highlight it and press .

- **Call Again** to dial the phone number.
- **Call:Speaker On** to dial the phone number in speakerphone mode.
- **Send Message** to send a Text or Picture Mail message.
- **Save Phone#** to save the phone number in your Contacts list.
 - **Go to Ph. Book** is displayed when the number is already in your Contacts list. (See “Saving a Phone Number” below.)
- **Rename** to change the current entry’s name to Caller ID name (if applicable).

Note:	The End-of-Call options are not displayed for calls identified as No ID or Private.
--------------	---

Saving a Phone Number

Your phone can store up to 500 phone numbers in up to 300 Contacts entries. (An entry may contain up to seven numbers.) Each entry’s name can contain 32 characters. Your phone automatically sorts the Contacts entries alphabetically. (For more information, see Section 2F: Using Contacts on page 95.)

To save a number from standby mode:

1. Enter a phone number.
2. Press **Options** (right softkey) > **Save Phone#**.
3. Select from the following entry modes:
 - **New Name** to enter a new name.
 - **From Ph. Book** to select a name from the Contacts entry list.
4. Select a label and press .
5. Press **Save** (left softkey).
6. Press **Done** (left softkey) to return to standby mode.

Finding a Phone Number

You can search Contacts entries for phone numbers that contain a specific string of numbers.

To find a phone number:

1. Enter the last four or more digits of the number in standby mode. (The more numbers you enter, the more specific the search becomes.)
2. Select **Options** (right softkey) > **Find**. (The Contacts entries matching the entered numbers will be displayed.)
3. To display the Contacts entry that contains the phone number you entered, highlight the entry and press . To dial the number, press .

Dialing and Saving Phone Numbers With Pauses

You can dial or save phone numbers with pauses for use with automated systems, such as voicemail or credit card billing numbers.

There are two types of pauses available on your phone:

-  **Hard Pause** sends the next set of numbers when you press .
-  **2-Sec. Pause** automatically sends the next set of numbers after two seconds.

Note:	You can have multiple pauses in a phone number and combine two-second and hard pauses.
--------------	--

To dial or save phone numbers with pauses:

1. Enter the phone number.
2. Select **Options** (right softkey) and select either **Hard Pause** or **2-Sec. Pause**. (Hard pauses are displayed as a “P” and two-second pauses as a “T.”)
3. Enter additional numbers.
4. Press **TALK** to dial the number.

– or –

To save the number in your **Contacts**, select **Options** (right softkey) **> Save Phone#**.

Note:	When dialing a number with a hard pause, press TALK to send the next set of numbers.
--------------	---

Plus (+) Code Dialing

When placing international calls, you can use Plus Code Dialing to automatically enter the international access code for your location (for example, 011 for international calls made from the United States). This feature is subject to network availability.

To make a call using Plus Code Dialing:

1. Press and hold **+ 0** until a “+” is displayed on your phone display.
2. Dial the country code and phone number you’re calling, and press **TALK**. (The access code for international dialing will automatically be dialed, followed by the country code and phone number.)

Dialing From the Contacts List

To dial directly from a Contacts entry:

1. Select  > **Contacts** > **Find/Add Entry**.

Shortcut:

From the standby mode, select **Contacts** (right softkey) to list entries.

2. Highlight the entry you want to call and press  to dial the entry's default phone number.

— or —

To dial another number from the entry, highlight the name and press , and then highlight the number you wish to call and press .

Tip:

You can also place a call by selecting **Options** (right softkey) > **Call** or **Call: Speaker On**.

Note:

The icons next to each entry represent the Contacts labels (for example, Mobile, Home, Work, etc.). A triangle next to an icon means there is another label for the entry. Press the navigation key right or left from the Contacts list to select a label.

Using Speed Dialing

With this feature, you can dial your favorite entries using one keypress for locations 2–9. (See “Assigning Speed Dial Numbers” on page 101.)

To use speed dial for voice calls:

- ▶ From standby mode, press and hold the appropriate key for approximately two seconds.
- or —
- ▶ From standby mode, press the appropriate key and press .

The display confirms that the number has been dialed when it shows “Connecting...”.

To use speed dial for Ready Link calls:

- ▶ From standby mode, press the appropriate key and then press **---**. (See “Assigning Speed Dialing for Ready Link Entries” on page 143.) The display confirms that the number has been dialed when it shows “R-Link calling...”

Note: Speed dialing is not available when you are roaming; when you are roaming off the home network, you must always dial using 11 digits (1 + area code + number).

Using Abbreviated Dialing

Abbreviated Dialing is similar to speed dialing. You can use either of the following abbreviated dialing features.

- **Ph.Book Match** allows you to retrieve any number saved in your Contacts by entering only the last three to six digits of the number, and automatically dials the retrieved number. (See “To activate the Ph. Book Match feature” on page 70.)
- **Prepend** allows you to prepend predefined numbers (first five or six digits) to the last four or five digits you enter, and then automatically dials the number. (See page 70 to register a prepend number and activate the Prepend feature.)

To place a call using Ph.Book Match Abbreviated Dialing:

1. Enter the last three to six digits of a contact's phone number.
2. Press **TALK**. If there is more than one matched number in your Contacts list, the Abbrev. Dial list is displayed.
3. Select the name you want to call from the list, and then press **TALK** to place a call.

Note: When Ph.Book Match is set to Enable and a number is saved in Contacts (regardless of whether Prepend is enabled or disabled), you can display the number by entering its last three to six digits.

To place a call using Prepend Abbreviated Dialing:

1. Enter the last four or five digits of the number.
2. Press **TALK**.

Note:

When Prepend is set to Enable and Ph.Book Match is set to Disable, you can display the 10-digit number (including the predefined prepend number) by entering the last four or five digits of the number.

The Prepend feature is available when all of following conditions are met:

- Prepend is set to Enable.
- A prepend number has been predefined.
- The combined total (prepend number plus the digits you enter) is 10 digits.

When both Ph.Book Match and Prepend are set to Enable and a number is not saved in Contacts, you can display the 10-digit number (including the five- or six-digit prepend number) by entering the last four or five digits of the number.

Tip:

You can also place a call by pressing **Options** (right softkey) > **Abbrev. Dial** after step 1 above for either Ph.Book Match Abbreviated Dialing or Prepend Abbreviated Dialing.

Entering Text

Selecting a Character Input Mode

Your phone provides convenient ways to enter words, letters, punctuation, and numbers whenever you are prompted to enter text (for example, when adding a Contacts entry or when using Sprint Picture Mail and SMS Text Messaging).

To change the character input mode:

1. When you display a screen where you can enter text, press **Mode** (right softkey) to change the character input mode.
2. Select one of the following options:

Note:

The menus displayed vary according to the entry field. If you see triangles on the right of the menu, you can press the right and left navigation keys to switch between related menus.

- **T9 Word** to enter characters using predictive T9 Text Input. (See page 40.)
- **Alphabet** to enter characters by using Alphabet mode. (See page 43.)
- **SYMBOL** to enter symbols.
- **SMILEYS** to enter smile pictures.
- **Emoticons** to enter “emoticons.”
- **Web Shortcut** to enter Web shortcuts (for example, www., http://, or .com).
- **Preset Msgs** to enter preset messages. (See page 44.)
- **Recent Msgs** to enter messages used recently.
- **Paste List** to paste copied or cut list (if applicable).
- **NUMBER** to enter numbers.
- **Signature** to enter your signature. (See page 61.)

Note: Preset Messages, Recent Messages, and Emoticons are available only when composing text messages.

- **Select Lang.** to select the language (English or Spanish).
- **Erase All** to erase all text (if applicable).
- **Select Text** to select stored text for copying or cutting.
- **Add Word** to store words that you use frequently. (See page 41.)
- **Text Options** to display the Text Entry settings menu.

Tip: When entering text, press **Shift*** to change the capitalization style (**Abc > ABC > abc**).

Entering Characters Using T9 Text Input

T9 Text Input lets you enter text in your phone by pressing keys just once per letter. (To select the **T9 Word** mode when entering text, see “Selecting a Character Input Mode” on page 39.)

T9 Text Input analyzes the letters you enter using an intuitive word database and creates a suitable word. (The word may change as you type.)

To enter a word using T9 Text Input:

1. Select the **T9 Word** character input mode. (See “Selecting a Character Input Mode” on page 39.)
2. Press the corresponding keys once per letter to enter a word. (For example, to enter the word “Bill,” press **ABC 2** **GH 4** **JKL 5** **JKL 5**.) (If you make a mistake, press **BACK** to erase a single character. Press and hold **BACK** to erase an entire word.)

To accept a word and insert a space, press **Space #** or **MENU OK**.

Tip: In order to insert a space by pressing **MENU** during the step above, the Auto-Space setting must be on. (See “Setting Text Entry Options” on page 69.)

Adding a Word to the T9 Database

If a word you want to enter is not displayed as an option when you are using T9 Text Input, you can add it to the database.

To add a word to the T9 Text Input database:

1. Select the **Add Word** input mode. (See “Selecting a Character Input Mode” on page 39.)
2. Enter the word using Alphabet mode (multi-tap text entry) and press **Save** (left softkey). (See “Entering Characters Using Alphabet Mode” on page 43.) The word will appear as an option the next time you scroll through options during T9 Text Input.

To edit or erase the words you have added:

1. Select  > **Settings** > **Others** > **Text Entry** > **My Words**.
2. Select a word and press **Options** (right softkey).
3. To select an option, highlight it and press .
 - **Edit** to edit a word in My Words.
 - **Erase** to erase a word in My Words.

Customizing the T9 Settings

To customize the T9 Settings:

1. Select  > **Settings** > **Others** > **Text Entry** > **T9 Settings**.
2. Select an option and press .
 - **Word Prediction** to automatically display the word that may follow the current text input.
 - **Word Completion** to show the completed words that match the keys you have entered without entering the whole word.
 - **Word Scan** to allow T9 text input to recognize words by searching Phone Book and messages.
 - **Word Choice List** to display the word choice list.
 - **Show aft enter** to select when (after 1 -3 digits) to display the word choice list. The word choice list will be displayed based on the number of digits you selected.
 - **Show after wait** to select how many seconds the phone should wait to display the word choice list.

Setting the Default Input Mode

To set the default input mode:

1. Select  > **Settings** > **Others** > **Text Entry** > **Default Input**.
2. Select an option and press .
 - **T9 Word** to set T9 word as the initial entry mode.
 - **Alphabet** to set alphabet as the initial entry mode.
 - **Retain Mode** to set the retain mode on to retain the previous entry mode.

For more information about T9 Text Input, visit the Tegic Web site at www.T9.com.

Entering Characters Using Alphabet Mode

To enter characters using Alphabet mode (multi-tap text entry):

1. Select the **Alphabet** mode. (See “Selecting a Character Input Mode” on page 39.)
2. Press the corresponding keys repeatedly until the correct letter appears. (For example, to enter the word “Bill,” press **ABC 2** twice, **GHI 4** three times, **JKL 5** three times, and then press **JKL 5** three times again.) (If you make a mistake, press **BACK** to erase a single character. Press and hold **BACK** to delete an entire entry.)

By default, the first letter of an entry is capitalized and the following letters are lowercased. After a character is entered, the cursor automatically advances to the next space after two seconds or when you enter a character on a different key.

Characters scroll in the following order:

Key	English Sequence	
	Upper Case	Lower Case
[Punctuation] 1	., @ 1 ? ! * # /	
ABC 2	A B C 2	a b c 2
DEF 3	D E F 3	d e f 3
GHI 4	G H I 4	g h i 4
JKL 5	J K L 5	j k l 5
MNO 6	M N O 6	m n o 6
PQRS 7	P Q R S 7	p q r s 7
TUV 8	T U V 8	t u v 8
WXYZ 9	W X Y Z 9	w x y z 9
+ 0	0	
Space #	Space	
Shift *	One-character- shifted	Caps Lock Unshifted

Tip:

The beginning of the word after the space is changed to upper/lower case depending on shift mode. You can change the shift mode by pressing **[shift*]**.

Entering Numbers, Symbols, Smileys and Preset Messages

To enter numbers:

- ▶ Select the **NUMBER** mode and press the appropriate key.
(See “Selecting a Character Input Mode” on page 39.)

To enter symbols:

- ▶ Select the **SYMBOL** mode. (See “Selecting a Character Input Mode” on page 39.) To enter a symbol, press the appropriate key indicated on the display.

To enter “emoticons” (smileys):

- ▶ Select the **Emoticons** mode or **SMILEYS** mode and press the appropriate key. (See “Selecting a Character Input Mode” on page 39.)

To enter preset messages:

1. Select the **Preset Msgs** mode. (See “Selecting a Character Input Mode” on page 39.)
2. Scroll to a preprogrammed message and press .

Note:

Preset messages make composing text messages even easier by allowing you to enter preset messages, such as “Meet me at,” “Let’s get lunch,” or a customized message of your own. (For more information on preset messages, please see “Managing Preset Messages” on page 60.)

Controlling Your Phone's Settings

In This Section

- ◆ **Sound Settings** (page 46)
 - ◆ **Display Settings** (page 52)
 - ◆ **Location Settings** (page 58)
 - ◆ **Messaging Settings** (page 59)
 - ◆ **Airplane Mode** (page 62)
 - ◆ **TTY Use** (page 63)
 - ◆ **Phone Setup Options** (page 64)
-

Using the available menu options, you can customize your phone to sound, look, and operate just the way you want it to. This section describes how you can change your phone's settings to best suit your needs. Take a few moments to review these options and to adjust or add settings that are right for you.

Sound Settings

Ringer Types

Ringer types help you identify incoming calls and messages. You can assign ringer types to individual Contacts entries, types of calls, and types of messages.

- **Preprogrammed Ringers** include a variety of standard ringer types and familiar music.
- **Vibrating Ringer** alerts you to calls or messages without disturbing others.
- **Downloaded Ringers** can be downloaded right to your phone. (See “Downloading Content” on page 197.)

Selecting Ringer Types for Voice Calls

Your phone provides a variety of ringer options that allow you to customize your ring and volume settings. These options allow you to identify incoming calls by the ring.

To select a ringer type for voice calls:

1. Select  > **Settings > Sounds > Ringer Type > Incoming Calls.**
2. Select **With Caller ID**, **No Caller ID**, or **Roaming**. (A list of available ringer types will be displayed.)
3. Select a ringer type (**Single Tones**, **Ring Tones**, or **Melodies**) or **My Content**, and press .
4. Use your navigation key to scroll through the available ringers. A sample ringer will sound as you highlight each option.
5. Press  to assign a ringer.

Selecting Ringer Types for Messages

To select a ringer type for messages:

1. Select  > **Settings** > **Sounds** > **Ringer Type** > **Messaging**.
2. Select **Text** or **Picture Mail**.
3. Select a ringer type (**Single Tones**, **Ring Tones**, or **Melodies**) or **My Content**, and press .
4. Use your navigation key to scroll through the available ringers. A sample ringer will sound as you highlight each option.
5. Press  to assign a ringer.

Selecting Ringer Types for Ready Link Calls

To select a ringer type for Ready Link calls:

1. Select  > **Settings** > **Sounds** > **Ringer Type** > **Ready Link**.
2. Select **Ready Link Calls**, **R-Link Missed**, or **R-Link FloorTone**. (A list of available ringer types will be displayed.)
3. Select a ringer type (**Single Tones**, **Ring Tones**, or **Melodies**) or **My Content**, and press .
4. Use your navigation key to scroll through the available ringers. A sample ringer will sound as you highlight each option.
5. Press  to assign a ringer.

Note:	Downloaded ringers are not available for R-Link Missed and R-Link Floor Tone.
--------------	---

Selecting Ringer Types for Voicemail or Calendar/Alarm

To select a ringer type for voicemail or calendar/alarm:

1. Select  > **Settings > Sounds > Ringer Type> Voicemail or Calendar/Alarm.**
2. Select a ringer type (**Single Tones**, **Ring Tones**, or **Melodies**) or **My Content**, and press .
3. Press , and then use your navigation key to scroll through the available ringers. A sample ringer will sound as you highlight each option.
4. Press  to assign a ringer.

Selecting a Tone Length

Your phone offers two options for selecting the audible tones accompanying a keypress. (Longer tone lengths may be better for tone recognition when dialing voicemail or other automated systems.)

To select a tone length:

1. Select  > **Settings > Sounds > Others > Tone Length.**
2. Select **Short** or **Long**.

Setting a Start-up/Power-off Tone

To set a start-up/power-off tone:

1. Select  > **Settings > Sounds > Others.**
2. Select **Start-up Tone** or **Power-off Tone**.
3. Scroll to a tone and press .

Using Voice Prompt

This feature allows you to hear voice prompts when using Voice Memo, Screen Call setting, etc. (default setting is on).

To enable or disable voice prompts:

1. Select  > **Settings** > **Sounds** > **Others** > **Voice Prompt**.
2. Select **On** or **Off**.

Tip:

When the ringer volume is set to "Silence All," voice prompts cannot be heard.

Setting Up Key Press Echo

With this feature, you can hear a voice echo the corresponding keys you pressed on the keypad. This feature is available when you are in standby mode.

To turn Key Press Echo on or off:

1. Select  > **Settings** > **Sounds** > **Others** > **Key Press Echo**.
2. Select **On** or **Off**.

Adjusting the Phone's Volume Settings

You can adjust your phone's volume settings to suit your needs and your environment.

To adjust the ringer and key volume:

1. Select  > **Settings > Sounds > Volume**.
2. Select **Ringer, Advanced Ring., Receiver, Application, StartUp/PwOff, or Key Beep**.
3. Using the navigation key, choose a volume level and press **Done** (left softkey).

To adjust the earpiece or speaker volume:

1. Select  > **Settings > Sounds > Volume > Receiver**.
2. Select either **Earpiece** or **Speaker**.
3. Using the navigation key, choose a volume level and press .

Tip:

You can adjust the ringer volume in standby mode (or the earpiece volume during a call) by using the Side Volume key.

To adjust the application volume:

This option allows you to select a volume level for downloaded data and browser.

1. Select  > **Settings > Sounds > Volume > Application**.
2. Press , choose a volume level, and press .

Alert Notification

Your phone can alert you with an audible tone when you change service areas, once a minute during a voice call, when there are incoming or missed Ready Link calls, or when your network signal is fading.

To set alerts:

1. Select  > **Settings > Sounds > Alerts**.
2. Select **Service, Ready Link, Voicemail, Messaging, Minute Beep**, or **Signal Fade** and press .
3. Use your navigation key to select a setting and press .

Silence All

There may be times when you need to silence your phone entirely. The phone's Silence All option allows you to mute all sounds without turning your phone off.

To activate Silence All:

- ▶ With the phone open, press the Side Volume key () down repeatedly until "Silence All" appears.

Note:

You can also activate Silence All using the main menu:

1. Select **MENU > Settings > Sounds > Volume > Ringer**.
2. Press the navigation key down until Silence All appears on the display and press **Done** (left softkey).

To deactivate Silence All:

- ▶ With the phone open, press the Side Volume key () up repeatedly to select a volume level.

Display Settings

Changing the Text Greeting

The text greeting can be up to 15 characters and is displayed on your phone's screen in standby mode. You may enter your own custom greeting or choose the preset greeting.

To enter your own custom greeting:

1. Select **MENU OK** > **Settings** > **Display** > **Greeting** > **Custom**.
2. Enter a custom greeting using your keypad and press **MENU OK**. (See "Entering Text" on page 39.) (To erase the existing greeting one character at a time, press **BACK**. To erase the entire greeting, press and hold **BACK**.)

To display the preset greeting:

- ▶ Select **MENU OK** > **Settings** > **Display** > **Greeting** > **Qwest**.

Changing the Backlight Time Length

The backlight setting lets you select how long the display screen and keypad remain backlit after any keypress is made.

To change the Main LCD or Sub LCD backlight setting:

1. Select **MENU OK** > **Settings** > **Display** > **Backlight**.
2. Select **Main LCD** or **Sub LCD**.
3. Select **Always On**, **Dim Only**, or a preset length of time.

Note:

The Always On setting returns to the previous value the next time you turn on the phone.

To change the Keypad backlight setting:

1. Select **Key** after step 1 of “To change the Main LCD or Sub LCD backlight setting:” on the previous page.
2. Select **Always Off** or a preset length of time.

Note: Long backlight settings affect the battery's talk and standby times.

Changing the Display Screen Animation

Your new phone offers options for what you see on the display screen during various phone functions.

To change the animation display:

1. Select  > **Settings > Display > Animation**.
2. Select **Standby, Outgoing Calls, or Service Search**.
3. Select **Set**, and then select an option (**Preset, My Content, -Get New, or Off**), and press .
 - For standby, you can select **Time** to set the animation starting time.

Changing the Display for Incoming Calls

You can set the color or downloaded image to be shown on the Incoming Calls display.

To change the incoming calls display:

1. Select  > **Settings > Display > Incoming Calls**.
2. Press , select an option (**Preset, My Content, -Get New, In Camera, Saved to Ph., or Off**), and press .
3. Select a color or an image, press , and then press **OK** (left softkey) to assign.

Changing the Display for Area Name

This feature enables you to show the state of the phone number you are calling or are called from when the number is not registered in your Contacts list. For example, a call to or from 213-555-5555 will display “California.”

To set your area name display:

1. Select  > **Settings > Display > Others > Match AreaCode.**
2. Select **On** or **Off.**

Note:

This feature is available only when the phone number has 10 digits, or 11 digits beginning with 1, and matches an area code.

The area name is displayed on the Main LCD. It will not be displayed when the number of an incoming call is saved in your Contacts list.

Changing the Phone's Menu Style

Your phone allows you to choose how the main menu items are displayed on your display screen.

To select the display's menu style:

1. Select  > **Options** (right softkey) > **Change View.**
2. Select **Grid View** or **List View.**
 - **Grid View** to view each main menu item as an animated single-screen icon.
 - **List View** to view the main menu as a list.

Changing the Clock/Calendar Display for Standby Mode

Select from among a variety of items to be displayed in standby mode.

To set the clock/calendar display for standby mode:

1. Select  > **Settings** > **Display** > **Clock/Calendar**.
2. Select **Digital Clock**, **World Clock**, **Calendar**, **Default**, or **Off** and press .
3. Press  to save the setting to follow each system prompt or when confirming the preview display.

Power Save Mode

This feature helps conserve your battery power by setting the Main LCD, Sub LCD, and keypad backlights to “Dim Only,” the Main LCD sleep mode to “after 30 sec.” and the Sub LCD sleep mode to “after 5 sec.”.

To set this feature:

1. Select  > **Settings** > **Display** > **PWRsave Mode**.
2. A message appears. Press **OK** (left softkey) to continue.
3. Select **On**. (Select **Off** to deactivate this feature.)

Changing the Text Font Size

This setting allows you to adjust the display appearance when entering text (for example, when writing a message or when adding a Contacts entry) or when viewing a message.

To change the text input font:

1. Select  > **Settings > Display > Others > Font Size**.
2. Select **View** or **Input**.
 - **View** to select **Main LCD** (then **Messaging** or **Browser**) or **Sub LCD** (then **Time/Date** or **Names/Phone#s**).
 - **Input** to select **Phone#s**, **Messaging**, or **Others**.
3. Select a font size and press .

Tip:

From the font preview display, select a font size by pressing the navigation key right or left.

Changing the Background

You can customize your phone display's appearance by selecting a color scheme to reflect your personality.

To change the display's background:

1. Select  > **Settings > Display > Background**.
2. Select **Peacock**, **Strawberry**, or **High Contrast** and press .

Setting Return to Standby Mode

This feature allows you to select the way to return to standby mode.

To set this feature:

1. Select  > **Settings** > **Display** > **Others** > **Return to Idle**.
2. A message appears. Press **OK** (left softkey) to continue.
3. Select **Automatically** or **End Key**.
 - **Automatically** to return to standby mode automatically when no key is pressed for 30 seconds.
 - **End Key** to return to standby mode by pressing .

Note: **End Key** setting affects the battery's talk and standby times.

Sleep Mode

This feature helps conserve your battery power by restricting the display.

To set sleep mode:

1. Select  > **Settings** > **Display** > **Others** > **Sleep Mode**.
2. Select **Main LCD** or **Sub LCD**.
3. Select a sleep mode interval and press . (Select **Off** to deactivate this feature.)

Location Settings

Your phone is equipped with a Location feature for use in connection with location-based services.

The Location feature allows the network to detect your position. Turning Location off will hide your location from everyone except 911.

Note: Turning Location on will allow the network to detect your position using GPS technology, making some applications and services easier to use. Turning Location off will disable the GPS location function for all purposes except 911, but will not hide your general location based on the cell site serving your call. No application or service may use your location without your request or permission. GPS-enhanced 911 is not available in all areas.

To enable your phone's Location feature:

1. Select  > **Settings** > **Location**. (The Location disclaimer is displayed.)
2. Read the disclaimer and press **OK** (left softkey).
3. Select **On** or **Off**.

When the Location feature is on, your phone's standby screen will display the  icon. When Location is turned off, the  icon will be displayed.

Messaging Settings

Staying connected to your friends and family has never been easier. With your phone's advanced messaging capabilities, you can send and receive many different kinds of messages. (For more information, see "Using SMS Text Messaging" on page 182, "Accessing Messaging" on page 195 and "Sending Sprint Picture Mail" on page 158.)

Your phone's messaging settings make text messaging even faster and easier by letting you decide how you would like to be notified of new messages, create a signature with each sent message, and create your own preset (canned) messages, to name just a few.

Setting the Message Notification Display

When you receive a message, your phone notifies you by displaying an icon on your display screen. You can also choose to be notified with a message notification on your display screen.

To set the message notification display:

1. Select  > **Settings** > **Messaging** > **Notification**.
2. Select **Msgs and Icon** or **Icon Only**.

Managing Preset Messages

Your phone is loaded with 20 preset messages, in English and in Spanish, to help make sending text messages faster and easier. These messages, such as “Where are you?,” “Let’s get lunch,” and “Meet me at,” can be customized or deleted to suit your needs.

To edit a preset message:

1. Select  > **Settings** > **Messaging** > **Preset Msgs**. (The list of preset messages is displayed.)
2. Select the message you want to edit and press .
3. Use your keypad to edit the message and press **OK** (left softkey) or  to save your changes. (“Preset Message Saved” will be displayed.)
 - To reset all messages, press **Options** (right softkey) and select **Reset All Msgs** during step 2 above.

To change the language of the preset messages:

1. Follow the steps in 1 above.
2. Select **Options** (right softkey) > **Select Lang**.
3. Select **English** or **Spanish**.

Note:	For information on editing text, see “Entering Text” on page 39.
--------------	--

Adding a Customized Signature

Each message you send can have a customized signature to reflect your personality.

To add a customized signature to each sent message:

1. Select **MENU** > **Settings** > **Messaging** > **Text** > **Signature**.
2. Press **MENU**, and then select **On**.
3. Select **Text**, enter your signature, and press **OK** (left softkey). (See “Entering Text” on page 39.)
4. Press **Save** (left softkey) to save your signature.

Tip:

You can insert your registered signature even when your signature setting is off. Press **Mode** (right softkey) and select **Signature** while composing your message.

Setting the Drafts Alert for Text Messaging

Drafts Alert gives you a reminder when you have unsent messages waiting in the drafts folder.

To set Drafts Alert:

1. Select **MENU** > **Settings** > **Messaging** > **Text** > **Drafts Alert**.
2. Select **On**.

Airplane Mode

Airplane Mode allows you to use many of your phone's features, such as Games and Voice Memos, when you are in an airplane or in any other area where making or receiving calls or data is prohibited. When your phone is in Airplane Mode, it cannot send or receive any calls or access online information.

To set your phone to Airplane Mode:

1. Select  **> Settings > Others > Airplane Mode.**
(The Airplane Mode disclaimer is displayed.)
2. Read the disclaimer and press .
3. Select **On** or **Off**.

While in Airplane Mode, your phone's standby screen will display "Phone Off."



TTY Use

A TTY (also known as a TDD or Text Telephone) is a telecommunications device that allows people who are deaf, hard-of-hearing, or who have speech or language disabilities to communicate by telephone.

Your phone is compatible with select TTY devices. Please check with the manufacturer of your TTY device to ensure that it supports digital wireless transmission. Your phone and TTY device will connect via a special cable that plugs into your phone's headset jack. If this cable was not provided with your TTY device, contact your TTY device manufacturer to purchase the connector cable.

When establishing your wireless service, please call Qwest via the state Telecommunications Relay Service (TRS) by first dialing

 . Then provide the state TRS with this number: 866-727-4889.

To turn TTY Mode on or off:

1. Select  > **Settings** > **Others** > **TTY**.
(An informational message is displayed.)
2. Press  or **OK** (left softkey) to continue.
3. Select **Enable** to turn TTY mode On.

— or —

Select **Disable** to turn TTY mode Off.

Note:

In TTY Mode, your phone will display the TTY access icon.

If TTY mode is enabled, the audio quality of non-TTY devices connected to the headset jack may be impaired.

WARNING

911 Emergency Calling

Qwest recommends that TTY users make emergency calls by other means, including Telecommunications Relay Services (TRS), analog cellular, and landline communications. Wireless TTY calls to 911 may be corrupted when received by public safety answering points (PSAPs), rendering some communications unintelligible. The problem encountered appears related to TTY equipment or software used by PSAPs. This matter has been brought to the attention of the FCC, and the wireless industry and the PSAP community are currently working to resolve this.

Phone Setup Options

My Favorites

Your phone offers you the option of assigning a shortcut to a favorite or often-used function. Selecting **Favorites** (left softkey) in standby mode will launch your personally designated shortcut.

To assign your shortcut:

1. Select **Favorites** (left softkey) to display the My Favorites list.
2. Highlight **<Add Favorite>** and press .
3. Select one of the following options.
 - **Contact** to display stored Contacts entries.
 - **My Content** to display downloaded items stored in your phone.
 - **My Pictures** to display thumbnail images stored in your In Camera folder and Saved to Ph. folders.
 - **Web Bookmark** to display your bookmarked sites.
 - **Menu Item** to assign an often-used menu item.
4. Using the navigation key or your keypad, select functions to be assigned to the My Favorites list.
5. Select **Assign** (left softkey) to save.

My favorite list options:

1. From My Favorites list, select **Options** (right softkey).
2. Select an option and press .
 - **Replace** to replace an existing shortcut.
 - **Remove** to remove an existing shortcut.
 - **Remove All** to remove all the existing shortcut.
 - **Help** to display the My Favorite list information.

Auto-Answer Mode

You may set your phone to automatically pick up incoming calls when connected to an optional hands-free car kit or a headset.

To set Auto-Answer mode:

1. Select  > **Settings** > **Others** > **Auto Answer**.
2. Select an option and press .
 - **Hands-free** to answer calls automatically when the phone is connected to a hands-free car kit or a headset (sold separately). Remember, your phone will answer calls in Auto-Answer mode even if you are not present.
 - **Speakerphone** to answer calls automatically in speakerphone mode.
3. Select **5 Seconds**, **15 Seconds**, or **Off**.

Display Language

You can choose to display your phone's onscreen menus in English or in Spanish.

To assign a language for the phone's display:

1. Select  > **Settings** > **Others** > **Language**.
2. Select **English** or **Español**.

Setting the Current Time

To set the current time when you are roaming in an area with no digital network:

1. Select  > **Settings** > **Others** > **Set Time/Date**.
2. Set the current time and date and press .

Note: This feature is available only when you are in an area with no digital network available.

Setting the Open/Close Flip Option

This feature enables you to answer an incoming call by opening the phone or to end a call by closing the phone.

To activate the Open Flip feature:

1. Select  > **Settings** > **Others** > **Open/Close Flip**.
2. Select **Open**.
3. Select **Answer Call**.
 - To deactivate this feature, select **No Action**.

To activate the Close Flip feature:

1. From step 2 above, select **Close**. (You will see a message on the display.)
2. Press **OK** (left softkey) to continue.
3. Select an option from the following and press .
 - **End** to end the call.
 - **Go On (Mute)** to continue the call. Your voice is muted; however, you can hear the caller's voice from the speaker.
 - **Go On (Unmute)** to continue the call. You can hear the caller's voice and speak to the phone to answer.

Note: The Close Flip feature does not apply during Ready Link calls or when you are using the speakerphone, a headset, or a car kit.

Setting Any Key Answer

This feature allows you to answer incoming calls by pressing any key (except **END**, **BACK**, softkeys, and side keys).

To turn any key answer on or off:

1. Select **MENU** > **Settings** > **Others** > **Any Key Answer**.
2. Select **On** or **Off**.

Setting the Side Key Guard

This feature enables you to lock the side keys while the phone is closed.

To turn the Side Key Guard on or off:

1. Select **MENU** > **Settings** > **Others** > **Side Key Guard**.
2. Select **On** or **Off**.
 - **Key Guard** is displayed when the side keys are pressed while the Side Key Guard is enabled.

Note: This feature does not apply when the phone is open.

Setting Navigation Key Shortcuts

You can use the navigation key as a shortcut to access specific menu items directly from standby mode. With this feature, you can reassign the default shortcut to the menu items you choose.

To set the navigation key shortcuts:

1. Select  > **Settings** > **Others** > **Navigation Keys**.
2. Select the navigation key you wish to reassign and press .
3. Using the navigation key or your keypad, select a function.
4. Select **Assign** (left softkey) to save.

Setting Text Entry Options

To set your text entry options:

1. Select  > **Settings** > **Others** > **Text Entry**.
2. Select an option and press .
 - **Auto-Capital** to turn auto-capitalization on or off.
 - **My Words** to add a word to or edit a word in the T9 database (see page 41).
 - **Inpt Language** to select the language (English or Spanish).
 - **Default Input** to set an initial entry mode (see page 42).
 - **Auto-Space** to turn the auto-spacing on or off after T9 words you enter.
 - **T9 Settings** to customize the T9 settings (see page 42).
 - **Add Word** to store words that you use frequently (see page 41).
 - **Auto-Complete** to turn auto-completion on or off.
 - **Help** to see the T9 instruction page.

Setting Abbreviated Dialing

To activate the Ph. Book Match feature:

1. Select  > **Settings** > **Others** > **Abbrev. Dial**.
2. Select **Ph. Book Match**.
3. Select **Enable**.

To activate the Prepend feature:

1. Select  > **Settings** > **Others** > **Abbrev.Dial**.
2. Select **Prepend**.
3. Select **Enable**.
4. Select **Prepend#**.
5. Enter a five- or six-digit number and press  or **OK** (left softkey).
 - To deactivate this feature, select **Disable** during step 3 above.

Note:

To use the above features, see "Using Abbreviated Dialing" on page 37.

This setting does not apply to 911.

Setting Headset Mode

This feature allows you hands-free phone use. Set the headset mode to Voice Call or Ready Link and press the Turbo Button (the operation button) on the headset to activate useful functions.

To connect the headset:

- ▶ Simply plug the headset into your phone's headset jack.

To set headset mode:

1. Select  > **Settings** > **Others** > **Headset Mode**.
2. Select **Turbo Button**.
3. Select **Voice Calls**, **Ready Link**, or **Off** and press .

To set the ringer sound:

1. Select  > **Settings** > **Others** > **Headset Mode**.
2. Select **Ringer Sound**.
3. Select **Normal** or **Headset Only** and press .

Tip: For an explanation of the Headset Mode setting, press **Info** (right softkey) during step 2 above.

Note: When using the headset, **DO NOT** set the volume too high. Listening at high volume for an extensive period of time may cause hearing loss.

Setting Your Phone's Security

In This Section

- ◆ **Accessing the Security Menu** (page 73)
 - ◆ **Using Your Phone's Lock Feature** (page 73)
 - ◆ **Restricting Calls** (page 75)
 - ◆ **Using Special Numbers** (page 76)
 - ◆ **Erasing Phone Content** (page 77)
 - ◆ **Resetting the Browser** (page 78)
 - ◆ **Resetting Favorites** (page 78)
 - ◆ **Resetting Default Settings** (page 79)
 - ◆ **Resetting Your Phone** (page 79)
 - ◆ **Resetting Your Picture Mail Account** (page 80)
 - ◆ **Security Features for Sprint Vision** (page 80)
 - ◆ **Using the Parental Control Feature** (page 81)
-

By using the security settings on your phone, you receive peace of mind without sacrificing flexibility. This section will familiarize you with your phone's security settings. With several options available, you can customize your phone to meet your personal needs.

Accessing the Security Menu

All of your phone's security settings are available through the Security menu. You must enter your lock code to view the Security menu.

To access the Security menu:

1. Select  > **Settings > Security**.
2. Enter your lock code to display the Security menu.

Tip:

If you can't recall your lock code, try using the last four digits of your wireless phone number or try 0000. If neither of these work, call Qwest Wireless® Repair at 1-888-879-0611.

Using Your Phone's Lock Feature

Locking Your Phone

When your phone is locked, you can only receive incoming calls or make calls to 911 or special numbers. (See "Using Special Numbers" on page 76.)

To lock your phone:

1. From the Security menu, select **Lock Phone > Lock Now**.
— or —
To set your phone to lock the next time it is turned on, select **On Power-up**.
2. Select **Full Lock** or **Exp. Incom.Calls**.
 - **Full Lock** to disable both outgoing and incoming calls.
 - **Exp. Incom.Calls** to disable outgoing calls while allowing incoming calls.

Unlocking Your Phone

To unlock your phone:

1. From standby mode, select **Unlock** (left softkey).
2. Enter your lock code.

Lock Services

With this feature, you can choose to restrict access to data services, incoming and outgoing voice calls, and Ready Link calls.

To activate lock services:

1. From the Security menu, select **Others > Lock Services**.
2. Select **Voice Calls**, **Data** or **Ready Link**.
3. Select **Locked**. (Select **Unlocked** to deactivate this feature.)

Changing the Lock Code

To change your lock code:

1. From the Security menu, select **Others > Change Lock**.
2. Enter and re-enter your new lock code.

Locking the Pictures Menu

With this feature, you must enter your lock code when you access the pictures menu.

To lock the pictures menu:

1. Select  **> Settings > Security**, and then enter your lock code. (The Security menu is displayed.)
2. Select **Picture Mail > Lock Pictures > Lock Now**. (Select **Unlocked** to deactivate this feature.)

Calling in Lock Mode

You can place calls to 911 and to your special numbers when in lock mode. (For information on special numbers, see “Using Special Numbers” on page 76.)

To place an outgoing call in lock mode:

- ▶ To call an emergency number or special number, enter the phone number and press **TALK**.

Restricting Calls

There may be occasions when you want to limit the numbers your phone can call or from which it can receive calls. You can use the Restrict Calls setting to do just that. (The Restrict Calls setting does not apply to 911.)

To restrict calls:

1. Select **MENU OK** > **Settings** > **Security**, and then enter your lock code. (The Security menu is displayed.)
2. Select **Others** > **Limit Use**.
3. Select **Outgoing Calls** or **Incoming Calls**.
4. Select an option and press **MENU OK**.
 - **Allow All** lets you make or receive all calls.
 - **Ph. Book Only** lets you make or receive calls to or from Contacts entries, voicemail, or special numbers only.
 - **Special #s Only** lets you make or receive calls to or from three special numbers only. (See “Using Special Numbers” on page 76.)

Note:

Restricted incoming calls are forwarded to voicemail.

Using Special Numbers

Special numbers are important numbers that you have designated as being “always available.” You can call and receive calls from special numbers even if your phone is locked.

You can save up to three special numbers in addition to your Contacts entries (the same number may be in both directories).

To add or replace a special number:

1. Select  > **Settings** > **Security**, and then enter your lock code.
(The Security menu is displayed.)
2. Select **Others** and then **Special #s**.
3. Select a field for your entry and press .
4. Enter the number and press .

Note:

There are no speed dial options associated with special numbers.

Special numbers cannot be called if Lock Services for voice calls (see page 74) is set to “Locked”.

Erasing Phone Content

You can quickly and easily erase all the content that you have created in your phone.

To erase phone content:

1. Select  **>Settings > Security**, and then enter your lock code. (The Security menu is displayed.)
2. Select **Erase/Reset**, and then select an option from the following and press .
 - **Erase Ph. Book** to erase all of your Contacts entries.
 - **Erase Content** to erase all items you have downloaded to your phone.
 - **Erase Pictures** to erase all pictures saved in the phone.
 - **Erase V. Data** to erase all voice data and call memos saved in the phone.
 - **EraseVoiceTag** to erase all voice tags you have recorded.
 - **Erase Msgs** to erase all messages (including locked ones) in the Inbox, Sent Mail, Pending, and Drafts folders; all Recent Lists; and all user-created preset messages (text messages, etc.).
3. If you are certain you would like to erase, select **OK** (left softkey), and then select **Yes**.

Resetting the Browser

This option resets your Web browser's history, bookmarks, cookies, auto-complete text, and URLs.

To reset the browser:

1. Select  **>Settings > Security**, and then enter your lock code. (The Security menu is displayed.)
2. Select **Erase/Reset > Reset Browser**.
3. If you are certain you would like to reset, press **OK** (left softkey), and then select **Yes**.

Resetting Favorites

This option resets all of your favorites settings.

To reset favorites:

1. Select  **>Settings > Security**, and then enter your lock code. (The Security menu is displayed.)
2. Select **Erase/Reset > Reset Favorit**.
3. If you are certain you would like to reset your favorites settings, select **OK** (left softkey), and then select **Yes**.

Resetting Default Settings

Resetting the default settings restores all the factory defaults, including the ringer types and display settings. The Contacts, Call History, Calendar, and Messaging are not affected.

To reset default settings:

1. Select  **>Settings > Security**, and then enter your lock code. (The Security menu is displayed.)
2. Select **Erase/Reset > DefaultSetting**. (A disclaimer appears.)
3. Read the disclaimer and press **OK** (left softkey).
4. If you are certain that you would like to restore all the factory settings, select **Yes**.

Resetting Your Phone

Resetting the phone resets all settings and erases all data on your phone.

To reset your phone:

1. Select  **> Settings > Security**, and then enter your lock code. (The Security menu is displayed.)
2. Select **Erase/Reset > Reset Phone**.
3. Press **OK** (left softkey) to continue.
4. If you are certain that you would like to restore all the factory settings, select **Yes**.

Resetting Your Picture Mail Account

This option resets your authentication ID for your Sprint Picture Mail account.

To reset your Picture Mail account:

1. Select  **>Settings > Security**, and then enter your lock code. (The Security menu is displayed.)
2. Select **Picture Mail > Reset Pic. Mail**. (A warning appears.)
3. Press **OK** (left softkey) to continue.
4. If you are certain that you would like to reset your Picture Mail account, select **Yes**.

Security Features for Sprint Vision

Enabling and Disabling Sprint Vision Services

You can disable Sprint Vision services without turning off your phone; however, you will not have access to all Sprint Vision services, including Web and messaging. Disabling Sprint Vision will avoid any charges associated with Sprint Vision services. While signed out, you can still place or receive phone calls, check voicemail, and use other voice services. You may enable Sprint Vision services again at any time.

To disable Sprint Vision services:

1. Select  **> Settings > Data > Disable Data**. (A message will be displayed.)
2. Select **Disable** (right softkey) to confirm that you want to sign out.

To enable Sprint Vision services:

1. Select **MENU** > **Settings** > **Data** > **Enable Data**. (A message will be displayed.)
2. Press **OK** (left softkey) to enable data service.

Using the Parental Control Feature

This feature allows you to restrict outgoing and incoming calls, access to services such as Sprint Vision and Ready Link, as well as use the Edit Phone Book function. Most menu options for the Limit Use, Change Lock, and Lock Services menus in Parental Control are the same as the options for the Security menu.

To restrict outgoing and incoming calls:

1. Select **MENU** > **Tools** > **Parental Ctrl**.
2. Enter your lock code to display the Parental Control menu.
3. Select **Limit Use** > **Outgoing Calls** or **Incoming Calls**.
4. Select **Allow All**, **Ph. Book Only**, or **Special #s Only**.

To lock services:

1. Select **MENU** > **Tools** > **Parental Ctrl**.
2. Enter your lock code to display the Parental Control menu.
3. Select **Lock Services** > **Data** or **Ready Link**.
4. Select **Locked**. (Select **Unlocked** to disable this feature.)

To change your lock code:

1. Select **MENU** > **Tools** > **Parental Ctrl**.
2. Enter your lock code to display the Parental Control menu.
3. Select **Change Lock**.
4. Enter and re-enter your new lock code.

To add or replace a special number:

1. Select  > **Tools > Parental Ctrl.**
2. Enter your lock code to display the Parental Control menu.
3. Select **Special #s.**
4. Select a field for your entry and press .
5. Enter the number and press .

To edit Contacts:

You can also edit Contacts from the Parental Control menu while any Limit Use feature (except Allow All) is enabled. You are required to enter your lock code once to access the Parental Control menu. However, as long as you have not gone back to the main menu or standby mode, you are not required to enter your lock code each time you edit your Contacts.

1. Select  > **Tools > Parental Ctrl.**
2. Enter your lock code to display the Parental Control menu.
3. Select **Edit Ph. Book.**

Note:	Regardless of whether you set Lock Services, Change Lock, or Limit Use from the Security menu or from the Parental Control menu, the most recent setting takes precedence.
--------------	--

Tip:	The lock code for both the Security and Parental Control settings is the same.
-------------	--

Controlling Your Roaming Experience

In This Section

- ◆ **Understanding Roaming** (page 84)
 - ◆ **Setting Your Phone's Roam Mode** (page 86)
 - ◆ **Using Call Guard** (page 87)
 - ◆ **Using Data Guard** (page 88)
-

Roaming is the ability to make or receive calls when you're off the home network. Your new dual-band/tri-mode SCP-3200 by SANYO works anywhere on the home network and allows you to roam on other analog and 1900 and 800 MHz digital networks.

This section explains how roaming works as well as special features that let you manage your roaming experience.

Understanding Roaming

Recognizing the Roaming Icon on the Display Screen

Your phone's display screen always lets you know when you're off the home network. Any time you are roaming, the phone displays the roaming icon (). If you are roaming on an analog system, the roaming icon will be displayed along with the text **Analog Roam**.

Tip:

Remember, when you are using your phone off the home network, always dial numbers using 11 digits (1 + area code + number).

Roaming on Other Digital Networks

When you're roaming on digital networks, your call quality and security will be similar to the quality you receive when making calls on the home network. However, you may not be able to access certain features, depending on the available network.

Note:

If you're on a call when you leave the home network, your call is dropped. If your call is dropped in an area where you think network service is available, turn your phone off and on again to reconnect to the home network.

Roaming on Analog Networks

When you roam on analog networks, you will experience quality similar to that provided by other analog carriers today. Although some features, such as Sprint Vision, will be unavailable, you can still make and receive calls and access voicemail. If you are accustomed to Qwest service, you may notice some of the following differences when using analog service:

- You are more likely to experience static, crosstalk, fade-out, and dropped calls.
- Some features which are standard on the home network, such as call waiting, Sprint Vision, and direct international dialing, may be unavailable.
- Though callers can leave voicemail messages while you are roaming, you may not receive notification until you return to the home network. (See “Checking for Voicemail Messages While Roaming” on page 86.)
- There are security and privacy risks (eavesdropping and cloning) that exist with conventional analog services today.
- Your battery’s charge will deplete more quickly and you will need to recharge it more often when you use your phone for analog roaming.

Note:

When using your phone in analog mode, the phone may feel warm. This is normal for analog operation.

Checking for Voicemail Messages While Roaming

When you are roaming off the home network, you may not receive on-phone notification of new voicemail messages. Callers can still leave messages, but you will need to periodically check your voicemail for new messages if you are in a roaming service area for an extended period of time.

To check your voicemail while roaming:

1. Dial 1 + area code + your phone number.
2. When you hear your voicemail greeting, press .
3. Enter your passcode at the prompt and follow the voice prompts.

Setting Your Phone's Roam Mode

Your phone allows you to control your roaming capabilities. By using the **Roaming** menu option, you can determine which signals your phone accepts.

Set Mode

Choose from three different settings on your dual-band/tri-mode phone to control your roaming experience.

To set your phone's roam mode:

1. Select  > **Settings** > **Others** > **Roaming** > **Set Mode**.
2. Select an option and press .
 - **Qwest Only** allows you to access the home network only and prevents roaming on other networks.
 - **Automatic** seeks service on the home network.
 - **Roaming Only** forces the phone to seek a roaming system. The previous setting (Qwest Only or Automatic) is restored the next time the phone is turned on.

Using Call Guard

Your phone has two ways of alerting you when you are roaming off the home network: the onscreen roaming icon and Call Guard. Call Guard makes it easy to manage your roaming charges by requiring an extra step before you can place or answer a roaming call. (This additional step is not required when you make or receive calls while on the home network.)

To turn Call Guard on or off:

1. Select  > **Settings** > **Others** > **Roaming** > **Call Guard**.
2. Select **On** or **Off**.

To place roaming calls with Call Guard on:

1. From standby mode, dial 1 + area code + the seven-digit number and press .
2. Press  **1** to proceed while the pop-up message is displayed.
— or —
Press any key to erase the pop-up message, press **Options** (right softkey) > select **Roam Call**.

To answer incoming roaming calls with Call Guard on:

1. Press . (A message will be displayed notifying you that roaming charges will apply.)
2. Press  **1** to proceed while the pop-up message is displayed.
— or —
Press any key to erase the pop-up message, press **Options** (right softkey), and then select **Answer**.

Note:

If the Call Guard feature is set to **On**, you need to take extra steps to make and receive roaming calls.

Using Data Guard

You can set your phone to alert you when you are roaming off the home network and try to use data services such as messaging.

To set the conditions for Data Guard pop-up notification:

1. Select  > **Settings** > **Others** > **Roaming** > **Data Guard**.
2. Select **Always Ask** if you want a pop-up notification to appear when you try using data services in a roaming area.
— or —
Select **Never Ask** if you don't want a pop-up notification to appear.

To continue data services in a roaming area when Data Guard is set to Always Ask:

When you try using data services in a roaming area, a pop-up notification appears indicating that data roaming rates may apply.

- ▶ Press **Roam** (left softkey) to confirm and proceed.

Note:

Place a check mark next to **Never Ask** if you don't want to view this pop-up notification again.

Managing Call History

In This Section

- ◆ **Viewing History** (page 90)
 - ◆ **Call History Options** (page 91)
 - ◆ **Making a Call From Call History** (page 92)
 - ◆ **Saving a Phone Number From Call History** (page 93)
 - ◆ **Prepending a Phone Number From Call History** (page 94)
 - ◆ **Erasing Call History** (page 94)
-

The Call History keeps track of incoming calls, outgoing calls, missed calls, and recent calls. This section guides you through accessing and making the most of your Call History.

Viewing History

You'll find the Call History feature very helpful. It is a list of the last 20 phone numbers (or Contacts entries) for calls you placed, accepted, or missed. Call History makes redialing a number fast and easy. It is continually updated as new numbers are added to the beginning of the list and the oldest entries are removed from the bottom of the list.

Each entry contains the phone number (if it is available) and Contacts entry name (if the phone number is in your Contacts). Duplicate calls (same number and type of call) may only appear once on the list.

To view a Call History entry:

1. Select  > **Call History**, and then select **Outgoing**, **Incoming**, **Missed**, or **Recent Calls**.
2. Highlight the entry you wish to view and press .

Note:

Call History records only calls that occur while the phone is turned on. If a call is received while your phone is turned off, it will not be included in the phone's Incoming or Missed call logs.

Call History Options

For additional information and options on a particular call, highlight a Call History entry and press . This feature displays the date and time of the call, the phone number (if available), and the caller's name (if the number is already in your Contacts). By pressing **Options** (right softkey), you can select from the following options:

- **Call** to dial the phone number.
- **Call:Speaker On** to dial the phone number in speakerphone mode.
- **Send Message** to send a Text or Picture Mail message.
- **Save Phone#** to save the phone number (if applicable).
 - **Go to Ph. Book** is displayed when the number is already in your Contacts list. (See “Saving a Phone Number From Call History” on page 93.)
- **Rename** to change the current entry's name to Caller ID name (if applicable).
- **Prepend** to add numbers to the beginning of the phone number. (See “Prepending a Phone Number From Call History” on page 94.)
- **Copy to Prsnl** to copy the phone number to the Ready Link Personal List (appears only when Ready Link mode is set to Enable and the number does not match any stored entry in your Personal List).
- **Erase** to erase the entry.

Tip:

You can also view the next Call History entry by pressing the navigation key right or view the previous entry by pressing the navigation key left.

Making a Call From Call History

To place a call from Call History:

1. Select  > **Call History**, and then select **Outgoing**, **Incoming**, **Missed**, or **Recent Calls**.
2. Use your navigation key to select a Call History entry and press .
— or —
Press **Options** (right softkey) and then select **Call** or **Call: Speaker On**.

Note:	You cannot make calls from Call History to entries identified as No Caller ID or Private .
--------------	--

Saving a Phone Number From Call History

Your phone can store up to 500 phone numbers in up to 300 Contacts entries. (An entry may contain up to seven numbers.) Each entry's name can contain 32 characters.

To save a phone number from Call History:

1. Select  > **Call History** > **Outgoing, Incoming, Missed**, or **Recent Calls**.
2. Use your navigation key to select a Call History entry and press **Options** (right softkey).
3. Select **Save Phone #**.
4. Select **New Name** to create a new Contacts entry for the number or **From Ph.Book** to save the number to an existing entry.
5. Select an appropriate label and press .
6. Enter a name for the new entry using the keypad and press .
— or —
Search for an existing contact name and press  to save the new number.
7. Press **Save** (left softkey).

Note: You cannot save phone numbers from calls identified as **No Caller ID** or **Private**.

Prepending a Phone Number From Call History

If you need to make a call from Call History and you happen to be outside your local area code, you can add the appropriate prefix by prepending the number.

To prepend a phone number from Call History:

1. Select a Call History entry and select **Options** (right softkey).
2. Select **Prepend**.
3. Enter the digits you want to add to the number.
4. Press  to place a call.

Erasing Call History

To erase individual Call History entries, see “Call History Options” on page 91.

To erase Call History:

1. Select  > **Call History** > **Erase History**.
2. Select **Outgoing**, **Incoming**, **Missed**, **Recent Calls**, or **All**.
(A confirmation dialog will be displayed.)
3. If you are certain you want to erase the call history, select **Yes**.
— or —
Select **No** to return to the previous menu.

Using Contacts

In This Section

- ◆ **Adding a New Contacts Entry** (page 96)
 - ◆ **Assigning a Group Entry** (page 97)
 - ◆ **Finding Contacts Entries** (page 98)
 - ◆ **Contacts Entry Options** (page 99)
 - ◆ **Editing a Contacts Entry** (page 100)
 - ◆ **Erasing a Contacts Entry From the List** (page 100)
 - ◆ **Assigning Speed Dial Numbers** (page 101)
 - ◆ **Assigning an Image to a Contacts Entry** (page 102)
 - ◆ **Selecting a Ringer Type for an Entry** (page 102)
 - ◆ **Secret Contacts Entries** (page 103)
-

Now that you know the basics that make it easier to stay in touch with people and information, you're ready to explore your phone's more advanced features. This section explains how to use your phone's Contacts list and helps you make the most of your time when you are trying to connect with the important people in your life.

Adding a New Contacts Entry

Your phone can store up to 500 phone numbers in up to 300 Contacts entries. (An entry may contain up to seven numbers.) Each entry's name can contain 32 characters.

To add a new entry:

1. Select  **> Contacts > Find/Add Entry.**
2. Press , and then enter the name and press .
3. Highlight the appropriate label for the phone number, and then enter the number and press .
 - If necessary, select and enter other optional items such as email or Web addresses.
4. Press **Save** (left softkey).

After you have saved the number, the new Contacts entry is displayed. (See “Contacts Entry Options” on page 99.)

Tip:

ICE – In Case of Emergency

To make it easier for emergency personnel to identify important contacts, you can list your local emergency contacts under “ICE” in your phone's Contacts list. For example, if your mother is your primary emergency contact, list her as “ICE–Mom” in your Contacts list. To list more than one emergency contact, use “ICE1—____,” “ICE2—____,” etc.

Assigning a Group Entry

Your phone can create up to 20 separate group lists. By assigning a contact to a group, you can search easily using a user-defined group name.

To assign a Contact to a group:

1. Select  > **Contacts** > **Group**.
2. Select an available group entry location and select **Options** (right softkey) > **Add Members**.
3. Select a contact and press .
4. Select **Add** (left softkey) when you have finished selecting members.

To edit a group entry:

1. Select  > **Contacts** > **Group**.
2. Select the group entry you want to edit and select **Options** (right softkey) > **Edit**.
3. Select the field you want to edit (**Name**, **Ringer**, or **Picture ID**) and press .
4. Edit the entry and press .
5. Select **Save** (left softkey) to save your changes.

To erase a group member:

1. Select  > **Contacts** > **Group**.
2. Select the group title and press  to display the group members.
3. Select the member you want to erase and select **Options** (right softkey) > **Erase** > **This** or **All**.
4. Select **Yes** and press .

Finding Contacts Entries

There are several ways to display your Contacts entries: by name, by speed dial number, and by Ready Link List. Follow the steps outlined in the sections below to display entries from the Contacts menu.

Finding Names

To find Contacts entries by name:

1. Select  > **Contacts > Find/Add Entry**.
2. Scroll through all the entries using the navigation key.

— or —

Enter the first letter of the name or part of the name. (The display shows the entries beginning with the letter or letters entered.)

3. To display the entry's details, select an entry and press .
4. To make the call, highlight a number and press .

To find Ready Link entries:

1. Select  > **Contacts > Find/Add Entry**.
2. Press **Go to** (left softkey). Select **Personal List** or **Personal Grps.**, and press .
3. Scroll through the list to select an entry.

Note:

The **Go to** (left softkey) option is not displayed when Ready Link mode is set to **Disable** (see page 127), or Ready Link is locked (see page 74).

Finding Speed Dial Numbers

To find phone numbers you have stored in speed dial locations:

- ▶ Select  > **Contacts > Speed Dial #s**.
See "Using Speed Dialing" on page 36 for how to use speed dialing.

Contacts Entry Options

To access a Contacts entry's options, display the Contacts list, highlight an entry and press . Then select a phone number and press **Options** (right softkey). To select an option, highlight it and press .

- **Edit** to edit the selected entry.
- **Call** to dial the selected number.
- **Call:Speaker On** to dial the phone number in speakerphone mode.
- **Send Message** to send a Text or Picture Mail message.
- **Call Alarm** to set a call alarm for the entry. (See page 108 for Call Alarm.)
- **Set Speed Dial** to assign speed dial numbers to your favorite entries. (See "Assigning Speed Dial Numbers" on page 101.)
- **Set Voice Tag** to set a voice dial for the entry. (See page 117 for Voice Dial.)
- **Prepend** to alter a phone number by adding numbers to the beginning of the entry. (See "Prepending a Phone Number From Call History" on page 94.)
- **Copy to Prsnl** to copy the phone number to your Ready Link Personal List (appears only when Ready Link mode is set to Enable and the number does not match any stored entry in your Personal List).
- **Send Contact** to send a Contacts entry in the Contacts list.

Tip:

You can view the next entry by pressing the navigation key right or view the previous entry by pressing the navigation key left.

Editing a Contacts Entry

To make changes to an entry:

1. Select  > **Contacts** > **Find/Add Entry**.
2. Scroll to the entry you wish to edit and press .
3. Select a phone number, and then press **Options** (right softkey) > **Edit**.
– or –
Select an email address or Web address and press **Edit** (right softkey).
4. Select the field you want to edit and press .
5. Edit the entry by using your keypad and press .
6. Press **Save** (left softkey) to save your changes.

Erasing a Contacts Entry From the List

To erase a selected entry:

1. Select  > **Contacts** > **Find/Add Entry**.
2. Scroll to the entry you wish to delete and press **Options** (right softkey).
3. Select **Erase Contact** > **Yes**.

Assigning Speed Dial Numbers

With this feature you can dial Contacts directory entries with one keypress for locations 2–9. For details on how to make calls using speed dial numbers, see “Using Speed Dialing” on page 36.

To assign a speed dial number :

1. Select  > **Contacts > Speed Dial #s**.
2. Select an available speed dial location and press .
3. Select an entry from the list and press .
4. Select the phone number you want to set as a speed dial number and press .

– or –

1. Select  > **Contacts > Find/Add Entry**.
2. Scroll to an entry in the Contacts list and press .
3. Select the phone number you want to set as a speed dial number, and then press **Options** (right softkey) > **Set Speed Dial**.
4. Select an available speed dial location and press .

Note:

If you attempt to assign an already in-use speed dial location to a new phone number, a dialog will appear asking if you wish to overwrite the existing speed dial assignment. Select **Yes** to assign the location to the new phone number and delete the previous speed dial assignment.

Assigning an Image to a Contacts Entry

You can assign an image to a Contacts entry. The image is displayed when the entry calls you.

To assign an image for an entry:

1. Select  > **Contacts** > **Find/Add Entry**.
2. Select the Contacts entry for which you want to assign the image and press .
3. Select a phone number, and then select **Options** (right softkey) > **Edit**; or if you are selecting an item other than the phone number, select **Edit** (right softkey).
4. Press the navigation key up to highlight the  icon and press .
5. Select an image and press .
6. Press **Save** (left softkey) to save the image type.

Selecting a Ringer Type for an Entry

You can assign a ringer type to a Contacts entry so you can identify the caller by the ringer type. (See “Ringer Types” on page 46.)

To select a ringer type for an entry:

1. Select  > **Contacts** > **Find/Add Entry**.
2. Select the Contacts entry for which you want to set the incoming ringer and press .
3. Select a phone number, and then select **Options** (right softkey) > **Edit**; or if you are selecting an item other than the phone number, select **Edit** (right softkey).
4. Scroll down to  and press .

5. Select a ringer and press . (When you highlight a ringer type, a sample ringer will sound.)
6. Press **Save** (left softkey) to save the ringer type.

Secret Contacts Entries

You can hide an entry's phone number(s) and require your lock code to edit the entry by making it secret. The entry name is still displayed, but the entry's phone numbers are replaced with "<Secret>".

To make an entry secret:

1. Select  > **Contacts > Find/Add Entry**.
2. Select the Contacts entry you want to tag as secret and press **Options** (right softkey).
3. Select **Set Secret**.
4. Enter the four-digit lock code.
5. Select **On**.

To make an entry public:

1. Select  > **Contacts > Find/Add Entry**.
2. Select the Contacts entry you want to tag as public and press **Options** (right softkey).
3. Select **Set Secret**.
4. Enter the four-digit lock code.
5. Select **Off**.

Tip:

If you can't recall your lock code, try using the last four digits of your wireless phone number or try 0000. If neither of these work, call Qwest Wireless® Repair at 1-888-879-0611.

Using the Phone's Calendar and Tools

In This Section

- ◆ **Using Your Phone's Calendar** (page 105)
 - ◆ **Using the Call Alarm Feature** (page 108)
 - ◆ **Using Your Phone's Alarm Clock** (page 111)
 - ◆ **Using Your Phone's Tools** (page 112)
 - ◆ **Personal Information Management** (page 115)
-

Your phone is equipped with several personal information management features that help you manage your busy lifestyle.

This section shows you how to use these features to turn your phone into a time management planner that helps you keep up with your contacts, schedules, and commitments.

Using Your Phone's Calendar

Displaying Your Calendar

To display your calendar:

- ▶ Select  > **Tools** > **Calendar**.

Tip: The current day is framed by a rectangle.

Adding an Event to the Calendar

Your Calendar helps organize your time and reminds you of important events (up to 100 events).

To add an event:

1. Select  > **Tools** > **Calendar** and select the day to which you wish to add an event.
2. Select **Options** (right softkey) > **Add Event** > **Schedule**.
3. Enter the description using your keypad and press .
4. Select any of the following items and press .
 - **Description** to enter a description of your event (up to 14 characters).
 - **From** to schedule the start time.
 - **To** to schedule the end time.
 - **Location** to edit the location of your event (up to 14 characters).
 - **Alarm** to select a ringer.
 - **Alarm Time** to edit the alarm time (number of hours or minutes before the event starts). The default alarm time is 10 minutes before an event.
 - **Repeat** to set the event's repeating status. Select **Once**, **Daily**, **Weekly**, **Monthly**, or **Yearly**.

5. Press **Save** (left softkey) to schedule the event.

Tip:

The date for which you have scheduled events is indicated with a triangle.

Press the navigation key up or down to scroll by week through the calendar and the Side Volume key to scroll by month.

Event Alerts

There are several ways your phone alerts you to scheduled events:

- By playing the alert tone (depending on the ringer type and ringer volume setting).
- By blinking the LED.
- By displaying the event's description on the Main LCD when the phone is open.
- By lighting the LCD backlight (depending on the backlight setting).

Event Alert Menu

When your phone is turned on and you have an event alarm scheduled, your phone alerts you and displays the event summary.

To silence the alarm:

- ▶ Press any key to stop the alarm. (The alarm will stop and then sound again after the selected snooze interval.)
 - Press and hold the side camera key to cancel snoozing.
 - Select **Dismiss** (right softkey) to dismiss the event.

Going to a Given Date

To go to the Calendar menu for a specific date:

1. Select  > **Tools** > **Calendar** > **Options** (right softkey) > **Go to Date**.
2. Enter the date you wish to go to using the navigation key and/or the keypad, and press .

Viewing Events

To view your scheduled events:

1. Select  > **Tools** > **Calendar**.
2. Using your navigation key, highlight the day for which you would like to view events and press . (If you have events scheduled for the selected day, they will be listed in chronological order).

Tip: In the calendar view, days with events scheduled are indicated with a triangle.

3. To display the details of an event listed in the schedule, highlight the event and press .

Erasing a Day's Events

To erase a day's scheduled events:

1. Select  > **Tools** > **Calendar**, select the date for which you set events, and press .
2. Select one of the events and press **Options** (right softkey) > **Erase Event** > **Yes**.
3. Repeat the same steps for other events of the day.

Note: You can erase registered Call Alarms (see the next section) if you select a Call Alarm event in step 2 above.

Purging All Events

To delete all scheduled events:

- ▶ Select **MENU** > **Tools** > **Calendar** > **Options** (right softkey) > **Erase Memory** > **Erase All** > **Yes**.

Note:	All events are erased including Call Alarms (see below) and To Do List items (see page 109).
--------------	--

Using the Call Alarm Feature

Adding a Call Alarm to the Calendar

You can set call alarms to notify you when you need to place a call. The call alarm will let you know when and to whom to place a scheduled call. You can set up to 15 call alarms.

To add a call alarm to the calendar:

1. Select **MENU** > **Tools** > **Calendar** and select the day to which you want to add a call alarm.
2. Select **Options** (right softkey) > **Add Event** > **Call Alarm**.
3. Enter the phone number directly or press **Options** (right softkey) for options.
 - **From Ph. Book** to select a number from your Contacts list.
 - **Vicemail** to select the number for voicemail access.
4. Select the following items.
 - **Time/Date** to edit the start time and date.
 - **Alarm** to select the ringer alarm.
 - **Repeat** to set the Call Alarm's repeat status.
5. Press **Save** (left softkey).

Tip:

You can also add a call alarm from the Contacts menu. (See “Contacts Entry Options” on page 99.)

Call Alarm Menu

When your phone is turned on and you have scheduled a call alarm, your phone alerts you and displays the name or phone number you wish to call.

To call the phone number at the time of a call alarm notification:

- ▶ Press **TALK** or **SPEAKER** to dial the phone number (if applicable).

Other ways of responding to a call alarm include:

- Press any key to repeat the alarm after the selected snooze interval.
- Press and hold the side camera key to cancel snoozing.
- Press **Dismiss** (right softkey) to dismiss the call alarm.

Adding To Do List Items

Your phone can store and manage up to 20 To Do List items.

To add an item to your To Do List:

1. Select **MENU** > **Tools** > **Calendar** > **Options** (right softkey).
2. Select **To Do List** > **Options** (right softkey) > **Add Item**.
3. Enter the description (up to 14 characters) and press **MENU**.
4. Select **Priority** to edit the To Do's priority. You can select from **Normal**, **Urgent**, or **Done**.
5. Press **Save** (left softkey).

Adding a To Do List Item to the Calendar

To add your To Do List item to the calendar:

1. Select  > **Tools** > **Calendar** > **Options** (right softkey) > **To Do List**.
2. Select the item you want to add to the schedule and press **Options** (right softkey).
3. Select **Add to Schedule**.
 - **Add to Schedule** to extract the item from the To Do List and make it a scheduled event.
4. Enter the description, alarm, and other information using your keypad and press . (See “Adding an Event to the Calendar” on page 105 for how to enter information.)
5. Press **Save** (left softkey).

Using Your Phone's Alarm Clock

Your phone comes with a built-in alarm clock that has multiple alarm capabilities.

To use the alarm clock:

1. Select **MENU** > **Tools** > **Alarm Clock**. (A caution message will appear on the display.)
2. Select a number and press **MENU**.
3. Select the items you want to edit and press **MENU**.
 - **Description** to enter a description of the alarm.
 - **Time** to enter the alarm time.
 - **Repeat** to select the alarm frequency.
 - **Alarm** to set the alarm on or off.
4. Press **Save** (left softkey) to save the alarm settings.

Tip:

Select the left softkey (**On** or **Off**) to toggle the alarm on and off.

To change the alert settings, select **Settings** (right softkey) to set the ringer length and snooze options.

To stop the alarm:

- ▶ Press any key to stop the alarm.
 - Press **Dismiss** (right softkey) to dismiss the alarm.
 - Press and hold the side camera key to stop the snooze function.

Note:

The alarm will not sound when the phone is powered off.

In a no-service area or an analog service area, it may be necessary to manually set the correct date and time to use the alarm clock function.

Using Your Phone's Tools

In addition to helping you be more efficient and organized, your phone offers useful and entertaining tools.

Using the Stopwatch

To start the stopwatch:

- ▶ Select  > **Tools** > **Stop Watch**.
 - Press **Start** (left softkey) to start the stopwatch.
 - Press **Stop** (left softkey) to stop the stopwatch.
 - Press **Resume** (left softkey) to restart the stopwatch.

To record a lap time while the stopwatch is running:

- Press **Lap** (right softkey) to record time of the first lap.
- Press **Lap** (right softkey) again to record the next lap. (You can record up to five laps.)

To display the stopwatch options:

1. While the stopwatch is stopped, press **Options** (right softkey).
2. To select an option, highlight it and press .
 - **Go to Lap List** to display a saved Lap List. Press **Detail** (left softkey) to display the Lap List detail.
 - **Save to LapList** to save the recorded lap times.
 - **Reset** to reset the time to zero and clear any recorded lap times.

Using the Calculator

Your phone comes with a built-in calculator.

To use the calculator:

1. Select  > **Tools** > **Calculator**.
2. Enter numbers using your keypad.
3. Press the appropriate navigation key to perform a calculation (**Up** for addition, **Down** for subtraction, **Left** for multiplication, **Right** for division). Press the left softkey to insert a decimal point.
4. Enter numbers and press  for the result.
 - To clear the numbers, press **CLR** (right softkey).

Updating Your Phone

The update phone software option allows you to download and update the software in your phone over the air. Only the internal software is updated; no Contacts entries or other information saved in your phone will be deleted.

To update your phone through the Tools menu:

1. Select  > **Tools** > **Update Phone**.
2. If a new software version is available, select **Yes** (left softkey) to continue.
3. Read the onscreen information and select **Next** (left softkey) to continue.
4. Select **Update Phone** to update your phone.

World Clock

This feature is available only in digital service areas.

To view the time in different locations:

1. Select  > **Tools** > **World Clock**.
2. Press the navigation key left or right to scroll through different time zones.

Tip: Press **Summer** (left softkey) or **Standard** (right softkey) to select between daylight saving and standard time (if applicable).

Using the Countdown Timer

This feature allows you to use the countdown timer with alarm capabilities. You can set up to five timers.

To use the countdown timer:

1. Select  > **Tools** > **Countdown**.
2. Select a number and press .
3. Select the items you want to edit and press .
 - **Description** to enter a description of the countdown.
 - **Time** to enter the countdown time.
 - **Alarm** to set the countdown alarm on or off.
4. Select **Save** (left softkey) to save the countdown settings.

Tip: Select **On/Off** (left softkey) to toggle the countdown on and off.
To change the alert settings, select **Settings** (right softkey) to set the ringer length and snooze options.

Note: This feature is not available while your phone is turned off.

Personal Information Management

Displaying Your User Address

To display the phone's current user address:

- ▶ Select  > **Settings > Phone Info > Phone#/UserID.**

Finding Icon Definitions

To view an explanation of icons that appear on the display:

1. Select  > **Settings > Phone Info > Icon Glossary.**
2. Select the item for which you want to see the explanation and press .
(The icon's explanation appears.)

Displaying Version Information

To display the version number of the software, hardware, PRL (Preferred Roaming List), PRI (Product Release Instructions), etc., installed on your phone:

- ▶ Select  > **Settings > Phone Info > Version.**

Displaying Advanced Information

To display advanced information such as frequency and other technical information:

- ▶ Select  > **Settings > Phone Info > Advanced.**

Using Your Phone's Voice Services

In This Section

- ◆ **Using Voice-Activated Dialing** (page 117)
 - ◆ **Managing Voice Memos** (page 119)
 - ◆ **Setting Up Screen Call** (page 123)
-

Your phone's Voice Services let you place calls using your voice, store voice reminders, and record memos right on your phone.

This section includes easy-to-follow instructions for using voice-activated dialing and managing voice memos.

Using Voice-Activated Dialing

You can use a voice dial tag to automatically dial a phone number in your Contacts. (A voice dial tag is a command you record and use to place calls without using the keypad.) Your phone can store up to 30 voice dial tags.

Note: Please set the Voice Prompt feature (see page 49) to on before using the Voice-Activated Dialing so that you can hear the voice instruction from the phone. The default setting is off.

Making a Call Using Voice-Activated Dialing

With the phone open:

1. Press and hold .
2. Follow the system prompts and recite the entry's Voice Dial tag into your phone's microphone.

With the phone closed:

1. Press and hold .
2. Follow the system prompts and recite the entry's Voice Dial tag into your phone's microphone.

Note: To use the Voice Dial function, you must have a stored entry for **Voice Dial**. (See "Programming Voice Dial Tags" on page 118.)

Programming Voice Dial Tags

To program a voice dial tag:

1. Select  > **Contacts** > **Find/Add Entry**.
2. Select a contact and press .
3. Select a phone number, and then select **Options** (right softkey) > **Set Voice Tag** > **Add**.
4. You will be prompted to say the name you want to program. Say the name after the beep.
5. Respond to the prompt by repeating the name after the beep. (The display shows “Voice Tag Recorded.”)

Tip:

Record voice dial tags in a quiet environment and without the aid of an accessory (for example, a headset or hands-free car kit).

Reviewing Voice Dial Tags

To review voice dial tags:

1. Select  > **Contacts** > **Find/Add Entry**.
2. Select a voice dial entry you want to review and press .
3. Select the voice dial entry and press **Options** (right softkey) > **Set Voice Tag**.
4. Select an option, highlight it and press .

Managing Voice Memos

You can use your phone's Voice Services to record brief memos to remind you of important events, phone numbers, or grocery list items.

Tip: If you haven't signed up for the Ready Link service and Ready Link mode is set to **Disable**, or the Ready Link service is locked, you can use the Ready Link/Voice Memo Key as a Voice Memo Key in standby mode.

Recording Voice Memos

To record a voice memo:

1. Select  > **Tools** > **Voice Memo** > **Record**.
— or —
Press and hold .

2. Start recording after the beep.

To end the recording of your memo:

- ▶ Press , , , or .

Note: Your phone can store up to 500 voice memos.
The total recording time depends on the available memory space on your phone.

To record a phone conversation:

1. During a call, select **Options** (right softkey) > **Tools** > **Call Memo Rec**.
2. Start recording after the beep.

Note: Only the other party's voice is recorded during this process.

To stop recording during a phone call:

- ▶ Press **MENU OK** or **BACK** while recording.
– or –
Press **END** to stop recording and disconnect the call.
Recording also stops when the other party hangs up the call.

Tip:

Voice Memos are stored with the date and time stamp in reverse chronological order, except when recorded in a no-service area.

Reviewing Voice Memos

To play the voice memos you have recorded:

1. Select **MENU OK** > **Tools** > **Voice Memo** > **List**.
2. Select a voice memo from the list and press or select **Options** (right softkey) > **Play** > **All** if you want to play all voice memos continuously. If you want to play multiple memos, select **Options** (right softkey) > **Play** > **Multiple**, and select your desired memos, and select **Play** (left softkey).
3. Press **MENU OK** to stop playing.
 - Press **Slow** (left softkey) or **Fast** (right softkey) to change the playing speed.

Voice Memo Options

There are several user options available for managing voice memos.

To display the voice memo options:

1. Select  > **Tools > Voice Memo > List**.
2. Select a voice memo and select **Options** (right softkey).
3. Select an option and press .
 - **Play** to play a selected voice memo or all voice memos.
 - **This** to play the selected memo.
 - **Multiple** to play selected memos.
 - **All** to play all memos.
 - **Speaker On** or **Speaker Off** to activate or deactivate the speakerphone mode.
 - **Edit Title** to edit the title of your voice memos.
 - **Properties** to show the properties of your voice memos.
 - **Type Filter** to filter your voice memos.
 - **Sort by** to sort your voice memos.
 - **Erase** to erase an individual memo or all voice memos.
 - **This** to erase the selected memo.
 - **Multiple** to erase selected memos.
 - **All** to erase all memos.
 - **Set as** to assign the voice memo.

Erasing Voice Memos

To erase an individual voice memo:

1. Select  > **Tools** > **Voice Memo** > **List**.
2. Select the memo you want to erase and select **Options** (right softkey) > **Erase** > **This** > **Yes**.

To erase all voice memos:

1. Select  > **Tools** > **Voice Memo** > **List**.
2. Select **Options** (right softkey) > **Erase** > **All** > **Yes** to erase all voice memos saved in the phone.

To erase multiple voice memos:

1. Select  > **Tools** > **Voice Memo** > **List**.
2. Select **Options** (right softkey) > **Erase** > **Multiple**.
3. Select the memos you would like to erase and select **Erase** (left softkey) > **Yes**.

Setting Up Screen Call

This feature enables you to screen incoming calls by using a recorded announcement, either one that is prerecorded or one that you record. You can also record the caller's message into the Voice Memo list.

Activating Screen Call

To start Screen Call when you have incoming calls:

- ▶ When the phone rings or vibrates, press **Options** (right softkey) > **Screen Call**.

To set Auto Screen Call:

1. Select  > **Tools** > **Voice Memo** > **Screen Call** > **Auto**.
2. Select **On** and press .
3. Set the answer delay by using numeric keys or by pressing the navigation key up or down.
4. Press  or **OK** (left softkey). (The  icon is displayed on the standby display.)

Tip:

While the caller's message is being recorded, press **TALK** to answer the call, or press **END** to stop recording and disconnect the call.

Selecting an Announcement for Screen Call

To select a Screen Call announcement:

1. Select  > **Tools** > **Voice Memo** > **Screen Call** > **Announcement**.
2. Depending on your preference, select **Pre-Recorded** or **Custom**.

Recording Your Name for a Prerecorded Announcement

You can use a prerecorded announcement with or without your name. If you record your name, your phone adds your name to the prerecorded message to announce that you are not available to answer calls.

To record your name:

1. Select  > **Tools > Voice Memo > Screen Call > Announcement.**
2. Select **Pre-Recorded** and press **Edit** (right softkey) > **Record Name.**
3. Press  to start the first recording. (Press  to stop recording. The maximum recording time is 12 seconds.)
4. After the first recording, press  again to start the second recording.
5. Press  to stop recording.

Recording a Customized Announcement

To record an announcement:

1. Select  > **Tools > Voice Memo > Screen Call > Announcement.**
2. Select **Custom** and press **Edit** (right softkey) > **Record.**
3. Press  to start the first recording. (Press  to stop recording. The maximum recording time is 12 seconds.)
4. After the first recording, press  again to start the second recording.
5. Press  to stop recording.

Reviewing an Announcement

To review an announcement:

1. Select  > **Tools** > **Voice Memo** > **Screen Call** > **Announcement**.
2. Select **Pre-Recorded** or **Custom** and press **Edit** (right softkey).
3. Select **Play** or **Play:Speaker**.

Erasing an Announcement

To erase an announcement:

1. Select  > **Tools** > **Voice Memo** > **Screen Call** > **Announcement**.
2. Select **Pre-Recorded** or **Custom**, and press **Edit** (right softkey).
3. Select **Erase Name** to erase the name for a prerecorded announcement.
– or –
Select **Erase** to erase the message for a custom announcement.
4. Select **Yes**.

Using Ready Link

In This Section

- ◆ **Getting Started With Ready Link** (page 127)
 - ◆ **Making and Receiving a Ready Link Call** (page 129)
 - ◆ **Adding and Editing Ready Link Contacts** (page 136)
 - ◆ **Erasing Ready Link List Entries** (page 141)
 - ◆ **Managing Ready Link Settings** (page 143)
-

Your Ready Link-enabled phone gives you the ability to quickly connect with other Ready Link users for “walkie-talkie-style” communication from anywhere, to anywhere on the home network.

This section explains the features and options of your phone's Ready Link capabilities and service.

Getting Started With Ready Link

Ready Link allows you to enjoy quick, two-way, “walkie-talkie-style” communication with your friends, family, and coworkers. You can make one-to-one or one-to-many calls (up to five others on the same call) to any other Ready Link user, anywhere on the home network. You can make and receive Ready Link calls when your phone displays the Ready Link icon (.

Setting Ready Link Mode

To enable or disable Ready Link mode:

- ▶ Select  > **Settings** > **Ready Link** > **Enable/Disable** > **Enable**. (The default is Disable.)
 - **Enable** to make or receive Ready Link calls anytime your phone is not in use.
 - **Disable** to disable your phone’s Ready Link service. You will not be able to make or receive Ready Link calls or access your Ready Link contacts.

Tip:

If you haven’t signed up for the Ready Link service, and Ready Link mode is set to **Disable** or the Ready Link service is locked, you can use the Ready Link/Voice Memo Key as a Voice Memo Key in standby mode.

Preparing Your Phone for Ready Link Service

Every time you turn on your phone, your phone will identify itself and make itself available to the Ready Link network.

- ▶ When the Ready Link icon () appears on the display, your phone is ready to make and receive Ready Link calls.

Ready Link Call Alerts

There are several ways your phone alerts you during Ready Link calls.

When you make or receive a Ready Link call:

- The phone sounds (depending on the Ringer Type and Ringer Volume settings).
- The backlight illuminates.
- The screen displays a Ready Link call message.
- The other party's Ready Link number and name (if available) are displayed.
- The screen displays who has the floor.

The status of a Ready Link call is displayed as follows:

- The Green LED On indicates you have the floor and may speak.
- The Red LED On indicates another contact has the floor.
- The LED Off indicates the floor is open. (You can take the floor and speak by pressing and holding )

Making and Receiving a Ready Link Call

Displaying the Ready Link List

- ▶ From standby mode, press the Ready Link/Voice Memo key on the side of your phone () to access the Ready Link List.

Tip: The first time you access the list, the Ready Link Help message will be displayed. Select **Yes** (left softkey) and **Next** (left softkey) to read a brief introduction to Ready Link.

Selecting a Ready Link Contacts List

When your phone displays a Ready Link List, the left softkey is labeled **Go to**. To switch to another contacts list, select **Go to** (left softkey), highlight your desired list, and press .

- **Personal List/Personal Grps.** contain your personal Ready Link contact names and numbers, separately or in groups. You can create and edit your Personal List. Your phone can store a total of 200 entries. (You may include up to five contacts per group.)
- **R-LinkOutgoing** shows the last 20 different Ready Link calls that you placed.
- **R-LinkIncoming** shows the last 20 different Ready Link calls that you accepted.
- **R-LinkMissed** shows the last 20 Ready Link calls that you missed.

Note: The  icon next to the group name indicates a group.

Making a Ready Link Call (One-to-One Call)

You can place a one-to-one Ready Link call by entering a Ready Link number or by selecting a contact from the Ready Link List.

To place a Ready Link call by selecting a contact:

1. Press **---**.
2. Select **Go to** (left softkey), and then select the list from which you want to place a call (**Personal List**, **R-LinkOutgoing**, **R-LinkIncoming**, or **R-LinkMissed**.), and press **MENU OK**.

Tip:

You can also select **Enter R-Link#** from the **Go to** option to enter a Ready Link number directly. (See page 132 for details.)

3. Scroll to the contact you want to call, and press and hold **---** to place the call and get the floor. (You will see “R-Link calling...” and “Connecting...” followed by “You have floor.” You can now begin speaking.)

– or –

Scroll to the contact you want to call and press and release **---** to place the call. (The call will connect as described above, but “Floor is open” will be displayed on the screen. Either you or your contact may press and hold **---** to take the floor and speak.)

Note:

During a Ready Link call, the “floor” is the right to speak. When you see “Floor is open,” the first person to press the Ready Link/Voice Memo key can speak (while holding the key). Only the person who has the floor can speak. The phone beeps if you press the Ready Link/Voice Memo key when another contact has the floor.

4. Continue holding **---** as you speak. (When you have finished speaking, release **---** to allow the other party to speak. When the other party takes the floor, you will see the speaker’s name, phone number, and the text “has floor.”)
5. When you are finished, press **END**.

Note: When neither party has the floor during a Ready Link call, "Floor is open" is displayed. If no one takes the floor for 20 seconds, the Ready Link call ends automatically.

Tip: If you press **TALK** or **SPEAKER** during step 3 on the previous page, you can make a standard voice call.

Making a Ready Link Call (Group Call)

You can make a Ready Link call to all members in a Group entry that you have in your Ready Link List. You can communicate with up to five members at a time.

To place a Ready Link Group call:

1. Press **---**.
2. Select **Go to** (left softkey), and then select **Personal Grps.**.
3. Scroll to the group you want to call, and press and hold **---** to place the call and take the floor. (You will see "R-Link calling..." and "Connecting..." followed by "You have floor." Continue with the Ready Link call as described on the previous page.)
 - To make a Ready Link call to a group member, select a group, highlight a group member, and press and hold **---**.
 - If one of the group members takes the floor, you will see the member's name and Ready Link number on the display.
4. When the call is finished, press **END**.

Tip: The phone beeps if you press the Ready Link/Voice Memo key when another party has the floor.

You can also make a Group Call after checking the group member. Select **MENU** to display group members, highlight **<Call Group>** and press and hold the Ready Link/Voice Memo key during step 3 above.

To redial your last Ready Link call, highlight **Redial** and press and hold the Ready Link /Voice Memo key from the Ready Link List.

Making a Ready Link Call by Entering a Number

To place a Ready Link call by entering a number:

1. From standby mode, enter the Ready Link number you want to dial.
2. Press **---** to place the Ready Link call. Continue holding **---** to take the floor and speak.
 - The contact's name is displayed if there is a matched number in your Ready Link List.
3. Continue with the Ready Link call, pressing and holding **---** to speak and releasing it to allow others to reply.
4. When the call is finished, press **END**.

— or —

1. Press **---**.
2. Select **Go to** (left softkey), highlight **Enter R-Link#** and press **MENU OK**.
3. Enter the Ready Link number you want to dial.
4. Follow steps 2–4 above.

Note:

Ready Link numbers must contain 10 digits (area code + phone number) or 11 digits (1 + area code + phone number). Your Ready Link number is the same as your wireless phone number.

Missed Call Notification for Ready Link Calls

When an incoming Ready Link call is not answered, the Missed Call Notification is displayed.

To call the last missed Ready Link call:

- ▶ Simply press and hold **---** while the Missed Call Notification is displayed. (Continue with the Ready Link call as described previously.)

Tip:

If you have two or more missed calls, the call log list will be displayed. Different icons will be displayed for different types of notifications.

To erase the Missed Call log:

- ▶ Select **Dismiss** (right softkey).

To display the missed Ready Link call log:

- ▶ Select **View** (left softkey) while the Missed Call Notification is displayed. To call the entry, highlight the entry you want to call, and press and hold **---**. (Continue with the Ready Link call as described previously.)

Receiving a Ready Link Call

To receive a Ready Link call:

1. Make sure your phone's Ready Link mode is enabled. (See "Setting Ready Link Mode" on page 127.)
2. When you receive a Ready Link call from a contact, "R-Link Call," the contact's name and the Ready Link number are displayed. (You do not need to take any action to answer the call.)
 - When you receive a group call, "Group Call," the group member's name, and the Ready Link number are displayed.
3. If the person placing the call has kept the floor (held the Ready Link/Voice Memo key), you will see the contact's name and Ready Link number along with "has floor," and you will hear the caller speaking.
4. When the caller finishes speaking and releases , you will see "Floor is open" on the display screen. Press and hold  to take the floor and reply to the caller. (You will see "You have floor" and hear a tone confirming that you may speak.)
5. When the conversation is finished, press .

Tip:

You can also receive a Ready Link call with the phone closed. Press and hold the Ready Link/Voice Memo key to take the floor when the floor is open.

Note:

You can change the volume and the speaker setting while a Ready Link call is activated. **Volume:** Adjust the voice volume by using the side volume key or by pressing the navigation key up or down (except when you are pressing and holding the Ready Link/Voice Memo key). **Speaker:** Switch the speaker on or off by pressing **SPEAKER**.

Ready Link Options

When you use Ready Link, several user options are available by selecting **Options** (right softkey). To select an option, highlight it and press .

- **Edit** to edit a Ready Link number or name.
(See “Editing a Contact in Your Personal List” on page 138.)
- **Send Message** to send a Text or Picture Mail message.
- **Copy to Prsnl** to copy a contact to the Personal list.
- **Copy to Ph. Book** to copy a contact to the Contacts List.
- **Erase** to erase a contact. **Erase Group** appears when you highlight a group.
- **Add Contact** to add a new contact. **Add Group** appears when you highlight a group list. (See page 138 – 139 for details.)
- **Erase R-Link List** to erase entries saved in the Ready Link List and in Ready Link Call History.
- **Help** to see the Ready Link instruction page.

Adding and Editing Ready Link Contacts

Copying an Entry to Your Personal List, Personal Group List, or Contacts List

You can copy an entry to your Personal Lists or Contacts list from several different sources.

To copy an entry from the Ready Link List:

1. Press .
2. Select **Go to** (left softkey), and then select the list from which you want to copy an entry (**Personal List**, **Personal Grps.**, **R-LinkOutgoing**, **R-LinkIncoming**, or **R-LinkMissed**).
3. Select the entry you want to copy (or scroll to highlight the **Redial** entry at the top of your screen), and select **Options** (right softkey). To select an option, highlight it and press .
 - **Copy to Prsnl** to copy the contact to the Personal List.
 - **Copy Group** to copy the group to the Personal Group List.
 - **Copy to Ph. Book** to copy the contact to the Contacts list.
4. Select **Yes** (left softkey) to copy and save the entry to your Personal Lists or Contacts list.

Saving a Ready Link Number

When you have finished a Ready Link call, you will see the Ready Link number and the text “R-Link call ended” on the display. You can save a Ready Link number to your Personal Lists from this end display.

To save the number from the end call display:

1. From the end call display, press **Options** (right softkey) > **Save**.
 - If the entry has no name, you are prompted to enter a name.
2. Press **Yes** (left softkey) to save the entry.

Finding an Entry in the Ready Link List

You can find an entry by entering a few letters.

To find a Ready Link entry:

1. Press **---**.
2. Select **Go to** (left softkey), and then select a list (**Personal List**, or **Personal Grps.**).
3. Enter the first letter or the first few letters of the name.
 - The display shows the list beginning with the letter(s) you entered.
4. Scroll through the list and press **MENU OK** to select an entry.

Adding a New Contact to Your Personal List

You can store a total of 200 entries in the Personal Lists.

To add a new Ready Link contact:

1. Press **---**.
2. Select **Go to > Personal List > Add Contact**.
— or —
Select a contact and press **Options** (right softkey) **> Add Contact**.
3. Enter a name for the new contact and press **MENU OK**. (This is the name you will see when calling or receiving a call from the contact.)
4. Select **R-Link Number**, enter the contact's 10-digit Ready Link number (the contact's wireless phone number), and press **MENU OK**.
5. Select **Save** (left softkey) to save the new contact to your Personal List.

Tip:

You are not allowed to use the following symbols during step 3: @ : ; / *) (.

Editing a Contact in Your Personal List

To edit a Personal List contact:

1. Press **---**.
2. Scroll to the entry you want to edit and press **Options** (right softkey).
3. Select **Edit**.
4. Select the field you want to edit (**Name** or **R-Link Number**), and press **MENU OK**.
5. Edit the entry, press **OK** (left softkey), and press **Save** (left softkey) to save your changes.

Adding a New Group to Your Personal Group List

You can add new groups to the Personal Group List. Each group can include up to five members. You can enter a group member directly or select the member from the Personal List.

To add a new Ready Link group entry:

1. Press **---**.
2. Select **Go to > Personal Grps. > Add Group**.
— or —
Select an entry, select **Options** (right softkey), and then select **Add Group**.
3. Enter a Group Name, press **MENU OK**, and select **Next** (left softkey).
4. To add contacts to the group, select **Add** (right softkey).
5. Highlight one of the following options and press **MENU OK**:
 - **New** to add a new contact. See the previous page for details.
 - **from Personal** to add a contact from your Personal List.
6. Scroll to the contacts you want to add and press **MENU OK** or select **Pick** (right softkey) to include the entries.
7. Select **Done** (left softkey) when you have finished selecting contacts, and then select **Update** (left softkey) to update your Personal Group List with the new group entry.

Tip:

You can also add members directly. From step 4 above, highlight **<Add Members>** and press **MENU**. Enter the new member's name and R-Link number and select **Save** (left softkey) to save the entry.

Editing a Group in Your Personal Group List

To edit a group or group member:

1. Press .
2. Select **Go to** (left softkey) > **Personal Grps**.
3. Scroll to the group entry you want to edit and press **Options** (right softkey) > **Edit**.
4. Edit the group name and press  or **OK** (left softkey).

Tip:

If you don't need to edit the group name, select **Next** (left softkey) during step 4 above and skip step 5.

5. Select **Save** (left softkey) to save your changes.
6. To edit a group member, scroll to the contact you want to edit and select **Options** (right softkey).
7. Select **Edit**, select the field you want to edit (**Name** or **R-Link Number**), and press .
8. Edit the entry, select **OK** (left softkey), and select **Save** (left softkey) to save your changes.
9. Select **Update** (left softkey) to update your Personal Group List.

Erasing Ready Link List Entries

Erasing an Entry in Your Personal List or Personal Group List

To erase a contact or a group:

1. From the Ready Link List, select **Go to**, and then select **Personal List** or **Personal Grps**.
2. Scroll to the entry you want to erase, and select **Options** (right softkey) > **Erase**.
 - **Erase Group** is displayed when you select **Personal Grps**.
3. Select **Yes**.

To erase a group member:

1. From the Ready Link List, select **Go to > Personal Grps**.
2. Scroll to a group, and press  to display the group members.
3. Select the contact you want to erase, and select **Options** (right softkey).
4. Select **Erase > Yes > Update** (left softkey) to erase the member and update your Personal Group List.

Erasing a Ready Link List

You can erase all entries saved in the Ready Link List.

To erase a Ready Link List:

1. From the Ready Link List, select **Options** (right softkey) > **Erase R-Link List**.
2. Select an option and press .
 - **Outgoing** to erase all outgoing Ready Link calls.
 - **Incoming** to erase all incoming Ready Link calls.
 - **Missed** to erase all missed Ready Link calls.
 - **All Calls** to erase all Ready Link call history (except redial).
 - **All PersonalEnt** to erase all entries in Personal List and Personal Groups. You are prompted to enter your four-digit lock code.
3. Select **Yes**.

Tip:

Redial numbers will not be erased.

Managing Ready Link Settings

Assigning Speed Dialing for Ready Link Entries

To assign speed dialing for Ready Link entries:

1. Select  > **Contacts** > **Speed Dial #s**.
2. Select an unassigned number and press .
3. Press **Go to** (left softkey), and then select the list from which you want to set a speed dial (**Personal List**, or **Personal Grps.**).
4. Select the contact and press .

— or —

Select the group and press , select an option, and press .

- **Assign** to assign the selected group as a speed dial.
- **Details** to display the group details. You can select the group member from the group list.

To use Speed Dial for a Ready Link entry:

- ▶ From standby mode, press the appropriate key (locations 2–9) and press .

Restarting Ready Link Service

This feature allows you to update the Ready Link network information of your phone.

To restart Ready Link service:

- ▶ Select  > **Settings** > **Ready Link** > **Restart**.

Setting Ready Link Guard

This feature enables you to display a warning message when you cannot receive Ready Link calls. The warning message will be displayed when you are launching a Web or Java application.

To set the Ready Link Guard:

1. Select  > **Settings** > **Ready Link** > **R-Link Guard**. (A message will be displayed.)
2. Select **OK** (left softkey) to continue.
3. Select **On** to activate Ready Link Guard. (Select **Off** to deactivate this feature.)

Setting Ringer Types for Ready Link Calls

Your phone provides a variety of ringer types that allow you to customize a ringer.

To select a ringer type for Ready Link calls:

1. Select  > **Settings** > **Ready Link** > **Sounds** > **Ringer Type**.
2. Select **Ready Link Calls**, **R-Link Missed**, or **R-Link FloorTone**.
3. Select a ringer type and press .
 - To hear the selected ringer, select **Play** (right softkey).

Setting an Alert Notification for Ready Link Calls

Your phone can alert you with an audible tone when you receive a Ready Link call.

To set alerts for Ready Link calls:

1. Select  > **Settings** > **Ready Link** > **Sounds** > **Alerts**.
2. Select **Ready Link Calls**, **R-Link Missed**, **Headset Alert**, or **Floor Tone Vol.**
3. Select an option and press .

To adjust the floor tone volume:

1. Select  > **Settings** > **Ready Link** > **Sounds** > **Alerts**.
2. Select **Floor Tone Vol.** > **Earpiece** or **Speaker**.
3. Press the navigation key left or right to select a volume level and select **Done** (left softkey).

Tip:

You can also set alerts using the Alert Notification menu.
(See “Alert Notification” on page 51.)

Setting the Speakerphone for Ready Link Calls

You can set your phone to use speakerphone mode for Ready Link calls. By default, the speakerphone is set to on.

To set the speakerphone mode:

- ▶ Select  > **Settings** > **Ready Link** > **Speakerphone** > **On** or **Off**.

Note:

If the phone's ringer volume is set to Vibrate All, Ringer off, or Silence All, the speakerphone turns off. Press **SPEAKER** to turn the speakerphone mode on.

Setting the Default View of the Ready Link List

You can select the default Ready Link List when Ready Link is launched.

To select the default view of the Ready Link List:

1. Select  > **Settings** > **Ready Link** > **Default View**.
(The available lists will be displayed.)
2. Select a list and press .

Setting the Floor Display for Ready Link Calls

With this feature, you can select the floor display for the Main LCD during Ready Link calls.

To select the floor display:

1. Select  > **Settings** > **Ready Link** > **Floor Display**.
2. Select **Text Only** or **Text & Image**.

Using the Built-in Camera

In This Section

- ◆ **Taking Pictures** (page 148)
 - ◆ **Using the Settings & Info Menu** (page 154)
 - ◆ **Storing Pictures** (page 156)
 - ◆ **Sending Sprint Picture Mail** (page 158)
 - ◆ **Managing Sprint Picture Mail** (page 160)
-

Your phone's built-in camera gives you the ability to take full-color digital pictures, view your pictures using the phone's display, and instantly send them to family and friends. It's fun and as easy to use as a traditional point-and-click camera: just take a picture, view it on your phone's display, and send it from your phone to up to 16 people.

This section explains the features and options of your phone's built-in camera.

Taking Pictures

Taking pictures with your phone's built-in camera is as simple as choosing a subject, pointing the lens, and pressing a button. You can activate the phone's camera mode whether the phone is open or closed.

To take a picture with the phone open:

1. Select  > **Pictures** > **Camera** to activate camera mode. (Additional camera options are available through the camera mode **Options** menu. See "Camera Mode Options" on page 150 for more information.)

Shortcut:

To activate camera mode, you can also press and hold the camera key.

2. Using the phone's Main LCD as a viewfinder, aim the camera lens at your subject.
3. Select **Capture** (left softkey), or press  , or the side camera key until the shutter sounds. (The picture will be saved in the In Camera folder.)
 - To return to camera mode to take another picture, press .
4. Select **Next** (right softkey) for more options:
 - **Camera Mode** to return to camera mode to take another picture.
 - **Send** to send your picture. (See page 158 for details.)
 - **Upload** to upload the picture you just took to the Sprint Picture Mail Web site (<http://pictures.qwest.com>). Depending on your settings, you may be prompted to accept a data connection.
 - **Set as** to assign the picture. Select an option and press .
 - **Details/Edit** to edit or display details relating to your pictures.

- **Delete** to delete the picture you just took.
- **Pics In Camera** to go to the In Camera folder to review your saved pictures.

To take a picture with the phone closed:

1. Press and hold the side camera key to activate the camera mode.
2. Point the camera lens at your subject.
3. Press the side camera key to take the picture. (The picture will automatically be saved.)

Creating Your Sprint Picture Mail Password

The first time you use any of the picture management options involving the Sprint Picture Mail Web site, you will need to establish a Sprint Picture Mail password through your phone. This password will also allow you to sign in to the Sprint Picture Mail Web site at <http://pictures.qwest.com> to access and manage your uploaded pictures and albums.

To create your Sprint Picture Mail password:

1. Select  **> Pictures > Online Albums**. (You will be prompted to create a Sprint Picture Mail password.)
2. Enter your password and press . (You will be prompted to confirm your password.)
3. Please wait while the system creates your account.

Tip:

Write down your Sprint Picture Mail password in a secure place.

Once you have received confirmation that your account has been successfully registered, you may upload and share pictures and access the Sprint Picture Mail Web site.

Camera Mode Options

When the phone is open and in camera mode, select **Options** (right softkey) to display additional camera options:

- **Picture Mode** to select a picture mode from **Normal**, **Beach/Snow**, **Scenery**, **Night/Dark**, or **Soft Focus**.
- **Zoom** to zoom in on a subject. (See “Using the Zoom” on page 151 for details.)
- **Self-Timer** to activate the camera’s timer. (See “Setting the Self-Timer” on page 151 for details.)
- **Fun Tools** to select an option from the following:
 - **Multiple Shots** to take multiple shots. (See “Taking Multiple Shots” on page 152.)
 - **Stitch Shot** to take a stitch shot by stitching separate images together. (See “Taking Stitch Shots” on page 153.)
 - **Fun Frames** to select your favorite fun picture frame to decorate your picture.
 - **Color Tone** to select a wide variety of color tones for the picture.
- **Image Controls** to select an option from **Brightness** or **White Balance**.
- **CameraSettings** to select your settings. (See “Selecting Camera Settings” on page 153 for details.)
- **Pics In Camera** to go to your phone’s In Camera folder. (See “In Camera Folder” on page 156 for details.)
- **Key Guidance** to indicate the key functions in camera mode.
- **User Settings** to select your favorite setting.

Setting the Self-Timer

To activate the self-timer:

1. From camera mode, select **Options** (right softkey) > **Self-Timer**.
2. Highlight the length of delay you want the timer to use (**10 Seconds** or **5 Seconds**) and press .
3. Press **Start** (left softkey) when you are ready to start the timer.  appears on the upper right portion of the Main LCD during the self-timer countdown.)
4. Get ready for the picture. (When the timer is down to three seconds, the self-timer icon will turn red and the phone will begin to beep.)

To cancel the self-timer after it has started:

- ▶ Select **Cancel** (right softkey).

Note:

While the self-timer is active, all keys are disabled except **Back**, **END**, and the right softkey (**Cancel**).

Using the Zoom

This feature allows you to zoom in on an object when you take a picture. You can adjust the zoom from 1x to 16x (not available for high resolution).

To use the zoom:

1. From camera mode, press the navigation key right or left, or the Side Volume key up or down to adjust the zoom. (The gauge bar is displayed.)
2. Press  to take the picture.

Taking Multiple Shots

This feature allows you to take up to nine continuous shots in sequence. When you take multiple shots, the  icon will be displayed in the viewfinder.

To take multiple shots:

1. From camera mode, select **Options** (right softkey) > **Fun Tools** > **Multiple Shots**.
2. Select an option from the following and press .
 - **Off** to deactivate multiple shots.
 - **3 Shots** to take a series of 3 shots.
 - **6 Shots** to take a series of 6 shots.
 - **9 Shots** to take a series of 9 shots.
3. Select the duration of the interval between shots (**Normal** or **Fast**) and press .
4. Select  to take the pictures. (The Multiple Shots folder will be displayed, up to four thumbnail pictures per screen.)
5. Select **Next** (right softkey) to display picture options, or press  to return to Camera mode to take another picture.

Taking Stitch Shots

Stitch Shot allows you to stitch separate images together. With this feature, your phone's viewfinder is divided in two and you can shoot each part separately. When you shoot the first part, the camera displays a section of the previous part, so you can line up the next picture with the first one.

To take a stitch shot:

1. From camera mode, select **Options** (right softkey) > **Fun Tools** > **Stitch Shot**.
2. Select **Vertical** or **Horizontal**.
 - Use your navigation key to switch the stitch display.
3. To take the first picture, press .
4. To take the second picture, press .

Selecting Camera Settings

To select your camera settings:

1. From camera mode, select **Options** (right softkey) > **CameraSettings**.
2. Select one of the following options and press :
 - **Resolution** to select a picture's file size (**High-480x640**, **Med-240x320** or **Low-120x160**).
 - **Quality** to select the picture quality setting (**Fine**, **Normal**, or **Economy**).
 - **Shutter Sound** to select a shutter sound (**Default**, **Say "Cheese,"** or **Off**).
 - **Status Bar** to switch the status bar display on or off.

Using the Settings & Info Menu

The Settings & Info menu allows you to set up many of the settings of your phone's picture's function.

To access the settings and info menu:

1. Select  > **Pictures > Settings & Info.**
2. Select one of the following options and press .
 - **Auto Delete** to erase automatically the pictures you have uploaded to your online Sprint Picture Mail account from your phone.
 - **Status Bar** to select whether to display the information bar for the pictures.
 - **Slideshow Intvl** to set the slideshow interval time.
 - **Account Info** to view your account information.

Camera Icon Indication

Function		Icons	Details
Picture Mode	Beach/Snow		Use this setting in bright light.
	Scenery		Use this setting for scenery from a distance.
	Night/Dark		Use this setting in low light.
	Soft Focus		Use this setting to "soften" the picture.
White Balance	Sunny		Use this setting for sunny weather.
	Cloudy		Use this setting for cloudy weather.
	Tungsten		Use this setting for standard household lighting.
	Fluorescent		Use this setting for fluorescent lighting.
	Manual		To set the white balance manually.
Brightness	Manual		To set brightness manually.
Resolution	High		For high picture resolution.
	Medium		For medium picture resolution.
	Low		For low picture resolution.
Self-Timer			Numeric countdown will appear when the self-timer has been activated.
Multiple Shots			Use this setting for multiple shots.

Storing Pictures

Your phone's picture storage area is called **My Pictures**. There are two types of storage areas for your pictures that can be used separately according to your needs:

- **In Camera** (see below)
- **Saved to Phone** (see page 157)

In Camera Folder

The storage area of your phone is called the **In Camera** folder. From the In Camera folder, you can view pictures saved in your phone, send them to the Picture Mail Web site (<http://pictures.qwest.com>), delete images, and access additional options.

To review your pictures saved in the In Camera folder:

1. Select  **> Pictures > My Pictures > In Camera**. (Thumbnails will be displayed, up to four at a time.)
2. Use your navigation key to view and scroll through the pictures.

In Camera Folder Options

When you are viewing the In Camera folder, select **Options** (right softkey) to display the following options:

- **Thumbnail/Expand** to switch to the Thumbnail/Expand view mode.
- **Upload** to upload pictures from the In Camera folder to the Picture Mail Web site (<http://pictures.qwest.com>).
- **Set as** to assign the picture. Select an option and press .
- **Details/Edit** to edit or display details relating to your pictures.
- **Slideshow** to view your pictures in slideshow mode.
- **Delete** to delete pictures.

Note:

Deleting data will free up memory space to enable you to take more pictures. Once deleted, the data cannot be uploaded to your online Sprint Picture Mail account.

- **Save to Phone** to save the selected pictures in the Saved to Phone folder.
- **Go to Svd to Ph.** to display the Saved to Phone folder.
- **Camera Mode** to activate camera mode.

Saved to Phone Folder

When you assign a picture, it will automatically be saved in the **Saved to Ph.** folder. The folder allows you to store copies of pictures on your phone and to assign pictures to various phone tasks.

To assign a picture and save it to the Saved to Phone folder:

1. From the In Camera folder (see “In Camera Folder” on page 156), select a picture you wish to save to the Saved to Phone folder.
2. Press **Options** (right softkey).
3. Select **Set as**.
4. Select an option. (A copy of the picture will automatically be saved to the Saved to Phone folder.)

To save multiple pictures to the Saved to Phone folder:

1. From the In Camera folder, select pictures by pressing . (Multiple pictures can be selected.)
2. Press **Options** (right softkey) > **Save to Phone**.

To view pictures stored in the Saved to Phone folder:

1. Select **MENU** > **Pictures** > **My Pictures** > **SavedTo Ph.** (Thumbnails will be displayed, up to four at a time.)
2. Use your navigation key to view and scroll.

Sending Sprint Picture Mail

Once you've taken a picture, you can use the messaging capabilities of your phone to instantly share your picture with family and friends. You can send pictures to up to 16 people at a time using their email addresses or their wireless phone numbers.

Sending Pictures From the In Camera Folder

To send pictures from the In Camera folder:

1. Select **MENU** > **Pictures** > **My Pictures** > **In Camera**.
2. Highlight a picture you wish to send and press **MENU**.
(The check box on the lower right corner will be marked. You can select multiple pictures.)
3. Press **Send** (left softkey). (You will see a message on the display.)

Note:

The first time you send Sprint Picture Mail, you will be prompted to establish a Sprint Picture Mail Web site account and password. (See "Creating Your Sprint Picture Mail Password" on page 149.)

4. Select **Recipients** and one of the following options, and press **MENU**:
 - **Contacts** to select recipients from your Contacts. Highlight a recipient and press **MENU** to select.
 - **Phone#** to enter a phone number directly.
 - **Email** to enter an email address directly.

Tip:

You can also select **Others** (right softkey) to select recipients from a list.

5. Select **Next** (left softkey) when you have finished adding recipients. (You may include up to 16 recipients per message.)
6. If you wish to include a subject, scroll to **Subject** and enter your subject using the keypad.
7. If you wish to include a text message, scroll to **Text**, and then enter your message using your keypad (or select **Mode** [right softkey] to change the input mode). (See “Entering Text” on page 39.)
8. If you wish to include a voice message with the picture, scroll to **Audio** and select **Record** (right softkey) to record. (Maximum recording time is 10 seconds.)
9. Confirm the recipients, message, voice message, and picture. (You may also select additional options by selecting the right softkey. Follow the onscreen instructions to add available options.)
10. Press the appropriate softkey to send the pictures.

Sending Pictures From Messaging

You can also send Sprint Picture Mail from your phone's Messaging menu.

To send pictures from the Messaging menu:

1. Select **MENU** > **Messaging** > **Pic. Mail** > **Compose** (left softkey).
2. Select **From My Pics.**, **Take Picture**, or **Online Albums**.
3. Use the navigation key to select the picture you wish to send and press **MENU**. (You can select multiple pictures.)
4. Select **Next** (left softkey). To complete and send the pictures, follow steps 4-10 in “Sending Pictures From the In Camera Folder” on page 158.

Tip:

To take and send a new picture from Messaging, select **Take Picture** during step 2 above. Then take the new picture, select **Next** (right softkey), and follow steps 4-10 in “Sending Pictures From the In Camera Folder” on page 158.

Managing Sprint Picture Mail

Using the Sprint Picture Mail Web Site

Once you have uploaded pictures from your phone to your online Sprint Picture Mail account at <http://pictures.qwest.com> (see “Uploading Pictures” on page 161), you can use your personal computer to manage your pictures. From the Picture Mail Web site (<http://pictures.qwest.com>) you can share pictures, edit album titles, add captions, and organize images. You can even send your pictures to be printed at participating retail locations.

You will also have access to picture management tools to improve and customize your pictures. You'll be able to lighten, darken, crop, add antique effects, add comic bubbles and cartoon effects, and use other features to transform your pictures.

To access the Sprint Picture Mail Web site:

1. From your computer's Internet connection, go to <http://pictures.qwest.com>.
2. Enter your phone number and Sprint Picture Mail password to register. (See “Creating Your Sprint Picture Mail Password” on page 149.)

Managing Online Pictures From Your Phone

You can use your phone to manage, edit, or share pictures you have uploaded to the Sprint Picture Mail Web site at <http://pictures.qwest.com>. (See “Uploading Pictures” below for information about uploading.)

To view your online pictures from your phone:

1. Select  > **Pictures** > **Online Albums** > **View Albums**.
2. Highlight an album title and press  to display thumbnail images.

Tip:

To switch a selected picture from thumbnail view to expand view mode, select **Options** (right softkey) > **Expand**.

3. Use your navigation key to select a picture.
4. Select **Options** (right softkey) to display your online picture options.

Uploading Pictures

To upload pictures:

1. Select  > **Pictures** > **My Pictures** > **In Camera**.
2. Select the picture(s) you wish to upload, and then select **Options** (right softkey) > **Upload**.
3. Select **This, Selected**, or **All**.
4. Select **“Uploads” Area** or **Other Albums**.

Downloading Your Online Pictures

From your online Picture Mail albums display at <http://pictures.qwest.com>, you can select pictures to download to your phone's In Camera folder.

To download pictures from the Sprint Picture Mail Web site:

1. From the online pictures display, select the pictures you wish to download and press **Options** (right softkey). (See "Managing Online Pictures From Your Phone" on page 161.)
2. Select **Save to Phone**, and then select one of the following options and press :
 - **Set as** to assign the picture (**Picture ID**, **Incoming Calls**, or **Screen Saver**). The downloaded pictures are stored in the Saved to Phone folder.
 - **Download Only** to download the picture to the In Camera folder.

Accessing Online Picture Options From Your Phone

To access your online Picture options from your phone:

1. Select a picture from your Online Albums. (See "Managing Online Pictures From Your Phone" on page 161.)
2. Select **Options** (right softkey) to display options.
3. To select an option, highlight it and press .
 - **Thumbnail/Expand** to switch to the Thumbnail/Expand view mode.
 - **Copy/Move** to copy or move pictures to a selected album.
 - **Details/Edit** to edit or display details relating to your pictures.
 - **Delete** to erase pictures saved in the current album (or Uploads folder).
 - **Save to Phone** to save the pictures to the In Camera folder.

- **Create Album** to create a new album (from Uploads folder only).
- **Online Albums** to switch the display to the online album list.

Note:

The online Picture options may vary depending on the item you select.

To access your Online Albums options from your phone:

1. Display the album list in the Online Sprint Picture Mail menu. (See “Managing Online Pictures From Your Phone” on page 161.)
2. Use your navigation key to select an album (or Uploads folder).
3. Select **Options** (right softkey) to display options.
4. To select an option, highlight it and press .
 - **Create Album** to create a new album. Enter a new album name and select **Save** (left softkey).
 - **Delete Album** to delete the selected album.
 - **Rename Album** to rename the selected album.
 - **Album Info** to display detailed information about the album.

Note:

The Uploads folder cannot be erased or renamed.

Using Bluetooth®

In This Section

- ◆ **Turning Bluetooth On and Off** (page 165)
 - ◆ **Using the Bluetooth Settings Menu** (page 166)
 - ◆ **Bluetooth Profiles** (page 169)
 - ◆ **Pairing Bluetooth Devices** (page 170)
 - ◆ **Using the Trusted List Options** (page 171)
 - ◆ **Sending Data via Bluetooth** (page 172)
-

Your phone features built-in Bluetooth technology, allowing you to share information more easily than ever before. Bluetooth is a short-range communications technology that allows you to connect wirelessly to a number of Bluetooth devices, such as headsets and hands-free car kits, and Bluetooth-enabled handhelds, PCs, printers, and wireless phones. The Bluetooth communication range is usually up to approximately 10 meters (30 feet).

This section details how to set up and make the most of your phone's Bluetooth capabilities.

Turning Bluetooth On and Off

By default, your phone's Bluetooth feature is turned off. Turning Bluetooth on makes your phone "available" to other in-range Bluetooth devices. To make your phone visible to other devices you must also set your phone's visibility to other than Hidden. (See page 167.)

To turn Bluetooth on:

1. Select  > **Settings** > **Bluetooth** > **Enable/Disable**.
2. Select **Enable** to enable Bluetooth.

To turn Bluetooth off:

1. Select  > **Settings** > **Bluetooth** > **Enable/Disable**.
2. Select **Disable** to disable Bluetooth.

Note:

Enabling the Bluetooth settings affects the battery's talk and standby times.

Bluetooth Status Indicators

The following icons show your Bluetooth connection status at a glance:

-  – Bluetooth feature is active. It turns to green when connected to a Bluetooth device.
-  – Your phone is discoverable by another Bluetooth device.
-  – Your phone is communicating with a Bluetooth device.

Using the Bluetooth Settings Menu

The **Bluetooth Settings** menu allows you to set up many of the characteristics of your phone's Bluetooth service, including:

- Entering or changing the name your phone uses for Bluetooth communication
- Setting your phone's visibility (or "discoverability") to other Bluetooth devices
- Choosing a device for your Bluetooth calls.
- Displaying your phone's Bluetooth address

To access the Bluetooth Settings menu:

1. Select  > **Settings** > **Bluetooth**.
2. Use the navigation key to select **Enable/Disable**, **Visibility**, **Voice Priority**, **Device Name**, or **Device Info**, and press .

Bluetooth Settings: Device Name

The **Device Name** section of the Bluetooth Settings menu allows you to select a Bluetooth name for your phone. Your phone's Bluetooth name will be seen by other in-range Bluetooth devices, depending on your Visibility settings.

To set a Bluetooth name for your phone:

1. Select  > **Settings** > **Bluetooth** > **Device Name**.
2. Press and hold  to clear the current name.
3. Use your keypad to enter a new name and press  to save and exit.

Bluetooth Settings: Visibility

The **Visibility** section of the Bluetooth Settings menu allows you to manage your availability to other Bluetooth devices.

To configure your phone's visibility (discoverability) to other Bluetooth devices:

1. Select  > **Settings** > **Bluetooth** > **Visibility**.
2. Select a Visibility setting and press :
 - **Always Visible** to allow other Bluetooth devices to detect and identify your phone.
 - **Visible 3 min.** to allow other Bluetooth devices to detect your phone for 3 minutes, after which it returns to hidden mode.
 - **Hidden** to prevent other Bluetooth devices from detecting and identifying your phone.

Note:

It is recommended that your phone is in standby mode when receiving data from other devices via Bluetooth.

Bluetooth Settings: Voice Priority

The **Voice Priority** section of the Bluetooth Settings menu allows you to choose the default device you want to use for incoming and outgoing calls.

To set the voice priority:

1. Select  > **Settings** > **Bluetooth** > **Voice Priority**.
2. Select **Phone** or **Hands-free**.
 - **Phone** allows you to switch the audio between your phone and hands-free devices.
 - **Hands-free** allows only hands-free devices to be used.

Bluetooth Settings: Device Information

To display your phone's device information:

- ▶ Select  > **Settings** > **Bluetooth** > **Device Info**.

Setting Auto-Accept

You can configure your phone's accessibility to other Bluetooth devices.

To configure your phone's accessibility to other Bluetooth devices:

1. Select  > **Tools** > **Bluetooth**.
2. Select the device from the trusted list and select **Options** (right softkey) > **Auto-Accept**.
3. Select a setting and press :
 - **On** allows other Bluetooth devices to initiate a connection without any confirmation.
 - **Off** displays a confirmation screen, from which you can accept or deny the connection.

Bluetooth Profiles

All the Bluetooth settings you configure are stored in your phone's Bluetooth user profile. Different profiles can be used for specific Bluetooth functions.

- **Headset Profile** – This profile functions as a wireless ear jack. When an incoming call is received, the ringer can be heard through the headset instead of through the phone. The call can then be received by pushing a button. While using your phone, you can use the headset instead of the phone by pushing a button on the headset, the same as inserting a jack into the phone. Increase or decrease the volume by using the volume key on the side of the phone.
- **Hands-Free Profile** – This profile functions as a wireless car-kit. Incoming calls ring to the hands-free headset or device. Calls can be received by pressing a button on the headset or device. For dialing, four functions are supported: recent call dial, voice dial, speed dial, and number dial. Increase or decrease the volume by using the volume key on the side of the phone.
- **DUN: Dial-Up Network Profile** – This profile functions as a wireless data cable, connecting a PC or PDA to a network through your phone.
- **OPP: Object Push Profile** – This profile uses the Generic Object Exchange profile services to send data objects between devices and can be used to exchange business cards (vCard).

Pairing Bluetooth Devices

Paired Devices

The Bluetooth pairing process allows you to establish trusted connections between your phone and another Bluetooth device. When devices are paired, a passcode (sometimes called a PIN) is shared between devices, allowing for fast, secure connections while bypassing the discovery and authentication process.

To pair your phone with another Bluetooth device:

1. Select  > **Tools > Bluetooth > Add New > Search.**
(Your phone will display a list of discovered in-range Bluetooth devices.)
2. Select the device you wish to pair with and press .
3. Select **Add to Trusted.**
4. Enter the PIN and press . (When the owner of the other device enters the same PIN, the pairing is complete.)

Waiting for Request

If you are going to be using a Dial-Up Network (DUN) profile to pair with a PC or PDA, you will need to allow the other device to initiate pairing with your phone.

To allow your phone to be paired with another Bluetooth device:

1. Select  > **Tools > Bluetooth > Add New > Wait for Request.**
2. Follow the onscreen prompts to enter your PIN and press .

Using the Trusted List Options

Once you have created paired devices, several options are available from the trusted list.

To use the trusted list options:

1. From the trusted list, select a device.
2. Select **Options** (right softkey) to display the following options:
 - **Connect** or **Disconnect** to connect to or disconnect from the Bluetooth device (if applicable).
 - **Send Item** to send an item saved on your phone to another Bluetooth device.
 - **Edit Name** to edit the name of the trusted device.
 - **Auto-Accept** to configure your phone's accessibility to other Bluetooth devices. (See page 168.)
 - **Device Info** to display the trusted device's information.
 - **Sort by** to sort the trusted list.
 - **Delete** to delete the selected device from the list.
 - **Delete All** to delete all devices from the list.
 - **Settings** to display the Bluetooth settings menu. (See page 166.)

Sending Data via Bluetooth

You can send data saved on your phone to another Bluetooth device.

To send data via Bluetooth:

1. Select  > **Tools > Bluetooth**.
2. Select the device from the trusted list and then select **Options** (right softkey) > **Send Item**.
3. Select an item (**Business Card** or **Contacts**) and press .
4. Follow the onscreen instructions to select the item(s) to send.
5. Make sure the other device is ready to receive data, and then select **Send** (left softkey).
6. If necessary, enter the PIN and press .

Note:

Due to different specifications and features of other Bluetooth-compatible devices, display and operations may be different, and functions such as transfer or exchange may not be possible with all Bluetooth-compatible devices.

Section 3

Qwest® Service Features

Qwest® Service Features: The Basics

In This Section

- ◆ **Using Voicemail** (page 175)
 - ◆ **Using SMS Text Messaging** (page 182)
 - ◆ **Making a Three-Way Call** (page 185)
 - ◆ **Using Caller ID** (page 186)
 - ◆ **Responding to Call Waiting** (page 186)
 - ◆ **Using Call Forwarding** (page 187)
-

Now that you've mastered your phone's fundamentals, it's time to explore the calling features that enhance your wireless service. This section outlines your basic Qwest service features.

Using Voicemail

Setting Up Your Voicemail

All unanswered calls to your phone are automatically transferred to your voicemail, even if your phone is in use or turned off. Therefore, you will want to set up your voicemail and personal greeting as soon as your phone is activated.

To set up your voicemail:

1. Press and hold  **1**.
2. Follow the system prompts to:
 - Create your passcode.
 - Record your name announcement.
 - Record your greeting.
 - Choose whether to activate One-Touch Message Access (a feature that lets you access messages simply by pressing and holding  **1**, bypassing the need for you to enter your passcode).

Note:**Voicemail Passcode**

If you are concerned about unauthorized access to your voicemail account, Qwest recommends that you enable your voicemail passcode (do not activate One-Touch Message Access).

Voicemail Notification

There are several ways your phone alerts you to a new message:

- By displaying a message on the screen.
- By sounding the assigned ringer type.
- By the LED blinking red.
- By displaying  at the top of your screen.

New Voicemail Message Alerts

When you receive a new voice message, your phone alerts you and prompts you to call your voicemail.

To call your voicemail:

- Press .

Note:

When you are roaming off the home network, you may not receive notification of new voicemail messages. It is recommended that you periodically check your voicemail by dialing 1 + area code + your wireless phone number. When your voicemail answers, press (*) and enter your passcode. You will be charged roaming rates when accessing voicemail while roaming off the home network.

Your phone accepts messages even when it is turned off. However, you are notified of new messages only when your phone is turned on and you are in a home network service area.

Retrieving Your Voicemail Messages

You can review your messages directly from your wireless phone or from any other touch-tone phone. To dial from your wireless phone, you can either speed dial your voicemail or use the menu keys.

Using One-Touch Message Access

- ▶ Press and hold  **1**. (Your phone will dial your voicemail box.)

Using the Menu Keys on Your Phone to Access Your Messages

1. Select  > **Messaging > Voicemail**.
2. Select **Call Voicemail** to listen to your messages.

Note:

You are charged for airtime minutes when you are accessing your voicemail from your phone.

Using a Phone Other Than Your Phone to Access Messages

1. Dial your wireless phone number.
2. When your voicemail answers, press .
3. Enter your passcode.

Tip:

When you call into voicemail, you first hear the header information (date, time, and sender information) for the message. To skip directly to the message, press **4** during the header.

Voicemail Key Guide

Here's a quick guide to your keypad functions while listening to voicemail messages. For further details and menu options, see "Voicemail Menu Key" on page 181.

 1	ABC 2	DEF 3
Date/Time	Send Reply	Advance
GHI 4	JKL 5	MNO 6
Replay	Rewind	Forward
PQRS 7	TUV 8	WXYZ 9
Erase	Call Back	Save
Shift ✕	+ 0	Space #
Cancel	Help	Skip

Voicemail Options

Your phone offers several options for organizing and accessing your voicemail.

Using Expert Mode

Using the Expert Mode setting for your personal voicemail box helps you navigate through the voicemail system more quickly by shortening the voice prompts you hear at each level.

To turn Expert Mode on or off:

1. Press and hold  **1** to access your voicemail. (If your voicemail box contains any new or saved messages, press  to access the main voicemail menu.)
2. Press **DEF 3** to change your Personal Options, following the system prompts.
3. Press **DEF 3** for Expert Mode.
4. Press  **1** to turn Expert Mode on or off.

Setting Up Group Distribution Lists

Create up to 20 separate group lists, each with up to 20 entries.

1. Press and hold **☎ 1** to access your voicemail. (If your voicemail box contains any new or saved messages, press **Shift ✕** to access the main voicemail menu.)
2. Press **DEF 3** to change your Personal Options, following the system prompts.
3. Press **☎ 1** for Settings.
4. Press **JKL 5** for Group Distribution Lists.
5. Follow the voice prompts to review, create, edit, rename, or delete group lists.

Callback

Return a call after listening to a message without disconnecting from voicemail.

- ▶ Press **TUV 8** after listening to a message. (Once the call is complete, you're returned to the voicemail main menu.)

Voicemail-to-Voicemail Message

Record and send a voice message to other voicemail users.

1. From the main voicemail menu, press **ABC 2** to send a message.
2. Follow the voice prompts to enter the phone number.
3. Follow the voice prompts to record and send your voice message.

Voicemail-to-Voicemail Message Reply

Reply to a voice message received from any other voicemail user.

1. After listening to a voice message, press **ABC 2**.
2. Follow the voice prompts to record and send your reply.

Voicemail-to-Voicemail Message Forwarding

Forward a voice message, except those marked “Private,” to other voicemail users.

1. After listening to a message, press **MNO 6**.
2. Follow the voice prompts to enter the phone number.
3. Follow the voice prompts to record your introduction and forward the voice message.

Voicemail-to-Voicemail Receipt Request

Receive confirmation that your voice message has been listened to when you send or forward messages to or reply to messages from other voicemail users.

1. After you have recorded a message, press **ABC 2** to listen to the recorded message.
2. Press **JKL 5** for more Options.
3. Press **DEF 3** to mark receipt requested.
4. Press **EN 1** to send your voicemail message.

Extended Absence Greeting

When your phone is turned off or you are off the home network for an extended period, this greeting can be played instead of your normal personal greeting.

1. From the main voicemail menu, press **DEF 3** for Personal Options.
2. Press **ABC 2** for Greetings.
3. Press **DEF 3** to record an Extended Absence Greeting.

Clearing the Message Icon

Your phone may temporarily continue to display the message icon after you have checked your voice and text messages.

To clear the icon from the display screen:

1. Select **MENU OK** > **Messaging** > **Voicemail** > **Clear Count**.
2. Select **Yes**.

Voicemail Menu Key

Following the prompts on the voicemail system, you can use your keypad to navigate through the voicemail menu. The following list outlines your phone's voicemail menu structure.

- 1 Listen**
 - 1 Envelope Information**
 - 2 Reply**
 - 3 Advance 8 Seconds**
 - 4 Replay**
 - 5 Rewind**
 - 6 Forward Message**
 - 7 Erase**
 - 8 Callback**
 - 9 Save**
 - + 0 Options**
- 2 Send a Message**
- 3 Personal Options**
 - 1 Settings**
 - 1 Skip Passcode**
 - 2 Autoplay On/Off**
 - 3 Message Date & Time On/Off**
 - 4 Change Passcode**
 - 5 Group Distribution List**
 - 6 Numeric Paging to a Phone On/Off**
 - Shift X Return to the Previous Menu**

ABC **2** Greetings

☒ **1** Main Greetings

ABC **2** Recorded Name

DEF **3** Create and Extended Absence Greeting

Shift **X** Return to Personal Options Menu

DEF **3** Expert Mode (On/Off)

TUV **8** Place a Call

Shift **X** Disconnect

Using SMS Text Messaging

With SMS Text Messaging, you can use other people's phone numbers to send instant text messages from your phone to their messaging-ready phones – and they can send messages to you.

In addition, SMS Text Messaging includes a variety of preset messages, such as “Can’t talk right now. Send me a message.” that make composing messages fast and easy. (See page 60 for details.) You can also customize your own preset messages (up to 50 characters) from your phone.

Composing SMS Text Messages

To compose an SMS Text message:

1. Select **MENU** **OK** **> Messaging > Send Message > Text** and select the entry method you prefer:
 - **Contacts** to select a recipient from your internal Contacts. (Qualifying Contacts entries must contain a phone number or an email address.)
 - **Phone#** to use the keypad to enter the phone number of the person to whom you wish to send a message.
 - **Email** to enter the recipient's email address.

Tip:

You can also select **Others** (right softkey) to select recipients from a list.

2. Press **MENU OK** to save the recipient. (You may include up to 25 recipients per message.)
3. Select **Next** (left softkey) when you have finished selecting and entering recipients.
4. Compose a message or use the preset messages or smileys (icons).
 - To type a message, use your keypad to enter your message. Select **Mode** (right softkey) to select a character input mode. (See “Entering Text” on page 39.)
5. Scroll down to select the message priority (**Ordinary** or **Urgent**), set the callback number, or set the signature.
6. Review your message and select **Send** (left softkey). (You may also select additional messaging options by selecting **Options** [right softkey] to change the recipients or save to draft.)

Tip:

You can also send an SMS Text message when the left softkey displays the **Send Msg** option.

Accessing SMS Text Messages

To read an SMS Text message:

- ▶ When you receive a text message, it will be displayed automatically on your phone's screen. Use your navigation key to scroll down and view the entire message.

Tip:

If you have two or more notifications, the Missed Alert list will appear. Select a message in the list and press **View** (left softkey) to view the message.

To reply to an SMS Text message:

1. While the message is open, select **Reply** (left softkey).
— or —
Highlight the message in Inbox, and select **Options** (right softkey) > **Reply via > Text**.
2. Compose your reply or use the preset messages or icons.
 - To type a message, use your keypad to enter your message. Use **Mode** (right softkey) to select a character input mode. (See “Entering Text” on page 39.)
3. Review your reply and select **Send** (left softkey).
(You may also select additional messaging options by selecting **Options** [right softkey] to change the recipients or save to draft.)

Editing Preset Messages

Preset messages make sending text messages to your friends, family, and coworkers easier than ever.

To send preset messages into the text box:

1. Select  > **Settings > Messaging > Preset Msgs**.
2. Highlight a message you wish to send and select **Options** (right softkey) > **Send Text**.

To edit preset messages:

1. Select  > **Settings > Messaging > Preset Msgs**.
2. Select a message you wish to edit and press .
3. Enter your new message or changes and press **OK** (left softkey). (See “Entering Text” on page 39.)

To reset preset messages:

1. Select **MENU** > **Settings** > **Messaging** > **Preset Msgs**.
2. Press **Options** (right softkey).
3. Select **Reset All Msgs** > **Yes**.

Making a Three-Way Call

With Three-Way Calling, you can talk to two people at the same time. When using this feature, the normal airtime rates will be charged for each of the two calls.

To make a Three-Way Call:

1. Enter a number you wish to call and press **TALK**.
2. Once you have established the connection, press **TALK**.
(This puts the first caller on hold.)
3. Dial the second number you wish to call and press **TALK**.
4. When you're connected to the second party, press **TALK** again to begin your three-way call.

If one of the people you called hangs up during your call, you and the remaining caller stay connected. If you initiated the call and are the first to hang up, all other callers are disconnected.

Using Caller ID

Caller ID allows people to identify a caller before answering the phone by displaying the number of the incoming call. If you do not want your number displayed when you make a call, just follow these easy steps.

To block your phone number from being displayed for a specific outgoing call:

1. Press **Shift** **X** **MNO** **6** **PQRS** **7**.
2. Enter the number you want to call.
3. Press **TALK**.

To permanently block your number, call Qwest Wireless® Repair at 1-888-879-0611.

Responding to Call Waiting

When you're on a call, Call Waiting alerts you to incoming calls by sounding one beep. Your phone's screen informs you that another call is coming in and displays the caller's phone number (if it is available).

To respond to an incoming call while you're on a call:

- ▶ Press **TALK**. (This puts the first caller on hold and answers the second call.)

To switch back to the first caller:

- ▶ Press **TALK** again.

Tip:

For those calls where you don't want to be interrupted, you can temporarily disable Call Waiting by pressing ***70** before placing your call. Call Waiting is automatically reactivated once you end the call.

Using Call Forwarding

Call Forwarding lets you forward all your incoming calls to another phone number – even when your phone is turned off. You can continue to make calls from your phone when Call Forwarding is activated.

To activate Call Forwarding:

1. Press **Shift** ***** **PQRS** **7** **ABC** **2** .
2. Enter the area code and phone number to which calls should be forwarded.
3. Press **TALK** . (You will hear a tone to confirm the activation of Call Forwarding.)

To deactivate Call Forwarding:

1. Press **Shift** ***** **PQRS** **7** **ABC** **2** **+** **0** .
2. Press **TALK** . (You will hear a tone to confirm the deactivation.)

Note:

You are charged a higher rate for calls you have forwarded.

Ready Link calls cannot be forwarded.

Sprint Vision

In This Section

- ◆ **Sprint Vision Applications** (page 189)
 - ◆ **Getting Started With Sprint Vision** (page 189)
 - ◆ **Accessing Messaging** (page 195)
 - ◆ **Downloading Content** (page 197)
 - ◆ **Exploring the Web** (page 199)
-

Sprint Vision offers easy and amazing data services you will really use. These features — including messaging, games, downloadable ringtones and screen savers, and portable Web access — let you have fun, stay in touch, and stay informed no matter where you go on the network.

This section introduces these advanced services and walks you through the necessary steps to start taking advantage of Sprint Vision Services.

Sprint Vision Applications

Here is a brief list of the applications available through your phone. For more information, please visit us online at www.qwest.com.

Sprint Picture Mail – Instantly shoot, share, and print sharp, high-resolution digital pictures with your phone.

Messaging – Send and receive email messages and chat on your phone.

Games – Play exciting games with full-color graphics, sound, and vibration. Choose from hundreds of games to play anytime.

Ringers – Personalize your phone by downloading and assigning different ringers to numbers in your Contacts.

Screen Savers – Download unique images to use as screen savers – or make it easy to tell who's calling by assigning specific images to numbers in your Contacts.

Web – Experience full-color graphic versions of popular Web sites from your phone.

Getting Started With Sprint Vision

With your phone and wireless service from Qwest, you are ready to start enjoying the advantages of Sprint Vision. This section will help you learn the basics of using your Sprint Vision services, including managing your user name, launching a Vision connection, and navigating the Web with your phone.

Your User Name

When you buy a compatible phone and sign up for service, you're automatically assigned a user name, which is typically your 10-digit wireless phone number followed by "@qwest.sprintpcs.com." For example, if your phone number is 555-123-4567, your user name will be 5551234567@qwest.sprintpcs.com.

When you use Sprint Vision services, your user name is submitted to identify you to the network. The user name is also useful as an address for email, as a way to personalize Web services, and as an online virtual identity.

Your user name will be automatically programmed into your phone. You don't have to enter it.

Updating Your User Name

When you change the programmed user name and select a new one, you can update your user name through your phone.

To update your user name:

- ▶ Select  > **Settings > Data > Update Profile**.
(To cancel, press  before completing the update process.)

Finding Your User Name

If you aren't sure what your user name is, you can easily find it on your phone.

To find your user name:

- ▶ Select  > **Settings > Phone Info > Phone#/UserID**.

Launching a Data Connection

To launch a data connection:

- ▶ Select **MENU** > **Web**. (Your data connection will start and the Sprint Vision home page will be displayed.)

The Sprint Vision Home Page



Note: If Net Guard is enabled and displayed (see page 192), select **OK** (left softkey) to continue and access the Web.

Tip: When Ready Link Guard is set to on, a warning message will be displayed. Press **Continue** (left softkey) to continue. (See "Setting Ready Link Guard" on page 144.)

While connecting, the following message will be displayed on the screen:

Connecting... Please wait.

If you had a previous data connection, you may not see the "Connecting..." message when you start the session.

Net Guard

When you first connect to the Web, the Net Guard will be displayed to confirm that you want to connect. This feature helps you avoid accidental connections. You can disable the Net Guard in the future by selecting **Always Auto-Connect** when the Net Guard is displayed.

To change your Net Guard settings:

- ▶ Select  > **Settings > Data > Net Guard**.
 - Select **On** to activate the Net Guard.
 - Select **Off** to deactivate the Net Guard.

Note:

When enabled, the Net Guard appears only once as long as you have not turned the phone off and on.

Data Connection Status and Indicators

Your phone's display lets you know the current status of your data connection through indicators which are displayed at the top of the screen. The following symbols are used:



Your data connection is active (data is being transferred); the transmit/receive symbol will blink to indicate data transmission. Incoming voice calls go directly to voicemail; outgoing voice calls can be made, but the data connection will terminate.



Your data connection is dormant (no data is being sent or received). Though not currently active, when dormant the phone can restart an active connection quickly; voice calls can be made and received.



Your phone is not currently able to access data service features.

If no indicator is displayed, your phone does not have a current data connection. To launch a connection, see “Launching a Data Connection” on page 191.

Navigating the Web

Navigating through menus and Web sites during a data session is easy once you've learned a few basics. Here are some tips for getting around:

Softkeys

During a data session, the bottom line of your phone's display contains one or more softkeys. Softkeys are shortcut controls for navigating around the Web, and they correspond to the keys directly below the phone's display screen.

Tip:	Depending on which Web sites you visit, the labels on the softkeys may change to indicate their function.
-------------	---

To use softkeys:

- ▶ Press a softkey. (If an additional pop-up menu is displayed when you press the softkey, select the menu items using your keypad [if they're numbered], or by highlighting the option and pressing .)

Scrolling

As with other parts of your phone's menu, you'll have to scroll up and down to see everything on some Web sites.

To scroll line by line through Web sites:

- ▶ Press the navigation key up or down.

To scroll page by page through Web sites:

- ▶ Press the Side Volume key.

Selecting

Once you've learned how to use softkeys and scroll, you can start navigating the Web.

To select onscreen items:

- ▶ Use the navigation key to highlight an item, and then press a softkey (or press ).

Tip:

You'll find that the left softkey is used primarily for selecting items. This softkey is often labeled "Go."

If the items on a page are numbered, you can use your keypad (number keys) to select an item. (The tenth item in a numbered list may be selected by pressing **0** on your phone's keypad, even though the number 0 doesn't appear on the screen.)

Links, which are displayed as underlined text, allow you to jump to different Web pages, select special functions, or even place phone calls.

To select links:

- ▶ Highlight the link and press the appropriate softkey.

Going Back

To go back one page:

- ▶ Press the  key on your phone.

Note:

The **BACK** key is also used for deleting text (like a BACKSPACE key) when you are entering text.

Going Home

To return to the home page from any other Web page:

- ▶ Press and hold .
- or —
- Press the right softkey > **Home** > **OK** (left softkey).

Accessing Messaging

You can send and receive emails, text messages, and Sprint Picture Mail messages right from your phone. Messaging allows you to stay connected to friends, family, and coworkers 24 hours a day anywhere on the home network.

Message Types

There are many types of text messaging available on your phone. These include SMS Text Messaging, Instant Messaging, and Email.

Accessing Email Providers

With Sprint Vision, you can use popular email services such as Yahoo!® Mail to keep in touch, even while you're on the go.

To access email providers from your phone:

1. From the Vision home page, select **Messaging > Email**.
2. Select an email provider.
3. Use your keypad to enter the required sign-in information for the selected provider, such as user name, email address, or password, and select **Sign In**. (Your mailbox for the selected provider will be displayed.)

Note:

The information required to sign in will vary depending on the email provider you are accessing.

4. Follow the onscreen instructions to read, reply to, compose, send, and manage messages in your email account.

Accessing Instant Messaging

Sprint Vision also provides you with access to popular instant messaging (IM) clients, including AOL® Instant Messenger™ and Yahoo!® Messenger.

To access instant messaging clients from your phone:

1. From the Vision home page, select **Messaging > Instant Messaging**.
2. Select an IM provider, such as **AOL**, or **Yahoo!**.
3. Use your keypad to enter the required sign-in information for the selected provider, such as user name or password, and select **Sign In**. (Your IM screen for the selected provider will be displayed.)

Note:

The information required to sign in will vary depending on the instant messaging provider you are accessing.

4. Follow the onscreen instructions to read, reply to, compose, send, and manage messages in your IM account.

Downloading Content

With Sprint Vision, you have access to a dynamic variety of downloadable content, such as Games, Ringers, Screen Savers, and other applications. (Additional charges may apply.) The basic steps required to access and download Premium Service content are outlined below.

Accessing the My Content Menus

To access the download menus:

1. Select  **> My Content**.
2. Select the type of file or service (**Games, Ringers, Screen Savers, or Applications**).
3. Select **Get New** (if applicable). (The browser will start and take you to the corresponding download menu.)

To access the download menus from the Web browser:

- ▶ From the Vision home page, select **Downloads > Games, Ringers, Screen Savers**, or other items to go to the corresponding download menu. (For more information on navigating the **Web**, see “Navigating the Web” on page 193.)

Selecting an Item to Download

You can search for available items to download in a number of ways:

- **Featured** displays a rotating selection of featured items.
- **Categories** allows you to narrow your search to a general category, such as Country or Pop/Rock for Ringers or For the Ladies for Screen Savers. (There may be several pages of available content in a list. Select **Next 9** to view additional items.)
- **Search** allows you to use your keypad to enter search criteria to locate an item. You may enter an entire word or title or perform a partial-word search.

Downloading an Item

Once you've selected an item you wish to download, highlight it and press , or select **Go** (left softkey). You will see a summary page for the item including its title, the vendor, the download details, the file size, and the cost. Links allow you to view the **License Info** page, which outlines the price, license type, and length of license for the download; and the **Terms of Use** page, which details the Premium Services Terms of Use and your responsibility for payment.

To download a selected item:

1. From the information page, select **Buy**. (The item will download automatically. When the **New Download** screen is displayed, the item has been successfully downloaded to your phone.)

Note:	If you have not previously purchased an item, you will be prompted to create your purchasing profile.
--------------	---

2. Once the item has been successfully downloaded and the completed screen appears, select an option to assign the ringer or screen saver, run the application, listen to music, play the game, etc.

Exploring the Web

With Web access on your phone, you can browse full-color graphic versions of your favorite Web sites, making it easier than ever to stay informed while on the go. Follow sports scores, breaking news and weather, and shop on your phone anywhere on the home network.

In addition to the features already covered in this section, the Sprint Vision home page offers access to these colorful, graphically rich Web categories, including **News, Weather, Entertainment, Sports, and Money**, as well as useful management options including **Search**. Many sites are available under more than one menu – choose the one that's most convenient for you.

Using the Browser Menu

Navigating the Web from your phone using the Vision home page is easy once you get the hang of it. For details on how to navigate the Web, select menu items, and more, see “Navigating the Web” on page 193.

Although the Vision home page offers a broad and convenient array of sites and services for you to browse, not all sites are represented, and certain functions, such as going directly to specific Web sites, are not available.

For these and other functions, you will need to use the browser menu.

The browser menu offers additional functionality to expand your use of the Web on your phone.

Opening the Browser Menu

The browser menu may be opened anytime you have an active Sprint Vision session, from any page you are viewing.

To open the browser menu:

- ▶ Press the right softkey from any page during an active data session. (The browser menu will be displayed.) (To launch a data session, please see “Launching a Data Connection” on page 191.)

Options available under the browser menu include:

- **Home.** Returns the browser to the home page.
- **Forward.** Allows you to go forward to the pages you have visited.
- **Mark this page.** Allows you to create new bookmarks.
- **View Bookmarks.** Allows you to view and access bookmarked sites.
- **Search.** Launches a Web search.
- **Send Page.** Allows you to send the URL you're viewing through SMS Text Messaging.
- **Go to URL....** Allows you to navigate directly to a Web site by entering its URL (Web site address).
- **History.** Displays the pages you have visited.
- **Refresh this page.** Reloads the current Web page.
- **More....** Displays the additional menu options.

Creating a Bookmark

Bookmarks allow you to store the addresses of your favorite Web sites for easy access at a later time.

To create a bookmark:

1. Go to the Web page you want to mark.
2. Press the right softkey to open the browser menu.
3. Select **Mark this page** and press  or **SAVE** (left softkey).
4. Press .

Note:

Bookmarking a page does not store the page's contents, just its address.

Some pages cannot be bookmarked. Whether a particular Web page may be marked is controlled by its creator.

Accessing a Bookmark

To access a bookmark:

1. Press the right softkey to open the browser menu.
2. Select **View Bookmarks** and press **OK** (left softkey).
3. Scroll to highlight the bookmark you'd like to access and press  or **OK** (left softkey) to go to the Web site.

Editing a Bookmark

To edit a bookmark:

1. Connect to the Web and press the right softkey to access the browser menu.
2. Select **View Bookmarks** and press **OK** (left softkey).
3. Select the bookmark you wish to edit and press the right softkey.
4. Select **Edit**.
5. Use your keypad to edit the address or title.
6. Select **SAVE** (left softkey).

Deleting a Bookmark

To delete a bookmark:

1. Press the right softkey to open the browser menu.
2. Select **View Bookmarks** and press **OK** (left softkey).
3. Scroll to highlight the bookmark you'd like to delete and press the right softkey.
4. Select **Delete** and press . (A confirmation screen will be displayed.)
5. Select **Yes** (right softkey) to remove the bookmark.

Going to a Specific Web Site

To go to a particular Web site by entering a URL (Web site address):

1. Connect to the Web and press the right softkey to display the browser menu.
2. Select **Go to URL...** and press **OK** (left softkey).
3. Select **Address** and press **OK** (left softkey).
4. Use your keypad to enter the URL of the Web site you wish to go to and press **OK** (left softkey).

Note: Not all Web sites are viewable on your phone.

Reloading a Web Page

To reload (refresh) a Web page:

1. Press the right softkey to open the browser menu.
2. Select **Refresh this page** and press **OK** (left softkey).

Sending a Web Page

This feature allows you to send a URL (Web site address) you're viewing through SMS Text Messaging.

To send a Web page:

1. From an active data connection, press the right softkey to display the browser menu.
2. Select **Send Page > OK** (left softkey).
3. To complete and send a Web Page, follow steps 2–6 in "Composing SMS Text Messages" on page 182.

Restarting the Web Browser

If the Web browser seems to be malfunctioning or stops responding, you can usually fix the problem by simply restarting the browser.

To restart the Web browser:

1. From an active data connection, press the right softkey to display the browser menu.
2. Select **More...** and press **OK** (left softkey).
3. Select **Restart Browser** and press **OK** (left softkey).

Adjusting the Browser Sound Volume

To adjust the browser sound volume:

1. From an active data connection, press the right softkey to display the browser menu.
2. Select **More... > OK** (left softkey) > **Preferences > OK** (left softkey).
3. Select **Sound Volume > OK** (left softkey).
4. Select a volume level by pressing the navigation key up or down and press .

Section 4

Safety and Warranty Information

Important Safety Information

In This Section

- ◆ **General Precautions** (page 207)
 - ◆ **Maintaining Safe Use of and Access to Your Phone** (page 208)
 - ◆ **Using Your Phone With a Hearing Aid Device** (page 210)
 - ◆ **Caring for the Battery** (page 212)
 - ◆ **Radio Frequency (RF) Energy** (page 213)
 - ◆ **Owner's Record** (page 216)
 - ◆ **Phone Guide Proprietary Notice** (page 216)
-

This phone guide contains important operational and safety information that will help you safely use your phone. Failure to read and follow the information provided in this phone guide may result in serious bodily injury, death, or property damage.

General Precautions

There are several simple guidelines to operating your phone properly and maintaining safe, satisfactory service.

- To maximize performance, do not touch the upper back portion of your phone where the internal antenna is located while using the phone.
- Speak directly into the mouthpiece.
- Avoid exposing your phone and accessories to rain or liquid spills. If your phone does get wet, immediately turn the power off and remove the battery.
- Do not expose your phone to direct sunlight for extended periods of time (such as on the dashboard of a car).
- Although your phone is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending, or sitting on it.
- Any changes or modifications to your phone not expressly approved in this document could void your warranty for this equipment and void your authority to operate this equipment.

Note:

For the best care of your phone, only authorized personnel should service your phone and accessories. Failure to do so may be dangerous and void your warranty.

Maintaining Safe Use of and Access to Your Phone

Do Not Rely on Your Phone for Emergency Calls

Mobile phones operate using radio signals, which cannot guarantee connection in all conditions. Therefore you should never rely solely upon any mobile phone for essential communication (e.g., medical emergencies). Emergency calls may not be possible on all cellular networks or when certain network services or mobile phone features are in use. Check with your local service provider for details.

Using Your Phone While Driving

Talking on your phone while driving (or operating the phone without a hands-free device) is prohibited in some jurisdictions. Laws vary as to specific restrictions. Remember that safety always comes first.

Following Safety Guidelines

To operate your phone safely and efficiently, always follow any special regulations in a given area. Turn your phone off in areas where use is forbidden or when it may cause interference or danger.

Using Your Phone Near Other Electronic Devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, RF signals from wireless phones may affect inadequately shielded electronic equipment.

RF signals may affect improperly installed or inadequately shielded electronic operating systems or entertainment systems in motor vehicles. Check with the manufacturer or their representative to determine if these systems are adequately shielded from external RF signals. Also check with the manufacturer regarding any equipment that has been added to your vehicle.

Consult the manufacturer of any personal medical devices, such as pacemakers and hearing aids, to determine if they are adequately shielded from external RF signals.

Note:

Always turn off the phone in healthcare facilities, and request permission before using the phone near medical equipment.

Turning Off Your Phone Before Flying

Turn off your phone before boarding any aircraft. To prevent possible interference with aircraft systems, the U.S. Federal Aviation Administration (FAA) regulations require you to have permission from a crew member to use your phone while the plane is on the ground. To prevent any risk of interference, FCC regulations prohibit using your phone while the plane is in the air.

Turning Off Your Phone in Dangerous Areas

To avoid interfering with blasting operations, turn your phone off when in a blasting area or in other areas with signs indicating two-way radios should be turned off. Construction crews often use remote-control RF devices to set off explosives.

Turn your phone off when you're in any area that has a potentially explosive atmosphere. Although it's rare, your phone and accessories could generate sparks. Sparks can cause an explosion or fire, resulting in bodily injury or even death. These areas are often, but not always, clearly marked. They include:

- Fueling areas such as gas stations.
- Below deck on boats.
- Fuel or chemical transfer or storage facilities.
- Areas where the air contains chemicals or particles such as grain, dust, or metal powders.
- Any other area where you would normally be advised to turn off your vehicle's engine.

Note:

Never transport or store flammable gas, flammable liquids, or explosives in the compartment of your vehicle that contains your phone or accessories.

Restricting Children's Access to Your Phone

Your phone is not a toy. Do not allow children to play with it as they could hurt themselves and others, damage the phone or make calls that increase your invoice. Before allowing your children to use this phone, please read "Using the Parental Control Feature" on page 81.

Using Your Phone With a Hearing Aid Device

Your phone has been tested for hearing aid device compatibility. When some wireless phones are used with certain hearing devices (including hearing aids and cochlear implants), users may detect a noise which can interfere with the effectiveness of the hearing device.

Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference noise they may generate. ANSI standard C63.19 was developed to provide a standardized means of measuring both wireless phone and hearing devices to determine usability rating categories for both.

Ratings have been developed for mobile phones to assist hearing device users find phones that may be compatible with their hearing device. Not all phones have been rated for compatibility with hearing devices. Phones that have been rated have a label located on the box. **Your SCP-3200 by SANYO has M4 and T4 ratings.**

These ratings are not guarantees. Results will vary depending on the user's hearing device and individual type and degree of hearing loss. If a hearing device is particularly vulnerable to interference noise; even a phone with a higher rating may still cause unacceptable noise levels in the hearing device. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

M-Ratings: Phones rated M3 or M4 meet FCC requirements for hearing aid compatibility and are likely to generate less interference to hearing devices than unrated phones. (M4 is the better/higher of the two ratings.)

T-Ratings: Phones rated T3 or T4 meet FCC requirements and are likely to be more usable with a hearing device's telecoil ("T Switch" or "Telephone Switch") than unrated phones. (T4 is the better/higher of the two ratings. Note that not all hearing devices have telecoils in them.)

Hearing aid devices may also be measured for immunity to interference noise from wireless phones and should have ratings similar to phones. Ask your hearing healthcare professional for the rating of your hearing aid. Add the rating of your hearing aid and your phone to determine probable usability:

- Any combined rating equal to or greater than six offers excellent use.
- Any combined rating equal to five is considered normal use.
- Any combined rating equal to four is considered usable.

Thus, if you pair an M3 hearing aid with an M3 phone, you will have a combined rating of six for "excellent use." This is synonymous for T ratings.

Qwest further suggests you experiment with multiple phones (even those not labeled M3/T3 or M4/T4) while in the store to find the one that works best with your hearing aid device. Should you experience interference or find the quality of service unsatisfactory after

purchasing your phone, promptly return it to the store where purchased for exchange or refund. More information about hearing aid compatibility may be found at: www.fcc.gov, www.fda.gov, and www.accesswireless.org.

Getting the Best Hearing Device Experience With Your Phone

One way to minimize interference is to set the phone's Display and Keypad backlight settings to ensure the minimum time interval.

To ensure the minimum interference for your Main Display's and Sub Display's backlight, follow these steps:

1. Select  > **Settings** > **Display** > **Backlight**.
2. Select **Main LCD** or **Sub LCD**.
3. Scroll and select the minimum time interval setting (8 seconds for Main LCD, 5 seconds for Sub LCD).

To ensure the minimum interference for the Keypad backlight, follow these steps:

1. Select  > **Settings** > **Display** > **Backlight**.
2. Select **Key**.
3. Scroll and select the minimum time interval setting (8 seconds) and press .

Caring for the Battery

Protecting Your Battery

The guidelines listed below help you get the most out of your battery's performance.

- Recently there have been some public reports of wireless phone batteries overheating, catching fire or exploding. It appears that many, if not all, of these reports involve counterfeit or inexpensive, aftermarket-brand batteries with unknown or questionable manufacturing standards. Qwest is not aware of similar problems with Qwest phones resulting from the proper use of batteries and accessories approved by Qwest or the manufacturer of your phone. Use only Qwest-approved or manufacturer-approved batteries and accessories found through your phone's manufacturer or online at www.qwest.com. Buying the right batteries and accessories is the best way to ensure they're genuine and safe.
- In order to avoid damage, charge the battery only in temperatures that range from 32° F to 113° F (0° C to 45° C).
- Don't use the battery charger in direct sunlight or in high humidity areas, such as the bathroom.
- Never dispose of the battery by incineration.
- Keep the metal contacts on top of the battery clean.
- Don't attempt to disassemble or short-circuit the battery.
- The battery may need recharging if it has not been used for a long period of time.
- It's best to replace the battery when it no longer provides acceptable performance. It can be recharged hundreds of times before it needs replacing.
- Don't store the battery in high temperature areas for long periods of time. It's best to follow these storage rules:

Less than one month:

-4° F to 140° F (-20° C to 60° C)

More than one month:

-4° F to 113° F (-20° C to 45° C)

Disposal of Lithium Ion (Li-Ion) Batteries

Do not handle a damaged or leaking Li-Ion battery as you can be burned.

For safe disposal options of your Li-Ion batteries, contact your nearest authorized service center.

Special Note: Be sure to dispose of your battery properly. In some areas, the disposal of batteries in household or business trash may be prohibited.

Radio Frequency (RF) Energy

Understanding How Your Phone Operates

Your phone is basically a radio transmitter and receiver. When it's turned on, it receives and transmits radio frequency (RF) signals. When you use your phone, the system handling your call controls the power level. This power can range from 0.006 watt to 0.2 watt in digital mode.

Knowing Radio Frequency Safety

The design of your phone complies with updated NCRP standards described below.

In 1991–92, the Institute of Electrical and Electronics Engineers (IEEE) and the American National Standards Institute (ANSI) joined in updating ANSI's 1982 standard for safety levels with respect to human exposure to RF signals. More than 120 scientists, engineers and physicians from universities, government health agencies and industries developed this updated standard after reviewing the available body of research. In 1993, the Federal Communications Commission (FCC) adopted this updated standard in a regulation. In August 1996, the FCC adopted hybrid standard consisting of the existing ANSI/IEEE standard and the guidelines published by the National Council of Radiation Protection and Measurements (NCRP).

Body-Worn Operation

To maintain compliance with FCC RF exposure guidelines, if you wear a handset on your body, use the supplied or approved carrying case, holster or other body-worn accessory. If you do not use a body-worn accessory, ensure the antenna is at least 2.2 centimeters from your body when transmitting. Use of non-approved accessories may violate FCC RF exposure guidelines.

For more information about RF exposure, visit the FCC Web site at www.fcc.gov.

Specific Absorption Rates (SAR) for Wireless Phones

The SAR is a value that corresponds to the relative amount of RF energy absorbed in the head of a user of a wireless handset.

The SAR value of a phone is the result of an extensive testing, measuring and calculation process. It does not represent how much RF the phone emits. All phone models are tested at their highest value in strict laboratory settings. But when in operation, the SAR of a phone can be substantially less than the level reported to the FCC. This is because of a variety of factors including its proximity to a base station antenna, phone design and other factors. What is important to remember is that each phone meets strict federal guidelines. Variations in SARs do not represent a variation in safety.

All phones must meet the federal standard, which incorporates a substantial margin of safety. As stated above, variations in SAR values between different model phones do not mean variations in safety. SAR values at or below the federal standard of 1.6 W/kg are considered safe for use by the public.

The highest reported SAR values of the SCP-3200 are:

AMPS mode (Part 22):

Head: 1.40 W/kg; Body-worn: 0.442 W/kg

Cellular CDMA mode (Part 22):

Head: 1.25 W/kg; Body-worn: 0.362 W/kg

PCS mode (Part 24):

Head: 1.41 W/kg; Body-worn: 0.295 W/kg

FCC Radio Frequency Emission

This phone meets the FCC Radio Frequency Emission Guidelines.

FCC ID number: AEZSCP-32H.

More information on the phone's SAR can be found from the following FCC Web site:

<http://www.fcc.gov/oet/fccid>.

FCC Notice

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the internal antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Owner's Record

The model number, regulatory number, and serial number are located on a nameplate inside the battery compartment. Record the serial number in the space provided below. This will be helpful if you need to contact us about your phone in the future.

Model: SCP-3200 by SANYO®

Serial No.:

Phone Guide Proprietary Notice

CDMA Technology is licensed by QUALCOMM Incorporated under one or more of the following patents:

4,901,307 5,109,390 5,267,262 5,416,797

5,506,865 5,544,196 5,657,420 5,101,501

5,267,261 5,414,796 5,504,773 5,535,239

5,600,754 5,778,338 5,228,054 5,337,338

5,710,784 5,056,109 5,568,483 5,659,569

5,490,165 5,511,073

T9 Text Input is licensed by Tegic Communications and is covered by U.S. Pat. 5,818,437, U.S. Pat. 5,953,541, U.S. Pat. 6,011,554 and other patents pending.

Phone Guide template version 6A-VI_3 (May 2006)

Manufacturer's Warranty

In This Section

- ◆ **Manufacturer's Warranty** (page 218)
-

Your phone has been designed to provide you with reliable, worry-free service. If for any reason you have a problem with your equipment, please refer to the manufacturer's warranty in this section.

For information regarding the terms and conditions of service for your phone, please visit www.qwest.com or call Qwest Wireless® Repair at 1-888-879-0611.

Manufacturer's Warranty

Manufacturer's Limited Warranty

SANYO FISHER COMPANY ("SANYO") offers you, the original purchaser who has purchased the enclosed subscriber unit ("Product") only from an authorized dealer in the United States, a limited warranty that the Product, including accessories in the Product's package, will be free from defects in material or workmanship as follows:

A. ONE (1) YEAR LIMITED WARRANTY: For a period of one (1) year from the date of original purchase, SANYO will, at its option, either repair or replace a defective Product (with new or rebuilt parts/replacements).

B. LIMITED WARRANTY ON REPAIRED/REPLACED PRODUCTS: For a period equal to the remainder of the limited warranty period on the original Product or, on warranty repairs which have been effected on Products for 90 days after the date of its repair or replacement, whichever is longer, SANYO will repair or replace (with new or rebuilt parts/replacements) defective parts or Products used in the repair or replacement of the original Product under the Limited Warranty on it.

Proof that the Product is within the warranty period in the form of a bill of sale or warranty repair document that includes the date of purchase, Product serial number and the authorized dealer's name and address, must be presented to obtain warranty service. This limited warranty is not transferable to any third party, including but not limited to any subsequent purchaser or owner of the Product. Transfer or resale of a Product will automatically terminate warranty coverage with respect to it.

This limited warranty covers batteries only if battery capacity falls below 80% of rated capacity or the battery leaks. Also this limited warranty does not cover any battery if (i) the battery has been charged by a battery charger not specified or approved by SANYO for charging the battery, (ii) any of the seals on the battery are broken or show evidence of tampering, or (iii) the battery has been used in equipment other than the SANYO phone for which it is specified.

This limited warranty does not cover and is void with respect to the following: (i) Products which have been improperly installed, repaired, maintained or modified (including the antenna); (ii) Products which have been subjected to misuse (including Products used in conjunction with hardware electrically or mechanically incompatible or Products used with software, accessories, goods or ancillary or peripheral equipment not supplied or expressly authorized by SANYO for use), abuse, accident, physical damage, abnormal use or operation, improper handling or storage, neglect, exposure to fire, water or excessive moisture or dampness or extreme changes in climate or temperature, (iii) Products operated outside published maximum ratings; (iv) cosmetic damage; (v) Products on which warranty stickers or Product serial numbers have been removed, altered, or rendered illegible; (vi) customer

instruction; (vii) cost of installation, set up, removal or reinstallation; (viii) signal reception problems (unless caused by defect in material or workmanship); (ix) damage the result of fire, flood, acts of God or other acts which are not the fault of SANYO and which the Product is not specified to tolerate, including damage caused by mishandling and blown fuses; (x) consumables (such as memory cards, fuses, etc.); or (xi) any Products which have been opened, repaired, modified or altered by anyone other than SANYO or a SANYO authorized service center.

This warranty is valid only in the United States.

REPAIR OR REPLACEMENT, AS HEREINABOVE PROVIDED, IS YOUR SOLE AND EXCLUSIVE REMEDY FOR BREACH OF THE LIMITED WARRANTY. SANYO SHALL HAVE NO LIABILITY FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES, INCLUDING, BUT NOT LIMITED TO LOSS OF PROFITS, LOST SALES, LOSS OF DATA, LOSS OF USE OF THE PRODUCT, OR ANTICIPATED PROFITS ARISING OUT OF USE OR INABILITY TO USE ANY PRODUCT (FOR EXAMPLE, WASTED AIRTIME CHARGES DUE TO THE MALFUNCTION OF A PRODUCT). THIS WARRANTY DOES NOT COVER PRODUCTS SOLD "AS IS" OR "WITH ALL FAULTS". SANYO MAKES NO OTHER EXPRESS WARRANTY WITH RESPECT TO THE PRODUCTS. THE DURATION OF IMPLIED WARRANTIES, INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE IS LIMITED TO THE DURATION OF THIS EXPRESS WARRANTY.

Some States do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.

This limited warranty gives you specific legal rights, and you may have other rights which vary from State to State.

To obtain warranty service, contact

SANYO Fisher Company

Attention : Customer Services for Wireless Products

Phone : 866-SANYOWC (866-726-9692)

Web : <http://www.sanyowireless.com>

Copyright © 2007 ACCESS Systems America Inc. ACCESS, NetFront are registered trademarks or trademarks owned by ACCESS Co., Ltd. in Japan and selected countries worldwide. NetFront is a registered trademark of NetFront Communications, Inc. in the United States and is used under a license. Portions of this software are based in part on the work of the Independent JPEG Group.

Copyright © 2007 InnoPath Software. All rights reserved.

The Bluetooth wordmark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by SANYO is under license. Other trademarks and trade names are those of their respective owners.

Index

A

- Airplane Mode 62
- Alarm Clock 111
- Alert Notification 51
- Answering Calls 26
- Any Key Answer 67
- AOL Instant Messenger 196
- Auto-Answer Mode 65

B

- Backlight 52
- Battery
 - Capacity 18
 - Charging 20
 - Disposal 212
 - Installing 19
 - Removing 19
- Bluetooth 164-172
 - Auto-Accept 168
 - Device Name 166
 - Pairing 170
 - Profiles 169
 - Sending Data 172
 - Settings 166
 - Trusted List 171
 - Turning On and Off 165
 - Visibility 167
 - Voice Priority 167

C

- Calculator 113
- Calendar 105-108
- Call Alarm 108-110
- Call Forwarding 187
- Call Guard 87
 - Answering a Roam Call 28
- Call History 89-94
 - Erasing 94
 - Making a Call 92
 - Options 91
 - Prepending a Phone Number 94
 - Saving a Phone Number 93
- Call Waiting 186
- Caller ID 186
- Camera 147-163
 - In Camera Folder 156
 - Options 150
 - Saved to Phone Folder 157
 - Self-Timer 151
 - Settings 153
 - Stitch Shots 153
 - Taking Pictures 148
 - Zoom 151
- Contacts 95-103
 - Adding an Entry 96
 - Assigning a Group 97
 - Editing an Entry 100
 - Entry Options 99
 - Erasing an Entry 100
 - Finding Entries 98
 - Secret Entries 103
- Countdown Timer 114

D

- Data Guard 88
- Data Services - See Sprint Vision
- Dialing Options 25
- Directory Assistance 6
- Display Screen 12
 - Animation 53
- Downloading Content 197

E

- Email 195
- Emergency Numbers 30
- Ending a Call 29
- End-of-Call Options 33
- Enhanced 911 (E911) 31
- Entering Text 39-44
 - Alphabet Mode 43
 - Alternate Entry Modes 44
 - Default Input Mode 42
 - Font Size 56
 - Options 69
 - Selecting a Mode 39
 - T9 Text Input 40
- Erasing Phone Content 77

F

- FCC Notice 215

H

- Headset Mode 71
- Hearing Aid Device Use 210

I

- In-Call Options 32
- Instant Messaging 196

K

- Key Functions 10
- Key Press Echo 49

L

- Language 65
- Location Settings 58

M

- Making Calls 23
 - From Call History 92
 - From Contacts 36
 - With Pauses 34
- Menu iii
 - Navigation 21
 - Style 54
- Messaging
 - Accessing 195
 - Email 195
 - Instant Messaging 196
 - Settings 59
- Missed Call Notification 30
- Muting a Call 29
- My Favorites 64

N

- Navigation Key Shortcuts 68
- Net Guard 192

O

- Open/Close Flip Option 66
- Operator Services 6
- Owners Record 216

P

- Parental Control 81
- Personal Information Management 115
- Phone
 - Features List 15
 - Holding (illus.) 23
 - Setup Options 64
 - Turning Off 17
 - Turning On 17
 - Updating 113
- Phone (illus.) 9
- Phone Number
 - Displaying 22
 - Finding 34
 - Saving 33
- Phone Settings 45-71
 - Display Settings 52
 - Language 65
 - Location Settings 58
 - Sound Settings 46
- Picture Mail - See Sprint Picture Mail
- Pictures - See also Camera
 - Managing 160
 - Sending 158
 - Storing 156
 - Taking 148
 - Uploading 161
- Plus (+) Code Dialing 35
- Power Save Mode 55
- Preset Messages 60
 - Editing 184

Q

- Qwest Service
 - Account Password 5
 - Customer Service 6
 - Directory Assistance 6
 - Operator Services 6

R

- Radio Frequency (RF) Energy 213
- Ready Link 126-146
 - Call Alerts 128
 - Making a Call 130
 - Making a Group Call 131
 - Options 135
 - Ready Link Contacts 136-140
 - Receiving a Call 134
 - Saving a Number 137
 - Setting Ready Link Mode 127
 - Settings 143-146
 - Speed Dialing 143
- Resetting Default Settings 79
- Resetting Your Phone 79
- Restricting Calls 75
- Ringer
 - Ready Link 144
 - Selecting 102
 - Types 46
- Roaming 83-88
 - Roam Mode 86
 - Voicemail 86

S

- Safety Information 206-216
- Screen Call 123
- Security 72-82
 - Menu 73
- Side Key Guard 67
- Silence All 51
- Sleep Mode 57
- SMS Text Messaging 182-185
 - Accessing 183
 - Composing 182
- Speakerphone 28
 - Ready Link 145
- Special Numbers 76
- Speed Dialing 36
 - Assigning Speed Dial Numbers 101
 - Finding Speed Dial Numbers 98
 - Ready Link 143
- Sprint Picture Mail
 - Password 149
 - Sending 158
 - Web Site 160
- Sprint Vision 188-203
 - Applications 189
 - Bookmarks 200
 - Downloading Content 197
 - Enabling and Disabling 80
 - Exploring the Web 199
 - Launching 191
 - Navigating 193

Password 5

Status and Indicators 192

User Name 189

Start-up/Power-off Tone 48

Stopwatch 112

T

T9 Text Input 40

Adding a Word 41

Customizing 42

Three-Way Calling 185

To Do List 109

Tone Length 48

TTY Use 63

U

Unlocking Your Phone 3 , 74

V

Voice Memos 119-122

Voice Prompt 49

Voice Services 116-125

Voice-Activated Dialing 117

Voicemail

Clearing the Message Icon 181

Menu Key 181

Notification 176

Options 178

Retrieving 177

Setting Up 4 , 175

Volume

Adjusting 50

Adjusting During a
Conversation 29

W

Warranty 218

Welcome i

World Clock 114

Y

Yahoo! Mail 195

Yahoo! Messenger 196