

Universal Serial Bus  
Implementers Forum  
Host Hi-Speed  
Electrical Test Procedure  
For Yokogawa DL9240/DL9240L/DL6154

Revision 2.0  
November 29, 2010



#### DISCLAIMER OF WARRANTIES

THIS SPECIFICATION IS PROVIDED "AS IS" AND WITH NO WARRANTIES OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING, WITHOUT LIMITATION, NO WARRANTY OF NONINFRINGEMENT, NO WARRANTY OF MERCHANTABILITY, NO WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE, NO WARRANTY OF TITLE, AND NO WARRANTY ARISING OUT OF ANY PROPOSAL, SPECIFICATION, OR SAMPLE, ALL OF WHICH WARRANTIES ARE EXPRESSLY DISCLAIMED.

WITHOUT LIMITING THE GENERALITY OF THE FOREGOING, USB-IF AND THE AUTHORS OF THE SPECIFICATION DO NOT WARRANT OR REPRESENT THAT USE OF THE SPECIFICATION WILL NOT INFRINGE THE INTELLECTUAL PROPERTY RIGHTS OF OTHERS. USERS OF THE SPECIFICATION ASSUME ALL RISK OF SUCH INFRINGEMENT, AND AGREE THAT THEY WILL MAKE NO CLAIM AGAINST USB-IF OR THE AUTHORS IN THE EVENT OF CLAIMS OF INFRINGEMENT.

USB-IF IS NOT LIABLE FOR ANY CONSEQUENTIAL, SPECIAL OR OTHER DAMAGES ARISING OUT OF THE USE OF THE SPECIFICATION.

#### LICENSE FOR INTERNAL USE ONLY

USB-IF HEREBY GRANTS A LICENSE TO REPRODUCE AND TO DISTRIBUTE THIS SPECIFICATION FOR INTERNAL USE ONLY. NO OTHER LICENSE, EXPRESS OR IMPLIED, BY ESTOPPEL OR OTHERWISE, IS GRANTED HERewith, AND NO LICENSE OF INTELLECTUAL PROPERTY RIGHTS IS GRANTED HERewith.

All product names are trademarks, registered trademarks, or servicemarks of their respective owners.

## Table of Contents

<b>1</b>	<b>Introduction</b>	<b>5</b>
<b>2</b>	<b>Purpose</b>	<b>5</b>
<b>3</b>	<b>Equipment Required</b>	<b>5</b>
3.1	Equipment Setup	6
3.1.1	DL9240, DL9240L, DL6154 Digital Oscilloscope	6
3.1.2	Differential Probe	6
3.2	Operating Systems, Software, Drivers, and Setup Files	6
3.2.1	Operating Systems	6
3.2.2	Special Purpose Software	7
3.2.3	Test Equipment Setup Files	7
<b>4</b>	<b>Test Procedure</b>	<b>8</b>
4.1	Test Record	8
4.2	Vendor and Product Information	8
4.3	Hi-Speed Mode Compatible Device Electrical Tests	8
4.4	Legacy USB Compliance Tests	8
4.5	Starting the USB Compliance Test Software	9
4.6	Host Hi-Speed Signal Quality (EL_2, EL_3, EL_6, EL_7)	12
4.7	Host Controller Packet Parameters (EL_21, EL_22, EL_23, EL_25, EL_55)	19
4.8	Host Disconnect Detect (EL_36, EL_37)	28
4.9	Host CHIRP Timing (EL_33, EL_34, EL_35)	29
4.10	Host Suspend/Resume timing (EL_239, EL_41)	36
4.11	Host Test J/K, SE0_NAK (EL_8, EL_9)	42
<b>Appendix A</b>	<b>Host Hi-Speed Electrical Test Data</b>	<b>48</b>
A.1	Vendor and Product Information	48
A.2	Legacy USB Compliance Tests	49
A.3	Host Hi-Speed Signal Quality (EL_2, EL_3, EL_6, EL_7)	50
A.4	Host Controller Packet Parameters (EL_21, EL_22, EL_23, EL_25, EL_55)	50
A.5	Host Disconnect Detect (EL_36, EL_37)	52
A.6	Host CHIRP Timing (EL_33, EL_34, EL_35)	52
A.7	Host Suspend/Resume timing (EL_239, EL_41)	53
A.8	Host Test J/K, SE0_NAK (EL_8, EL_9)	54
<b>Appendix B</b>	<b>USB Electrical Analysis Tool (USBET)</b>	<b>55</b>
B.1	About USBET	55
B.2	How to start USBET	55
B.3	Low-Speed/Full-Speed/Hi-Speed Signal Quality Test	55
B.4	Inrush Current Test	56

## 1. Introduction

The USB-IF Hi-Speed Electrical Test Procedures are developed by the USB 2.0 Compliance Committee under the direction of USB-IF, Inc. There are three Hi-Speed Electrical Test Procedures. The Host Hi-Speed Electrical Test Procedure is for EHCI host controllers. The Hub Hi-Speed Electrical Test Procedure is for high-speed capable hubs. The Device Hi-Speed Electrical Test Procedure is for highspeed capable devices.

The Hi-Speed Electrical Compliance Test Procedures verify the electrical requirements of high-speed USB operation of these devices designed to the USB 2.0 specification. In addition to passing the Hi-Speed test requirements, Hi-Speed capable products must also complete and pass the applicable legacy compliance tests identified in these documents in order to be posted on the USB-IF Integrators List and use the USB-IF logo in conjunction with the said product (if the vendor has signed the USB-IF Trademark License Agreement)

## 2. Purpose

This USB-IF Hi-speed Electrical Test Procedure documents a series of tests used to evaluate USB peripherals and systems operating at hi-speed. These tests are also used to evaluate the hi-speed operation of USB silicon that has been incorporated in ready-to-ship products, reference designs, proofs of concept and one-of-a-kind prototypes of peripherals, add-in cards, motherboards, or systems. This test procedure makes reference to the test assertions in the USB-IF USB2.0 Electrical Test Specification, Version 1.00.

This Host USB-IF Hi-speed Electrical Test Procedure is one of the three USB-IF Hi-speed Electrical Compliance Test Procedures. The other two are Hub USB-IF Hi-speed Electrical Test Procedure and Device USB-IF Hi-speed Electrical Test Procedure. The adoption of the individual procedures based on the device class makes it easier to use.

## 3. Equipment Required

The commercial test equipment listed here are base on positive experience by the USB-IF members in executing the USB hi-speed electrical tests. This test procedure is written with a set of specific models we use to develop this procedure. In time, there will be other equivalent or better test equipment suitable for use. Some minor adaptation of the procedure will be required in those cases.

- **Digital Oscilloscope System**
  - Yokogawa DL9240, DL9240L or DL6154: qty = 1  
(Requires the Ethernet main unit option)
  - Yokogawa PBA2500 Probe : qty = 2
  - Yokogawa PBA2500 Probe attachment : qty = 2set
  - Yokogawa PBD2000 Probe : qty = 1
  - Yokogawa PBD2000 Probe attachment : qty = 1set
  - Yokogawa 500 MHz Passive Probe<sup>1</sup> (701943 or 701939) : qty = 2(Legacy USB Compliance Test)
- **3 ½ Digital Multimeter**
  - Yokogawa Meter & Instrument 733 or 734, or equivalent : qty = 1
  - Mini-clip DMM lead, one each in black and red : qty = 1set

- **Hi-Speed USB Electrical Test Fixtures**
  - Yokogawa USB 2.0 Test Fixture : qty =1
  - 5 V Test Fixture Power Supply : qty =1 (included with Yokogawa USB 2.0 Test Fixture)
- **Miscellaneous Cables**
  - 1 m USB-IF compliant USB cable : qty = 1(for the Legacy USB Compliance Test: qty = 5)
  - 5 m USB-IF compliant USB cable : qty = 6 (Legacy USB Compliance Test)
  - Modular AC power cord : qty = 1
- **Hi-Speed USB Test Bed Computer**

This is the computer that hosts a USB 2.0 compliance host controller for the Hi-Speed hub or device electrical test, or serves as a test bed host for a USB 2.0 host controller under test. The OS on this computer is Windows 2000 or XP Professional. Please refer to the Hi-Speed Electrical Test Setup Instruction for steps to configure this computer.
- **USB Hub**
  - Full-Speed USB-IF compliant USB Hub : qty = 1(Legacy USB Compliance Test)
  - Hi-Speed USB-IF compliant USB Hub : qty = 1(for the Legacy USB Compliance Test: qty = 4)
- **USB Device (Legacy USB Compliance Test)**
  - Full-Speed USB-IF compliant PC Camera : qty = 1
  - USB-IF compliant Mouse : qty = 1

### 3.1. Equipment Setup

#### 3.1.1. DL9240, DL9240L,DL6154 Digital Oscilloscopes

1. Connect the PBD2000 Differential Probe to CH1 of the oscilloscope.
2. Place the attachment on the tip of the differential probe.
3. Connect the PBA2500 Active Probe to CH2 and CH3 of the oscilloscope.
4. Turn ON the power to the oscilloscope and allow a 30 minute warm-up prior to use.

#### 3.1.2. Differential Probe

For information on adjusting the offset voltage remaining after warm-up (residual offset voltage), see “PBD2000 Differential Probe User’s Manual” (IM701923-01E).

**Note:**

- In certain test situations, there may not be a ground connection between the oscilloscope and the DUT. This may lead to the signal being seen by the differential probe to be modulated up and down due to the mid- frequency switching power supply. Connecting the oscilloscope ground to the DUT ground will be required to establish a common ground reference.
- Phase-correct the probe if necessary.

### 3.2. Operating Systems, Software, Drivers, and Setup Files

#### 3.2.1. Operating Systems

Microsoft Windows 2000 or XP Professional is required on the Hi-Speed Electrical Test Bed Computer. Please refer to the Hi-Speed Electrical Test Setup Instruction for steps to configure these computers.

### 3.2.2. Special Purpose Software

The following special purpose software is required.

- Yokogawa USB Compliance Test Software( busXplorer-USB) – To be used in the Hi-Speed Electrical Test Bed Computer.
- Hi-Speed Electrical Test Tool Software(USBHSET) – To be used in the Hi-Speed Electrical Test Bed Computer.

**Note:**

- Hi-Speed Electrical Test Tool(USBHSET) is official analysis tool of USB-IF and downloadable from the following USB-IF site.  
<http://www.usb.org/developers/tools>
- USB Electrical Analysis Tool(USBET) - To be used in the Hi-Speed Electrical Test Bed Computer.

**Note:**

- USBET is official analysis tool of USB-IF and downloadable from the following USB-IF site.  
<http://www.usb.org/developers/tools/>  
Please refer to the Appendix B.1 of this document for details.

Please refer to the Hi-Speed Electrical Test Setup Instruction for steps to configure these computers.

- Proprietary EHCI Driver Stack - The Hi-Speed Electrical Test Tool software requires the use of a proprietary EHCI driver stack. The use of this proprietary EHCI driver stack facilitates the electrical testing that requires direct control of the command registers of the USB EHCI host controllers. The end result much more robust test bed environment. Since the proprietary EHCI driver stack is designed for debug and test validation purposes, this driver stack does not support the normal functionality as found in the EHCI drivers from Microsoft (or the device vendor). An automatic driver stack switching function has been implemented into the Hi-Speed Electrical Test Tool for easy switching between the proprietary EHCI driver stack and that from Microsoft. Upon invocation of the HS Electrical Test Tool software, the driver stack will automatically switch to the Intel proprietary EHCI driver stack. Upon exit of the HS Electrical Test Tool software, the driver stack will automatically switch to the Microsoft EHCI driver stack.

### 3.2.3. Test Equipment Setup Files

Setup file for DL9240/DL9240L/DL6154 is available at the following site.

[http://www.usb.org/developers/docs#comp\\_test\\_procedures](http://www.usb.org/developers/docs#comp_test_procedures)

No setup file is needed for DL9240/DL9240L/DL6154 if the Yokogawa USB Compliance Test Software (busXplorer-USB, Type 701985/F30) is installed on the Test Bed Computer

Setup file for DG2040 can be obtained by extracting 'USBHSET.EXE'.

For details about 'USBHSET.EXE', please refer to the following web site.

[http://www.usb.org/developers/docs#comp\\_test\\_procedures](http://www.usb.org/developers/docs#comp_test_procedures)

## 4. Test Procedures

### 4.1. TEST Record

Appendix A contains the test result entry forms for these test procedures. Please make copies of Appendix A for use as test record documentation for compliance test submission. All fields must be filled in. Fields not applicable for the device under test should be indicated as N/A, with an appropriate note explaining the reason. The completed test result shall be retained for the compliance test submission.

In addition to the hardcopy test record, the electronic files from the signal quality, and power delivery (drop and droop) shall be retained for compliance test submission.

### 4.2. Vendor and Product Information

Collect the following information and enter into a copy of the test record in Appendix A before performing any tests.

1. Test date
2. Vendor name
3. Vendor address, phone number, and contact name
4. Test submission ID number
5. Product name
6. Product model and revision
7. USB silicon vendor name
8. USB silicon model
9. USB silicon part marking
10. USB silicon stepping
11. Test conducted by

### 4.3. Hi-Speed Mode Compatible Host Electrical Tests

Perform the following six tests.

- Host Hi-Speed Signal Quality (EL\_2, EL\_3, EL\_6, EL\_7)
- Host Controller Packet Parameters (EL\_21, EL\_22, EL\_23, EL\_25, EL\_55)
- Host CHIRP Timing (EL\_33, EL\_34, EL\_35)
- Host Suspend/Resume Timing (EL\_39, EL\_41)
- Host Test J/K, SE0\_NAK (EL\_8, EL\_9)

### 4.4. Legacy USB Compliance Tests

In addition to the hi-speed electrical tests described in this document, the device under test must also pass the following compliance tests applicable to hi-speed capable the EHCI Host Controller:

- Full speed/Low Speed Downstream Signal Quality
- Drop/Droop
- Interoperability

Perform all these tests and record the measurements and summarized PASS/FAIL status in Appendix A.

#### **Note:**


This manual describes Hi-Speed electrical tests and legacy USB compliance tests, but does not describe interoperability tests. For these test procedures, see “USB-IF Full and Low Speed Compliance Test Procedure” (available at: <http://www.usb.org/developers/>) issued by the USB-IF.



## 4.5. Starting the USB Compliance Test Software

### 1. Start the busXplorer-USB.

The environment settings dialog box as shown below opens.

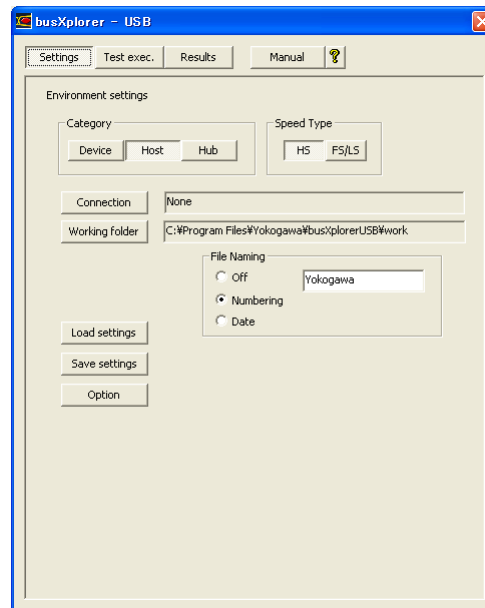

#### Note:

This manual does not describe all of the functions of the busXplorer-USB. For functions not described herein (such as operation of the results display button), see “USB Compliance Test User’s Manual” (IM701985-61E).

### 2. Click the [Host] button under Test Category in the environment settings.

### 3. Select the test items to execute under Speed Type according to the DUT.


- Select HS and execute the test. All electrical tests are performed.
- If you select FS/LS and execute the test, only the tests required for FS/LS are executed.

### 4. Connect the test bed computer and digital oscilloscope via Ethernet.

### 5. Turn ON the power to the digital oscilloscope.

### 6. Click the [Connection] button in the dialog box.

The connection settings dialog box is displayed.

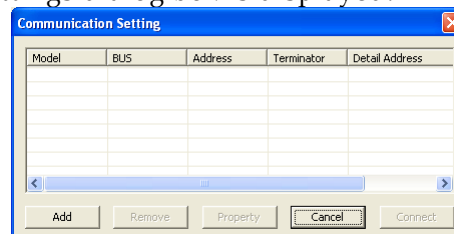


#### Note:

If connection destinations are already registered, they are displayed in a list. If the digital oscilloscope to use appears in the list, select it, then click the [Connect] button to start establishing communication with the digital oscilloscope.

**7. Click the [Add] button.**

The connection method selection dialog box in the figure below opens.

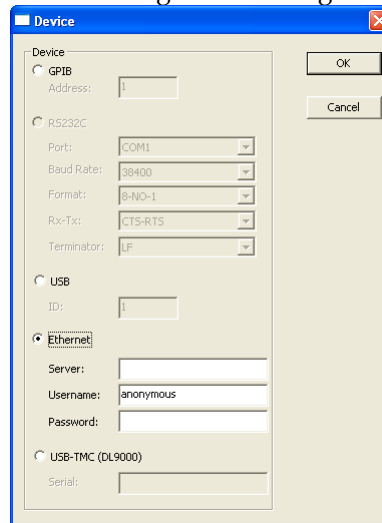

**Note:**


The busXplorer-USB supports Ethernet only.

**8. Select Network, enter the IP address of the digital oscilloscope in the Server box, then click the [OK] button.**

Enter the user name and password if required.


**9. A connection settings dialog box is displayed. Select the digital oscilloscope then click the [Connect] button.**

- If you select a connection destination in the list and click Properties, the connection method selection dialog box appears allowing you to change settings.
- If you select a connection destination in the list and click Delete, the selected connection destination is deleted.
- The maximum number of connection destinations that can be registered is 16.

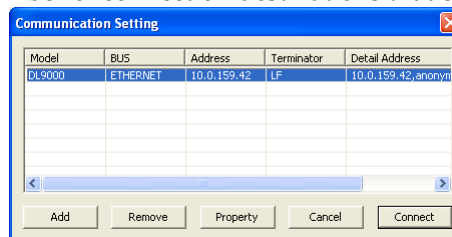

**10. Click the [Working folder] button.**

A dialog box for browsing folders is displayed.

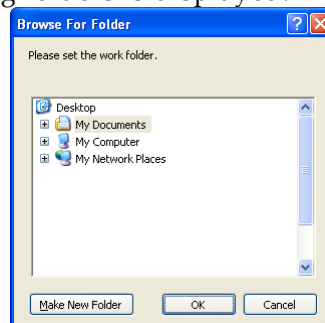

## **11. Specify a working folder and click the [OK] button.**

The following data are saved in the working folder.

- Test results files in HTML format  
These are displayed by clicking the [Detail] button in the test results display dialog box.
- Digital oscilloscope screen image data  
These are displayed by clicking the [Image] button in the test results display dialog box.
- Waveform data captured by Digital oscilloscope

File names are automatically assigned to data files. To set a file name, choose Fix in the File Naming box, and enter a file name in the box (of up to twenty alphanumeric characters).

### **Note:**

- Environment settings can be saved and recalled. To save settings, click the [Save settings] button to display a dialog box for entering a file name and save location. To load settings, click the [Load settings] button to display a dialog box for opening previously saved settings files.
- To save or change the display color or format of the waveform data displayed by the busXplorer-USB, click the [Option] button, then modify settings as needed.

**4.6. Host Hi-Speed Signal Quality (EL\_2, EL\_3, EL\_6, EL\_7)**


- **USB 2.0 Electrical Test Specification**
  - EL\_2  
A USB 2.0 Hi-Speed transmitter data rate must be 480Mb/s  $\pm 0.05\%$ .
  - EL\_3  
A USB 2.0 downstream facing port must meet Template 1 transform waveform requirements measured at TP2 (each host downstream port).
  - EL\_6  
A USB 2.0 HS driver must have 10% to 90% differential rise and fall times of greater than 500ps.
  - EL\_7  
A USB 2.0 HS driver must have monotonic data transitions over the vertical openings specified in the appropriate eye pattern template.

- **Instruments Used**


Name	Quantity
DL9240/DL9240L/DL6154 Digital Oscilloscope	1
PBD2000 Differential Probe	1
PBD2000 Probe attachment	1set
USB-IF compliant 1 m USB 2.0 cable	1
Test bed computer	1
USB compliance test fixture	1
5 V power supply for test fixture	1

- **Executing the Test**


1. Click the [Test Exec] button in the busXplorer-USB to display the Host Test selection dialog box.

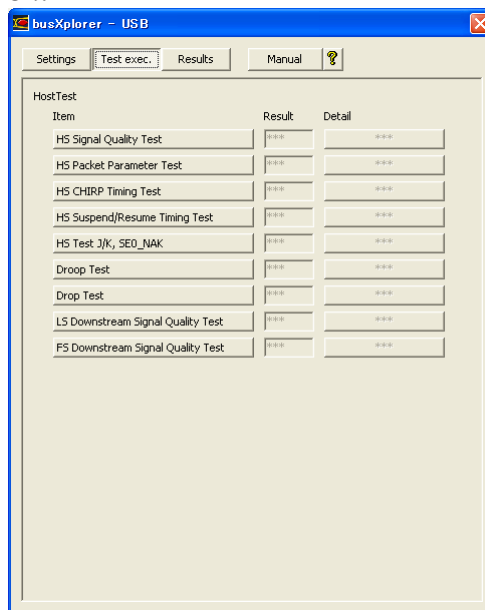

2. Click the [HS Signal Quality Test] button in the dialog box. The Host HS Signal Quality Test dialog box is displayed.

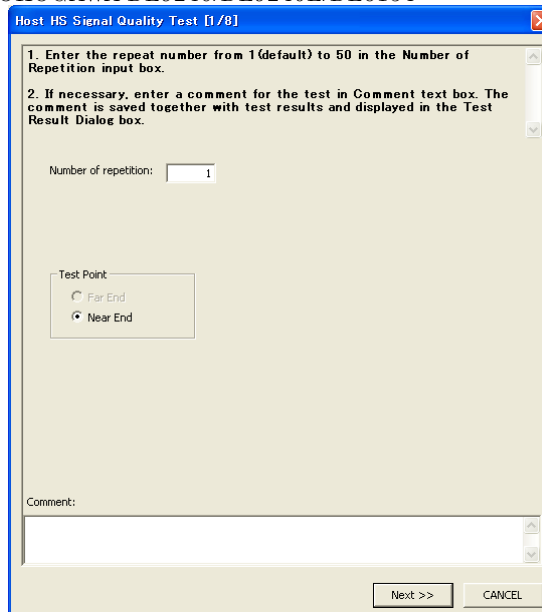

3. Enter the repeat number from 1(default) to 50 in the Number of Repetition input box.
4. If necessary, enter a comment for the test in Comment text box. The comment is saved together with test results and displayed in the Test Result Dialog box.
5. Click the [Next] button in the dialog box of the busXplorer-USB. The connection diagram as shown below is displayed.

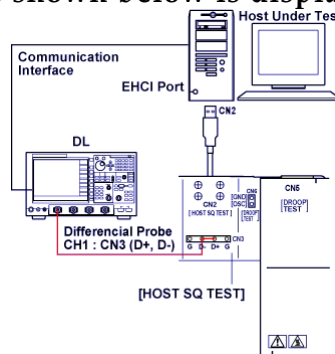

6. Connect the port under test of the host controller to the CN2 connector of the HOST SQ TEST block.
7. Connect the PBD2000 Differential Probe to CH1 of the digital oscilloscope.

**Note:**

- After connecting the probe, heat emitted from the probe causes the offset voltage to drift. The probe should nearly stabilize about thirty minutes after applying power.


8. Connect the differential probe to the attachment on the tip to CN3 on the HOST SQ TEST block.

For the polarity, match up the plus side on the differential probe to D+ (the D+ pin at CN3) and the minus side to D- (the D- pin at CN3).

**9. Click the [Next] button.**

**Following the instructions in the dialog box of the busXplorer-USB, invoke the HS Electrical Test Tool on the test bed computer.**

The HS Electrical Test Tool main menu is displayed, and the host controller is displayed under Select Host Controller For Use in Testing.

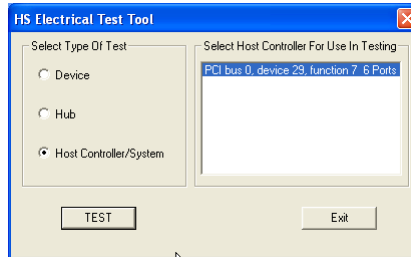


**Note:**

- If the host under test is an embedded host, set its test mode to an appropriate mode by using the dedicated tool for it.

**10. Select Host Controller/System under Select Type Of Test in the HS Electrical Test Tool.**


**11. Click the [TEST] button in the HS Electrical Test Tool to enter the HS Electrical Test Tool - Host Test menu.**

**12. Click [Next] button in the dialog box of the busXplorer-USB. Following the instructions in the dialog box, select TEST PACKET from the Port Control drop down menu and set the target port number in the HS Electrical Test Tool then click the [EXECUTE] button.**

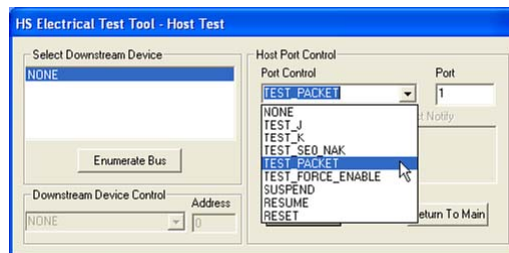

**13. Click the [Next] button in the dialog box of the busXplorer-USB. Following the instructions in the dialog box, check the digital oscilloscope screen to confirm that a trigger activates and packet data is displayed.**

- If the trigger does not activate, adjust the trigger level as needed.
- Click the [Update] button to update the image of waveform in the dialog box of the busXplorer-USB.

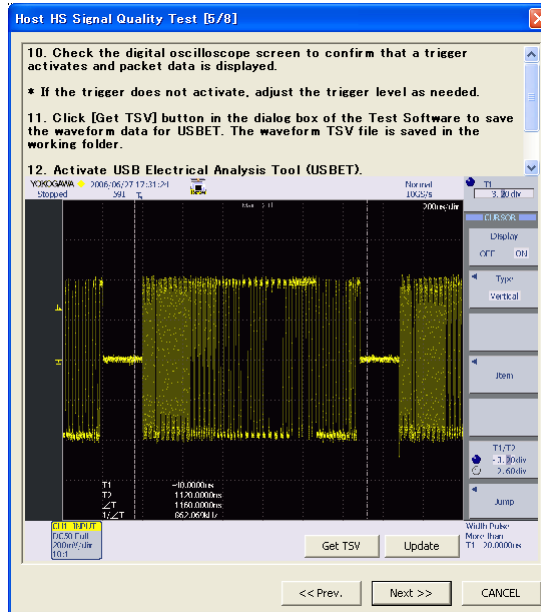


14. Click [Get TSV] button in the dialog box of the Test Software to save the waveform data for USBET. The waveform TSV file is saved in the working folder.
15. Activate 'USB Electrical Analysis Tool (USBET)'.  
Select [Signal Quality] tab, click [Browse] button of USBET and specify the waveform data file (tsv file). Set an appropriate Test Type (HSNE) then click [TEST] to start analysis. Check the test report generated by USBET and verify the result of the test.

**Note:**


- To know how to use USBET, please refer to Appendix B of this document.

16. Click [Next] button in the dialog box of the busXplorer-USB. Following the instructions in the dialog box, using zoom/cursor functions of oscilloscope, measure rise/fall time of the waveform and record the values to input text fields in the dialog box. They must be more than 500ps.

• When [Next] button is clicked, the measured value is judged and Fail message will be displayed if the result is failed.

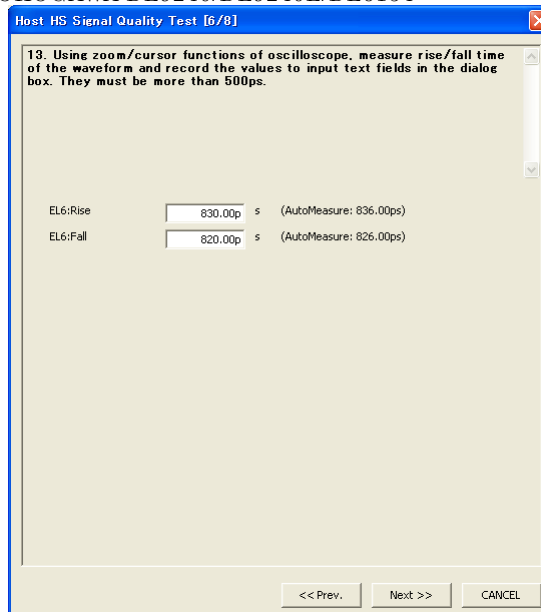


17. Click the [Next] button in the dialog box of the busXplorer-USB. The test results dialog box as shown below is displayed.

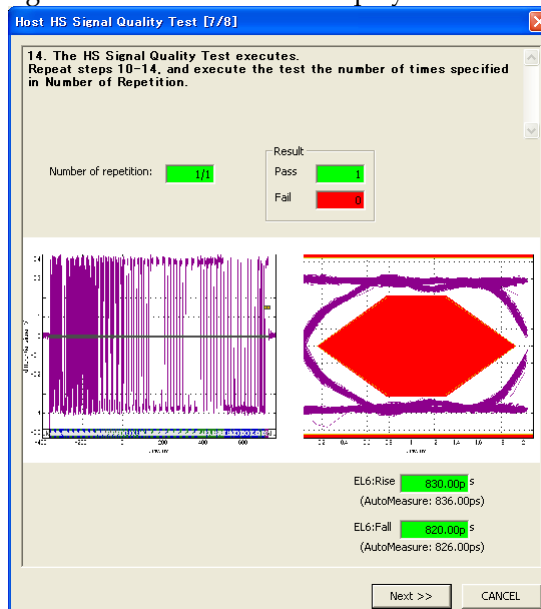


18. Click the [Next] button of the dialog box of the busXplorer-USB, repeat steps 13-17, and execute the test the number of times specified in "Number of Repetition." When the number of tests is completed, the test result dialog box is displayed.



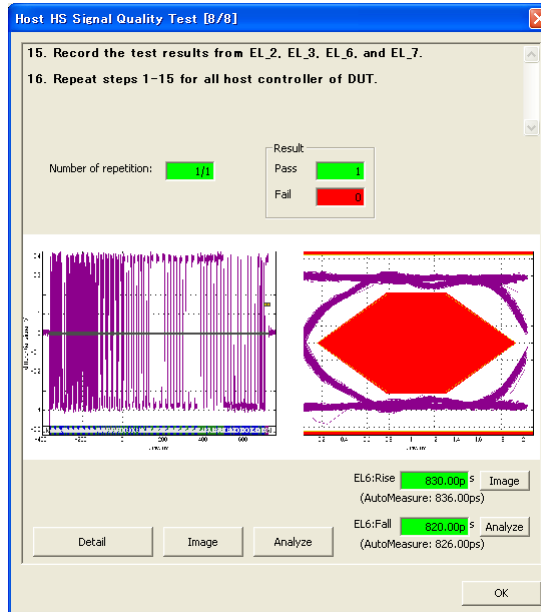

- Click the [Detail] button to display the test results by Web Browser as shown below.

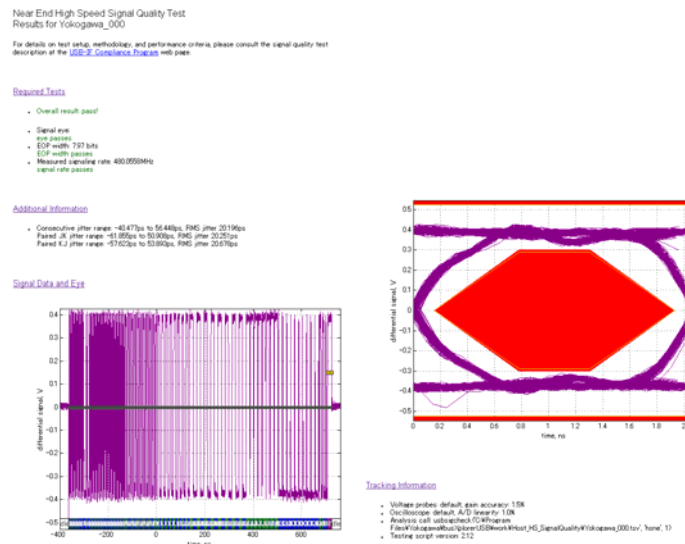

- Click the [Image] button to display an image of the digital oscilloscope screen.
- Click the [Analyze] button to start Xviewer and display the waveform data. Xviewer must already have been installed.

**Note:**

- Test result shown by Web Browser is saved in the directory specified as the working folder for the busXplorer-USB.
- Test results can also be confirmed when displayed in the results display dialog box by clicking the results display button in the Test Software.

**19. Record the test results in EL\_2, EL\_3, EL\_6, and EL\_7.**

- Appendix A contains the test result entry form for this test procedure. If necessary, please make copies of Appendix A for use as test record documentation for compliance test submission.
- All files created during tests are saved in the directory specified as the working folder for the

**20. Repeat steps 2-19 for all ports of the host controller.**

.

**4.7. Host Controller Packet Parameters (EL\_21, EL\_22, EL\_23, EL\_25, EL\_55)**

- **USB 2.0 Electrical Test Specification**


- EL\_21  
The SYNC field for all transmitted packets (not repeated packets) must begin with a 32-bit SYNC field.
- EL\_22  
When transmitting after receiving a packet, hosts and devices must provide an inter-packet gap of at least 8 bit times and not more than 192 bit times.
- EL\_23  
Hosts transmitting two packets in a row must have an inter-packet gap of at least 88 bit times and not more than 192 bit times.
- EL\_25  
The EOP for all transmitted packets (except SOFs) must be an 8 bit NRZ byte of 01111111 without bit stuffing. (Note, that a longer EOP is waiverable)
- EL\_55  
Hosts transmitting SOF packets must provide a 40 bit EOP without bitstuffing where the first symbol of the EOP is a transition from the last data symbol.

- **Instruments Used**

Name	Quantity
DL9240/DL9240L/DL6154 Digital Oscilloscope	1
PBD2000 Differential Probe	1
PBD2000 Probe attachment	1set
USB-IF compliant 1 m USB 2.0 cable	1
USB-IF Compliant Hi-Speed USB Hub	1
Test bed computer (PC with the host controllers to be tested installed)	1
USB compliance test fixture	1
5 V power supply for test fixture	1

- **Executing the Test**

1. Click the [Test Exec] button in the busXplorer-USB to display the Host Test selection dialog box.

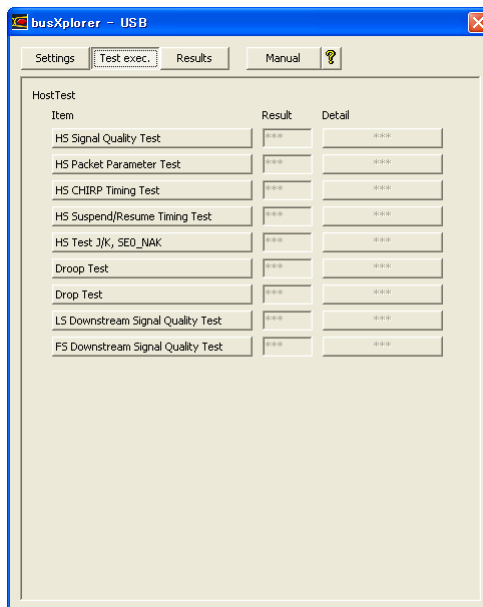

2. Click the [HS Packet Parameter Test] button in the dialog box. The Host HS Packet Parameter Test dialog box opens.

**Host HS Packet Parameter Test [1/13]**

1. Enter the repeat number from 1(default) to 50 in the Number of Repetition input box.

2. If necessary, enter a comment for the test in Comment text box. The comment is saved together with test result and displayed in the Test Result Dialog box.

Number of repetition:

Parameter	Min.	Max.	unit	Default
EL21(1st packet):	31.500	32.500	bit	<input type="checkbox"/>
EL21(2nd packet):	31.500	32.500	bit	<input type="checkbox"/>
EL25:	7.5000	8.5000	bit	<input type="checkbox"/>
EL23:	88.000	192.00	bit	<input type="checkbox"/>
EL22:	8.0000	192.00	bit	<input type="checkbox"/>
EL55:	39.500	40.500	bit	<input type="checkbox"/>

Comment:


3. Enter the repeat number from 1(default) to 50 in the Number of Repetition input box.
4. If necessary, enter a comment for the test in Comment text box. The comment is saved together with test result and displayed in the Test Result Dialog box.
5. If you wish to change the judgment range, you can edit the judgment criteria for EL\_21, EL\_25, EL23, EL22, and EL55.

Default values for the judgment criteria are as follows:

- EL\_21(1st packet)  
Min.: 31.500 bits, Max.: 32.500 bits
- EL\_21(2nd packet)  
Min.: 31.500 bits, Max.: 32.500 bits
- EL\_25  
Min.: 7.5000 bits, Max.: 8.5000 bits
- EL\_23  
Min.: 88.000 bits, Max.: 192.00 bits
- EL\_22  
Min.: 8.000 bits, Max.: 192.00 bits
- EL\_55  
Min.: 39.500 bits, Max.: 40.500 bits

If you click the [Default] button after changing the judgment range, the default values of the judgment range are restored.

6. Click the [Next] button in the dialog box of the busXplorer-USB. The connection diagram a shown below is displayed.

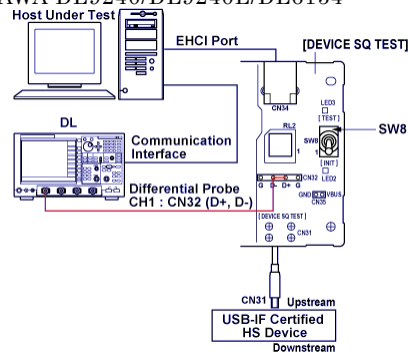

7. Turn ON the power to the test fixture and verify that the green power supply LED 1 is lit.
8. Connect the USB-IF compliant Hi-Speed USB hub (upstream port side) to the CN31 connector of the DEVICE SQ TEST block and turn ON the power to the hub.
9. Connect the host controller port under test to the CN34 connector of the DEVICE SQ TEST block using a 1 m USB cable.
10. Connect the PBD2000 Differential Probe to CH1 of the digital oscilloscope.

**Note:**

- After connecting the probe, heat emitted from the probe causes the offset voltage to drift. The probe should nearly stabilize about thirty minutes after applying power.

11. Connect the differential probe to the attachment on the tip to CN32 on the DEVICE SQ TEST block.


For the polarity, match up the plus side on the differential probe to D+ (the D+ pin at CN32) and the minus side to D- (the D- pin at CN32).

**Note:**

- The use of the Device Hi-Speed Signal Quality test fixture makes it possible to trigger on packets generated by the device because the differential probe is located closer to the device transmitter, hence the device packets are larger in amplitude.

12. Click the [Next] button in the dialog box of the busXplorer-USB. Following the instructions displayed in the dialog box, place SW8 of the test fixture to the INIT position.


Verify LED2 of the test fixture is lit.

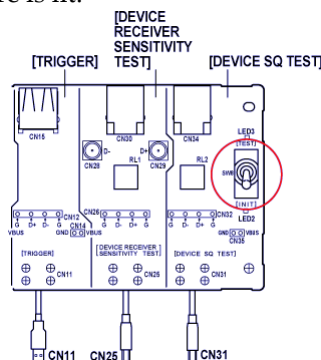

13. Click [Next] button in the dialog box of the busXplorer-USB. Following the instructions in the dialog box, select SINGLE STEP GET DEV DESC from

**the Downstream Device Control drop down menu in the HS Electrical Test Tool then click the [EXECUTE] button.**

If not already running, start the HS Electrical Test Tool. Select Host Controller/System under Select Type of Test, click the TEST button, then confirm the above.

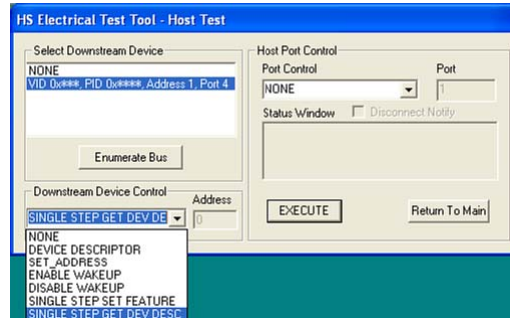

**Note:**

- If the host under test is an embedded host, set its test mode to an appropriate mode by using the dedicated tool for it.

**14. Click the [Next] button in the dialog box of the busXplorer-USB. Following the instructions in the dialog box, check the digital oscilloscope screen to confirm that a trigger activates and packet is displayed.**

- If the trigger does not activate, adjust the trigger level as needed. Then, select SINGLE STEP GET DEV DESC again from the Device Command drop down menu in the HS Electrical Test Tool, and click the [EXECUTE] button again.
- Click the [Update] button to update the image of waveform in the dialog box of the busXplorer-USB.



**15. Confirm the Sync field of the 1st packet (EL\_21). Using the digital oscilloscope's zoom function, adjust the zoom position on the 1st packet. Then set the cursors of the digital oscilloscope on the start and the end points of the Sync field of the 1st packet. The Sync field must be 32bits.**

**Note:**

- Click the [Update] button to update the image of waveform in the dialog box.
- When [Next] button is clicked, the measured value is judged and Fail message will be displayed if the result is failed.
- When setting the cursor on the Sync field, note that the Sync field starts from the Hi-Speed idle transitions to a falling edge. Count both rising and falling edges until the first two consecutive 1's and include the first 1.

16. Click the [Next] button in the dialog box of the busXplorer-USB. To measure the Sync field of the 2nd packet (EL\_21), adjust the zoom position on the EOP of the 2nd packet and set the cursors on the start and the end points of the Sync field of the 2nd packet. The Sync field must be 32bits.



**Note:**

- Click the [Update] button to update the image of waveform in the dialog box.
  - When [Next] button is clicked, the measured value is judged and Fail message will be displayed if the result is failed.
  - When setting the cursor on the Sync field, note that the Sync field starts from the Hi-Speed idle transitions to a falling edge. Count both rising and falling edges until the first two consecutive 1's and include the first 1.
17. Click the [Next] button in the dialog box of the busXplorer-USB. To measure the EOP width (EL\_25), adjust the zoom1 position of the EOP of the 2nd packet. Then set the cursors on the start and the end points of the EOP pulse of the 2nd packet in zoom1. The EOP width must be 8bits.


**Note:**

- Note that EOP could appear as a falling pulse or a rising pulse.
- When [Next] button is clicked, the measured value is judged and Fail message will be displayed if the result is failed.




18. Click the [Next] button in the dialog box of the busXplorer-USB. To measure the gap between packets (EL\_23), adjust zoom1 position to the end of the 1st packet (from host) and zoom2 position to the start of the 2nd packet (from host). Then set the cursors on the end point of the 1st packet in zoom1 and the start point of the 2nd packet in zoom2. The requirement of the gap is between 88bits and 192bits.

- Click the [Update] button to update the image of waveform in the dialog box.
- When [Next] button is clicked, the measured value is judged and Fail message will be displayed if the result is failed.

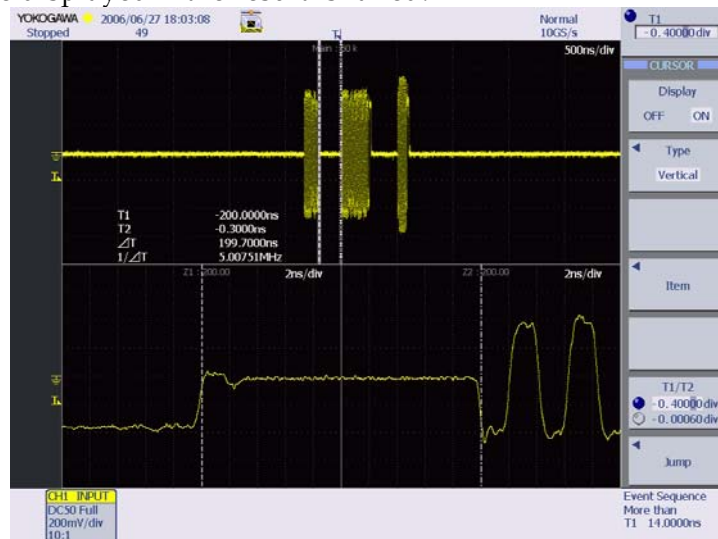

19. Click the [Next] button in the dialog box of the busXplorer-USB. Following the instructions in the dialog box, select SINGLE STEP GET DEV DESC from the Downstream Device Control drop down menu in the HS Electrical Test Tool, then click the [STEP] button two times.



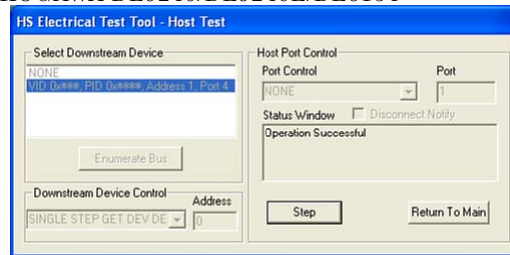

20. Click the [Next] button in the dialog box of the busXplorer-USB. Following the instructions in the dialog box, check the digital oscilloscope screen to confirm its trigger activates and packets from the host and device are displayed.

- If the trigger does not activate, adjust the trigger level as needed. Then, select SINGLE STEP GET DEV DESC again from the Device Command drop down menu in the HS Electrical Test Tool, and click the [STEP] button again.
- Click the [Update] button to update the image of waveform in the dialog box of the busXplorer-USB.



21. To measure the gap between packets (EL\_22), adjust zoom1 position to the end of the 2nd packet (from Device) and zoom2 position to the start of the 3rd packet (from Host). Then set the cursors on the end point of the 2nd packet in zoom1 and the start point of the 3rd packet in zoom2. The gap must be between 8bits and 192 bits.

- When [Next] button is clicked, the measured value is judged and Fail message will be displayed if the result is failed.

22. Click [Next] button in the dialog box of the busXplorer-USB.

To measure the EOP Width(EL\_55), adjust zoom1 position to the EOP of SOF. Then set the cursors on the start point of the EOP and the end point of the EOP in zoom1. The EOP width must be 40bits.

- Click the [Update] button to update the image of waveform in the dialog box.
- When [Next] button is clicked, the measured value is judged and Fail message will be displayed if the result is failed.



23. Click the [Next] button in the dialog box of the busXplorer-USB. The test results dialog box is displayed.

Host HS Packet Parameter Test [12/13]

20. The HS Packet Parameter Test executes. Repeat steps 10-20, and execute the test the number of times specified in Number of Repetition.

Number of repetition: 1/1

Result:  
Pass: 1  
Fail: 0

Parameter	Min.	Max.	Result	unit
EL21(1st packet):	31.500	32.500	31.999	bit
EL21(2nd packet):	31.500	32.500	31.999	bit
EL25:	7.5000	8.5000	7.8720	bit
EL23:	88.000	192.00	95.856	bit
EL22:	8.0000	192.00	118.51	bit
EL55:	39.500	40.500	39.904	bit

Next >> CANCEL

24. Click the [Next] button in the dialog box of the busXplorer-USB, repeat steps 13-23, and execute the test the number of times specified in "Number of Repetition."
- When the number of tests is completed, the test results dialog box as shown below is displayed.
  - Click the [Detail] button to display the test results by Web Browser.
  - Click the [Image] button to display an image of the digital oscilloscope screen.
  - Click the [Analyze] button to start Xviewer and display the waveform data. Xviewer must already have been installed.

Host HS Packet Parameter Test [13/13]

21. Record the test results in EL\_21, EL\_25, EL\_23, EL\_22, and EL\_55.  
 22. Remove the differential probe from the test fixture.

Number of repetition: 1/1

Result:  
 Pass: 1  
 Fail: 0

Parameter	Min.	Max.	Result	unit	Image	Analyze
EL21(1st packet):	31.500	32.500	31.999	bit	...	...
EL21(2nd packet):	31.500	32.500	31.999	bit	...	...
EL25:	7.5000	8.5000	7.8720	bit	...	...
EL23:	88.000	192.00	95.856	bit	...	...
EL22:	8.0000	192.00	118.51	bit	...	...
EL55:	39.500	40.500	39.984	bit	...	...

Detail

OK

**25. Record the test results in EL\_21, EL\_25, EL\_23, EL\_22, and EL\_55.**

- Appendix A contains the test result entry form for this test procedure. If necessary, please make copies of Appendix A for use as test record documentation for compliance test submission.
- All files created during tests are saved in the directory specified as the working folder for the busXplorer-USB.

**26. Repeat steps 2-25 for all ports of the host controller.**

**27. Remove the differential probe from the test fixture.**

#### **4.8. Host Disconnect Detect (EL\_36, EL\_37)**

**Please contact the independent test facilities to perform the Disconnect Test. Yokogawa Test Fixture and busXplorer-USB do not support this test.**

**Note**

**Disconnect testing is required for uncertified hub silicon and host silicon or certified silicon using an uncertified PHY.**

- **USB 2.0 Electrical Test Specification**
  - EL\_36  
A USB 2.0 downstream facing port must not detect the high-speed disconnect state when the amplitude of the differential signal at the downstream facing driver's connector is  $\geq 525\text{mV}$ .
  - EL\_37  
USB 2.0 downstream facing port must detect the hi-speed disconnect state when the amplitude of the differential signal at the downstream facing driver's connector is  $\leq 625\text{mV}$ .

**4.9. Host CHIRP Timing (EL\_33, EL\_34, EL\_35)**


- **USB 2.0 Electrical Test Specification**
  - EL\_33  
Downstream ports start sending and alternating sequence of Chirp K's and Chirp J's within 100  $\mu$ s after the device Chirp K stops.
  - EL\_34  
Downstream port Chirp K and Chirp J durations must be between 40us and 60us duration.
  - EL\_35  
Downstream ports begin sending SOFs within 500  $\mu$ s and not sooner than 100  $\mu$ s from transmission of the last Chirp (J or K).

- **Instruments Used**

Name	Quantity
DL9240/DL9240L/DL6154 Digital Oscilloscope	1
PBA2500 Active Probe	2
PBA2500 Probe attachment	2 sets
USB-IF compliant 1 m USB 2.0 cable	1
USB-IF Compliant Hi-Speed Hub	1
Test bed computer	1
USB compliance test fixture	1
5 V power supply for test fixture	1

- **Executing the Test**

1. Click the [Test Exec] button in the busXplorer-USB to display the Host Test selection dialog box.

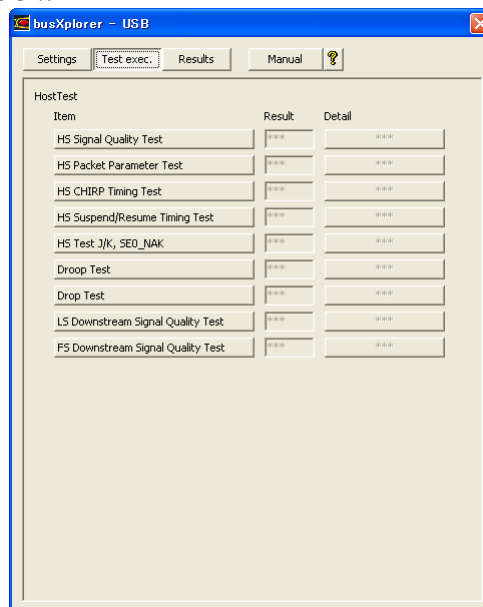

2. Click the [HS CHIRP Timing Test] button in the dialog box.  
The Host HS CHIRP Timing Test dialog box is displayed.

Host HS CHIRP Timing Test [1/10]

1. Enter the repeat number from 1 (default) to 50 in the Number of Repetition input box.

2. If necessary, enter a comment for the test in Comment text box. The comment is saved together with test result and displayed in the Test Result Dialog box.

Number of repetition: 1

Parameter	Min.	Max.	Default
EL33:	***	100.00u	\$
EL34 (Chirp K):	40.000u	60.000u	\$
(Chirp J):	40.000u	60.000u	\$
EL35:	100.00u	500.00u	\$

Comment:


Next >> CANCEL

3. Enter the repeat number from 1 (default) to 50 in the Number of Repetition input box.
4. If necessary, enter a comment for the test in Comment text box. The comment is saved together with test result and displayed in the Test Result Dialog box.
5. If you wish to change the judgment range, you can edit the judgment criteria for EL\_33, EL\_34, and EL\_35.  
 Default values for the judgment criteria are as follows:
  - EL\_33  
 Max.: 100  $\mu$ s
  - EL\_34 (Chirp K,J)  
 Min.: 40.0  $\mu$ s, Max.: 60.0  $\mu$ s
  - EL\_35  
 Min.: 100  $\mu$ s, Max.: 500.0  $\mu$ s

If you click the [Default] button after changing the judgment range, the default values of the judgment range are restored.

6. Click the [Next] button.

A connection diagram as shown below is displayed.

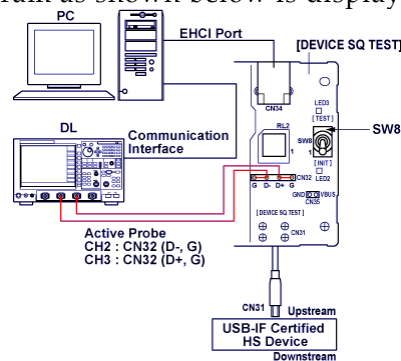

7. Turn ON the power to the test fixture and verify that the green power supply


**LED1 is lit.**

8. **Connect the USB-IF compliant Hi-Speed USB hub (upstream port side) to the CN31 connector of the DEVICE SQ TEST block and turn ON the power to the hub.**
9. **Connect the host controller port under test to the CN34 connector of the DEVICE SQ TEST block using a 1 m USB cable.**
10. **Connect two PBA2500 active probes, one to CH2 and the other to CH3 of the digital oscilloscope.**

**Note:**


- After connecting the probe, heat emitted from the probe causes the offset voltage to drift. The probe should nearly stabilize about thirty minutes after applying power.
11. **Attach the attachments on the tips of the active probes, then connect the CH2 probe to GND and D- of CN32, and the CH3 probe to GND and D+ of CN32.**
  12. **Click the [Next] button in the dialog box of the busXplorer-USB. Following the instructions in the dialog box, place SW8 of the test fixture to the INIT position.**

Verify LED2 of the test fixture is lit.

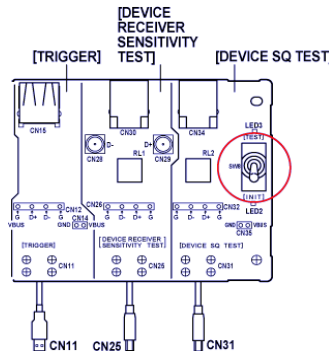

13. **Click the [Next] button in the dialog box of the busXplorer-USB. Following the instructions in the dialog box, click the [Enumerate BUS] button of the HS Electrical Test Tool. Confirm that the VID, PID, connected address, and port of the DUT are displayed under Select Downstream Device.**

If not already running, start the HS Electrical Test Tool. Select Host Controller/System under Select Type of Test, click the TEST button, then confirm the above.

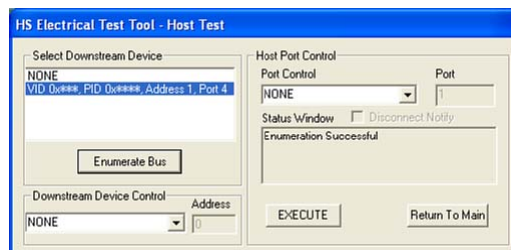

14. **Click the [Next] button in the dialog box of the busXplorer-USB, check the digital oscilloscope screen to confirm that a trigger activates and CHIRP data is displayed.**

- If the trigger does not activate, adjust the trigger level as needed

- Click the [Update] button to update the image of waveform in the dialog box.

**15. Measure the CHIRP response timing (EL33).**

Measure the host's CHIRP response timing. Measure the time between the end of CHIRP-K to the beginning of CHIRP-K-J-K-J-K-J. The time must be less than or equal to 100us.

- Click the [Update] button to update the image of waveform in the dialog box.
- When [Next] button is clicked, the measured value is judged and Fail message will be displayed if the result is failed.




**16. Click the [Next] button in the dialog box of the busXplorer-USB.**

Measure the period of CHIRP-K-J-K-J-K-J (EL34).

Measure the individual durations of the Chirp-K and Chirp-J states. The requirement of the duration is between 40us and 60us.

- Click the [Update] button to update the image of waveform in the dialog box.
- When [Next] button is clicked, the measured value is judged and Fail message will be displayed if the result is failed.

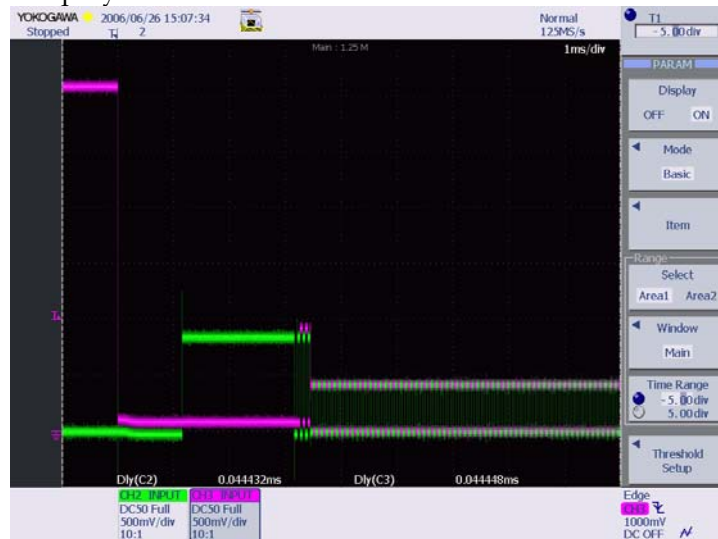


**17. Click the [Next] button in the dialog box of the busXplorer-USB.**

Remove the HS-hub connected to the CN31 connector of the DEVICE SQ



**TEST block, then reconnect it.**

18. Following the instructions in the dialog box of the busXplorer-USB, click the [Enumerate BUS] button in the HS Electrical Test Tool. Confirm that the VID, PID, connected address, and port of the DUT are displayed under Select Downstream Device.

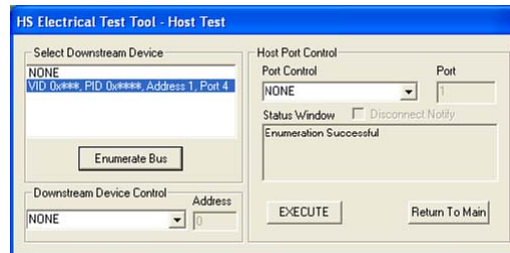

19. Click the [Next] button in the dialog box of the busXplorer-USB, check the digital oscilloscope screen to confirm that a trigger activates and CHIRP data is displayed.

- If the trigger does not activate, adjust the trigger level as needed
- Click the [Update] button to update the image of waveform in the dialog box.

20. Measure the time from the end of the CHIRP to SOF (EL35).

To measure the time between the end of the host Chirp-J/K and the first SOF sent by the host, adjust zoom1 position to the end of the host Chirp-J/K and zoom2 position to the first SOF sent by the host. Then set the cursors on the end point of the Chirp-J/K in zoom1 and the start point of the first SOF in zoom2. The time must be between 100us and 500us.

- Click the [Update] button to update the image of waveform in the dialog box.
- When [Next] button is clicked, the measured value is judged and Fail message will be displayed if the result is failed.



21. Click the [Next] button in the dialog box of the busXplorer-USB. The test results dialog box is displayed.

18. The HS CHIRP Test executes. Repeat steps 10-18, and execute the test the number of times specified in Number of Repetition.

Number of repetition: 1/1

Result:  
Pass: 1  
Fail: 0

Parameter	Min.	Max.	Result
EL33:	***	100.00u	56.744u s
EL34 (Chirp K):	40.000u	60.000u	44.444u s
(Chirp J):	40.000u	60.000u	47.098u s
EL35:	100.00u	500.00u	193.60u s

Next >> CANCEL

**22. Click the [Next] button in the dialog box of the busXplorer-USB, repeat steps 13-21, and execute the test the number of times specified in “Number of Repetition.”**

- When this number of tests is completed, the test results dialog box as shown below is displayed.
- Click the [Detail] button to display the test results by Web Browser.
- Click the [Image] button to display an image of the digital oscilloscope screen.
- Click the [Analyze] button to start Xviewer and display the waveform data. Xviewer must already have been installed.

19. Record the test results in EL\_33, EL\_34, and EL\_35.  
20. Repeat steps 1-19 for all host controller of DUT.

Number of repetition: 1/1

Result:  
Pass: 1  
Fail: 0

Parameter	Min.	Max.	Result	Image	Analyze
EL33:	***	100.00u	56.744u s	...	...
EL34 (Chirp K):	40.000u	60.000u	44.444u s	...	...
(Chirp J):	40.000u	60.000u	47.098u s	...	...
EL35:	100.00u	500.00u	193.60u s	...	...

Detail OK

**23. Record the test results in EL\_33, EL\_34, and EL\_35.**

- Appendix A contains the test result entry form for this test procedure. If necessary, please make copies of Appendix A for use as test record documentation for compliance test submission.
- All files created during tests are saved in the directory specified as the working folder for the busXplorer-USB.

**24. Repeat steps 2-23 for all ports of the host controller.**

**4.10. Host Suspend/Resume Timing (EL\_38, EL\_41)**

- **USB 2.0 Electrical Test Specification**

- EL\_38

A device must revert to full-speed termination no later than 125  $\mu$ s after there is a 3 ms idle period on the bus.

- EL\_41


After resuming a port, the host must begin sending SOFs within 3ms of the start of the idle state.

- **Instruments Used**

Name	Quantity
DL9240/DL9240L/DL6154 Digital Oscilloscope	1
PBA2500 Active Probe	2
PBA2500 Probe attachment	2 sets
USB-IF compliant 1 m USB 2.0 cable	1
USB-IF Compliant Hi-Speed USB Hub	1
Test bed computer	1
USB compliance test fixture	1
5 V power supply for test fixture	1

- **Executing the Test**

1. Click the [Test Exec] button in the busXplorer-USB to display the Host Test selection dialog box.

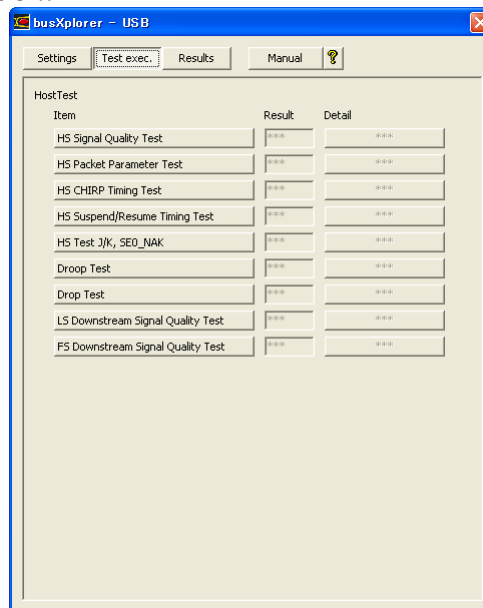

2. Click the [HS Suspend/Resume Timing Test] button in the dialog box.  
The Host HS Suspend/Resume Timing Test dialog box is displayed.

**Host HS Suspend/Resume Timing Test [1/9]**

1. Enter the repeat number from 1 (default) to 50 in the Number of Repetition input box.

2. If necessary, enter a comment for the test in Comment text box. The comment is saved together with test result and displayed in the Test Result Dialog box.

Number of repetition:

Parameter	Min.	Max.	Default
EL38:	<input type="text" value="3.0000m"/>	<input type="text" value="3.1250m"/>	<input type="checkbox"/>
EL41:	<input type="text" value="***"/>	<input type="text" value="3.0000m"/>	<input type="checkbox"/>


Comment:

Next >> CANCEL

3. Enter the repeat number from 1(default) to 50 in the Number of Repetition input box. .
4. If necessary, enter a comment for the test in Comment text box. The comment is saved together with test result and displayed in the Test Result Dialog box.
5. If you wish to change the judgment range, you can edit the judgment criteria for EL\_38, EL\_41.  
Default values for the judgment criteria are as follows:
  - EL\_38  
Min.: 3.000ms, Max.: 3.125ms
  - EL\_41  
Max.: 3.000ms

If you click the [Default] button after changing the judgment range, the default values of the judgment range are restored.

6. Click the [Next] button in the dialog box of the busXplorer-USB.  
A connection diagram as shown below is displayed.

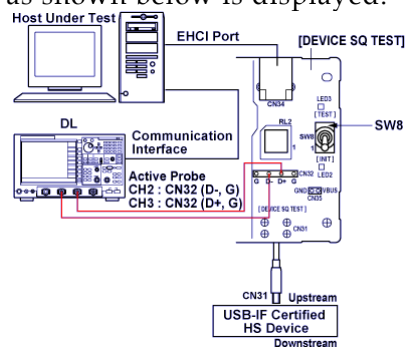

7. Turn ON the power to the test fixture and verify that the green power supply LED1 is lit.
8. Connect the USB-IF compliant Hi-Speed USB hub (upstream port side) to the CN31

**connector of the Device SQ TEST block and turn ON the power to the hub.**


9. **Connect the host controller port under test to the CN34 connector of the DEVICE SQ TEST block using a 1 m USB cable.**
10. **Connect the PBA2500 active probes to CH2 and CH3 of the digital oscilloscope.**

**Note:**

After connecting the probe, heat emitted from the probe causes the offset voltage to drift. The probe should nearly stabilize about thirty minutes after applying power.


11. **Attach the attachments on the tips of the active probes, and then connect the CH2 probe to GND and D- of CN32, and the CH3 probe to GND and D+ of test pin CN32.**
12. **Click the [Next] button in the dialog box of the busXplorer-USB. Following the instructions in the dialog box, place SW8 of the test fixture to the INIT position.**

Verify LED2 of the test fixture is lit.

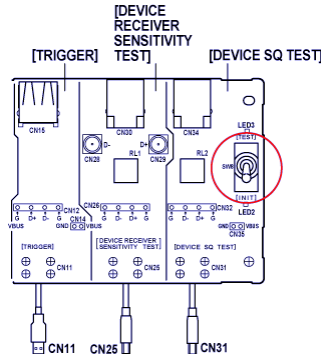

13. **Click the [Next] button in the dialog box of the busXplorer-USB, click the [Enumerate Bus] button in the HS Electrical Test Tool .Then, select SUSPEND from the Port Control drop down menu in the HS Electrical Test Tool, then click [EXECUTE] button.**

If not already running, start the HS Electrical Test Tool. Select Host Controller/System under Select Type of Test, click the TEST button, then confirm the above.

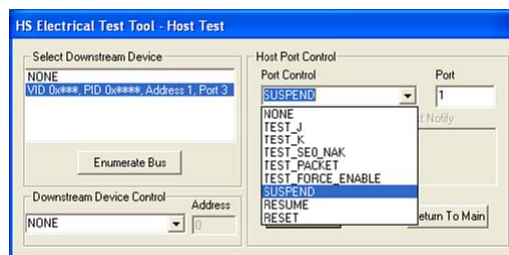

14. **Click the [Next] button in the dialog box of the busXplorer-USB, check the digital oscilloscope screen to confirm that a trigger activates and the Suspend signal is displayed.**
  - If the trigger does not activate, adjust the trigger level as needed
  - Click the [Update] button to update the image of waveform in the dialog box.


15. **Using the oscilloscope's cursor/zoom function, measure the time from the**

end of the last SOF packet (from host) to the point when the device connects its full speed pull-up resistor on D+ (EL\_38). Adjust zoom1 position to the last SOF packet and set T1 cursor on the end of the SOF packet in zoom1. The requirement of the time is between 3.000ms and 3.125ms.

- Do not change position of zoom2 and cursor T2.
- Click the [Update] button to update the image of waveform in the dialog box.
- When [Next] button is clicked, the measured value is judged and Fail message will be displayed if the result is failed.



- Click [Next] in the dialog box of the busXplorer-USB, and then choose RESUME from Port Control drop down menu in the HS Electrical Test Tool, then click the [EXECUTE] button.

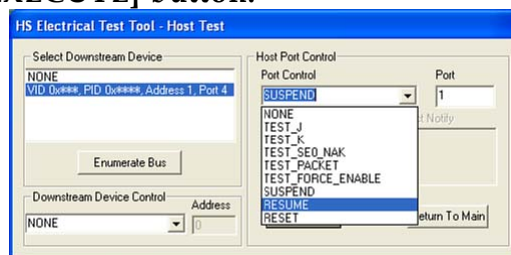

- Click the [Next] button in the dialog box of the busXplorer-USB, check the digital oscilloscope screen to confirm that a trigger activates and the Resume signal is displayed.

- If the trigger does not activate, adjust the trigger level as needed
- Click the [Update] button to update the image of waveform in the dialog box.

- Resume the HS operation (EL41).

Using the oscilloscope's cursor/zoom function, measure the time from the falling edge of D+ to the first SOF issued by the host, adjust zoom2 position to the first SOF packet. Then set the T2 cursors on the start point of the first SOF in zoom2. The requirement of the time must be less than 3.0ms.

- Do not change position of zoom1 and cursor T1.
- Click the [Update] button to update the image of waveform in the dialog box.



19. Click the [Next] button in the dialog box of the busXplorer-USB.  
The test results dialog box is displayed.

Host HS Suspend/Resume Timing Test [8/9]

16. The HS Suspend/Resume Test executes.  
Repeat steps 10-16, and execute the test the number of times specified in Number of Repetition.

Number of repetition: 1/1

Result:  
Pass: 1  
Fail: 0

Parameter	Min.	Max.	Result
EL38:	3.0000m	3.1250m	3.0032m s
EL41:	***	3.0000m	24.096u s

Next >> CANCEL

20. Click the [Next] button in the dialog box of the busXplorer-USB, repeat steps 13-19, and execute the test the number of times specified in "Number of Repetition."
- When the number of tests is complete, the test results dialog box as shown below is displayed.
  - Click the [Detail] button to display the test results by Web Browser.
  - Click the [Image] button to display an image of the digital oscilloscope screen.
  - Click the [Analyze] button to start Xviewer and display the waveform data. Xviewer must already have been installed.



Host HS Suspend/Resume Timing Test [9/9]

17. Record the test results in EL\_38 and EL\_41.  
 18. Repeat steps 1-17 for all host controller of DUT.  
 19. Click the Enumerate Bus button in the HS Electrical Test Tool once, then proceed to the next item.

Number of repetition: 1/1

Result:  
 Pass: 1  
 Fail: 0

Parameter	Min.	Max.	Result	Image	Analyze
EL38:	3.0000m	3.1250m	3.0032m	\$	...
EL41:	***	3.0000m	24.096u	\$	...

Detail

OK

**21. Record the test results in EL\_38 and EL\_41.**

- Appendix A contains the test result entry form for this test procedure. If necessary, please make copies of Appendix A for use as test record documentation for compliance test submission.
- All files created during tests are saved in the directory specified as the working folder for the busXplorer-USB.

**22. Repeat steps 2-21 for all ports of the host controller.**

**23. Click the Enumerate Bus button in the HS Electrical Test Tool once, then proceed to the next item.**

**24. Remove the Active probes from the test fixture.**

**4.11. Host Test J/K, SE0\_NAK (EL\_8, EL\_9)**

- **USB 2.0 Electrical Test Specification**

- EL\_8

When either D+ or D- are driven high, the output voltage must be 400mV  $\pm 10\%$  when terminated with precision 45 $\Omega$  resistors to ground.<sup>1</sup>

- EL\_9

When either D+ and D- are not being driven, the output voltage must be 0V  $\pm 10$  mV when terminated with precision 45 $\Omega$  resistors to ground.


<sup>1</sup> Because of the test specification changes that were made in January 2010, this test has been removed from the requirements.

- **Instruments Used**

Name	Quantity
Yokogawa Meter & Instrument 3 1/2	1
Digital Multimeter 733/734	
USB-IF compliant 1 m USB 2.0 cable	1
Test bed computer	1
USB compliance test fixture	1
5 V power supply for test fixture	1

- **Executing the Test**

1. Click the [Test Exec] button in the busXplorer-USB to display the Host Test selection dialog box.

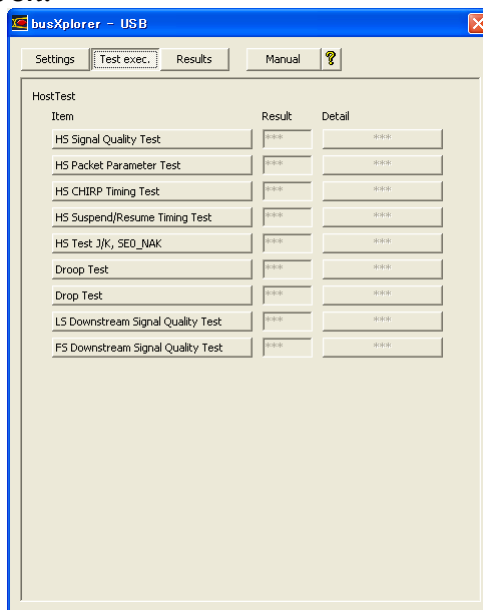

2. Click the [HS Test J/K, SE0\_NAK] button.

The Host J/K, SE0\_NAK Test dialog box opens.

1. Enter the repeat number from 1 (default) to 50 in the Number of Repetition input box.

2. If necessary, enter a comment for the test in Comment text box. The comment is saved together with test result and displayed in the Test Result Dialog box.

Number of repetition:

Parameter	Min.	Max.	Default
EL8:TestJ D+	360.00m	440.00m	<input type="checkbox"/>
EL9:TestJ D-	-10.000m	10.000m	<input type="checkbox"/>
EL9:TestK D+	-10.000m	10.000m	<input type="checkbox"/>
EL8:TestK D-	360.00m	440.00m	<input type="checkbox"/>
EL9:SEO_NAK D+	-10.000m	10.000m	<input type="checkbox"/>
SEO_NAK D-	-10.000m	10.000m	<input type="checkbox"/>

Comment:

Next >> CANCEL

3. Enter the repeat number from 1 (default) to 50 in the Number of Repetition input box.
4. If necessary, enter a comment for the test in Comment text box. The comment is saved together with test result and displayed in the Test Result Dialog box.
5. If you wish to change the judgment range, you can edit the judgment criteria for EL\_8 and EL\_9.

Default values for the judgment criteria are as follows:


- EL\_8, EL\_9
 

Test J	D+ Min.: 360 mV, Max.: 440 mV
	D- Min.: -10.0 mV, Max.: 10.0 mV
Test K	D+ Min.: -10.0 mV, Max.: 10.0 mV
	D- Min.: 360 mV, Max.: 440 mV
- EL\_9
 

SEO_NAK	D+ Min.: -10.0 mV, Max.: 10 mV
SEO_NAK	D- Min.: -10.0 mV, Max.: 10.0 mV

If you click the [Default] button after changing the judgment range, the default values of the judgment range are restored.

6. Click the [Next] button in the dialog box of the busXplorer-USB. A connection diagram as shown below is displayed.

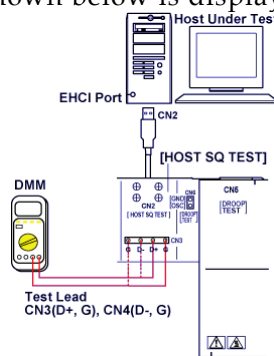


**Note:**


- The digital oscilloscope is not necessary to perform this test.

7. **Connect the port under test of the host controller to the CN2 connector of the HOST SQ TEST block.**
8. **Click [Next] button in the dialog box of the busXplorer-USB. Following the instructions in the dialog box, select TEST\_J from the Port Control drop down menu and set the target port number in the HS Electrical Test Tool, then click the [EXECUTE] button.**


If not already running, start the HS Electrical Test Tool. Select Host Controller/System under Select Type of Test, click the TEST button, then confirm the above.

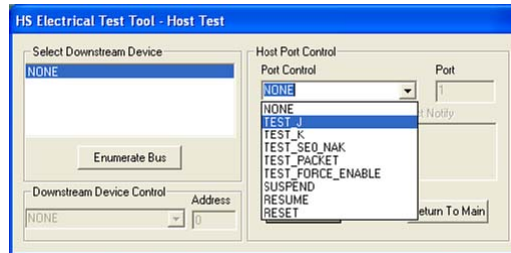


9. **Click the [Next] button in the dialog box of the busXplorer-USB, use a digital multimeter to measure the D+ and D- voltages(TEST\_J), and then record them to the input text box for D+ and D-(EL\_8, EL\_9).**
  - D+ voltage: Between GND and D+ at CN3
  - D- voltage: Between GND and D- at CN3
- When [Next] button is clicked, the measured value is judged and Fail message will be displayed if the result is failed.

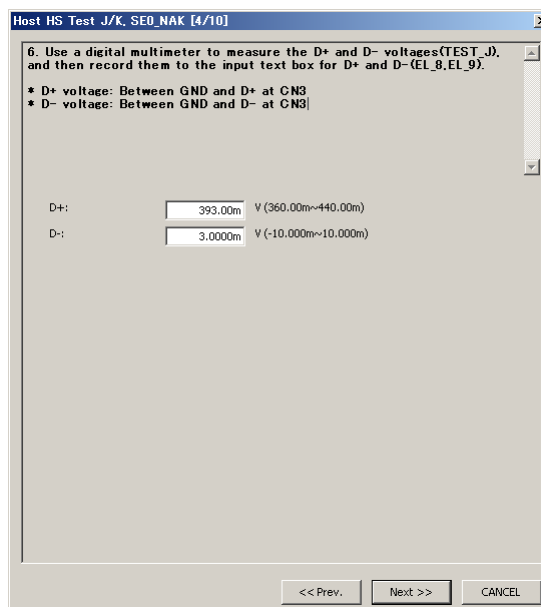


10. **Click the [Next] button in the dialog box of the busXplorer-USB . Select TEST\_K from Port Control drop down menu and set the target port number in the HS Electrical Test Tool, then click the [EXECUTE] button.**

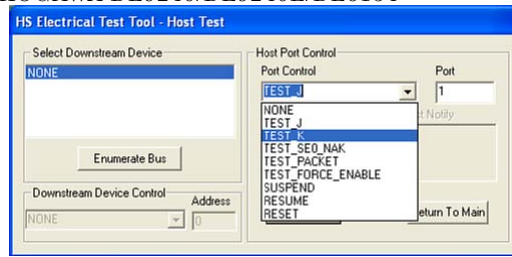

11. Click the [Next] button in the dialog box of the busXplorer-USB, use a digital multimeter to measure the D+ and D- voltages(TEST\_K), and then record them to the input text box for D+ and D-(EL\_9, EL\_8).
  - D+ voltage: Between GND and D+ at CN3
  - D- voltage: Between GND and D- at CN3
- When [Next] button is clicked, the measured value is judged and Fail message will be displayed if the result is failed.

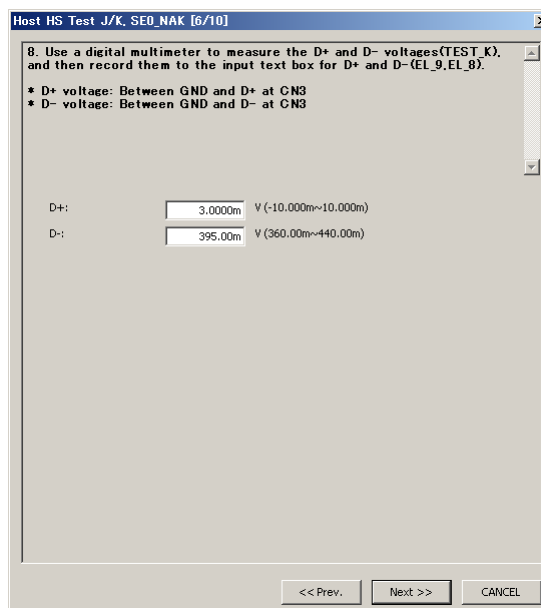

12. Click the [Next] button in the dialog box of the busXplorer-USB. Select TEST\_SE0\_NAK from Port Control drop down menu and set the target port number in the HS Electrical Test Tool, then click the [EXECUTE] button.

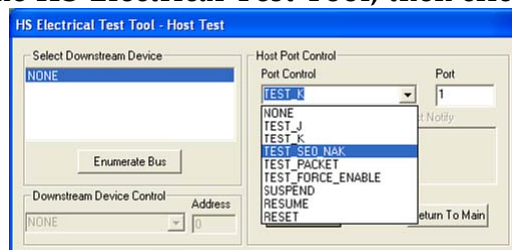

13. Click the [Next] button in the dialog box of the busXplorer-USB. Use a digital multimeter to measure the D+ voltage and D- voltages(TEST\_SE0\_NAK), and then record them to the input text box for D+ and D-(EL\_9).
- D+ voltage: Between GND and D+ at CN3
- D- voltage: Between GND and D- at CN3

- When [Next] button is clicked, the measured value is judged and Fail message will be displayed if the result is failed.

Host HS Test J/K, SE0\_NAK [8/10]

10. Use a digital multimeter to measure the D+ voltage and D- voltages (TEST\_SE0\_NAK), and then record them to the input text box for D+ and D- (EL\_9).

\* D+ voltage: Between GND and D+ at CN3  
\* D- voltage: Between GND and D- at CN3

D+:  V (-10.000m~10.000m)  
D-:  V (-10.000m~10.000m)

<< Prev.    Next >>    CANCEL

- Click the [Next] button in the dialog box of the busXplorer-USB. The test results dialog box is displayed.

Host HS Test J/K, SE0\_NAK [9/10]

11. The HS J/K and SE0\_NAK Test executes. Repeat steps 5-11, and execute the test the number of times specified in Number Of Repetation.

Number of repetition: 1/4

Result:  
Pass 1  
Fail 0

Parameter	Min.	Max.	Result
EL8:TestJ D+	360.00m	440.00m	393.00m V
EL9:TestJ D-	-10.000m	10.000m	3.0000m V
EL9:TestK D+	-10.000m	10.000m	3.0000m V
EL8:TestK D-	360.00m	440.00m	395.00m V
EL9:SE0_NAK D+	-10.000m	10.000m	2.0000m V
SE0_NAK D-	-10.000m	10.000m	2.0000m V

Next >>    CANCEL

- Click the [Next] button in the dialog box of the busXplorer-USB, repeat steps 8-14, and execute the test the number of times specified in "Number Of Repetation".
  - When this number of tests is completed, the test results dialog box as shown below is displayed.
  - Click the Detail button to display the test results by Web Browser.

Host HS Test J/K, SE0\_NAK [10/10]

12. Record the test results in EL\_8 and EL\_9.  
13. Repeat steps 1-12 for all ports of the host controller.

File "C:\Program Files\YOKOGAWA\busXplorerUSB\work\Host\_HS\_TestJK\13Oct10090133."

Number of repetition: 1/1

Result  
Pass 1  
Fail 0

Parameter	Min.	Max.	Result
EL8:TestJ D+	360.00m	440.00m	393.00m V
EL9:TestJ D-	-10.000m	10.000m	3.0000m V
EL9:TestK D+	-10.000m	10.000m	3.0000m V
EL8:TestK D-	360.00m	440.00m	395.00m V
EL9:SE0_NAK D+	-10.000m	10.000m	2.0000m V
SE0_NAK D-	-10.000m	10.000m	2.0000m V

Detail

OK

- 16. Record the test results in EL\_8 and EL\_9.**
- Appendix A contains the test result entry form for this test procedure. If necessary, please make copies of Appendix A for use as test record documentation for compliance test submission.
  - All files created during tests are saved in the directory specified as the working folder for the busXplorer-USB.
- 17. Repeat steps 2-16 for all ports of the host controller.**

## Appendix A

### Host Hi-Speed Electrical Test Data

This section is for recording the actual test result. Please use a copy for each device to be tested.

#### Vendor and Product Information

	Please fill in all fields. Please contact your silicon supplier if you are unsure of the silicon information.
Test Date	
Vendor Name	
Vendor Complete Address	
Vendor Phone Number	
Vendor Contact, Title	
Test ID Number	
Product Name	
Product Model and Revision	
USB Silicon Vendor Name	
USB Silicon Model	
USB Silicon Part Marking	
USB Silicon Stepping	
Tested By	



**Legacy USB Compliance Tests****Legacy USB Compliance Checklist**

Legacy Test	Downstream Ports					Comments
	P1	P2	P3	P4	P5	
LS SQ						
FS SQ						
Drop/ Drop						
Interop						

P = PASS

F = FAIL

N/A = Not applicable

**Host Hi-speed Signal Quality (EL\_2, EL\_3, EL\_6, EL\_7)**EL\_2 A USB 2.0 Hi-Speed transmitter data rate must be 480 Mb/s  $\pm 0.05\%$ .Reference documents: *USB 2.0 Specification*, Section 7.1.2.2

Port	P1	P2	P3	P4	P5
PASS					
FAIL					
N/A					

Overall Result:

☐ PASS☐ FAIL☐ N/A

Comments:

EL\_3 A USB 2.0 downstream facing port must meet Template 1 transform waveform requirements measured at TP2 (each host downstream port).

Reference documents: *USB 2.0 Specification*, Section 7.1.2.2.

Port	P1	P2	P3	P4	P5
PASS					
FAIL					
N/A					

Overall Result:

☐ PASS☐ FAIL☐ N/A

Comments:

**EL\_6** A USB 2.0 HS driver must have 10% to 90% differential rise and fall times of greater than 500 ps.

Reference documents: *USB 2.0 Specification, Section 7.1.2.2.*

Port	P1	P2	P3	P4	P5
PASS					
FAIL					
N/A					

☐ PASS

☐ FAIL

☐ N/A

Comments:

**EL\_7** A USB 2.0 HS driver must have monotonic data transitions over the vertical openings specified in the appropriate eye pattern template.

Reference documents: *USB 2.0 Specification, Section 7.1.2.2.*

☐ PASS

☐ FAIL

☐ N/A

Comments:

#### Host Controller Packet Parameters (EL\_21, EL\_22, EL\_23, EL\_25, EL\_55)

**EL\_21** The SYNC field for all transmitted packets (not repeated packets) must begin with a 32-bit SYNC field.

Reference documents: *USB 2.0 Specification, Section 8.2.*

Data Packet SYNC field

☐ PASS

☐ FAIL

☐ N/A

Comments:

SOF SYNC field

☐ PASS

☐ FAIL

☐ N/A

Comments:

EL\_25 The EOP for all transmitted packets (except SOFs) must be an 8-bit NRZ byte of 01111111 without bit stuffing. (Note, that a longer EOP is waivable)

Reference documents: *USB 2.0 Specification*, Section 7.1.13.2.

☐ PASS

☐ FAIL

☐ N/A

Comments:

EL\_23 Hosts transmitting two packets in a row must have an inter-packet gap of at least 88 bit times and not more than 192 bit times.

Reference documents: *USB 2.0 Specification*, Section 7.1.18.2.

☐ PASS

☐ FAIL

☐ N/A

Comments:

EL\_22 When transmitting after receiving a packet, hosts and devices must provide an inter-packet gap of at least 8 bit times and not more than 192 bit times.

Reference documents: *USB 2.0 Specification*, Section 7.1.18.2.

☐ PASS

☐ FAIL

☐ N/A

Comments:

EL\_55 Hosts transmitting SOF packets must provide a 40-bit EOP without bit stuffing where the first symbol of the EOP is a transition from the last data symbol.

Reference documents: *USB 2.0 Specification*, Section 7.1.13.2.

☐ PASS

☐ FAIL

☐ N/A

Comments:

**Host Disconnect Detect (EL\_36, EL\_37)**

**EL\_37** A USB 2.0 downstream facing port must not detect the hi-speed disconnect state when the amplitude of the differential signal at the downstream facing driver's connector is  $\leq 525$  mV.

Reference documents: *USB 2.0 Specification*, Section 7.1.7.3.

Port	P1	P2	P3	P4	P5
PASS					
FAIL					
N/A					

Overall Result:

☐ PASS

☐ FAIL

☐ N/A

Comments:

**EL\_36** A USB 2.0 downstream facing port must detect the hi-speed disconnect state when the amplitude of the differential signal at the downstream facing driver's connector is  $\geq 625$  mV.

Reference documents: *USB 2.0 Specification*, Section 7.1.7.3.

Port	P1	P2	P3	P4	P5
PASS					
FAIL					
N/A					

Overall Result:

☐ PASS

☐ FAIL

☐ N/A

Comments:

**Host CHIRP Timing (EL\_33, EL\_34, EL\_35)**

**EL\_33** Downstream ports start sending and alternating sequence of Chirp K's and Chirp J's within 100  $\mu$ s after the device Chirp K stops.

Reference documents: *USB 2.0 Specification*, Section 7.1.7.5.

☐ PASS

☐ FAIL

☐ N/A

Comments:

**EL\_34** The CHIRP handshake generated by a device must be at least 1ms and not more than 7ms in duration.

**Reference documents:** *USB 2.0 Specification*, Section 7.1.7.5.

- ☐ PASS
- ☐ FAIL
- ☐ N/A

Comments:

**EL\_35** Downstream ports begin sending SOFs within 500  $\mu$ s and not sooner than 100  $\mu$ s from transmission of the last Chirp (J or K).

**Reference documents:** *USB 2.0 Specification*, Section 7.1.7.5.

- ☐ PASS
- ☐ FAIL
- ☐ N/A

Comments:

#### Host Suspend/Resume timing (EL\_39, EL\_41)

**EL\_39** A device must support the Suspend state.

**Reference documents:** *USB 2.0 Specification*, Section 7.1.7.6.

- ☐ PASS
- ☐ FAIL
- ☐ N/A

Comments:

**EL\_41** After resuming a port, the host must begin sending SOFs within 3ms of the start of the idle state.

**Reference documents:** *USB 2.0 Specification*, Section 7.1.7.7.

- ☐ PASS
- ☐ FAIL
- ☐ N/A

Comments:

**Host Test J/K, SE0\_NAK (EL\_8, EL\_9)**

EL\_8, EL\_9 When either D+ or D- are driven high, the output voltage must be 400 mV  $\pm 10\%$  when terminated with precision 45  $\Omega$  resistors to ground.  
 When either D+ and D- are not being driven, the output voltage must be 0 V  $\pm 10$  mV when terminated with precision 45  $\Omega$  resistors to ground.

**Reference documents:** *USB 2.0 Specification*, Section 7.1.1.3.

Port	1		2		3		4		5	
Test	D+	D-	D+	D-	D+	D-	D+	D-	D+	D-
TEST_J										
TEST_K										

☐ PASS

☐ FAIL

☐ N/A

Comments:

EL\_9 When either D+ and D- are not being driven, the output voltage must be 0 V  $\pm 10$  mV when terminated with precision 45  $\Omega$  resistors to ground.

**Reference documents:** *USB 2.0 Specification*, Section 7.1.1.3.

Port	1		2		3		4		5	
Signal	D+	D-	D+	D-	D+	D-	D+	D-	D+	D-
Measure WRT Ground (mV)										

☐ PASS

☐ FAIL

☐ N/A

Comments:

## Appendix B

### B.1 About USBET


In this document, USB Electrical Analysis Tool (USBET) is used to perform Low-Speed/Full-Speed/Hi-Speed Signal Quality Test and Inrush Current Test. USBET is official analysis tool of USB-IF and downloadable from the following USB-IF site.

<http://www.usb.org/developers/tools/>

### B.2 How to start USBET

USBET can be started by either way of the following operations.

1. Execute (Installed Directory)\USBET.EXE
2. From start menu, click and execute USBET.exe

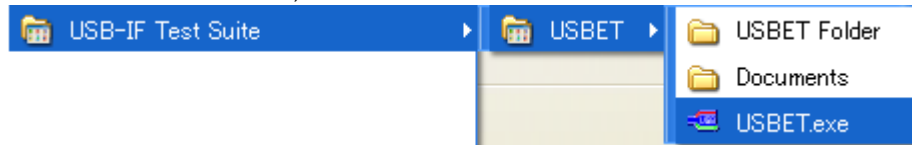


### B.3 Low-Speed/Full-Speed/Hi-Speed Signal Quality Test

1. Click and select 'Signal Quality' tab and check the appropriate Test Type.

Test Type	Description	Tier
LSFE	<b>Low Speed</b> Signal Quality Test Test Point <b>Far End</b>	(6)
LSNE	<b>Low Speed</b> Signal Quality Test Test Point <b>Near End</b>	(6)
FSFE	<b>Full Speed</b> Signal Quality Test Test Point <b>Far End</b>	(6)
HSFE	<b>High Speed</b> Signal Quality Test Test Point <b>Far End</b>	NA
HSNE	<b>High Speed</b> Signal Quality Test Test Point <b>Near End</b>	NA

2. Setting the Hub Tier number

Unlike FS electrical tests, the HS electrical tests are not performed behind the maximum number of nested hubs. So the tier level is not applicable for HS tests. For FS/LS tests, set the appropriate number (normally, 6 is specified).

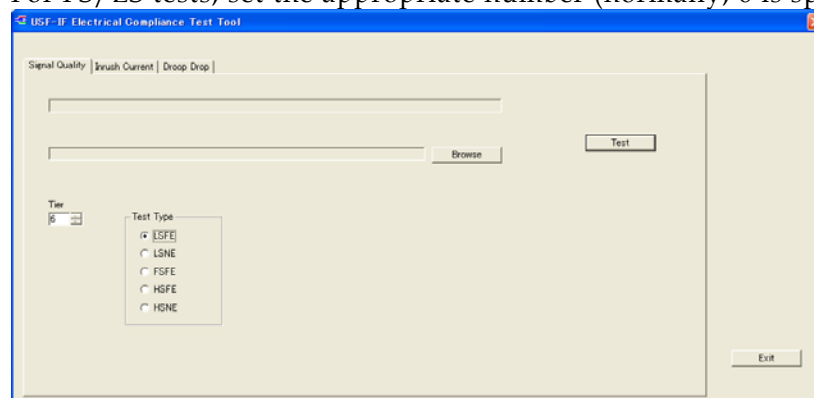

3. Click [Browse] button and select the target tsv file.
4. Click [Test] button and execute signal quality analysis.

After several seconds, test report in html format will be automatically displayed

on the screen. Generated report and related files are saved at the same folder where tsv file is located.

#### **B.4 Inrush Current Test**

1. Click and select 'Inrush Current' tab.
2. Click [Browse] button and select the target tsv file
3. Click [Test] button and execute inrush current analysis.  
After several seconds, test report in html format will be automatically displayed on the screen. Generated report and related files are saved at the same folder where tsv file is located.