

**DIGITAL** **PROJECTION**

## **E-Vision Series**

**High Brightness Digital Video Projector  
4500 WUXGA**

**User Manual**

用戶手冊

用戶手冊

**Manual del usuario**

**Manuel de l'utilisateur**

**Benutzerhandbuch**

사용자 설명서

Руководство пользователя

**Gebruikershandleiding**

Instrukcja obsługi

Uživatelská příručka

Εγχειρίδιο χρήσης

Kullanım Kılavuzu

**Manuale d'uso**

**Handbok**

Brugervejledning


Brukerveiledning

**Kyttohje**

Felhasználói kézikönyv

مدخلت سمل لیل

Manual do Usuário

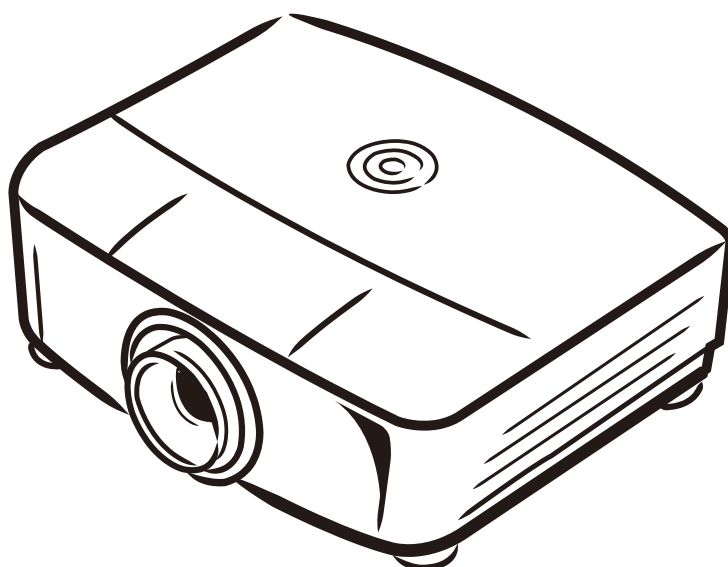

## Copyright

This publication, including all photographs, illustrations and software, is protected under international copyright laws, with all rights reserved. Neither this manual, nor any of the material contained herein, may be reproduced without written consent of the author.

© Copyright 2013

## Disclaimer

The information in this document is subject to change without notice. The manufacturer makes no representations or warranties with respect to the contents hereof and specifically disclaims any implied warranties of merchantability or fitness for any particular purpose. The manufacturer reserves the right to revise this publication and to make changes from time to time in the content hereof without obligation of the manufacturer to notify any person of such revision or changes.

## Trademark Recognition



Kensington is a U.S. registered trademark of ACCO Brand Corporation with issued registrations and pending applications in other countries throughout the world.



HDMI, the HDMI Logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

All other product names used in this manual are the properties of their respective owners and are acknowledged.

## Important Safety Information

**Important:**

*It is strongly recommended that you read this section carefully before using the projector. These safety and usage instructions will ensure that you enjoy many years of safe use of the projector. Keep this manual for future reference.*

### Symbols Used

Warning symbols are used on the unit and in this manual to alert you of hazardous situations.

The following styles are used in this manual to alert you to important information.

**Note:**

*Provides additional information on the topic at hand.*

**Important:**

*Provides additional information that should not be overlooked.*

**Caution:**

*Alerts you to situations that may damage the unit.*

**Warning:**

*Alerts you to situations that may damage the unit, create a hazardous environment, or cause personal injury.*

Throughout this manual, component parts and items in the OSD menus are denoted in bold font as in this example:

“Push the **Menu** button on the remote control to open the **Main** menu.”

### General Safety Information





- Do not open the unit case. Aside from the projection lamp, there are no user-serviceable parts in the unit. For servicing, contact qualified service personnel.
- Follow all warnings and cautions in this manual and on the unit case.
- The projection lamp is extremely bright by design. To avoid damage to eyes, do not look into the lens when the lamp is on.
- Do not place the unit on an unstable surface, cart, or stand.
- Avoid using the system near water, in direct sunlight, or near a heating device.
- Do not place heavy objects such as books or bags on the unit.

## Projector Installation Notice

- Place the projector in a horizontal position  
The tilt angle of the projector please see *Tilt Up/Down caution* on page 50.



- Allow at least 50 cm clearance around the exhaust vent.

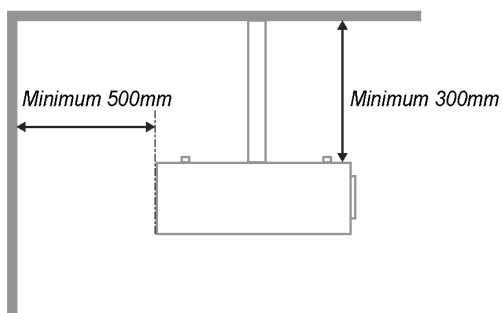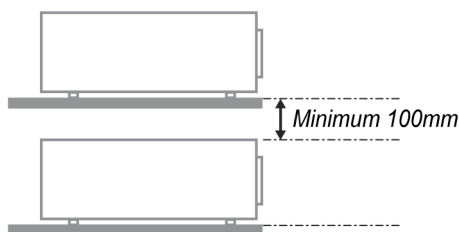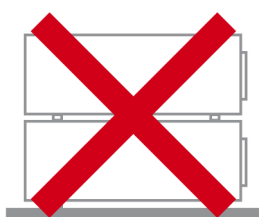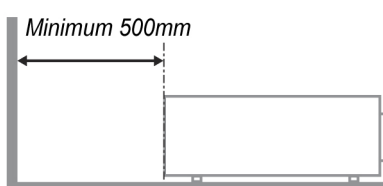

- Ensure that the intake vents do not recycle hot air from the exhaust vent.
- When operating the projector in an enclosed space, ensure that the surrounding air temperature within the enclosure does not exceed operation temperature while the projector is running, and the air intake and exhaust vents are unobstructed.
- All enclosures should pass a certified thermal evaluation to ensure that the projector does not recycle exhaust air, as this may cause the device to shutdown even if the enclosure temperature is within the acceptable operation temperature range.

### **Verify Installation Location**

- To supply power, the 3-blade (with earthing lead) socket should be used to ensure proper grounding and equalized ground potential for all of the equipment in the Projector System.
- The power code provided with the Projector should be used. In case of any missing item, other qualified 3-blade (with earthing lead) power cord can be used as substitution; however, do not use 2-blade power cord.
- Verify if the voltage is stable, grounded properly and there is no electricity leakage.
- Measure total power consumption which should not higher the safety capacity and avoid safety issue and short circuit.
- Turn on Altitude Mode when located in high altitude areas
- When installation the bracket, make sure the weight limit is not exceed and firmly secured.
- Avoid installing near air conditioner duct or subwoofer.
- Avoid installing at high temperature, insufficient cooling and heavy dust locations.
- Keep your product away from fluorescent lamps to avoid malfunction caused by IR interference
- The VGA IN connector should be connected to the VGA IN port. Note that it should be inserted tightly, with the screws on both sides securely fastened to ensure proper connection of the signal wire for achieving optimal display effect.
- The AUDIO IN connector should be connected to the AUDIO IN port and CANNOT be connected to AUDIO OUT or other ports like BNC, RCA; otherwise, it will lead to mute output and even DAMAGE the port.
- Install the projector above 200cm to avoid damage.
- The power cord and signal cable should be connected before power on the projector. During the projector starting and operating process, DO NOT insert or remove the signal cable or the power cord to avoid damaging the projector.

### **Cooling notes**

#### **Air outlet**

- Make sure the air outlet is 50cm clear of any obstruction to ensure proper cooling.
- Air outlet location should not be in front of the lens of other projector to avoid causing illusions.
- Keep the outlet at least 100cm away from the inlets of other projectors
- The projector generates a massive amount of heat during use. The internal fan dissipates the heat of the projector when shutting down, and such process may continue for a certain period. After the project enters STANDBY MODE status, press the AC power button to turn off the projector and remove the power cord. DO NOT remove the power cord during the shutdown process, as it may cause damage to the projector. In the meantime, the delayed heat radiating will also affect the service life of the projector. The shutdown process may vary depending on the model used. Whatever the case may be, be sure to disconnect the power cord till after the projector enters the STANDBY status.

#### **Air inlet**

- Make sure there is no object blocking air input within 30 cm.
- Keep the inlet away from other heat sources
- Avoided heavy dust area

## Power Safety

- Only use the supplied power cord.
- Do not place anything on the power cord. Place the power cord where it will not be in the way of foot traffic.
- Remove the batteries from the remote control when storing or not in use for a prolonged period.

## Replacing the Lamp

Replacing the lamp can be hazardous if done incorrectly. See *Replacing the Projection Lamp* on page 52 for clear and safe instructions for this procedure. Before replacing the lamp:

- Unplug the power cord.
- Allow the lamp to cool for about one hour.

### Caution:

*In rare cases the lamp bulb may burn out during normal operation and cause glass dust or shards to be discharged outward from the rear exhaust vent.*

*Do not inhale or do not touch glass dust or shards. Doing so could result in injury.*

*Always keep your face away from the exhaust vent so that you do not suffer from the gas and broken shards of the lamp.*

## Cleaning the Projector

- Unplug the power cord before cleaning. See *Cleaning the Projector* on page 58.
- Allow the lamp to cool for about one hour.

## Regulatory Warnings

Before installing and using the projector, read the regulatory notices in the *Regulatory Compliance* on page 71.

## Important Recycle Instructions:



Lamp(s) inside this product contain mercury. This product may contain other electronic waste that can be hazardous if not disposed of properly. Recycle or dispose in accordance with local, state, or federal Laws. For more information, contact the Electronic Industries Alliance at [WWW.EIAE.ORG](http://WWW.EIAE.ORG). For lamp specific disposal information check [WWW.LAMPRECYCLE.ORG](http://WWW.LAMPRECYCLE.ORG).

## Symbol Explanations



DISPOSAL: Do not use household or municipal waste collection services for disposal of electrical and electronic equipment. EU countries require the use of separate recycling collection services.

## **Main Features**

- *Lightweight unit, easy to pack away and transport.*
- *Compatible with all major video standards including NTSC, PAL, and SECAM.*
- *A high brightness rating allows for presentations in daylight or in lit rooms.*
- *Supports resolutions up to WUXGA at 16.7 million colors to deliver crisp, clear images.*
- *Flexible setup allows for front, rear projections.*
- *Line-of-vision projections remain square, with advanced keystone correction for angled projections.*
- *Input source automatically detected.*

## **About this Manual**

This manual is intended for end users and describes how to install and operate the DLP projector. Wherever possible, relevant information—such as an illustration and its description—has been kept on one page. This printer-friendly format is both for your convenience and to help save paper, thereby protecting the environment. It is suggested that you only print sections that are relevant to your needs.

## Table of Contents

|                                                                |           |
|----------------------------------------------------------------|-----------|
| <b>GETTING STARTED.....</b>                                    | <b>1</b>  |
| PACKING CHECKLIST.....                                         | 1         |
| VIEWS OF PROJECTOR PARTS.....                                  | 2         |
| <i>Front-right View</i> .....                                  | 2         |
| <i>Top view—On-screen Display (OSD) buttons and LEDs</i> ..... | 3         |
| <i>Rear view</i> .....                                         | 4         |
| <i>Bottom view</i> .....                                       | 6         |
| REMOTE CONTROL PARTS .....                                     | 7         |
| REMOTE CONTROL OPERATING RANGE.....                            | 9         |
| PROJECTOR AND REMOTE CONTROL BUTTONS.....                      | 9         |
| <b>SETUP AND OPERATION.....</b>                                | <b>10</b> |
| INSERTING THE REMOTE CONTROL BATTERIES .....                   | 10        |
| INSTALLING OR REMOVING THE OPTIONAL LENS .....                 | 11        |
| <i>Removing the Existing Lens From the Projector</i> .....     | 11        |
| <i>Installing the New Lens</i> .....                           | 12        |
| STARTING AND SHUTTING DOWN THE PROJECTOR.....                  | 13        |
| SETTING AN ACCESS PASSWORD (SECURITY LOCK) .....               | 15        |
| ADJUSTING THE PROJECTOR LEVEL .....                            | 17        |
| ADJUSTING PROJECTED IMAGE POSITION USING SHIFT .....           | 18        |
| <i>Adjusting the vertical image position</i> .....             | 18        |
| <i>Adjusting the horizontal image position</i> .....           | 19        |
| <i>Shift Range Diagram</i> .....                               | 19        |
| ADJUSTING THE ZOOM, FOCUS AND KEYSTONE .....                   | 20        |
| ADJUSTING THE VOLUME .....                                     | 21        |
| <b>ON-SCREEN DISPLAY (OSD) MENU SETTINGS .....</b>             | <b>22</b> |
| OSD MENU CONTROLS .....                                        | 22        |
| <i>Navigating the OSD</i> .....                                | 22        |
| SETTING THE OSD LANGUAGE .....                                 | 23        |
| OSD MENU OVERVIEW .....                                        | 24        |
| IMAGE MENU.....                                                | 25        |
| <i>Computer Menu</i> .....                                     | 26        |
| <i>Advanced Feature</i> .....                                  | 27        |
| <i>Color Manager</i> .....                                     | 28        |
| SETTINGS 1 MENU .....                                          | 29        |
| <i>Audio</i> .....                                             | 30        |
| <i>Advanced 1 Feature</i> .....                                | 31        |
| <i>Advanced 2 Feature</i> .....                                | 33        |
| SETTINGS 2 MENU .....                                          | 34        |
| <i>Status</i> .....                                            | 35        |
| <i>Advanced 1 Feature</i> .....                                | 36        |
| <i>Advanced 2 Feature</i> .....                                | 48        |
| <b>MAINTENANCE AND SECURITY .....</b>                          | <b>50</b> |
| TILT UP/DOWN CAUTION.....                                      | 50        |
| <i>The model with Standard lamp module</i> .....               | 50        |
| <i>The model with Tilt lamp module</i> .....                   | 50        |
| REPLACING THE PROJECTION LAMP.....                             | 52        |
| <i>Resetting the Lamp</i> .....                                | 55        |
| CLEANING THE FILTER (FILTER: OPTIONAL PARTS) .....             | 56        |
| REPLACING THE FILTER .....                                     | 57        |
| CLEANING THE PROJECTOR.....                                    | 58        |
| <i>Cleaning the Lens</i> .....                                 | 58        |
| <i>Cleaning the Case</i> .....                                 | 58        |
| USING THE PHYSICAL LOCK .....                                  | 59        |
| <i>Using the Kensington® Lock</i> .....                        | 59        |
| <i>Using the Security Chain Lock</i> .....                     | 59        |




|                                           |           |
|-------------------------------------------|-----------|
| <b>TROUBLESHOOTING</b>                    | <b>60</b> |
| COMMON PROBLEMS AND SOLUTIONS             | 60        |
| TIPS FOR TROUBLESHOOTING                  | 60        |
| LED ERROR MESSAGES                        | 61        |
| IMAGE PROBLEMS                            | 61        |
| LAMP PROBLEMS                             | 62        |
| REMOTE CONTROL PROBLEMS                   | 62        |
| AUDIO PROBLEMS                            | 63        |
| HAVING THE PROJECTOR SERVICED             | 63        |
| HDMI Q & A                                | 64        |
| <b>SPECIFICATIONS</b>                     | <b>65</b> |
| SPECIFICATIONS                            | 65        |
| PROJECTION DISTANCE VS. PROJECTION SIZE   | 66        |
| <i>Projection Distance and Size Table</i> | 66        |
| TIMING MODE TABLE                         | 68        |
| PROJECTOR DIMENSIONS                      | 70        |
| <b>REGULATORY COMPLIANCE</b>              | <b>71</b> |
| FCC WARNING                               | 71        |
| CANADA                                    | 71        |
| SAFETY CERTIFICATIONS                     | 71        |
| <b>APPENDIX I</b>                         | <b>72</b> |
| RS-232C PROTOCOL                          | 72        |


## GETTING STARTED

### Packing Checklist


Carefully unpack the projector and check that the following items are included:

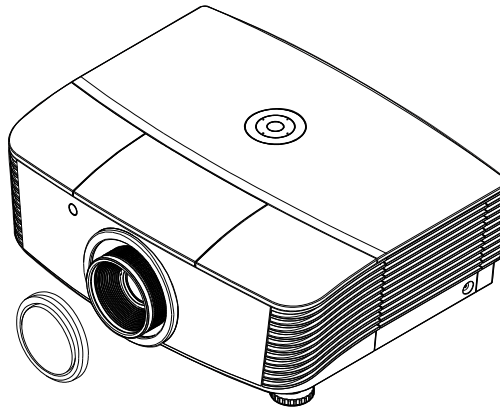


*PROJECTOR WITH LENS CAP*

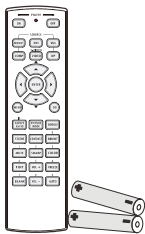


*REMOTE CONTROL  
(WITH TWO AA BATTERIES)*



*POWER CORD*



*VGA CABLE (1.8M)*

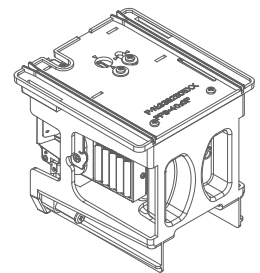

*TILT LAMP MODULE  
(OPTIONAL)*




*CD-ROM  
(THIS USER'S MANUAL)*



*WARRANTY CARD*



*QUICK START CARD*

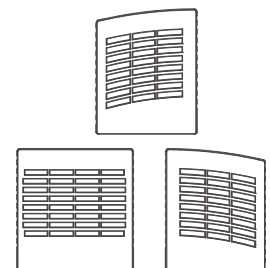


*DUST FILTER  
(OPTIONAL)*

Contact your dealer immediately if any items are missing, appear damaged, or if the unit does not work. It is recommend that you keep the original packing material should you ever need to return the equipment for warranty service.

**Caution:**  
Avoid using the projector in dusty environments.

## Views of Projector Parts

### Front-right View

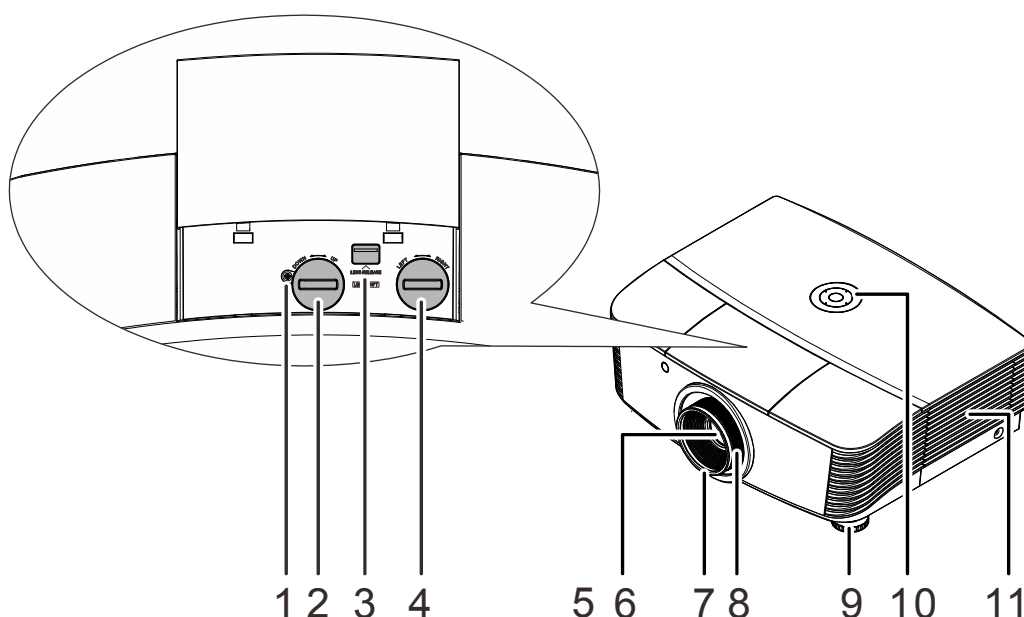

| ITEM | LABEL                 | DESCRIPTION                                            | SEE PAGE: |
|------|-----------------------|--------------------------------------------------------|-----------|
| 1.   | Screw                 | For ensure the lens position                           |           |
| 2.   | Vertical lens shift   | Adjusts the image position vertically                  | <b>18</b> |
| 3.   | Lens release button   | Press the release button before removing the lens      | <b>11</b> |
| 4.   | Horizontal lens shift | Adjusts the image position horizontally                | <b>19</b> |
| 5.   | IR receiver           | Receives IR signal from remote control                 | <b>7</b>  |
| 6.   | Lens                  | Projection Lens                                        |           |
| 7.   | Focus ring            | Focuses the projected image                            | <b>20</b> |
| 8.   | Zoom ring             | Enlarges the projected image                           |           |
| 9.   | Height adjuster       | Adjusts level of projector                             | <b>17</b> |
| 10.  | Function keys         | See Top view—On-screen Display (OSD) buttons and LEDs. | <b>3</b>  |
| 11.  | Lamp cover            | Removes cover to replace lamp module                   | <b>50</b> |


**Important:**

*Ventilation openings on the projector allow for good air circulation, which keeps the projector lamp cool. Do not obstruct any of the ventilation openings.*

**Note:**


*Suggest to loosen the screw before lens shift adjustment and tighten up after finished adjustment.*

### Top view—On-screen Display (OSD) buttons and LEDs

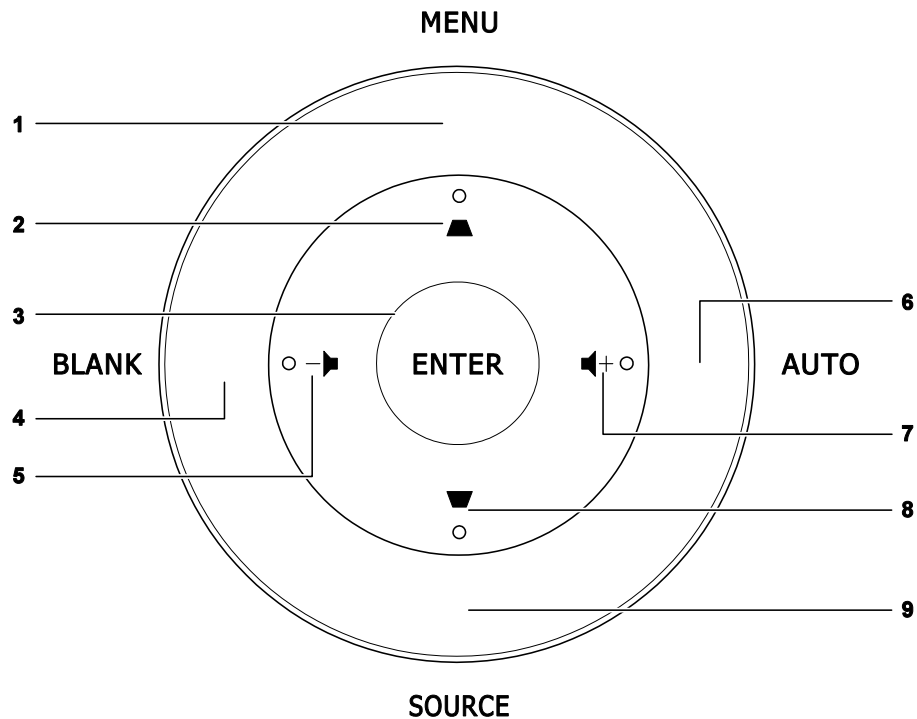

| ITEM | LABEL  | DESCRIPTION                                                         | SEE PAGE: |
|------|--------|---------------------------------------------------------------------|-----------|
| 1.   | MENU   | Opens and exits OSD menus                                           | 22        |
| 2.   | ▲      | Navigates and changes settings in the OSD Quick Menu – For Keystone |           |
| 3.   | ENTER  | Enter or confirm highlighted OSD menu item                          |           |
| 4.   | BLANK  | Displays a blank screen and mutes audio                             | 22        |
| 5.   | ▶      | Navigates and changes settings in the OSD Quick Menu – For Volume - |           |
| 6.   | AUTO   | Optimizes image size, position, and resolution                      |           |
| 7.   | ▶      | Navigates and changes settings in the OSD Quick Menu – For Volume + | 22        |
| 8.   | ▼      | Navigates and changes settings in the OSD Quick Menu – For Keystone |           |
| 9.   | SOURCE | Enter the Source menu                                               |           |

## Rear view

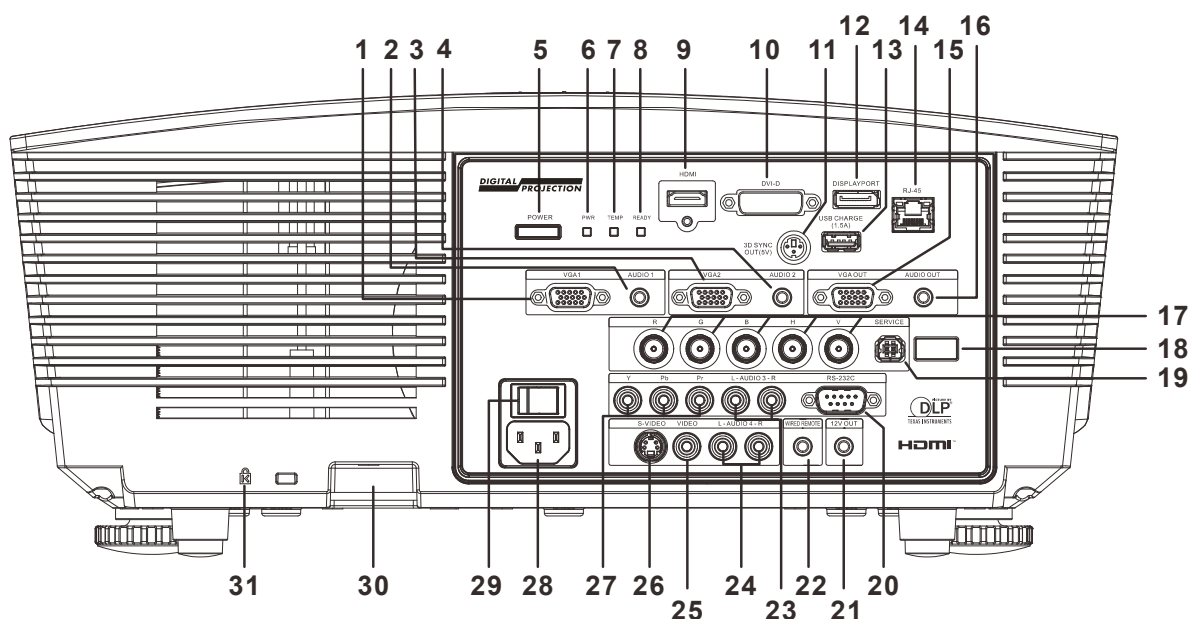

| ITEM | LABEL             | DESCRIPTION                                                                                                              |                                                            | SEE PAGE: |
|------|-------------------|--------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------|-----------|
| 1.   | VGA1              | Connect a RGB cable from a computer or a video enabled device.                                                           |                                                            |           |
| 2.   | AUDIO IN 1        | Connect the AUDIO cable from an input device.                                                                            |                                                            |           |
| 3.   | VGA2              | Connect a RGB cable from a computer or a video enabled device.                                                           |                                                            |           |
| 4.   | AUDIO IN 2        | Connect the AUDIO cable from an input device.<br><b>Note:</b> Share with DVI & BNC audio input.                          |                                                            |           |
| 5.   | POWER             | Turns the projector on or off (main power switch must be turned on first). Press to place the projector in standby mode. |                                                            | 13        |
| 6.   | PWR LED           | Red                                                                                                                      | Standby, Over Temperature                                  | 61        |
|      |                   | Blue                                                                                                                     | Lamp Lit , System stable                                   |           |
|      |                   | Flashing                                                                                                                 | Power on, Cooling, Error code (See as LED indicator table) |           |
| 7.   | TEMP LED          | Red                                                                                                                      | Over temperature                                           |           |
| 8.   | READY LED         | Red                                                                                                                      | Lamp Lit , System stable, Lamp Fail                        |           |
|      |                   | Flashing                                                                                                                 | Error code (See as LED indicator table)                    |           |
| 9.   | HDMI              | Connect the HDMI cable from a HDMI device.                                                                               |                                                            |           |
| 10.  | DVI-D             | Connect the DVI cable from a computer.                                                                                   |                                                            |           |
| 11.  | 3D SYNC OUT (5V)  | Connect 3D IR glasses receiver unit.                                                                                     |                                                            |           |
| 12.  | DISPLAYPORT       | Connect a DISPLAYPORT cable to a DISPLAYPORT source.                                                                     |                                                            |           |
| 13.  | USB CHARGE (1.5A) | For USB charge.                                                                                                          |                                                            |           |
| 14.  | RJ-45             | Connect a LAN cable from Ethernet.                                                                                       |                                                            |           |

| ITEM | LABEL                                  | DESCRIPTION                                                                                                                                                                                                  | SEE PAGE: |
|------|----------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------|
| 15.  | VGA OUT                                | Connect the RGB cable to a display.<br>(Pass through by VGA1 only)                                                                                                                                           |           |
| 16.  | AUDIO OUT                              | Connect an AUDIO cable for audio loop through.                                                                                                                                                               |           |
| 17.  | BNC                                    | Connect a BNC cable from a computer.                                                                                                                                                                         |           |
| 18.  | IR receiver                            | Receive IR signal from remote control.                                                                                                                                                                       | 7         |
| 19.  | SERVICE                                | For service use.                                                                                                                                                                                             |           |
| 20.  | RS-232                                 | Connects RS-232 serial port cable for remote control.                                                                                                                                                        |           |
| 21.  | 12V                                    | When connected to the screen through a commercially available cable, the screen deploys automatically on start up of the projector. The screen retracts when the projector is powered off (see notes below). |           |
| 22.  | WIRED REMOTE                           | Wire remote control connector (connect with wire remote connector of the Remote Control set).                                                                                                                |           |
| 23.  | AUDIO IN 3 L/R<br>RCA (YPbPr)          | Connect the audio cables from a audio device.                                                                                                                                                                |           |
| 24.  | AUDIO IN 4 L/R<br>RCA (Video/ S-Video) | Connect the audio cables from a audio device.                                                                                                                                                                |           |
| 25.  | VIDEO                                  | Connect the composite cable from a video device.                                                                                                                                                             |           |
| 26.  | S-VIDEO                                | Connect the S-video cable from a video device.                                                                                                                                                               |           |
| 27.  | YPbPr                                  | Connect a component video enabled device.                                                                                                                                                                    |           |
| 28.  | AC IN                                  | Connects the power cable.                                                                                                                                                                                    | 13        |
| 29.  | Power switch                           | Turns on/off the projector.                                                                                                                                                                                  |           |
| 30.  | Security chain lock                    | Helps protect the projector from unauthorized use.                                                                                                                                                           | 59        |
| 31.  | Kensington Lock                        | Secures to permanent object with a Kensington® Lock system.                                                                                                                                                  |           |

**Note:**

- To use this feature, you must plug in the connector before turn on/off the projector.
- Screen controllers are supplied and supported by screen manufacturers.
- Do not use this jack for anything other than intended use.


**Note:**

If your video equipment has both S-VIDEO and RCA jacks (composite video) connect to the S-VIDEO connector. S-VIDEO provides a better quality signal.

**Warning:**

As a safety precaution, disconnect all power to the projector and connecting devices before making connections.

Bottom view

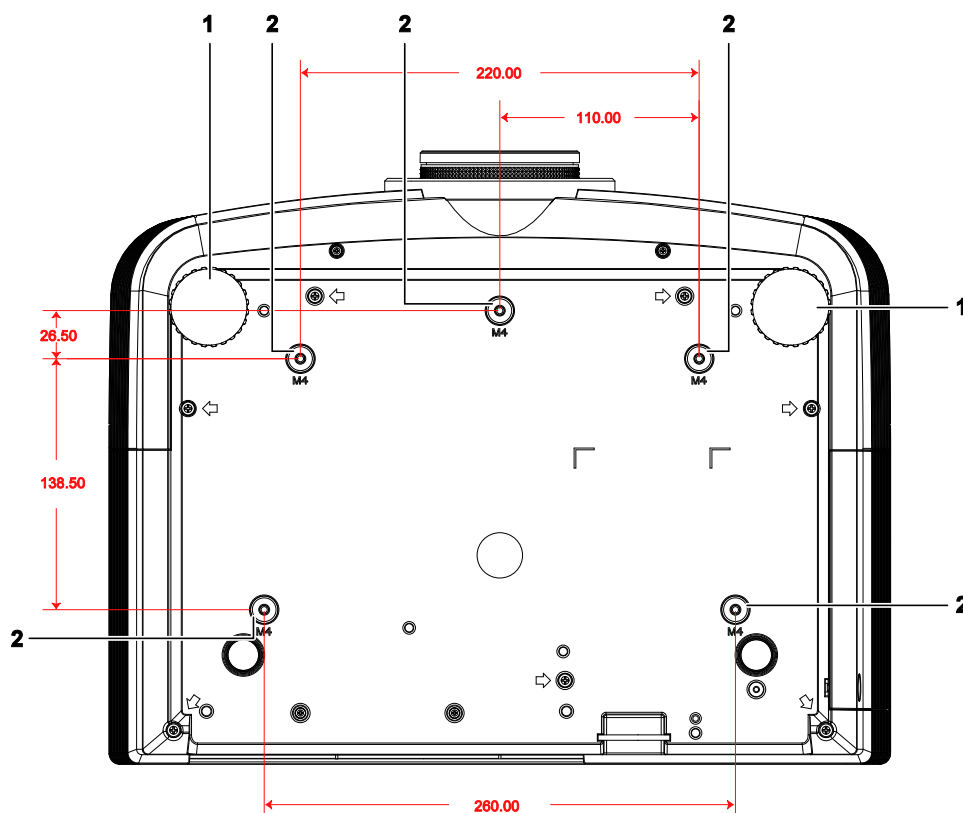

| ITEM | LABEL                 | DESCRIPTION                                                                | SEE PAGE: |
|------|-----------------------|----------------------------------------------------------------------------|-----------|
| 1.   | Tilt adjustor         | Rotate adjuster lever to adjust angle position.                            | 17        |
| 2.   | Ceiling support holes | Contact your dealer for information on mounting the projector on a ceiling |           |


**Note:**

When installing, ensure that you use only UL Listed ceiling mounts.

For ceiling installations, use approved mounting hardware and M4 screws with a maximum screw depth of 6 mm (0.23 inch).

The construction of the ceiling mount must be of a suitable shape and strength. The ceiling mount load capacity must exceed the weight of the installed equipment, and as an additional precaution be capable of withstanding three times the weight of the equipment (not less than 5.15 kg) over a period of 60 seconds.

## Remote Control Parts

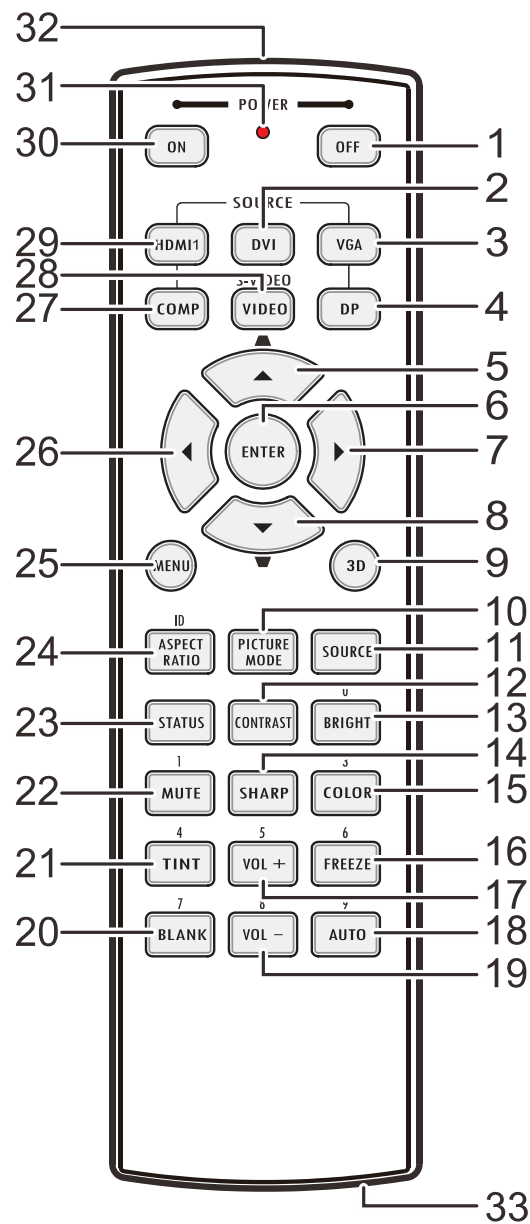

### Important:

1. Avoid using the projector with bright fluorescent lighting turned on. Certain high-frequency fluorescent lights can disrupt remote control operation.
2. Be sure nothing obstructs the path between the remote control and the projector. If the path between the remote control and the projector is obstructed, you can bounce the signal off certain reflective surfaces such as projector screens.
3. The buttons and keys on the projector have the same functions as the corresponding buttons on the remote control. This user's manual describes the functions based on the remote control.



| ITEM | LABEL                   | DESCRIPTION                                                                      | SEE PAGE: |
|------|-------------------------|----------------------------------------------------------------------------------|-----------|
| 1.   | Power OFF               | Turns the projector off                                                          | 13        |
| 2.   | DVI                     | Displays the DVI source selection                                                |           |
| 3.   | VGA                     | Displays the VGA source selection                                                |           |
| 4.   | DP                      | Displays the DisplayPort source selection                                        |           |
| 5.   | Up cursor / Keystone+   | Navigates and changes settings in the OSD Quick Menu – For Keystone              | 22        |
| 6.   | ENTER                   | Enters and confirms settings in the OSD                                          |           |
| 7.   | Right cursor            | Navigates and changes settings in the OSD                                        |           |
| 8.   | Down cursor / Keystone- | Navigates and changes settings in the OSD Quick Menu – For Keystone              |           |
| 9.   | 3D                      | Activate 3D video                                                                |           |
| 10.  | PICTURE MODE            | Changes the Display Mode setting                                                 |           |
| 11.  | SOURCE                  | Alternate input source                                                           | 22        |
| 12.  | CONTRAST                | Displays the contrast settings bar                                               |           |
| 13.  | BRIGHT                  | Displays the brightness setting bar                                              |           |
| 14.  | SHARP                   | Displays the sharpness setting bar                                               |           |
| 15.  | COLOR                   | Displays the color setting bar                                                   |           |
| 16.  | FREEZE                  | Freezes/unfreezes the on-screen picture                                          |           |
| 17.  | VOL +                   | Adjusts volume                                                                   | 22        |
| 18.  | AUTO                    | Auto adjustment for frequency, phase, and position                               |           |
| 19.  | VOL -                   | Adjusts volume                                                                   |           |
| 20.  | BLANK                   | Makes the screen blank                                                           |           |
| 21.  | TINT                    | Displays the tint setting bar                                                    |           |
| 22.  | MUTE                    | Mutes the built-in speaker                                                       |           |
| 23.  | STATUS                  | Opens the OSD Status menu (the menu only opens when an input device is detected) |           |
| 24.  | ASPECT RATIO            | Displays the ASPECT RATIO selections                                             |           |
| 25.  | MENU                    | Opens or closed the OSD                                                          | 22        |
| 26.  | Left cursor             | Navigates and changes settings in the OSD                                        | 22        |
| 27.  | COMP                    | Displays the Component source selection                                          |           |
| 28.  | VIDEO                   | Displays the VIDEO source selection                                              |           |
| 29.  | HDMI 1                  | Displays the HDMI 1 source selection                                             |           |
| 30.  | Power ON                | Turns the projector on                                                           | 13        |
| 31.  | Status LED              | Lights when the remote control is used                                           |           |
| 32.  | IR transmitter          | Transmits signals to projector                                                   |           |
| 33.  | Wired remote connector  | Wired remote function used                                                       |           |

## **Remote Control Operating Range**

The remote control uses infrared transmission to control the projector. It is not necessary to point the remote directly at the projector. Provided you are not holding the remote perpendicular to the sides or the rear of the projector, the remote will function well within a radius of about 7 meters (23 feet) and 15 degrees above or below the projector level. If the projector does not respond to the remote control, move a little closer.


## **Projector and Remote Control Buttons**

The projector can be operated using the remote control or the buttons on the top of the projector. All operations can be carried out with the remote control; however, the buttons on the projector are limited in use.


## SETUP AND OPERATION

### Inserting the Remote Control Batteries


1. Remove the battery compartment cover by sliding the cover in the direction of the arrow.

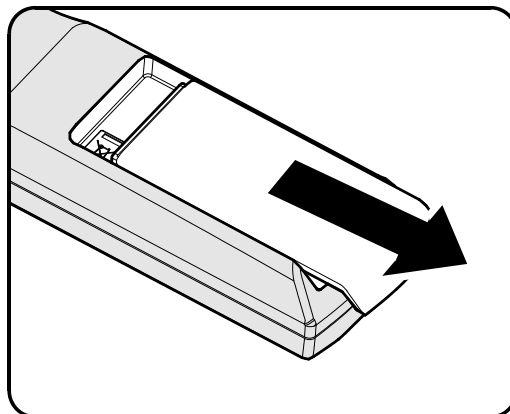

2. Insert the battery with the positive side facing up.

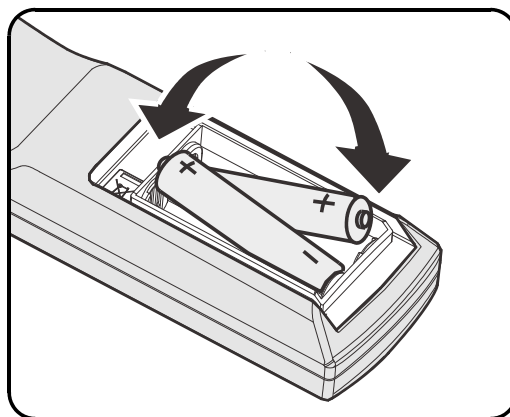

3. Replace the cover.

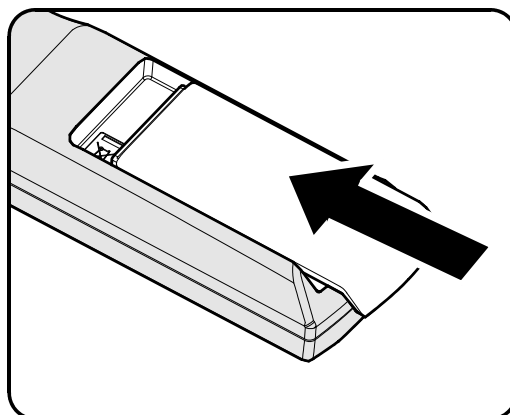

**Caution:**

1. Only use AA batteries (Alkaline batteries are recommended).
2. Dispose of used batteries according to local ordinance regulations.
3. Remove the batteries when not using the projector for prolonged periods.


## Installing or Removing the Optional Lens

**Caution:**


- Do not shake or place excessive pressure on the projector or the lens components as the projector and lens components contain precision parts.
- Before removing or installing the lens, be sure to turn off the projector, wait until the cooling fans stop, and turn off the main power switch.
- Do not touch the lens surface when removing or installing the lens.
- Keep fingerprints, dust or oil off the lens surface.
- Do not scratch the lens surface.
- Work on a level surface with a soft cloth under it to avoid scratching.
- If you remove and store the lens, attach the lens cap to the projector to keep off dust and dirt.

### Removing the Existing Lens From the Projector

1. Pull and release the top cover to open as shown.
2. Push the LENSE RELEASE button to the unlock position.

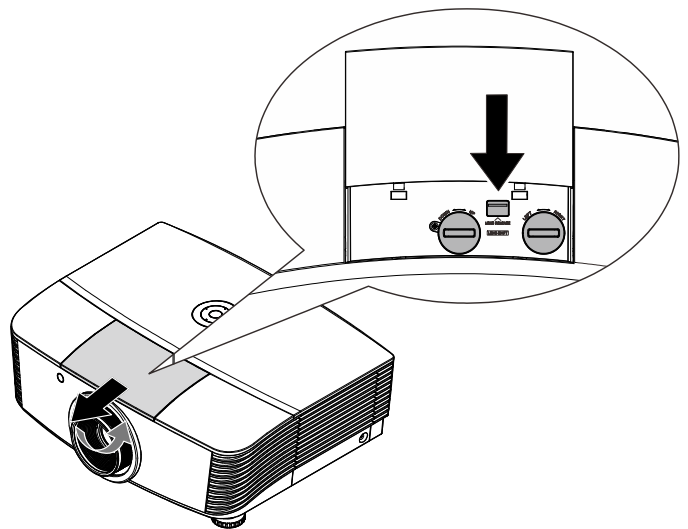

3. Grasp the lens.
4. Rotate the lens counterclockwise. The existing lens will be disengaged.
5. Pull out the existing lens slowly.

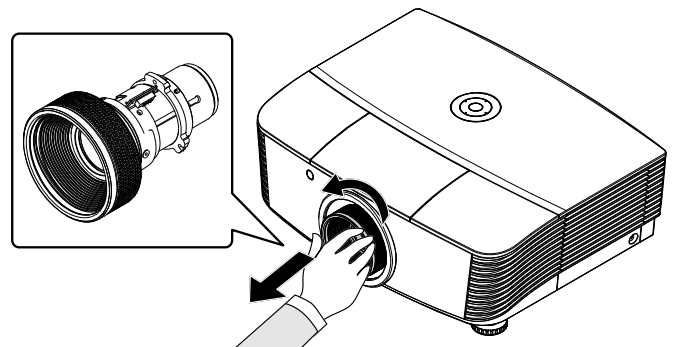


### Installing the New Lens

1. Align the notches and correctly position the electrical contact pad as shown in the picture.

**Note:**


*Pin of Electrical contact pins should be in the direction as shown in the picture.*

2. Rotate the lens clockwise until you feel it click into place.

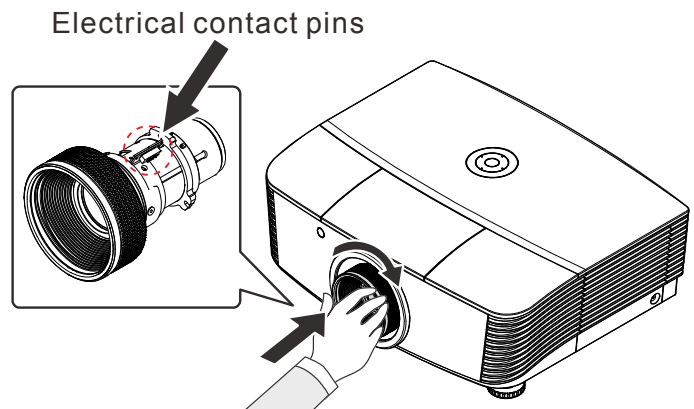


## Starting and Shutting down the Projector

1. Remove the lens cap.

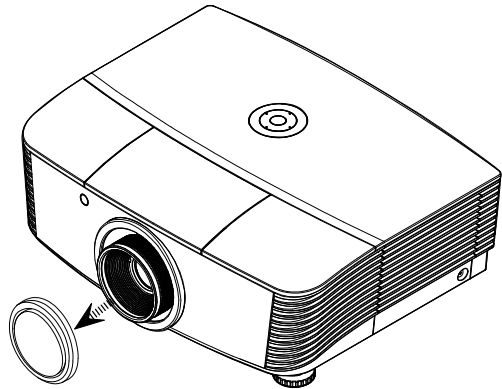


2. Securely connect the power cord and signal cable. When connected, the power led will turn red.

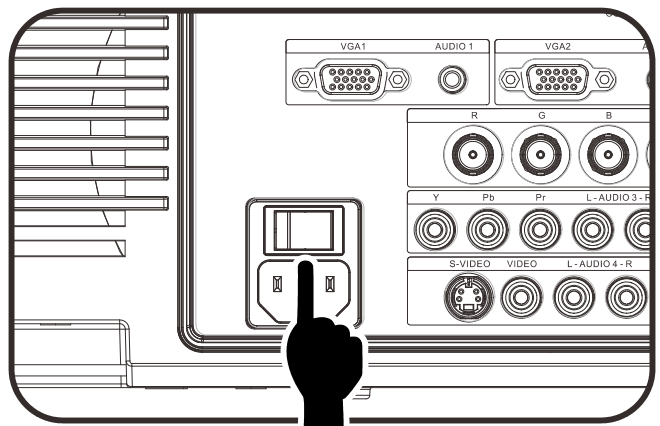

3. Turn on the lamp by pressing the "POWER" button on the rear of the projector or "ON" on the remote control. The PWR LED will now flash red. The startup screen will display in approximately 30 seconds. The first time you use the projector, you can select your preferred language from quick menu after the startup screen display.




4. If more than one input device is connected, press the **SOURCE** button and use ▲▼ to scroll among devices.

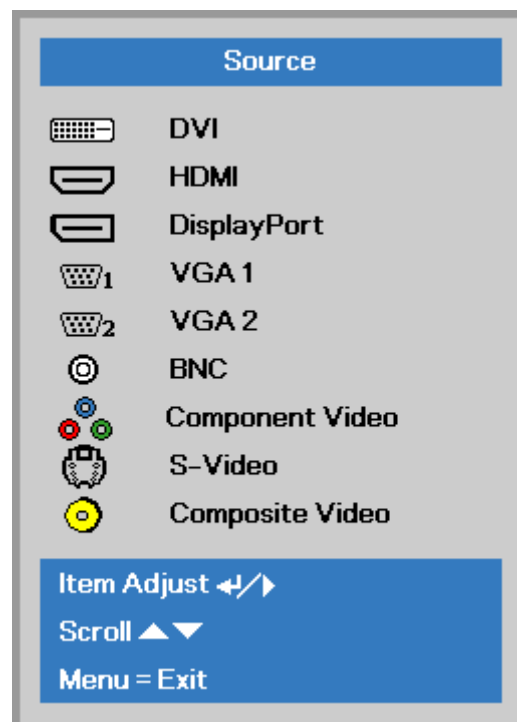

- DVI: Digital Visual Interface
- HDMI: High-Definition Multimedia Interface compatible
- DisplayPort: Digital display interface
- VGA 1 / 2: Analog RGB 1 / 2
- BNC: Analog RGB (BNC connector)
- Component Video: DVD input YCbCr / YPbPr , or HDTV input YPbPr
- S-Video: Super video (Y/C separated)
- Composite Video: Traditional composite video

5. When the “Power Off? /Press **Power** again” message appears, press the **POWER** button. The projector turns off.

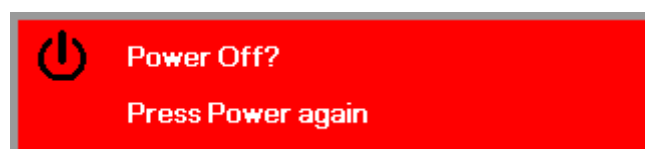

**Caution:**

1. Be sure to remove the lens cap before starting projector.
2. Do not unplug the power cord until the READY LED stops flashing—indicating the projector has cooled down.

## Setting an Access Password (Security Lock)



You can use the four (arrow) buttons to set a password and prevent unauthorized use of the projector. When enabled, the password must be entered after you power on the projector. (See *Navigating the OSD* on page 22 and *Setting the OSD Language* on page 23 for help on using OSD menus.)

### **Important:**

*Keep the password in a safe place. Without the password, you will not be able to use the projector. If you lose the password, contact your reseller for information on clearing the password.*

1. Press the **MENU** button to open the OSD menu.
2. Press the cursor ◀▶ button to move to the **Settings 1** menu, press the cursor ▲▼ button to select **Advanced 1**.
3. Press ◀ (Enter) / ▶ to enter the **Advanced 1** sub menu. Press the cursor ▲▼ button to select **Security Lock**.
4. Press the cursor ◀▶ button to enter and enable or disable security lock function.


A password dialog box automatically appears.

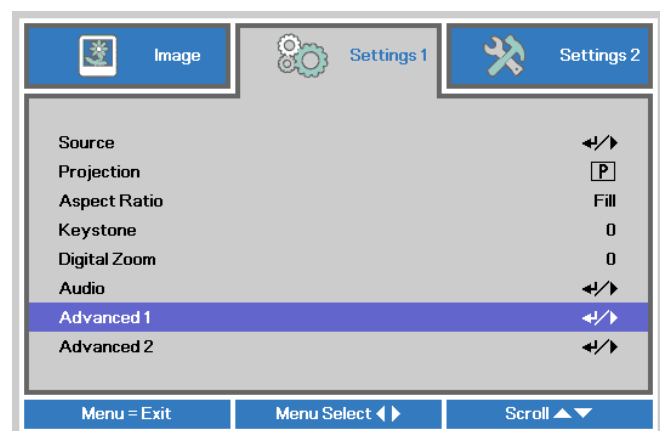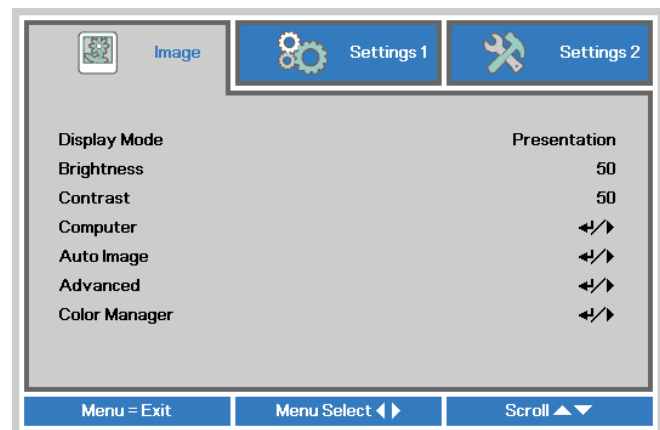




5. You can use the cursor buttons  
▲▼◀▶  
either on keypad or IR remote control  
for password entry. You can use any  
combination including the same arrow  
five times, but not less than five.

Press the cursor buttons in any order to  
set the password. Push the **MENU**  
button to exit the dialog box.

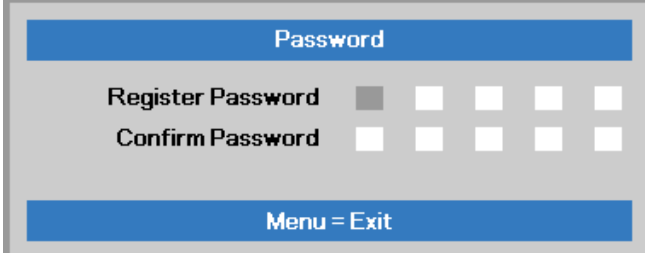


A dialog box titled "Password" with a blue header bar. It contains two rows of input fields: "Register Password" with a grey square followed by four white squares, and "Confirm Password" with five white squares. At the bottom is a blue bar with the text "Menu = Exit".

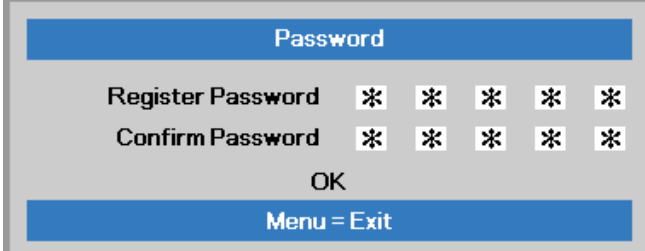

A dialog box titled "Password" with a blue header bar. It contains two rows of input fields: "Register Password" with five asterisks, and "Confirm Password" with five asterisks. Below these is the text "OK". At the bottom is a blue bar with the text "Menu = Exit".

6. The password confirm menu appears  
when user presses the power-on key in  
case the **Security Lock** is enabled.  
Enter the password in the order you set  
it at step 5. In case you forget the  
password, please contact the service  
center.  
The service center will validate the  
owner and help reset the password.

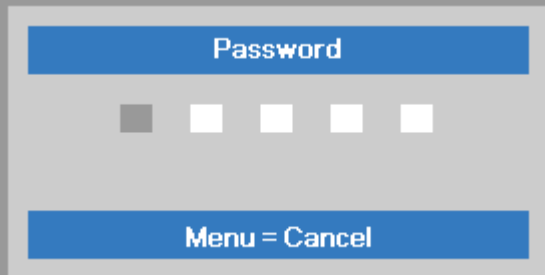


A dialog box titled "Password" with a blue header bar. It contains a row of five input fields: a grey square followed by four white squares. At the bottom is a blue bar with the text "Menu = Cancel".

## Adjusting the Projector Level


Take note of the following when setting up the projector:

- *The projector table or stand should be level and sturdy.*
- *Position the projector so that it is perpendicular to the screen.*
- *Remove the Back Foot Holder on the rear adjuster foot before adjusting the projection angle.*
- *Ensure the cables are in a safe location. You could trip over them.*


- 1.** To raise the level of the projector, twist the adjusters counter clockwise.

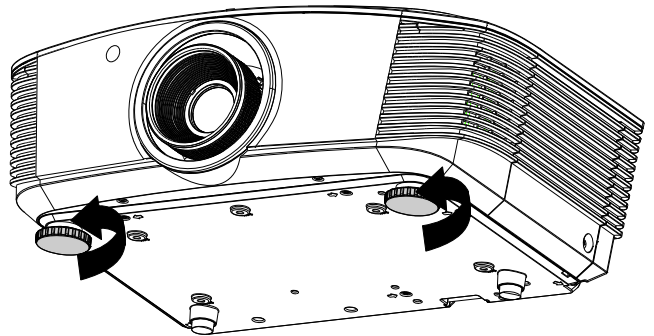

- 2.** To lower the level of the projector, lift the projector and twist the adjusters clockwise.

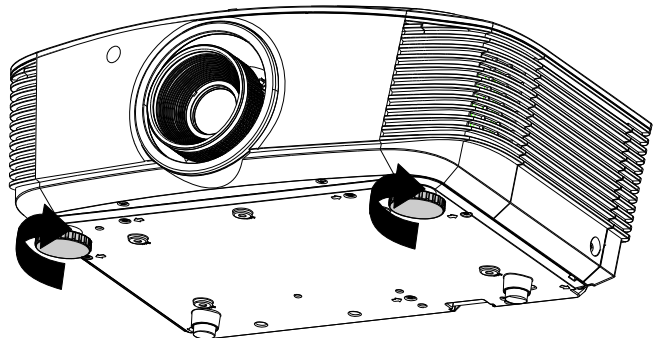

## Adjusting Projected Image Position Using Shift

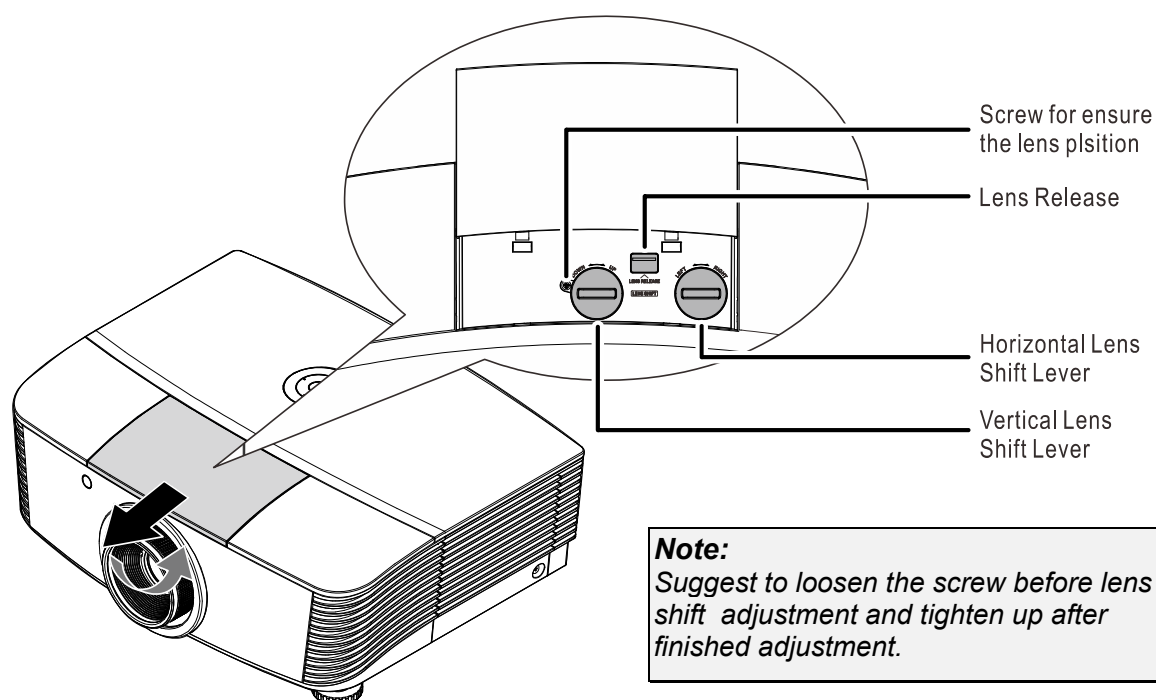


The Shift feature provides a lens shift function that can be used to adjust the position of the projected image either horizontally or vertically within the range detailed below.

Shift is a unique system that provides lens shift while maintaining a much higher ANSI contrast ratio than traditional lens shift systems.


### Adjusting the vertical image position

The vertical image height can be adjusted between 110% and -30% of offset position. Note that the maximum vertical image height adjustment can be limited by the horizontal image position. For example it is not possible to achieve the maximum vertical image position height detailed above if the horizontal image position is at maximum. Please consult the Shift Range diagram below for further clarification.

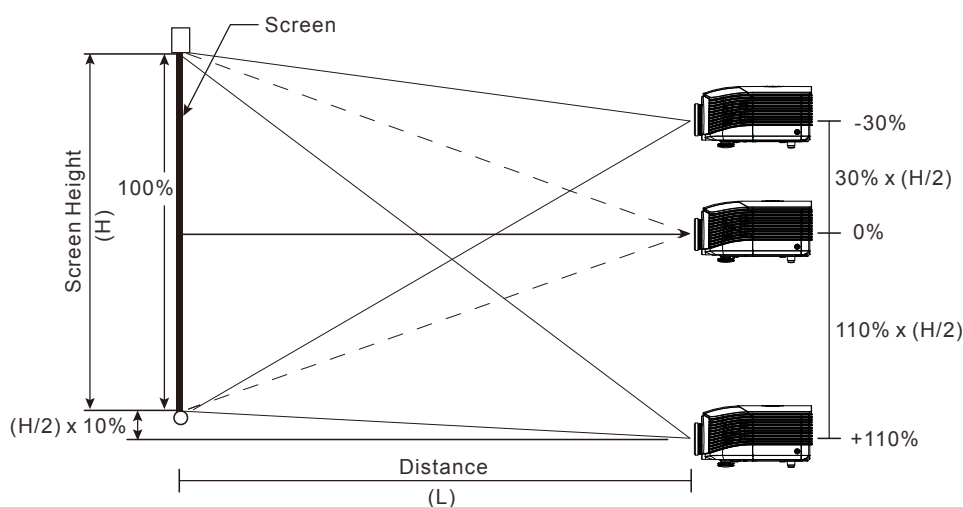


### Adjusting the horizontal image position

With the lens in the center position the horizontal image position can be adjusted to the left or right by up to a maximum of 10% of the half image width. Note that the maximum horizontal image height adjustment can be limited by the vertical image position. For example it is not possible to achieve the maximum horizontal image position if the vertical image position is at maximum. Please consult the Shift Range diagram below for further clarification.

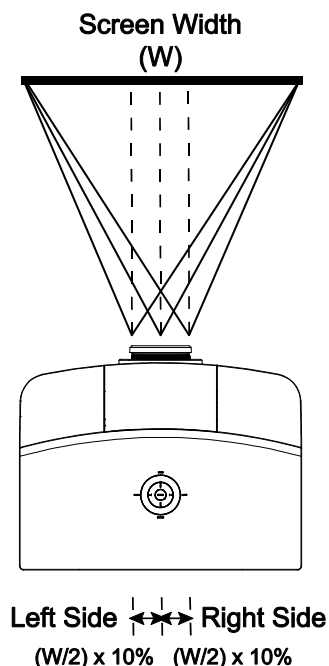


### Shift Range Diagram

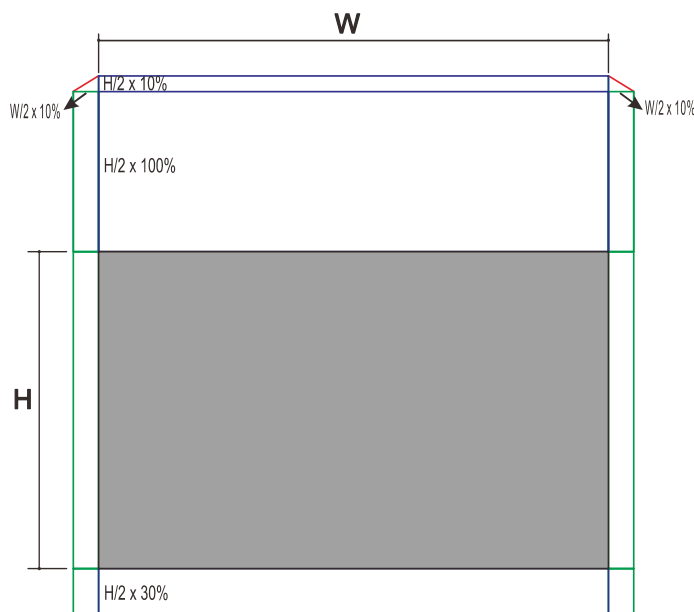


The max H up shift =  $H/2 \times 110\%$   
 The max H down shift =  $H/2 \times 30\%$   
 The max W shift =  $W/2 \times 10\%$   
 When max W shift is  $W/2 \times 10\%$   
     max H shift =  $H/2 \times 100\%$   
 When max H shift is  $H/2 \times 110\%$   
     max W shift =  $H \times 0\%$

## Adjusting the Zoom, Focus and Keystone


1. Use the **Image-zoom** control (on the projector only) to resize the projected image and screen size.

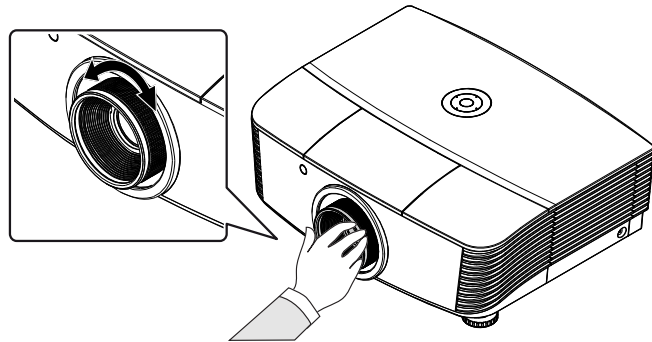

2. Use the **Image-focus** control (on the projector only) to sharpen the projected image.

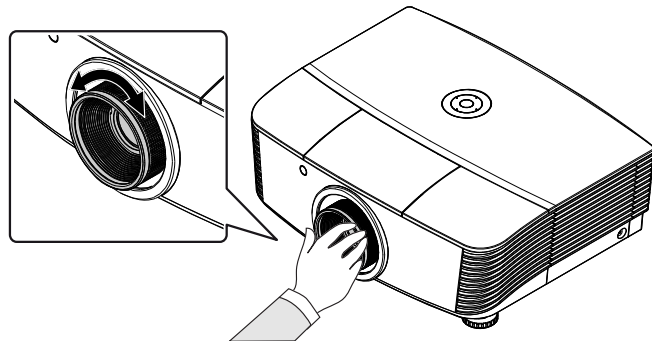

3. Use the **KEYSTONE** buttons (on the projector or the remote control) to correct image-trapezoid (wider top or bottom) effect.

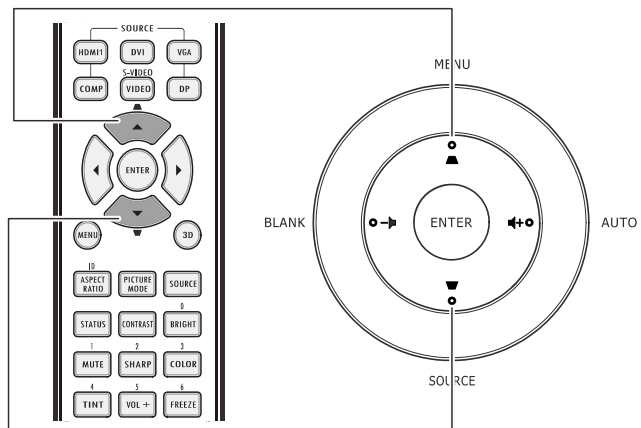


Remote control and OSD panel

4. The keystone control appears on the display.



## Adjusting the Volume

1. Press the **Volume +/-** buttons on the remote control.  
The volume control appears on the display.

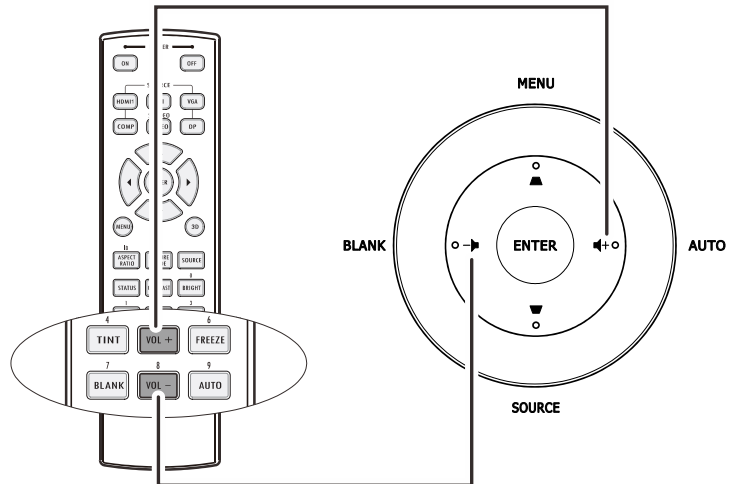

2. Press the **Left** or **Right Cursor** buttons on the keypad to adjust **Volume +/-**.



3. Press the **MUTE** button to turn off the volume (This feature is available only on the remote).




## ON-SCREEN DISPLAY (OSD) MENU SETTINGS

### OSD Menu Controls


The projector has an OSD that lets you make image adjustments and change various settings.

#### Navigating the OSD

You can use the remote control cursor buttons or the buttons on the top of the projector to navigate and make changes to the OSD. The following illustration shows the corresponding buttons on the projector.

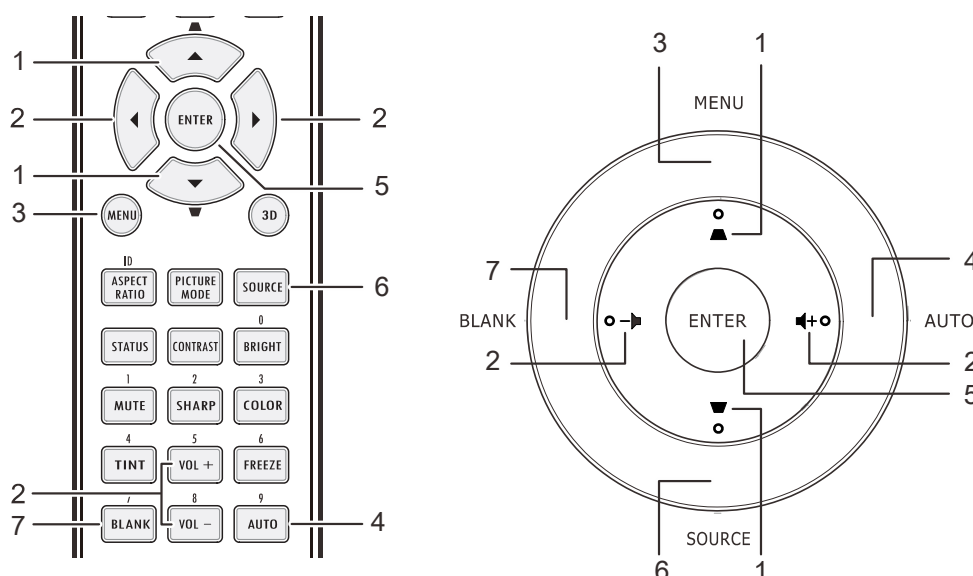

1. To enter the OSD, press the **MENU** button.
2. There are three menus. Press the cursor ◀▶ button to move through the menus.
3. Press the cursor ▲▼ button to move up and down in a menu.
4. Press ◀▶ to change values for settings.
5. Press **MENU** to close the OSD or leave a submenu.

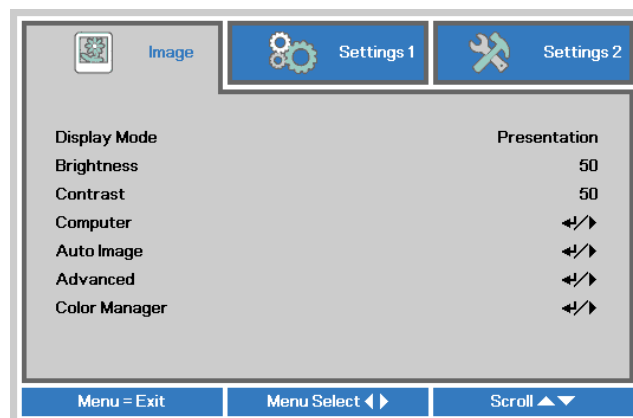


**Note:**

Depending on the video source, not all items in the OSD are available. For example, the **Horizontal/Vertical Position** items in the **Computer** menu can only be modified when connected to a PC. Items that are not available cannot be accessed and are grayed out.


## Setting the OSD Language

Set the OSD language to your preference before continuing.

1. Press the **MENU** button. Press the cursor ◀▶ button to navigate to **Settings 1**. Press the cursor ▲▼ button to move to the **Advanced 1** menu.

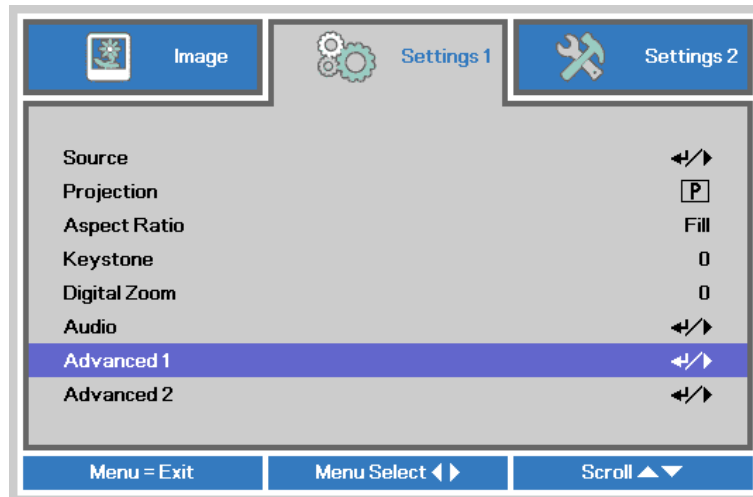

2. Press ◀ (Enter) / ▶ to enter the **Advanced 1** sub menu. Press the cursor ▲▼ button until **Language** is highlighted.

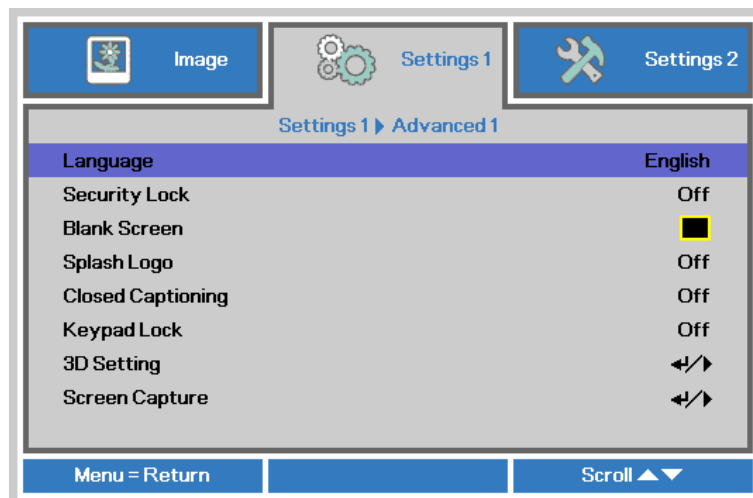


3. Press the cursor button until the language you want is highlighted.
4. Press the **MENU** button four times to close the OSD.



## OSD Menu Overview

Use the following illustration to quickly find a setting or determine the range for a setting.

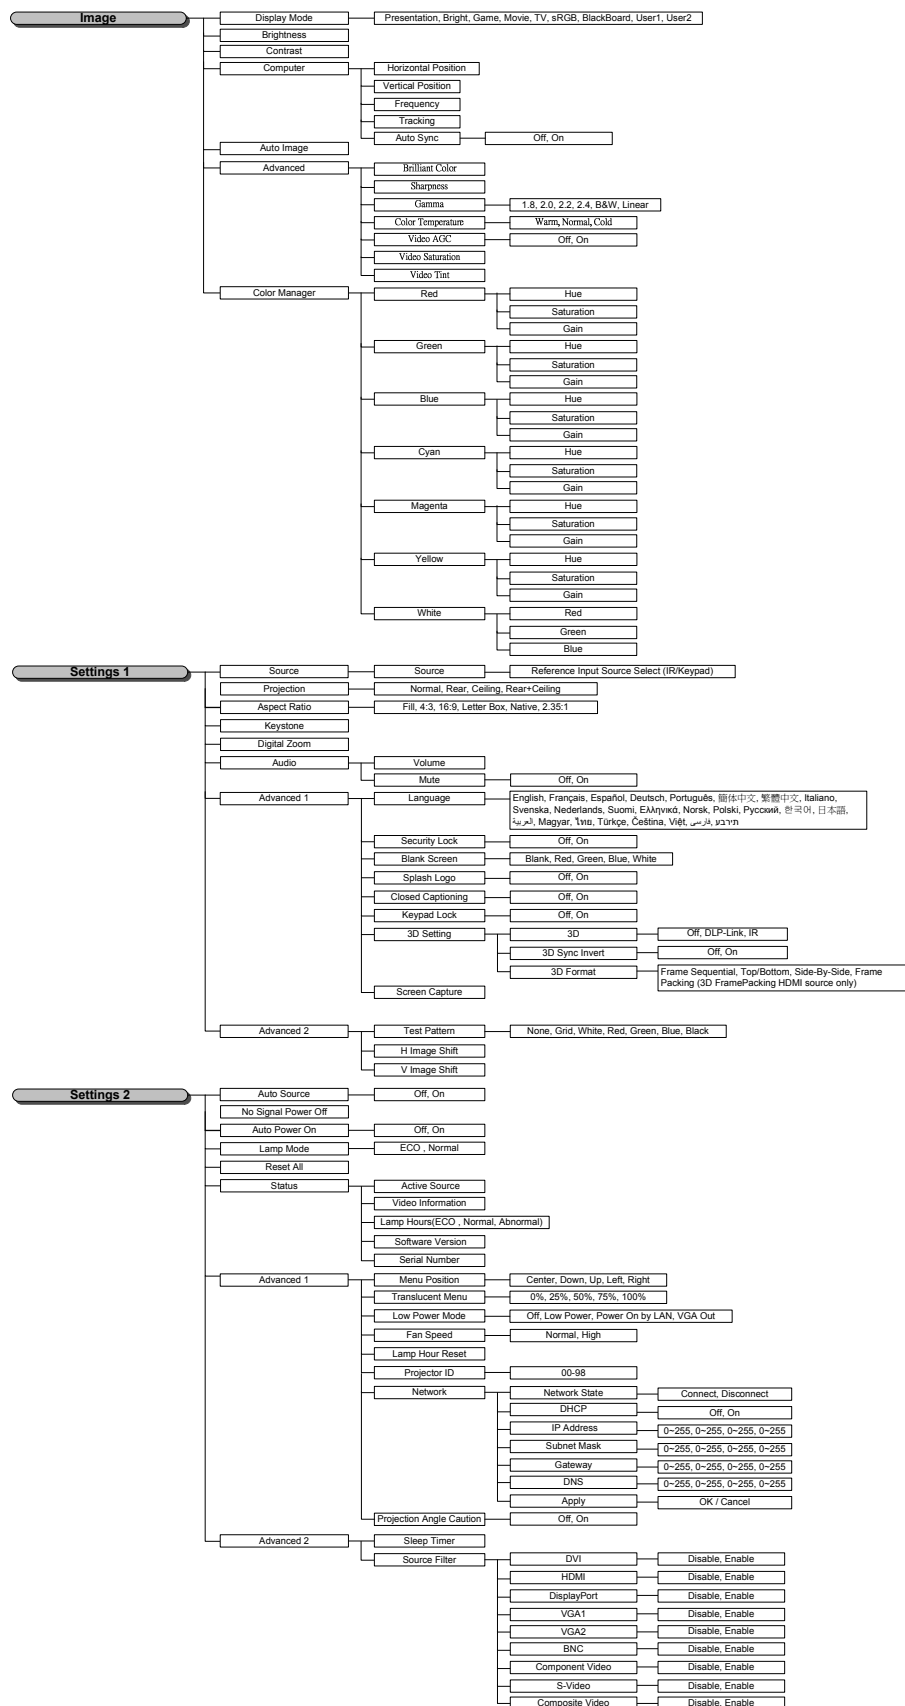


## Image Menu

### **Attention !**

*All of display mode parameters when changed will be saved to user mode.*


Press the **MENU** button to open the **OSD** menu. Press the cursor ◀▶ button to move to the **Image Menu**. Press the cursor ▲▼ button to move up and down in the **Image** menu. Press ◀▶ to enter and change values for settings.

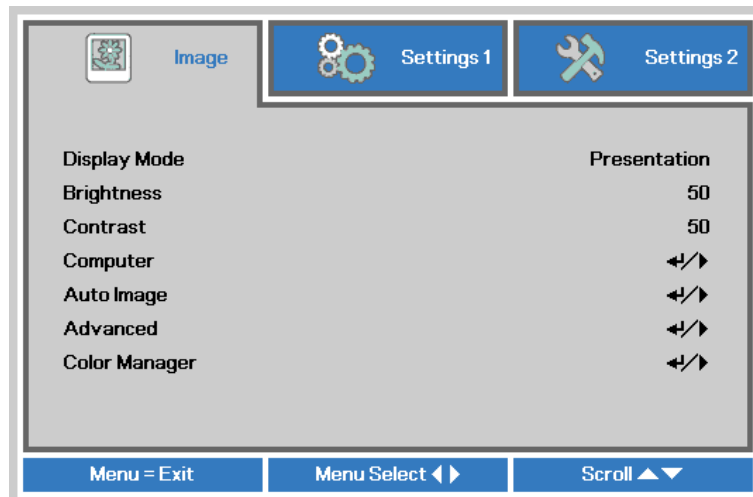

| ITEM          | DESCRIPTION                                                                                                     |
|---------------|-----------------------------------------------------------------------------------------------------------------|
| Display Mode  | Press the cursor ◀▶ button to enter and set the Display Mode.                                                   |
| Brightness    | Press the cursor ◀▶ button to enter and adjust the display brightness.                                          |
| Contrast      | Press the cursor ◀▶ button to enter and adjust the display contrast.                                            |
| Computer      | Press ◀ (Enter) / ▶ to enter the Computer menu. See <i>Computer Menu</i> on page 26.                            |
| Auto Image    | Press ◀ (Enter) / ▶ to automatically adjustment for phase, tracking, size and position.                         |
| Advanced      | Press ◀ (Enter) / ▶ to enter the Advanced menu. See <i>Advanced Feature</i> on page 27.                         |
| Color Manager | Press ◀ (Enter) / ▶ to enter the color manager menu. See page 28 for more information on <i>Color Manager</i> . |

## Computer Menu


Press the **MENU** button to open the **OSD** menu. Press ◀▶ to move to the **Image** menu. Press ▲▼ to move to the **Computer** menu and then press **Enter** or ▶. Press ▲▼ to move up and down in the **Computer** menu.

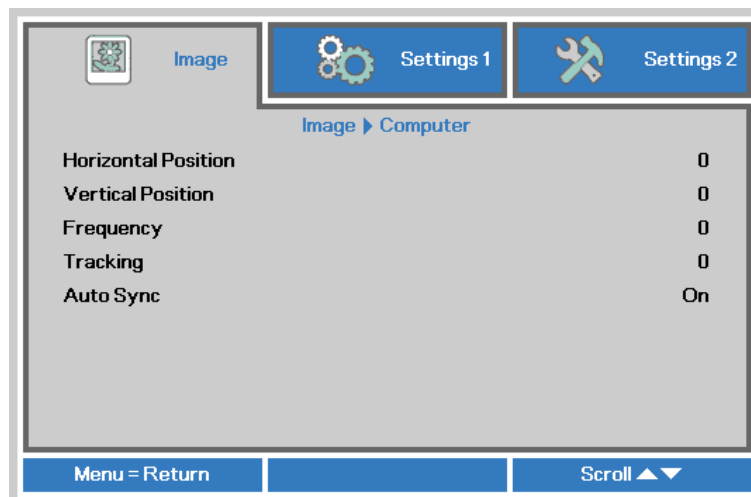

| ITEM                | DESCRIPTION                                                                                    |
|---------------------|------------------------------------------------------------------------------------------------|
| Horizontal Position | Press the cursor ◀▶ button to enter and adjust the display position to left or right.          |
| Vertical Position   | Press the cursor ◀▶ button to enter and adjust the display position to up or down.             |
| Frequency           | Press the cursor ◀▶ button to enter and adjust the A/D sampling clock.                         |
| Tracking            | Press the cursor ◀▶ button to enter and adjust the A/D sampling dot.                           |
| Auto Sync           | Press the cursor ◀▶ button to enter and enable or disable the autolock control for RGB source. |

## Advanced Feature


Press the **Menu** button to open the **OSD** menu. Press ◀▶ to move to the **Image** menu. Press ▼▲ to move to the **Advanced** menu and then press **Enter** or ▶. Press ▼▲ to move up and down in the **Advanced** menu.

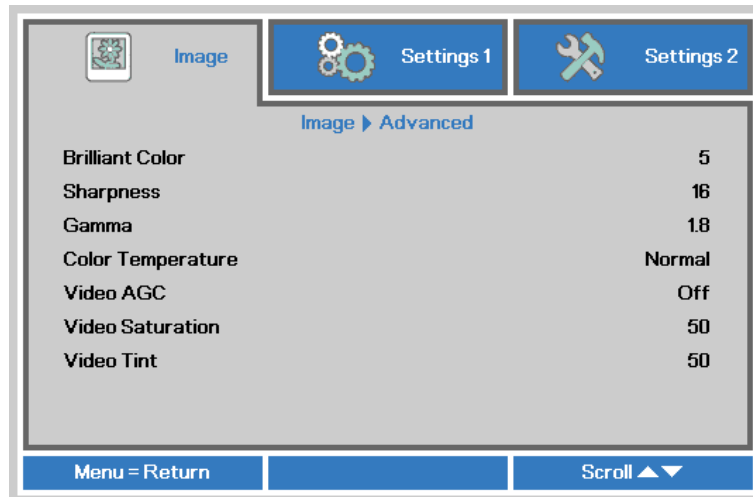

| ITEM              | DESCRIPTION                                                                                            |
|-------------------|--------------------------------------------------------------------------------------------------------|
| Brilliant Color   | Press the cursor ◀▶ button to enter and adjust the Brilliant Color value.                              |
| Sharpness         | Press the cursor ◀▶ button to enter and adjust the display sharpness.                                  |
| Gamma             | Press the cursor ◀▶ button to enter and adjust the gamma correction of the display.                    |
| Color Temperature | Press the cursor ◀▶ button to enter and adjust the color temperature.                                  |
| Video AGC         | Press the cursor ◀▶ button to enter and enable or disable the Automatic Gain Control for video source. |
| Video Saturation  | Press the cursor ◀▶ button to enter and adjust the video saturation.                                   |
| Video Tint        | Press the cursor ◀▶ button to enter and adjust the video tint/hue.                                     |

## Color Manager


Press the **Menu** button to open the **OSD** menu. Press ◀▶ to move to the **Image** menu. Press ▼▲ to move to the **Color Manager** menu and then press **Enter** or ▶. Press ▼▲ to move up and down in the **Color Manager** menu.

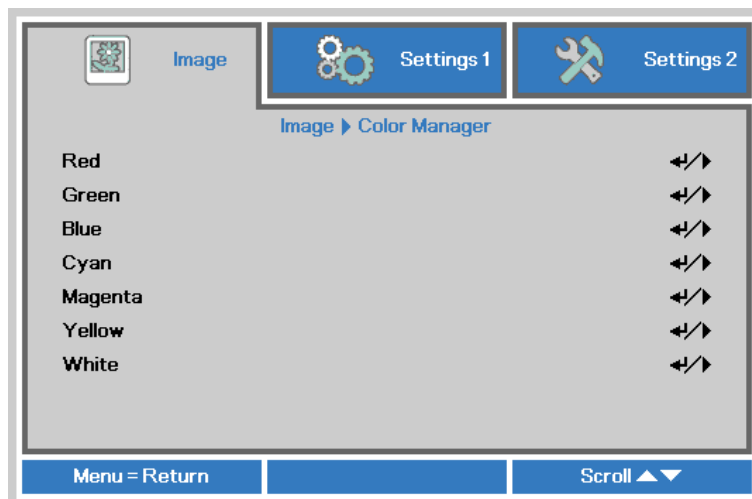

| ITEM    | DESCRIPTION                                                                                                 |
|---------|-------------------------------------------------------------------------------------------------------------|
| Red     | Select to enter the Red Color Manager.<br>Press the ◀▶ buttons to adjust the Hue, Saturation, and Gain.     |
| Green   | Select to enter the Green Color Manager.<br>Press the ◀▶ buttons to adjust the Hue, Saturation, and Gain.   |
| Blue    | Select to enter the Blue Color Manager.<br>Press the ◀▶ buttons to adjust the Hue, Saturation, and Gain.    |
| Cyan    | Select to enter the Cyan Color Manager.<br>Press the ◀▶ buttons to adjust the Hue, Saturation, and Gain.    |
| Magenta | Select to enter the Magenta Color Manager.<br>Press the ◀▶ buttons to adjust the Hue, Saturation, and Gain. |
| Yellow  | Select to enter the Yellow Color Manager.<br>Press the ◀▶ buttons to adjust the Hue, Saturation, and Gain.  |
| White   | Select to enter the White Color Manager.<br>Press the ◀▶ buttons to adjust the Red, Green, and Blue.        |

## Settings 1 Menu


Press the **MENU** button to open the **OSD** menu. Press the cursor ◀▶ button to move to the **Settings 1** menu. Press the cursor ▲▼ button to move up and down in the **Settings 1** menu. Press ◀▶ to enter and change values for settings.

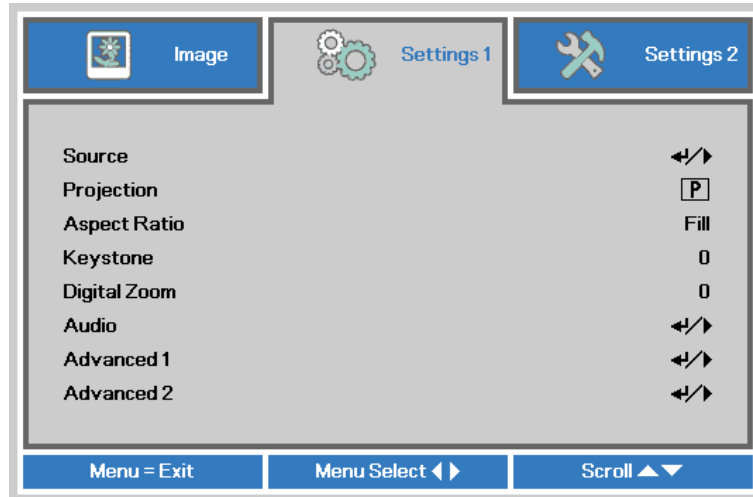

| ITEM         | DESCRIPTION                                                                                 |
|--------------|---------------------------------------------------------------------------------------------|
| Source       | Press ◀ (Enter) / ▶ to enter the Source menu. Reference input Source select (IR / Keypad).  |
| Projection   | Press the cursor ◀▶ button to enter and choose from four projection methods:                |
| Aspect Ratio | Press the cursor ◀▶ button to enter and adjust the video aspect ratio.                      |
| Keystone     | Press the cursor ◀▶ button to enter and adjust the display keystone.                        |
| Digital Zoom | Press the cursor ◀▶ button to enter and adjust the Digital Zoom menu.                       |
| Audio        | Press ◀ (Enter) / ▶ to enter the Audio menu. See <i>Audio</i> on page 30.                   |
| Advanced 1   | Press ◀ (Enter) / ▶ to enter the Advanced 1 menu. See <i>Advanced 1 Feature</i> on page 31. |
| Advanced 2   | Press ◀ (Enter) / ▶ to enter the Advanced 2 menu. See <i>Advanced 2 Feature</i> on page 33. |

## Audio

Press the **Menu** button to open the **OSD** menu. Press ◀▶ to move to the **Settings 1** menu. Press ▼▲ to move to the **Audio** menu and then press **Enter** or ▶. Press ▼▲ to move up and down in the **Audio** menu.

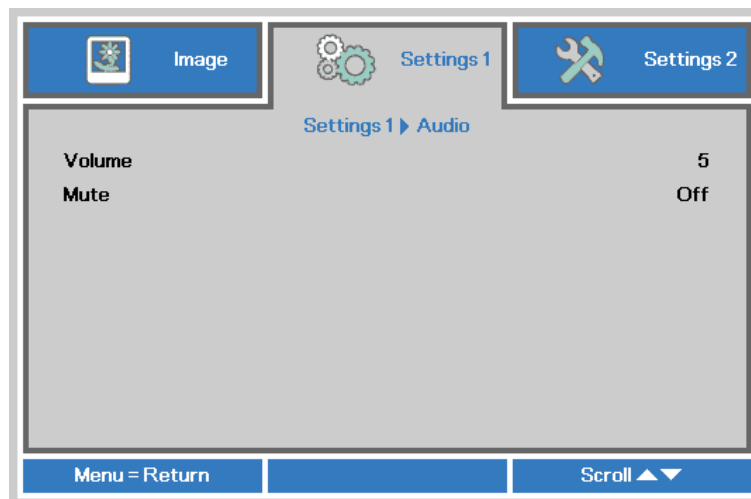

| ITEM   | DESCRIPTION                                                         |
|--------|---------------------------------------------------------------------|
| Volume | Press the cursor ◀▶ button to enter and adjust the audio volume.    |
| Mute   | Press the cursor ◀▶ button to enter and turn on or off the speaker. |

## Advanced 1 Feature

Press the **Menu** button to open the **OSD** menu. Press ◀▶ to move to the **Settings 1** menu. Press ▲▼ to move to the **Advanced 1** menu and then press **Enter** or ▶. Press ▲▼ to move up and down in the **Advanced 1** menu. Press ◀▶ to enter and change values for setting.




| ITEM              | DESCRIPTION                                                                                                           |
|-------------------|-----------------------------------------------------------------------------------------------------------------------|
| Language          | Press the cursor ◀▶ button to enter and select a different localization Menu.                                         |
| Security Lock     | Press the cursor ◀▶ button to enter and enable or disable security lock function.                                     |
| Blank Screen      | Press the cursor ◀▶ button to enter and select different color to blank the screen.                                   |
| Splash Logo       | Press the cursor ◀▶ button to enter and select splash logo on or off.                                                 |
| Closed Captioning | Press the cursor ◀▶ button to enter and enable or disable Closed Captioning                                           |
| Keypad Lock       | Press the cursor ◀▶ button to enter and enable or disable keys can be work on keypad.                                 |
| 3D Setting        | Press ◀ (Enter) / ▶ to enter the 3D menu. See page 32 for more information on <i>3D Setting</i> .                     |
| Screen Capture    | Press ◀ (Enter) / ▶ to capture screen, and please wait saving picture. Picture will auto showing after next power on. |

### Note:

To enjoy the 3D function, first enable the Play Movie in 3D setting found in your DVD device under the 3D Disc Menu.



## 3D Setting

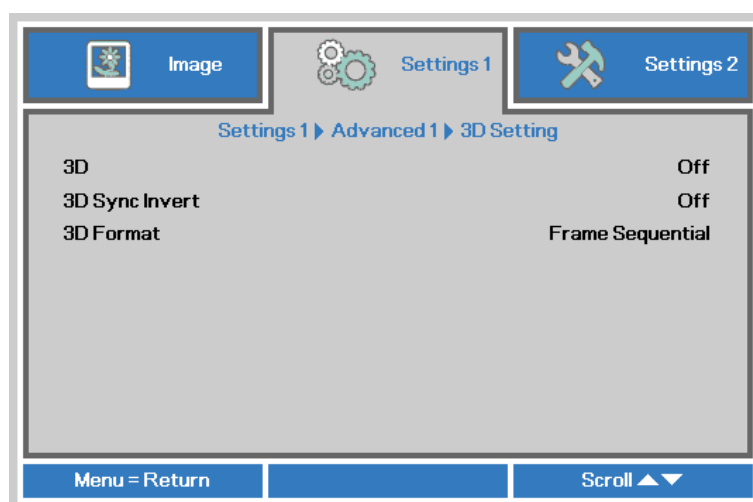

| ITEM           | DESCRIPTION                                                                    |
|----------------|--------------------------------------------------------------------------------|
| 3D             | Press the cursor ◀▶ button to enter and select different 3D mode.              |
| 3D Sync Invert | Press the cursor ◀▶ button to enter and enable or disable 3D Sync Invert.      |
| 3D Format      | Press the cursor ◀▶ button to enter and enable or disable different 3D Format. |

### **Note:**


1. The 3D OSD menu item is gray if there is no appropriate 3D source. This is the default setting.
2. When the projector is connected to an appropriate 3D source, the 3D OSD menu item is enabled for selection.
3. Use 3D glasses to view a 3D image.
4. You need 3D content from a 3D DVD or 3D media file.
5. You need to enable the 3D source (some 3D DVD content may have a 3D on-off selection feature).
6. You need DLP link 3D or IR 3D shutter glasses. With IR 3D shutter glasses, you need to install a driver on your PC and connect a USB emitter.
7. The 3D mode of the OSD needs to match the type of glasses (DLP link or IR 3D).
8. Power on the glasses. Glasses normally have a power on -off switch. Each type of glasses has their own configuration instructions. Please follow the configuration instructions that come with your glasses to finish the setup process.

### **Note:**

Since different types of glass (DLP link or IR shutter glass) have their own setting instructions, Please follow the guide to finish the setup process.

## Advanced 2 Feature


Press the **Menu** button to open the **OSD** menu. Press ◀▶ to move to the **Settings 1** menu. Press ▲▼ to move to the **Advanced 2** menu and then press **Enter** or ▶. Press ▲▼ to move up and down in the **Advanced 2** menu. Press ◀▶ to enter and change values for setting.

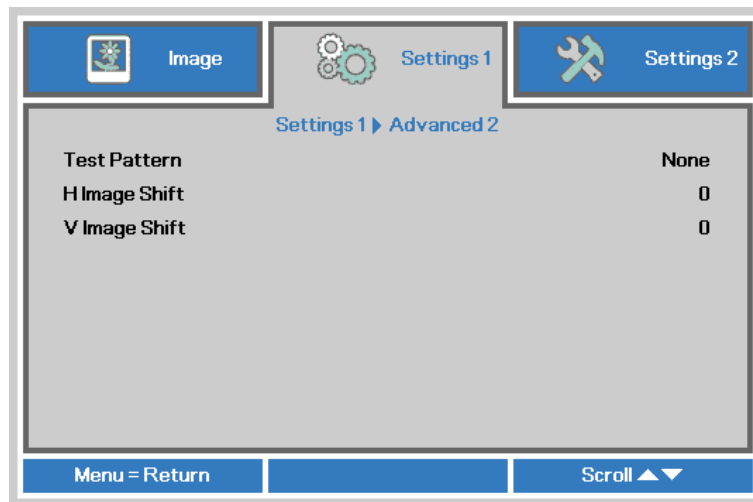

| ITEM          | DESCRIPTION                                                           |
|---------------|-----------------------------------------------------------------------|
| Test Pattern  | Press the cursor ◀▶ button to enter and select internal test pattern. |
| H Image Shift | Press the cursor ◀▶ button to enter and select H Image Shift.         |
| V Image Shift | Press the cursor ◀▶ button to enter and select V Image Shift.         |

## Settings 2 Menu


Press the **MENU** button to open the **OSD** menu. Press the cursor ◀▶ button to move to the **Settings 2** menu. Press the cursor ▲▼ button to move up and down in the **Settings 2** menu.

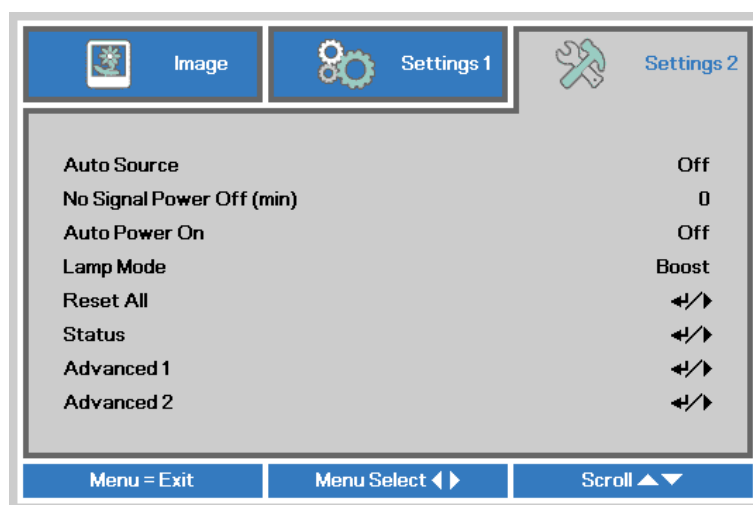

| ITEM                       | DESCRIPTION                                                                                                               |
|----------------------------|---------------------------------------------------------------------------------------------------------------------------|
| Auto Source                | Press the cursor ◀▶ button to enter and enable or disable automatic source detection.                                     |
| No Singal Power Off (min.) | Press the cursor ◀▶ button to enter and enable or disable automatic shutdown of lamp when no signal.                      |
| Auto Power On              | Press the cursor ◀▶ button to enter and enable or disable automatic power On when AC power is supplied.                   |
| Lamp Mode                  | Press the cursor ◀▶ button to enter and select the lamp mode for higher brightness or lower brightness to save lamp life. |
| Reset All                  | Press ◀ (Enter) / ▶ to reset all settings to default values.                                                              |
| Status                     | Press ◀ (Enter) / ▶ to enter the Status menu. See page 35 for more information on <i>Status</i> .                         |
| Advanced 1                 | Press ◀ (Enter) / ▶ to enter the Advanced 1 menu. See <i>Advanced 1 Feature</i> on page 36.                               |
| Advanced 2                 | Press ◀ (Enter) / ▶ to enter the Advanced 2 menu. See <i>Advanced 2 Feature</i> on page 48.                               |

## Status

Press the cursor ▲▼ button to move up and down in the **Settings 2** menu. Select the **Status** menu and press **Enter** or ► to enter.

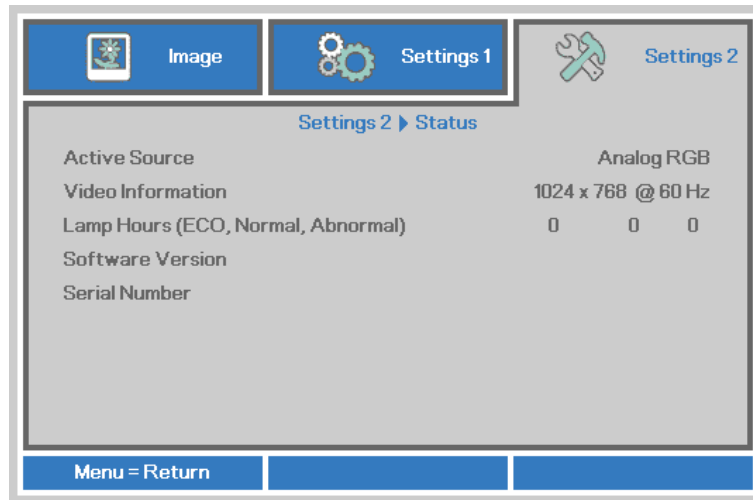

| ITEM              | DESCRIPTION                                                                               |
|-------------------|-------------------------------------------------------------------------------------------|
| Active Source     | Display the activated source.                                                             |
| Video Information | Displays resolution/video information for RGB source and color standard for Video source. |
| Lamp Hours        | Lamp hour used information is displayed. (ECO, Normal, Abnormal )                         |
| Software Version  | Showing system software version.                                                          |
| Serial Number     | Showing serial number of this projector.                                                  |


## Advanced 1 Feature

Press the **Menu** button to open the **OSD** menu. Press ◀▶ to move to the **Settings 2** menu. Press ▲▼ to move to the **Advanced 1** menu and then press **Enter** or ▶. Press ▲▼ to move up and down in the **Advanced 1** menu. Press ◀▶ to enter and change values for setting.




| ITEM                     | DESCRIPTION                                                                                                                                                                                                                  |
|--------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Menu Position            | Press the cursor ◀▶ button to enter and select different OSD location.                                                                                                                                                       |
| Translucent Menu         | Press the cursor ◀▶ button to enter and select OSD background translucent level.                                                                                                                                             |
| Low Power Mode           | Press the cursor ◀▶ button to enter and turn Low Power Mode on or off.                                                                                                                                                       |
| Fan Speed                | Press the cursor ◀▶ button to enter and toggle between Normal and High fan speeds.<br><b>Note:</b> We recommend selecting high speed in high temperatures, high humidity, or high altitude (higher than 1500m/4921ft) areas. |
| Lamp Hour Reset          | After replacing the lamp, this item should be reset. See page 37 for more information on <i>Lamp Hour Reset</i> .                                                                                                            |
| Projector ID             | Press the cursor ◀▶ button to enter and adjust a two digit projector ID from 00 through 98.                                                                                                                                  |
| Network                  | Press ◀ (Enter) / ▶ to enter the Network menu. See page 37 for more information on <i>Network</i> .                                                                                                                          |
| Projection Angle Caution | Press the cursor ◀▶ button to enter and turn Projection Angle Caution on or off.                                                                                                                                             |

## Lamp Hour Reset

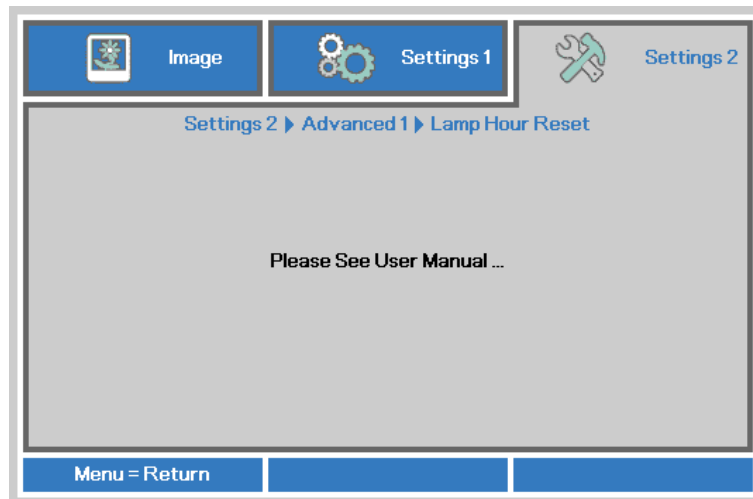


Please refer to *Resetting the Lamp* on page 55 to reset the lamp hour counter.

## Network

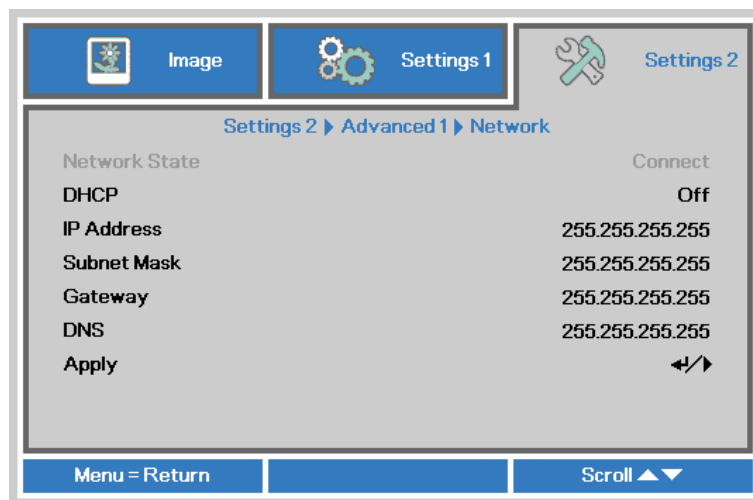

| ITEM          | DESCRIPTION                                                                                                                                               |
|---------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------|
| Network State | Displays the network connection status.                                                                                                                   |
| DHCP          | Press the cursor ◀▶ button to turn DHCP On or Off.<br><b>Note:</b> If you select DHCP Off, complete the IP Address, Subnet Mask, Gateway, and DNS fields. |
| IP Address    | Enter a valid IP address if DHCP is turned off.                                                                                                           |
| Subnet Mask   | Enter a valid Subnet Mask if DHCP is turned off.                                                                                                          |
| Gateway       | Enter a valid Gateway address if DHCP is turned off.                                                                                                      |
| DNS           | Enter a valid DNS name if DHCP is turned off.                                                                                                             |
| Apply         | Press ◀ (Enter) / ▶ to confirm settings.                                                                                                                  |

## **LAN\_RJ45**

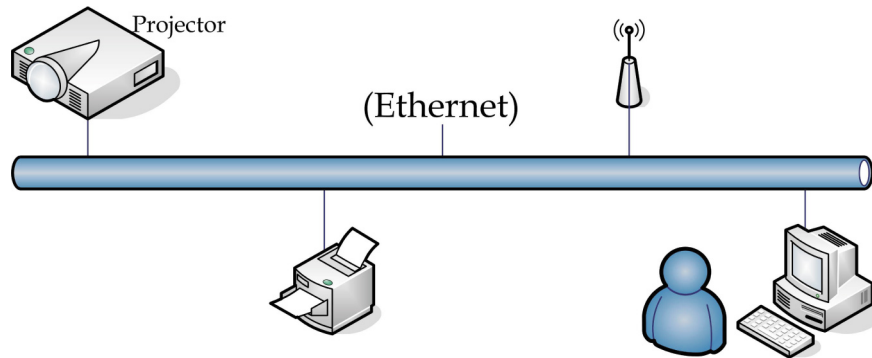

### Wired LAN Terminal functionalities

Remote control and monitoring of a projector from a PC (or Laptop) via wired LAN is also possible. Compatibility with Crestron / AMX (Device Discovery) / Extron control boxes enables not only collective projector management on a network but also management from a control panel on a PC (or Laptop) browser screen.

- ★ Crestron is a registered trademark of Crestron Electronics, Inc. of the United States.
- ★ Extron is a registered trademark of Extron Electronics, Inc. of the United States.
- ★ AMX is a registered trademark of AMX LLC of the United States.
- ★ PJLink applied for trademark and logo registration in Japan, the United States of America, and other countries by JBMIA.

### Supported External Devices

This projector is supported by the specified commands of the Crestron Electronics controller and related software (ex, RoomView ®).

<http://www.crestron.com/>

This projector is supported by AMX ( Device Discovery ).

<http://www.amx.com/>

This projector is compliant to support Extron device(s) for reference.

<http://www.extron.com/>


This projector supports all commands of PJLink Class1 (Version 1.00).

<http://pjlink.jbmia.or.jp/english/>


For more detail of information about the diverse types of external devices which can be connected to the LAN/RJ45 port and remote/control the projector, as well as the related control commands supporting for each external device, kindly please get contact with the Support-Service team directly.

### LAN RJ45

1. Connect an RJ45 cable to RJ45 ports on the projector and the PC (Laptop).

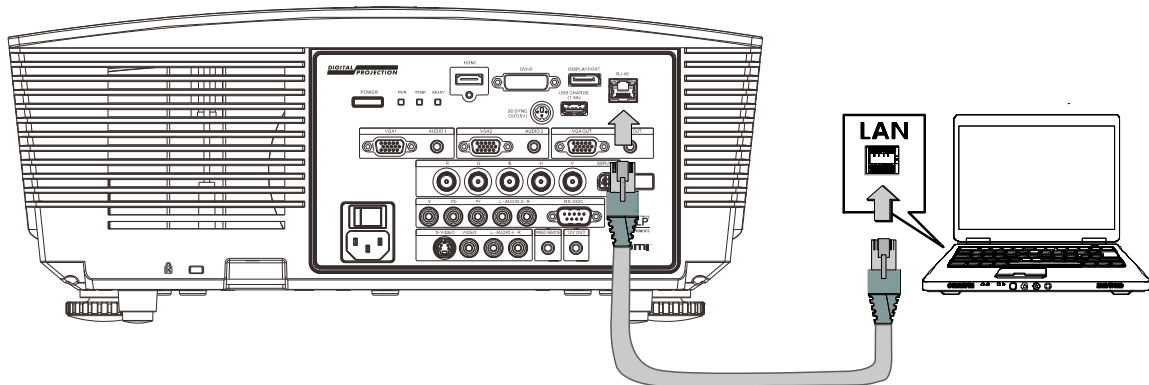


2. On the PC (Laptop), select **Start** → **Control Panel** → **Network Connections**.

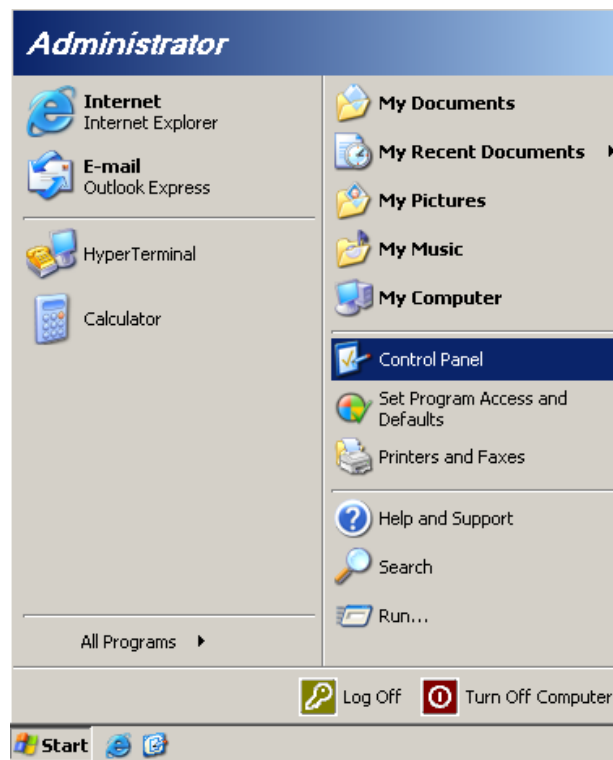





3. Right-click on **Local Area Connection**, and select **Properties**.

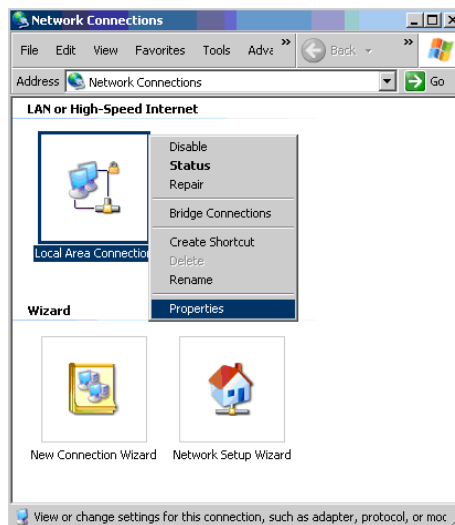


4. In the **Properties** window, select the **General** tab, and select **Internet Protocol (TCP/IP)**.
5. Click **Properties**.

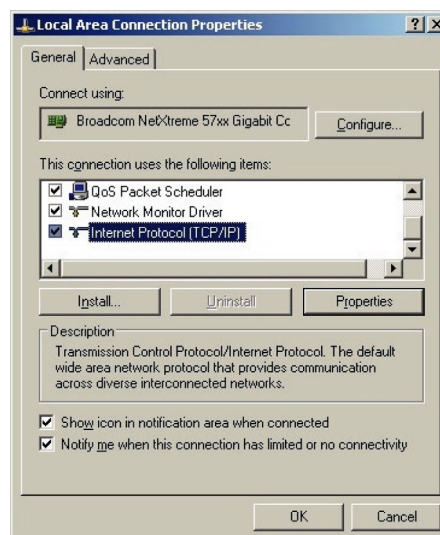

6. Click **Use the following IP address** and fill in the IP address and Subnet mask, then click **OK**.

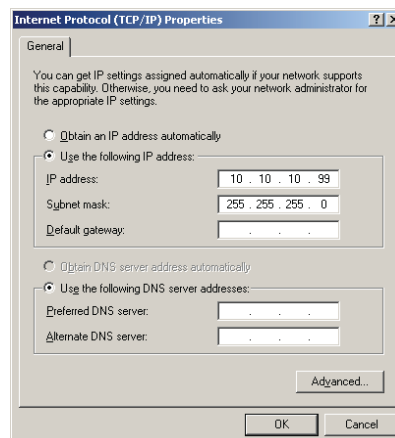

7. Press the **Menu** button on the projector.
8. Select **Settings2**→ **Advanced1** → **Network**
9. After getting into **Network**, input the following:
  - ▶ DHCP: Off
  - ▶ IP Address: 10.10.10.10
  - ▶ Subnet Mask: 255.255.255.0
  - ▶ Gateway: 0.0.0.0
  - ▶ DNS Server: 0.0.0.0
10. Press **↵** (Enter) / **▶** to confirm settings.  
 Open a web browser  
 (for example, Microsoft Internet Explorer with Adobe Flash Player 9.0 or higher).

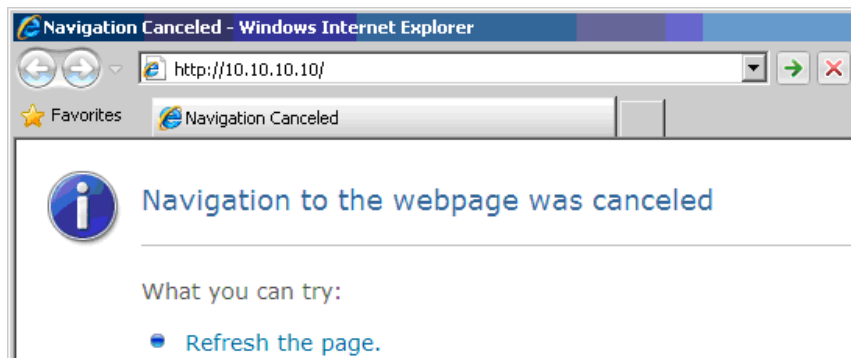

11. In the Address bar, input the IP address: 10.10.10.10.
12. Press **↵** (Enter) / **▶**.

The projector is setup for remote management. The LAN/RJ45 function displays as follows.

| Projector Info      |              |
|---------------------|--------------|
| Alert Mail Settings |              |
| Crestron            |              |
| Model Name          | System       |
| System Status       | Power On     |
| Display Source      | No Source    |
| Lamp Hours          | 2            |
| Display Mode        | Presentation |
| Error Status        | No Error     |
| LAN Status          |              |
| IP address          | 10.10.10.10  |
| Subnet mask         | 255.255.0.0  |
| Default gateway     | 0.0.0.0      |
| DNS Server          | 0.0.0.0      |
| MAC address         |              |
| Version             |              |
| LAN Version         |              |
| F/W Version         |              |



Expansion Options

| Crestron Control                           | Projector                                              | User Password                            |
|--------------------------------------------|--------------------------------------------------------|------------------------------------------|
| IP Address <input type="text"/>            | Projector Name <input type="text" value="PJ01"/>       | <input type="checkbox"/> User Enabled    |
| IP ID <input type="text"/>                 | Location <input type="text" value="RM01"/>             | Password <input type="text"/>            |
| Control Port <input type="text"/>          | Assigned To <input type="text" value="Sir"/>           | Confirmed <input type="text"/>           |
| <input type="button" value="Control Set"/> | <input type="button" value="Set"/>                     | <input type="button" value="User Set"/>  |
|                                            | Network Config <input type="checkbox"/> DHCP Enabled   | Admin Password                           |
|                                            | IP Address <input type="text" value="10.10.10.10"/>    | <input type="checkbox"/> Admin Enabled   |
|                                            | Subnet Mask <input type="text" value="255.255.255.0"/> | Password <input type="text"/>            |
|                                            | Default Gateway <input type="text" value="0.0.0.0"/>   | Confirmed <input type="text"/>           |
|                                            | DNS Server <input type="text" value="0.0.0.0"/>        | <input type="button" value="Admin Set"/> |
|                                            | <input type="button" value="Net Set"/>                 |                                          |
|                                            | <input type="button" value="Tools Exit"/>              |                                          |

| CATEGORY              | ITEM            | INPUT-LENGTH |
|-----------------------|-----------------|--------------|
| Crestron Control      | IP Address      | 15           |
|                       | IP ID           | 3            |
|                       | Port            | 5            |
| Projector             | Projector Name  | 10           |
|                       | Location        | 10           |
|                       | Assigned To     | 10           |
| Network Configuration | DHCP (Enabled)  | (N/A)        |
|                       | IP Address      | 15           |
|                       | Subnet Mask     | 15           |
|                       | Default Gateway | 15           |
|                       | DNS Server      | 15           |
| User Password         | Enabled         | (N/A)        |
|                       | New Password    | 10           |
|                       | Confirm         | 10           |
| Admin Password        | Enabled         | (N/A)        |
|                       | New Password    | 10           |
|                       | Confirm         | 10           |

For more information, please visit <http://www.crestron.com>.

## Preparing Email Alerts

1. Make sure that user can access the homepage of LAN RJ45 function by web browser (for example, Microsoft Internet Explorer v6.01/v8.0).
2. From the Homepage of LAN/RJ45, click **Alert Settings**.

The screenshot shows the LAN/RJ45 homepage. On the left, there is a sidebar with three buttons: 'Projector Info', 'Alert Mail Settings' (which is circled in red), and 'Crestron'. The main area displays a table of system information.

| Model Name      |              |
|-----------------|--------------|
| System          |              |
| System Status   | Power On     |
| Display Source  | No Source    |
| Lamp Hours      | 2            |
| Display Mode    | Presentation |
| Error Status    | No Error     |
| LAN Status      |              |
| IP address      | 10.10.10.10  |
| Subnet mask     | 255.255.0.0  |
| Default gateway | 0.0.0.0      |
| DNS Server      | 0.0.0.0      |
| MAC address     |              |
| Version         |              |
| LAN Version     |              |
| F/W Version     |              |

3. By default, these input boxes in **Alert Settings** are blank.

The screenshot shows the 'Send E-Mail' configuration page. The left sidebar has three buttons: 'Projector Info', 'Alert Mail Settings', and 'Crestron'. The main area is titled 'Send E-Mail' and contains the following fields and options:

Enter the appropriate settings in the fields below:  
(Your SMTP server may not require a user name or password.)

SMTP Server:  Port:

User Name:

Password:

From:

To:

CC:

E-mail Alert Options:

Fan lock : ☒ Over\_Heat: ☒

Case Open: ☒ Lamp Fail: ☒

Lamp Hours Over: ☒ Filter Hours Over: ☒

Weekly Report: ☐

4. For Sending alert mail, input the following:
  - . The **SMTP** field is the mail server for sending out email (SMTP protocol). This is a required field.
  - . The **To** field is the recipient's email address (for example, the projector administrator). This is a required field.
  - . The **Cc** field sends a carbon copy of the alert to the specified email address. This is an optional field (for example, the projector administrator's assistant).
  - . The **From** field is the sender's email address (for example, the projector administrator). This is a required field.
  - . Select the alert conditions by checking the desired boxes.

**Projector Info**  
**Alert Mail Settings**  
**Crestron**

### Send E-Mail

Enter the appropriate settings in the fields below:  
(Your SMTP server may not require a user name or password.)

**SMTP Server:** mail.corp.com **Port:** 25  
**User Name:** Sender.US  
**Password:** \*\*\*\*\*  
Mail Server Apply

**From:** send@mail.corp.com  
**To:** rcvr1@mail.corp.com  
**CC:** rcw2@mail.corp.com  
Mail Address Apply

**E-mail Alert Options:**  
Fan lock : ☒ **Over\_Heat:** ☒  
Case Open: ☒ **Lamp Fail:** ☒  
Lamp Hours Over: ☒ **Filter Hours Over:** ☒  
Weekly Report: ☐  
Alert Option Apply

Send Test Mail

**Note:** Fill in all fields as specified. User can click **Send Test Mail** to test what setting is correct. For successful sending an e-mail alert, you must select alert conditions and enter a correct e-mail address.

## RS232 by Telnet Function


Besides projector connected to RS232 interface with “Hyper-Terminal” communication by dedicated RS232 command control, there is alternative RS232 command control way, so called “RS232 by TELNET” for LAN/RJ45 interface.

### Quick Start-Guide for “RS232 by TELNET”


Check and get the IP-Address on OSD of the projector.

Make sure that laptop/PC can access the web-page of the projector.

Make sure that “Windows Firewall” setting to be disabled in case of “TELNET” function filtering out by laptop/PC.

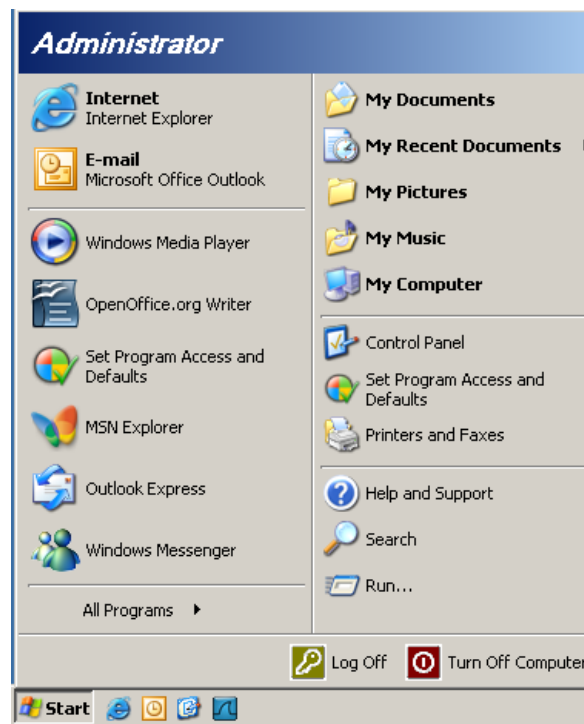

Start => All Programs => Accessories => Command Prompt

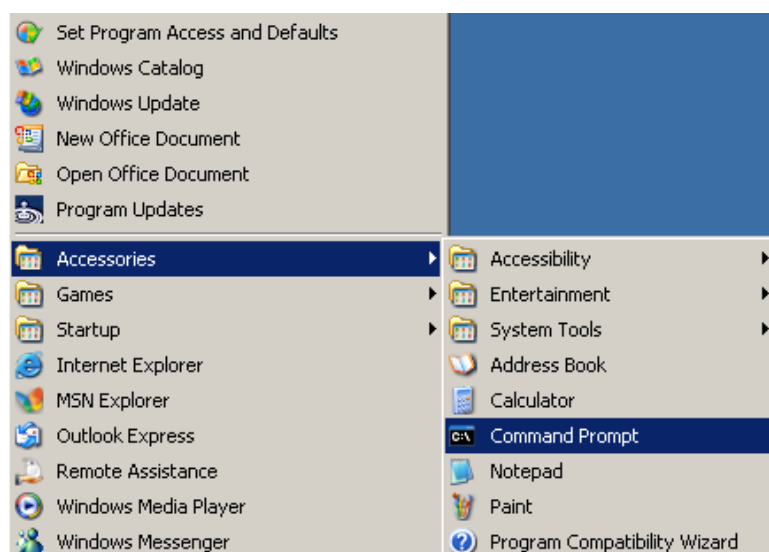

Input the command format like the below:

**telnet tt.ttt.xxx.yyy.zzz 23** ("Enter" key pressed)

(**ttt.xxx.yyy.zzz**: IP-Address of the projector)

If Telnet-Connection ready, and user can have RS232 command input, then "Enter" key pressed, the RS232 command will be workable.


### How to have TELNET enabled in Windows VISTA / 7

By default installation for Windows VISTA, "TELNET" function is not included. But end-user can have it by way of "Turn Windows features On or Off" to be enabled.


Open "Control Panel" in Windows VISTA




Open "Programs"

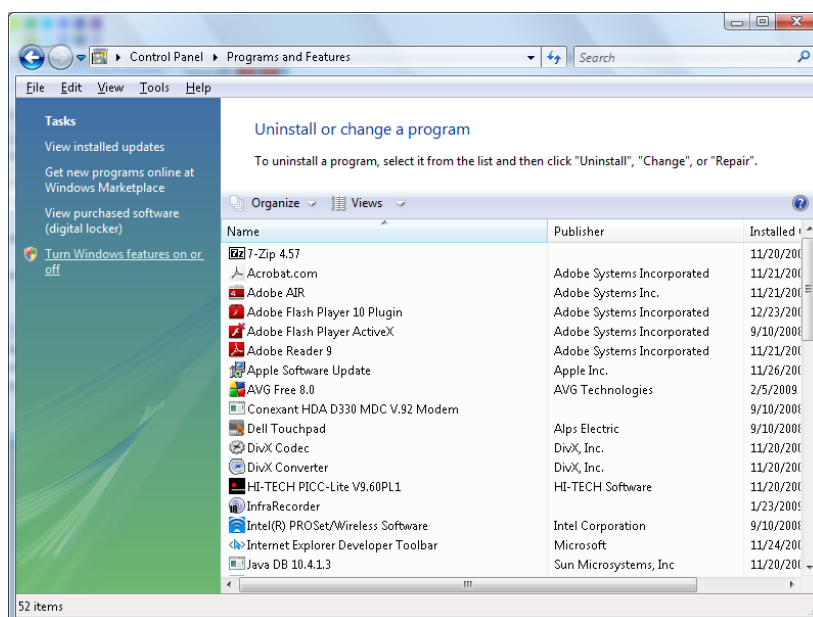

Select "Turn Windows features on or off" to open

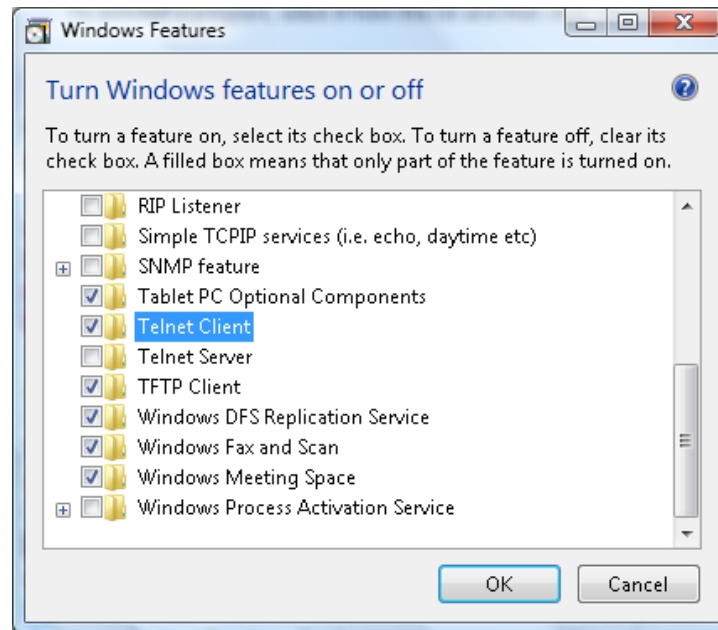

Have "Telnet Client" option checked, then press "OK" button.

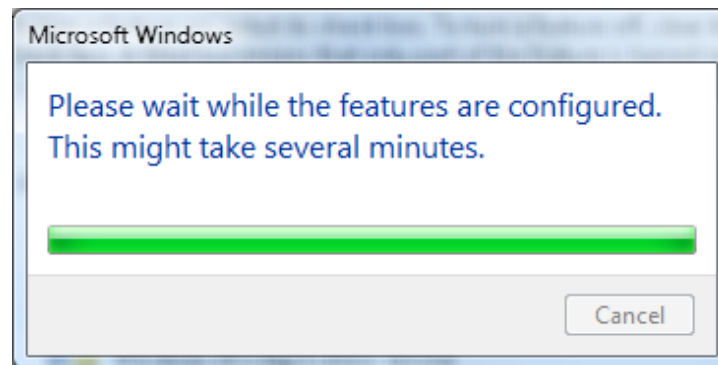

**Specsheet for "RS232 by TELNET" :**

1. Telnet: TCP
2. Telnet port: 23  
(for more detail, kindly please get contact with the service agent or team)
3. Telnet utility: Windows "TELNET.exe" (console mode)
4. Disconnection for RS232-by-Telnet control normally: Close Windows Telnet utility directly after TELNET connection ready
5. Limitation 1 for Telnet-Control: there is less than 50 bytes for successive network payload for Telnet-Control application.

Limitation 2 for Telnet-Control: there is less than 26 bytes for one complete RS232 command for Telnet-Control.


Limitation 3 for Telnet-Control: Minimum delay for next RS232 command must be more than 200 (ms).

(\*, In Windows XP built-in "TELNET.exe" utility, "Enter" key pressed will have "Carriage-Return" and "New-Line" code.)



## Advanced 2 Feature


Press the **Menu** button to open the **OSD** menu. Press ◀▶ to move to the **Settings 2** menu. Press ▲▼ to move to the **Advanced 2** menu and then press **Enter** or ▶. Press ▲▼ to move up and down in the **Advanced 2** menu. Press ◀▶ to enter and change values for setting.

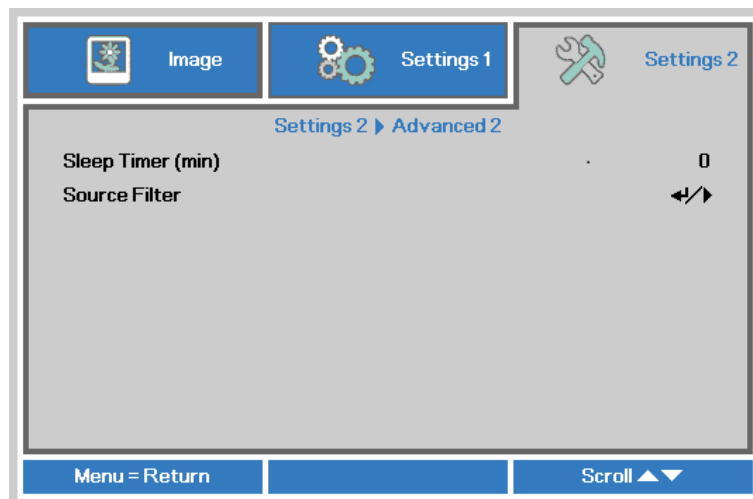

| ITEM              | DESCRIPTION                                                                                                                     |
|-------------------|---------------------------------------------------------------------------------------------------------------------------------|
| Sleep Timer (min) | Press the cursor ◀▶ button to enter and set Sleep timer. The projector automatically turns off after the preset period of time. |
| Source Filter     | Press ◀ (Enter) / ▶ to enter the Source Filter menu. See page 49 for more information on <i>Source Filter</i> .                 |

### Source Filter

Press the **ENTER** button to enter the **Source Filter** sub menu.

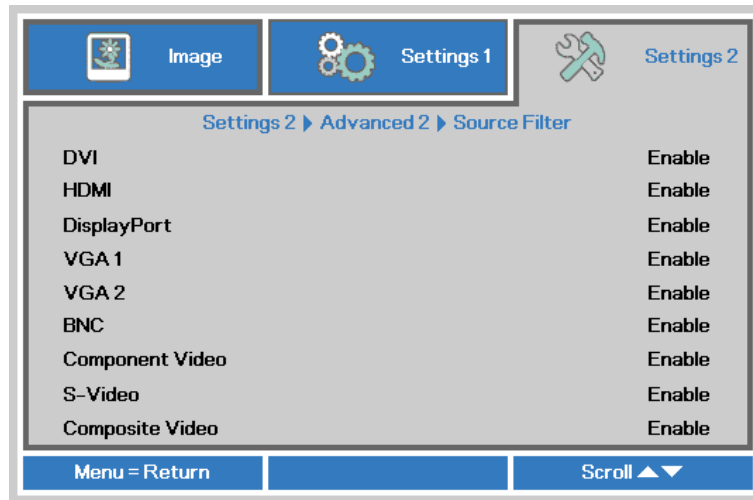

| ITEM            | DESCRIPTION                                                                     |
|-----------------|---------------------------------------------------------------------------------|
| DVI             | Press the ◀▶ buttons to enter and enable or disable the DVI source.             |
| HDMI            | Press the ◀▶ buttons to enter and enable or disable the HDMI source.            |
| DisplayPort     | Press the ◀▶ buttons to enter and enable or disable the DisplayPort source.     |
| VGA1            | Press the ◀▶ buttons to enter and enable or disable the VGA1 source.            |
| VGA2            | Press the ◀▶ buttons to enter and enable or disable the VGA2 source.            |
| BNC             | Press the ◀▶ buttons to enter and enable or disable the BNC source.             |
| Component Video | Press the ◀▶ buttons to enter and enable or disable the Component Video source. |
| S-Video         | Press the ◀▶ buttons to enter and enable or disable the S-Video source.         |
| Composite Video | Press the ◀▶ buttons to enter and enable or disable the Composite Video source. |

## MAINTENANCE AND SECURITY

### Tilt Up/Down caution


- When projector detect angle is over spec, popup caution message.

Warning Msg:  
Projection angle exceeds normal range  
And will affect lamp life time  
Please refer User Manual for more information

### The model with Standard lamp module

The model with Standard lamp module can be used projection angle as shown below.


If Projector projection angle exceeds the drawing shown and don't use tilt lamp module. Showing caution message for 5sec and then disappear, projector remain on. (every time when projector on ; This function can be disable see Advanced 1 Feature on page 36 )

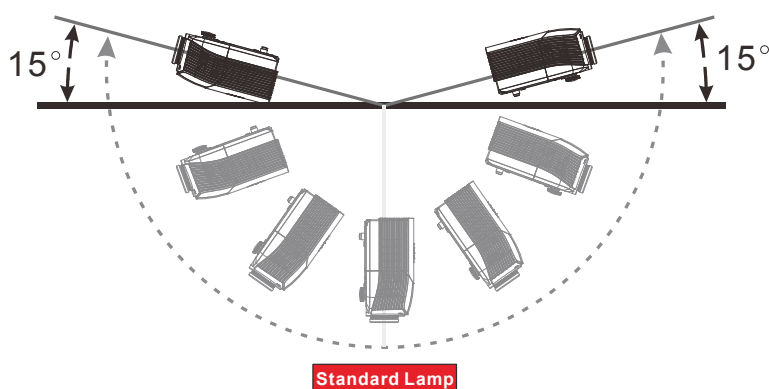

### The model with Tilt lamp module


The model with Tilt lamp module can be used projection angle as shown below.

If Projector projection angle exceeds the drawing shown and don't use standard lamp module. Showing caution message for 5sec and then disappear, projector remain on. (every time when projector on ; This function can be disable see Advanced 1 Feature on page 36 )

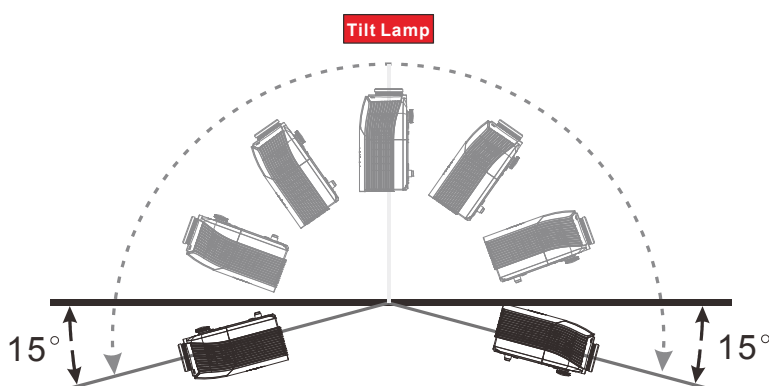


#### **Warning:**

Your operation might cause lamp defect and life decay. If used incorrect lamp module

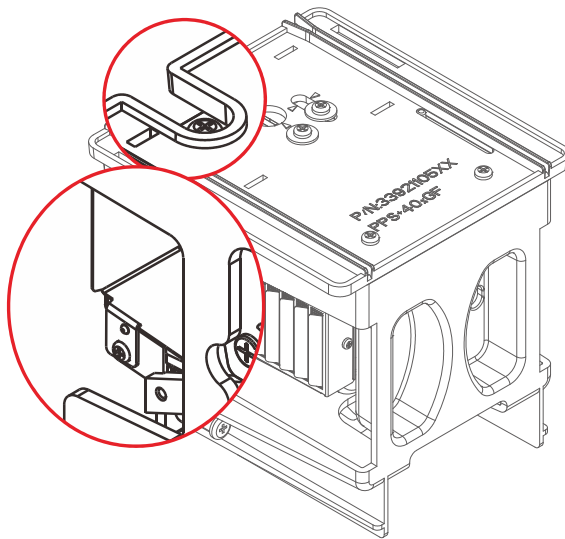

Standard lamp module

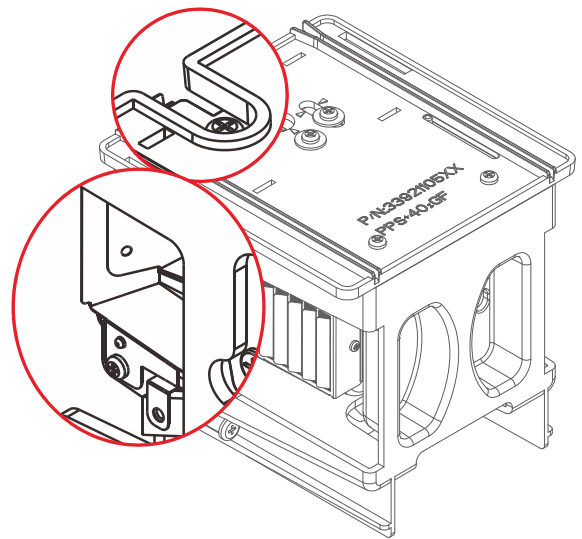

Tilt lamp module  
( Optional )

**Note:**

*The standard lamp is to go with regular shipment for normal operation and the tilt lamp is an option lamp for abnormal operation*

## Replacing the Projection Lamp

The projection lamp should be replaced when it burns out. It should only be replaced with a certified replacement part, which you can order from your local dealer.

**Important:**

- a. The projection lamp used in this product contains a small amount of mercury.*
- b. Do not dispose this product with general household waste.*
- c. Disposal of this product must be carried out in accordance with the regulations of your local authority.*

**Warning:**

*Be sure to turn off and unplug the projector at least 30 minutes before replacing the lamp. Failure to do so could result in a severe burn.*

**Caution:**

*In rare cases the lamp bulb may burn out during normal operation and cause glass dust or shards to be discharged outward from the rear exhaust vent.*

*Do not inhale or do not touch glass dust or shards. Doing so could result in injury.*

*Always keep your face away from the exhaust vent so that you do not suffer from the gas and broken shards of the lamp.*

*When removing the lamp from a ceiling-mounted projector, make sure that no one is under the projector. Glass fragments could fall if the lamp has been burned out.*


 **IF A LAMP EXPLODES**

*If a lamp explodes, the gas and broken shards may scatter inside the projector and they may come out of the exhaust vent. The gas contains toxic mercury.*


*Open windows and doors for ventilation.*

*If you inhale the gas or the shards of the broken lamp enter your eyes or mouth, consult the doctor immediately.*

- 1.** Switch off the power to the projector by pressing the POWER button.
- 2.** Allow the projector to cool down at least 30 minutes.
- 3.** Disconnect the power cord.

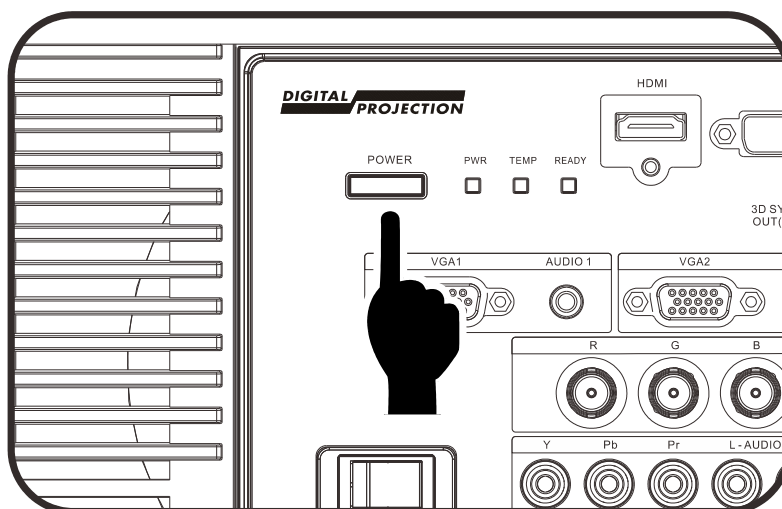


- 4.** Unlock the lamp cover.

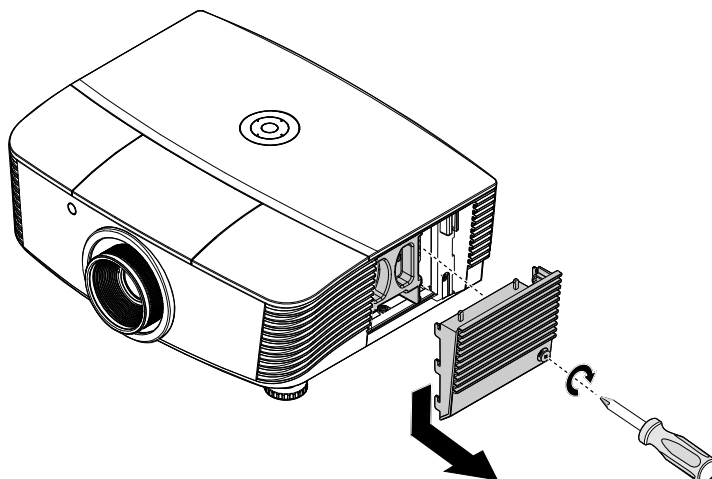


- 5.** Pull up and remove the cover.

- 6.** Use a screwdriver to remove the screws from the lamp module.

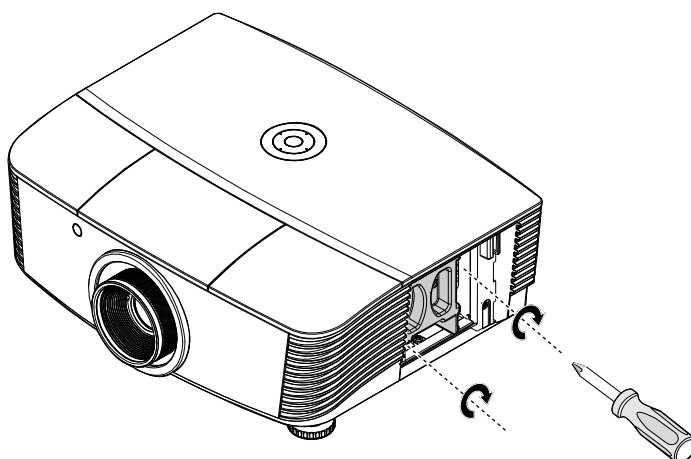


- 7.** Pull out the lamp module.

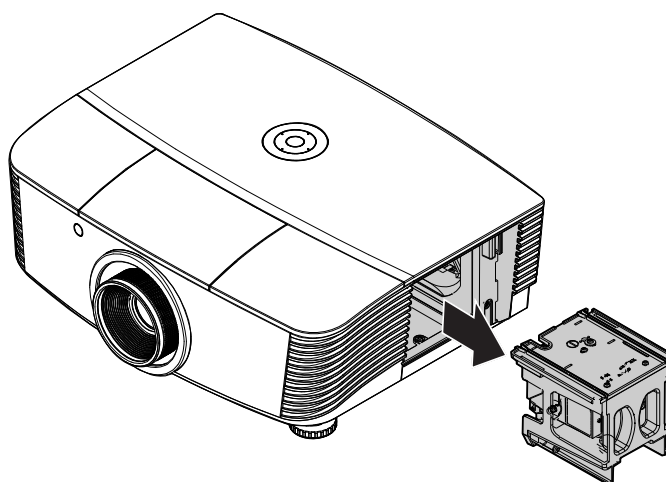

- 8.** Reverse steps 1 to 7 to install the new lamp module. While installing, align the lamp module with the connector and ensure it is level to avoid damage.

**Note:**



*The lamp module must sit securely in place and the lamp connector must be connected properly before tightening the screws.*

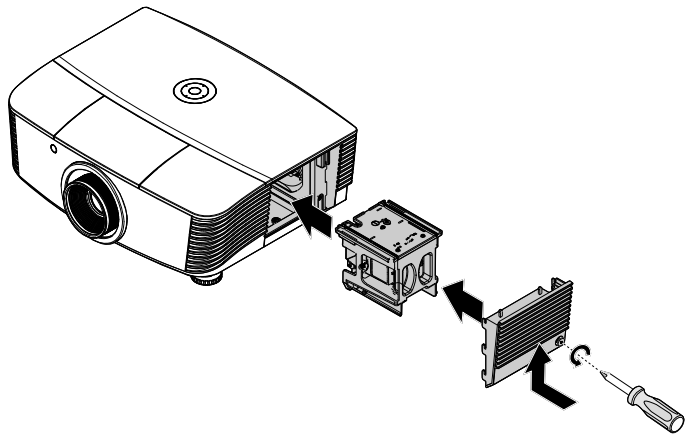


## Resetting the Lamp

After replacing the lamp, you should reset the lamp hour counter to zero. Refer to the following:

1. Press the **MENU** button to open the OSD menu.
2. Press the cursor **◀▶** button to move to the **Settings 2** menu. Press the cursor button to move down to **Advanced 1** and press enter.
3. Press the cursor **▼▲** button to move down to **Lamp Hour Reset**.

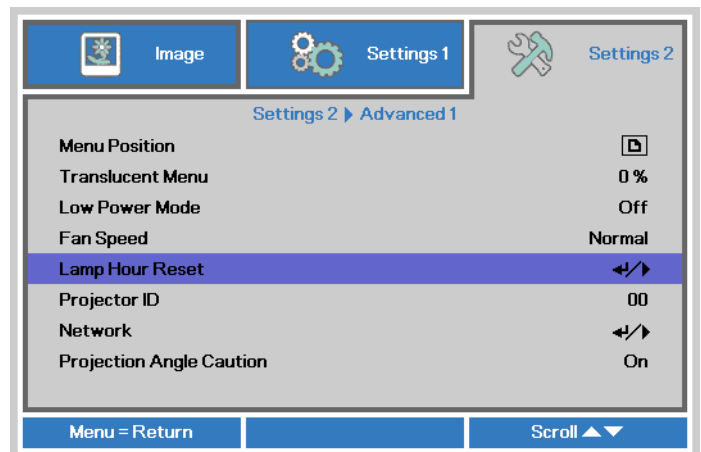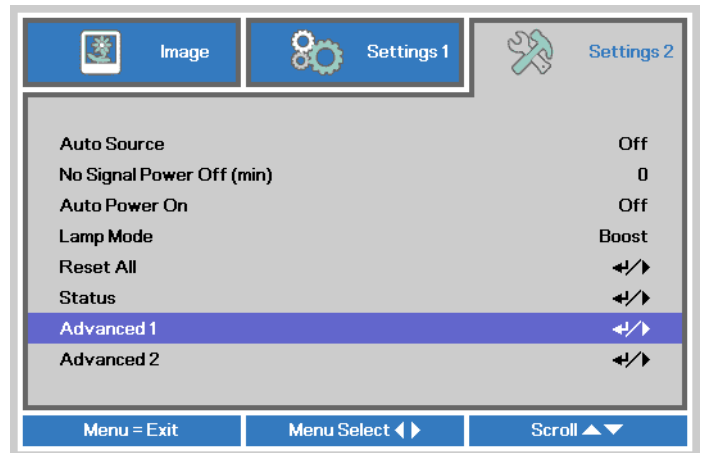

4. Press the cursor **▶** or Enter button.  
A message screen appears.
5. Press **▼▲◀▶** buttons to reset the lamp hour.
6. Press the **MENU** button to get back to **Settings 2**.

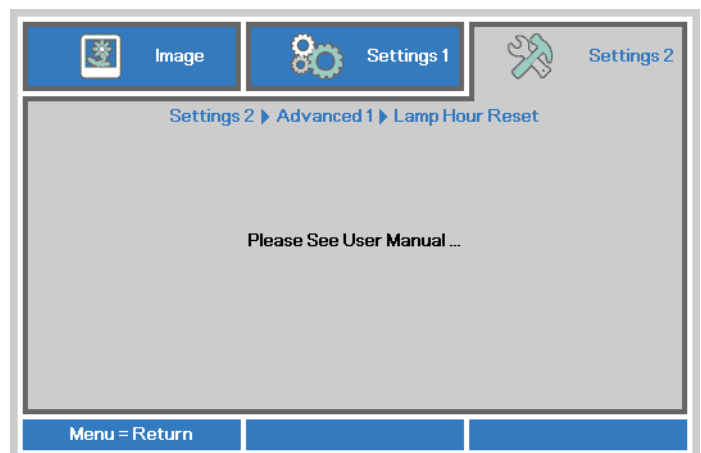




## **Cleaning the filter (filter: optional parts)**

The air filter prevents dust from accumulating on the surface of the optical elements inside the projector. If the filter is dirty or clogged, your projector may overheat or degrading the projected image quality.

- 1.** Turn off the projector, and unplug the AC power cord from the AC outlet.
- 2.** Cleaning the filter with a vacuum cleaner.

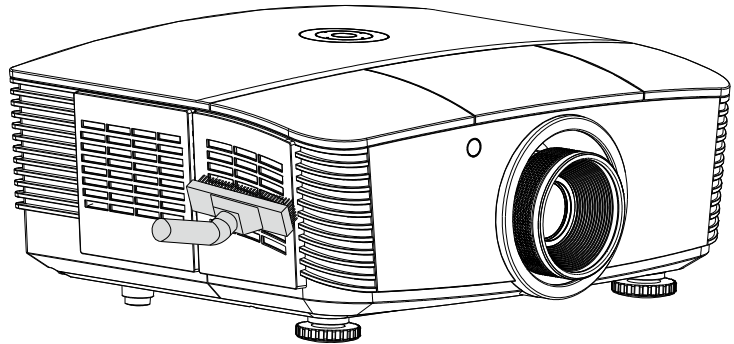

**Caution:**

*Recommend avoiding dusty or smoky environments when you operate the projector, it may cause poor image quality.*


*If the filter is heavily clogged and unable to clean, replace a new filter.*

**Note:**


*Using a ladder is recommended to access the filter. Do not remove the projector from the wall mount.*

## Replacing the Filter


1. Turn off the projector, and unplug the AC power cord from the AC outlet.  
Clean up the dust on the projector and around the air vents.  
Pull out the filter cover and remove from the projector

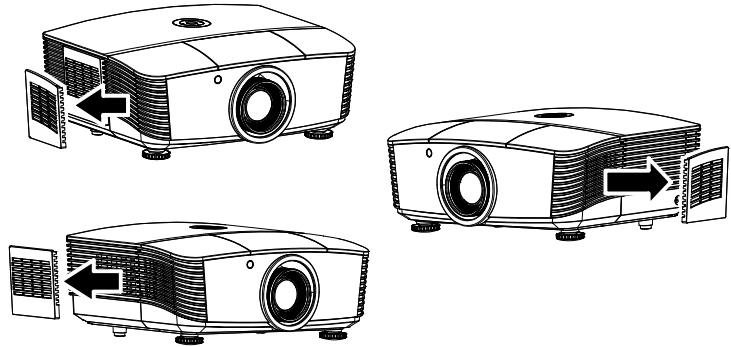


2. Lift the filter from the filter cover.

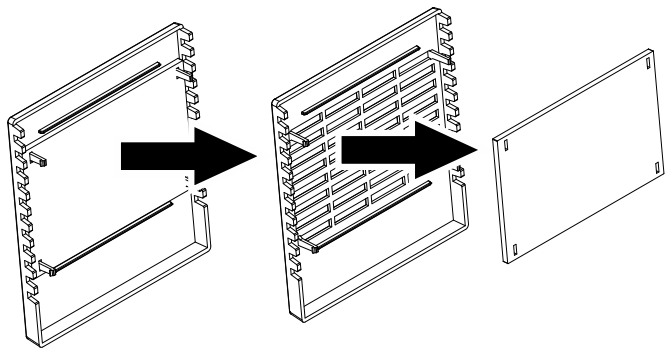

3. Replace a new filter module or replace filter into cover.

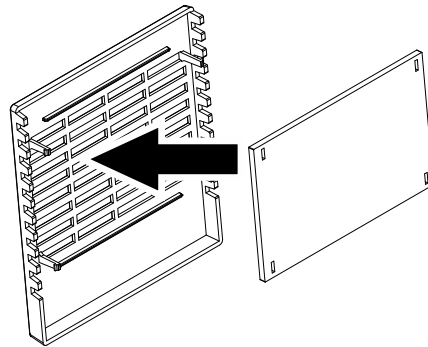

4. Replace the filter cover back to the projector by pushing gently in the direction shown.

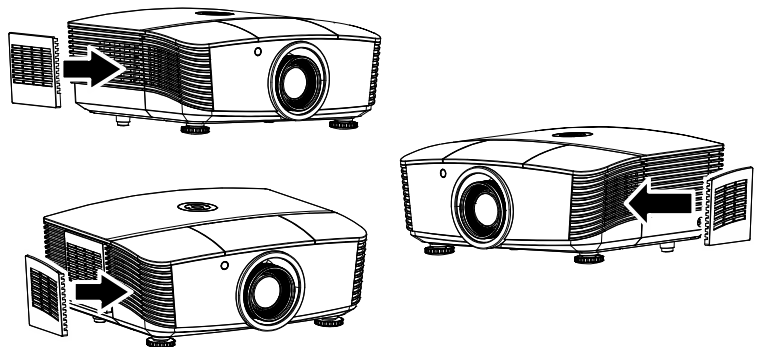**Warning:**

*Do not wash the filter with the water or other liquid matter*

**Important:**

*When the lamp is replaced, the filter should also be replaced, not cleaned.*

## **Cleaning the Projector**

Cleaning the projector to remove dust and grime will help ensure trouble-free operation.

**Warning:**

- 1. Be sure to turn off and unplug the projector at least 30 minutes before cleaning. Failure to do so could result in a severe burn.*
- 2. Use only a dampened cloth when cleaning. Do not allow water to enter the ventilation openings on the projector.*
- 3. If a little water gets into the projector interior while cleaning, leave unplugged in a well-ventilated room for several hours before using.*
- 4. If a lot of water gets into the projector interior when cleaning, have the projector serviced.*

### **Cleaning the Lens**

You can purchase optic lens cleaner from most camera stores. Refer to the following to clean the projector lens.

1. Apply a little optic lens cleaner to a clean soft cloth. (Do not apply the cleaner directly to the lens.)
2. Lightly wipe the lens in a circular motion.

**Caution:**

- 1. Do not use abrasive cleaners or solvents.*
- 2. To prevent discoloration or fading, avoid getting cleaner on the projector case.*

### **Cleaning the Case**

Refer to the following to clean the projector case.

1. Wipe off dust with a clean dampened cloth.
2. Moisten the cloth with warm water and mild detergent (such as used to wash dishes), and then wipe the case.
3. Rinse all detergent from the cloth and wipe the projector again.


**Caution:**

*To prevent discoloration or fading of the case, do not use abrasive alcohol-based cleaners.*

## Using the Physical Lock

### Using the Kensington® Lock

If you are concerned about security, attach the projector to a permanent object with the Kensington slot and a security cable.

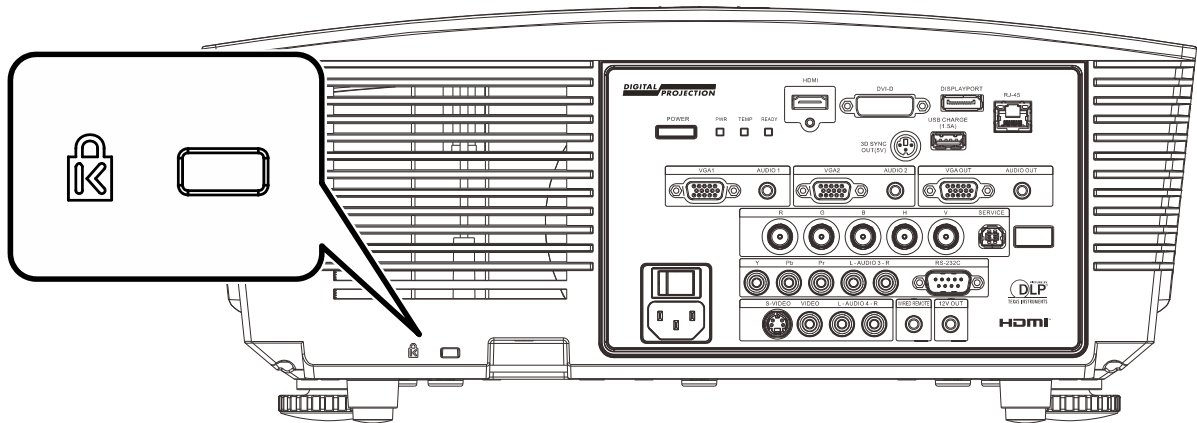

**Note:**


Contact your vendor for details on purchasing a suitable Kensington security cable.

The security lock corresponds to Kensington's MicroSaver Security System. If you have any comment, contact: Kensington, 2853 Campus Drive, San Mateo, CA 94403, U.S.A. Tel: 800-535-4242, <http://www.Kensington.com>.

### Using the Security Chain Lock

In addition to the password protection function and the Kensington lock, the Security Chain Opening helps protect the PROJECTOR from unauthorized use.

See the following picture.

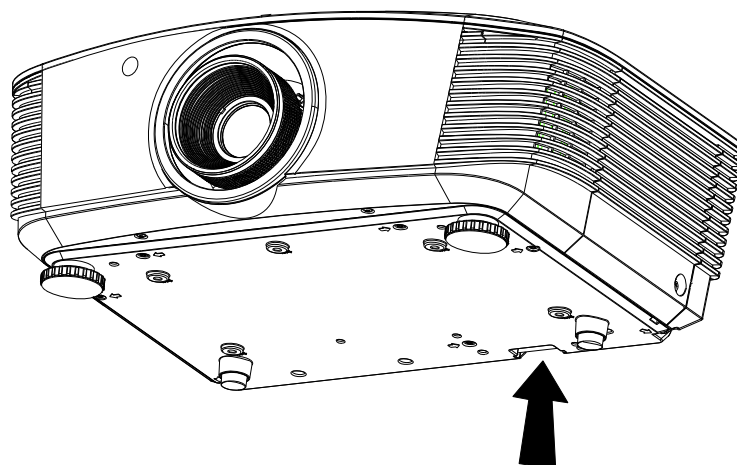

## **Common problems and solutions**

These guidelines provide tips to deal with problems you may encounter while using the projector. If the problem remains unsolved, contact your dealer for assistance.

Often after time spent troubleshooting, the problem is traced to something as simple as a loose connection. Check the following before proceeding to the problem-specific solutions.

- *Use some other electrical device to confirm that the electrical outlet is working.*
- *Ensure the projector is turned on.*
- *Ensure all connections are securely attached.*
- *Ensure the attached device is turned on.*
- *Ensure a connected PC is not in suspending mode.*
- *Ensure a connected notebook computer is configured for an external display.  
(This is usually done by pressing an Fn-key combination on the notebook.)*

## **Tips for Troubleshooting**

In each problem-specific section, try the steps in the order suggested. This may help you to solve the problem more quickly.

Try to pin point the problem and thus avoid replacing non-defective parts.

For example, if you replace batteries and the problem remains, put the original batteries back and go to the next step.

Keep a record of the steps you take when troubleshooting: The information may be useful when calling for technical support or for passing on to service personnel.

## LED Error Messages

| ERROR CODE MESSAGES                                            | POWER LED |      | TEMP LED | READY LED |
|----------------------------------------------------------------|-----------|------|----------|-----------|
|                                                                | RED       | BLUE | RED      | RED       |
| System Initial                                                 | Flash     | —    | OFF      | OFF       |
| Ready to Power on (Standby)                                    | ON        | —    | OFF      | OFF       |
| System Power on                                                | Flash     | —    | OFF      | OFF       |
| Lamp Lit , System stable                                       |           | ON   | OFF      | ON        |
| Cooling                                                        | Flash     | —    | OFF      | OFF       |
| Over Temperature                                               | ON        | —    | ON       | OFF       |
| Thermal Break Sensor error                                     | 4 blinks  | —    | OFF      | OFF       |
| Lamp Fail                                                      | 5 blinks  | —    | OFF      | ON        |
| Lamp Temperature shut down                                     | 5 blinks  | —    | OFF      | 1 blinks  |
| Lamp Short circuit in output detected                          | 5 blinks  | —    | OFF      | 2 blinks  |
| Lamp End of lamp life detected                                 | 5 blinks  | —    | OFF      | 3 blinks  |
| Lamp did not ignite                                            | 5 blinks  | —    | OFF      | 4 blinks  |
| Lamp extinguished during normal operation                      | 5 blinks  | —    | OFF      | 5 blinks  |
| Lamp extinguished during run-up phase                          | 5 blinks  | —    | OFF      | 6 blinks  |
| Lamp voltage got error                                         | 5 blinks  | —    | OFF      | 7 blinks  |
| Lamp ballast got error                                         | 5 blinks  | —    | OFF      | 8 blinks  |
| Ballast watt value is out of range<br>(Lamp Normal & Eco mode) | 5 blinks  | —    | OFF      | 9 blinks  |
| Lamp ballast Communication error                               | 5 blinks  | —    | OFF      | 10 blinks |
| Lamp ballast power error                                       | 5 blinks  | —    | OFF      | 11 blinks |
| Fan-1 error                                                    | 6 blinks  | —    | OFF      | 1 blinks  |
| Fan-2 error                                                    | 6 blinks  | —    | OFF      | 2 blinks  |
| Fan-3 error                                                    | 6 blinks  | —    | OFF      | 3 blinks  |
| Fan-4 error                                                    | 6 blinks  | —    | OFF      | 4 blinks  |
| Fan-5 error                                                    | 6 blinks  | —    | OFF      | 5 blinks  |
| Case Open                                                      | 7 blinks  | —    | OFF      | OFF       |
| DAD1000 error                                                  | 8 blinks  | —    | OFF      | OFF       |
| Color wheel error                                              | 9 blinks  | —    | OFF      | OFF       |

In the event of an error, please disconnect the AC power cord and wait for one (1) minute before restarting the projector. If the Power or Ready LEDs are still blinking or any other situation that isn't listed in the chart above, please contact your service center.

## Image Problems

### ***Problem: No image appears on the screen***

1. Verify the settings on your notebook or desktop PC.
2. Turn off all equipment and power up again in the correct order.

### ***Problem: The image is blurred***

1. Adjust the **Focus** on the projector.
2. Press the **Auto** button on the remote control.
3. Ensure the projector-to-screen distance is within the specified range.
4. Check that the projector lens is clean.

***Problem: The image is wider at the top or bottom (trapezoid effect)***

1. Position the projector so it is as perpendicular to the screen as possible.
2. Use the **Keystone** button on the remote control to correct the problem.

***Problem: The image is reversed***

Check the **Projection** setting on the **Settings 1** menu of the OSD.

***Problem: The image is streaked***

1. Set the **Frequency** and **Tracking** settings on the **Image->Computer** menu of the OSD to the default settings.
2. To ensure the problem is not caused by a connected PC's video card, connect to another computer.

***Problem: The image is flat with no contrast***

Adjust the **Contrast** setting on the **Image** menu of the OSD.

***Problem: The color of the projected image does not match the source image.***

Adjust the **Color Temperature** and **Gamma** settings on the **Image->Advanced** menu of the OSD.

## **Lamp Problems**

***Problem: There is no light from the projector***

1. Check that the power cable is securely connected.
2. Ensure the power source is good by testing with another electrical device.
3. Restart the projector in the correct order and check that the Power LED is on.
4. If you have replaced the lamp recently, try resetting the lamp connections.
5. Replace the lamp module.
6. Put the old lamp back in the projector and have the projector serviced.

***Problem: The lamp goes off***

1. Power surges can cause the lamp to turn off. Re-plug power cord. When the Power LED is on, press the power button.
2. Replace the lamp module.
3. Put the old lamp back in the projector and have the projector serviced.

## **Remote Control Problems**

***Problem: The projector does not respond to the remote control***

1. Direct the remote control towards remote sensor on the projector.
2. Ensure the path between remote and sensor is not obstructed.
3. Turn off any fluorescent lights in the room.
4. Check the battery polarity.
5. Replace the battery.
6. Turn off other Infrared-enabled devices in the vicinity.
7. Have the remote control serviced.

## Audio Problems

### ***Problem: There is no sound***

1. Adjust the volume on the remote control.
2. Adjust the volume of the audio source.
3. Check the audio cable connection.
4. Test the source audio output with other speakers.
5. Have the projector serviced.

### ***Problem: The sound is distorted***

1. Check the audio cable connection.
2. Test the source audio output with other speakers.
3. Have the projector serviced.

## Having the Projector Serviced

If you are unable to solve the problem, you should have the projector serviced. Pack the projector in the original carton. Include a description of the problem and a checklist of the steps you took when trying to fix the problem: The information may be useful to service personnel. For servicing, return the projector to the place you purchased it.



## **HDMI Q & A**

***Q. What is the difference between a “Standard” HDMI cable and a “High-Speed” HDMI cable?***

Recently, HDMI Licensing, LLC announced that cables would be tested as Standard or High-Speed cables.

• Standard (or “category 1”) HDMI cables have been tested to perform at speeds of 75Mhz or up to 2.25Gbps, which is the equivalent of a 720p/1080i signal.

• High Speed (or “category 2”) HDMI cables have been tested to perform at speeds of 340Mhz or up to 10.2Gbps, which is the highest bandwidth currently available over an HDMI cable and can successfully handle 1080p signals including those at increased color depths and/or increased refresh rates from the Source. High-Speed cables are also able to accommodate higher resolution displays, such as WQXGA cinema monitors (resolution of 2560 x 1600).

***Q. How do I run HDMI cables longer than 10 meters?***

There are many HDMI Adopters working on HDMI solutions that extend a cable's effective distance from the typical 10 meter range to much longer lengths. These companies manufacture a variety of solutions that include active cables (active electronics built into cables that boost and extend the cable's signal), repeaters, amplifiers as well as CAT5/6 and fiber solutions.

***Q. How can I tell if a cable is an HDMI certified cable?***

All HDMI products are required to be certified by the manufacturer as part of the HDMI Compliance Test Specification. However, there may be instances where cables bearing the HDMI logo are available but have not been properly tested. HDMI Licensing, LLC actively investigates these instances to ensure that the HDMI trademark is properly used in the market. We recommend that consumers buy their cables from a reputable source and a company that is trusted.


For more detail information check <http://www.hdmi.org/learningcenter/faq.aspx#49>

## SPECIFICATIONS

## Specifications

|                              |                                                                                             |
|------------------------------|---------------------------------------------------------------------------------------------|
| Model                        | E-Vision 4500 WUXGA                                                                         |
| Display type                 | 0.67" WUXGA DC3 TypeA                                                                       |
| Resolution                   | 1920x1200                                                                                   |
| Projection distance          | 1.5 meters ~ 7 meters                                                                       |
| Projection screen size       | 36" ~ 210"                                                                                  |
| Projection lens              | Manual Focus/Manual Zoom                                                                    |
| Throw ratio                  | 1.54 ~ 1.93                                                                                 |
| Vertical keystone correction | ±40°                                                                                        |
| Projection methods           | Front, Rear, Desktop/Ceiling (Rear, Front)                                                  |
| Data compatibility           | VGA, SVGA, XGA, SXGA, SXGA+, UXGA, WUXGA@60hz, Mac                                          |
| SDTV/EDTV/ HDTV              | 480i, 576i, 480p, 576p, 720p, 1080i, 1080p                                                  |
| Video compatibility          | NTSC (M, 3.58/4.43 MHz), PAL (B, D, G, H, I, M, N), SECAM (B, D, G, K, K1, L)               |
| H-Sync                       | 15, 31-91.4kHz                                                                              |
| V-Sync                       | 24~30Hz, 47 ~ 120Hz                                                                         |
| Safety certification         | FCC-B, cUL, UL, CE, C-tick, CCC, KC, CB, PCT                                                |
| Operation temperature        | 5° ~ 35°C                                                                                   |
| Dimensions                   | 431.11mm (W) x 344.16mm (D) x 180.57mm (H)                                                  |
| AC Input                     | AC Universal 100 – 240V                                                                     |
| Power consumption            | Typical 480W (boost) , <0.5watts(Stand By)/<br>Typical 365W(standard) , <0.5watts(Stand By) |
| Lamp                         | 370W (Normal) / 280W (Eco)                                                                  |
| Audio speaker                | 3W x 2                                                                                      |
| Input Terminals              | VGA x 2                                                                                     |
|                              | DisplayPort x 1                                                                             |
|                              | DVI-D x 1                                                                                   |
|                              | S-Video x 1                                                                                 |
|                              | 5 BNC (RGBHV) x 1                                                                           |
|                              | Component x 1                                                                               |
|                              | Composite video x 1                                                                         |
|                              | HDMI x 1                                                                                    |
|                              | RCA stereo x 2                                                                              |
|                              | Mini-jack stereo x 2                                                                        |
| Output Terminals             | VGA x 1                                                                                     |
|                              | PC audio out x 1                                                                            |
| Control Terminals            | RS-232C                                                                                     |
|                              | RJ45                                                                                        |
|                              | Screen trigger: DC Jack x 1 (DC12V 200mA output function)                                   |
|                              | wire remote                                                                                 |
|                              | USB (type B) only for service/mouse control                                                 |
|                              | USB (type A) only for power supply; WHDI                                                    |
| Security                     | 3D sync                                                                                     |
|                              | Kensington lock                                                                             |

## Projection Distance vs. Projection Size

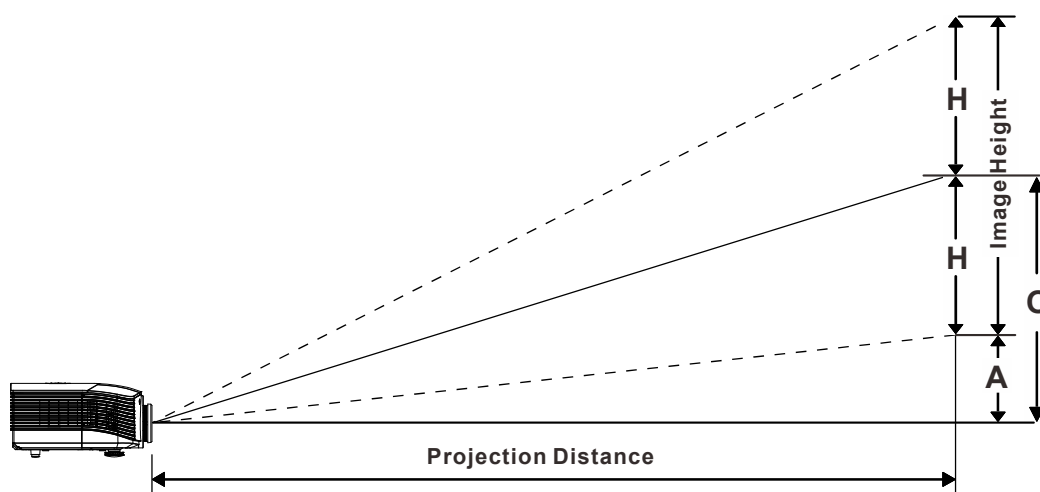

### Projection Distance and Size Table

Standard projection lens: TR: 1.54 ~ 1.93; offset=110%

|                   | TELE |      |      |      | WIDE |      |      |      |
|-------------------|------|------|------|------|------|------|------|------|
| Distance (m)      | 1.66 | 3.33 | 4.16 | 8.31 | 1.66 | 3.32 | 6.63 | 9.95 |
| Diagonal (")      | 40   | 80   | 100  | 200  | 50   | 100  | 200  | 300  |
| Image Width (mm)  | 862  | 1723 | 2154 | 4308 | 1077 | 2154 | 4308 | 6462 |
| Image Height (mm) | 538  | 1077 | 1346 | 2692 | 673  | 1346 | 2692 | 4039 |
| H (mm)            | 269  | 538  | 673  | 1346 | 337  | 673  | 1346 | 2019 |
| O (mm)            | 296  | 592  | 740  | 1481 | 370  | 740  | 1481 | 2221 |
| A (mm)            | 27   | 54   | 67   | 135  | 34   | 67   | 135  | 202  |

Long throw projection lens: TR: 1.93 ~ 2.9; offset=110%

|                   | TELE |      |       |       | WIDE |      |       |       |
|-------------------|------|------|-------|-------|------|------|-------|-------|
| Distance (m)      | 2.5  | 6.25 | 12.49 | 18.74 | 2.08 | 6.24 | 12.47 | 18.71 |
| Diagonal (")      | 40   | 100  | 200   | 300   | 50   | 150  | 300   | 450   |
| Image Width (mm)  | 862  | 2154 | 4308  | 6462  | 1077 | 3231 | 6462  | 9693  |
| Image Height (mm) | 538  | 1346 | 2692  | 4039  | 673  | 2019 | 4039  | 6058  |
| H (mm)            | 269  | 673  | 1346  | 2019  | 337  | 1010 | 2020  | 3029  |
| O (mm)            | 296  | 740  | 1481  | 2221  | 370  | 1111 | 2222  | 3332  |
| A (mm)            | 27   | 67   | 135   | 202   | 34   | 101  | 202   | 303   |

*Short throw projection lesn: TR: 0.77; offset=110%*

|                   | Fix  |      |      |      |
|-------------------|------|------|------|------|
| Distance (m)      | 0.66 | 1.33 | 1.66 | 2.49 |
| Diagonal (")      | 40   | 80   | 100  | 150  |
| Image Width (mm)  | 862  | 1723 | 2154 | 3231 |
| Image Height (mm) | 538  | 1077 | 1346 | 2019 |
| H (mm)            | 269  | 538  | 673  | 1010 |
| O (mm)            | 296  | 592  | 740  | 1111 |
| A (mm)            | 27   | 54   | 67   | 101  |

offset % =  $O/H \times 100\%$

$O=A+H$

$H=(1/2) \times (\text{image height})$

**Timing Mode Table**

| Signal    | Resolution  | H-Sync (KHz) | V-Sync (Hz) | Composite S-Video | Component | RGB (Analog) | DP/DVI HDMI (Digital) |
|-----------|-------------|--------------|-------------|-------------------|-----------|--------------|-----------------------|
| NTSC      | —           | 15.7         | 60.0        | ○                 | —         | —            | —                     |
| PAL/SECAM | —           | 15.6         | 50.0        | ○                 | —         | —            | —                     |
| VESA      | 640 x 400   | 37.9         | 85.1        | —                 | —         | ○            | ○                     |
|           | 720 x 400   | 31.5         | 70.1        | —                 | —         | ○            | ○                     |
|           | 720 x 400   | 37.9         | 85.0        | —                 | —         | ○            | ○                     |
|           | 640 x 480   | 31.5         | 60.0        | —                 | —         | ○            | ○                     |
|           | 640 x 480   | 37.9         | 72.8        | —                 | —         | ○            | ○                     |
|           | 640 x 480   | 37.5         | 75.0        | —                 | —         | ○            | ○                     |
|           | 640 x 480   | 43.3         | 85.0        | —                 | —         | ○            | ○                     |
|           | 800 x 600   | 35.2         | 56.3        | —                 | —         | ○            | ○                     |
|           | 800 x 600   | 37.9         | 60.3        | —                 | —         | ○            | ○                     |
|           | 800 x 600   | 46.9         | 75.0        | —                 | —         | ○            | ○                     |
|           | 800 x 600   | 48.1         | 72.2        | —                 | —         | ○            | ○                     |
|           | 800 x 600   | 53.7         | 85.1        | —                 | —         | ○            | ○                     |
|           | 800 x 600   | 76.3         | 120.0       | —                 | —         | ○            | ○                     |
|           | 1024 x 576  | 35.8         | 60.0        | —                 | —         | ○            | ○                     |
|           | 1024 x 600  | 37.3         | 60.0        | —                 | —         | ○            | ○                     |
|           | 1024 x 600  | 41.5         | 65.0        | —                 | —         | ○            | ○                     |
|           | 1024 x 768  | 48.4         | 60.0        | —                 | —         | ○            | ○                     |
|           | 1024 x 768  | 56.5         | 70.1        | —                 | —         | ○            | ○                     |
|           | 1024 x 768  | 60.0         | 75.0        | —                 | —         | ○            | ○                     |
|           | 1024 x 768  | 68.7         | 85.0        | —                 | —         | ○            | ○                     |
|           | 1024 x 768  | 97.6         | 120.0       | —                 | —         | ○            | ○                     |
|           | 1024 x 768  | 99.0         | 120.0       | —                 | —         | ○            | ○                     |
|           | 1152 x 864  | 67.5         | 75.0        | —                 | —         | ○            | ○                     |
|           | 1280 x 720  | 45.0         | 60.0        | —                 | —         | ○            | ○                     |
|           | 1280 x 720  | 90.0         | 120.0       | —                 | —         | ○            | ○                     |
|           | 1280 x 768  | 47.4         | 60.0        | —                 | —         | ○            | ○                     |
|           | 1280 x 768  | 47.8         | 59.9        | —                 | —         | ○            | ○                     |
|           | 1280 x 800  | 49.7         | 59.8        | —                 | —         | ○            | ○                     |
|           | 1280 x 800  | 62.8         | 74.9        | —                 | —         | ○            | ○                     |
|           | 1280 x 800  | 71.6         | 84.9        | —                 | —         | ○            | ○                     |
|           | 1280 x 800  | 101.6        | 119.9       | —                 | —         | ○            | ○                     |
|           | 1280 x 1024 | 64.0         | 60.0        | —                 | —         | ○            | ○                     |
|           | 1280 x 1024 | 80.0         | 75.0        | —                 | —         | ○            | ○                     |
|           | 1280 x 1024 | 91.1         | 85.0        | —                 | —         | ○            | ○                     |
|           | 1280 x 960  | 60.0         | 60.0        | —                 | —         | ○            | ○                     |
|           | 1280 x 960  | 85.9         | 85.0        | —                 | —         | ○            | ○                     |
|           | 1360 x 768  | 47.7         | 60.0        | —                 | —         | ○            | ○                     |
|           | 1400 x 1050 | 65.3         | 60.0        | —                 | —         | ○            | ○                     |
|           | 1440 x 900  | 55.5         | 59.9        | —                 | —         | ○            | ○                     |
|           | 1440 x 900  | 55.9         | 59.9        | —                 | —         | ○            | ○                     |
|           | 1440 x 900  | 70.6         | 75.0        | —                 | —         | ○            | ○                     |
|           | 1600 x 1200 | 75.0         | 60.0        | —                 | —         | ○            | ○                     |

| Signal          | Resolution  | H-Sync (KHz) | V-Sync (Hz) | Composite S-Video | Component | RGB (Analog) | DP/DVI HDMI (Digital) |
|-----------------|-------------|--------------|-------------|-------------------|-----------|--------------|-----------------------|
|                 | 1680 x 1050 | 64.7         | 59.9        | —                 | —         | ○            | ○                     |
|                 | 1680 x 1050 | 65.3         | 60.0        | —                 | —         | ○            | ○                     |
|                 | 1920 x 1200 | 74.0         | 60.0        | —                 | —         | ○            | ○                     |
|                 | 1920 x 1080 | 67.5         | 60.0        | —                 | —         | ○            | ○                     |
| Apple Macintosh | 640 x 480   | 35.0         | 66.7        | —                 | —         | ○            | ○                     |
|                 | 832 x 624   | 49.7         | 74.5        | —                 | —         | ○            | ○                     |
|                 | 1024 x 768  | 60.2         | 74.9        | —                 | —         | ○            | ○                     |
|                 | 1152 x 870  | 68.7         | 75.1        | —                 | —         | ○            | ○                     |
| SDTV            | 480i        | 15.7         | 60.0        | —                 | ○         | —            | ○                     |
|                 | 576i        | 15.6         | 50.0        | —                 | ○         | —            | ○                     |
| EDTV            | 576p        | 31.3         | 50.0        | —                 | ○         | —            | ○                     |
|                 | 480p        | 31.5         | 60.0        | —                 | ○         | —            | ○                     |
| HDTV            | 720p        | 37.5         | 50.0        | —                 | ○         | —            | ○                     |
|                 | 720p        | 45.0         | 60.0        | —                 | ○         | —            | ○                     |
|                 | 1080i       | 33.8         | 60.0        | —                 | ○         | —            | ○                     |
|                 | 1080i       | 28.1         | 50.0        | —                 | ○         | —            | ○                     |
|                 | 1080p       | 27.0         | 24.0        | —                 | ○         | —            | ○                     |
|                 | 1080p       | 28.0         | 25.0        | —                 | ○         | —            | ○                     |
|                 | 1080p       | 33.7         | 30.0        | —                 | ○         | —            | ○                     |
|                 | 1080p       | 56.3         | 50.0        | —                 | ○         | —            | ○                     |
|                 | 1080p       | 67.5         | 60.0        | —                 | ○         | —            | ○                     |

O: Frequency supported

—: Frequency not supported


Resolution others than native resolution may be display with uneven size of text or line.

★ The color of  mean Displayable only. (4:3 only)

★ The color of  mean may have a little noise is acceptable, Because video mode sync don't auto adjustment.

★ HDTV timing main check tool is DVD player, VG828 is secondary.

## Projector Dimensions

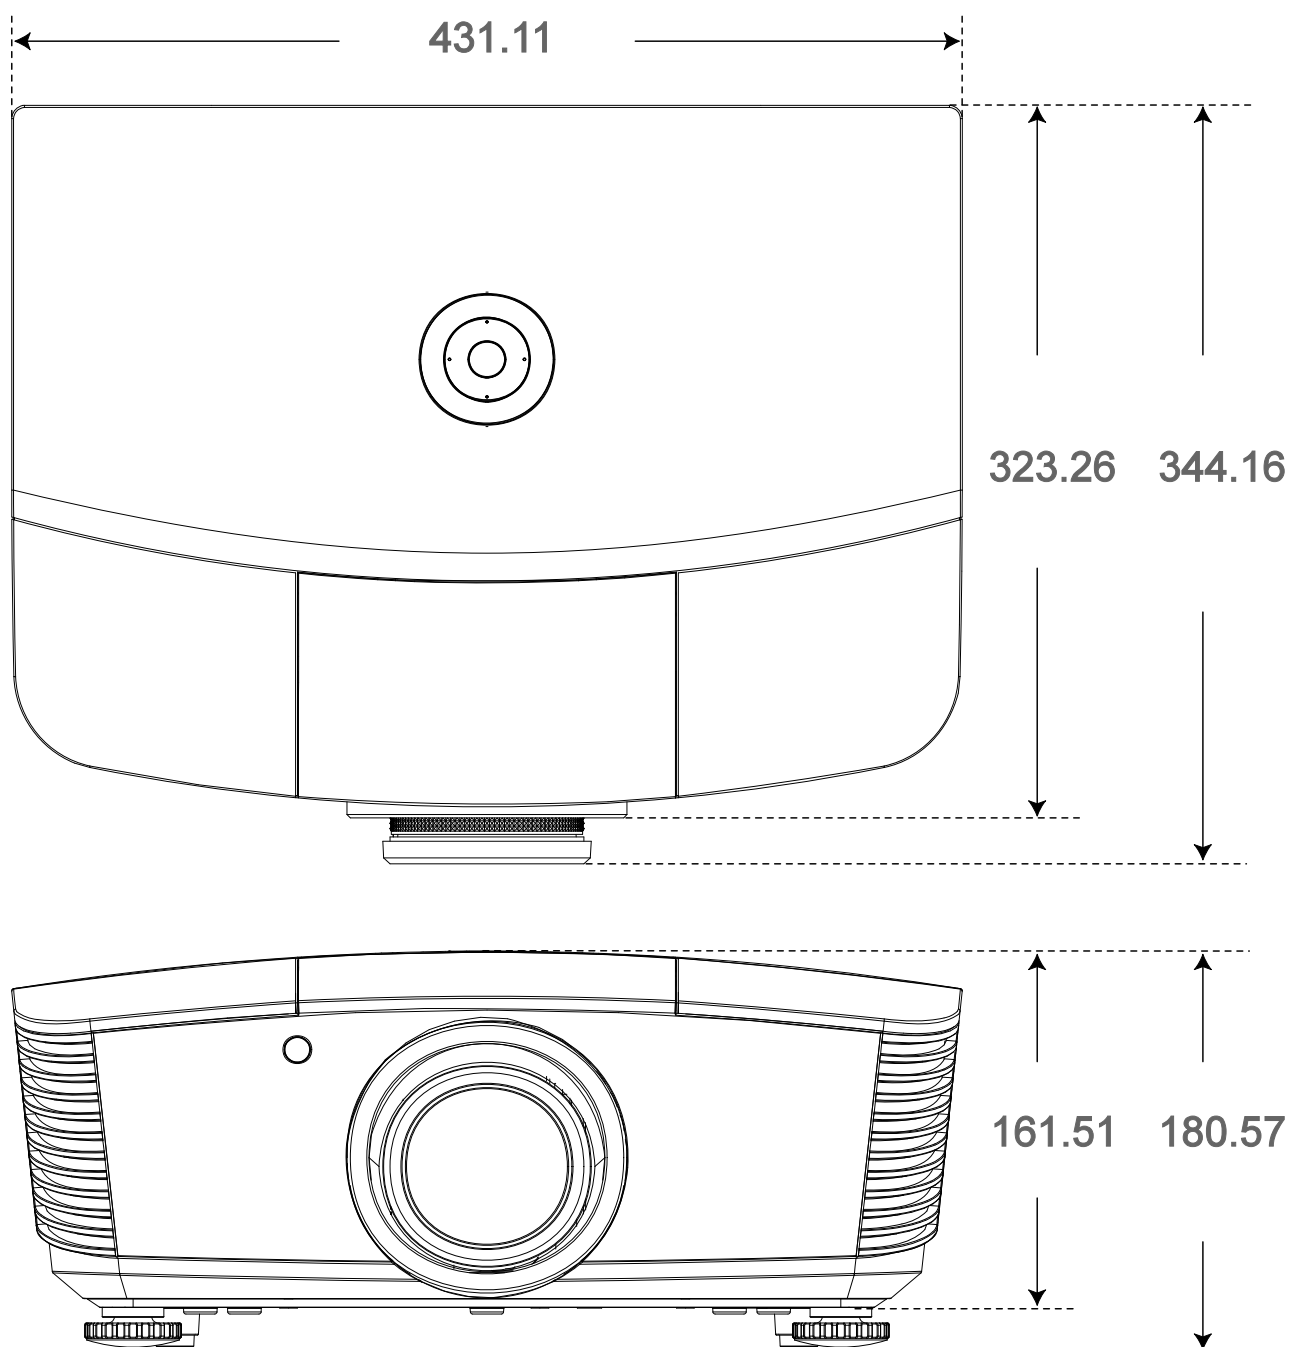

## **REGULATORY COMPLIANCE**

### **FCC Warning**

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his/her own expense.

Changes or modifications not expressly approved by the parties responsible for compliance could void the user's authority to operate the equipment.

### **Canada**

This class B digital apparatus complies with Canadian ICES-003.

### **Safety Certifications**

FCC-B, cUL, UL, CE, C-tick, CCC, KC, CB, PCT



## RS-232C Protocol

## RS232 Setting

|               |      |
|---------------|------|
| Baud rate:    | 9600 |
| Parity check: | None |
| Data bit:     | 8    |
| Stop bit:     | 1    |
| Flow Control  | None |

## Control Command Structure

|       | Header code | Command code | Data code | End code |
|-------|-------------|--------------|-----------|----------|
| HEX   |             | Command      | Data      | 0Dh      |
| ASCII | 'V'         | Command      | Data      | CR       |

## Operation Command

**Note:**

*XX=00-98, projector's ID, XX=99 is for all projectors*

*Return Result P=Pass / F=Fail*

*n: 0:Disable/1: Enable/Vaule(0~9999)*

| Command Group 00 |                                   |                   |                                                  |               |
|------------------|-----------------------------------|-------------------|--------------------------------------------------|---------------|
| ASCII            | HEX                               | Function          | Description                                      | Return Result |
| VXXS0001         | 56h Xh Xh 53h 30h 30h 30h 31h 0Dh | Power On          |                                                  | P/F           |
| VXXS0002         | 56h Xh Xh 53h 30h 30h 30h 32h 0Dh | Power Off         |                                                  | P/F           |
| VXXS0003         | 56h Xh Xh 53h 30h 30h 30h 33h 0Dh | Resync            |                                                  | P/F           |
| VXXG0004         | 56h Xh Xh 47h 30h 30h 30h 34h 0Dh | Get Lamp Hours    |                                                  | Pn/F          |
| VXXS0006         | 56h Xh Xh 53h 30h 30h 30h 36h 0Dh | System Reset      |                                                  | P/F           |
| VXXG0007         | 56h Xh Xh 47h 30h 30h 30h 37h 0Dh | Get System Status | 0:Reset<br>1:Standby<br>2:Operation<br>3:Cooling | Pn/F          |
| VXXG0008         | 56h Xh Xh 47h 30h 30h 30h 38h 0Dh | Get F/W Version   |                                                  | Pn/F          |

| Command Group 01 |                                      |                       |                                                       |              |
|------------------|--------------------------------------|-----------------------|-------------------------------------------------------|--------------|
| ASCII            | HEX                                  | Function              | Description                                           | Return Value |
| VXXG0101         | 56h Xh Xh 47h 30h 31h 30h 31h 0Dh    | Get Brightness        | n=0~100                                               | Pn/F         |
| VXXS0101n        | 56h Xh Xh 53h 30h 31h 30h 31h nh 0Dh | Set Brightness        | n=0~100                                               | P/F          |
| VXXG0102         | 56h Xh Xh 47h 30h 31h 30h 32h 0Dh    | Get Contrast          | n=0~100                                               | Pn/F         |
| VXXS0102n        | 56h Xh Xh 53h 30h 31h 30h 32h nh 0Dh | Set Contrast          | n=0~100                                               | P/F          |
| VXXG0103         | 56h Xh Xh 47h 30h 31h 30h 33h 0Dh    | Get Color             | n=0~100                                               | Pn/F         |
| VXXS0103n        | 56h Xh Xh 53h 30h 31h 30h 33h nh 0Dh | Set Color             | n=0~100                                               | P/F          |
| VXXG0104         | 56h Xh Xh 47h 30h 31h 30h 34h 0Dh    | Get Tint              | n=0~100                                               | Pn/F         |
| VXXS0104n        | 56h Xh Xh 53h 30h 31h 30h 34h nh 0Dh | Set Tint              | n=0~100                                               | P/F          |
| VXXG0105         | 56h Xh Xh 47h 30h 31h 30h 35h 0Dh    | Get Sharpness         | 0~31                                                  | Pn/F         |
| VXXS0105n        | 56h Xh Xh 53h 30h 31h 30h 35h nh 0Dh | Set Sharpness         | 0~31                                                  | P/F          |
| VXXG0106         | 56h Xh Xh 47h 30h 31h 30h 36h 0Dh    | Get Color Temperature | 0:Warm<br>1:Normal<br>2:Cold                          | Pn/F         |
| VXXS0106n        | 56h Xh Xh 53h 30h 31h 30h 36h nh 0Dh | Set Color Temperature | 0:Warm<br>1:Normal<br>2:Cold                          | P/F          |
| VXXG0107         | 56h Xh Xh 47h 30h 31h 30h 37h 0Dh    | Get Gamma             | 0:1.8<br>1:2.0<br>2:2.2<br>3:2.4<br>4:B&W<br>5:Linear | Pn/F         |
| VXXS0107n        | 56h Xh Xh 53h 30h 31h 30h 37h nh 0Dh | Set Gamma             | 0:1.8<br>1:2.0<br>2:2.2<br>3:2.4<br>4:B&W<br>5:Linear | P/F          |

| Command Group 02 |                                   |                  |             |              |
|------------------|-----------------------------------|------------------|-------------|--------------|
| ASCII            | HEX                               | Function         | Description | Return Value |
| VXXS0201         | 56h Xh Xh 53h 30h 32h 30h 31h 0Dh | Select RGB       |             | P/F          |
| VXXS0202         | 56h Xh Xh 53h 30h 32h 30h 32h 0Dh | Select RGB2      |             | P/F          |
| VXXS0203         | 56h Xh Xh 53h 30h 32h 30h 33h 0Dh | Select DVI       |             | P/F          |
| VXXS0204         | 56h Xh Xh 53h 30h 32h 30h 34h 0Dh | Select Video     |             | P/F          |
| VXXS0205         | 56h Xh Xh 53h 30h 32h 30h 35h 0Dh | Select S-Video   |             | P/F          |
| VXXS0206         | 56h Xh Xh 53h 30h 32h 30h 36h 0Dh | Select HDMI      |             | P/F          |
| VXXS0207         | 56h Xh Xh 53h 30h 32h 30h 37h 0Dh | Select BNC       |             | P/F          |
| VXXS0208         | 56h Xh Xh 53h 30h 32h 30h 38h 0Dh | Select Component |             | P/F          |

| Command Group 02 |                                   |                       |                                                                                                                                                  |              |
|------------------|-----------------------------------|-----------------------|--------------------------------------------------------------------------------------------------------------------------------------------------|--------------|
| ASCII            | HEX                               | Function              | Description                                                                                                                                      | Return Value |
| VXXS0209         | 56h Xh Xh 53h 30h 32h 30h 39h 0Dh | Select HDMI 2 (MEDIA) |                                                                                                                                                  | P/F          |
| VXXS0210         | 56h Xh Xh 53h 30h 32h 31h 30h 0Dh | Select Display Port   |                                                                                                                                                  | P/F          |
| VXXS0211         | 56h Xh Xh 53h 30h 32h 31h 31h 0Dh | Select Multi Media    |                                                                                                                                                  | P/F          |
| VXXG0220         | 56h Xh Xh 47h 30h 32h 32h 30h 0Dh | Get Current Source    | Return<br>1:RGB<br>2:RGB2<br>3:DVI<br>4:Video<br>5:S-Video<br>6:HDMI 1<br>7:BNC<br>8:Component<br>9:HDMI 2<br>10:Display Port<br>11:Multi Media. | Pn/F         |

| Command Group 03 |                                      |                  |                                                                   |              |
|------------------|--------------------------------------|------------------|-------------------------------------------------------------------|--------------|
| ASCII            | HEX                                  | Function         | Description                                                       | Return Value |
| VXXG0301         | 56h Xh Xh 47h 30h 33h 30h 31h 0Dh    | Get Scaling      | 0:Fill<br>1:4:3<br>2:16:9<br>3:Letter Box<br>4:Native<br>5:2.35:1 | Pn/F         |
| VXXS0301n        | 56h Xh Xh 53h 30h 33h 30h 31h nh 0Dh | Set Scaling      | 0:Fill<br>1:4:3<br>2:16:9<br>3:Letter Box<br>4:Native<br>5:2.35:1 | P/F          |
| VXXG0302         | 56h Xh Xh 47h 30h 33h 30h 32h 0Dh    | Blank            |                                                                   | Pn/F         |
| VXXS0302n        | 56h Xh Xh 53h 30h 33h 30h 32h nh 0Dh | Blank            |                                                                   | P/F          |
| VXXG0303         | 56h Xh Xh 47h 30h 33h 30h 33h 0Dh    | Auto Keystone On |                                                                   | Pn/F         |
| VXXS0303n        | 56h Xh Xh 53h 30h 33h 30h 33h nh 0Dh | Auto Keystone On |                                                                   | P/F          |
| VXXG0304         | 56h Xh Xh 47h 30h 33h 30h 34h 0Dh    | Freeze On        |                                                                   | Pn/F         |
| VXXS0304n        | 56h Xh Xh 53h 30h 33h 30h 34h nh 0Dh | Freeze On        |                                                                   | P/F          |
| VXXG0305         | 56h Xh Xh 47h 30h 33h 30h 35h 0Dh    | Volume           | n=0~10                                                            | Pn/F         |
| VXXS0305n        | 56h Xh Xh 53h 30h 33h 30h 35h nh 0Dh | Volume           | n=0~10                                                            | P/F          |
| VXXG0306         | 56h Xh Xh 47h 30h 33h 30h 36h 0Dh    | Treble           | n=0~16                                                            | Pn/F         |
| VXXS0306n        | 56h Xh Xh 53h 30h 33h 30h 36h nh 0Dh | Treble           | n=0~16                                                            | P/F          |
| VXXG0307         | 56h Xh Xh 47h 30h 33h 30h 37h 0Dh    | Bass             | n=0~16                                                            | Pn/F         |
| VXXS0307n        | 56h Xh Xh 53h 30h 33h 30h 37h nh 0Dh | Bass             | n=0~16                                                            | P/F          |
| VXXG0308         | 56h Xh Xh 47h 30h 33h 30h 38h 0Dh    | Projection Mode  | 0:Front<br>1:Rear<br>2:Ceiling<br>3:Rear+Ceiling                  | Pn/F         |

| Command Group 03 |                                      |                                  |                                                                         |              |
|------------------|--------------------------------------|----------------------------------|-------------------------------------------------------------------------|--------------|
| ASCII            | HEX                                  | Function                         | Description                                                             | Return Value |
| VXXS0308n        | 56h Xh Xh 53h 30h 33h 30h 38h nh 0Dh | Projection Mode                  | 0:Front<br>1:Rear<br>2:Ceiling<br>3:Rear+Ceiling                        | P/F          |
| VXXG0309         | 56h Xh Xh 47h 30h 33h 30h 39h 0Dh    | Set vertical keystone value      | n=-40~+40                                                               | Pn/F         |
| VXXS0309n        | 56h Xh Xh 53h 30h 33h 30h 39h nh 0Dh | Set vertical keystone value      | n=-40~+40                                                               | P/F          |
| VXXG0310         | 56h Xh Xh 47h 30h 33h 31h 30h 0Dh    | Set horizontal keystone value    | n=-20~+20                                                               | Pn/F         |
| VXXS0310n        | 56h Xh Xh 53h 30h 33h 31h 30h nh 0Dh | Set horizontal keystone value    | n=-20~+20                                                               | P/F          |
| VXXG0311         | 56h Xh Xh 47h 30h 33h 31h 31h 0Dh    | Adjust the zoom                  | n=-10~+10                                                               | Pn/F         |
| VXXS0311n        | 56h Xh Xh 53h 30h 33h 31h 31h nh 0Dh | Adjust the zoom                  | n=-10~+10                                                               | P/F          |
| VXXG0312         | 56h Xh Xh 47h 30h 33h 31h 32h 0Dh    | Adjust the focus                 | n=-20~+20                                                               | Pn/F         |
| VXXS0312n        | 56h Xh Xh 53h 30h 33h 31h 32h nh 0Dh | Adjust the focus                 | n=-20~+20                                                               | P/F          |
| VXXG0313         | 56h Xh Xh 47h 30h 33h 31h 33h 0Dh    | Adjust the vertical lens shift   | n=-20~+20                                                               | Pn/F         |
| VXXS0313n        | 56h Xh Xh 53h 30h 33h 31h 33h nh 0Dh | Adjust the vertical lens shift   | n=-20~+20                                                               | P/F          |
| VXXG0314         | 56h Xh Xh 47h 30h 33h 31h 34h 0Dh    | Adjust the horizontal lens shift | n=-20~+20                                                               | Pn/F         |
| VXXS0314n        | 56h Xh Xh 53h 30h 33h 31h 34h nh 0Dh | Adjust the horizontal lens shift | n=-20~+20                                                               | P/F          |
| VXXG0315         | 56h Xh Xh 47h 30h 33h 31h 35h 0Dh    | 3D                               | 0:Off<br>1:DLP-Link<br>2:IR                                             | Pn/F         |
| VXXS0315n        | 56h Xh Xh 53h 30h 33h 31h 35h nh 0Dh | 3D                               | 0:Off<br>1:DLP-Link<br>2:IR                                             | P/F          |
| VXXG0316         | 56h Xh Xh 47h 30h 33h 31h 36h 0Dh    | 3D Sync Invert                   | 0:Off<br>1:On                                                           | Pn/F         |
| VXXS0316n        | 56h Xh Xh 53h 30h 33h 31h 36h nh 0Dh | 3D Sync Invert                   | 0:Off<br>1:On                                                           | P/F          |
| VXXG0317         | 56h Xh Xh 47h 30h 33h 31h 37h 0Dh    | 3D Format                        | 0:Frame Sequential<br>1:Top/Bottom<br>2:Side-By-Side<br>3:Frame Packing | Pn/F         |
| VXXS0317n        | 56h Xh Xh 53h 30h 33h 31h 37h nh 0Dh | 3D Format                        | 0:Frame Sequential<br>1:Top/Bottom<br>2:Side-By-Side<br>3:Frame Packing | P/F          |
| VXXG0318         | 56h Xh Xh 47h 30h 33h 31h 38h 0Dh    | Tilt Angle Warning               | 0:Off<br>1:On                                                           | Pn/F         |
| VXXS0318         | 56h Xh Xh 53h 30h 33h 31h 38h nh 0Dh | Tilt Angle Warning               | 0:Off<br>1:On                                                           | P/F          |

| Command Group 04 (Remote Control) |                                   |             |             |              |
|-----------------------------------|-----------------------------------|-------------|-------------|--------------|
| ASCII                             | HEX                               | Function    | Description | Return Value |
| VXXS0401                          | 56h Xh Xh 53h 30h 34h 30h 31h 0Dh | UP arrow    |             | P/F          |
| VXXS0402                          | 56h Xh Xh 53h 30h 34h 30h 32h 0Dh | DOWN arrow  |             | P/F          |
| VXXS0403                          | 56h Xh Xh 53h 30h 34h 30h 33h 0Dh | LEFT arrow  |             | P/F          |
| VXXS0404                          | 56h Xh Xh 53h 30h 34h 30h 34h 0Dh | RIGHT arrow |             | P/F          |
| VXXS0405                          | 56h Xh Xh 53h 30h 34h 30h 35h 0Dh | POWER       |             | P/F          |
| VXXS0406                          | 56h Xh Xh 53h 30h 34h 30h 36h 0Dh | EXIT        |             | P/F          |
| VXXS0407                          | 56h Xh Xh 53h 30h 34h 30h 37h 0Dh | INPUT       |             | P/F          |
| VXXS0408                          | 56h Xh Xh 53h 30h 34h 30h 38h 0Dh | AUTO        |             | P/F          |
| VXXS0409                          | 56h Xh Xh 53h 30h 34h 30h 39h 0Dh | KEystone+   |             | P/F          |
| VXXS0410                          | 56h Xh Xh 53h 30h 34h 31h 30h 0Dh | KEystone-   |             | P/F          |
| VXXS0411                          | 56h Xh Xh 53h 30h 34h 31h 31h 0Dh | MENU        |             | P/F          |
| VXXS0412                          | 56h Xh Xh 53h 30h 34h 31h 32h 0Dh | STATUS      |             | P/F          |
| VXXS0413                          | 56h Xh Xh 53h 30h 34h 31h 33h 0Dh | MUTE        |             | P/F          |
| VXXS0414                          | 56h Xh Xh 53h 30h 34h 31h 34h 0Dh | ZOOM+       |             | P/F          |
| VXXS0415                          | 56h Xh Xh 53h 30h 34h 31h 35h 0Dh | ZOOM-       |             | P/F          |
| VXXS0416                          | 56h Xh Xh 53h 30h 34h 31h 36h 0Dh | BLANK       |             | P/F          |
| VXXS0417                          | 56h Xh Xh 53h 30h 34h 31h 37h 0Dh | FREEZE      |             | P/F          |
| VXXS0418                          | 56h Xh Xh 53h 30h 34h 31h 38h 0Dh | VOLUME+     |             | P/F          |
| VXXS0419                          | 56h Xh Xh 53h 30h 34h 31h 39h 0Dh | VOLUME-     |             | P/F          |
| VXXS0420                          | 56h Xh Xh 53h 30h 34h 32h 30h 0Dh | Enter       |             | P/F          |