

K2 Dyno

Controller



Operator Manual
Software Version 2.0



Affiliate with the N.V. KEMA in The Netherlands

CERTIFICATE



Certificate Number: 510040.001

The Quality System of:

**Thomson Inc, and its worldwide Grass Valley division affiliates DBA
GRASS VALLEY**

Headquarters
400 Providence Mine Rd
Nevada City, CA 95959
United States

15655 SW Greystone Ct.
Beaverton, OR 97006
United States

10 Presidential Way
Suite 300
Woburn, MA 01801
United States

Kapittelweg 10
4827 HG Breda
The Netherlands

7140 Baymeadows Way
Ste 101
Jacksonville, FL 32256
United States

2300 So. Decker Lake Blvd.
Salt Lake City, UT 84119
United States

Rue du Clos Courtel
CS 31719
35517 Cesson-Sevigné Cedex
France

1 rue de l'Hautil
Z.I. des Boutries BP 150
78702 Conflans-Sainte
Honorine Cedex
France

Technopole Brest-Iroise
Site de la Pointe du Diable
CS 73808
29238 Brest Cedex 3
France

40 Rue de Bray
2 Rue des Landelles
35510 Cesson Sevigné
France

Spinnereistrasse 5
CH-5300 Turgi
Switzerland

Brunnenweg 9
D-64331 Weiterstadt
Germany

Carl-Benz-Strasse 6-8
67105 Schifferstadt
Germany

Including its implementation, meets the requirements of the standard:

ISO 9001:2008

Scope:

The design, manufacture and support of video and audio hardware and software products and related systems.

This Certificate is valid until: June 14, 2012
This Certificate is valid as of: June 14, 2009
Certified for the first time: June 14, 2000

H. Pierre Sallé
President
KEMA-Registered Quality

The method of operation for quality certification is defined in the KEMA General Terms
And Conditions For Quality And Environmental Management Systems Certifications.
Integral publication of this certificate is allowed.

KEMA-Registered Quality, Inc.
4377 County Line Road
Chalfont, PA 18914
Ph: (215)997-4519
Fax: (215)997-3809

CRT 001 073004

Accredited By:
ANAB

Experience you can trust.



K2 Dyno

Controller

Operator Manual
Software Version 2.0

www.grassvalley.com

071-8752-02
June 2011

USO RESTRITO

Copyright

Copyright © Grass Valley USA, LLC. All rights reserved. Printed in the United States of America. Portions of software © 2000 – 2010, Microsoft Corporation. All rights reserved. This document may not be copied in whole or in part, or otherwise reproduced except as specifically permitted under U.S. copyright law, without the prior written consent of Grass Valley USA, LLC., P.O. Box 59900, Nevada City, California 95959-7900. This product may be covered by one or more U.S. and foreign patents.

Disclaimer

Product options and specifications subject to change without notice. The information in this manual is furnished for informational use only, is subject to change without notice, and should not be construed as a commitment by Grass Valley USA, LLC. Grass Valley USA, LLC. assumes no responsibility or liability for any errors or inaccuracies that may appear in this publication.

U.S. Government Restricted Rights Legend

Use, duplication, or disclosure by the United States Government is subject to restrictions as set forth in subparagraph (c)(1)(ii) of the Rights in Technical Data and Computer Software clause at DFARS 252.277-7013 or in subparagraph c(1) and (2) of the Commercial Computer Software Restricted Rights clause at FAR 52.227-19, as applicable. Manufacturer is Grass Valley USA, LLC., P.O. Box 59900, Nevada City, California 95959-7900 U.S.A.

Trademarks and Logos

Grass Valley, STRATUS, K2, Aurora, Summit, ChannelFlex, Dyno, Solo, ClipStore, Infinity, Turbo, Profile, Profile XP, NetCentral, NewsBrowse, NewsEdit, NewsQ, NewsShare, NewsQ Pro, and Media Manager are either registered trademarks or trademarks of Grass Valley USA, LLC. in the United States and/or other countries. Grass Valley USA, LLC. products are covered by U.S. and foreign patents, issued and pending. Additional information regarding Grass Valley USA, LLC. trademarks and other proprietary rights may be found at www.grassvalley.com. Other trademarks and logos used in this document are either registered trademarks or trademarks of the manufacturers or vendors of the associated products, such as Microsoft® Windows® operating system, Windows Media® player, Internet Explorer® internet browser, and SQL Server™. QuickTime and the QuickTime logo are trademarks or registered trademarks of Apple Computer, Inc., used under license therefrom.



Revision Status

Rev Date	Description
June 16, 2009	Initial release of the K2 Dyno Replay Controller User Manual—86231130
January 29, 2010	Changes for 1.5 — 071-8752-00
April 15, 2010	Changes for 1.6 — 071-8752-01
June 14, 2011	Changes for 2.0 — 071-8752-02

Table of Contents

	Table of Contents	5
	Introduction	9
	Grass Valley Product Support	12
	Web Technical Support	12
	Telephone Support	12
	Waste Electrical and Electronic Equipment Directive	14
Chapter 1	Component Names and Functions	
	Component names and functions of the K2 Dyno Controller	16
	Front panel	16
	Front	17
	Rear	18
	Button names and functions	19
	About Shift button operations	21
	About the VGA Expansion screen	22
Chapter 2	Starting Up and Shutting Down	
	Starting up the K2 Dyno Controller	24
	Starting a new session	24
	Changing the channel configuration for ChannelFlex Suite features	25
	Using an existing session	28
	Channel operation overview	28
	Standard mode	28
	Multichannel independent mode	28
	Multichannel + gang mode	30
	Preview/Program mode	30
	K2 AppCenter Elite ChannelFlex configurations	31
	Shutting down the K2 Dyno Controller	32
	Switching to Maintenance mode (the Windows OS)	32
Chapter 3	Playback	
	Components in the Home screen	36
	Starting and stopping a recording	37
	Live playback	37
	Stopping a recording	37
	Replay	38
	Switching cameras	38
	Switching camera angles	38
	Replaying the same scene with another angle	38
	About play speed	39
	On-air preview mode and Gang mode	40
	Playback operations in the on-air preview mode	40
	Switching the operation target channel in gang mode	42
	Synchronizing playback status for Gang mode channels	42
	Checking the contents of the Recycle bin	44
Chapter 4	Marking Function	
	Components in the Mark screen	46
	Marking and cueing up	47
	Marking and cueing up	47
	About the cursor colors	47
	About multiple selection of items	47
	About marking and scenes	48
	Cueing up an item by specifying it with a number (GoTo)	48
	Entering the metadata logging information	50
	Entering information with the touch panel	50

	Creating your own keyword shortcuts with FKeys.....	50
	Using keyword shortcuts	51
	Trimming	51
Chapter 5	Highlight	
	Components in the Highlight screen	54
	About shot box indications	55
	Storing and removing scenes in a highlight	56
	About shot boxes and slots	56
	Adding a highlight from from the Mark, Playlist, Library or Search screens	56
	Removing items from a highlight bin	57
	Match frame operations from highlights to the record train	57
	Trimming in a highlight	57
	Managing highlight bins	58
	Creating a new bin	58
	Naming specifications for items and bins	60
	Transferring items (SEND function)	60
	Transferring an item to a specified location.....	60
	Checking the transfer progress	61
Chapter 6	Editing a Playlist	
	Components in the Playlist screen.....	64
	Components in the Playlist Edit screen.....	65
	Managing events in a playlist.....	67
	Adding events to a playlist.....	67
	Deleting events from a playlist	68
	Match frame operations from playlists to the record train	68
	Trimming in a playlist	68
	Adding a transition/audio cross fade	70
	Adding auxiliary audio	71
	Inserting silence in audio events (audio fill)	71
	Playing events in a playlist	71
	About the playlist playback pointer.....	71
	Playing a playlist.....	71
	Managing playlists.....	71
	Creating a new playlist	72
	Editing playlist properties	72
	Inserting a fill in a video event	73
	Switching playlists	73
	Storing a playlist to another playlist as an event	73
	Managing playlists in a bin	74
Chapter 7	Library Function	
	Components in the Library screen	76
	Saving and removing items in a library	77
	Saving items in a library	77
	Removing stored scenes in a library	77
	Managing library bins	77
	Creating a new bin	78
	Playing a clip created in another application	78
	Disabling Show Sessions Bins in library	78
	Cueing up an item by specifying it with a number (GoTo)	78
Chapter 8	Search Function	
	Components in the Search screen.....	82
	The search result screen.....	82
	Entering search criteria	83

Chapter 9	Settings	
	Controller settings	86
	Record train length allocation settings	86
	User settings	87
	Panel settings	88
	Clip settings	89
	Effects settings	90
	Network settings	91
	Mix effect settings	92
	Configuring the T-Bar settings: default and alternate	93
	Configuring the export settings and destination	94
	Audio level settings	96
	Setting the Auxiliary Audio	97
	Exporting a log	99
	Checking the version	99
	Deleting a session	99
	To delete all sessions shown in the list, press the Shift button and touch Delete All	99
	Editing and storing keywords	99
	Editing keywords	100
	Importing/Exporting	103
	Importing	103
	Exporting	103
Chapter 10	Appendix	
	Button Operation	106
	Restrictions on the LoopRec setting	108
	Glossary	109
	Index	113

USO RESTRITO

Introduction

Summary

The K2™ Dyno™ Controller is a controller that is designed to provide fast and accurate operations controlling a K2 Summit™ Production Client or K2 Solo™ Media Server. Operations include searching, replaying video or scenes, storing highlights, and creating playlists. The K2 Dyno Controller can control channels configured for ChannelFlex™ Suite features on the K2 system.

K2 Dyno Controller features are as follows:

- Its simple system configuration enables comfortable operations even in a limited space.
- The touch panel allows for intuitive operations. For operations that require more accuracy, you can operate the controller using only the physical buttons.
- Connecting a keyboard, mouse, and second display allows you to set up a more comfortable operating environment.
- All of the edited data (excluding Mark and Scene) is saved in the K2 Summit Production Client. Therefore, you can continue your operation without losing your data in the unlikely event of a malfunction in the K2 Dyno Controller.
- The settings of the K2 Dyno Controller, that you set in the Config screen, can be exported and imported to another K2 Dyno Controller, which enables you to set up the same settings easily.
- The controller provides easy mix effect editing. A dissolve effect can be applied to a scene switch just by touching the panel. In addition, this can be performed using only 1 channel.

How to read this manual

This Operator Manual contains the operation procedures to use the K2 Dyno Controller, concerning the editing functions that are often used in a live event broadcast.

Operations can be performed intuitively with the touch panel and buttons. Operation procedures with the touch panel are mainly described; however, button operations are mentioned together when the same operations can be performed with the buttons. You can also perform important operations with the physical buttons.

In addition, if there is enough room in your editing space, a mouse, keyboard, numerical keypad, or second display can be connected to the controller for comfortable operations that suit your preferences.

This Operator Manual consists of the following:

[Chapter 1, Component Names and Functions:](#)

It describes the names and functions of the components and buttons on the K2 Dyno Controller. For more detailed description about the individual functions, see the referenced section.

[Chapter 2, Starting Up and Shutting Down:](#)

It describes how to start up and shut down the K2 Dyno Controller.

[Chapter 3, Playback:](#)

It describes the components in the Home screen and basic operations, such as live playbacks or replays.

[Chapter 4, Marking Function:](#)

It describes operations to mark a point on the record train and cue it up, to record In and Out points to create a scene, and to trim a scene. It also explains operations to enter logging information, such as names, keywords or ratings, to the marks.

[Chapter 5, Highlight:](#)

It describes operations such as storing an important scene as a highlight and managing highlight items in a bin.

[Chapter 6, Editing a Playlist:](#)

It describes editing operations such as creating a playlist, trimming an event, adding effects, and using the audio split.

[Chapter 7, Library Function:](#)

Items saved in a library will remain without being deleted even if a session is deleted. It describes operations such as storing items to a library and managing a library.

[Chapter 8, Search Function:](#)

It describes how to search items.

[Chapter 9, Settings:](#)

It describes information such as various settings of the K2 Dyno Controller and import/export of your data.

[Chapter 10, Appendix:](#)

It provides the operation list when pressing the buttons and the restrictions on the LoopRec setting.

Getting more information

The following sections help you find the information you need in product manuals and elsewhere.

K2 documentation

Read the following descriptions to locate the information you need.

K2 Dyno Replay System Quick Start Guide — You receive this guide in the product packaging with your K2 Dyno Replay Controller. The Quick Start Guide provides step-by-step installation instructions for basic installation and operation of the replay system, which includes the K2 Dyno Replay Controller and the K2 Summit Production Client.

Release Notes — The release notes contain the latest information about the software shipped on your system. There are K2 Release Notes and K2 Dyno Replay Controller Release Notes. The information in release notes includes software upgrade instructions, software specifications and requirements, feature changes from the previous releases, and any known problems.

K2 Documentation Set — Except for the release notes, the full set of support documentation, including this manual, is available on the Documentation Set zip file that you can download from the website. The K2 Documentation Set includes the following documents:

- **K2 Dyno Replay System Quick Start Guide** — As described above.
- **K2 Dyno Operator Manual** — Describes K2 Dyno applications and provides instructions for configuring and operating the product.
- **K2 Dyno Service Manual** — Contains information on servicing and maintenance.
- **K2 Dyno Installation Manual** — Provides instructions for installing a K2 Dyno Replay System using a K2 Solo Media Server or a K2 Summit Production Client that is not part of a Dyno-Pack and has not been previously controlled by a K2 Dyno Controller.
- **K2 Summit Production Client Quick Start Guide** — The Quick Start Guide provides step-by-step installation instructions for basic installation and operation of K2 systems, including recording and playing clips.
- **K2 AppCenter User Guide** — Describes K2 applications and provides instructions for configuring and operating the product.
- **K2 System Guide** — Contains the product specifications and step-by-step instructions for modifying system settings.
- **K2 Cabling Guide** — Contains diagrams for cabling the devices of the K2 Storage Area Network.
- **K2 SAN Installation and Service Manual** — Contains installation, configuration, and maintenance procedures for shared storage options.
- **RAID Instruction Manuals** — There is an Instruction Manual for each type of RAID storage device that can be a part of a K2 system. These manuals contain procedures for configuring and servicing the device.
- **K2 Client Service Manual** — Contains information on servicing and maintenance.

NetCentral documentation

The NetCentral product has its own documentation set, described as follows:

- **NetCentral Quick Start Guide** — Provides an overview of the installation process to quickly set up and run NetCentral.
- **NetCentral Installation Guide** — Identifies requirements and procedures to correctly set up servers and devices, as well as provides detailed instructions to install and

configure NetCentral software.

- **NetCentral User Guide** — Describes how to use the NetCentral Manager to monitor devices.
- **NetCentral Help** — From the NetCentral interface access on-line help. Select **Help | NetCentral Help Topics**.

Also find information about monitoring a specific product in that product’s manuals.

Grass Valley Web Site

This public Web site contains all the latest manuals and documentation, and additional support information. Use the following URL.

<http://www.grassvalley.com>.

Grass Valley Product Support

To get technical assistance, check on the status of a question, or to report a new issues, contact Grass Valley Product Support via e-mail, the Web, or by phone or fax.

Web Technical Support

To access support information on the Web, visit the product support Web page on the Grass Valley Web site. You can download software or find solutions to problems.

World Wide Web:<http://www.grassvalley.com/support/>

Technical Support E-mail Address:gvgtechsupport@grassvalley.com

Grass Valley Knowledge Base:<http://grassvalley.novosolutions.net/>

In the Knowledge Base you can search by topic, search by product, or browse the Table of Contents to find Frequently Asked Questions (FAQ).

Telephone Support

Use the following information to contact Product Support by phone.

International Support Centers

Our international support centers are available 24 hours a day, 7 days a week.

Support Center	Toll free	In country
France	+800 80 80 20 20	+33 1 48 25 20 20
United States	+1 800 547 8949	+1 530 478 4148

Authorized Local Support Representative

A local support representative may be available in your country. To locate a support center during normal local business hours, refer to the following list. This list is regularly updated on the website for Grass Valley Product Support

(<http://www.grassvalley.com/support/contact/phone/>)

After-hours local phone support is also available for warranty and contract customers.

Region	Country	Telephone
Asia	China	+86 10 5883 7575
	Hong Kong, Taiwan, Korea, Macau	+852 2531 3058
	Japan	+81 3 6848 5561
	Southeast Asia - Malaysia	+603 7492 3303
	Southeast Asia - Singapore	+65 6379 1313
	India	+91 22 676 10324
Pacific	Australia	1 300 721 495
	New Zealand	0800 846 676
	For callers outside Australia or New Zealand	+61 3 8540 3650
Central America, South America	All	+55 11 5509 3440
North America	North America, Mexico, Caribbean	+1 800 547 8949; +1 530 478 4148
Europe	UK, Ireland, Israel	+44 1189 230 499
	Benelux – Netherlands	+31 (0) 35 62 38 421
	Benelux – Belgium	+32 (0) 2 334 90 30
	France	+800 80 80 20 20; +33 1 48 25 20 20
	Germany, Austria, Eastern Europe	+49 6150 104 444
	Belarus, Russia, Tadjikistan, Ukraine, Uzbekistan	+7 495 258 09 20
	Northern Europe	+45 404 72 237
	Southern Europe – Italy	+39 06 87 20 35 28
	Southern Europe – Spain	+34 91 512 03 50
Middle East, Near East, Africa	Middle East	+971 4 299 64 40
	Near East and Africa	+800 80 80 20 20; +33 1 48 25 20 20

Waste Electrical and Electronic Equipment Directive




END-OF-LIFE PRODUCT RECYCLING NOTICE

Grass Valley's innovation and excellence in product design also extends to the programs we've established to manage the recycling of our products. Grass Valley has developed a comprehensive end-of-life product take back program for recycle or disposal of end-of-life products. Our program meets the requirements of the European Union's WEEE Directive, the United States Environmental Protection Agency, and U.S. state and local agencies.

Grass Valley's end-of-life product take back program assures proper disposal by use of Best Available Technology. This program accepts any Grass Valley branded equipment. Upon request, a Certificate of Recycling or a Certificate of Destruction, depending on the ultimate disposition of the product, can be sent to the requester.

Grass Valley will be responsible for all costs associated with recycling and disposal, including freight. However, you are responsible for the removal of the equipment from your facility and packing the equipment to make it ready for pickup.

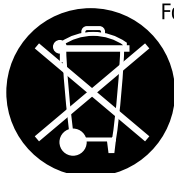

For further information on the Grass Valley product take back system please contact Grass Valley at + 800 80 80 20 20 or +33 1 48 25 20 20 from most other countries. In the U.S. and Canada please call 800-547-8949, and ask to be connected to the EH&S Department. Additional information concerning the program can be found at: www.grassvalley.com/about/environmental-policy

001187401


Component Names and Functions

This chapter consists of the following:

- "Component names and functions of the K2 Dyno Controller" on page 16
- "Button names and functions" on page 19
- "About the VGA Expansion screen" on page 22


Component names and functions of the K2 Dyno Controller

Front panel

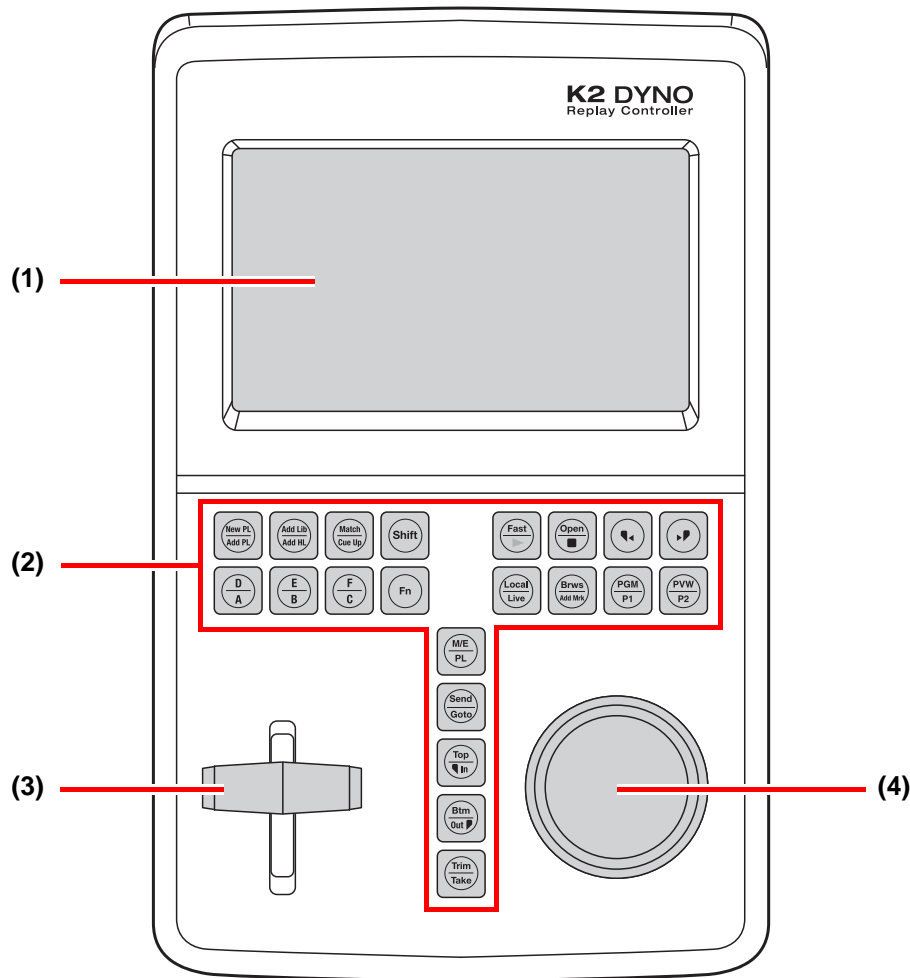


No.	Name	Function
(1)	Touch panel	You can touch the screen directly for data selections or operations.
(2)	Operation button	You can perform many of the more common operations quickly with these push buttons. For descriptions of each button, see " Button names and functions " on page 19.
(3)	T-Bar	A bar for to control playback speed. The 0% and 100% positions of bar operations can be fine-tuned.
(4)	Jog knob	A knob for frame forward, frame back, fast forward, and rewind operations. The Jog speed and the idle of the Jog knob can be set to suit your preferences. For information on setting the Jog knob speed, see " Panel settings " on page 88.

Front

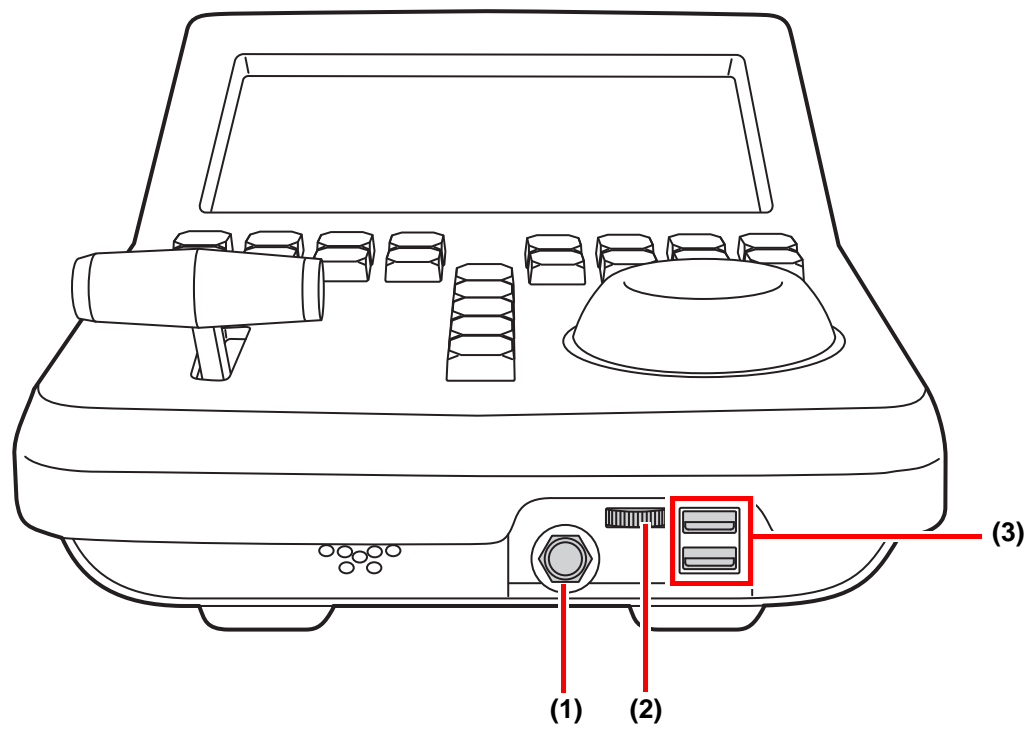

No.	Name	Function
(1)	Stereo jack	Connects to a device such as headphones.
(2)	Volume control	Adjusts the volume.
(3)	USB port	Connects to a keyboard, mouse, or USB storage device.

Rear

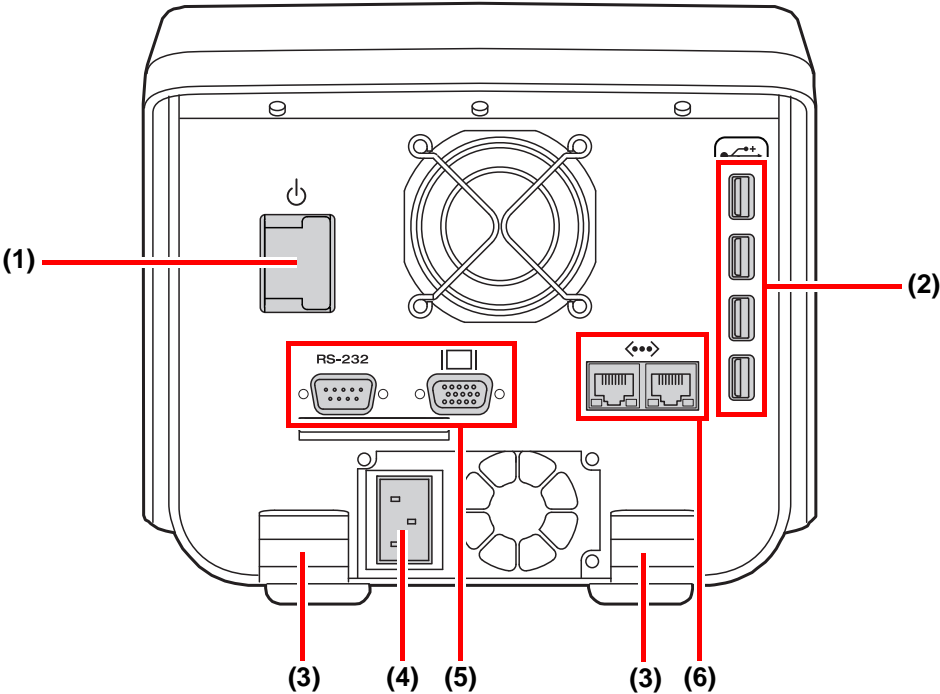


No.	Name	Function
(1)	Power button	Turns the power to the K2 Dyno Controller on or off.
(2)	USB port	Connects to a keyboard, mouse, or USB storage device.
(3)	Cable hook	You can hook cables such as power cables and VGA cables to prevent them from being disconnected inadvertently.
(4)	Power connector	For connecting to the power supply.
(5)	D-sub 15 pin connector	Connects to a second display. Displays with 1024 x 768 resolution or more are supported. For more information about the components in the expansion screen, see "Connecting a Second Display" on page 113 .
(6)	GigE port	Connects the K2 Dyno Controller to the K2 Summit Production Client via Gigabit Ethernet.

NOTE: Be sure to use the cables, such as power cable and other cables, included in this product.

Button names and functions

Some buttons have function names at the top and bottom. To use a bottom function, just press the desired button. To use a top function (functions indicated by the shaded area in the table), press the **Shift** button, and then press the desired button. For more information on how to use the **Shift** button, see ["About Shift button operations" on page 21.](#)

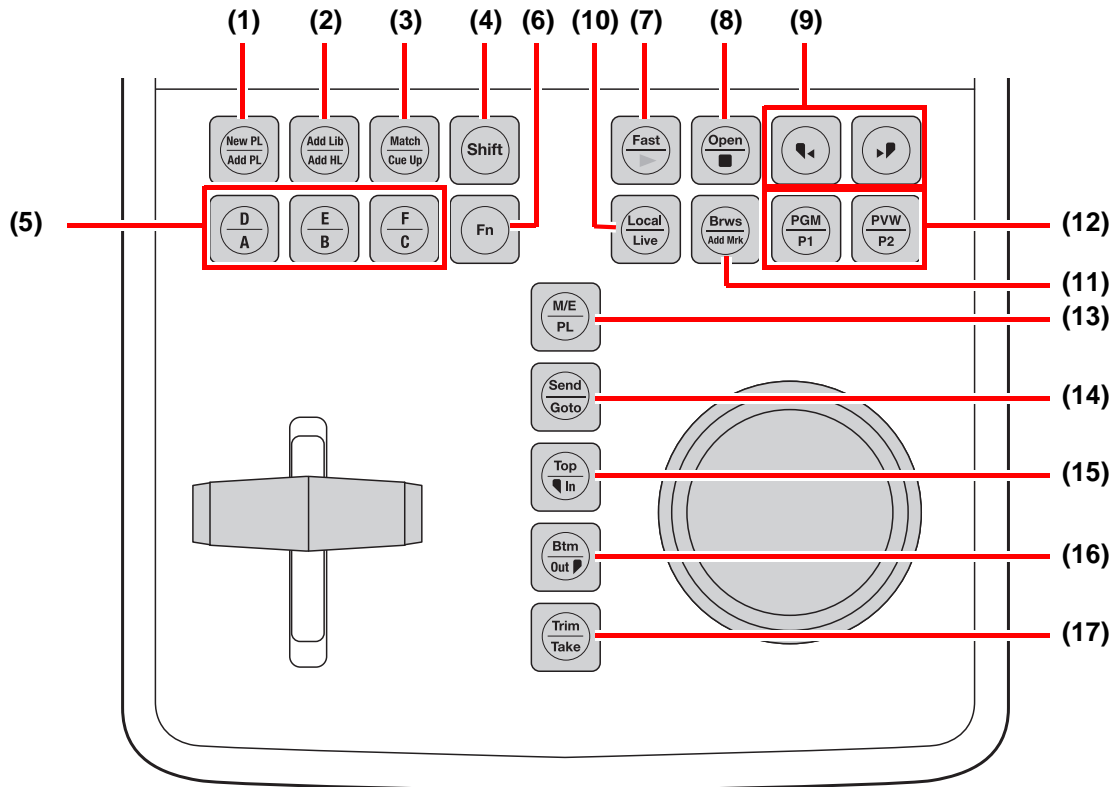

No.	Name	Function
(1)	New PL	Creates and displays a new playlist.
	Add PL	Stores the selected item to a playlist. When a bin is selected, all the items in the bin are stored to a playlist.
(2)	Add Lib	Stores the selected item to a library. When a bin is selected, all the items in the bin are stored to a library.
	Add HL	Stores the selected item to a highlight. When a bin is selected, all the items in the bin are stored to a highlight.
(3)	Match	When the playback pointer is in a highlight or playlist, press the Match button to move the playback pointer to the position with the same timecode on the record train for the current angle.
	Cue Up	Cues up to the selected item.
(4)	Shift	Press this button to perform the functions indicated at the top of the buttons, or to perform the functions indicated at the top of the menu panels that are displayed at the bottom of the touch panel. For more information on how to use the Shift button, see "About Shift button operations" on page 21.

No.	Name	Function
(5)	Camera selection	Switches the camera angles, which are assigned to A, B, C, D, E, or F.
(6)	Fn	Turns to the function mode. If you press the Fn button and then press a corresponding button, the button action that is performed may be different from the normal one. For more information, see the operation instructions in each chapter.
(7)	Fast	Switches to the Fast Jog mode. This is toggle switch, so it turns off if you press this button when it is in Fast mode. The speed for the fast forward and rewind operations using the Jog knob becomes faster. The Previous/Next buttons light up in green while in the Fast Jog mode. You can also set the controller so that the normal Jog mode and Fast Jog mode are switched automatically. For more information, see "Fast-Jog multiplier" on page 88
	Play	Plays the item with the 100% speed.
(8)	Open	Press this while an item is selected to create a new playlist and stores the item to the playlist. Press this while a bin or playlist is selected to open the bin or playlist.
	Stop	Stops the playback.
(9)	Previous/Next	Moves the playback pointer. The action after the move depends on the current condition. For example, if you press this while cueing up to an item, the controller cues up to the In point of the previous/next item. If you press this during an item playback, the controller plays the previous/next item after the playback pointer moves to the In point of the previous/next item.
(10)	Local	You are controlling your replay in still, slow motion, or normal playout mode. The recording of the live video continues while you are in this mode.
	Live	You are watching the live video of the selected channel being recorded.
(11)	Brws	You can browse remote record trains.
	Add Mrk	Adds a mark on the record train.
(12)	PGM/PVW	Switches to the on-air preview or multi-channel mode. For more information, see "On-air preview mode and Gang mode" on page 40 .
	P1/P2	While in the on-air preview mode, it switches the operation target channel. If you press the P1 button, the program channel (the channel for an on-air broadcast) becomes the target for operations. If you press the P2 button, the preview channel becomes the target for operations. While in the multi-channel Gang mode, it switches the operation target to the channel assigned to the P1/P2 button. In addition, pressing the P1 and P2 buttons at the same time while in the multi-channel mode switches to the Gang mode. For more information, see "On-air preview mode and Gang mode" on page 40 .

No.	Name	Function
(13)	M/E	Switches to the Flying M/E mode. Effects are added when switching angles or changing cue up points during a replay of an item.
	PL	Displays the Playlist screen. Press this in the Playlist screen to perform the following: if a playback pointer is in the playlist, the controller cues up to the beginning of the playlist, and if playback pointer is not in the playlist, the playback pointer moves to the point where the previous playlist stopped its playback.
(14)	Send	Copies the selected item to the destination that you set in "Network" on the Config screen. For more information, see "Transferring items (SEND function)" on page 60 .
	Goto	Cues up to an item by entering a number.
(15)	Top	Press this during an item (Mark, Scene, Highlight, Event, and Library) playback to cue up to the beginning (or the In point, depending on the item) of the item retaining the ongoing playback.
	In	Adds the In point of a mark/scene, or changes the In point when trimming a highlight/event.
(16)	Btm	Press this during an item (Mark, Scene, Highlight, Event, and Library) playback to cue up to the end of the item retaining the ongoing playback.
	Out	Adds the Out point of a mark/scene, or changes the Out point when trimming a highlight/event.
(17)	Trim	Switches to the trim mode.
	Take	During a playlist playback, press this button to begin the playback of the next event. In a value entry screen, press this to confirm your entry and return to the previous screen. While in the trim mode, it exits the trim mode. If you press this during the on-air preview mode, the item that is put into standby or being played in the preview channel will be loaded and played in the program channel. For more information about the on-air preview mode, see "On-air preview mode and Gang mode" on page 40 .


About Shift button operations

When a keyboard or display is connected to the K2 Dyno Controller, you can use the [Shift] key on the keyboard or the **Shift** button in the expansion screen instead of pressing the **Shift** button on the controller; however, the operations are different for each case.

- For operations with the **Shift** button on the controller:
If you press the **Shift** button once, it illuminates in yellow and the top functions of the controller buttons and panel menu are enabled for only one time. After that, if you press any button or menu panel you want to perform, the **Shift** button turns off.
- For operations with the [Shift] key on the keyboard:
Press the button or menu panel you want to perform while holding down the [Shift] key. While holding down the [Shift] key, the top functions of the controller buttons and panel menu are enabled.
- For operations with the **Shift** button in the expansion screen:
If you press the **Shift** button, the button turns light blue. After that, press the button or menu panel you want to perform. In the expansion screen, if the **Shift** button is pressed once, the top functions of the controller buttons and panel menu are enabled until the **Shift** button is pressed again.

About the VGA Expansion screen

An external VGA Expansion monitor, with 1280 x 1024 resolution or more, can be attached to the K2 Dyno system. Apart from configuration settings, the VGA monitor displays the same menus as the K2 Dyno Controller touch screen. You can perform many of the operations that you perform in the K2 Dyno Controller using only the expansion screen.

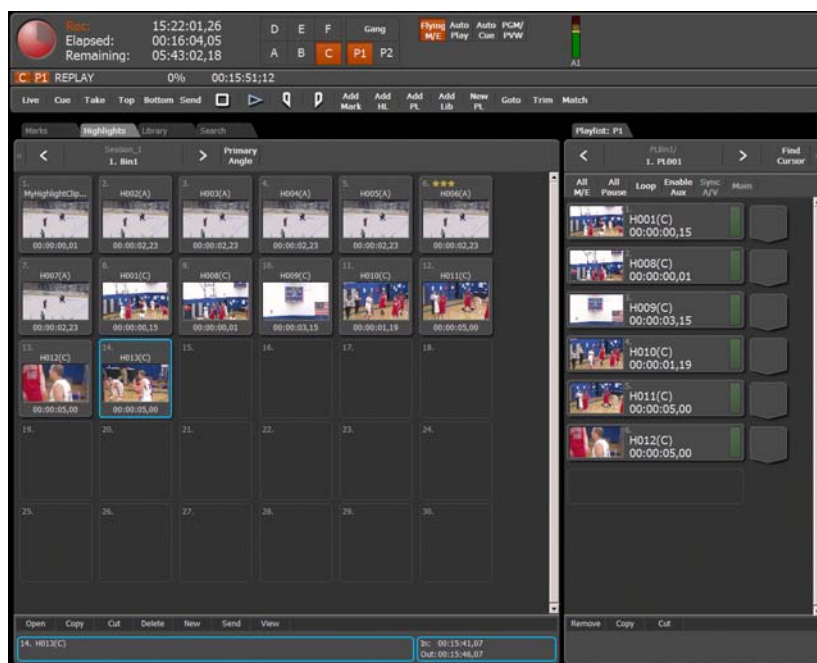

Any changes you make are reflected in the screen that you are currently using. When you use the Expansion screen, the Expansion screen is updated to reflect any changes you made. When you use the Dyno Controller touch screen, any changes you make are reflected in the touch screen.

Starting Up and Shutting Down

This chapter consists of the following:

- "Starting up the K2 Dyno Controller" on page 24
- "Starting a new session" on page 24
- "Changing the channel configuration for ChannelFlex Suite features" on page 25
- "Using an existing session" on page 28
- "Channel operation overview" on page 28
- "Shutting down the K2 Dyno Controller" on page 32
- "Switching to Maintenance mode (the Windows OS)" on page 32

Starting up the K2 Dyno Controller

Before starting up the K2 Dyno Controller, turn on the K2 Summit Production Client to use and start the application software in the Summit.

1. Turn on the K2 Summit Production Client.
2. Log in to the Summit:
 - Username: administrator
 - Password: adminK2
3. Start up AppCenter on the Summit. Log in with the same user name and password as in step 2.
4. Turn on the K2 Dyno Controller. The power button is located on the rear side of the controller.

The Dyno software starts up automatically.
5. If starting up the controller for the first time, proceed to [“Starting a new session”](#).
6. If opening an existing session, proceed to ["Using an existing session" on page 28](#).

Starting a new session

When you start up the K2 Dyno Controller for the first time, you need to perform the initial settings.

Use this procedure if controlling standard K2 system channels with the K2 Dyno Replay Controller.

NOTE: If controlling Multi-Cam, 3D/Video+Key, or Super Slo-Mo channels on the K2 Summit Production Client or K2 Solo Media Server, use the procedure ["Changing the channel configuration for ChannelFlex Suite features" on page 25](#).

1. Start up the K2 Dyno Controller.
2. Select a K2 Summit Client from the Server list and touch **Connect** or **Reconnect**.

NOTE: *If a Summit is running a version of software incompatible with the K2 Dyno 2.0 software, this is indicated next to the Summit name; you cannot connect to that Summit.*

3. Touch **New Session**.
4. Select channels. By default, a new session is created with the same channel configuration as the last session.
5. If desired, touch **Name** to enter a name for the session.
6. Touch **Start**.

The Dyno software Home screen opens. If you have the (optional) expansion screen connected, the Home screen displays there as well.

Changing the channel configuration for ChannelFlex Suite features


When you start up the K2 Dyno Controller for the first time or when you want to create a session changing the previous channel configuration, you need to perform the initial settings at the startup screen. Once the initial settings are set, it is not necessary to set them the next time.

Use this procedure if controlling Multi-Cam, 3D/Video+Key, or Super Slo-Mo channels on the K2 Summit Production Client or K2 Solo Media Server. These features are a part of the ChannelFlex Suite on the K2 system.

If controlling standard channels with the K2 Dyno Replay Controller, use the procedure ["Starting a new session" on page 24](#).

You can specify other various settings for the K2 Dyno Controller by touching **Config**. For more information about those settings, see ["Settings" on page 85](#).

1. Verify that the K2 Summit Production Client or K2 Solo Media Server support ChannelFlex Suite features. Requirements are as follows:
 - K2 system software version 7.4 or higher
 - AppCenter Elite license installed on the K2 system
 - For Super Slo-Mo, HD license installed on the K2 system
2. Configure the K2 Summit Production Client or K2 Solo Media Server for the ChannelFlex Suite channel type that you intend to control with your K2 Dyno Replay Controller. From AppCenter, open Configuration Manager and assign the channel type. The following example illustrates Multi-Cam Recorder.

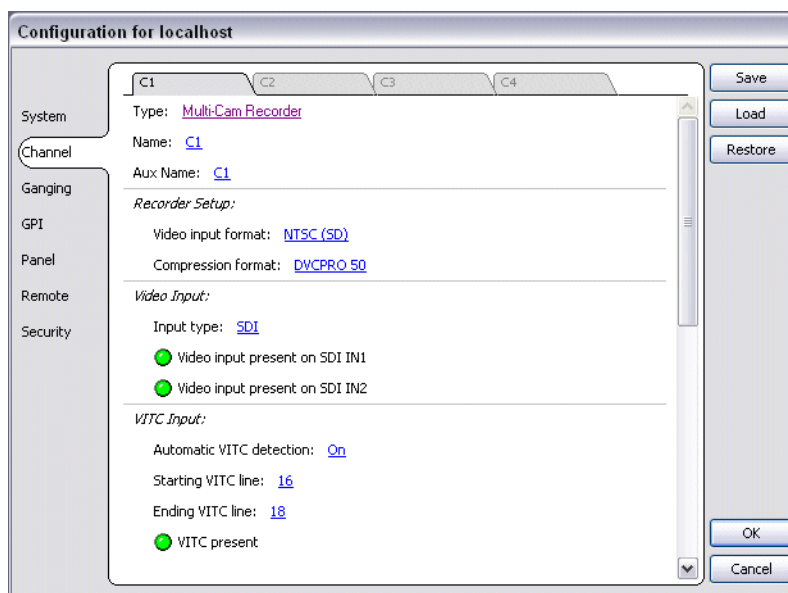

Select one of the following:

- 3D/Video+Key Player

- 3D/Video+Key Recorder
- Multi-Cam Recorder
- Super Slo-Mo x2 Recorder
- Super Slo-Mo x3 Recorder

Refer to the *K2 AppCenter User Manual* for complete procedures.

1. Start up the K2 Dyno Controller.

For information on how to start up the controller, see "[Starting up the K2 Dyno Controller](#)" on page 24.

2. Select the Summit you want to use. Only the online Summit(s) are displayed.

3. Select **Connect** or **Reconnect**.

The K2 Dyno Controller detects the channel type currently configured for each channel on the K2 Summit/Solo and provides the corresponding selections.

4. Assign a channel's use by touching the rectangular panels for each channel from C1 to C4 as follows:

If the K2 system channel type is...	Select the following:
3D/Video+Key Recorder	Single Rec
3D/Video+Key Player	Player
Multi-Cam Recorder	Multi Rec
Super Slo-Mo x2 Recorder	S.S.M x2
Super Slo-Mo x3 Recorder	S.S.M x3

The assigned camera angle is displayed for a channel that is set as a record channel.

5. If you assigned channels as Single Rec (3D/Video+Key Recorder) channels or as Super Slo-Mo channels, set one camera angle for each of those channels.
6. If you assigned channels as Multi-Rec (Multi-Cam) channels, set two camera angles for each of those channels.

NOTE: *There are several important restrictions on the channel that is set as Recorder depending on the video format in use. Check the release notes of the K2 Summit Production Client and K2 Dyno Controller before using the product.*

7. For the player to be used for an on-air live broadcast, turn on **P1/PGM**.
8. For the player to be used for a preview, turn on **P2/PVW**.
9. When finished, touch **New Session**.

A session is created with the channel configuration you set.


About the record train and LoopRec setting

The record train is a method for storing audio/video source data recorded on the K2 Summit Production Client. A single Summit has multiple sessions in which Summit starts/stops recording. This recording data is called a record train. A record train contains recording data from different camera angles.


You can select the recording mode from Normal Rec and LoopRec from the Home screen after starting a session. Recording stops in the normal Rec mode when there is no more available space on the Summit. Recorded audio/video source data is not overwritten. In contrast, when the recording data exceeds the capacity of the record train in the LoopRec mode, the oldest data (chronologically) is overwritten by new data.

There are several restrictions when the LoopRec setting is turned on. For more information, see ["Restrictions on the LoopRec setting" on page 108](#).

- Normal Rec mode (If the LoopRec setting is turned off)
Recording will be continued until running out of available space on the Summit. Recording will be stopped when running out of recording space, so the oldest data will not be overwritten. (Train length of the record train cannot be set in this mode.)

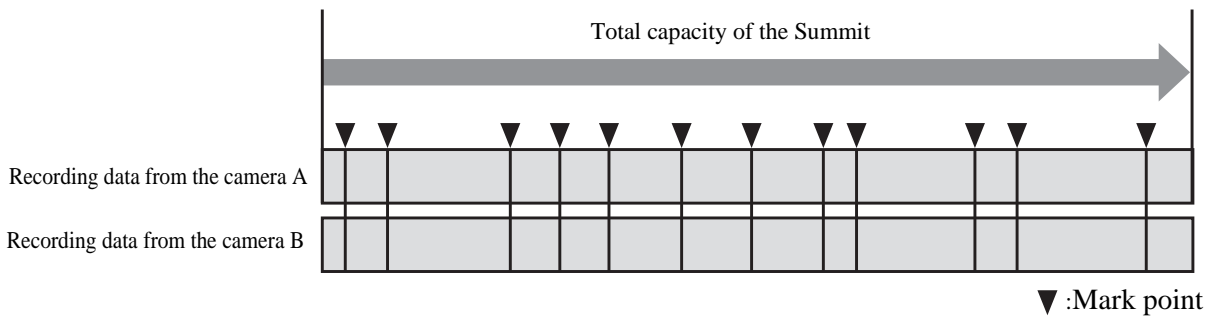

- LoopRec mode (If the LoopRec setting is turned on)
Once the recording data exceeds the train length of the record train, the oldest data including recorded video or mark points will be overwritten in chronological order to record new data.

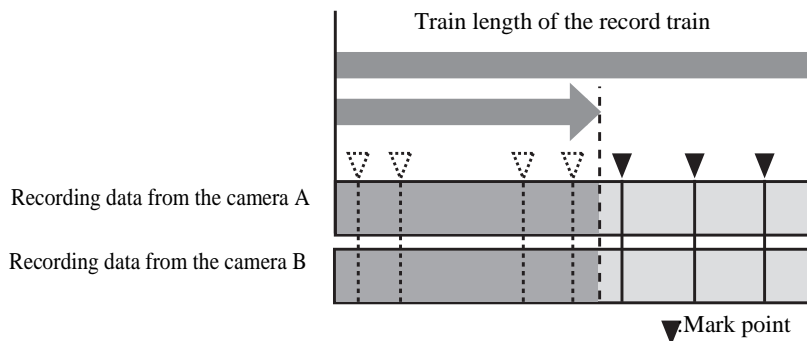

Using an existing session

You can share a session that is currently being broadcasted through the connected Summit. You can connect two controllers to a single Summit: one for playback control operations and the other for editing highlights or playlist.

NOTE: Two controllers joining the same session share the same channel(s).

You can use a session that has been created previously.


1. Start up the K2 Dyno Controller.
 - For information on how to start up the controller, see ["Starting up the K2 Dyno Controller" on page 24](#).
2. From the Session list, touch the session you want to use and press **Share**.

Channel operation overview

The following sections explain channel operation modes.

Standard mode


3 Record, 1 Playback/PGM

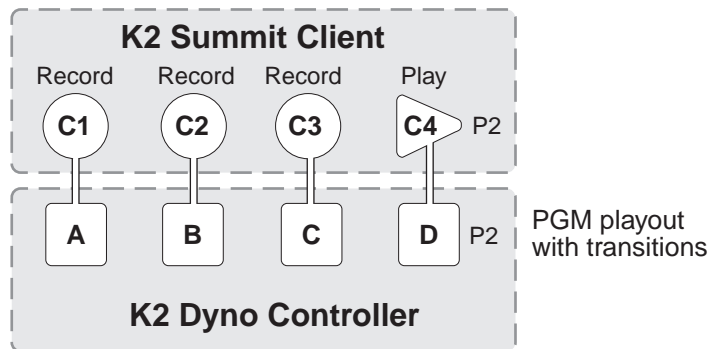

- The 3 Record and 1 Playback channel set-up is done when the session is configured at start-up screen
- A,B,C angles can be selected for playback on the D (P2) channel
- In this mode the P1 and P2 Player channel always illuminates red.

Multichannel independent mode


2 Record, 2 Playback. Also known as “A-Side, B-Side”.

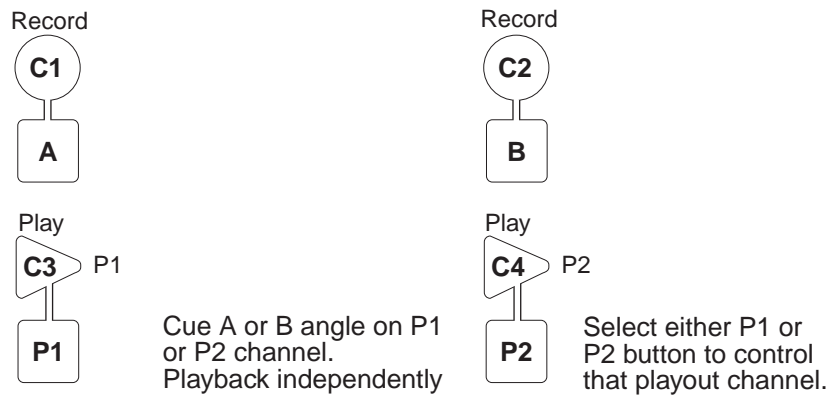

- The 2 Record and 2 Playback channel set-up is done when the session is configured at start-up screen
- A,B, angles can be selected for playback on P1 or P2
- P1 and P2 playout channel content can be “swapped” by pressing buttons Fn then Take.

Multichannel + gang mode


2 Record, 2 Playback. Player channels in sync.

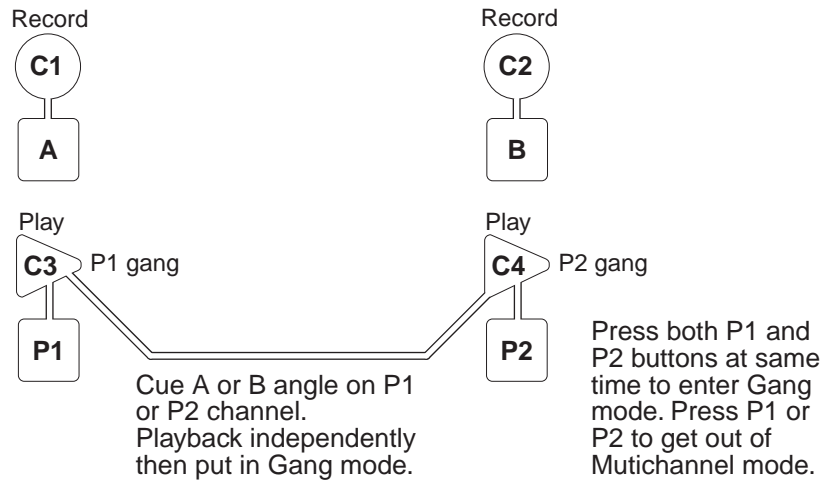

- The 2 Record and 2 Playback channel set-up is done when the session is configured at start-up screen
- A,B, angles can be selected for playback on the P1, (C3) or P2 (C4)
- Gang operation is based on Independent mode with selection of both channels and turning on gang

Preview/Program mode

2 Record, 1 Playback/PGM, 1 Preview.

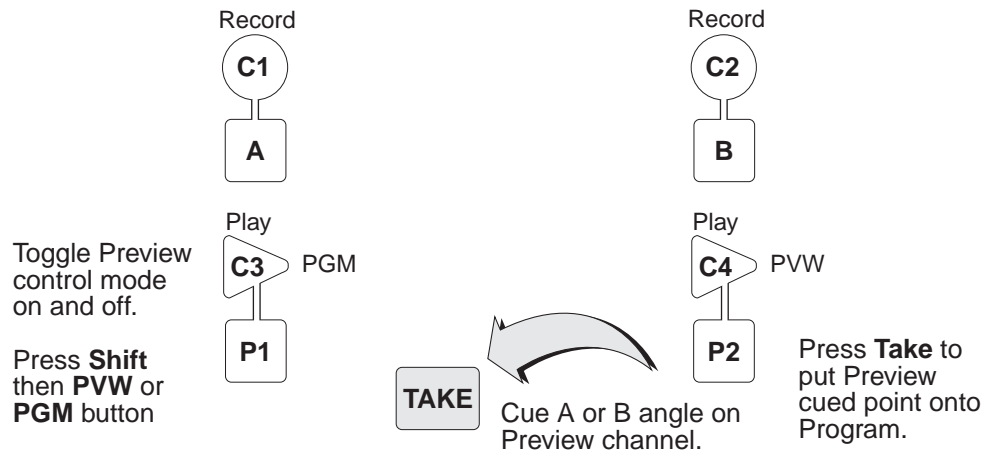


- The 2 Record and 2 Playback channel set-up is done when the session is configured at start-up screen
- A,B, angles can be selected for playback on the C Program (C3) and D (C4) Preview
- In this mode, the PVW button illuminates yellow when PGM is selected. PVW lights green when selected and the Take button illuminates green to indicate ready for Take to PGM channel.
- P1 and P2 playout channel content can be “swapped” by pressing buttons Fn then Take.


K2 AppCenter Elite ChannelFlex configurations

Dyno-Packs are available to provide ChannelFlex features, such as these illustrated examples.

K2 Dyno Controller setup: 4 record, 2 playout

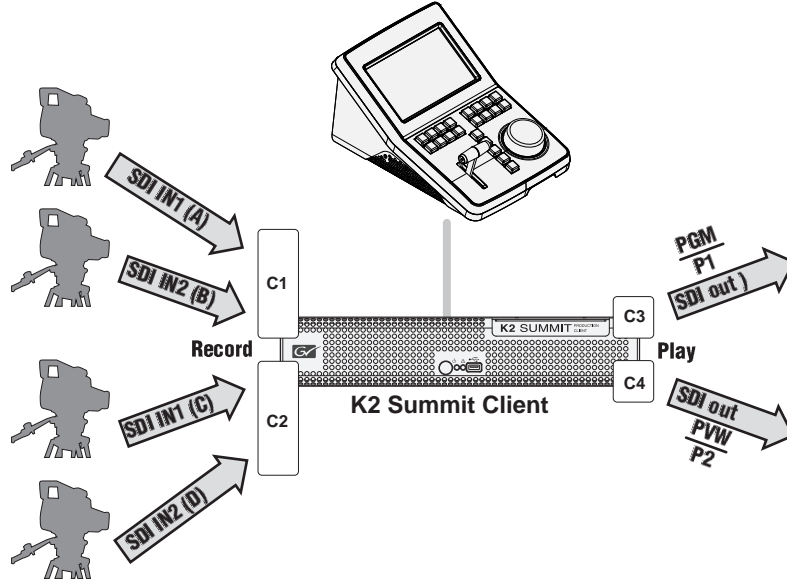

K2 Dyno Controller setup: 1 Super Slo Mo, 2 regular inputs, 2 playout

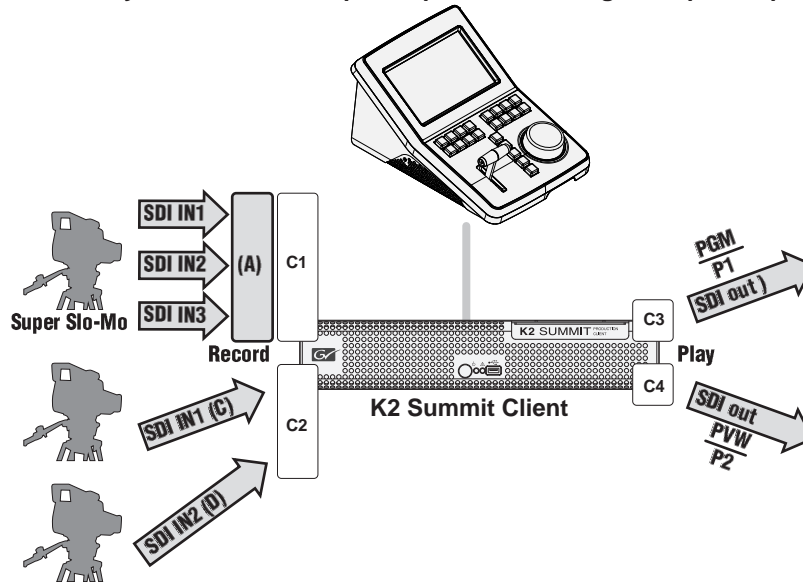


There are many other types of configuration setups. For more information, consult your Grass Valley representative.

Shutting down the K2 Dyno Controller

Exit the K2 Dyno Client software to shut down the K2 Dyno Controller.

1. Touch the **Config** tab to display the Config screen.
2. Press the **Shift** button, and then touch **Exit**.

The Confirm Exit screen opens, by default, to show the Startup Screen shutdown mode.

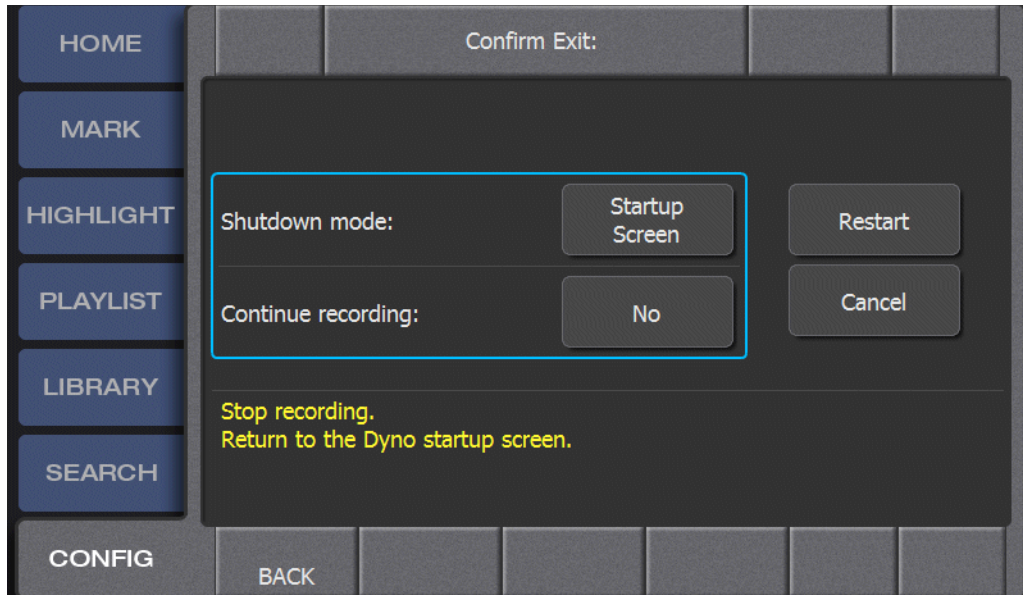

3. Select the action of the K2 Dyno Controller:
 - **Startup screen** — Returns you to the Summit List screen
 - **Shut down** — Closes the Dyno application and powers off the system.
 - **Maintenance** — Closes the Dyno application and restarts in Maintenance mode.
4. You can also choose to continue recording or not.

Switching to Maintenance mode (the Windows OS)

When you want to update software or use the Windows OS for tasks such as adjusting the clock or setting the IP address, exit the K2 Dyno Client software and enter Maintenance mode.

1. At the startup screen, press the **Shift** button and then touch **Exit**.
2. Toggle the **Startup Screen** button until you see **Maintenance Mode**. If desired, you can also specify whether to stop recording or not.
3. Press **Restart**.

The K2 Dyno software closes, and the Dyno controller restarts in Maintenance mode.

4. To return to the Dyno Client software after using Maintenance mode, perform a

normal shut down operation as with the Windows OS. When asked if you want to return to the K2 Dyno mode, choose **Yes**.

The Dyno controller restarts with the Dyno software running.

5. To shut down the Dyno controller after using Maintenance mode, perform a normal shut down operation as with the Windows OS. When asked if you want to return to the Dyno mode, choose **No**.

The Dyno controller shuts down. The next time you start up the Dyno controller, the Dyno software will not start; the Dyno controller continues in the Maintenance mode.

USO RESTRITO

Playback

This chapter consists of the following:


- ["Components in the Home screen" on page 36](#)
- ["Starting and stopping a recording" on page 37](#)
- ["Replay" on page 38](#)
- ["Switching cameras" on page 38](#)
- ["On-air preview mode and Gang mode" on page 40](#)
- ["Checking the contents of the Recycle bin" on page 44](#)

Components in the Home screen

The Home screen is a screen for viewing basic information such as the timecode for the recording data, playback item remaining time, and selected camera.

- 1. Touch the **Home** tab.

The Home screen appears. For more information about the indication meanings and individual panel functions, see the following table. To perform functions (indicated by the shaded area in the table) that are displayed at the top of the menu panels shown at the bottom of the screen, press the **Shift** button, and then touch the desired menu panel. For more information on how to use the **Shift** button, see ["About Shift button operations" on page 21](#).

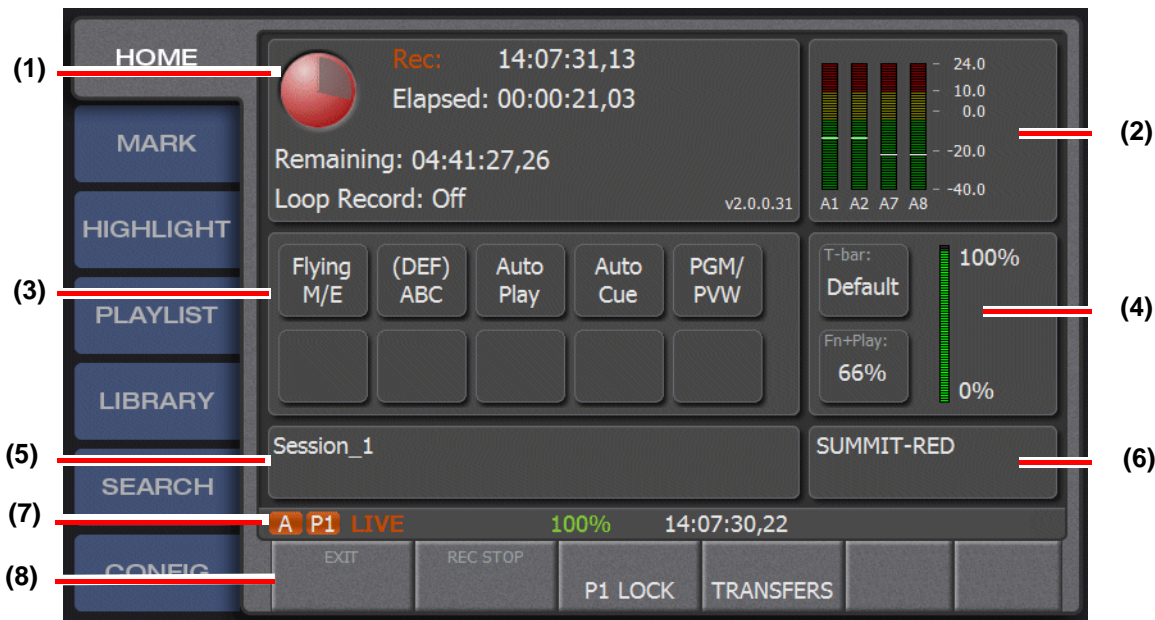

No.	Name	Function
(1)	Recording panel	Shows the free space in the Summit and time display. The remaining storage time is available in terms of an Event Day. Dyno takes into account the available time for all Record channels.
	Loop length in channel list	This is displayed only if the LoopRec setting is turned on. The train length for the currently selected camera angle and the train length for all the angles are displayed.
(2)	Audio Meters panel	Shows the audio meters. To view or edit audio configuration selections, touch the panel. If there is no audio, this panel is blank.

No.	Name	Function
(3)	Home Properties panel	Flying M/E: If selected, applies a flying mix effect. To configure the Flying M/E settings, "Effects settings" on page 90 . (DEF)ABC: Determines the camera angle for the live playback. Auto Play: Automatically plays a selected item. Auto Cue: Automatically cues a selected item. PGM/PVW: Toggles between the on-air preview or multi-channel mode. For more information, see "On-air preview mode and Gang mode" on page 40 .
(4)	T-bar Calibration panel	Shows the T-Bar settings. To calibrate the T-bar settings, touch this panel.
(5)	Session Property panel	Shows the session currently using the K2 Dyno Controller. To see the Session List screen, touch this panel.
(6)	Server Property panel	Shows the K2 Summit or Solo currently connected. To see the Server List screen, touch this panel.
(7)	Status Indicators	Shows the angle, channel mode, recording/playback status, speed, and timecode.
(8)	EXIT	Opens the Confirm Exit screen, which lets you shut down the Dyno Controller, exit to Windows, or open the Maintenance mode.
	REC STOP	Stops recording.
	P1/P2 Lock	Turns on or off the on-air lock, which protects from improper operations during a broadcast. When you touch this button, depending on the channel selected, P1 Lock or P2 Lock displays. This lock disables operations to change the playback status, such as cueing up and replaying of the item, operations with the T-Bar or Jog knob, and camera angle changes.
	TRANSFERS	Opens the Transfer Status monitor.

Starting and stopping a recording

Live playback

1. Press the **Live** button.
 - The recording begins, and "LIVE" is displayed in the Home screen.
 - The **Live** button lights up in red during a live playback.

NOTE: If you touch **P1/P2 Lock** at the bottom of the Home screen, this prevents an operator from changing the playback status, such as cueing up and replaying of the item, or performing operations with the T-Bar, Jog knob, and camera angle changes. To turn off the on-air lock, touch **P1/P2 Lock**.

Stopping a recording

The data recording is stopped. It does not stop the item playback.

1. Touch the **Home** tab.
2. Press the **Shift** button, and then touch **REC STOP**.
3. Touch **Yes** when a confirmation message is displayed.

Replay

A replay lets you go back and play a scene that you found during a live playback again. You can use the following methods: to search and replay a scene with the Jog knob or to mark a scene in advance for cueing up and replaying it as necessary.

This section describes how to go back and replay a scene using the Jog knob. For information on how to replay a scene by marking and cueing up, see ["Marking and cueing up" on page 47](#).

1. Begin a live playback.
2. When an important scene is found, rotate the Jog knob to the left (counter-clockwise) to go back to the beginning of the scene.
3. Play the scene with the T-Bar.
 - Fully pushing up the T-Bar plays the scene with the 100% speed. If you want to play it at a slower speed, move and fix the T-Bar in a desired position.
 - If Super Slo-Mo, positioning the T-Bar in the middle plays at the Super Slo-Mo speed. For example, if Super Slo-Mo x3, the middle position speed is 33%.
 - The speed is indicated on the screen.
 - Pressing the **Play** button plays the scene with the 100% speed.
 - If you operate the Jog knob or T-Bar, mark-in and mark-out points are added to the record train and are displayed in the Mark screen.

Switching cameras

This section describes how to switch cameras during a live playback and replay.

You can apply effects (Flying M/E), such as dissolves, to the video when replaying a scene or switching cameras during a playlist or highlight playback. To enable Flying M/E, press the **Shift** button and then press the **M/E** button. If a keyboard is connected, you can enable/disable Flying/ME by pressing the [F1] key. For more information on how to set the Flying M/E setting, see ["Mix effect settings" on page 92](#).

Switching camera angles

1. Begin a live playback.

Press the **A/B/C** button or press the **D/E/F** button after pressing the **Shift** button.

The button for the selected camera lights up in red.

NOTE: *The playback speed remains the same even if you switch the camera during a slo-mo playback.*

Replaying the same scene with another angle

You can go back and replay a scene from the scene's In point when you switch cameras.

1. Replay the scene.

Press the **A/B/C** button or press the **D/E/F** button after pressing the **Shift** button.

The controller will go back to the In point of the scene, and replay the scene with a different angle.

- The playback speed remains the same even if you switch the camera during a slo-mo playback.
- If the playback is stopped such as moving the T-Bar back to the 0% position after replaying a scene in step 1, the controller cues up to the In point of the scene after the operation in step 3.
- If you perform the steps 2 to 3 again when playing the record train, the controller will go back to the playback point prior to switching the camera angles instead of going back to the scene's In point.

About play speed

When you press the Play button, play speed behaves as follows:

	Internal speed	Displayed speed
Normal clip	100%	100%
Super Slo-Mo x2 clip	100%	50%
Super Slo-Mo x3 clip	100%	33%

T-bar behavior


When you use the T-bar, play speed behaves as follows:

	Lever position	Internal speed	Displayed speed
Normal clip	Maximum	100%	100%
	Minimum	0%	0%
Super Slo-Mo x2 clip	Maximum	200%	100%
	Minimum	0%	0%
Super Slo-Mo x3 clip	Maximum	300%	100%
	Minimum	0%	0%

Flying M/E behavior




Flying M/E between Super Slo-Mo clips and normal clips behaves as follows:

Play Mode	
<div style="display: flex; align-items: center; justify-content: space-around;"> <div style="border: 1px solid black; padding: 5px; text-align: center;"> Super Slo-Mo x3 clip Internal speed 100% Display speed 33% </div> <div style="text-align: center;"> <=====> Keep internal speed </div> <div style="border: 1px solid black; padding: 5px; text-align: center;"> Super Slo-Mo x3 clip Internal speed 100% Display speed 100% </div> </div>	
Variable Mode	
Keep display speed	

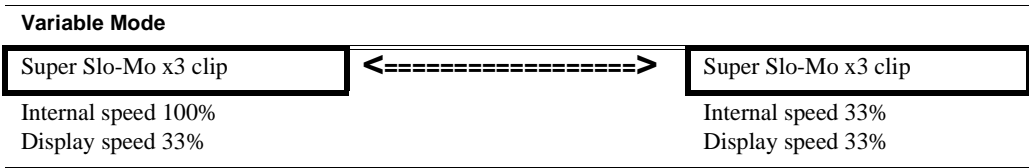

Angle switching behavior

When you switch camera angles, play speed behaves as follows:

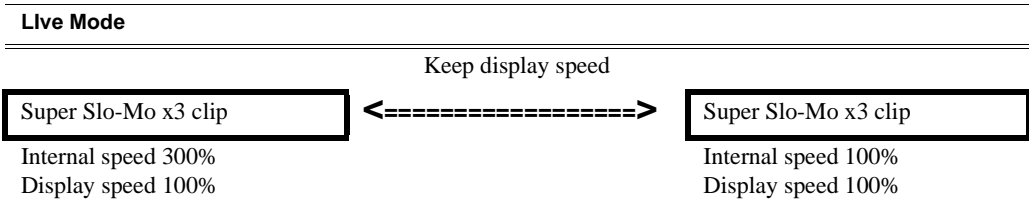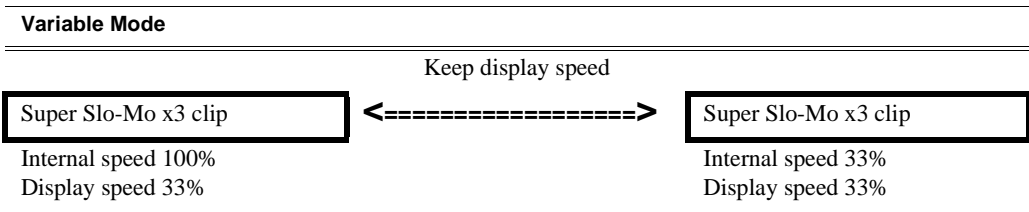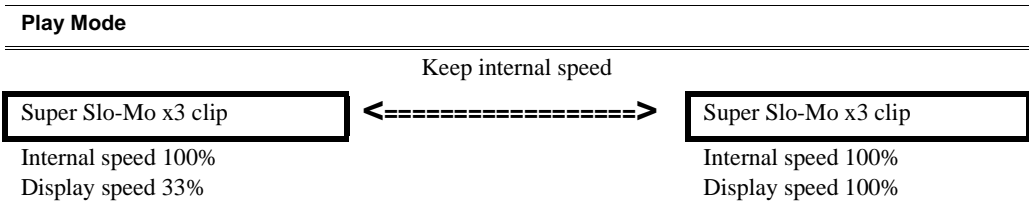

On-air preview mode and Gang mode

If two or more channels are assigned as players, you can operate the controller with the option of the on-air preview and multi-channel modes.

The on-air preview mode is a mode to use one channel as a program channel (a channel for an on-air broadcast) while using another channel as a preview channel.

While in gang mode, you can switch operation targets for multiple channels or gang the playback for multiple channels.


Playback operations in the on-air preview mode

This section describes a flow of playback operations in the on-air preview mode.

1. In the Home screen, make sure that the controller is in the on-air preview mode.
 - If the controller is in gang mode, both **P1** and **P2** show in the Status Indicator line of the Home screen.

- If the controller is in the on-air preview mode, the Status Indicator line on the Home screen shows **PVW** or **PGM**. Switch to the on-air preview mode by pressing the **PGM** or **PVW** button after pressing the **Shift** button. The program channel becomes the target for operations.

2. Begin a live playback in the program channel.

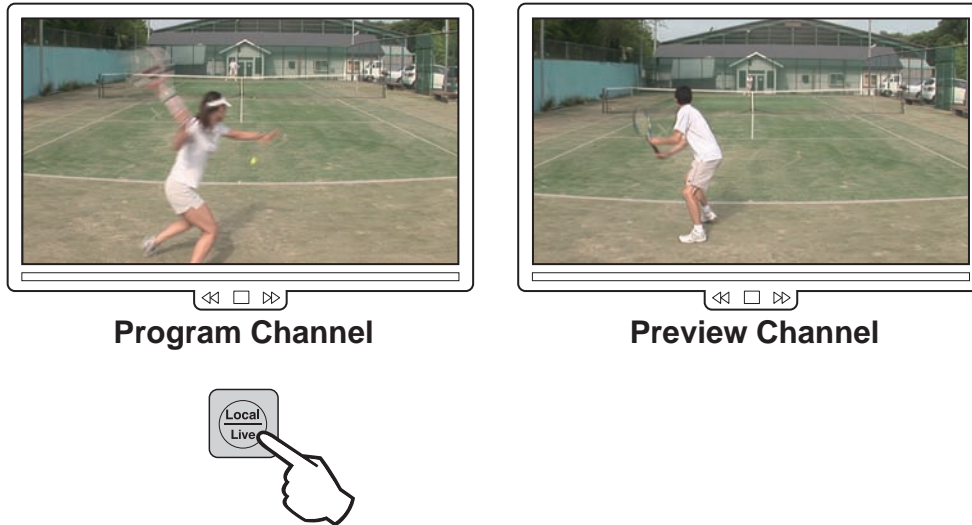


3. Press the **P2** button.

The **P2(PVW)** and **Take** button light up in green while the preview control is turned on. When you turn on the preview control, the preview channel becomes the target for all of the operations, such as operations with the **Live** button, T-Bar, or Jog knob.


4. Locate the scene you want to broadcast on air in the preview channel.

5. Locate and put the scene in standby, performing operations such as rewinding the live video in the preview channel, or cueing up to the beginning of a playlist or highlight using the Jog knob.

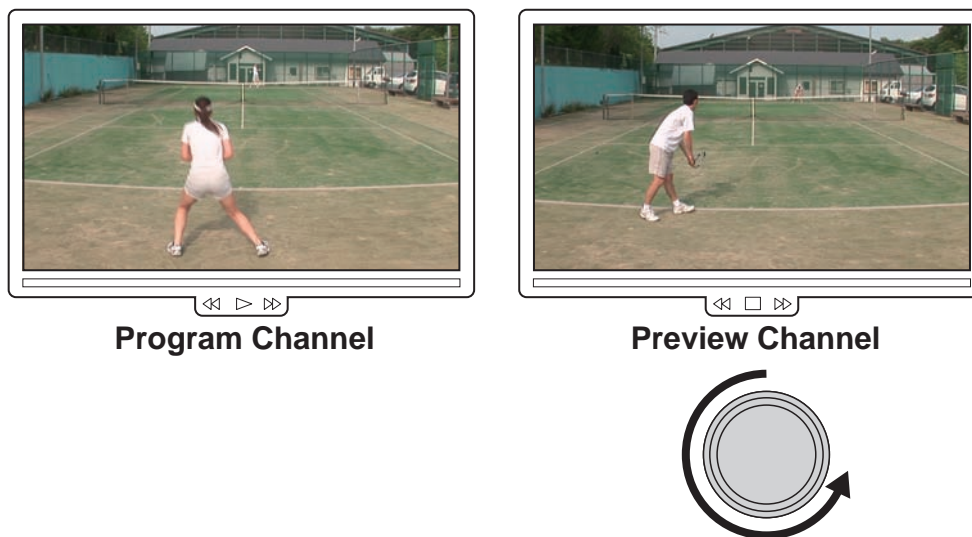

6. Press the **Take** button.

The video that is put into standby in the preview channel is loaded and played in the program channel. Even if the video is currently stopped in the preview channel, it will be in a playback state at the same time as the **Take** button is pressed.

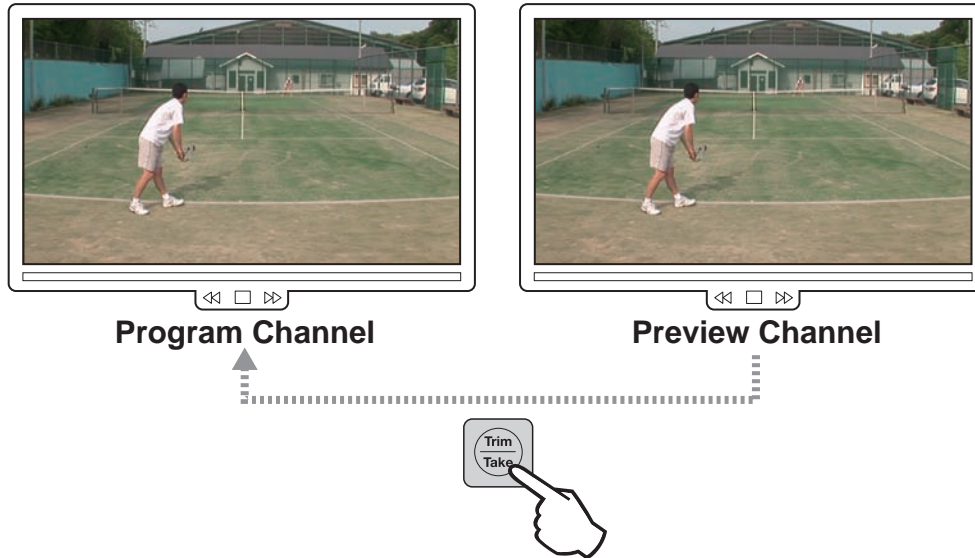

7. To turn off the preview control, press the P1 button.

Switching the operation target channel in gang mode

This section describes how to switch the operation target channel in gang mode.

1. In the Home screen, make sure that the controller is in gang mode.
 - If the controller is in gang mode, both P1 and P2 show in the Status Indicator line of the Home screen.
 - If the controller is in the on-air preview mode, the Status Indicator line on the Home screen shows PVW or PGM. Switch to gang mode by pressing the PGM or PVW button after pressing the Shift button.
2. Press the P1 or P2 button.


The operation target channel is switched to the P1 or P2 channel. The button for the selected channel lights up in red.

Synchronizing playback status for Gang mode channels

You can synchronize the playback status for multiple channels by turning on the gang mode.

For example, this function can be used when you want to play video from multiple camera angles synchronizing them or when you want to show difference in speed between two ski jumpers by synchronizing the video of the player A and player B from the start point.

It can also be used when you want to apply a mask-like effect by simultaneously playing Key video with transparency information and Fill video you want to composite to the Key video.

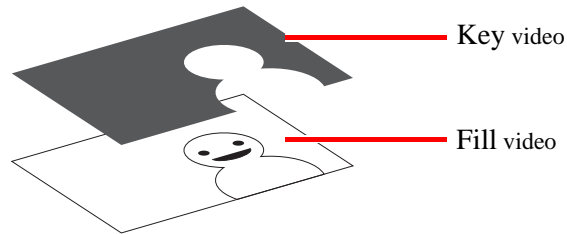

This section describes how to play Key and Fill video simultaneously using the gang mode.

NOTE: You must store clips you want to use as Key and Fill video to the highlight beforehand. For more information on how to use the Highlight screen, see ["Highlight" on page 53](#).

1. In the Home screen, make sure that the controller is in gang mode.
 - If the controller is in the on-air preview mode, the screen shows "OnAirPreview". Switch to gang mode by pressing the **PGM** or **PVW** button after pressing the **Shift** button.
2. Press the **P1** button.
 - The operation target channel is switched to the P1 channel.
3. Display the Highlight screen, and cue up the item you want to use as the Key video.
 - For more information about the detailed operation procedures, see ["Storing and playing scenes in a highlight" on page 51](#).
4. Adjust the playback start point of the Key video using the Jog knob.
5. Press the **P2** button.
 - The operation target channel is switched to the P2 channel.
6. Display the Highlight screen, and cue up the item you want to use as the Fill video.
7. Adjust the playback start point of the Fill video using the Jog knob.
 - Adjust it according to the playback start point of the Key video you adjusted in step 4.
8. Press the **P1** and **P2** buttons at the same time.
 - The controller enters the Gang mode and the **P1** and **P2** buttons light up in red.
9. Press the **Play** button.
 - The playback status of the Key and Fill video is synchronized.
 - You can also perform a slo-mo playback with the T-Bar.
 - To exit the Gang mode, press the **P1** or **P2** button.

NOTE: While in the Gang mode, you can press the **Cue Up** button to perform a cueing up operation for all the channels of the Gang mode. In this case, the angle data to be cued up is the angle that is set as primary in "Play1" on the Config screen.

Checking the contents of the Recycle bin

The Recycle bin provides a place to store items that you intend to delete at a later time. If the Recycle bin has not been enabled in the **Config | Clip** screen, items are deleted immediately when you touch **Delete**.

1. Press the Library tab, and touch the Recycle bin.

The Recycle Bin appears.



2. You can perform the same operations on items in the Recycle bin as you can in any other bin.

Marking Function

This chapter consists of the following:

- "Components in the Mark screen" on page 46
- "Marking and cueing up" on page 47
- "Entering the metadata logging information" on page 50
- "Trimming" on page 51


Components in the Mark screen

Mark-in and mark-out points are added on the record train. When you are making a recording, you can mark live video while you are watching the video from the camera even during a replay or playlist playback.

A single mark-in or mark-out point is referred to as a *marker*. A mark-in and mark-out point together are referred to as a *scene*.

The Mark screen displays the markers and scenes that were added to the record train.

1. Touch the **Mark** tab.
 - The Mark screen appears. For more information about the indication meanings and individual panel functions, see the following table. To perform functions (indicated by the shaded area in the table) that are displayed at the top of the menu panels shown at the bottom of the screen, press the **Shift** button, and then touch the desired menu panel. For more information on how to use the **Shift** button, see ["About Shift button operations"](#) on page 21.

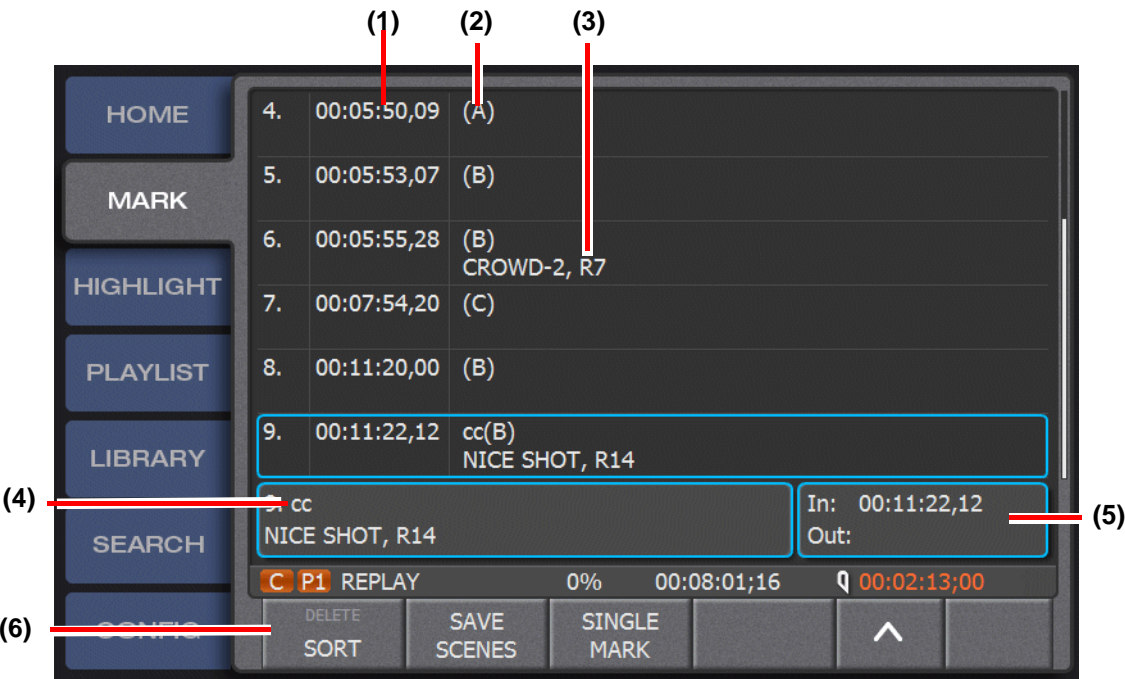

No.	Name	Function
(1)	TimeCode	Shows the timecodes of the In point and/or the Out point.
(2)	Log	Shows the angle.
(3)	Info	If the item has metadata, it is displayed here.
(4)	Property panel	Shows the number and name of the selected item. You can also touch the panel to enter metadata information for the selected item.
(5)	In/Out panel	Shows the selected item's timecodes of the mark-in and mark-out points.

No.	Name	Function
(6)	DELETE	Deletes the selected item.
	Sort	Sorts the marks by their timecodes. Every touch switches the mark-in point sorting order to be ascending or descending.
	Save Scenes	Toggles on or off. When selected, scenes are automatically saved into the list.
	Single Mark	Toggles on or off. When selected, displays only the last marker entered.
	Scroll button	Touch this to scroll the mark panel display when there are more than five marks stored. Keep touching this to scroll the display automatically.

Marking and cueing up

You can immediately cue up and replay a scene as necessary by previously marking a scene in which an event is likely to occur during a live playback.

For example, during a baseball broadcast you can mark every scene where the pitcher comes into ready position. Once the play is completed, you can immediately cue up the marked scene and be ready for replay.

Marking and cueing up

1. Begin a live playback.
2. Press the **Add Mrk** button at the desired scene. You can check the newly added marker information in the Mark screen.
3. Touch the marker you want to cue up, and then press the **Cue Up** button.
4. Press the **Play** button.
 - You can also perform a slo-mo playback with the T-Bar.

***TIP:** You can also use auto cue to cue up a marker just by selecting it and auto play to cue up and play the selected marker.*

About the cursor colors

The K2 Dyno Controller shows the item status by outlining the item in different colors:

- Blue — the item is selected.
- Green — the item is being replayed.
- Orange — the item is cued up.
- Dashed line — indicates the current cursor location (in a playlist).

About multiple selection of items

You can select multiple items to copy, move, or delete them.

To select multiple items, press the **Fn** button, and then touch the items. To select a range of items, press the **Shift** button, and then press the first and last items.

About marking and scenes

If the **Add Mrk** button is pressed, a marker is created on the record train.

- If you create a marker, jog forward, create another marker and press **Add HL**, the first marker becomes the mark-in point of the newly added highlight.
- If you create a marker, jog backward, create another marker and press **Add HL**, the first marker becomes the mark-out point.
- If you press the Out button without pressing the In button during a live playback or while playing the record train, the timecode when the button was pressed is set as the Out point, which automatically adds the In point with the default duration. For more information on how to set the default duration, see ["Clip settings" on page 89](#).
- Pressing the In/Out button, during a replay of a scene you cued up, updates the In/Out point with the playback timecode where the button was pressed.
- In and Out points added on the record train as marks or scenes are not protected. Therefore, these In and Out points will be deleted when a LoopRec operation is performed on the record train. Save important scenes in a highlight or library as clips or turn off the LoopRec setting. .

Cueing up an item by specifying it with a number (GoTo)

You can cue up an item by entering its number or timecode.

1. Press the **Goto** button.

The Goto screen opens.



2. To go to a particular bin, a particular item in a bin, or a particular angle of an item, touch **Shotbox** and enter the number in the keypad. For example, typing in *1.3*

takes you to bin 1, slot 3.

3. To locate a timecode, touch **Timecode** and enter the number in the keypad. If you enter a timecode, the +, or - buttons let you tweak the value so you don't have to enter in a complete new timecode. You can specify a timecode from 0 to 24 hours in the same session.
4. Enter the number or timecode, and then press **OK**.

Entering the metadata logging information

Adding markers during a live playback may result in a large number of markers. To help identify important scenes easily, you can also enter metadata such as names, keywords, or ratings.

You can edit keywords on an external PC and then import them into the Dyno Controller. For more information about editing and importing keywords, see ["Editing and storing keywords" on page 99](#).

Entering information with the touch panel


1. Display the Mark screen, and then touch the desired marker.
2. Touch the property panel.
3. You can type in a name for the marker or select a keyword from a category.
 - You can switch the categories by touching the desired category at the top of the touch panel. In addition, you can select or deselect the rating stars.
 - Up to three keywords can be entered in a row. If you want to enter only one or two keywords, touch **Back** after entering them.
 - If Auto is selected, when you select a keyword the Dyno Controller automatically switches to the next category.
4. To remove the keyword from the item, press **Clear**.
5. To return to the Mark screen with any changes saved, touch **Back**.

Creating your own keyword shortcuts with FKeys

You can create your own keyword shortcuts with function keys. A keyword shortcut associates a particular keyword with a function number. You can create shortcuts from the Mark, Highlight, Playlist, Library or Search screens.

Function keys F2 - F9 can be used. The function key F1 is the shortcut for assigning a star rating to an item.

1. Select an item and touch its Property panel.

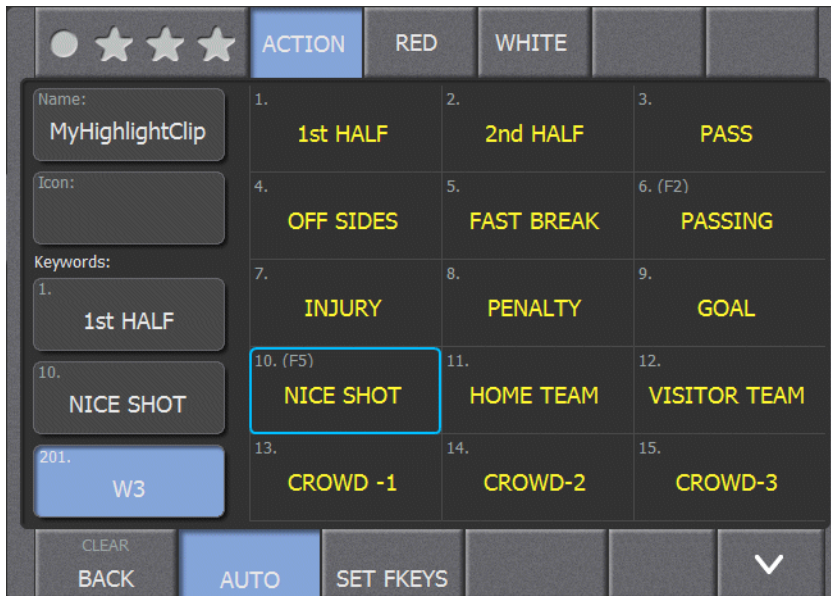

2. Touch **Set FKeys**.

The **Set FKeys** button displays with a blue background to indicate it has been selected.

3. Touch the desired keyword and then press a function key on the keyboard from F2 to F9.

The keyword now displays the function key number in parentheses.

4. When you are finished assigning FKeys, touch the **Set FKeys** button a second time to de-select it.

Using keyword shortcuts

You can enter logging information with shortcuts when a keyboard is connected to the K2 Dyno Controller. You can enter information with the following shortcuts after selecting the mark for which you want to enter logging information.

- To enter a name, select the Property panel and press **Enter** + *Name* + **Enter**.
- To enter a keyword, press the Quick Key number associated with that keyword.
- To enter a rating (stars), press **F1** for each star you want to add. If three stars have been added, pressing F1 again clears all the stars.

Trimming

You can trim a scene by modifying the mark-in or mark-out point of a scene. Setting the mark-in or mark-out point changes the duration automatically. Editing the duration automatically changes the timecode of the mark-out point.

Pressing the **In** or **Out** button sets the playback timecode, at the point when the button is pressed, as the mark-in or mark-out point.

NOTE: *You cannot trim a marker with only an In point.*

1. Display the Mark screen, and select the scene you want to trim.
2. Navigate to the new mark-in or mark-out point and select **In** or **Out**.

USO RESTRITO

Highlight


This chapter consists of the following:

- "Components in the Highlight screen" on page 54
- "Storing and removing scenes in a highlight" on page 56
- "Match frame operations from highlights to the record train" on page 57
- "Trimming in a highlight" on page 57
- "Managing highlight bins" on page 58
- "Managing highlight bins" on page 58
- "Transferring items (SEND function)" on page 60

Components in the Highlight screen

Items stored in a highlight are saved in a bin; they remain saved until the session is deleted. A bin provides a shot box with slots that allow you to save highlight items. The Highlight screen displays the list of highlights in the selected bin.

- 1. Touch the **Highlight** tab.
- The Highlight screen appears. For more information about the indication meanings and individual panel functions, see the following table. To perform functions (indicated by the shaded area in the table) that are displayed at the top of the menu panels shown at the bottom of the screen, press the **Shift** button, and then touch the desired menu panel. For more information on how to use the **Shift** button, see ["About Shift button operations" on page 21](#).

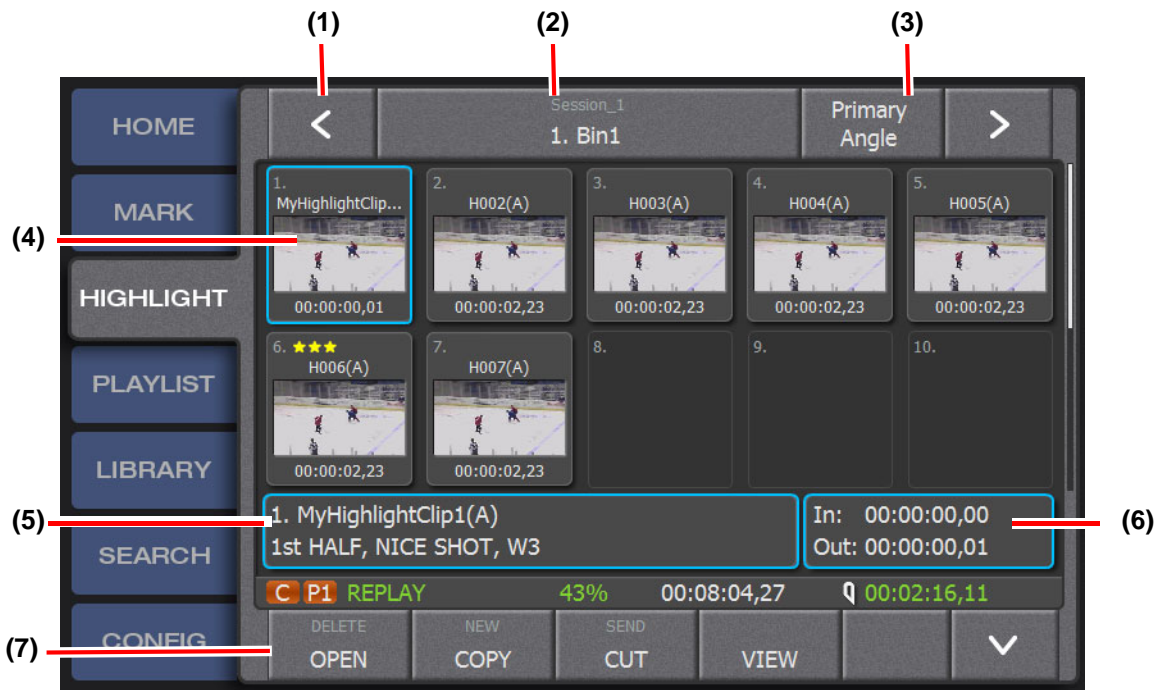



No.	Name	Function
(1)	< / >	Moves to the next highlight bin.
(2)	Bin name / Bin number	Shows the number and name of the displayed highlight bin. Touch this to move one level up in the directory and select a highlight bin to be displayed.
(3)	Angle	Shows the current angle . Touch this to switch angles for changing the angles for all the items at the same time.
(4)	Shot box	Shows the highlights saved in the bin. If you store an item in a slot, the slot number, camera angle, name and rating of the item are displayed. At the bottom, its duration is displayed. In the middle part, its keyword or thumbnail image is displayed. The display can be switched by touching View ..


No.	Name	Function
(5)	Property panel	Shows the number and name of the selected item. If you touch the panel to enter logging information for the selected item, the entered information is also displayed in the property panel.
(6)	In/Out panel	Shows the selected item's timecodes of the In and Out points.
(7)	DELETE	Deletes the selected item.
	OPEN	Opens the selected item.
	NEW	Not currently implemented.
	COPY	Copies an item. In the desired destination, touch Paste to copy the selected item. [Paste is not displayed until Copy has been selected.]
	SEND	Copies the selected item to the destination that you set in "Network" on the Config screen. For more information about the settings, see "Transferring items (SEND function)" on page 60.
	CUT	Removes the selected item. Touch Move to move the selected item. [Move is not displayed until Cut has been selected.]
	VIEW	Toggles the view of the item in a slot between the thumbnail and the keyword.
	Scroll button	Touch this to scroll the shot box view up or down. Keep touching this to scroll the display automatically.

About shot box indications

This section describes about the icons and warning indications that are shown in specific situations. For the meanings of these indications, see the table shown below.

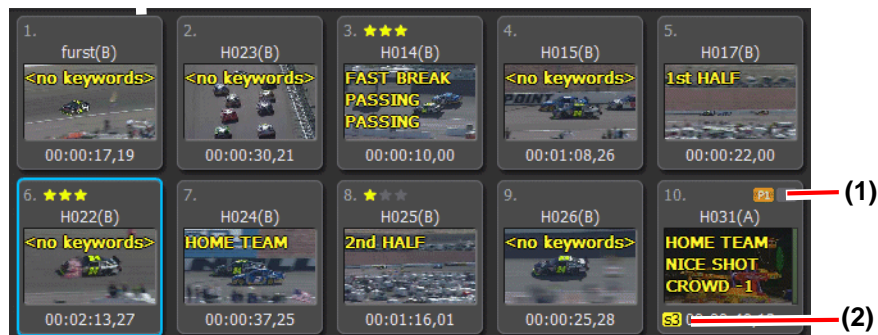


No.	Name	Function
(1)	Play status	This icon indicates the play status of the item. For example, this clip is cued up on player channel 1.
(2)	Super Slo-Mo icon 	This icon is shown if the item is a Super Slo-Mo clip. Displays s3 with yellow background if Super Slo-Mo x3 and s2 with yellow background if Super Slo-Mo x2.

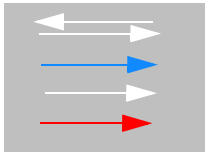No.	Name	Function
(3) Not Shown	Transfer status indication 	An arrow displays to show the transfer status of the item being transferred. <ul style="list-style-type: none">• Double-headed white arrow — Transfer pending• Blue arrow— Transfer in progress• Single white arrow — Transfer completed• Red arrow — Transfer failed For more information about the transfer progress screen, see "Checking the transfer progress" on page 61.

Storing and removing scenes in a highlight

A highlight is a clip stored in a bin for that session. It will not be overwritten, even if Loop Record is turned on, until the session is deleted.

You can store an important scene as a highlight. In the Mark screen, a page icon is displayed next to a scene that has been saved as a highlight.

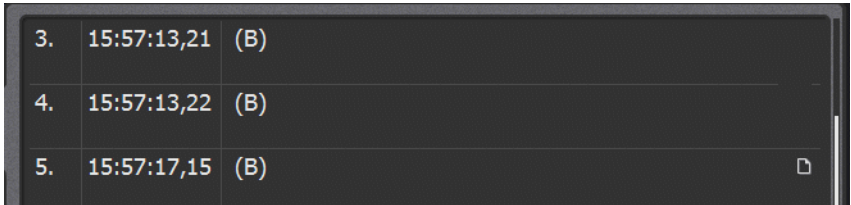

The data to be saved is the recording data (by default, including the recording data from other camera angles) and the thumbnail of a scene. All of the data will be deleted from the Highlight screen of the K2 Dyno Controller and from the Summit when the session is deleted.

About shot boxes and slots

A shot box contains slots where you can store a highlight. It includes the following features:

- You can store items in any slot in the shot box. For example, you can manage the stored scenes according to their positions by collecting the player A scenes to the left side and collecting the player B scenes to the right side.
- You can copy or move the stored items to another bin.

Adding a highlight from from the Mark, Playlist, Library or Search screens

1. Display the screen containing the items you want to add to a highlight.
2. Select the item or items you want to store to the highlight.
3. Press the **Add HL** button.

The item is automatically stored in the slot to the right of the last stored one. If you have moved to a different bin since you last stored an item, the new item is stored at the end of the current bin.

4. If adding a marker or scene, the following considerations apply:

- If multiple marks or scenes are selected, the primary angle is generated first. The generation of the other angles might still be in progress for a short time thereafter.
- When you store a single marker to a highlight, the mark-out point is set automatically using the default duration. For more information on how to set the default duration, see ["Clip settings" on page 89](#).

Removing items from a highlight bin

1. Select the item you want to remove in the Highlight screen.
2. Press the **Shift** button, and then touch **Delete**.
3. Touch **Yes**.

Match frame operations from highlights to the record train

When the playback pointer is on a highlight item, you can make the playback pointer jump to the same timecode position on the record train for the current angle. This can be helpful when you want to check the video before or after the selected highlight item.

1. Touch an item in the Highlight screen, and then press the **Cue Up** button.
The controller cues up to the mark-in point of the selected item.
2. Press the **Shift** button, and then press the **Match** button.
The playback pointer is moved to the same timecode position on the record train for the current angle.
3. To move the playback pointer back to the mark-in point of the selected highlight item, press the **Cue Up** button.

Trimming in a highlight

You can use the following methods for trimming in a highlight: to trim an item move the playback pointer to a highlight item stored as a clip, or to trim mark-in and mark-out points move the playback pointer to the record train side. This section describes a case for trimming mark-in and mark-out points on the record train side.

1. Select the item you want to trim in the Highlight screen.
2. Navigate the item using the Jog knob or play the scene, and press the **In/Out** button at the desired scene.
 - Setting the mark-in or mark-out point changes the duration automatically.
 - Editing the duration automatically changes the timecode of the mark-out point. When you want to change the duration with the mark-out point timecode fixed, you must clear the mark-in point timecode beforehand.
 - Pressing the **In/Out** button sets the playback timecode, at the point when the button is pressed, as the mark-in/mark-out point.
 - When you set the mark-in/mark-out point (when you press the **In/Out** button),

the respective button lights up in green.

NOTE: Trimming is reflected to all of the angles.


Managing highlight bins

You can store the stored items in a highlight as clips in a bin. By default, Dyno creates Bin1, Bin2 and Bin3 each time a new session is started.

Creating a new bin

You can manage highlights by creating bins and storing highlights by category.

1. Touch the bin number/bin name panel in the Highlight screen.
 - The screen moves one level up in the directory to show the list of highlight bins. For more information about the indication meanings and individual panel functions, see the following table. To perform functions (indicated by the shaded area in the table) that are displayed at the top of the menu panels shown at the bottom of the screen, press the **Shift** button, and then touch the desired menu panel. For more information on how to use the **Shift** button, see ["About Shift button operations"](#) on page 21.

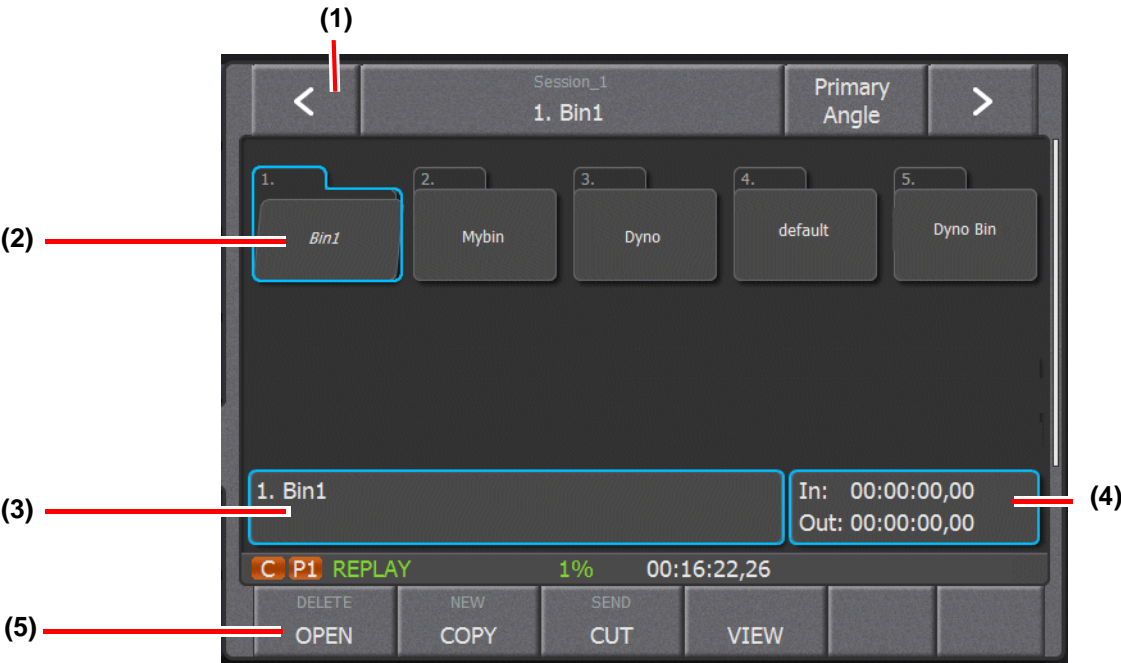

No.	Name	Function
(1)	< / >	Scroll to other bins.
(2)	Bin folder	Shows a bin. Double-touching a bin folder expands the folder. A selected bin has a blue outline around it. An opened bin is slightly askew.

No.	Name	Function
(3)	Bin property	Shows the bin number and name. Touch this to change the name of the bin.
(4)	In/Out panel	When an item is selected, this panel shows its mark-in and mark-out points.
(5)	DELETE	Deletes the selected bin.
	OPEN	Expand the selected bin.
	NEW	Creates a new bin.
	COPY	Copies a bin. In the desired destination, touch Paste to copy the selected item.[Paste is not displayed until Copy has been selected.]
	SEND	Copies the selected item to the destination that you set in "Network" on the Config screen. For more information about the settings, see "Transferring items (SEND function)" on page 60.
	CUT	Removes the selected bin. Touch Move to move the selected item.[Move is not displayed until Cut has been selected.]
	VIEW	Toggles the view of the item in a slot between the thumbnail and the keyword.

2. Touch **New**.

3. To enter the bin name, touch the bin property panel.

NOTE: Bin names previously edited, such as on an external PC can be imported to the K2 Dyno Controller. For more information on how to import bin names, see ["Importing" on page 103.](#)

4. Touch **Enter**.

TIP: There are two ways to move between highlight bins. One way is to touch the bin number/bin name panel (step 1), and from the highlight bin list, double-touch the highlight bin to which you want to move. The other is to touch < or > to move to the next highlight bin to the left or right. For example, to move from "Bin1" to "Bin4", touch > three times.

Naming specifications for items and bins

Names of items and bins must conform to the name specifications of the K2 Summit:

Position	Character	Description
Characters not allowed anywhere in the name	\	backward slash
	/	forward slash
	:	colon
	*	asterisk
	?	question mark
	<	less than (left angle bracket)
	>	greater than (right angle bracket)
	%	percent sign
		pipe
	"	double quote
Characters not allowed at the beginning of the name	~	tilde

Transferring items (SEND function)

You can transfer your highlight, playlist, and library data edited in the K2 Dyno Controller to any specified location.

NOTE: An item transferred by the *SEND* function will automatically have a file name such as "Item name + (camera angle)". If you want to transfer an item specifying a file name, see ["Importing/Exporting" on page 103](#).

Transferring an item to a specified location

NOTE: You must set the transfer destination and the File Type (container format) for items in *Config* screen beforehand. For more information, see ["Configuring the export settings and destination" on page 94](#).

NOTE: Items can be transferred including the guard band part you set in "Clip" on the *Config* screen. For more information, see ["Clip settings" on page 89](#).

1. Select an item you want to transfer. You can select an item in the Highlight, Library, Playlist (while displaying items in a bin), or Search screen.
2. Press the **Shift** button, and then touch **SEND**.

The data, including the audio, video, and timecodes of the selected item, is copied to the transfer destination specified in "Network" on the *Config* screen.

Data is copied in the background, which allows you to perform other operations even while your data is being copied.

An icon to show the transfer status is displayed in the shot box of the transferred item(s). For more information about the meanings of icons, see "[About shot box indications](#)" on page 55.

Checking the transfer progress

The Transfer screen is divided into three tabs: Receiving, Sending, and Complete.

The first line of each transfer shows the transfer source path and the file name as well as the camera angle. The second line shows the transfer destination path and name. A progress bar displays the progress during a transfer.

1. Touch the **Config** tab to display the Config screen.

2. Touch **Transfers**.

The transfer progress displays.

- Pending — while a transfer is in progress.
- Done — when the transfer is complete.
- Failed — when the transfer progress is failed because of an error.
- Aborted — when the transfer progress is canceled.

3. To retry a transfer, touch the desired transfer and touch **Retry**.

USO RESTRITO

Editing a Playlist

This chapter consists of the following:


- "Components in the Playlist screen" on page 64
- "Components in the Playlist Edit screen" on page 65
- "Match frame operations from playlists to the record train" on page 68
- "Trimming in a playlist" on page 68
- "Adding a transition/audio cross fade" on page 70
- "Adding auxiliary audio" on page 71
- "Inserting silence in audio events (audio fill)" on page 71
- "Playing events in a playlist" on page 71
- "Managing playlists" on page 71

Components in the Playlist screen

The Playlist screen is a screen for creating and managing playlists. A clip in a playlist is called an event. Playlists are managed as clips in a bin and remain saved until the session is deleted. By default, playlists are saved in PLBin1.

For information about the Playlist screen, see the following table.

To perform functions (indicated by the shaded area in the table) that are displayed at the top of the menu panels shown at the bottom of the screen, press the **Shift** button, and then touch the desired menu panel. For more information on how to use the **Shift** button, see ["About Shift button operations" on page 21](#).

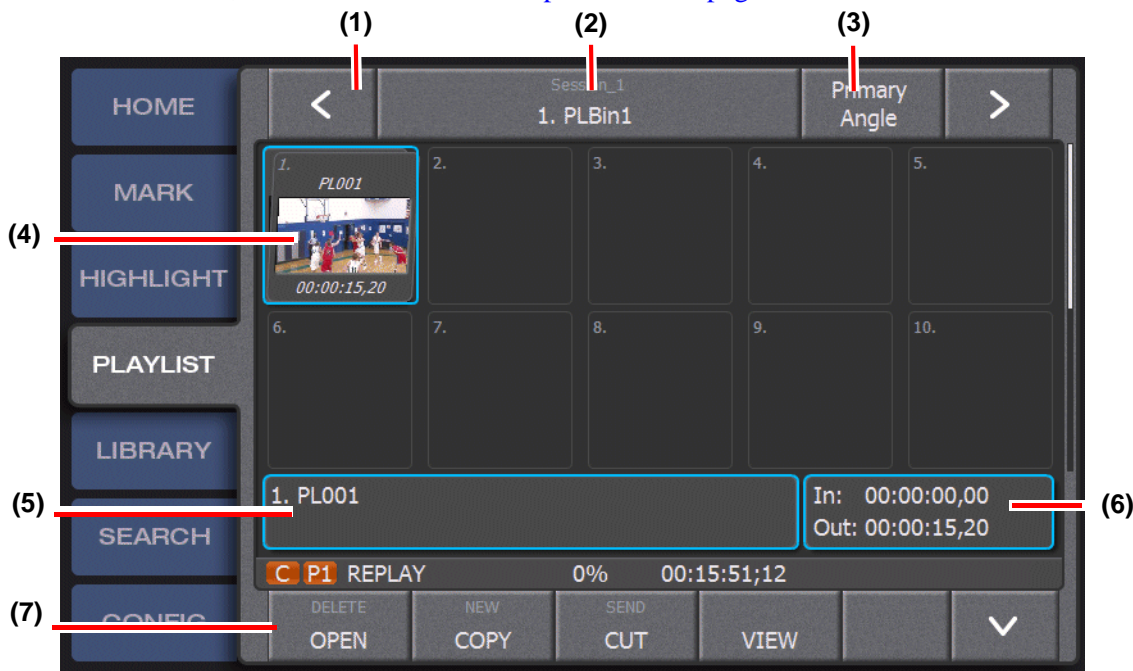

No.	Name	Function
(1)	< / >	Touch this to move to another playlist when there are multiple playlists.
(2)	Bin number/ Playlist name	Displays the number and name of the bin to which the selected playlist belongs. Touch this to move one level up in the directory , switching the playlist to be shown.
(3)	Primary angle	Depending on the selection, displays the playlists with this angle. Toggle to select other angles or to select all available angles.
(4)	Playlist	Displays the individual playlist or playlists in the bin.
(5)	Playlist property panel	Lets you view and modify the following properties of the currently displayed playlist: <ul style="list-style-type: none">• Name• All Events speed• New Event speed• Target duration• Mix effect properties


No.	Name	Function
(6)	In/Out panel	Shows the mark-in and mark-out points information of the selected item.
(7)	DELETE	Deletes the selected item.
	OPEN	Opens the selected item.
	NEW	Creates a new playlist.
	COPY	Copies an item. In the desired destination, touch Paste to copy the selected item. [Paste is not displayed until Copy has been selected.]
	SEND	Copies the selected item to the destination that you set in "Network" on the Config screen. For more information about the settings, see "Transferring items (SEND function)" on page 60.
	CUT	Removes the selected item. Touch Move to move the selected item. [Move is not displayed until Cut has been selected.]
	VIEW	Toggles the view of the item in a slot between the thumbnail and the keyword.
	Scroll button	Touch this to scroll the shot box view up or down. Keep touching this to scroll the display automatically.

Components in the Playlist Edit screen

Once a playlist has been selected and opened, the Playlist Edit screen opens.

For information about the indication meanings and individual panel functions in the Playlist Edit screen, see the following table.

To perform functions (indicated by the shaded area in the table) that are displayed at the top of the menu panels shown at the bottom of the screen, press the **Shift** button, and then touch the desired menu panel. For more information on how to use the **Shift** button, see ["About Shift button operations" on page 21.](#)

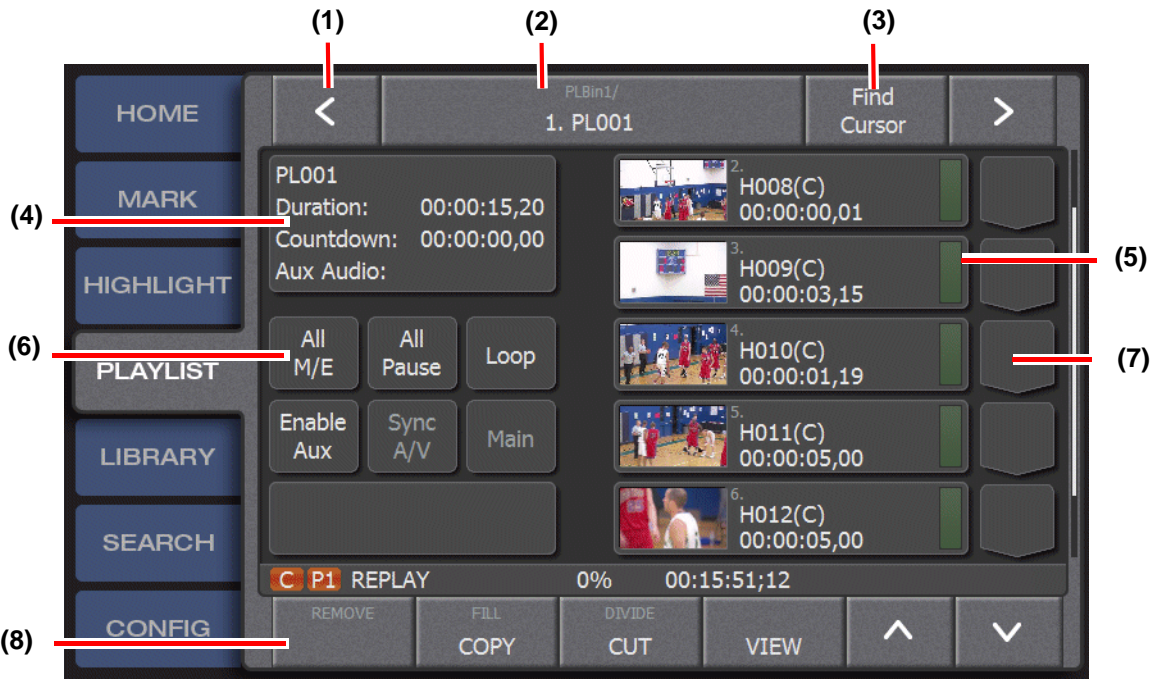

No.	Name	Function
(1)	< / >	Touch this to move to another playlist when there are multiple playlists.
(2)	Bin number/ Playlist name	Displays the number and name of the bin to which the selected playlist belongs. Touch this to move one level up in the directory switching the playlist to be shown.
(3)	Find cursor	Displays a dotted outline around the event currently playing.
(4)	Playlist property panel	Displays the following information about the selected playlist: <ul style="list-style-type: none">• Name• Duration: Shows the total duration for the playlist.• Countdown: Shows the duration set as the actual time range for the playback.• Aux Audio: Shows the duration of the auxiliary audio events.
(5)	Event panel	Events are stored here. A new name as an event such as "E001(A)" is given to an item that is stored as an event. When an item is stored, the panel shows the event number, event name (the item name before storing to a playlist), logging information, and duration. During a playback, a progress bar is shown for each event.

No.	Name	Function
(6)	Event property panel	<p>Lets you view and modify the following properties:</p> <ul style="list-style-type: none"> • Mix effects for all events • Pause all events • Loop the playlist • Enable auxiliary audio • Sync A/V — If auxiliary audio is enabled, synchronize audio/video • Main — If auxiliary audio is enabled, toggle to display Main (only video events) Main + Aux (video and auxiliary audio events), or Aux audio (auxiliary audio events only) <p>Shows the number, name, and logging information of the selected item.</p>
(7)	Effect panel	<p>Touch this to set the mix effect. Every touch changes the effect pattern. For more information on how to set the mix effect settings, see "Mix effect settings" on page 92. It also shows if the audio split is set or not. For more information on how to set the audio fill, see "Inserting silence in audio events (audio fill)" on page 71.</p>
	REMOVE	Deletes the selected event from the playlist.
	Fill	In a video event, inserts a specified duration of black. In an audio event, inserts a specified duration of silence.
	COPY	Select an event, touch Copy , and then touch an event panel to copy the selected event.
	DIVIDE	Touch this to divide the event during an event playback setting the point as the cut point.
	CUT	Removes the selected item. Touch Move to move the selected item. [Move is not displayed until Cut has been selected.]
	VIEW	Toggles the view of the item in a slot between the thumbnail and the keyword.
	Scroll button	<p>Touch this to scroll the event panel display when there are more than four events stored in a playlist.</p> <p>Keep touching this to scroll the display automatically.</p>

Managing events in a playlist

You can add marks, scenes, or highlights to a playlist. An item that is stored in a playlist is called an *event*.

The recording data of an event stored in a playlist is not overwritten even if the LoopRec setting is turned on. Only the angle when storing an item is saved. All of the playlists are deleted when the session is deleted.

Adding events to a playlist

1. Select the item you want to store to the playlist.

NOTE: A mark and scene cannot be directly stored to a playlist while **LoopRec** is **ON**. Store them in a highlight and then store the highlight in a playlist.

2. Press the **Add PL** button.

The item is stored as the last one after the currently stored events.

- If you selected multiple items in step 1, the items are stored in the order in which you selected them.
- When you store a marked item (with only a mark-in point) as an event, the mark-out point is set automatically using the default duration. For more information on how to set the default duration, see ["Clip settings" on page 89](#).

NOTE: *If you want to insert a new event in a position of any stored item, select an item to store, touch **Copy** in the Playlist screen, and then touch the event panel where you want to insert the item.*

Deleting events from a playlist

1. Touch the event you want to delete in the Playlist screen.
2. Press the **Shift** button, and then touch **Delete**.
3. Touch **Yes**.

Match frame operations from playlists to the record train

When the playback pointer is on a playlist, you can make the playback pointer jump to the same timecode position on the record train for the current angle. It is useful such as when you want to check the video before or after the selected event.

1. Touch an event in the Playlist screen, and then press the **Cue Up** button.

TIP: *When the Playlist screen is displayed, you can press the **Previous/Next** button to select and cue up at the same time.*

- The controller cues up to the In point of the selected event.
2. Press the **Shift** button, and then press the **Match** button.
The playback pointer is moved to the same timecode position on the record train for the current angle.
 3. To move the playback pointer back to the In point location of the selected event, press the **Cue Up** button.

NOTE: *Match frame operations are available while in the trim mode, as well. For trimming operations with the playback pointer on a playlist, you can switch to trimming on the record train side by pressing the **Match** button after pressing the **Shift** button. You can also move the playback pointer back to the playlist by pressing the **Cue Up** button while trimming on the record train side.*

Trimming in a playlist

You can use the following methods for trimming in a playlist, to trim an event moving the playback pointer to the playlist side, or to trim mark-in and mark-out points of an event moving the playback pointer to the record train side. This section describes trimming mark-in and mark-out points of an event on the record train side.

NOTE: *After an item is stored in a playlist, trimming the event item will not be reflected in the original item.*

1. Select the event you want to trim in the Playlist screen.
2. To trim the event, follow one of these methods:
 - Touch the In/Out panel, enter the timecode, and then touch **ENTER**.
 - Navigate to the desired point using the Jog knob and press the **In** or **Out** button.

About trimming events

When trimming an event, the following considerations apply:

- Setting the mark-in or mark-out point changes the duration automatically.
- Editing the duration automatically changes the timecode of the mark-out point.
- Pressing the **In** or **Out** button sets the playback timecode, at the point when the button is pressed, as the mark-in or mark-out point.
- When you set the mark-in or mark-out point (when you press the **In** or **Out** button), the respective button lights up in green.

About changing mark-out points in event trimming


When you change a mark-out point during a playlist playback while watching the video of an event on your monitor, the video at this mark-out point becomes the mark-in point of the next event. If you want to set any desired video as the mark-out point, you must set the video that is one frame forward from the desired one as the mark-out point.

Information of source and mark-out points on your K2 Summit Production Client and K2 Dyno Controller consists of timecodes that are one frame forward from ending video. Mark-out points are determined based on these timecodes. The reason for this operation is because the duration of a source will not become the value obtained by subtracting a mark-in point value from that of the mark-out point if a timecode of ending video is set as a mark-out point.

For example, assuming that the mark-in point is "00:01:10,00" and that the mark-out point is "00:01:40,00", the duration is "00:00:30,01" if the mark-out point is the timecode of the source's ending video.

The duration is "00:00:30,00" if the mark-out point is the timecode that is one frame forward from the source's ending video.

Therefore, when you change a mark-out point of an event while playing a playlist, the timecode at this point becomes the mark-out point of the event and the video that is one frame backward from the video being played becomes the ending video of the target event, which causes the mark-in point of the next event to appear.

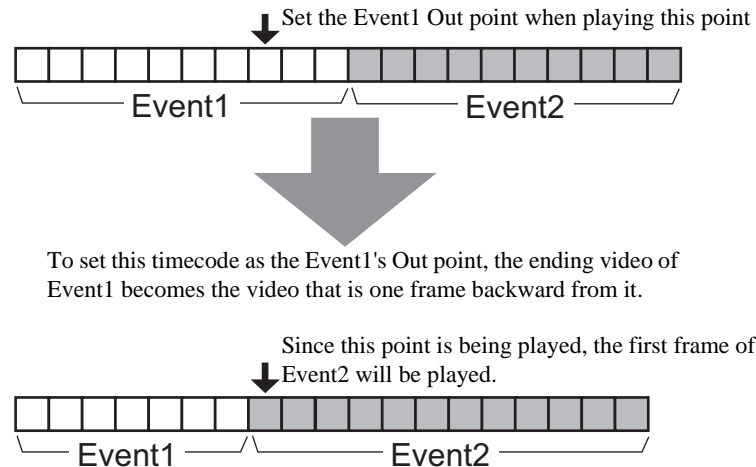

Adding a transition/audio cross fade

You can apply a transition, such as a dissolve, to an event switch by selecting it from the M/E patterns. With the K2 Summit Production Client and K2 Dyno Controller, dissolve effects can be applied easily using only one channel.

NOTE: *There are several M/E patterns available to choose from, and you can set the settings for each pattern about the transition type, whether or not to enable the audio cross fade, and the transition duration. For more information on how to set the settings, see "Mix effect settings" on page 92.*

1. Open the playlist you want to edit in the Playlist screen.
2. Touch the M/E panel next to the event to which you want to apply an effect.
 - Every touch changes the M/E pattern.
 - You can also set the M/E pattern by selecting the event, pressing the **Shift** button, and then pressing **M/E**.

NOTE: *If you cannot select the M/E pattern you want to set, check the setting in "M/E" on the Config screen. For more information, see "Mix effect settings" on page 92.*

3. To apply a mix effect M/E to a whole playlist at a time, touch the playlist property panel to select the M/E pattern.

NOTE: *By default, the global M/E button displays "all M/E." You can toggle the button to display the other available settings, but the display then reverts back to "All M/E."*

Adding auxiliary audio


You can add auxiliary audio to a playlist. This can help if, for example, you want to add an introductory fanfare at the start of a playlist.

Before you can add an auxiliary audio event, you must configure the audio as described in ["Setting the Auxiliary Audio" on page 97](#).

1. In the Event Property panel, touch **Enable Aux..**
2. Touch the Aux Event slot where you want to add the audio track.
3. Navigate to the screen with the item you want to add, and press the **Add PL** button.

Inserting silence in audio events (audio fill)

You can add a “fill” of silence in audio events.

1. In the Playlist screen, touch the event you want to insert the fill above.
 2. Press the **Shift** button, and then touch **Fill**.
 3. Set the duration of the fill event.
- When you return to the Playlist screen, the M/E panel of the selected event shows the  mark .

Playing events in a playlist

About the playlist playback pointer

When playing a playlist, the Dyno controller behavior depends on whether there is a playback pointer in the playlist or not:

- If there is a playback pointer in the playlist and you press the **PL** button while in the Playlist screen, the controller cues up to the beginning of the playlist.
- If there is no playback pointer in the playlist and you press the **PL** button while in the Playlist screen, the playback pointer moves to the point where the playlist last stopped its playback.

Playing a playlist

1. Display the Playlist screen, select an event in the playlist, and press the **Cue Up** button.
2. Press the **Play** button.
 - The controller starts to play the playlist from the selected event.
 - You can also perform a slo-mo playback with the T-Bar.

Managing playlists

You can manage playlists as clips in a bin. You can also add a playlist to another playlist as a sequence clip.

This section contains the following topics:

- “Creating a new playlist”
- “Editing playlist properties”
- “Switching playlists”
- “Storing a playlist to another playlist as an event”
- “Managing playlists in a bin”

Creating a new playlist

You can create a new playlist other than the one that is displayed in the Playlist screen.


1. Press the **Shift** button, and then press the **New PL** button.
 - A new playlist is created and opened.

Editing playlist properties

You can set the name, speed, mix effects, and target duration of a playlist.

1. In the Playlist screen, open the playlist you want to edit , and touch the playlist property panel.

The Playlist Property screen appears. For more information about the indication meanings and individual panel functions, see the following table.

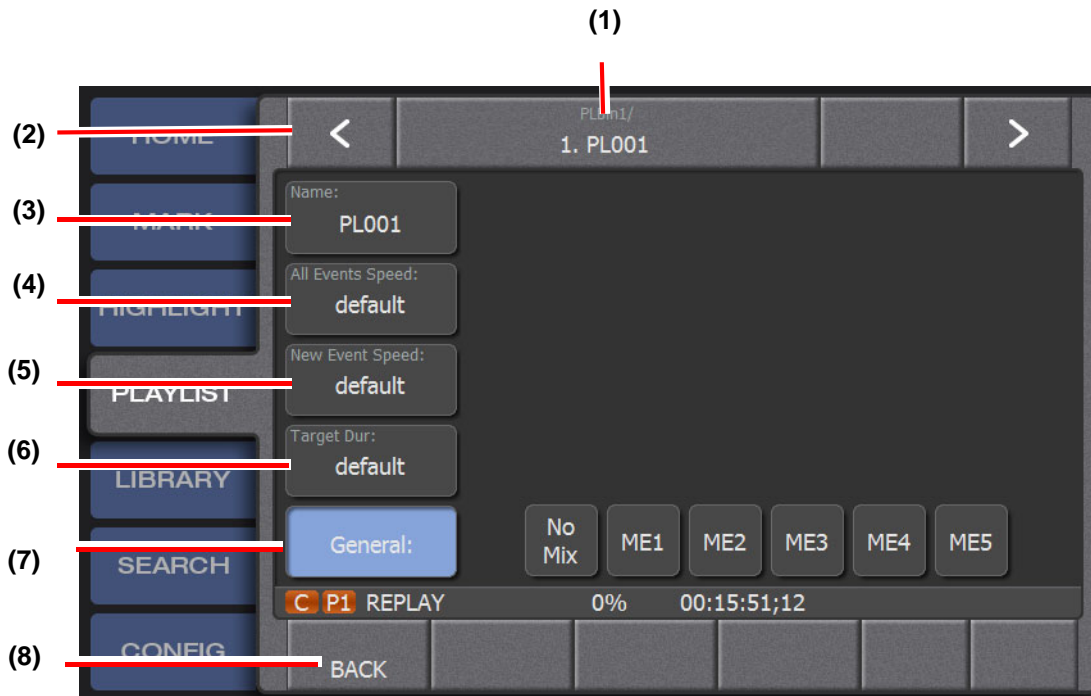

No.	Name	Function
(1)	< / >	Touch this to move to another playlist when there are multiple playlists.
(2)	Bin number/ Playlist name	Displays the number and name of the bin to which the selected playlist belongs. Touch this to move one level up in the directory switching the playlist to be shown.
(3)	Name	Sets the playlist name. Touch the panel to enter a name directly.
(4)	All Events Speed	Shows the playback speed percentage for playing a playlist within the target duration. The K2 Dyno Controller automatically sets this speed, based on settings on the Play Options screen.
(5)	New Event Speed	Shows the In point timecode of the originally stored event in the playlist side. Touch the panel to enter and change the timecode.
(6)	TargetDur	If you touch the panel and enter the duration required for an on-air broadcast, TargetSpeed is shown in the lower section. To cancel it, touch CLEAR in the duration entry screen.
(7)	General	Sets the effects for switching stored events in a playlist.
(8)	BACK	Returns to the Playlist screen.


NOTE: If you cannot select the M/E pattern you want to set, check the setting in "M/E" on the Config screen. For more information, see ["Mix effect settings" on page 92.](#)

2. After editing the information, touch **BACK**.

Inserting a fill in a video event

You can add a "fill" of black in video events.

1. In the Playlist screen, touch the event you want to insert the fill above.
2. Press the **Shift** button, and then touch **Fill**.
3. Set the duration of the fill event.

When you return to the Playlist screen, the M/E panel of the selected event shows the  mark.

Switching playlists

1. Touch the bin number/playlist name panel in the Playlist screen.
The list of the playlists in the bin is displayed.
2. Double-touch the playlist you want to switch to.
Touch the playlist, and then press the **Open** button.
The selected playlist is opened.

Storing a playlist to another playlist as an event

You can add an edited playlist into another playlist.

1. Display the destination playlist in the Playlist screen.
2. Touch the bin number/playlist name panel.
3. Touch the playlist to be nested.
4. Press the **Add PL** button.
 - The events stored in the nested playlist are added to the destination playlist.

Managing playlists in a bin

You can manage playlists as clips in a bin.

The procedures to create bins and to edit bin names are the same as those in a highlight. For more information about the operation procedures, see "[Managing highlight bins](#)" on page 58.

Library Function


This chapter consists of the following:

- "Components in the Library screen" on page 76
- "Saving and removing items in a library" on page 77
- "Managing library bins" on page 77
- "Cueing up an item by specifying it with a number (GoTo)" on page 78

Components in the Library screen

Items saved in a library are managed as clips in a bin on the Summit. Unlike an item saved in a Highlight session bin, items in the library remain saved, along with the recording data and metadata logging information, even after the session is deleted. The Library screen displays the list of items in the selected bin. By default, a bin named *Bin1* is expanded.

1. Touch the **Library** tab.
 - The Library screen appears. For more information about the indication meanings and individual panel functions, see the following table. To perform functions (indicated by the shaded area in the table) that are displayed at the top of the menu panels shown at the bottom of the screen, press the **Shift** button, and then touch the desired menu panel. For more information on how to use the **Shift** button, see ["About Shift button operations" on page 21](#).

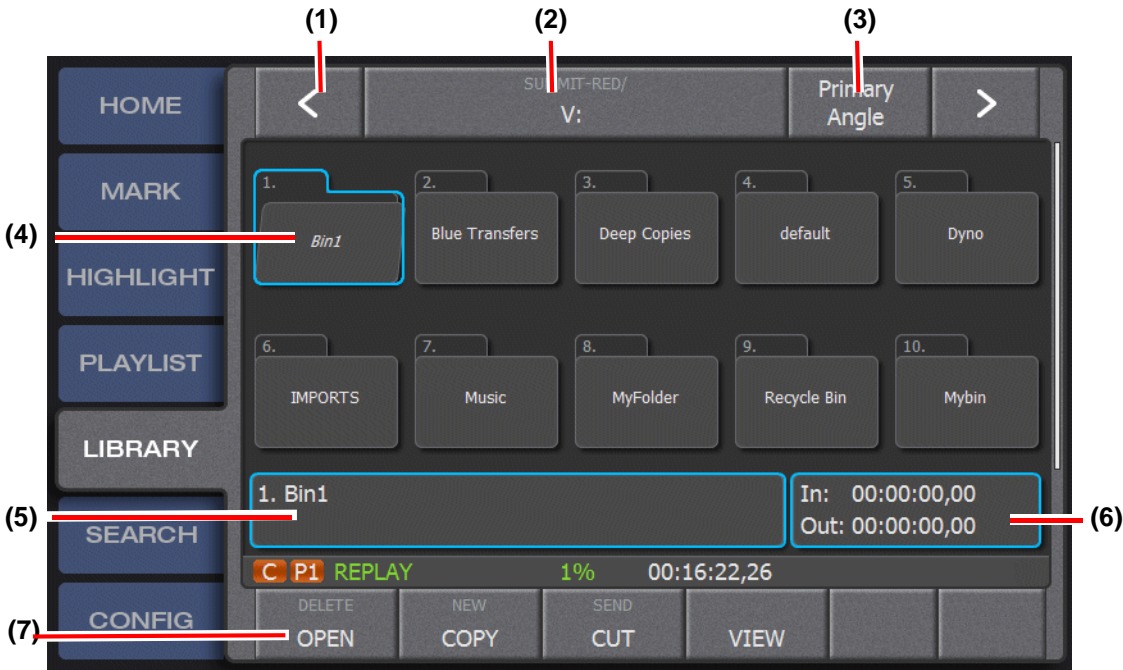

No.	Name	Function
(1)	< / >	Touch this to move to another bin on the Summit.
(2)	Path	Shows the path for the currently displayed bin. Touch this to move one level up in the directory and select a bin to be displayed.
(3)	Primary Angle	Depending on the selection, displays the items with this angle. Toggle to select other angles or to select all available angles.
(4)	Bin folder	Shows a bin. Double-touching a bin folder expands the folder. A selected bin has a blue outline around it. An opened bin is slightly askew.

No.	Name	Function
(5)	Property panel	Shows the type and number of the selected item. If you touch the panel to enter logging information for the selected item, the entered information is also displayed in the property panel.
(6)	In/Out panel	When an item is selected, this panel shows the timecodes of the selected item's mark-in and mark-out points.
(7)	DELETE	Deletes the selected item.
	OPEN	Opens the selected item.
	NEW	Creates a new library bin
	COPY	Copies an item. In the desired destination, touch Paste to copy the selected item. [Paste is not displayed until Copy has been selected.]
	SEND	Copies the selected item to the destination that you set in "Network" on the Config screen. For more information about the settings, see "Transferring items (SEND function)" on page 60.
	CUT	Removes the selected item. Touch Move to move the selected item. [Move is not displayed until Cut has been selected.]
	VIEW	Toggles the view of a shot box to display/hide the thumbnail.

Saving and removing items in a library

Items saved in a library are saved as clips in a library bin, and will not be deleted even if the session is deleted. Unlike slots in a highlight or playlist bin, you cannot specify the slot where an item in the library is stored. Items stored in a library are sorted by their names in alphabetical order.

Saving items in a library

You can store marks, scenes, highlight or playlist events in a library. When you store a highlight item that has recording data from multiple camera angles in a library, the data from each camera angle is stored as a separate library item by default

1. Select the item you want to store in the library.
2. Press the **Shift** button, and then press the **Add Lib** button.

Removing stored scenes in a library

1. In the Library screen, touch item you want to remove.
2. Press the **Shift** button, and then touch **Delete**.
3. Touch **Yes**.

Managing library bins

You can manage the saved items in a library as clips in a bin.

The procedures to edit bin names are the same as those in a highlight. For more information about the operation procedures, see ["Managing highlight bins" on page 58.](#)

Creating a new bin

You can manage items by creating library bins and switching them to store items by category.

1. In the Library screen, touch the path panel.
2. Touch **New**.
3. To enter the bin name, touch the property panel.
4. Touch **Back**.

Playing a clip created in another application

You can play a clip created in other application software using the K2 Dyno Controller.

1. Save your created clip on the K2 Summit Production Client.
2. Touch the path panel in the Library screen.
3. Double-touch the [V:/default] bin.
 - The [V:/default] bin is expanded.
4. Choose a clip and perform a playback.
 - You can perform similar operations as with other items, including performing a playback or storing items to a playlist.

Disabling Show Sessions Bins in library

By default, the K2 Dyno Controller displays the session bins in the library. To hide session bins, follow these steps.

1. Touch the **Config** tab, and then touch **User**.
2. Next to **Show session folders in library**, touch **No**.

Cueing up an item by specifying it with a number (GoTo)

You can cue up an item by entering its number or timecode.

1. Press the **Goto** button.

The Goto screen opens.



2. To go to a particular bin, a particular item in a bin, or a particular angle of an item, touch **Shotbox** and enter the number in the keypad. For example, typing in *1.3* takes you to bin 1, slot 3.
3. To locate a timecode, touch **Timecode** and enter the number in the keypad. If you enter a timecode, the +, or - buttons let you tweak the value so you don't have to enter in a complete new timecode. You can specify a timecode from 0 to 24 hours in the same session.
4. Enter the number or timecode, and then press **OK**.

USO RESTRITO

Search Function

This chapter consists of the following:


- ["Components in the Search screen" on page 82](#)
- ["Entering search criteria" on page 83](#)

Components in the Search screen

The Search screen is a screen for searching either marks/scenes, highlights/playlists, or libraries by logging information and time codes.

1. Touch the **Search** tab.
 - The search result screen appears. The view of the search result screen is different between the mark/scene, highlights/playlists, and libraries search result screens.
 - For more information about the indication meanings and individual panel functions, see the following table. To perform functions(indicated by the shaded area in the table) that are displayed at the top of the menu panels shown at the bottom of the screen, press the **Shift** button, and then touch the desired menu panel. For more information on how to use the **Shift** button, see ["About Shift button operations"](#) on page 21.

The search result screen

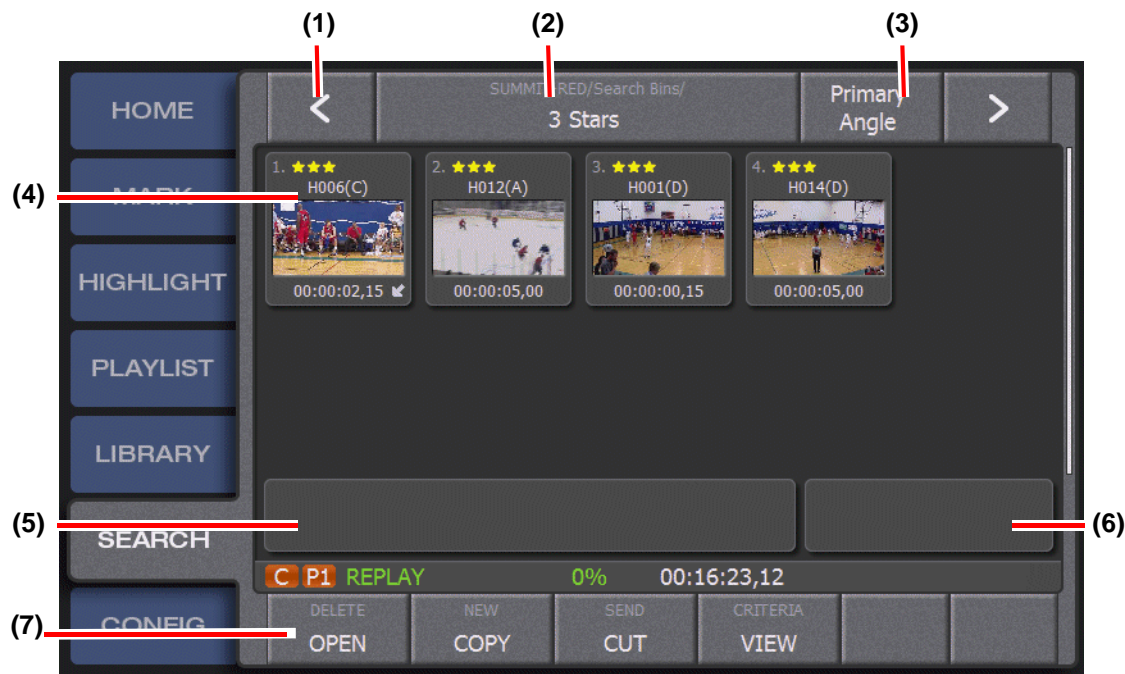

No.	Name	Function
(1)	< / >	Touch this to move to another bin when there are multiple bins in the current directory.
(2)	Bin number / Bin name	Shows the number and name of the displayed Search bin. Touch this to move one level up in the directory and select a Search bin to be displayed.
(3)	Angle	Depending on the selection, displays the playlists with this angle. Toggle to select other angles or to select all available angles.
(4)	Search result list	Shows the list of the search results.

No.	Name	Function
(5)	Property panel	When an item is selected, this panel shows its type and number. If you touch the panel to enter logging information for the selected item, the entered information is also displayed in the property panel.
(6)	In/Out panel	When an item is selected, this panel shows its mark-in and mark-out point timecodes.
(7)	DELETE	Deletes the selected item.
	OPEN	Opens the selected item.
	NEW	Inside a bin, creates a new search. At bin level, creates a new search bin.
	COPY	Copies an item. In the desired destination, touch Paste to copy the selected item. [Paste is not displayed until Copy has been selected.]
	SEND	Copies the selected item to the destination that you set in "Network" on the Config screen. For more information about the settings, see "Transferring items (SEND function)" on page 60.
	CUT	Removes the selected item. Touch Move to move the selected item. [Move is not displayed until Cut has been selected.]
	CRITERIA	Lets you add, edit, or remove search criteria. You can designate the search as session only.
	VIEW	Toggles the view of the item between the thumbnail and the keyword.

Entering search criteria


You can search highlights, playlists, or library items by entering search criteria.

Search conditions can be set in advance. Any item that matches the criteria is added to the search result. Toggling the available buttons lets you select various conditions and boolean operators.

If your K2 Summit Production Clients are on a K2 SAN, you can directly access items in the shared storage without transferring.


1. In the Search screen, press **Shift** and touch **Criteria**.

The Search Criteria screen opens.

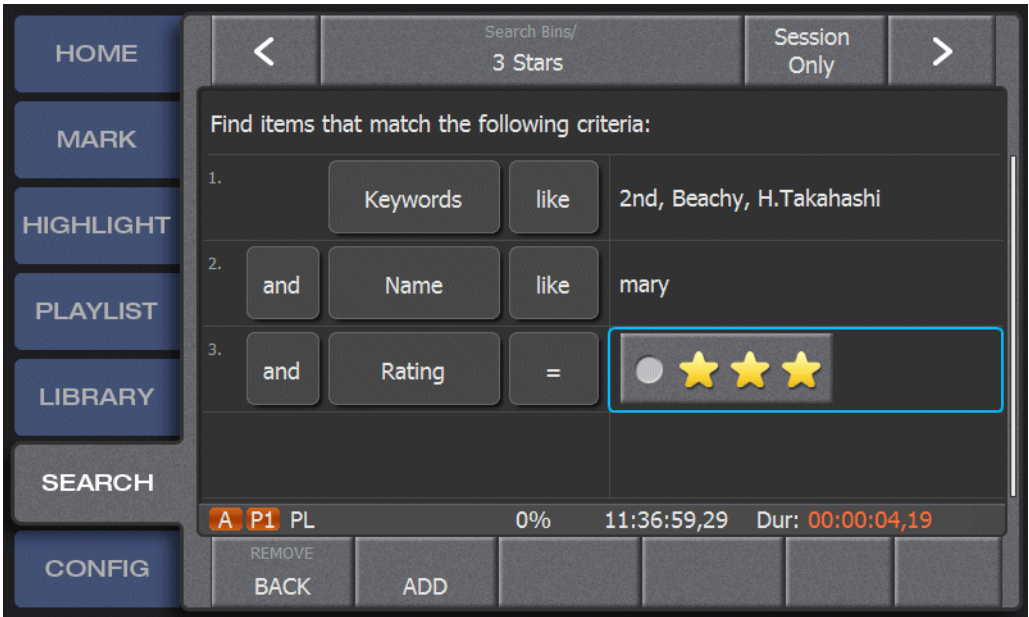

- 2. By default, a search is defined for this **Session only**. If desired, you can toggle this button to specify the search to be **Library only** or **Session and library**.
- 3. To add search criteria, touch **Add**. Toggle the selections to see all the available conditions.
- 4. When finished, touch **Back**.

The Search Results screen displays the results of the search.

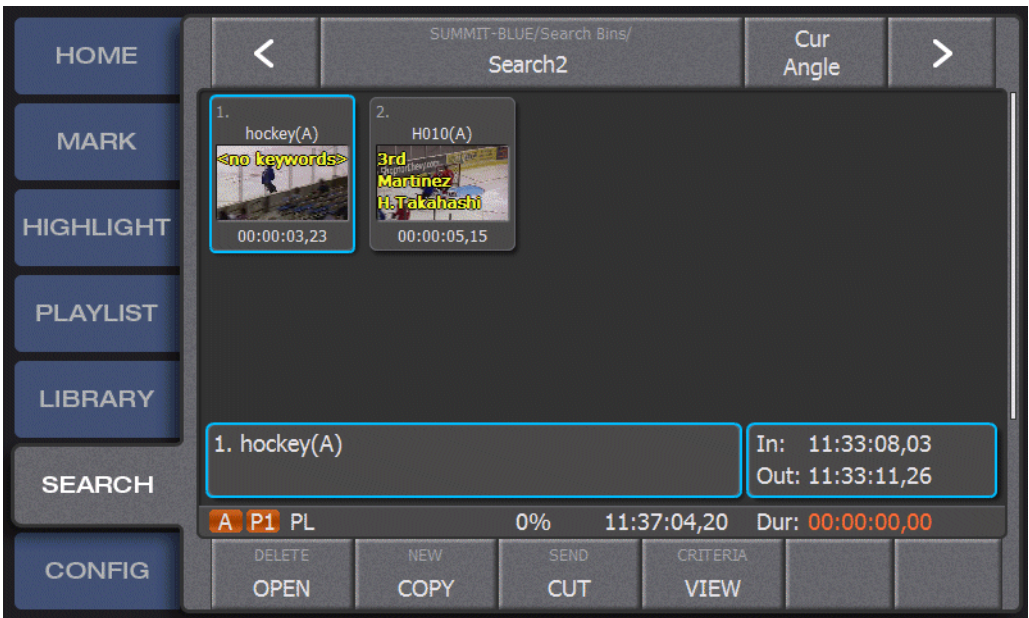

Settings

This chapter consists of the following:

- "Controller settings" on page 86
 - "Record train length allocation settings" on page 86
 - "User settings" on page 87
 - "Clip settings" on page 89
 - "Effects settings" on page 90
 - "Network settings" on page 91
 - "Mix effect settings" on page 92
 - "Configuring the T-Bar settings: default and alternate" on page 93
 - "Configuring the export settings and destination" on page 94
- "Audio level settings" on page 96
 - "Setting the Auxiliary Audio" on page 97
- "Exporting a log" on page 99
- "Checking the version" on page 99
- "Editing and storing keywords" on page 99
- "Importing/Exporting" on page 103

Controller settings

You can change various settings for the K2 Dyno Controller to suit your preferences in the Config screen. The settings can be exported to a USB storage device to import them to another K2 Dyno Controller. For information about importing and exporting, see ["Importing/Exporting" on page 103](#).

1. Touch the **Config** tab.

- The Config screen appears. For information about the indication meanings and individual panel functions in each setting screen, refer to the description for each setting.

Notes for displaying the Config screens simultaneously on two K2 Dyno Controllers

When two K2 Dyno Controllers are joining in the same session, any settings that are changed screen on either of the controllers will be applied to the other one automatically. If changes are being made to the configuration on both controllers, the last change made on either controller takes effect.


Record train length allocation settings

Loop length is the amount of record time before the Dyno Controller starts overwriting. The actual available recording time depends on the remaining space in the Summit.

User settings

You can customize the Dyno Controller settings to suit your workflow. Your changes are saved with the session. A new session is based on the previous session's settings.

1. Touch the **Config** tab, and then touch **User**.
2. Set items.
 - For information about the indication meanings and individual panel functions, see the following table.

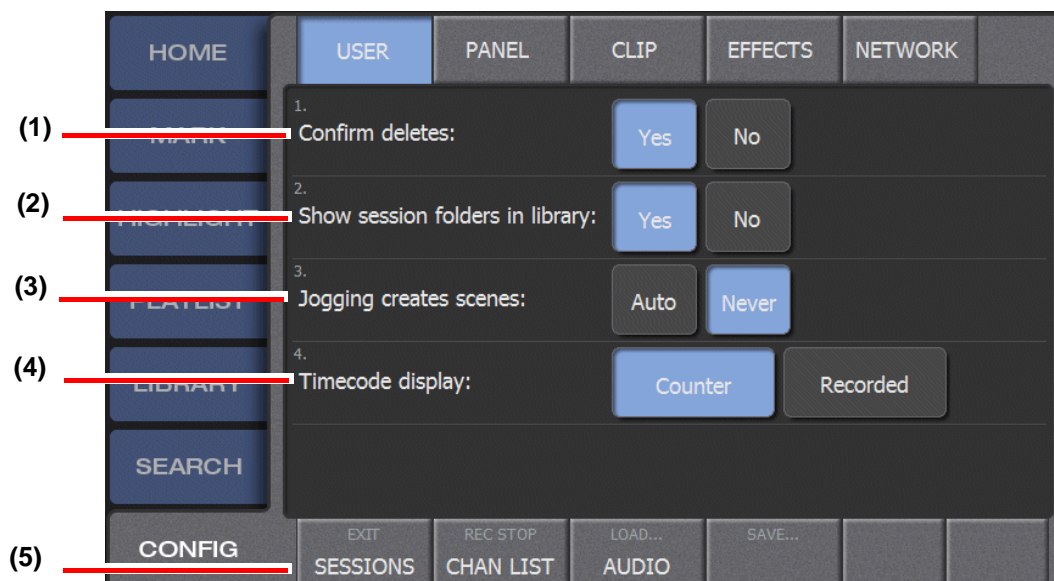


No.	Name	Function
(1)	Confirm deletes	By default, the Dyno controller displays a confirmation dialog box when you delete an item.
(2)	Show session folders in library	By default, the Dyno controller displays the session folders in the library.
(3)	Jogging creates scenes	When Auto is selected, using the Jog knob takes the Dyno out of Live mode and starts a scene.
(4)	Timecode display	By default, the timecode display is set to Counter .
(5)	Exit	Opens the Exit Options screen.
	Sessions	Lists the sessions saved on this Dyno controller. You can delete one or all sessions not currently in use. Deleting previous session frees up space on the Dyno.
	Rec Stop	Stops recording
	Chan List	Displays the configurations of the channels on the Summit used with the current session.
	Load	Opens a saved keyword or configuration file.
	Audio	Opens the Audio Meters panel.
	Save	Saves the configuration settings in a file.

Panel settings

You can set settings for video and audio mix effects.

- 1. Touch the **Config** tab, and then touch **Panel**.
- 2. Set items. For information about the indication meanings and individual panel functions, see the following table.

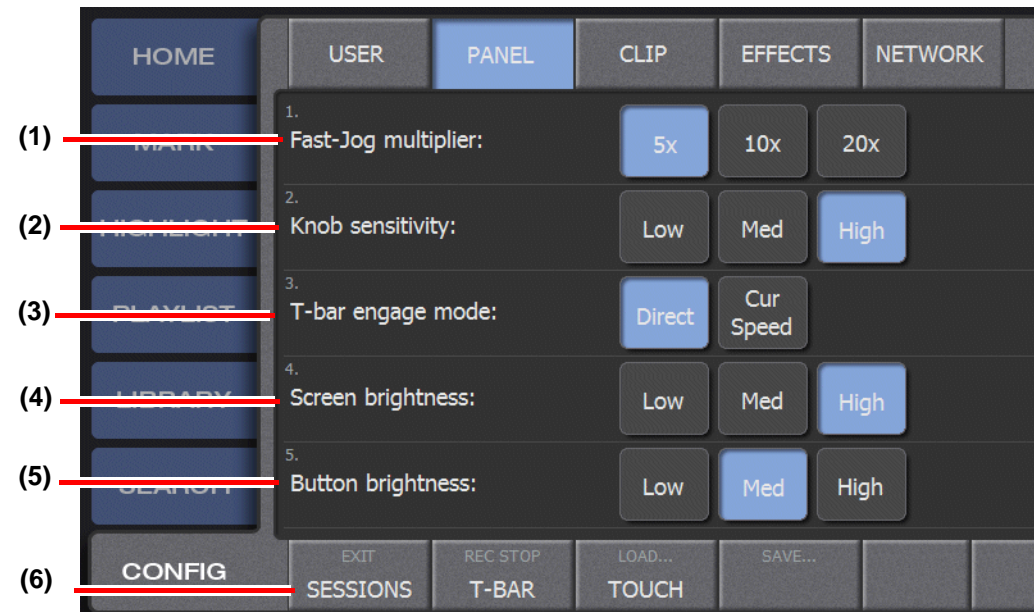


No.	Name	Function
(1)	Fast-Jog multiplier	Set the jog speed the speed multiplied by the selected value in reference to the normal jog speed.
(2)	Knob sensitivity	Set the sensitivity of the Jog knob
(3)	T-bar engage mode	Also referred to as lever engage mode. Select Direct to reflect the T-Bar operation to the playback speed immediately after you operate the T-Bar. Select Cur Speed to reflect the T-Bar operation when it is set faster than the current speed.
(4)	Screen brightness	Determine the overall brightness of the screen. You can adjust the brightness for maximum visibility for the lighting of the room that the Dyno Controller is located in.
(5)	Button brightness	Determine the brightness of the buttons. You can adjust the brightness for maximum visibility for the lighting of the room that the Dyno Controller is located in.

No.	Name	Function
(6)	Exit	Opens the Exit Options screen.
	Sessions	Lists the sessions saved on this Dyno controller. You can delete one or all sessions not currently in use. Deleting previous session frees up space on the Dyno.
	Rec Stop	Stops recording
	T-Bar	Sets the T-bar speeds
	Load	Opens a saved keyword or configuration file.
	Touch	Opens the touch screen calibration screen.
	Save	Saves the configuration settings in a file.

Clip settings

You can set settings for clips.

1. Touch the **Config** tab, and then touch **Clip**.
2. Set items. For information about the indication meanings and individual panel functions, see the following table.

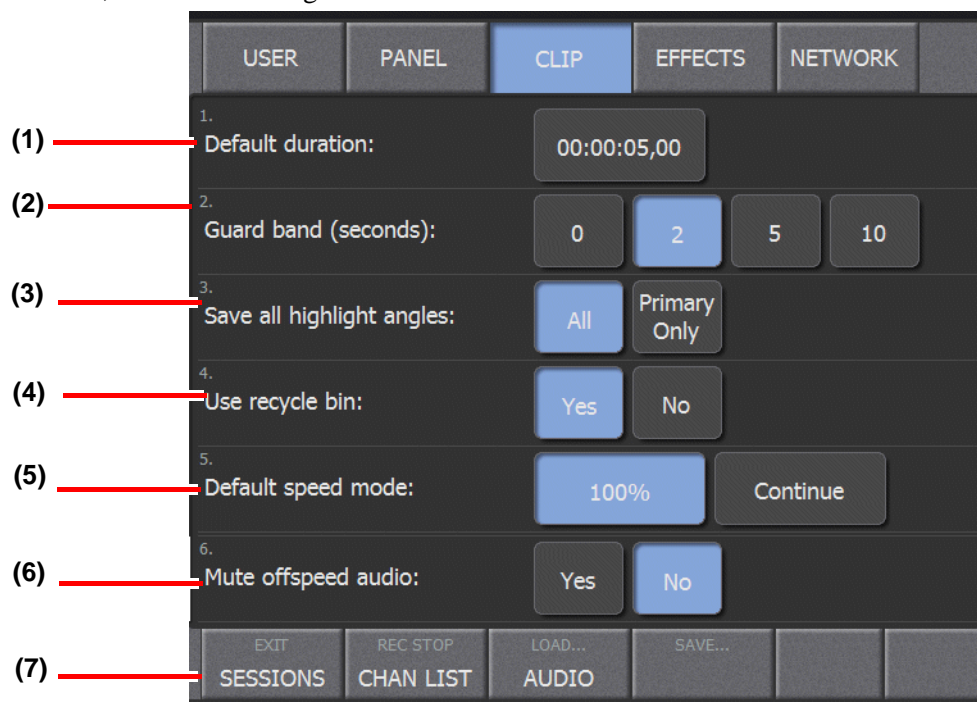


No.	Name	Function
(1)	Default Duration	Touch the timecode to change the default duration for clips by entering a value. This setting will be reflected as the duration in cases where you store a mark with only the In point to a highlight/playlist, or you press the Out button without pressing In button to create a scene during a live playback or while playing the record train.

No.	Name	Function
(2)	Guard band	The guard band is a function to protect recording data for a scene that is stored in a highlight, library, or playlist from being overwritten by a LoopRec operation. Make settings on the File Export screen to transfer items including their guard band parts with the SEND function. See "Network settings" on page 91 . If you make a change to this setting, it applies to new highlights, not highlights already created.
(3)	Save All Highlight Angles	Turn this on to store recording data for all angles when storing an item in a highlight. Turn this off if you want to store only the Primary angle.
(4)	Use recycle bin	If you delete a session, any clip that references that session's record train is deleted, not matter where it is stored. For example, a clip in the recycle bin on the Library tab will be deleted when you delete the session associated with it.
(5)	Clip Follow Mode	Default speed: In a playlist, if one event has a set speed and the next event does not, the playlist returns to the default speed. Continue speed: In a playlist, if one event has a set speed and the next event does not, the set play speed continues .
(6)	Mute offspeed audio	Selects the settings for audio playbacks when playing items with the player you selected in "Player" with the T-Bar operation. <ul style="list-style-type: none"> • Mute OFF: Audio is also played. • Mute ON: Audio is muted.
(7)	Exit	Opens the Exit Options screen.
	Sessions	Lists the sessions saved on this Dyno controller. You can delete one or all sessions not currently in use. Deleting previous session frees up space on the Dyno.
	Rec Stop	Stops recording
	Chan List	Displays the configurations of the channels on the Summit used with the current session.
	Load	Opens a saved keyword or configuration file.
	Audio	Opens the Audio Meters panel.
	Save	Saves the configuration settings in a file.

Effects settings

You can set settings for video and audio mix effects.

1. Touch the **Config** tab, and then touch **Effects**.
2. Set items. For information about the indication meanings and individual panel functions, see the following table.

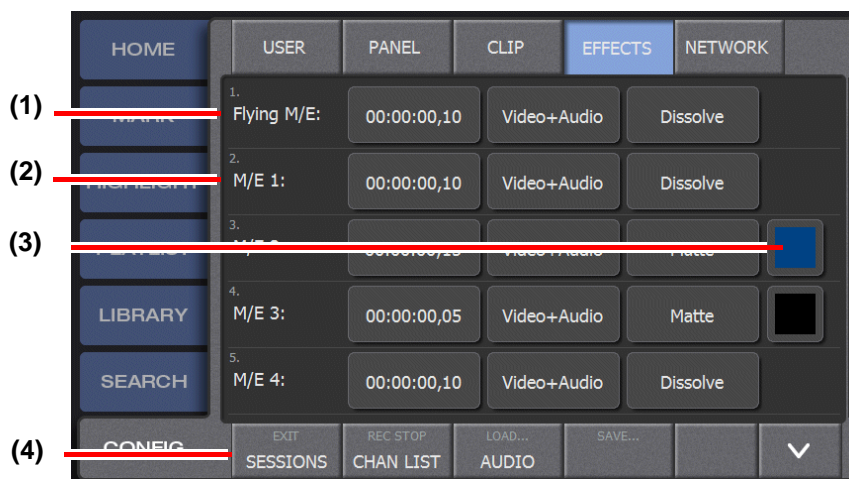


No.	Name	Function
(1)	Flying M/E	Flying M/E is an effect for switching angles or changing cue up points. For flying mix effects, specify the duration of the effect (up to a maximum of 15 frames), whether the effect is applied to video, audio, or both, and whether to use a dissolve or matte effect.
(2)	M/E 1-5	For up to five mix effects, specify the duration of the effect, whether the effect is applied to video, audio, or both, and whether to use a Dissolve or Matte effect.
(3)	Matte color	If the Matte effect is selected, the Matte color displays. Touch the color to bring up the palette of available colors.
(4)	Exit	Opens the Exit Options screen.
	Sessions	Lists the sessions saved on this Dyno controller. You can delete one or all sessions not currently in use. Deleting previous session frees up space on the Dyno.
	Rec Stop	Stops recording
	Chan List	Displays the configurations of the channels on the Summit used with the current session.
	Load	Opens a saved keyword or configuration file.
	Audio	Opens the Audio Meters panel.
	Save	Saves the configuration settings in a file.

Network settings

You can set settings for video and audio mix effects.

1. Touch the **Config** tab, and then touch **Network**.
2. Set items. For information about the indication meanings and individual panel functions, see the following table.

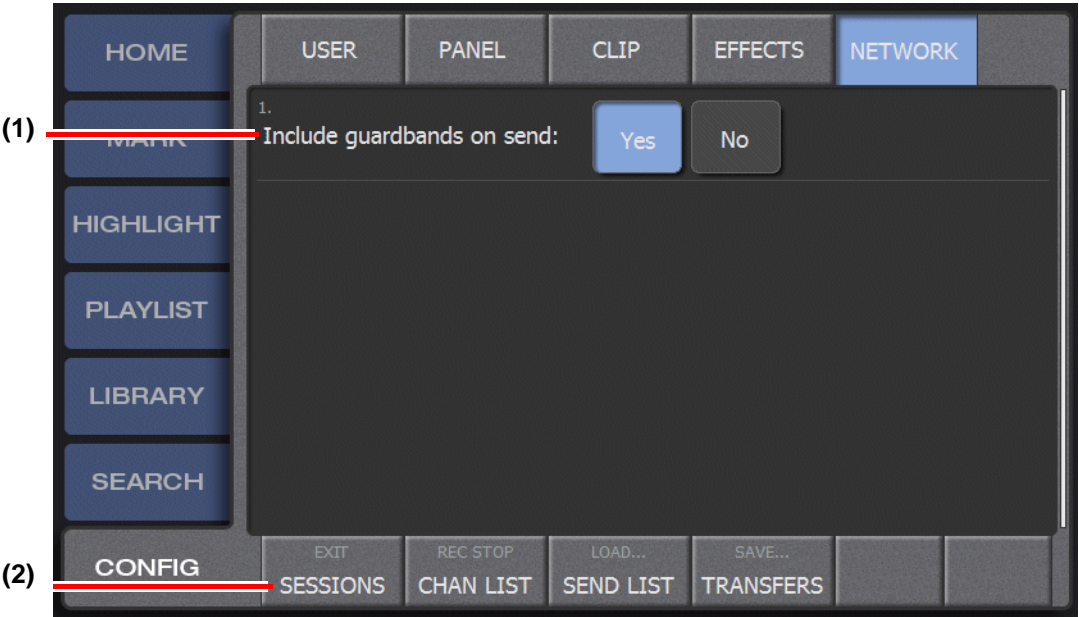

No.	Name	Function
(1)	Include guardbands on send	By default, guard bands are included when transferring an item.
(2)	Exit	Opens the Exit Options screen.
	Sessions	Lists the sessions saved on this Dyno controller. You can delete one or all sessions not currently in use. Deleting previous session frees up space on the Dyno.
	Rec Stop	Stops recording
	Chan List	Displays the configurations of the channels on the Summit used with the current session.
	Load	Opens a saved keyword or configuration file.
	Send List	Lists the transfer destinations and settings. You can add, delete, or browse to a transfer destination as well as select the transfer format and angles.
	Save	Saves the configuration settings in a file.
	Transfers	Opens the Transfers screen.

Mix effect settings


M/E with both "Video" and "Audio" turned off will be skipped when you choose an M/E pattern in the Playlist screen. It is useful when you want to remove unnecessary patterns from the M/E choices.

If the M/E has a duration of 0, that effect will be skipped in the playlist if you touch the **All M/E** button. By default, M/E 4 and 5 have 0 duration.

Any changes you make to the M/E settings in the Config screen during a session are not reflected to the M/Es that are already being used in a playlist. If you load a playlist that has effects which are no longer reflected in the configuration, that playlist event displays “ME” rather than a specific effect such as ME1 or ME2.


Configuring the T-Bar settings: default and alternate

- 1. Touch **Config | Panel**, and then touch **T-BAR**.
- 2. If configuring the Default settings, refer to the following table.

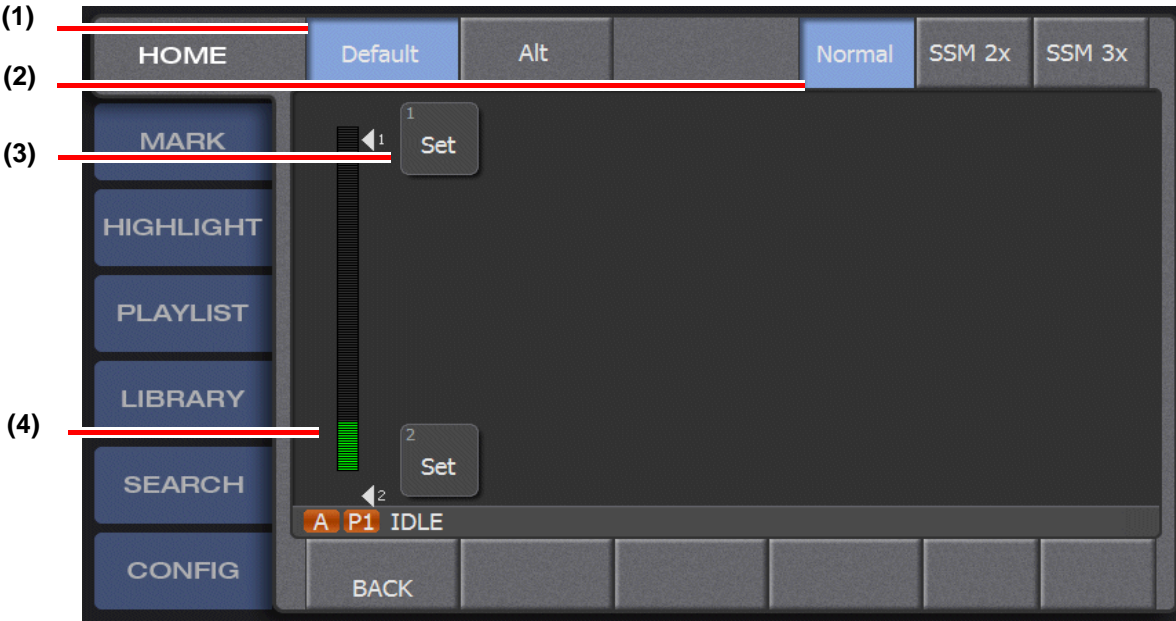

No.	Name	Function
(1)	Default setting	Select to apply remaining settings to normal T-Bar operation.
(2)	Clip type	Set the clip type as follows: x1: Normal clip x2: Super Slo-Mo x2 clip x3: Super Slo-Mo x3 clip When you select a clip type, the remaining settings apply to that clip type.
(3)	Configure position	Enter your desired T-Bar position as a numeric value.
(4)	Speed	Set the playing speed corresponding to the T-Bar position.

3. If configuring the Alternative settings, refer to the following table.

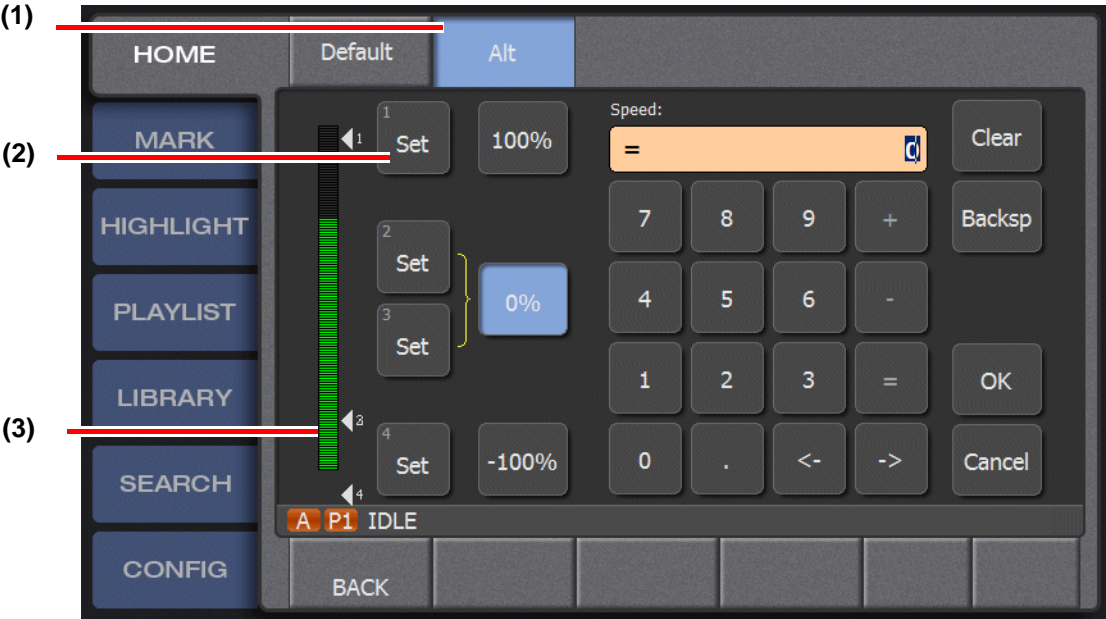


No.	Name	Function
(1)	Alternate setting	Select to apply remaining settings to T-Bar operation when the “ALT T-BAR” button is on in Play Option.
(2)	Configure position	Enter your desired T-Bar position as a numeric value.
(3)	Speed	Set the playing speed corresponding to the T-Bar position.

Configuring the export settings and destination

1. In the **Config** tab, touch **Network | Send list**.

The Transfer Destinations screen opens.

2. Set the item.

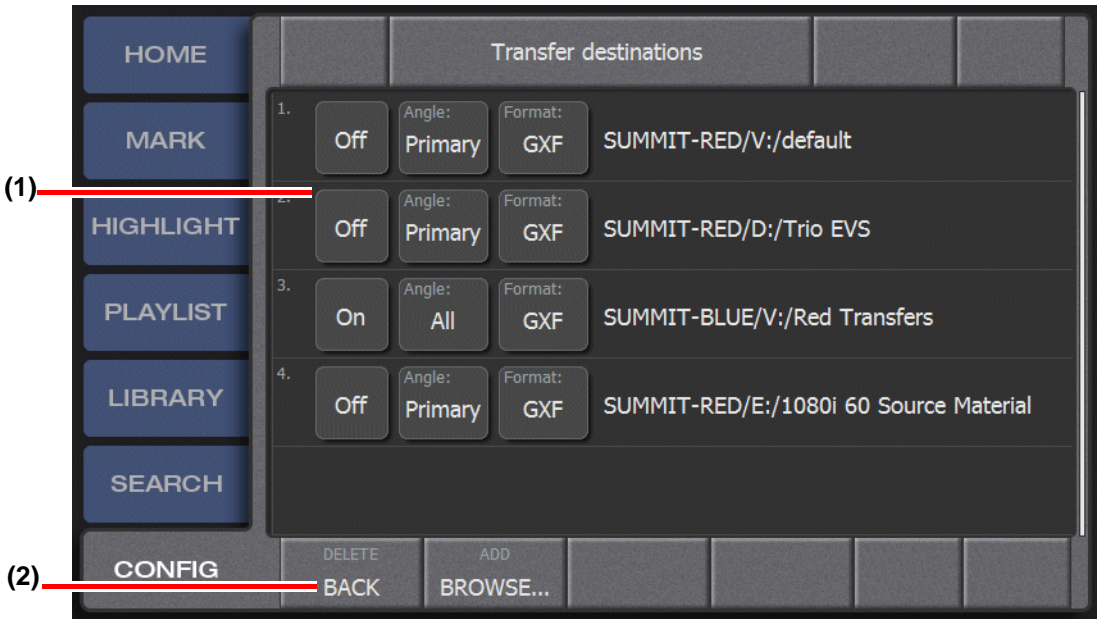

No.	Name	Function
(1)	On/Off, Angle, Format	<p>Every touch switches between "ON" and "OFF". Data is sent to the path(s) that is set to "ON", while no data is sent to the path(s) that is set to "OFF". Shows the angle to be sent.</p> <ul style="list-style-type: none">Choose Primary to send only the angle data that is set as primary.Choose ALL to send all of the protected angle data.Choose A, B, C, D, E, or F to send the angle data of the selected angle(s) among them. <p>Shows the configured path. The following restrictions apply to the File Type (container format) when transferring items:</p> <ul style="list-style-type: none">Playlists can be transferred only in GXF format. Transfer in MXF or QuickTime format cannot be performed.When you transfer in QuickTime with Metadata format, you transfer a directory structure that includes xml files that describe the project, media files, and a .mov file.
(2)	Delete	Deletes the selected transfer destination
	Back	Returns to the Network screen
	Add	Adds a new transfer destination
	Browse	Lets you scroll through the list of available K2 Summit servers or add a new K2 Summit server as a transfer destination.

Adding a server

The authentication information (user name and password) is required to connect to the drive on the network. Configure the PC to allow connection with the following authentication information in advance:

User name: **Administrator**, Password: **adminK2**


- Enter the drive name to specify the USB storage device connected to the Summit. For example, when you specify a "temp" folder in the USB memory (Drive: D) connected with the Summit, enter "D:\temp" with the keyboard.
- Enter the computer name to specify the hard disk of the network-connected PC, not the drive letter. Do not use the IP address. For example, when you specify a "temp" folder in the hard disk of the PC network-connected with the Summit, enter "\\Dyno-PC\temp" with the keyboard. (In this case, the computer name is "Dyno-PC", "temp" folder of the PC is connected with the Summit, and the drive letter is "Z")
- The specified folder of the destination PC is not required to be connected during its setting. (It is required to be connected when transferring the data.)
- Do not specify the local disk (Drive: C, etc.) of the Summit as the destination because of its protection function.

Audio level settings

You can adjust the audio level for each channel and each audio track.

1. In the Home screen, touch the Audio Meters panel.

The Audio Level Setting screen appears. For information about the indication meanings and individual panel functions, see the following table.

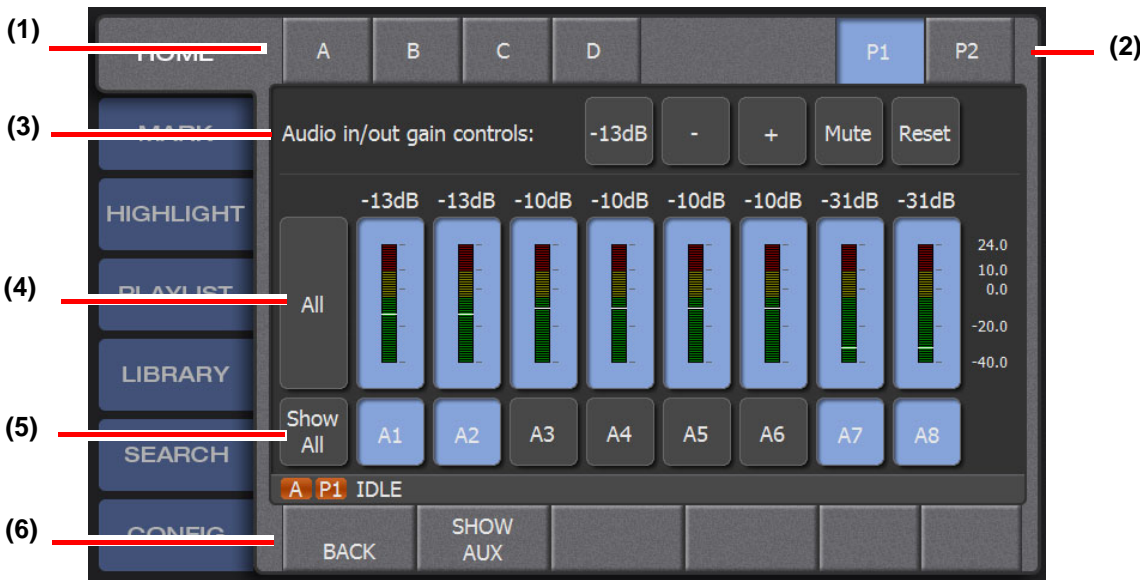

	Name	Function
(1)	Channel/Angle selection	For Recorder channels, select the camera angle for which you are setting the audio. For Player channels, select the channel for which you are setting the audio. By default, the player of the operation target channel is selected.

	Name	Function
(2)	Audio gain controls	Sets an audio level. Use the +/- controls to increase or decrease the audio level Mute: Mutes the audio. You can mute the audio without changing the set values even when the audio levels for the selected channels or audio tracks are not the same. Restore: sets all the audio levels for the selected audio tracks to 0 dB.
(3)	Audio Meters display	The audio level for each audio track is shown at the top. Touching All toggles between all selected and all deselected.
(4)	Audio track selection	Select the audio tracks to be set. If you select Show All , you must select or deselect the tracks individually. If no audio tracks are selected, the Audio Meters panel on the Home screen is blank.
(5)	BACK	Return to previous screen with any changes to the audio settings saved.
	SHOW AUX	Opens the Auxiliary Audio screen.

2. After editing the information by touching each panel, touch **Back**.

To add auxiliary audio, see [“Setting the Auxiliary Audio”](#).

Setting the Auxiliary Audio

The auxiliary audio lets you play music behind a video. For example, when you create a playlist, you could add an auxiliary audio track to play an introduction to the video.

1. In the Home screen, touch the Audio Meters panel.
2. Touch **Show Aux**.

The Auxiliary Audio screen opens.



3. Make the following selections:

- a. Touch **Enable Aux**.
 - b. Touch the **P1** or **P2** player channel.
 - c. Touch the audio tracks that you want in the Main or the Aux row.
4. When you have finished, touch **Back** to return to the Audio Level Setting screen with the changes saved.


TIP: To go directly to the Home screen, press the Home tab. The changes to this screen are still saved. Pressing a tab takes you to that screen without having to use the Back button.

Exporting a log

Logs can be accessed from the K2 Summit system, not the K2 Dyno Controller.

Checking the version

You can check the version of your K2 Dyno Controller on the Home screen.

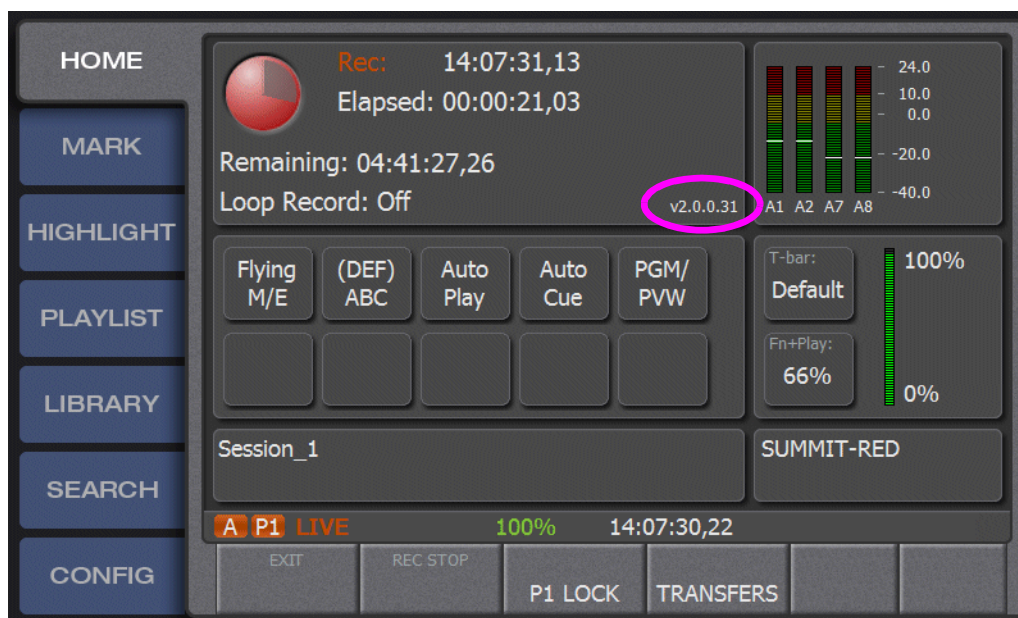

Deleting a session

You can select and delete a session or sessions on the K2 Summit. Currently used sessions cannot be deleted.

1. In the **Config** tab, touch **Panel | Sessions**.
2. Touch **Session List**.
 - Touching this displays the list of the sessions saved on the Summits.
3. To delete a session or sessions, follow these steps:
 - To delete a single session, select it and then touch **Delete**.

To delete all sessions shown in the list, press the **Shift** button and touch **Delete All**.

Editing and storing keywords

You can edit the selection panel to be displayed when you enter names/keywords/ icons of logging information, bin names, or playlist names.

These data is in XML format and is edited using a dedicated editor software.


Editing keywords

NOTE: You must install *KeywordEditor* on the PC to be used for editing beforehand.

Keyword editing


You can edit the selection panel to be displayed for names/keywords of logging information, bin names, or playlist names. If you want to edit it on an external PC, save your edited file in a external storage device that can be connected via USB.


1. Double-click and run *KeywordEditor.exe*.
 - You can also click the **start** menu, and then click **K2 Dyno | Keyword Editor** to run it.
2. Click **Keyword Edit**.
3. Click **Edit | Add Category** in the menu bar to create a category folder.

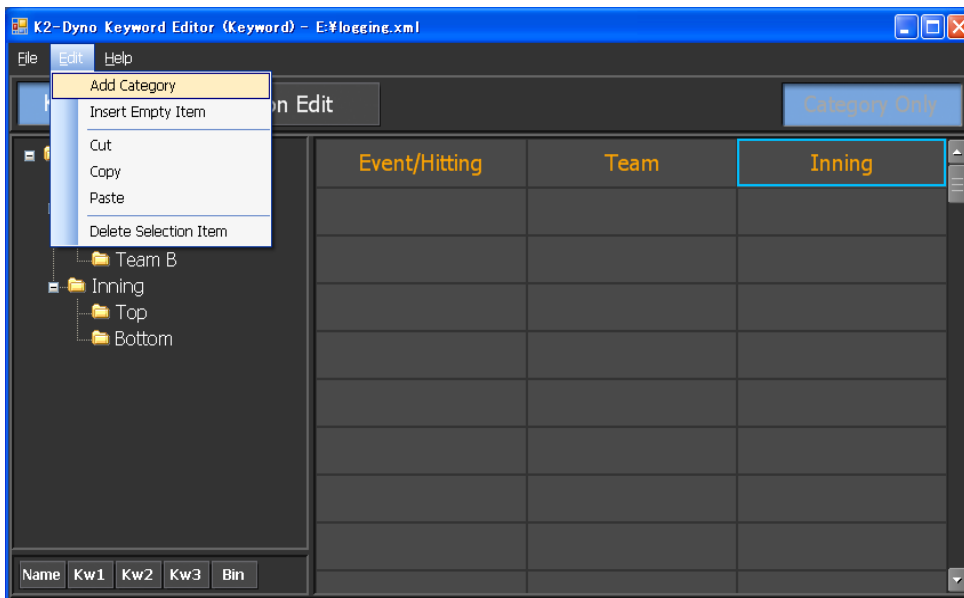

- A category folder is created.
- If you want to edit an existing file, click **File | Open file...** in the menu bar to select a file.
- You can drag and drop category folders in the tree view to move their levels or locations in the directory.

NOTE: The created category folders can be displayed by default when you enter a name, keyword (1 to 3), or bin name.


Click a category folder, and then click **Name**, **Kw1**, **Kw2**, **Kw3**, or **Bin** to set this setting. A folder that is set as default changes to a blue circle  icon.

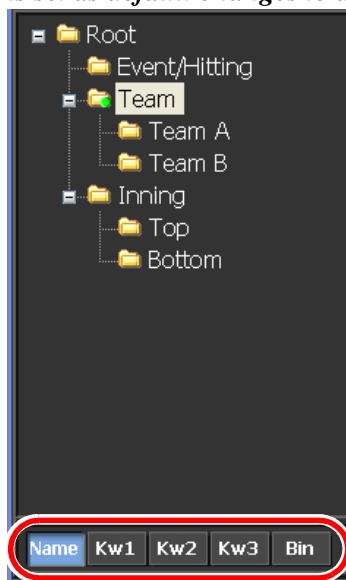

4. Click the panel, and then enter a keyword.


- A keyword is displayed correctly on a shot box if is entered within single-byte 12 or double-byte 6 characters.
- To cut, copy, or paste a keyword, select a panel and then click **Edit | Cut**, **Copy**, or **Paste** in the menu bar.
- You can drag and drop a panel to move a location of a category or keyword. In addition, you can drag and drop a panel onto a category folder in the tree view to move it to a different category folder.
- A blank keyword item can be added by clicking **Edit | Insert Empty Item** after selecting a panel. This is useful if you want to manage keywords according to their positions.
- If you click **Category Only** to turn it on, only the category folder names will be displayed and keywords will be hidden.

- Category names are displayed in orange and keywords are displayed in white.

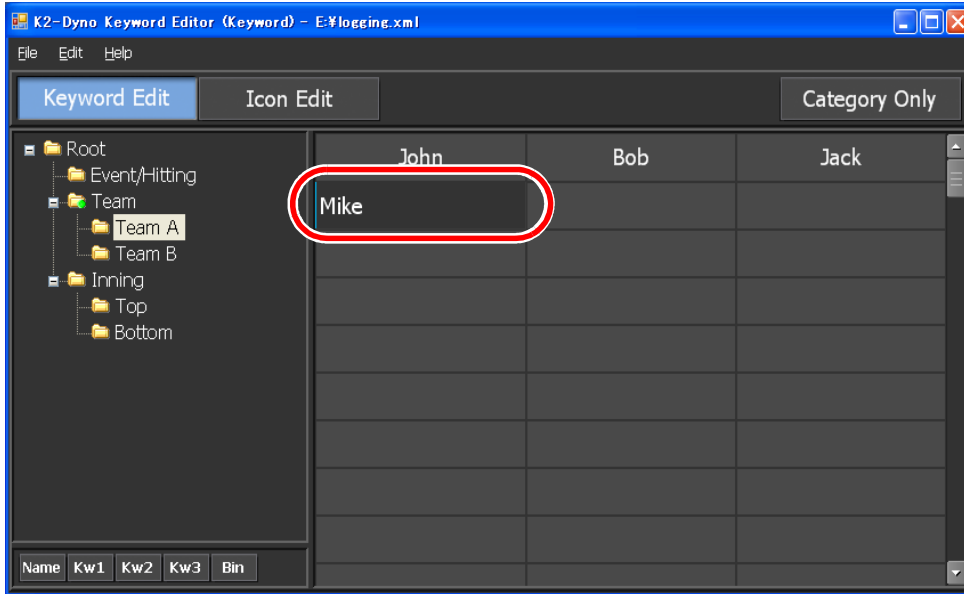

- If you want to delete a category folder or keyword, select the panel and click **Edit | Delete Selection Item** in the menu bar.

NOTE: Keywords of a different file can be merged with a file you are editing. Click **File | Merge file...** and specify a file to be merged. You can also drag and drop a different file onto the file you are editing to merge them.

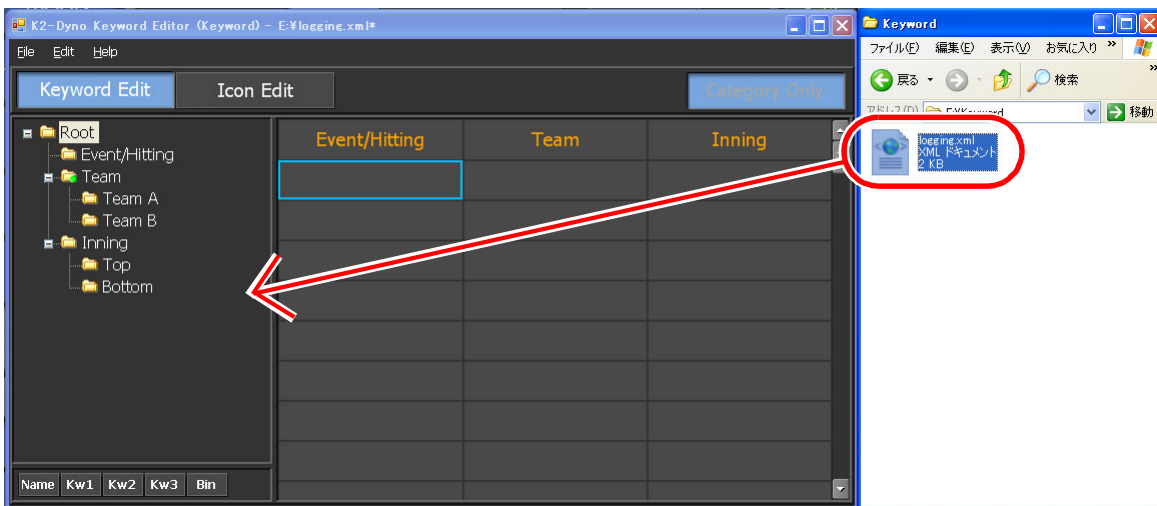

NOTE: You can copy and paste keywords from an Excel file to enter them. Each string entered in a single cell in an Excel file becomes a single keyword.

5. Click **File | Save as...** in the menu bar to name and save the file.

- If you want to overwrite the existing file, click **Save**.
- If you want to edit an existing file, click **File | Open file...** in the menu bar to

select a file.

NOTE: Keywords of a different file can be merged with a file you are editing. Click **File | Merge file...** and specify a file to be merged. You can also drag and drop a different file onto the file you are editing to merge them.

6. Click **File | Save As...** in the menu bar to name and save the file.

- If you want to overwrite the existing file, click **Save**.

Importing/Exporting

You can import or export various data, such as configuration information, keywords, or clips. You can import or export data via a USB drive or, when the K2 Dyno Controller is connected to another controller via a network, you can import or export the data directly.

Before you can export data, you must set the file export path as described in ["Configuring the export settings and destination" on page 94](#).

TIP: To monitor the progress of the transfer, on the **Config** tab touch **Network | Transfers**.

Importing

1. Insert the USB drive.
2. Touch the **Library** tab and the **Dyno Controller** bin.
3. Double-touch to open the USB drive.
4. Select a file, and then touch **Copy**.
5. In the destination bin, touch **Paste**.

Exporting

1. Touch the item in the Highlight, Playlist, Library or Search screens.
2. Select the desired clip.
3. Touch **Send**.




















USO RESTRITO



















This chapter consists of the following:



- ["Button Operation" on page 106](#)
- ["Restrictions on the LoopRec setting" on page 108](#)

Button Operation

Operations when you press each button are listed.

			After pressing Shift	
	Add PL	Add item to Playlist	New PL	Create new Playlist
	Add HL	Add item to Highlight	Add Lib	Add item to Library
	Cue Up	Cue & continue	Match	Match frame to record train
	A	Switch A & continue	D	Switch D & continue
	B	Switch B & continue	E	Switch E & continue
	C	Switch C & continue	F	Switch F & continue
	Play	Playback 100% speed	Fast	Fast Jog mode On/Off
	Stop	Stop the playback	Open	Open the bin or Playlist Add selected item to new Playlist
	Previous	Cue previous & continue	Previous	Rewind cue previous & stop
	Next	Cue next & continue	Next	Rewind cue next & stop
	Live	Go LIVE mode	Local	Display Home screen
	Add Mrk	Add mark	Brws	Switch to Browse mode
	P1	Select P1-ch(Gang Off)	PGM	On-air preview mode/Multi-channel mode toggle
	P2	Select P2-ch(Gang Off)	PVW	On-air preview mode/Multi-channel mode toggle
	PL	Display Playlist (Press 3 times to cue up to the beginning of a playlist.)	M/E	Flying M/E On/Off
	Goto	Open goto window	Send	Transferring items
	In	Mark In	Top	Goto the beginning
	Out	Mark Out	Btm	Goto the ending
	Take	Close, skip	Trim	Enter trim mode, Cancel

	After pressing Fn		After pressing Shift	
	Add angle	Add an angle to a playlist		
				
	Cue Up	Cue & stop		
	A	Cue In point & continue	D	Cue In point & continue
	B	Cue In point & continue	E	Cue In point & continue
	C	Cue In point & continue	F	Cue In point & continue
	Play	Play in preset speed		
	Previous	Cue previous & stop		
	Next	Cue next & stop		
				
				
	P1	Release/Take P1-ch		
	P2	Release/Take P2-ch		
				
				
	In	Cancel mark in		
	Out	Cancel mark out		
	Take	Swap channel contents		

Pressing P1, P2 at the same time		
		P1, P2 P1/P2 Gang on

Restrictions on the LoopRec setting

Continuous recording for a long period of time, with the LoopRec setting turned on, may delay the system reactions to your operations to trim an event in a highlight or playlist. If you want to perform a prolonged operation with the LoopRec setting turned on, you should restart your K2 Dyno Controller every four days.

UNSO RESTRICTED

Glossary

3D/Video + Key

See Video + Key.

Ancillary Data

Digital data carried in the non-active video regions of a serial digital interface (SDI) stream as defined by SMPTE 291M.

AppCenter

An application framework that runs on a K2 Media Client. AppCenter provides a single interface to control channels and channel suites to record, play, or manage media assets such as clips and playlists.

Bin

A container used to organize assets like clips and lists in the same way as directories or folders are used on a typical computer system. A bin is associated with a single disk volume.

Channel

A set of resources that together have the ability to record or play media. Also used to refer to an audio input or output track, as used in SMPTE 272M.

ChannelFlex Suite

A bundle of features on the K2 Summit system, including Super Slo-Mo, Multi-Cam, and 3D/Video + Key. These features require special licensing.

CIFS

CIFS (Common Internet File System) protocol permits client access to assets through a common file-sharing method that provides the ability to remotely browse shared folders and to read, write, edit, copy, delete and update files. CIFS access is appropriate for applications that don't require real-time response to file access or for applications that don't require the movement of large volumes of media.

Configuration Manager

A tool in K2 Media Client that configures system settings.

Control Point PC

The software application used to run AppCenter on a K2 Media Client from a network-connected PC.

Crash Record Mode

A mode that occurs when you start recording without specifying a clip name. The clip is given a default name.

Cross Conversion

Conversion between two video formats of the same definition (SD or HD). Primarily used when converting from 1080i to 720p and vice versa.

Direct-connect storage

K2 Media Client and K2 Media Client models access their own external media storage drives that are contained in a Lx0 RAID chassis. Referred to as stand-alone systems. *See* internal storage, shared storage.

Down Conversion

Conversion of an HD (high definition) video format to an SD (standard definition) video format.

Drop Frame

Drop frame is a timecode adjustment that applies to NTSC video only. Due to the framerate of NTSC, a system that normally outputs 30 frames per second must adjust timecode by subtracting two frames every minute except every tenth minute to achieve the effective framerate.

Drop Frame Timecode

Drop-frame time code yields precise running times, but frames are not all numbered sequentially. A frame number must be dropped periodically to keep the clock right. In non-drop time code, all frames are numbered sequentially, but the ending time code of a program does not accurately give the program's length.

Ethernet

A local area network used with some remote protocol applications; it operates over twisted wire and over coaxial cable.

Fibre Channel

A general set of integrated standards developed by ANSI for flexible information transfer over multiple physical interface types.

FTP

File Transfer Protocol is a common IT protocol for the bulk movement or transfer of large volumes of data. K2 Media Servers can handle multiple FTP transfers simultaneously at faster than real-time speeds.

GPI

General Purpose Interface. GPI triggers are physical connections between two pieces of equipment. Typically GPI triggers are based on a change of state on a monitored pin of the serial port. For instance you could create a GPI trigger that was operated by a port on a piece of broadcast equipment.

HD

High Definition video.

Internal storage

K2 Media Client and K2 Media Client models with internal storage access their own internal media storage drives. Referred to as a stand-alone system. *See* also direct-connect storage, shared storage.

iSCSI

Internet SCSI (small computer storage interface) is a storage access protocol that can use a transport layer such as Gigabit Ethernet rather than be restricted to the short distances determined by computer hardware buses. K2 Media Servers use iSCSI for clients that need to deliver media assets with real-time performance. The tuning and optimizing done by Grass Valley permits the use of iSCSI to deliver unparalleled, high-throughput, and deterministic performance.

K2 Media Client

A Broadcast Enterprise Server that incorporates IT server platform and storage technologies. The K2 Media Client can be used with internal, direct-connect, or shared storage.

Meter bar

Contains the audio record level controls and signal meters for a channel in AppCenter.

Monitor Pane

Displays the current information for the channel. Displays a thumbnail of the clip currently loaded in the channel and indicates the current application for the channel. Contains a drop down menu for changing the channel's application. For the currently selected channel, the monitor pane is larger and has a white background.

Multi-Cam

A feature in which two of a channel's SDI inputs can be configured to record two clips. This feature requires special licensing.

Non-Drop Frame Timecode

In non-drop frame timecode, all frames are numbered sequentially, but the ending timecode of a program does not accurately give the program's length. Drop frame timecode yields precise running times, but frames are not all numbered sequentially. A frame number must be dropped periodically to keep the clock right.

Scene

In Dyno, a scene consists of a mark in and mark out point on a record train.

SD

Standard Definition video.

Shared storage

K2 Media Client and K2 Media Client models with shared storage access RAID protected media storage drives that are part of a K2 Storage System (SAN). The K2 Storage System incorporates one or more RAID chassis, such as K2 Lx0 RAID. *See* also direct-connect storage, internal storage.

Status Bar

Displays status and error messages.

Subclip

A clip created by referencing a portion of media from another clip.

Super Out

A feature in which a channel's SDI outputs can be configured to display timecode, channel, and clip information. This feature requires special licensing.

Super Slo-Mo

A feature in which two or three of a channel's SDI inputs can be configured to record 2x or 3x video and create a Super Slo-Mo clip. This feature requires special

Timecode Striping

Striping a timecode allows you to overwrite the existing timecode track for a loaded clip.

Time Dome

A multi-function indicator that displays either record progress only, or available storage and record progress. It also indicates when the record channel is in Loop Record mode.

Transfer Monitor

A tool in AppCenter that monitors media transfers and file imports and exports.

Up Conversion

Conversion of an SD (standard definition) video format to an HD (high definition) video format.

Video + Key

A feature in which two of a channel's SDI inputs and outputs can be configured for synchronized record and playback of a clip with two video tracks. This feature can be used to support 3D. This feature requires special licensing.

Volume

The set of media drives that functions as a single physical disk in the K2 Media Client. The UIM uses 'V:' for the volume name.

Widescreen Mode

An aspect ratio of 16:9, as opposed to an aspect ratio of 4:3.

Index

Numerics

3D, see video + key 112
3D/Video+Key 25

A

Audio level
 Settings 96
auxiliary audio settings 97

B

bin
 definition 109
Buttons 19

C

channel
 definition 109
channel flex suite
 definition 109
ChannelFlex Suite 25
Clip
 Settings 89
configuring
 jog knob 88
 T-bar mode 88
Creating a bin
 Highlights 58
 Libraries 78
 Playlists 74
Cueing up
 Go To 48, 78
 Marking 47
Cursor colors 47

D

Delete
 Session 99

E

Exporting
 Keywords 103
 Logs 99

F

fibre channel, definition 110
File Type
 Settings 93, 94
Flying M/E 38

G

Gang mode 42
Goto, using 48, 78
GPI
 definition 110

H

Highlights
 Removing 57

J

Jog knob, configuring 88

K

Keywords
 Editing 100
 Entering 50
 Exporting 103

L

Libraries
 Removing 77
 Storing 77
Log
 Settings 99
Logging information
 Editing 100
 Entering 50
 Exporting 103
LoopRec 27, 108

M

M/E
 Settings 92
Match frame operations
 Highlights 57
 Playlists 68
mode

crash record, definition 109
widescreen, definition 112

Multi-Cam 25

multi-cam
definition 111

Multi-channel mode 40

O

On-air preview mode 40

P

Playbacks

Live playbacks 37

Playlists 71

Replays 38

Playlists

Creating new 72

Deleting 68

Playing 71

Property 72

Storing a playlist to another playlist 73

Switching 73

R

Record Train

Settings 86

Recycle Bin 44

Removing

Highlights 57

Libraries 77

Playlists 68

S

Screen components

Audio level setting 96

Highlight 54

Highlight bins 58

Home 36

Library 76

Library bins 78

Mark 46

Playlist 64

Playlist bins 73

Property of a playlist 72

Search results (marks/scenes) 82

Sessions

Changing the channel configuration 25

Creating new 24

Delete 99

Shot boxes 56

Storing

Libraries 77

Storing a playlist to another playlist 73

subclip

definition 111

Super Slo-Mo 25

super slo-mo

definition 112

Switching cameras 38

T

Target durations 71

T-bar mode, configuring 88

Transitions

Adding 70

Settings 92

Trimming

Highlights 57

Playlists 68

Scenes 51

V

video + key

definition 112

Video+Key 25

volume

definition 112

W

web site, for Grass Valley 12

widescreen mode

definition 112