




170.IU0.ISR.0C0

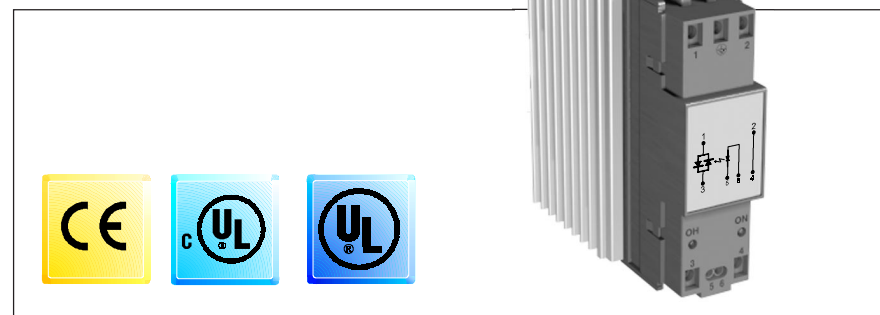

☐ USER MANUAL

ISR
ISR-T

INDEX

ASSEMBLING	1
WARNINGS	1
General assembling information	1
Wall mounting	3
Omega din rail mounting	4
CONNECTION DIAGRAMS	5
GENERAL NOTES FOR WIRING	5
WARNING	5
Power $\Rightarrow$ nominal current conversion	7
Trend of the nominal current in relation with the ambient temperature and duty cycle	8
CONNECTIONS	10
Single phase connection	10
Three phase without neutral connections ..	11
Three phase with neutral connections	12
GENERAL SPECIFICATIONS	14
CHARACTERISTICS OF THE ISR-T MODELS	15
CHARACTERISTICS OF THE ISR MODELS...	15
MAINTENANCE	17
APPENDIX A	
Dimensions and panel cut out	A.1

ASSEMBLING

WARNINGS:

- 1) The correct functionality of these devices is guaranteed only if transport, storage, installation, wiring, working condition and maintenance are executed in compliance with this manual.
- 2) The protection degree of these devices is equal to IP 20 (according to IEC529) and they are connected to dangerous power lines, for these reasons:
 - installation, wiring and maintenance must be executed by qualified personnel;
 - all warnings contained in this manual must be complied.
- 3) Do not execute any dielectric strength or insulation resistance test on the power terminals.
These type of tests could damage the power semiconductors.
- 4) The safety requirements for Permanently Connected Equipment say:
 - a switch or circuit-breaker shall be included in the building installation;
 - It shall be in close proximity to the equipment and within easy reach of the operator;
 - it shall be marked as the disconnecting device for the equipment.**NOTE:** a single switch or circuit-breaker can drive more than one device.
- 5) Before to execute any operation on the load or its connections, disconnect the device from the power line by the circuit breaker.
- 6) During continuous operation, the heat sink could reach a temperature higher than 80 °C (176 °F)
Before execute any operation to the device, you

have to be sure that its temperature is decreased to an acceptable value.

- 7) For placing the device, choose a cleaned position, easy to reach, and possibly without vibration.
- 8) The ambient temperature must be comprised between 0 °C and 50 °C (32 to 122 °F).

GENERAL ASSEMBLING INFORMATION

- 1) These devices must be assembled vertically or with a maximum inclination of 20°.

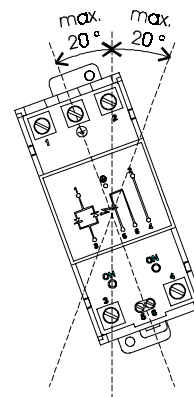


Fig. 1

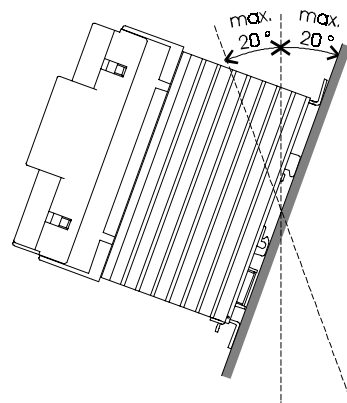


Fig. 2

- 2) In order to allow a sufficient heat dissipation, these devices must be spaced 100 mm out to the bottom and 150 mm out to the top of the cabinet or any other element (I.E. raceway) which can compromise the air flow.

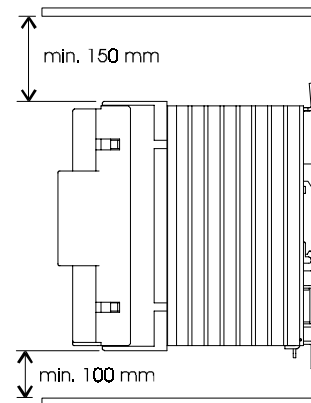


Fig. 3

- 3) The manufacturer strongly recommends against to assemble two or more devices one upon another but, if necessary, the distance between the two devices must be longer than 400 mm.


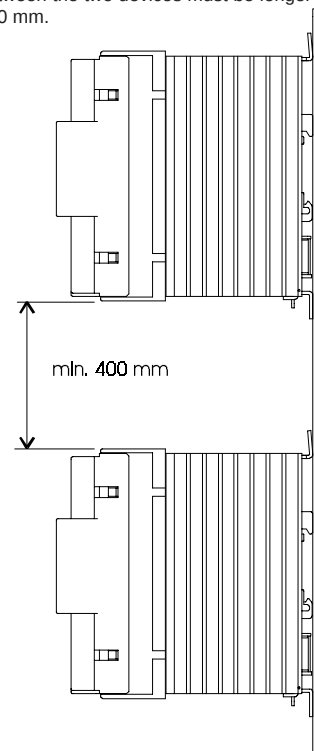


Fig. 4

The device can be mounted either on wall or on a Omega DIN rail.

WALL MOUNTING

For wall mounting you can use the (A) holes.

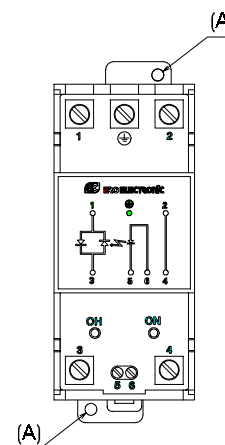

In this case it is advisable to use two M4 screws with a torque of 1Nm.

For the mounting template and the mechanical dimensions of all models, please refer to the appropriate drawing, located in the "Mechanical dimensions" paragraph.

OMEGA DIN RAIL MOUNTING

For rail mounting use an Omega DIN rail in accordance with EN 50 022 (35 x 7.5 mm or 35 x 15 mm) regulations.

MOUNTING

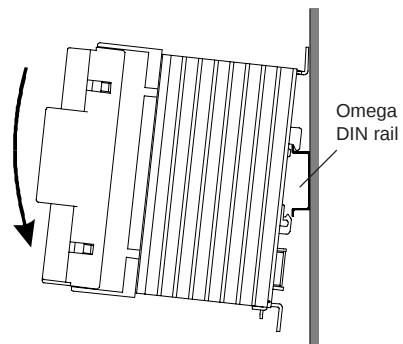


Fig. 5

REMOVING

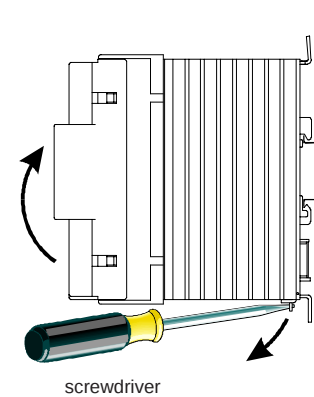


Fig. 6

For the mechanical dimensions of all models, please refer to the appropriate drawing, located in the Appendix A.

CONNECTION DIAGRAMS

GENERAL NOTES FOR WIRING

WARNINGS:

- 1) The wiring must be executed only after you have mounted the device correctly.
- 2) Before connecting the device, you have to be sure that the power line voltage value is less than the nominal value reported on the device's identification label.
- 3) Before connecting the device, you have to be sure that the current absorbed by the load (see **Power ⇒ nominal current conversion** paragraph) is less than the device nominal current as a function of the ambient temperature and the Duty cycle (see **Trend of the nominal current in relation with the ambient temperature and duty cycle** paragraph).
- 4) Before execute any operations, be absolutely sure that the device is disconnected from the power line through the circuit breaker.
- 5) Use copper wires only.
- 6) Do not care to the input command polarity; the + (terminal 5) and - (terminal 6) marks are indicative only.
- 7) The neutral (if used) must be connected to the 2 and 4 terminals.
- 8) The power input **IS NOT** fuse protected; so it is necessary placing an external one selected among the types shown in Table 1(for ISR) or Table 2 (for ISR-T).

NOTE:

The Manufacturer decline any responsibility for injury and/or property damage if NO fuse or fuse not included in Table 1 and 2 is used. The warranty validity also depends on it.

Table 1

ISR Model	Fuse	
	Manuf.	model
25/52 - 400	Ferraz	6600CPURGA22X58/32
	Bussmann	FWP.32A.22F
	Gould	52443
35/55 - 400	Ferraz	6600CPURGA22X58/50
	Bussmann	FWP.50A.22F
	Gould	53251
45/70 - 400	Ferraz	6600CPURGA22X58/50
	Bussmann	FWP.50A.22F
	Gould	53251
60/100-400	Ferraz	6600CPURGA22X58/80
	Bussmann	FWP.80A.22F
	Gould	53259
80/125-400	Ferraz	6600CPURGA22X58/100
	Bussmann	FWP.100A.22F
	Gould	53263
25/52 - 600	Ferraz	6600CPURD22X58/32
35/55 - 600	Ferraz	6600CPURD22X58/50
45/70 - 600	Ferraz	6600CPURD22X58/50
60/100-600	Ferraz	6600CPURD22X58/80
80/125-600	Ferraz	6600CPURD22X58/100

Table 2

ISR-T Model	Fuse	
	Manuf.	model
12/18 - 240	Ferraz	6600.CP.URGB.14.51/20
	Bussmann	FWP.20A.14F
18/26 - 240	Ferraz	6600.CP.URGB.14.51/32
	Bussmann	FWP.30A.14F

9) For connect the devices to the power line, use appropriate sized wires with 75 °C (167 °F) minimum temperature rating. The following table shows the recommended sizes:

Nominal current	φ wires (mm ²)	AWG
12 A	2,5	14
18 A	4	12
25 A	6	10
35 A	6	10
45 A	10	8
60 A	16	6
80 A	25 (*)	4

(*) without wire terminal

- 10)The torque for tightening the terminals 1, 2, 3, 4 and earth is:
- for ISR-T and ISR 25 and 35
max = 0.8 Nm
advisable = 0.7 Nm
 - for ISR 45, 60 and 80 A
max = 2 Nm
advisable = 1.5 Nm
- 11) The torque for tightening the terminals 5 and 6 is:
max = 0.5 Nm
advisable = 0.33 Nm

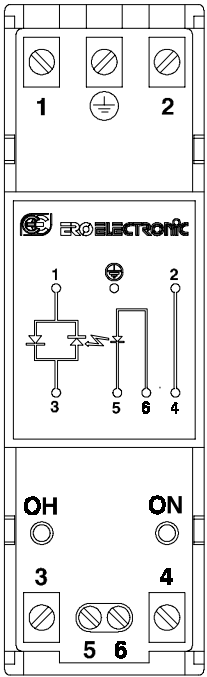


Fig. 7

TERMINAL BLOCK

Power $\Rightarrow$ nominal current conversion

In order to have a quick check of the device working conditions, we provide you the formulas to calculate the nominal current for each device in relation to the total power and the connection type.

Preliminary notes:

- 1) Only a resistive load must be applied to the device, so in the following formulas the $\cos \phi$ will be considered equal to 1.
- 2) the formulas related with the 3-phase applications are referred to a balanced 3-phase system only.

Single-phase connection

$$I_{RMS} = \frac{P}{V_{RMS}}$$

where:

P = power (in Watts).

V_{RMS} = **phase to neutral** or **phase to phase** voltage (in Volts)

I_{RMS} = nominal current (in Amperes)

3-phase without neutral connection (star or delta application)

$$I_{RMS} = \frac{P}{\sqrt{3} \cdot V_{RMS}}$$

where:

P = Total load power (in Watts).

V_{RMS} = **phase to phase** voltage (in Volts)

I_{RMS} = nominal current (in Amperes)

3-phase with neutral connection (star application)

$$I_{RMS} = \frac{P}{3 \cdot V_{RMS}}$$

where:

P = Total load power (in Watts).

V_{RMS} = **phase to neutral** voltage (in Volts)

I_{RMS} = nominal current (in Amperes)

Trend of the nominal current in relation with ambient temperature and duty cycle (with cycle time ≤ 10 s).

ISR-T Models 12/18 - 240 V			
Duty cycle	Ambient temperature		
	0 °C (32 °F)	25 °C (77 °F)	50 °C (122 °F)
25%	22 A	20 A	18 A
50%	20 A	18 A	16 A
75%	18 A	16 A	14 A
100%	16 A	14 A	12 A

ISR Models 25/52 - 400 and 600 V			
Duty cycle	Ambient temperature		
	0 °C (32 °F)	25 °C (77 °F)	50 °C (122 °F)
25%	75 A	65 A	50 A
50%	65 A	52 A	38 A
75%	55 A	42 A	30 A
100%	45 A	35 A	25 A

ISR-T Models 18/26 - 240 V			
Duty cycle	Ambient temperature		
	0 °C (32 °F)	25 °C (77 °F)	50 °C (122 °F)
25%	30 A	28 A	24 A
50%	28 A	26 A	22 A
75%	26 A	24 A	20 A
100%	24 A	22 A	18 A

ISR Models 35/55 - 400 and 600 V			
Duty cycle	Ambient temperature		
	0 °C (32 °F)	25 °C (77 °F)	50 °C (122 °F)
25%	75 A	65 A	50 A
50%	65 A	55 A	45 A
75%	57 A	50 A	40 A
100%	50 A	43 A	35 A

ISR Models 45/70 - 400 and 600 V			
Duty	Ambient temperature		
cycle	0 °C (32 °F)	25 °C (77 °F)	50 °C (122 °F)
25%	85 A	75 A	70 A
50%	75 A	70 A	60 A
75%	65 A	60 A	53 A
100%	60 A	53 A	45 A

ISR Models 80/125 - 400 and 600 V			
Duty	Ambient temperature		
cycle	0 °C (32 °F)	25 °C (77 °F)	50 °C (122 °F)
25%	160 A	140 A	110 A
50%	140 A	125 A	100 A
75%	125 A	110 A	90 A
100%	110 A	95 A	80 A

ISR Models 60/100 - 400 and 600 V			
Duty	Ambient temperature		
cycle	0 °C (32 °F)	25 °C (77 °F)	50 °C (122 °F)
25%	150 A	120 A	100 A
50%	130 A	100 A	85 A
75%	110 A	85 A	70 A
100%	90 A	75 A	60 A

CONNECTIONS

Single phase for ISR-T and ISR connection


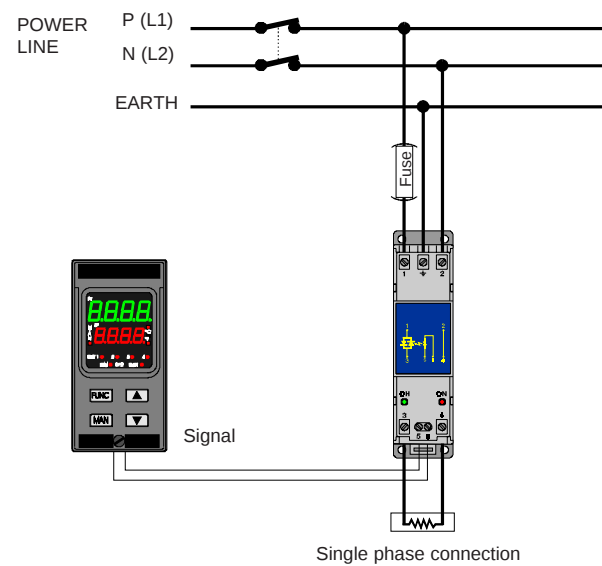


Fig. 8


Three phase without neutral for ISR connection ONLY

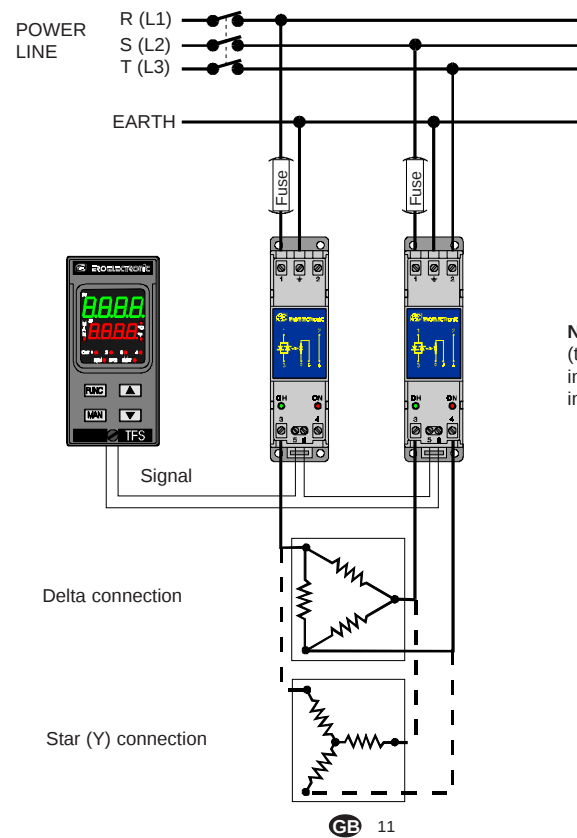

NOTE: the input command (terminals 5 and 6) for both instruments must be connected in series as shown in FIG. 9.

Fig. 9

Three phase with neutral for ISR-T and ISR connection

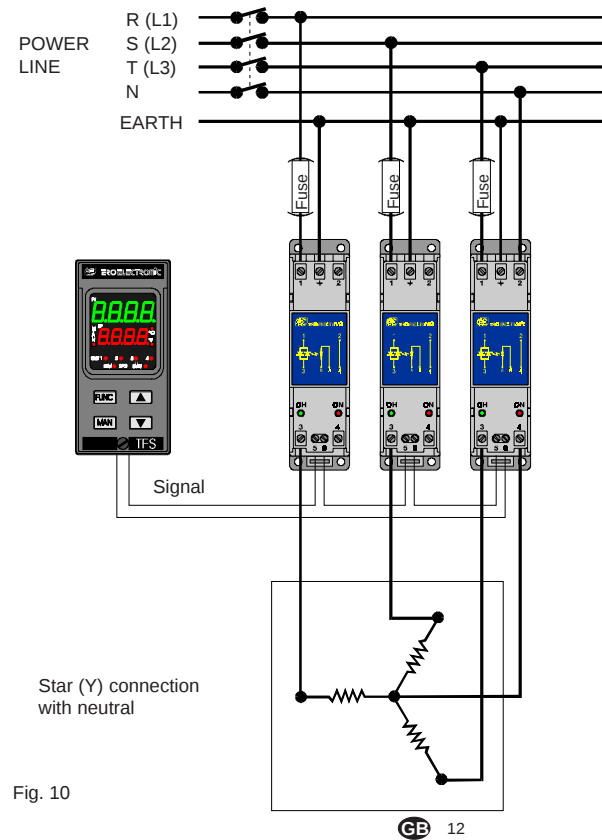

NOTE: the input command (terminals 5 and 6) for all the devices must be connected in series as shown in FIG. 10.

Fig. 10

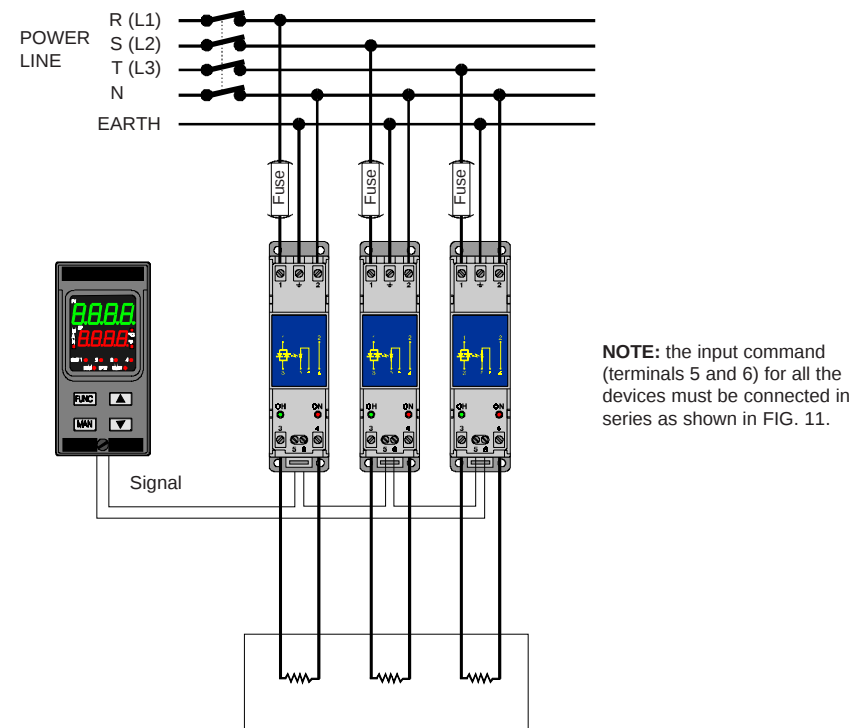


Fig. 11

GENERAL SPECIFICATIONS

Mounting: rear-of-board on wall or omega DIN rail.

Terminals: screw terminals with front access.

Load type: resistive.

Nominal current: see table.

Min. holding current: 50 mA RMS.

Leakage current: 10 mA RMS.

Non repeatable surge current ($t \approx 10$ ms): see table.

Nominal voltage: see table.

Min. latching voltage: 20 V

Critical $\Delta V/\Delta t$ off state: see table.

Voltage drop on power semiconductor:

for ISR = 1.2 V.

for ISR-T = 1.8 V

Rated control voltage:

OFF state = 0 to 2 V DC

ON state = 4.5 to 35 V DC

Input type: Constant current (15 mA).

Insulation:

- between power circuit and earth:
 - for ISR = 3000 V RMS for 1 second.
 - for ISR-T = 1800 V RMS for 1 second.
- between command and power circuits:
7500 V_{pk}

Insulation resistance: > 100 M Ω at 500 V DC.

Operational temperature: from 0 to 50 °C
(from 32 to 122 °F).

Humidity: from 20 % to 85 % RH non condensing.

Storage temperature: from - 20 to + 70 °C
(-4 to 158 °F)

Protection: IP 20.

Thermal protection (optional function available for ISR models only).

When the heat sink temperature exceeds the threshold of the thermal protection, a circuit-breaker inhibits the command signal and enables the LED OH indication.

When the heat sink temperature goes under the threshold of the thermal protection minus hysteresis, the command signal is enabled again and the OH LED is turned OFF.

CE MARKING

These devices are conforming to the 89/336/EEC and 93/68/EEC council directives for Electromagnetic compatibility (reference harmonized standard EN-50081-2 for Emissions and EN-50082-2 for Immunity) and to the 73/23/EEC and 93/68/EEC for Low Voltage (Standard reference UL508 part VIII).

Installation category: II

CHARACTERISTICS OF THE ISR-T MODELS

MODEL	Amp. - V	Amp. - V
CHARACTERISTICS	12/18-240	18/26-240
Nominal voltage	240 V	240 V
Nominal current(@ 50 °C)	12 A	18 A
Non-rep. surge current	160 A	208 A
I ² t for fusing (10 ms)	128	259
Non-rep. peak voltage	900 V	900 V
ΔV/Δt	250 V/μs	250 V/μs
PRV	800 V	800 V
Total power dissipation (I = I _{nom})	18 W	27 W
Weight	510 g	510 g

CHARACTERISTICS OF THE ISR MODELS

MODEL	Amp. - V	Amp. - V	Amp. - V	Amp. - V	Amp. - V
CHARACTERISTICS	25/52-400	35/55-400	45/70-400	60/100-400	80/125-400
Nominal voltage	400 V	400 V	400 V	400 V	400 V
Nominal current(@ 50 °C)	25 A	35 A	45 A	60 A	80 A
Non-rep. surge current	280 A	400 A	400 A	1200 A	1200 A
I ² t for fusing (10 ms)	550	860	860	10180	10180
Non-rep. peak voltage	1300 V	1300 V	1300 V	1300 V	1300 V
ΔV/Δt	500 V/μs	500 V/μs	500 V/μs	500 V/μs	500 V/μs
PRV	1200 V	1200 V	1200 V	1200 V	1200 V
Total power dissipation (I = I _{nom})	30 W	45 W	55 W	75 W	100 W
Weight	630 g	630 g	900 g	900 g	1100 g

MODEL	Amp. - V	Amp. - V	Amp. - V	Amp. - V	Amp. - V
CHARACTERISTICS	25/52-600	35/55-600	45/70-600	60/100-600	80/125-600
Nominal voltage	600 V	600 V	600 V	600 V	600 V
Nominal current(@ 50 °C)	25 A	35 A	45 A	60 A	80 A
Non-rep. surge current	280 A	400 A	400 A	1200 A	1200 A
I ² t for fusing (10 ms)	550	860	860	10180	10180
Non-rep. peak voltage	1700 V	1700 V	1700 V	1700 V	1700 V
ΔV/Δt	1000 V/μs	1000 V/μs	1000 V/μs	1000 V/μs	1000 V/μs
PRV	1600 V	1600 V	1600 V	1600 V	1600 V
Total power dissipation (I = I _{nom})	30 W	45 W	55 W	75 W	100 W
Weight	630 g	630 g	900 g	900 g	1100 g

MAINTENANCE

WARNING:


- 1) Before to execute any maintenance operation on the device, on the load or on their connections, disconnect it from the power line by a mechanical circuit breaker.
- 2) The protection degree of these devices is equal to IP 20 (according to IEC529) and they are connected to dangerous power lines, for these reasons:
 - installation, wiring and maintenance must be executed by qualified personnel;
 - all warnings contained in this manual must be complied.
- 3) Do not execute any dielectric strength or insulation resistance test on the power terminals.
These types of test could damage the power semiconductors.
- 4) During continuous operation, the heat sink could reach a temperature higher than 80 °C (176 °F)
Before execute any operation on the device, you have to be sure that its temperature is decreased to an acceptable value.

MAINTENANCE

- 1) REMOVE POWER FROM THE DEVICE BY USING A MECHANICAL CIRCUIT BREAKER
- 3) Using a vacuum cleaner or a compressed air jet (max. 5 kg/cm²) remove all deposit of dust and dirt which may be present on the heat sink and on the terminals.
- 4) To clean external plastic or rubber parts use only a cloth moistened with:
 - Ethyl Alcohol (pure or denatured) [C₂H₅OH] or
 - Isopropil Alcohol (pure or denatured) [(CH₃)₂CHOH] or
 - Water (H₂O)
- 5) Verify that there are no loose terminals (see paragraph **GENERAL NOTES FOR WIRING**).
- 6) Before switch ON the power, be sure that the device is perfectly dry.
- 7) Turn the power ON.

APPENDIX A **DIMENSIONS AND PANEL CUT OUT**

ISR-T 12/18
ISR-T 18/26

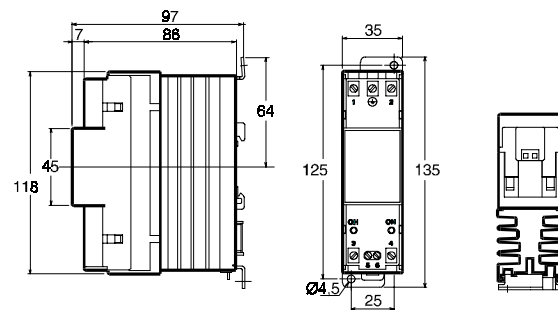

ISR 25/52
ISR 35/55


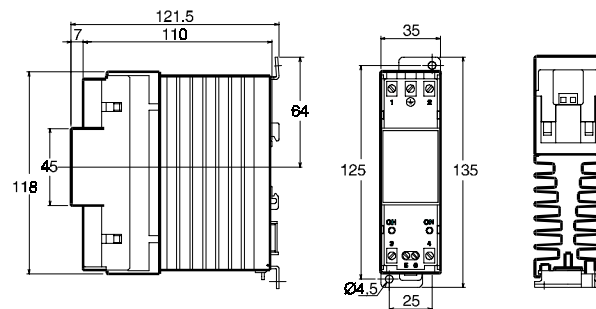


Fig.A.1

**ISR 45/70
ISR 60/100**

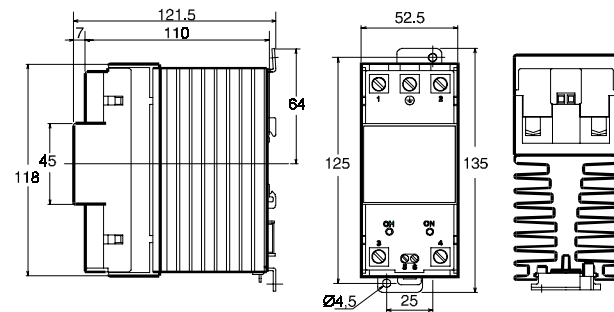

ISR 80/125

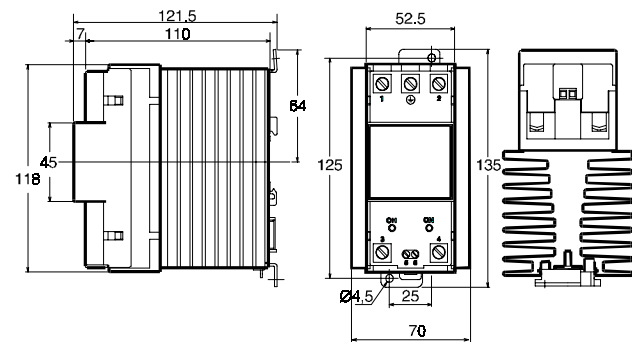


Fig. A.2



Ero Electronic S.r.l.
Via E. Mattei, 21
28100 Novara
Italy
Tel. +39 0321481111
Fax +39 0321481112
eroelectronic@ero.eurotherm.co.uk

BENELUX
ERO Electronic Benelux SA/NV
Rue Val Notre Dame 384
MOHA 4520 (WANZE)
Tel. 085-274080
Fax 085-274081
ero.electronic@skynet.be

BRASIL
ERO ELECTRONIC DO BRASIL
Industria e Comercio Ltda.
Rua Garibaldi, 659 - Conj. 202
90035-050 PORTO ALEGRE
Tel. 051-2214888
Fax 051-2214734
erobr@nutechnet.com.br

CHINA
TIANJIN VEGA COMPANY Ltd
(TAIF)
Hebei District
300232 TIANJIN
Tel. 022-26273296
Fax 022-26273297

FRANCE
ERO Electronic SARL
Zac du Chêne
34, Rue du 35ème Régiment d'Aviation
69673 BRON CEDEX
Tel. 0478267979
Fax 0478267800

GERMANY
ERO Electronic GmbH
Ottostrasse 1
65549 LIMBURG A.D. LAHN
Tel. 06431-95680
Fax 06431-57493

NETHERLAND
ERO Electronic Nederland
Ganiëelan 4
2404 CH Alphen a/d Rijn
Tel. 0172-420400
Fax. 0172-420395
sales@eroelectronic.nl

SOUTH AFRICA
ERO Electronic S.A. Pty Ltd
Airgro House
1343, Spokeshave Avenue
Stormill Ext 2 ROODEPOORT
Tel. 011-4742278/9
Fax 011-4749404
P.O. Box 43112
Industria 2042
ero-sa@kingsley.co.za

SPAIN
ERO ELECTRONIC IBERICA
Calle La granja, 74
Pol. Ind. Alcobendas
MADRID
Tel. 091-6618194
Fax. 091-6619093

U.K.
ERO U.K.
Unit 1, Cygnet Trading Estate
Faraday Close
Durrington, Worthing
WEST SUSSEX BN13 3RQ
Tel. 01903-693322
Fax. 01903-693377

U.S.A.
AMERICAN ERO Electronic Corp
BARRINGTON, ILL. 60010
Tel. 0847-382-0881
Fax 0847-382-0240

U.S.A.
BARBER COLMAN
Industrial Instruments Div.
P.O. BOX 2940
Loves Park, IL - 31132 - 2940
Tel. 0815-637-3000
Fax 0815-637-5341
jgsearle@ad.com