

ADSL Duo Modem

U S E R ' S G U I D E



NOTICE

This document contains proprietary information protected by copyright, and this Manual and all the accompanying hardware, software, and documentation are copyrighted. No part of this document may be photocopied or reproduced by mechanical, electronic, or other means in any form.

The manufacturer does not warrant that the hardware will work properly in all environments and applications, and makes no warranty or representation, either expressed or implied, with respect to the quality, performance, merchantability, or fitness for a particular purpose of the software or documentation. The manufacturer reserves the right to make changes to the hardware, software, and documentation without obligation to notify any person or organization of the revision or change.

All brand and product names are the trademarks of their respective owners.

© Copyright 2004

All rights reserved.

Contents

1. INSTALLATION INSTRUCTIONS.....	1
1.1 IMPORTANT! BEFORE YOU BEGIN	1
1.2 PACKAGE CONTENTS.....	1
1.3 QUICK START INSTRUCTIONS.....	3
Step 1: Installing the Software	3
Step 2: Installing the Hardware	5
Step 3: Configuring Internet Explorer.....	7
Step 4: Establishing Communication	9
1.4 IF YOU NEED HELP	17
2. ONLINE GAMING	18
2.1 Do I Need To Do Anything?.....	18
2.2 Choosing an IP Address for Gaming.....	19
2.3 Setting Up a Firewall Filter for Your Computer	23
2.4 Setting Up a Firewall Filter for Xbox® Live	25
2.5 Setting Up a Firewall Filter for PlayStation® 2	27
2.6 Assigning the Filter to Your Internet Connection	28
2.7 Turning the Filter On and Off	29
3. ADVANCED SETUP OPTIONS	31
3.1 WAN SETTINGS.....	32
3.1.1 PPP Connections	33
3.1.2 1483 Bridged with DHCP.....	36
3.1.3 1483 Bridged with Static IP.....	37
3.1.4 1483 Routed with Static IP Connection	38
3.1.5 1483 Bridged (Pure Bridge Mode).....	40
3.1.6 AutoPPP.....	41
3.1.7 AutoBridge.....	43
3.2 WAN IP FILTER	44
3.3 LAN INTERFACE.....	48
3.4 LAN IP FILTER.....	49
3.5 IP REMAP FILTER	50
3.6 MAC FILTER	52
3.7 ROUTING CONFIGURATION.....	53
3.8 SERVICES	55
3.9 TRAFFIC SHAPING PROFILE	56
3.10 DNS & DHCP SERVER.....	57

3.11	DHCP RELAY	60
3.12	MANAGEMENT ACCESS CONTROL	61
3.13	CONNECTION LOOPBACK.....	62
3.14	NTP SERVER.....	63
4.	STATUS MONITORING	64
4.1	ADSL STATUS	64
4.2	SYSTEM STATUS.....	67
4.3	PROCESSES	69
4.4	MEMORY USAGE	70
4.5	ADSL CONNECTION MONITOR.....	70
5.	ADMINISTRATION	72
5.1	SYSTEM LOG	72
5.2	PASSWORD	73
5.3	FIRMWARE UPDATE.....	74
5.4	RESET TO DEFAULT	75
5.5	REBOOT SYSTEM	75
5.6	FILE UPLOAD.....	75
5.7	LOGOUT	76
5.8	DIAGNOSTIC INFO	76
APPENDIX A	DSL INTERNET SETTINGS TABLES	77
APPENDIX B	FRONT PANEL DESCRIPTION	79
APPENDIX C	LOCATING A MAC ADDRESS	80
APPENDIX D	MACINTOSH AND LINUX USERS: CONFIGURING TCP/IP SETTINGS.....	82
	Macintosh TCP/IP Settings	82
	Linux Network Settings	83
APPENDIX E	TROUBLESHOOTING	85
APPENDIX F	REGULATORY INFORMATION	89

1


Installation Instructions

1.1 Important! Before You Begin

Before you install your ADSL modem, you must have DSL service enabled on your telephone line. To do this, you need to sign up with a DSL service provider.

1.2 Package Contents

Check that your package includes the items shown:

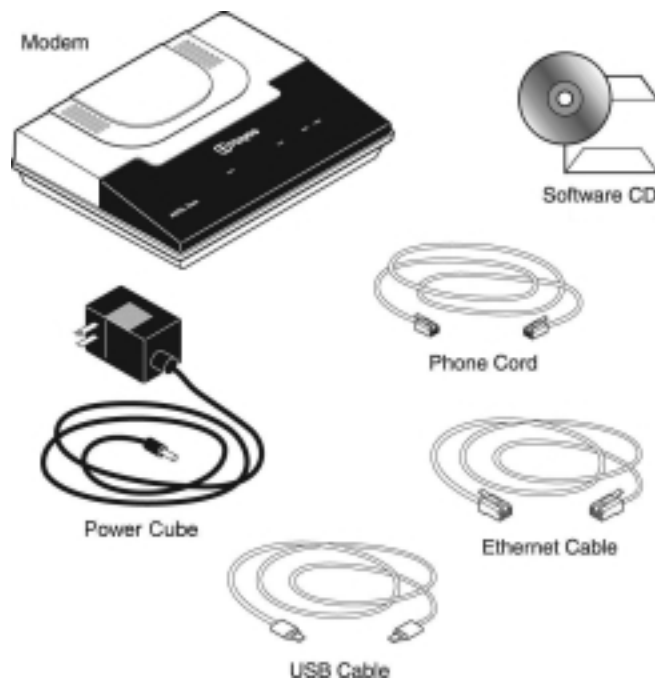

The CD contains the installation software, documentation, warranty, and Customer Support information.

If anything is missing or damaged, contact Hayes Customer Support or your retailer or distributor.

In addition, you may have

- DSL line filters (certain units only)
- Phone-jack adapter to adapt the RJ-11 phone cord to a different phone jack (certain units only)

You Will Also Need

- **A Macintosh, Linux or Windows 98SE/2000/Me/XP computer** equipped with a Network Interface Card (NIC) or a Windows 98SE/2000/Me/XP computer equipped with a USB port.
- **An ADSL-enabled telephone wall jack** to plug the ADSL modem into.

1.3 Quick Start Instructions

Installing the ADSL Duo involves four steps: **Installing the Software**, **Installing the Hardware**, **Configuring Internet Explorer**, and **Establishing Communication**.

Step 1: Installing the Software

Windows 98SE, Me, 2000, and XP Users: You must install the software BEFORE connecting the hardware.

Macintosh and Linux Users:


You do not need to run the CD software.

Skip to Step 2, **Installing the Hardware**.

Important! If you intend to use the ADSL Duo's USB option, you must remove any existing USB modem drivers on your computer before installing this software. On the desktop, click the **Start** button, point to **Settings**, and select **Control Panel**. In **Control Panel**, double-click **Add/Remove Programs**. In the **Add/Remove Programs Properties** dialog box, select your USB modem from the list, click **Remove**, and then click **OK**.

- 1 Your computer must be on.** Insert the supplied CD into your computer. The CD should start automatically and the **Select Language** screen should appear. (If the CD does not start automatically, on the desktop, click the **Start** button, click **Run** and then type **D:\setup.exe**, where **D** is the letter of your CD-ROM drive.)

- 2 At the **Select Language** screen, make your selection. Then the **ADSL Modems** menu is displayed:

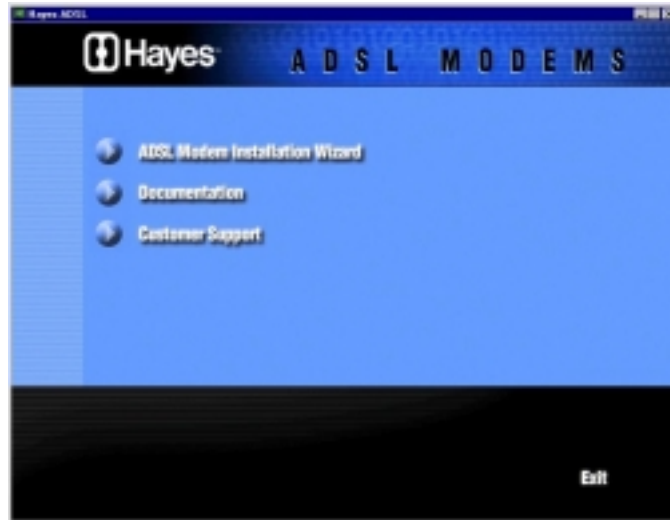

- 3 Click the **ADSL Modem Installation Wizard** button.
- 4 At the next screen, select **ADSL Duo**. The software installation then proceeds automatically.
- 5 When the process is complete, you will be prompted to click **Finish**. Now shut down your computer and install the modem hardware.

Step 2: Installing the Hardware

Your computer should be shut down.



Rear panel ports

1 Macintosh and Linux users must connect the modem to their computer's Ethernet port.

Windows users can connect the modem to their computer's Ethernet port or USB port. We recommend the Ethernet port if one is available. Note: Windows users can connect two computers to the ADSL Duo, one on the Ethernet port and the other on the USB port, and share Internet access.

If you are using the Ethernet port:

Plug one end of the straight-through Ethernet (10BaseT) cable into the modem's **ETHERNET** port and plug the other end into your computer's Ethernet port.

If you are using the USB port:

Plug one end of the USB cable into the modem's **USB** jack and the other end into your computer's USB port.

Note: You can also attach the ADSL Duo to an access point, switch, or network hub via its ETHERNET port and thus connect multiple computers.

- If your hub has an uplink or daisy chain port, you can use the supplied straight-through Ethernet cable to connect the two.
- If you are using a wireless access point, you need a crossover Ethernet cable (sold separately).

Throughout this manual, when we refer to an ADSL Duo Ethernet connection, it should be understood that this connection may be to a computer, wireless access point, or hub.

- 2 Plug the included power cube into a power strip or wall outlet and then into the modem's power (**PWR**) jack.

IMPORTANT: Use only the power cube shipped with the modem. Other power cubes may damage your hardware.

The **PWR** light should become steady on, and the **LINK** light should blink once. If the **PWR** light doesn't turn on, make sure there is power at the wall outlet or power strip where you plugged in the power cube.

3 Turn the computer on.

- 4 If you are using the **USB port**, you may see a **Found New Hardware** box indicating the progression of the installation. Typically no user action is necessary. If you are using Windows XP, you may be required to click **Next**.


Depending on your operating system, you may also see a **Hardware Installation** disclaimer box or a **Digital Signature Not Found** dialog box. You can safely ignore these messages and click **Yes** or **Continue Anyway**.

Windows XP Users: If prompted, click **Finish**.

If prompted to do so, click **Yes** to restart your computer to finish setting up your new hardware.

- 5 Plug one end of the supplied phone cord into the modem's **ADSL** jack and the other end into the ADSL wall jack. The **LINK** light should blink and then become steady on. If it doesn't, access the consult Appendix E, Troubleshooting.
- 6 Finally, while phone filters are not absolutely required, **we HIGHLY RECOMMEND that you install a filter on EVERY phone that is sharing the DSL phone line**. Phone filters block the DSL frequencies so that someone making a normal phone call won't hear noise on the line. They also keep phone conversations from interfering with DSL performance. You may have received DSL filters with your Duo. If you did not, or need more filters, they are available at most retail stores that carry consumer electronics.

Plug the phone or fax cord into the filter's **PHONE** end and plug the filter's **LINE** end into the wall jack.

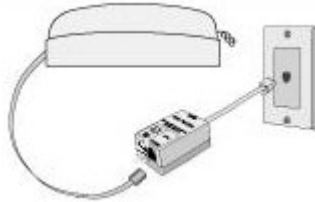

Continue below with Configuring Internet Explorer.

Step 3: Configuring Internet Explorer

Macintosh and Linux users: Your Web browser automatically detects whatever connection is active, so you do not need to set up the browser for a network connection. You do need to make sure that the computer's network, or TCP/IP settings, are configured correctly. Please follow the instructions in the TCP/IP Settings Appendix on page 82, and then go to Step 4, Establishing Communication, on page 9.

Windows users: Your software that you use to make an Internet connection must be set for a **network connection**, not a **dial-up connection**. The instructions below are for Internet Explorer, the most popular Web browser. If you are using Netscape Navigator or another browser, set it up now to use a **network connection** (this might be called a "Local Area Network" or "broadband" connection).

If you use Internet Explorer, you need Version 5 or later. Most people have the right version. If you don't, we suggest you get a free upgrade.

If you want to check your version number, open Internet Explorer, select **Help**, then **About Internet Explorer**. Your version number is right under the Microsoft Internet Explorer logo. You can ignore all the numbers after the period following the first digit.

- 1** On the desktop, right-click the **Internet Explorer** icon, and select **Properties**.

If you cannot access Internet Explorer:

Windows XP users: From the desktop, click the **Start** button, then click **Control Panel**. In **Control Panel**, click **Network and Internet Options** and then click the **Internet Options** icon.

Windows 98/Me/2000 users: From the desktop click the **Start** button, point to **Settings**, and then click **Control Panel**. In **Control Panel**, click the **Internet Options** icon.

- 2 In the **Internet Properties** dialog box, click the **Connections** tab.
- 3 On the **Connections** tab, click **Setup**.
- 4 Windows XP users: In the **Welcome to the New Connection Wizard** dialog box, click **Next**.

If you see a **Location Information** dialog box, click **Cancel** to return to the **Welcome** dialog box, and click **Next** again.

In the **Network Connection Type** dialog box, click **Connect to the Internet**.

In the **Getting Ready** dialog box, click “**Set up my connection manually**,” and then click **Next**.

In the **Internet Connection** dialog box, click “**Connect using a broadband connection that is always on**,” and click **Next**.

Windows 98/Me/2000 users: In the **Internet Connection Wizard** dialog box, select “**I want to set up my Internet connection manually, or I want to connect through a local area network (LAN)**,” and click **Next**.

In the **Setting up your Internet connection** dialog box, change the selection to “**I connect through a local area network (LAN)**” and click **Next**.

In the **Local area network Internet configuration** dialog box, uncheck the box “**Automatic discovery of proxy server**.” Then click **Next**.

A dialog box asks if you want to set up an email account. Click **No** and then **Next**.

- 5 When the configuration process is done, you will see a **Completing the Internet Connection Wizard** dialog box.
Windows 98/Me/2000 users: Be sure to uncheck the box that says “**To connect to the Internet immediately, select this box....**”
- 6 Click **Finish**.
- 7 Windows XP users: Close **Control Panel**.
Windows 98/Me/2000 users: If Internet Explorer is open, close it.
Continue with Step 4, Establishing Communication.

Step 4: Establishing Communication

The final step in the installation is setting up your Internet connection.

- 1 Windows users should have a Hayes icon on their desktop that looks like this:



Click the icon to display the **Hayes ADSL** login page.

If you do not have an icon on your desktop like the one shown above, open your Web browser, type **http://10.0.0.2**, and press **Enter** (or **Return**) to display the login page.

If the login page doesn't display, perform the following in this order: Recheck all connections; restart the modem and computer; and reset the modem by inserting a paper clip into the **Reset** pinhole and holding for five seconds.

In this manual we use the name **Configuration Manager** to refer to the software reached by way of the Hayes icon or by typing **http://10.0.0.2** into your browser.

2 To log in, type the following user ID and password in lower-case letters:

User ID: **admin**


Password: **hayesadsl** (the “l” in “hayesadsl” is a lowercase “L,” not the number “one”)



Note: This User ID and Password are different from the ones your service provider may have given you. They provide an added level of security that protects your modem’s settings. This ID and password can be changed later if you prefer to choose them yourself.

3 Click Enter.

4 The Basic Setup page displays.

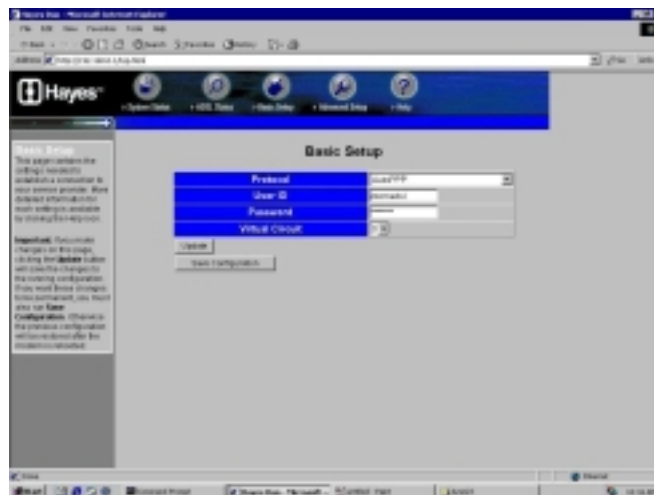

You need to fill in at least four of these boxes: **Protocol**, **VPI**, **VCI**, and **Encapsulation**. If your service provider gave you

these settings, it will make installation a little faster and easier, but don't worry if you don't have them. We'll tell you how to figure them out.

If Your Service Provider Gave You Protocol, VPI, VCI, and Encapsulation Settings

- 1 If you have this information** (Protocol, VPI, VCI, and Encapsulation), **select the correct Protocol** from the list. The screen may change slightly, depending on the protocol you select.
- 2 Enter the VPI, VCI, and Encapsulation** in the appropriate boxes.
- 3 If you selected PPPoE** as your Protocol, your provider may also have given you a **Service Name**. If so, **enter it in the appropriate box**. (This information is optional.)
- 4 If you selected PPPoE or PPPoA** as your Protocol, your provider should have given you a **User ID** or **User Name** (usually your email address or the characters preceding the @ sign in your email address) and a **Password**. (These are **NOT** the User ID and Password that you used to get into the Basic Setup menu.) If you cannot remember or cannot find your User ID and Password, call your service provider and say you have misplaced your user name and password. Then enter them as well. This information is required with PPPoE and PPPoA protocols.
- 5 If you selected 1483 Bridged with Static IP or 1483 Routed with Static IP** as your Protocol, your provider should have given you two series of numbers for the **IP** (Internet Protocol) **Address** and **Gateway**. **Enter these numbers in the appropriate boxes**.
- 6** Leave the **Virtual Circuit** box at 0.
- 7** Click **Update**, then **Save Configuration**.
- 8 Go to your Web browser** (i.e., Internet Explorer or Netscape Navigator) and **try to connect** to a familiar Web address.
- 9 If you connect successfully, your installation is complete and you're ready to browse the web!** If you do not connect

successfully, access the User's Guide on your CD and consult Appendix E, Troubleshooting.

If and when you want to use your modem for online gaming, continue on page 18.

If You DO NOT Have Protocol, VPI, VCI, and Encapsulation Settings from your Service Provider

If you do not have the settings from your service provider, you can use the AutoConfiguration feature (instructions below). This should work for most, but not all, users. If it doesn't work for you, we'll tell you how to find and enter your settings manually.

Using AutoConfiguration

When you select the **AutoPPP** or **AutoBridge** option on the **Protocol** list, the ADSL Duo searches its connection with the DSL service provider to test the more popular Internet settings (VPI, VCI, and Encapsulation).

For most users, the modem should take five minutes or less to test its settings for a possible match with your provider's settings.

1 If your provider has given you a User ID and Password, select AutoPPP (the Basic Setup default). Otherwise, select AutoBridge and go to Step 2 on page 14.

a When you select AutoPPP from the Protocol list, this page appears:




Basic Setup	
Protocol	AutoPPP
User ID	
Password	
Virtual Circuit	1


Update Save Configuration


b Make the following entries:

User ID	Supplied by your service provider. Typically this is the same as your email address or the characters preceding the @ sign in your email address.
Password	Supplied by your service provider.
Virtual Circuit	Accept the default, which is 0.

c Click the **Update** button to start searching.

d As the modem searches for a match, click the **ADSL Status** button  at the top of the page to go to the ADSL Status page. Under **Connections Status**, the **State** field indicates the search progress:

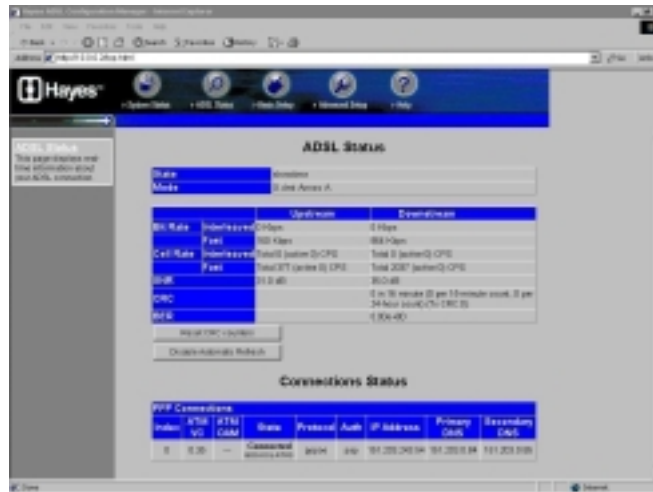

e When the **State** field displays **Connected**, click the **Advanced Setup** button  at the top of the page. (If the modem fails to find a match using the AutoPPP option, see Step 2 below.)

f On the **Advanced Setup** page, click the **Save Configuration** button to save your provider's Internet settings to permanent memory.

If the modem found a match, you've finished! You are now connected to the Internet.

2 If the modem didn't find a match using AutoPPP, some users may be able to connect using the AutoBridge option, even if they were given a User ID and Password.

a To use this option, select **AutoBridge** from the **Protocol** list.

b The following field appears:

Virtual Circuit	Accept the default, which is 0.
------------------------	---------------------------------

c Click **Update** and repeat Steps 1b – 1d above.

When the modem connects, you are ready to explore the Internet.

If and when you want to use your modem for online gaming, continue on page 18.

If neither AutoPPP nor AutoBridge turns up a match for your provider's settings, follow the instructions below.

Locating and Entering DSL Settings Manually If AutoConfiguration Did Not Work

The **DSL Internet Settings Tables** beginning on page 77 show the settings for the most commonly encountered service providers in the US and many other countries.

If there is more than one setting for your service provider, the most common is labeled (1), the next most common is labeled (2), and so on.

1 Go to the tables on page 77 and find your service provider on the list. If you are in the US and your service provider is not on the list, follow the instructions using the settings for **Service Provider Not Shown** at the bottom of the table.

- 2 On the ADSL Duo's **Basic Setup** page (shown below), **select your Service Provider's most often used protocol** – the one labeled (1) in the **DSL Internet Settings Tables** – from the list. The screen may change slightly, depending on the protocol you select.

Basic Setup	
Protocol	PPPoE
VPI	0
VCI	35
Encapsulation	L2C
Service Name	
User ID	
Password	
Virtual Circuit	0

Update

- 3 **Now enter** the corresponding **VPI**, **VCI**, and **Encapsulation** settings in the appropriate boxes.
- 4 **If you selected PPPoE as your protocol**, leave the **Service Name** box empty.
- 5 **If you selected either PPPoE or PPPoA as your Protocol**, your provider should have given you a **User ID** or **User Name** (usually your email address or the characters preceding the @ sign in your email address) and a **Password**. (These are **NOT** the User ID and Password that you used to get into the Basic Setup menu.) If you cannot remember or cannot find your User ID and Password, call your service provider and say that **you have misplaced your user name and password**. Then enter them as well. This information is only required with PPPoE and PPPoA protocols.
- 6 If your Service Provider uses **1483 Bridged IP** or **1483 Routed IP**, you should have been given numbers for the **IP Address** and **Gateway**. Enter these numbers in the appropriate boxes.
- 7 Leave the **Virtual Circuit** box at 0.
- 8 Click **Update**, then **Save Configuration**.

- 9 Go to your Web browser (i.e., Internet Explorer or Netscape Navigator) and try to connect to a familiar Web address.

If you connect successfully, your installation is complete and you're ready to browse the web!

If you do not connect successfully, continue with Step 10 below.

- 10** Go back to the tables on page 77 and enter the next most frequently used settings – those labeled (2) if you just entered (1), or (3) if you just entered (2) – on the modem's Basic Setup page, and repeat Steps 2 – 9 above.

- 11** If there are no more settings shown for your Service Provider, access the User's Guide on the CD and consult Appendix E, Troubleshooting.

If and when you want to use your modem for online gaming, continue on page 18.

1.4 If You Need Help

Hayes has many Technical Support services available to its customers.

Windows users: Please see the Customer Support portion of the CD for contact information. You may also want to refer to the Frequently Asked Questions on the CD.

Macintosh and Linux Users: You will find Customer Support information and Documentation in Adobe PDF format in the appropriately named folders in the CD's directory.

The CD also has more detailed information about installing your ADSL Duo, configuring it for a number of common applications, and using it.

From time to time, Hayes may release improved firmware. This is also available at **www.hayesmicro.com**, along with upgrade instructions. We recommend that you check this site periodically for updates.

2

Online Gaming

2.1 Do I Need To Do Anything?

There are three cases where you need to set up your modem in order to play online games.

- **If you are using your computer to play a “peer-to-peer” or “head-to-head”** game over the Internet, you **always** have to set up the modem unless you linked up to your partner by going to a web site. A peer-to-peer game is a game where two players are competing directly against one another. Popular peer-to-peer games include Age of Empires, Command and Conquer, Dark Reign 2, and Unreal Tournament. If you are unsure whether your game is a peer-to-peer game, check the game instructions.
- **If you are using your computer to play a multiplayer game and you want to host the game.** Popular multiplayer games include Half Life, Diablo II, Delta Force, Hexen II, Myth, Quake II, and Warcraft II, III.
- If you are playing an online game using **Xbox Live** or **PlayStation 2**.


In all three cases you will need to:

- Choose an IP address for gaming.
- Open one or more ports in the modem’s built-in firewall by setting up a filter so that the firewall doesn’t block the other players.
- Assign the filter to your Internet connection.

2.2 Choosing an IP Address for Gaming

You need to make sure that the computer or gaming system you use for playing games always has the same IP address. By default, the ADSL Duo assigns addresses dynamically (using Dynamic Host Configuration Protocol or DHCP) to the devices on the local area network whenever they reboot, and the addresses won't necessarily always be the same. However, the modem can be set up to assign the same address to your computer or gaming system every time.

To ensure that your computer or gaming system always uses the same address, follow the steps below.

- 1 If you are using Xbox or PlayStation 2, connect the device to your modem with an Ethernet cable. (Since the ADSL Duo has only one Ethernet port, if you are connected to your computer via Ethernet you will need a “multi-port hub” to expand the available Ethernet ports.) On your TV screen, locate **Network Settings** and select **Connect**.
- 2 Click the **Advanced Setup** button  at the top of your Configuration Manager's Basic Setup page.
- 3 On the **Advanced Setup** page, click the **DNS & DHCP Server** button.

The **DNS & DHCP Server** page appears:



DNS & DHCP Server

Dynamic Name:

Dynamic Primary DNS:

Dynamic Name Server #1:

Dynamic Name Server #2:

DHCP Range From:

DHCP Range End:

Enabled	Host Name	MAC Address	IP Address
<input type="checkbox"/>			
<input type="checkbox"/>			
<input type="checkbox"/>			
<input type="checkbox"/>			
<input type="checkbox"/>			
<input type="checkbox"/>			
<input type="checkbox"/>			
<input type="checkbox"/>			
<input type="checkbox"/>			
<input type="checkbox"/>			

DHCP Clients (Leases)

Host Name	MAC Address	IP Address
comcast/192.168.1.1	00:0C:29:00:00:00	192.168.1.1

- 4 Before you can choose an IP address, you need to know the MAC (Media Access Control) address of your computer or gaming system.

If you are using a computer to play an online game:

If you know the name of your computer or if you have only one computer connected, you can find the MAC address under **DHCP Clients (Leases)** at the bottom of the **DNS & DHCP Server** page.

To find the MAC address if you don't know the name of your computer or if you have more than one computer connected, follow these steps:

- a Go to the computer you want to use for gaming.
- b Click the **Start** button and select **Run**.
- c In the **Run** dialog box, type **command** and click **OK** to open the **Command** or **MS-DOS** window.
- d In the **Command Prompt** or **MS-DOS** window (after **C:\>** or **C:\WINDOWS>**), type **ipconfig**, leave a space, then type **/all**. (It should look like this: **ipconfig /all**)
- e Press **Enter**. The MAC address is displayed as the 12-digit **Physical Address** or **Internet Adapter** address.

If you are using Xbox to play an online game:

- a You can find the MAC address on the Xbox Dashboard in the lower right corner of the **Network Settings** menu. You will see something like MAC=0050F24ADC29, but your address will be different.
- b You will also need to assign an IP address now. To do this, on the Xbox **Network Settings** menu select **IP Addresses**.

- c** On the **IP Addresses** screen, enter the following:

Configuration	Manual
IP Address	10.0.0.25
Subnet Mask	255.255.255.0
Gateway	10.0.0.2

- d** Press **B** to go back to the **Network Settings** menu.
- e** On the **Network Settings** menu, select **DNS Sservers**.
- f** On the **DNS Servers** screen, enter the following:

Configuration	Manual
Primary DNS	10.0.0.2
Alternate DNS	10.0.0.2

- g** Press **B** twice to return to the main menu.

If you are using PlayStation 2 to play an online game:

To find the MAC address of the PlayStation 2, follow these steps:

- a** Insert your Network Access Disc into the PlayStation.
- b** On the main menu, select **ISP Setup**, then **I have an ISP**, then **Automatic Configuration**.
- c** On the **Select an Internet service provider** menu, select **Other**.
- d** On the **Connection Test** menu, select **Advanced**. The MAC address is displayed on the **Advanced Broadband Settings** screen.
- e** Now, to configure the Playstation 2's network settings, on the main menu select **ISP Setup** again. If a message displays, press **X** to disconnect from the Internet.

- f On the **Edit Network Setting** menu, select **New Network Setting**.
 - g On the **Connect to the Internet** menu, select **Local Area Network**.
 - h On the **Local Area Network Setup** menu, select **Automatic Configuration**.
 - i On the **Connection Test** menu, select **Test Settings**.
 - j At the “Test for connecting to your ISP was successful” message, select **Continue** and follow the instructions to save your setting and return to the main menu.
- 5 Now that you have determined the MAC address, you can assign your computer or gaming system an IP address. In the center section of the **DNS & DHCP Server** page, make these entries:

Enable	Select the first check box.
Host Name	Not required. You can type a name to identify the device if you would like.
MAC Address	Type the MAC address from Step 4.
IP Address	Locate the computer or PlayStation’s MAC address in the DHCP Clients (Leases) section at the bottom of the DNS & DHCP Server page, and use the associated IP Address . Xbox users: Enter 10.0.0.25.

Click **Update** and then **Save Configuration** to save the IP address to permanent memory. Now your computer or gaming system will always be assigned this address.

6 Next, use this IP address to set up a filter (open ports) in the ADSL Duo's firewall.

- If you are using **Xbox Live**, go to page 25.
- If you have **PlayStation 2**, go to page 27.
- If you are playing a **peer-to-peer or multiplayer game** on your computer, follow the instructions below.

2.3 Setting Up a Firewall Filter for Your Computer (Opening Ports for Gaming)

- 1 Click the **Advanced Setup** button  at the top of the **DNS & DHCP Server** page of your Configuration Manager.
- 2 On the **Advanced Setup** page, click the **WAN IP Filter** button to display the **WAN IP Filter** page:



3 Make the following entries:

Index	Select a number 1-7 to identify this filter. The default is 0, which is your normal filter.
NAT	(Network Address Translation) Select this check box.
Enable	Select the first check box.

Use Address Passthrough	Do not select this check box.
LAN IP Address	Enter the IP address that you specified on the DNS & DHCP Server page.
WAN IP Address	If you only want to let certain people have access to your computer , you can do this by entering their computers' WAN IP (Internet) addresses here. Each computer that you would like to give access to should be entered on a separate line, along with the other information (LAN IP Address, Protocol, and Ports) from the first line.
Protocol	<p>If you are playing Dark Reign 2, Delta Force 1 or 2, Diablo, Half Life, Quake II, or Quake III on your computer, select your game from the list.</p> <p>Otherwise, if you have obtained your protocol (udp or tcp) and port number(s) from your game instructions, select the protocol from the list.</p> <p>If you do not know your protocol or port number(s), you need to set up your computer as a DMZ (Demilitarized Zone) by selecting all from the Protocol list. This will open up all ports on the computer to all communication over the Internet.</p> <p>Warning: Setting up a DMZ removes the protection provided by the ADSL Duo's firewall. We therefore recommend that a DMZ be used only when necessary, and that you turn it off when you are not playing a game and back on when you want to play. See Turning the Filter On and Off, page 29.</p>
Ports	If you selected a game from the Protocol list or designated your computer as a DMZ , you do not have to enter anything here.


If you are playing another peer-to-peer or multiplayer game, your game instructions should tell you what ports to enter here. To enter a number, you must enter **tcp** or **udp** in the **Protocol** box.

You can specify a single port number (for example, 2400), a range of port numbers like 2400:2500 (which would be 2400, 2401, 2402, etc., up to 2500), a list (for example, 2400,8026,8260), or a combination of range and list (for example, 2400,30000:34000,8260).

The highest port number supported is 65535.

- 4 Click **Update** and then **Save Configuration**.
- 5 Now you need to assign the filter to your Internet connection. Go to **Assigning the Filter** on page 28.

2.4 Setting Up a Firewall Filter for Xbox® Live

- 1 Click the **Advanced Setup** button  at the top of the ADSL Duo's Configuration Manager page.
- 2 On the **Advanced Setup** page, click **WAN IP Filter** to display the **WAN IP Filter** page (the top of the page with a sample filter rule is shown below):



Index	NAT	Enable	Use Address	LAN IP Address	WAN IP Address	Protocol	Ports
1	IP	<input checked="" type="checkbox"/>	<input type="checkbox"/>	202.8.122		tcp	2070-1120
		<input type="checkbox"/>	<input type="checkbox"/>				

3 Make the following entries:

Index	An index number 1-7 to identify this filter configuration. In the sample, number 1 is selected.
NAT	Select this check box.
Enable	Select the first check box.
Use Address Passthrough	<u>Do not</u> select.
LAN IP Address	Enter 10.0.0.25.
WAN IP Address	Not required.
Protocol	Select the protocol specified in your Xbox instructions, either tcp or udp .
Ports	Type the port number(s) specified in the Xbox instructions.

4 Click **Update** and then **Save Configuration**.

5 Update the Xbox Dashboard:

Make sure you have your Xbox Live Starter Kit at hand. Insert the Xbox Live CD into your Xbox. Once the upgrade is complete, the main menu will include an **Xbox Live** entry.


6 Insert the Xbox Communicator module into the Xbox Controller expansion slot (top slot). Then insert the headset plug into the Communicator module.


7 Activate your Xbox Live account:

The Xbox Live CD should still be in your Xbox. We recommend that you watch a video that explains the installation process: Select **Xbox Live** from the menu. Then, from the Dashboard, select **Xbox Live** and follow the prompts. **Note:** You will need your subscription code to activate your account—this number is located on the CD's sleeve. (If you require more detailed instructions, please refer to your Xbox Live documentation.)

- 8 Now you need to assign the filter to your Internet connection. Follow the instructions on page 28.

2.5 Setting Up a Firewall Filter for PlayStation® 2

- 1 Click the **Advanced Setup** button  at the top of the ADSL Duo's Configuration Manager page.
- 2 On the **Advanced Setup** page, click **WAN IP Filter** to display the **WAN IP Filter** page (the top of the page with a sample filter rule is shown below):



Index	An index number 1-7 to identify this filter configuration.
NAT	Select this check box.
Enable	Select this check box.
Use Address Passthrough	Do not select.
LAN IP Address	Enter the IP address for the PlayStation 2 that you specified on the DNS & DHCP Server page.
WAN IP Address	Not required.
Protocol	Select tcp .
Ports	Type the port number(s) specified in your game instructions.

- 3 Click **Update** and then **Save Configuration**.


- 4 Now you need to assign the filter to your Internet connection. Follow the instructions below.


2.6 Assigning the Filter to Your Internet Connection

Note:

If you have third-party firewall software, such as the Windows XP firewall, installed on your computer, you may need to deactivate it before setting up a filter. Otherwise your computer may block the ports you want to open.


The final step in setting up the ADSL Duo is to open up ports for gaming by assigning the filter. Follow these steps:

- 1 Click the **Advanced Setup** button  at the top of the **WAN IP Filter** page.
- 2 On the **Advanced Setup** page, click the **WAN Settings** button to display this page:



WAN Settings	
Protocol	PPPoE
Enable	<input checked="" type="checkbox"/>
WPI	0
WCI	05
Encapsulation	LLC
IP Address Passthrough	<input type="checkbox"/>
IP Address Passthrough Host Mac	
Service Name	
User ID	
Password	
Authentication	auto
Inactivity Disconnect Timer	never
Keep Alive Timer	30 seconds
Traffic Profile	0
WAN IP Filter	0
Default Route	<input type="checkbox"/>
RIP Mode	disabled
Virtual Circuit	0

Update

- 3 In the **WAN IP Filter** box, select the index number that you just selected for your filter (it should be a number 1 to 7).
- 4 Click **Update** and then **Save Configuration** to use the gaming filter.
- 5 You will need to provide your WAN IP address to the people that you are playing with. To find this address, click the **ADSL Status** button  at the top of your Configuration Manager page, scroll down to the **Connections Status** section, and note the address under **IP Address**, as shown below:



Connections Status


PPP Connections									
Index	ATM VC	ATM QAM	State	Protocol	Auth	IP Address	Primary DNS	Secondary DNS	
0	0.35	--	Connected 803-65L-6TR2	pppoe	pap	151.203.243.54	151.203.0.84	151.203.0.85	

That should complete your setup. Enjoy your game! Remember, to turn the Duo's firewall security back on, turn your filter off when you've finished. See below.

2.7 Turning the Filter On and Off


When you set up your filter or DMZ, you named it by choosing a number from 1-7. It's easy to turn the filter on when you want to play a game and off when you are finished. This will give you the benefit of the Duo's firewall when you are not playing a game. All you have to do is set the WAN IP Filter to the default, which is 0, instead of the number you chose, which was probably 1.

Turning the Filter or DMZ Off (Enabling the Firewall)

- 1 Click the **Advanced Setup** button  at the top of your Configuration Manager's **Basic Setup** page.
- 2 On the **Advanced Setup** page, click the **WAN Settings** button.
- 3 On the **WAN Settings** page, in the **WAN IP Filter** box, select 0 (the default), click **Update** and then **Save Configuration**.

This ensures that your firewall protection is reactivated and will remain active when the modem is rebooted.


Turning the Filter or DMZ On (Opening Ports for Gaming)

- 1 Click the **Advanced Setup** button  at the top of your Configuration Manager's **Basic Setup** page.
- 2 On the **Advanced Setup** page, click the **WAN Settings** button.
- 3 On the **WAN Settings** page, in the **WAN IP Filter** box, select the number of your gaming filter (the number 1-7 that you chose earlier), click **Update** and then **Save Configuration**.

3

Advanced Setup Options

In addition to its basic setup options, the ADSL Duo includes advanced settings for users who need to perform specialized tasks.

To access the Advanced Setup options, click the **Advanced Setup** button  at the top of the **Basic Setup** page in your Configuration Manager.



IMPORTANT:

Every time you make changes on an Advanced Setup page, click **Update**, then **Save Configuration**.

If you don't follow this procedure, any changes you've made will be lost when the ADSL Duo is reset.

3.1 WAN Settings

Select **WAN Settings** to configure additional settings for the protocol you selected on the **Basic Setup** page of your Configuration Manager.

There is a WAN Settings page for each of the Internet protocols on the **Protocol** list. The protocol and settings that appear when you click WAN Settings depend on the protocol you selected in Basic Setup.

If you selected **PPPoE** or **PPPoA**, go to Section **3.1.1, PPP Connections**, on page 33.

If you selected **1483 Bridged w/DHCP**, go to Section **3.1.2, 1483 Bridged Mode with DHCP** on page 36.

If you selected **1483 Bridged w/Static IP**, go to Section **3.1.3, 1483 Bridged with Static IP** on page 37.

If you selected **1483 Routed w/Static IP**, go to Section **3.1.4, 1483 Bridged with Routed IP** on page 38.

If you selected **1483 Bridged (Pure Bridge Mode)**, go to Section **3.1.5, 1483 Bridged (Pure Bridge Mode)** on page 40.

If you selected **AutoPPP**, go to Section **3.1.6, AutoPPP** on page 41.

If you selected **AutoBridge**, go to Section **3.1.7, AutoBridge** on page 43.

The WAN Settings pages also let you configure one or more additional Virtual Circuits for specific purposes such as gaming or video-conferencing, but only if your ISP supports more than one type of connection. See the Wan IP Filter section on page 44.

3.1.1 PPP Connections

The following fields appear if you selected **PPPoE** or **PPPoA** on the **Basic Setup** page of your Configuration Manager:

Field	Value
Protocol	PPPoE
Enable	<input checked="" type="checkbox"/>
VPI	0
VCI	35
Encapsulation	LLC
IP Address Passthrough	<input type="checkbox"/>
IP Address Passthrough Host Mac	
Service Name	
User ID	
Password	
Authentication	auto
Inactivity Disconnect Timer	never
Keep Alive Timer	30 seconds
Traffic Profile	0
WAN IP Filter	0
Default Route	<input type="checkbox"/>
RIP Mode	disabled
Virtual Circuit	0

Make the following entries:

Enable	Lets you enable or disable the connection.
VPI	Supplied by your service provider.
VCI	Supplied by your service provider.
Encapsulation	LLC or VC . Supplied by your service provider. “Encapsulation” refers to the way information is packaged and sent over a network.
IP Address Passthrough	If selected, lets you open up one computer on the LAN to all traffic – to create what is called a DMZ. This allows you to participate in a teleconference, for example, or play games over the Internet.

IP Address Passthrough Host MAC	MAC address of the passthrough computer. The digit pairs must be separated by colons – for example, 00:01:03:24:F0:B6. For instructions on locating a MAC address, see page 80.
User ID	Supplied by your service provider.
Password	Supplied by your service provider.
Service Name	Supplied by your service provider. (Not required for PPPoA connections.)
Authentication	The method of verifying a user name and password. The choices are PAP (Password Authentication Protocol, the most basic form of unencrypted authentication), CHAP (Challenge Handshake Authentication Protocol, which periodically verifies an individual's identity using a 3-way handshake), None , or Auto (the default), which uses either PAP or CHAP, depending on the method used by your provider.
Inactivity Disconnect Timer	The period of inactivity on the line after which the PPP connection will be terminated – never (the default), 1 minute , 5 minutes , 20 minutes , or 1 hour .
Keep Alive Timer	The amount of time between automatic “Are you still there?” exchanges between modem and service provider regarding the PPP connection – never (never check), 1 second , 30 seconds (default), 10 minutes , or 1 hour .
Traffic Profile	The index number 0-7 of a previously configured profile defining the Quality of Service. See page 56.
WAN IP Filter	The index number 0-7 of a previously-configured WAN IP filter. See page 44.

Default Route	Selected is the default for Virtual Circuit 0. The Default Route controls which connection will be used for default IP gateway routing. Only one Virtual Circuit can have this option selected.
RIP Mode	<p>(Routing Information Protocol Mode). RIP allows you to share routing information with other routing devices on the WAN. Most small home or office networks do not need RIP, since they have only one router (the ADSL Duo) and one path to the ISP.</p> <p>However, you may need to configure RIP if:</p> <ul style="list-style-type: none"> • Your home network contains another router. The ADSL Duo and the other router can communicate via RIP to share their routing tables. • Your network connects via the DSL line to a remote network, such as a corporate LAN. In order for your LAN to learn the routes used in the corporate network, both networks must be configured for RIP. • Your ISP requests that you run RIP for communication with devices on their network. <p>The modem generally transmits its default route(s) every 30 seconds. Options are disabled (the default), passive (the modem receives but doesn't transmit), or active (the modem receives and transmits).</p>
Virtual Circuit	Accept the default, which is 0, or if you are configuring an additional connection, select another number. A Virtual Circuit is a path through the network to reach a destination – the Internet or a Virtual Private Network, for example.

When you finish, click **Update**, then **Save Configuration**.

3.1.2 1483 Bridged with DHCP

If you selected this protocol on the **Basic Setup** page of your Configuration Manager, the following fields appear:

WAN Settings	
Protocol	1483 Bridged w/DHCP
Enable	<input checked="" type="checkbox"/>
VPI	0
VCI	0
Encapsulation	LLC
MAC Address	00 06 41 0e a2 48
Traffic Profile	0
WAN IP Filter	0
Default Route	<input checked="" type="checkbox"/>
RIP Mode	disabled
Virtual Circuit	0

Update

Make these entries:

Enable	Lets you enable or disable the connection.
VPI	Supplied by your service provider.
VCI	Supplied by your service provider.
Encapsulation	LLC or VC . Supplied by your service provider. See page 33.
MAC Address	The modem's MAC address (display only).
Traffic Profile	The index number 0-7 of a previously configured profile defining the Quality of Service. See page 56.
WAN IP Filter	The index number 0-7 of a previously-configured WAN IP Filter. See page 44.
Default Route	Selected is the default for Virtual Circuit 0. See page 35.
RIP Mode	(Routing Information Protocol Mode). See page 35.

Virtual Circuit	Accept the default, which is 0, or if you are configuring an additional connection, select another number. See page 35.
------------------------	---

When you finish, click **Update**, then **Save Configuration**.

3.1.3 1483 Bridged with Static IP

If you selected this protocol on the **Basic Setup** page of your Configuration Manager, these fields appear:

WAN Settings	
Protocol	1483 Bridged w/Static IP
Enable	<input checked="" type="checkbox"/>
VPI	0
VCI	25
Encapsulation	LLC
IP Address	
Gateway	
MAC Address	00:06:4F:0A:02:4E
Traffic Profile	0
WAN IP Filter	0
Default Route	<input checked="" type="checkbox"/>
RIP Mode	disabled
Virtual Circuit	0

Update

Make the following entries:

Enable	Lets you enable or disable the connection.
VPI	Supplied by your service provider.
VCI	Supplied by your service provider.
Encapsulation	LLC or VC . Supplied by your service provider. See page 33.
IP Address	The modem's static IP address specified by your service provider.
Gateway	The gateway's WAN IP address specified by your service provider.

MAC Address	The modem's MAC address (display only).
Traffic Profile	The index number 0-7 of a previously configured profile defining the Quality of Service. See page 56.
WAN IP Filter	The index number 0-7 of a previously-configured WAN IP Filter. See page 44.
Default Route	Selected is the default for Virtual Circuit 0. See page 35.
RIP Mode	(Routing Information Protocol Mode). See page 35.
Virtual Circuit	Accept the default, which is 0, or if you are configuring an additional connection, select another number. See page 35.

3.1.4 1483 Routed with Static IP Connection

If you selected **1483 Routed w/ Static IP** on the **Basic Setup** page of your Configuration Manager, the following fields appear:

WAN Settings	
Protocol	1483 Routed w/ Static IP
Enable	<input checked="" type="checkbox"/>
VPI	0
VCI	35
Encapsulation	LLC
IP Address	
Gateway	
MTU	1500
Traffic Profile	0
WAN IP Filter	0
Default Route	<input checked="" type="checkbox"/>
RIP Mode	disabled
Virtual Circuit	0

Update

Make these entries:

Enable	Lets you enable or disable the connection.
---------------	--


VPI	Supplied by your service provider.
VCI	Supplied by your service provider.
Encapsulation	LLC or VC . Supplied by your service provider. See page 33.
IP Address	The modem's static IP address specified by your service provider.
Gateway	The gateway's WAN IP address specified by your service provider.
MTU	(Maximum Transmission Unit) Value (in bytes) of the largest packet to be sent. Typically set to 1500.
Traffic Profile	The index number 0-7 of a previously configured profile defining the Quality of Service. See page 56.
WAN IP Filter	The index number 0-7 of a previously-configured WAN IP filter. See page 44.
Default Route	Selected is the default. See page 35.
RIP Mode	(Routing Information Protocol Mode for the WAN interface) The options are disabled (the default), passive , or active . See page 35.
Virtual Circuit	Accept the default, which is 0, or if you are configuring an additional connection, select another number. See page 35.

When you finish, click **Update**, then **Save Configuration**.

3.1.5 1483 Bridged (Pure Bridge Mode)

Note: Setting up the modem in Pure Bridged Mode disables the built-in NAT and SPI firewalls.

If you selected this mode on the **Basic Setup** page of your Configuration Manager, the following fields appear:

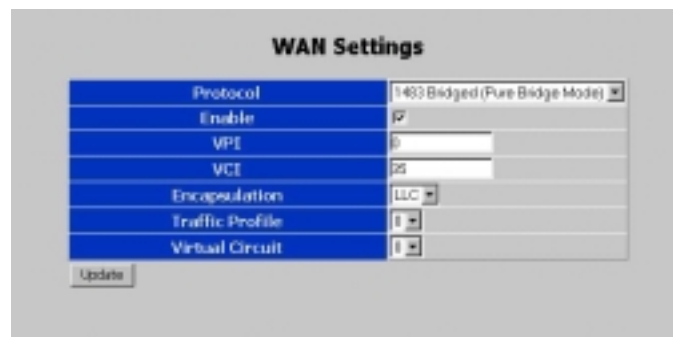

The screenshot shows a 'WAN Settings' configuration window. The 'Protocol' dropdown is set to '1483 Bridged (Pure Bridge Mode)'. The 'Enable' checkbox is checked. The 'VPI' field contains the value '0', and the 'VCI' field contains '25'. The 'Encapsulation' dropdown is set to 'LLC'. The 'Traffic Profile' and 'Virtual Circuit' dropdowns are both set to '1'. An 'Update' button is located at the bottom left of the form.

Make these entries:

Enable	Lets you enable or disable the connection.
VPI	Supplied by your service provider.
VCI	Supplied by your service provider.
Encapsulation	LLC or VC . Supplied by your service provider. See page 33.
Traffic Profile	The index number 0-7 of a previously configured profile defining the Quality of Service. See page 56.
Virtual Circuit	Accept the default, which is 0, or if you are configuring an additional connection, select another number. See page 35.

3.1.6 AutoPPP

If you selected AutoPPP in the Basic Setup pages, the following fields appear:

Note that this page does not display the protocol, VPI, VCI, or encapsulation information for your connection. On the **ADSL Status** page, under **Connections Status** at the bottom of the page, you can determine the protocol, VPI and VCI. To find out the encapsulation, look for a line similar to “Found 0/38 PPPoA LLC” in the System Log file.


You can make the following entries:

Enable	Lets you enable or disable the connection.
AutoSearch VCs	Displays the eight most commonly used VPI and VCI settings.
IP Address Passthrough	If selected, lets you open up one computer on the LAN to all traffic – to create what is called a DMZ. This allows you to participate in a teleconference, for example, or play games over the Internet.

IP Address Passthrough Host MAC	MAC address of the passthrough computer. The digit pairs must be separated by colons –for example, 00:01:03:24:F0:B6. For instructions on locating a MAC address, see page 80.
User ID	The name you entered and saved on the Basic Setup page is displayed.
Password	The password you entered and saved on the Basic Setup page is displayed.
Inactivity Disconnect Timer	The period of inactivity on the line after which the connection will be terminated – never (the default), 1 minute , 5 minutes , 20 minutes , or 1 hour .
Keep Alive Timer	The amount of time between automatic “Are you still there?” exchanges between modem and service provider – never (never check), 1 second , 30 seconds (default), 10 minutes , or 1 hour .
Traffic Profile	The index number 0-7 of a previously configured profile defining the Quality of Service. See page 56.
WAN IP Filter	The index number 0-7 of a previously-configured WAN IP filter. See page 44.
Default Route	Selected is the default. The Default Route controls which connection will be used for default IP gateway routing. Only one connection can have this option selected.
RIP Mode	(Routing Information Protocol Mode). See page 35.
Virtual Circuit	An index number 0-7. See the definition on page 35.

When you finish the configuration, follow these steps:


- a** Click **Update**. The modem begins a new search of its connection with your DSL provider to find the provider’s Internet settings.

- b As the modem searches for a match, go to the ADSL Status page. Under **Connections Status**, the **State** field indicates the search progress.
- c When the **State** field displays **Connected**, click the **Advanced Setup** button .
- d On the **Advanced Setup** page, click the **Save Configuration** button to save your provider's Internet settings and your configuration edits to permanent memory.

Every time the modem reboots, it reconnects to the Internet automatically, using the new settings. It does not do a new search unless you change the configuration again.

3.1.7 AutoBridge

If you selected AutoBridge in the Basic Setup pages, the following fields appear:

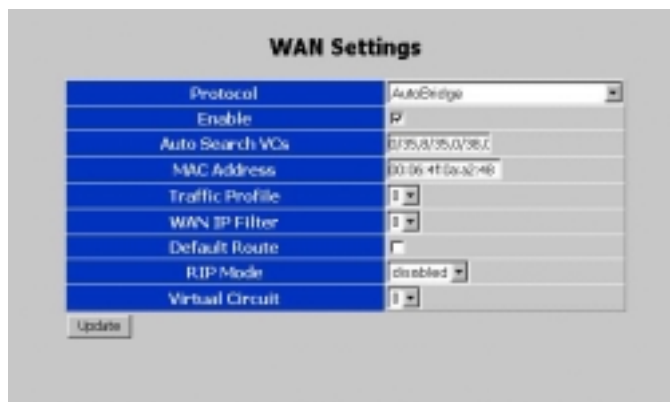


You can make these entries:

Enable	Lets you enable or disable the connection. The default is Enabled .
AutoSearch VCs	Displays the eight most commonly used VPI and VCI settings.
MAC Address	The modem's MAC address (display only).
Traffic Profile	The index number 0-7 of a previously

	configured profile defining the Quality of Service. See page 56.
WAN IP Filter	The index number 0-7 of a previously-configured WAN IP filter. See page 44.
Default Route	Selected is the default. The Default Route controls which connection will be used for default IP gateway routing. Only one connection can have this option selected.
RIP Mode	(Routing Information Protocol Mode). See page 35.
Virtual Circuit	An index number 0-7. See the definition on page 35.

When you finish the configuration, follow these steps:

- a** Click **Update**. The modem begins a new search of its connection with your DSL provider to find the provider's Internet settings.
- b** As the modem searches for a match, go to the ADSL Status page. Under **Connections Status**, the **State** field indicates the search progress.
- c** When the **State** field displays **Connected**, click the **Advanced Setup** button .
- d** On the **Advanced Setup** page, click the **Save Configuration** button to save your provider's Internet settings and your configuration edits to permanent memory.


Every time the modem reboots, it reconnects to the Internet automatically, using the new settings. It does not do a new search unless you change the configuration again.

3.2 WAN IP Filter

The ADSL Duo has a built-in firewall to protect your computer against Internet hackers. A traditional firewall in a building prevents a fire in one room from spreading to another room but allows water and electricity to travel through well-insulated pipes in

the wall to reach all parts of a building. Similarly, a computer firewall prevents unauthorized communication from gaining entry to your computer. You can open certain safe communication ports—to allow email communication, for example—but keep other ports sealed off from the outside world.

The WAN IP (Internet) Filter page lets you configure up to eight filters, each with up to 10 rules, for allowing access to the LAN from the Internet or vice versa. Unless you set up such rules, the NAT firewall software in the ADSL Duo will reject all unsolicited packets coming from the WAN.

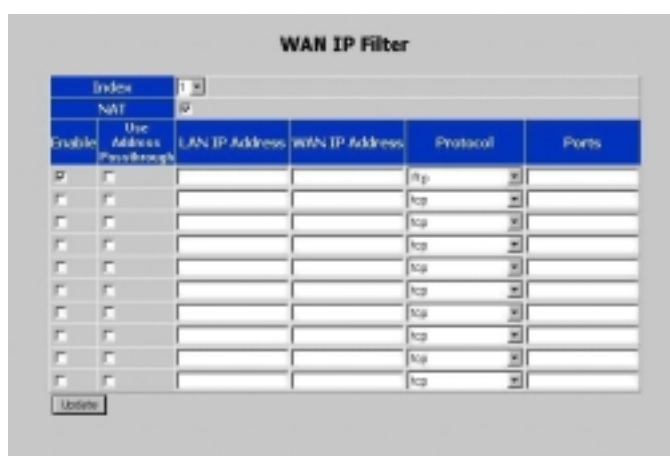

For example, in order to receive files via FTP, you must select the **Enable** check box, type your address in the **LAN IP Address** field, and select **ftp** from the **Protocol** list, as shown above. You can type the sender's address in the **WAN IP Address** field if you want to allow files to come in only from a certain person or persons (optional).

The WAN IP Filter page provides the way to set up one of the computers on your LAN for online gaming. Let's say your standard filter is Index #0. You can create Filter Index #2 that allows all Internet traffic through to your computer. When you want to play games online, you enable Filter #2, disable Filter #0, and on the WAN Settings page set your WAN IP Filter selection to 2.

Game-players frequently designate one computer on their LAN as a DMZ (Demilitarized Zone), and allow all internet traffic to pass through the firewall to that computer.

To set up a filter for online gaming or to create a DMZ, see **Chapter 2, Online Gaming** on page 23.

Make these entries on the WAN IP Filter page of your Configuration Manager:

Index	A number 0-7 that will identify this filter configuration.
NAT	Network Address Translation. If this check box is selected, the modem uses its WAN IP address as the source address for outgoing packets. NAT must be enabled if you are using private IP addresses on the LAN. NAT is enabled by default. If it is disabled, computers on the LAN must have public IP addresses.
Enable	If this check box is selected, the rule is enabled.
Use Address Passthrough	If selected, lets you open up one computer on the LAN to all traffic allowed by the filter rule. This allows teleconferencing or game-playing over the Internet, for example.
LAN IP Address	Required if NAT is enabled. If NAT is not enabled and this field is left blank, the ADSL Duo does not use the destination address.
WAN IP Address	Optional. If blank, the ADSL Duo does not use the source address when it matches packets against the filter rule. If an address or subnet specification (for example, 202.68.84.0/24) is entered, the ADSL Duo uses the 202.68.84 (network) part of the address to filter packets.
Protocol	Lets you select tcp , udp , all , or a tcp/udp application. If you select udp or tcp , you must specify port numbers in the Ports field. If you select an application, the modem automatically enters the port number(s) into the rule. If you set up a rule to use all , make sure it is the last rule in the filter list. The ADSL Duo

	<p>processes the rules from the top down, and when it sees all, it allows all packets through.</p> <p>If NAT is enabled and you select all, every packet that doesn't match earlier rules in the filter list is forwarded to the specified LAN IP address.</p> <p>If NAT is not enabled and you select all, every packet that matches the specified LAN and WAN IP addresses is allowed onto the network.</p> <p>If NAT is not enabled and you select all and you leave the IP address fields blank, the firewall allows all WAN traffic onto the network.</p>
Ports	<p>Editable only when either udp or tcp protocol is selected.</p> <p>You can specify a single port number (for example, 80), a range of port numbers (for example, 35000:40000), a list (for example, 80,8080,8008), or a combination of range and list (for example, 80,30000:34000,8080).</p> <p>The highest port number supported is 65535.</p>

Click **Update** and then **Save Configuration**.

3.3 LAN Interface

The **LAN Interface** page of your Configuration Manager lets you configure the Host (modem) Name, IP Address, and Netmask, the Media (LAN connection transmission speed), and the RIP (routing information) mode for the Ethernet interface:



Make the following entries:

Host Name	A name of your choice to identify the modem to other machines on the LAN.
IP Address	An IP address of your choice to identify the modem to other machines on the LAN. Note: if you change this address, the Hayes icon on your desktop will not work – you will have to type the IP address into your browser. If you forget the IP address you've entered on this page, you can retrieve it with the ipconfig command. For example, C:\WINDOWS>ipconfig.
Netmask	Modem's subnet mask, defined by you.
Media	Auto (default), 100BaseT-Full Duplex , 100BaseT-Half Duplex , 10BaseT-Full Duplex , 10BaseT-Half Duplex . Auto automatically selects the LAN transmission speed by sensing the computer's network interface card.


RIP Mode	(Routing Information Protocol Mode). See page 35.
-----------------	---

Click **Update** and then **Save Configuration**.

3.4 LAN IP Filter

The **LAN IP Filter** page of your Configuration Manager lets you define a set of rules for restricting access from the Local Area Network to the WAN. Typical uses for a LAN filter are to implement a corporate firewall, to prevent certain computers from being able to access the Internet, or to set parental controls by denying a particular WAN IP address to the specified LAN address.

For example, let's say you are a parent who wants to prevent your child from viewing a certain web site. You will select the **Enable** check box, type the address of the objectionable web site in the **WAN IP Address** field (see instructions below), type the address of the child's computer in the **LAN IP Address** field, select **tcp** from the **Protocol** list, and type **80** in the **Ports** field, as illustrated below:

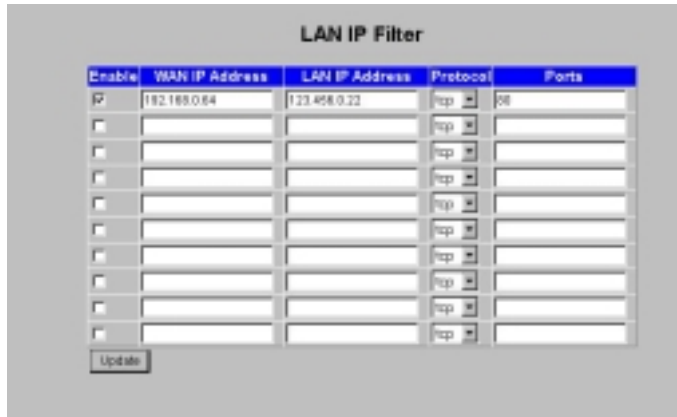

The **LAN IP Filter** fields are:

Enable	Lets you enable or disable a rule.
WAN IP Address	The address of the web site you want to restrict. To translate a URL to a WAN IP address, you

	can ping the web site (for example, C:\WINDOWS>ping www.hayesmicro.com) or use one of the free DNS resolvers available over the Internet.
LAN IP Address	If you specify a LAN address, it cannot receive data from the specified WAN IP Address.
Protocol	If you select udp or tcp , you must specify a port or a range of ports in the Ports field. If you select all , the ADSL Duo matches packets from both udp and tcp. The Ports field is disabled.
Ports	You can specify a single port number (for example, 80) or a range of port numbers separated by colons (for example, 80:100).

3.5 IP Remap Filter

The **IP Remap Filter** page of your Configuration Manager controls the Type of Service field in an IP packet header. Generally, you use this page in conjunction with the Routing Configuration page (see page 53), where you can specify a route based on the Type of Service.

Enable	Src IP Address	Dst IP Address	Protocol	Ports	ToS	New ToS
<input type="checkbox"/>			tcp		normal	normal
<input type="checkbox"/>			tcp		normal	normal
<input type="checkbox"/>			tcp		normal	normal
<input type="checkbox"/>			tcp		normal	normal
<input type="checkbox"/>			tcp		normal	normal
<input type="checkbox"/>			tcp		normal	normal
<input type="checkbox"/>			tcp		normal	normal
<input type="checkbox"/>			tcp		normal	normal
<input type="checkbox"/>			tcp		normal	normal
<input type="checkbox"/>			tcp		normal	normal

Update

Make the following entries:

Enable	Lets you enable or disable a Type of Service change.
Src IP Address	Originating IP address in the IP packet header. If this field is empty, the source IP address is not used to filter the packets.
Dst IP Address	Destination IP address in the IP packet header. If this field is empty, the destination IP address is not used to filter the packets.
Protocol	If you select udp or tcp , you must specify a port or a range of ports in the Ports field. If you select all , the ADSL Duo matches packets from both udp and tcp. The Ports field is disabled.
Ports	You can specify a single port number (for example, 80) or a range of port numbers separated by colons (for example, 80:100).
ToS	Existing Type of Service. Options are: <ul style="list-style-type: none">• Normal• Min (minimum) cost• Reliable (maximum reliability)• Throughput (maximum throughput)• Min (Minimum) delay
New ToS	New Type of Service. Options same as above.

Click **Update** and then **Save Configuration**.

3.6 MAC Filter

With a Pure Bridge connection only, you can use the **MAC Filter** page of your Configuration Manager as a method of limiting Internet access. This option lets you configure up to 20 source MAC address rules for filtering packets going out from the LAN. To locate a MAC address, see page 80.

Make the following entries:

Discard Unmatched Frames?	Lets you set a default condition for Ethernet packets (frames) that do not match any of the rules in the table. Packets can be either processed as normal or discarded.
Enable	Lets you enable or disable a rule.
MAC address	The MAC address to be matched in the source address field of the outgoing Ethernet packet.

Action	Drop discards the packet. Bridge passes the packet to the bridge (normal operation). Connection passes the packet directly to the WAN connection.
---------------	--

Click **Update** and then **Save Configuration**.

3.7 Routing Configuration


You can use the **Routing Configuration** page of your Configuration Manager to define specific routes for your LAN and Internet data.

Most users do not need to define IP routes. On a typical small home or office LAN, the existing routes picked up automatically by the ADSL Duo are the most appropriate path for your Internet traffic.

However, you may need to define routes if your setup includes two or more networks or subnets, if you connect to two or more ISPs, or if you connect to a remote corporate LAN. Without a route table, a computer on an additional network or subnet is invisible to the ADSL Duo. The route table acts as a map for the modem, so that it can direct traffic to the correct location.

The Routing Configuration page lets you add up to 20 static IP routes.

Click **Update** and **Save Configuration** after each set of entries. The active routes are displayed at the bottom of the page.

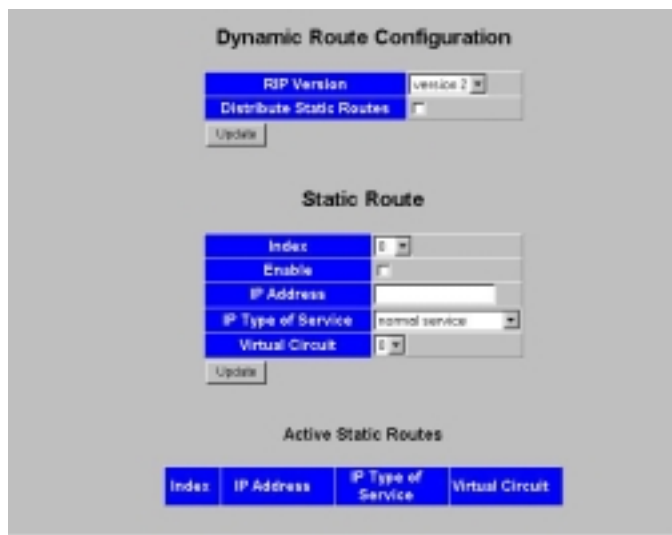

Under **Dynamic Route Configuration**, make these entries:

RIP Version	Version 1 or Version 2 . Routers transmit information to and from other routers. RIP Version 1 broadcasts the route to other routers on the LAN and to the ISP's gateway via the DSL line. Version 2 shares the route via a multicast packet to the LAN and WAN.
Distribute Static Routes	If selected, shares the static route information as well as the dynamic routes that are normally shared via RIP.

Under **Static Route**, make these entries:

Index	A number 1-20 to identify the route.
Enable	Makes the route active or inactive.
IP Address	The gateway IP address to be used for the route. Specify the netmask by appending /xx to the address (for example, /24).

	To configure a default route, enter an IP address of 0.0.0.0/24, for example.
IP Type of Service	The options are: <ul style="list-style-type: none"> • All • Normal • Min (minimum) cost • Reliable (maximum reliability) • Throughput (maximum throughput) • Min (Minimum) delay
Virtual Circuit	A number 0-7. This field lets you tie the route to a specific virtual circuit.

3.8 Services

The **Services** page of your Configuration Manager lets you enable or disable the various servers and applications running on the ADSL Duo.

Note: Use the individual service pages to configure the DNS & DHCP Server, the DHCP Relay, the static IP routes (Route Configuration page), and the Firewall (WAN IP Filter page).

Program	Enable	Disable	State
DHCP Server	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Running
DHCP Relay	<input type="checkbox"/>	<input checked="" type="checkbox"/>	Stopped
Domain Name Server	<input type="checkbox"/>	<input checked="" type="checkbox"/>	Running
Routing Daemon	<input type="checkbox"/>	<input checked="" type="checkbox"/>	Running
IGMP Proxy	<input type="checkbox"/>	<input checked="" type="checkbox"/>	Running
SNMP	<input type="checkbox"/>	<input checked="" type="checkbox"/>	Running
Activate Firewall	<input type="checkbox"/>	<input checked="" type="checkbox"/>	Running
FTP Server	<input type="checkbox"/>	<input checked="" type="checkbox"/>	Ready
TELNET Server	<input type="checkbox"/>	<input checked="" type="checkbox"/>	Ready
WEB Server	<input type="checkbox"/>	<input checked="" type="checkbox"/>	Running

Update

Make these selections:

Enable	Turns a service on.
Disable	Turns a service off.

Click **Update**, then **Save Configuration**.

3.9 Traffic Shaping Profile

The **Traffic Shaping Profile** page of your Configuration Manager lets you specify data transmission rates for a Virtual Circuit (Internet connection). For example, if your service provider uses Constant Bit Rate (CBR) to deliver video to you, you may be asked to set your service to CBR to ensure that the proper bandwidth is available for your video stream.

Your service provider must support the type of service you select.



Make the following entries:

Index	Profile number 0-7. This field lets you configure up to 8 traffic profiles that can be associated with a virtual circuit.
Service Category	Cbr (Constant Bit Rate – highest priority), rtVbr (Real-Time Variable Bit Rate), nrtVbr (Non-Real Time Variable Bit Rate), or ubr (Unspecified Bit Rate – lowest priority, the default). The category depends on the type of service you purchase. Your service provider will give you the information for this field.
Peak Cell Rate	Supplied by your service provider. The default is 0.

Sustainable Cell Rate	Supplied by your service provider. Valid with rtVbr and nrtVbr only. The default is 0.
Maximum Burst Size	Supplied by your service provider. Valid with rtVbr and nrtVbr only. The default is 0.

Click **Update** and then **Save Configuration**.

3.10 DNS & DHCP Server

Domain Name Servers (DNS) map the user-friendly domain names that you type into your web browser (for example, **www.hayesmicro.com**) to the numerical IP addresses that are used for Internet routing.

When you type a domain name into your browser, your PC sends a request to a DNS server to find the equivalent numerical address.

The ADSL Duo serves as the DNS proxy for computers attached to your LAN. It forwards requests to your service provider's DNS server.

Typically you should not need or want to change your DNS settings, unless instructed by your service provider.

The **DNS & DHCP Server** page of your Configuration Manager also supports 10 static DHCP address mappings. The ADSL Duo will always assign the same IP addresses to the MAC addresses listed in the lower half of the page. A LAN machine must have a static address in order for an Internet (WAN) filter rule to apply.

DNS & DHCP Server

Domain Name	hayes_adsl
Derive Primary DNS	<input checked="" type="checkbox"/>
Domain Name Server #1	10.0.0.2
Domain Name Server #2	151.203.0.84
DHCP Range Start	3
DHCP Range End	254

Enable	Host Name	MAC Address	IP Address
<input type="checkbox"/>			
<input type="checkbox"/>			
<input type="checkbox"/>			
<input type="checkbox"/>			
<input type="checkbox"/>			
<input type="checkbox"/>			
<input type="checkbox"/>			
<input type="checkbox"/>			
<input type="checkbox"/>			
<input type="checkbox"/>			

Update

DHCP Clients (Leases)

Host Name	MAC Address	IP Address
Clara	00135aa3b441	10.0.0.84

Make the following entries:

Domain Name	A user-friendly name for the ADSL Duo. When you assign a name here, computers on your LAN can access the modem's DNS proxy server using this name instead of its IP address.
Derive Primary DNS	If this check box is selected, the DNS server can be automatically assigned by the ISP.

Domain Name Server #1	Address of your service provider's DNS server.
Domain Name Server #2	Address of alternate DNS server to use in case DNS Server #1 is out of service or heavily congested.
Range Start	The first address in the range to be assigned to computers in the LAN.
Range End	The last address in the range to be assigned to computers in the LAN.
Enable	Turns static DHCP assignment on or off.
Host Name	Name of a LAN computer requesting a static IP address.
MAC Address	MAC address of the LAN computer requesting a static IP address.
IP Address	<p>Static IP address to be assigned to the LAN computer. You can use the machine's current IP address or select from the modem's address pool.</p> <p>To find a machine's current IP address, use the instructions for finding a MAC address. See page 80.</p> <p>To select from the modem's address pool, type the network portion of the modem's LAN IP address plus a number from the range of addresses. For example, if the network address is 10.0.0, and the range of addresses is 3 to 254, you can request an IP address from 10.0.0.3 to 10.0.0.254.</p>

Click **Update**, then **Save Configuration**.

Addresses the modem has assigned to LAN machines are displayed at the bottom of the page under the heading **DHCP Clients (Leases)**.

3.11 DHCP Relay

Most people will use the ADSL Duo's built-in DHCP server. If, however, you have asked your service provider to perform the DHCP server function for your home or small office network – as an added-cost service – you need to configure the ADSL Duo as a DHCP relay. When a computer on your LAN requests an IP address, the ADSL Duo relays the request to your service provider and then transmits the information back to the computer.

Use this page to enter the address of the DHCP server to which DHCP requests are forwarded. The address is assigned by your service provider.



Click **Update**, then **Save Configuration**.

3.12 Management Access Control

On the **Advanced Setup** page of your Configuration Manager, click **Management Access** to display this page, which lets you manage permissions for accessing the modem:

Index	An index number 0-15 representing an access profile.
Enable	Turns the access profile on or off.
Network Management System Address [/mask]	A LAN or WAN address that will be allowed access. The default is "*" (all addresses).
Management Service	Cli-telnet (Command Line Interpreter via Telnet), SNMP (Simple Network Management Protocol), web (Web interface), ftp (File Transfer Protocol, for upload/download of files only), or all (the default).
Access Point	LAN, WAN, or both. By default, all methods are enabled over the LAN and all access is barred over the WAN.

Click **Update**, then **Save Configuration**.

When you have saved an entry, it is displayed under **Active NMS Entries** at the bottom of the page in the **Network Management System Address** column.

3.13 Connection Loopback

The **Connection Loopback** page of your Configuration Manager lets you test the quality of an ATM connection to the modem.

When you place a specified connection into data loopback mode, all data packets received on that connection will be 'looped back' to the service provider for testing.



Virtual Circuit	An index number 0-7 representing a previously-configured virtual circuit.
VPI	Virtual Path Identifier. (Display only)
VCI	Virtual Circuit Identifier. (Display only)
Apply Loopback	Makes the loopback configuration active.

3.14 NTP Server

The **NTP Server** page of your Configuration Manager lets you enter the address of an NTP (Network Time Protocol) server, from which the modem can get the official current time.



When an address is entered, the built-in client program in the ADSL Duo sends periodic NTP requests to the server, obtains server time stamps, and uses them to adjust the network clocks.

For a list of free servers worldwide, check this web site:

- www.ntp-servers.com/uk/world-time-server.html

For a list of US servers, go to this site:

- <http://tf.nist.gov/timefreq/service/time-servers.html>

Be sure to select a server in your time zone.

4

Status Monitoring

4.1 ADSL Status

The **ADSL Status** page of your Configuration Manager provides information on the ADSL link and the connections that are configured.

The screenshot displays the ADSL Status page with the following data:

State		showtime	
Mode		G.dmt Annex A	
		Upstream	Downstream
Bit Rate	Interleaved	0 Kbps	0 Kbps
	Fast	800 Kbps	864 Kbps
Cell Rate	Interleaved	Total 0 (active 0) CPS	Total 0 (active 0) CPS
	Fast	Total 377 (active 0) CPS	Total 2037 (active 0) CPS
SNR	31.0 dB		35.0 dB
CRC			0 in 16 minute (0 per 15-minute count, 0 per 24-hour count) (Tx CRC 0)
BER			0.00e+00

Buttons: Reset CRC counters, Disable Automatic Refresh

PPP Connections								
VC	ATM VC	ATM QAM	State	Protocol	Auth	IP Address	Primary DNS	Secondary DNS
0	0.35	---	Connected 925.93L.4780	pppoe	pap	151.203.243.54	151.203.0.84	151.203.0.85

The two data fields in the top section are as follows:

State	“ Showtime ” indicates that there is a connection to the DSL line. “ Activating ” indicates that the modem is trying to sync up.
--------------	--

Mode	ITU G..Dmt, G.Lite or ANSI T1.413.
-------------	------------------------------------

The following transmission information is displayed:

Bit Rate	Upstream and downstream bit rates (in kbps) for the Interleaved and Fast channels.
Cell Rate	The upstream and downstream ATM cell rate in cps (cells per second) for the Interleaved and Fast channels. The total includes all active, idle and discarded cells and the active cell count is shown in brackets.
SNR	(Signal to Noise Ratio) The average upstream and downstream ratios in dB, rounded to the nearest 0.5dB.
CRC	(Cyclic Redundancy Check) Includes: <ul style="list-style-type: none"> • Total CRC errors after the modem becomes connected and the time in the connected state in seconds • Total CRC errors in the last 15-minute period • Total CRC errors during the last 24-hour period.
BER	(Bit Error Rate) Downstream error rate.
Refresh CRC Counters	Updates the CRC display.
Disable Automatic Refresh	Turns off automatic updating of the page.

The fields displayed in the Connections Status section depend on the connection type. The example below shows information for a PPPoE connection. Similar information is displayed for 1483 Bridged and Routed connections.

PPP Connections								
Index	ATM VC	ATM OAM	State	Protocol	Auth	IP Address	Primary DNS	Secondary DNS
0	0.35	--	Connected 803-PLATED	pppoe	pap	151.203.243.54	151.203.0.04	151.203.0.05

VC	Virtual circuit number
ATM VC	Connection settings
ATM OAM	Operation and Maintenance (OAM) status of the connection. "1" = segment packets being received. "2" = end-to-end packets being received "--" = no packets being received.
State	<p>ADSL down = ADSL link not ready</p> <p>Connecting = ADSL link is connecting</p> <p>No server = Server has not responded</p> <p>Server busy = Server has insufficient sessions</p> <p>Started = Session established</p> <p>Retrying = ADSL link dropped</p> <p>Link up = ADSL link negotiated</p> <p>User rejected = User ID/password rejected</p> <p>Auth. Timeout = Timeout during authentication</p> <p>Authenticated = Authentication phase completed</p> <p>Device error = Failed to configure device parameters</p> <p>Disconnected = Connection closed by user or peer</p> <p>Idle timeout = Connection closed due to inactivity</p> <p>Config error = Misconfigured</p>

	Connected = Network connection established Connected default = Network connection is the default route.
Protocol	Internet connection type
Auth	(Authentication) Auto (CHAP or PAP), CHAP, PAP, None . See page 34.
IP Address	ADSL Duo's WAN IP address.
Primary DNS	IP address of Primary DNS Server
Secondary DNS	IP address of Secondary DNS Server

4.2 System Status

System Status

Software Version: Hayes ADGL Version 1.1
 State: Showtime

	Interleaved	Fast
Cell HEC Error	0	0
Frame HEC Error	0	0
Frame FEC Error	0	0
Frame CRC Error	0	0

Next CRC Counter

Miniter Interval: 30
 Miniter Count: 33
 Training Count: 1

DHCP Clients (Leases)

Host Name	MAC Address	IP Address
ccom-kqf2r9gle	00:01:02:24:0:06	192.168.0.84

The **System Status** page of your Configuration Manager displays the following information:

Software Version	Version and release numbers
State	“Showtime” indicates that there is a DSL connection.

Cell HEC Error	The number of downstream cells for the Interleaved and Fast path channels that had Header Error Control (HEC) errors during the last monitor period. A cell is a subset of a frame (packet).
Frame HEC Error	The number of downstream frames for the Interleaved and Fast path channels that had Header Error Control errors during the last monitor period. An Ethernet frame (packet) carries ATM cells.
Frame CRC Error	The number of downstream frames for the Interleaved and Fast path channels that had CRC (Cyclic Redundancy Check) errors during the last monitor period.
Frame FEC Error	The number of downstream frames for the Interleaved and Fast path channels that had FEC (Forward Error Correction) errors during the last monitor period.
Monitor Interval	The number of seconds in the monitor period.
Monitor Count	The number of monitor periods that have elapsed since the modem became connected.
Training Count	The number of times the modem has lost and re-established the connection to the provider since it was powered on.

Under **DHCP Clients (Leases)**, this information is displayed:

Host Name	Client PC's name
MAC Address	MAC address of the client PC
IP Address	IP address assigned to the client PC


4.3 Processes

The **Processes** page of your Configuration Manager provides a snapshot of the processes that are running on the modem. This information is used for Tech Support.

Processes									
PID	SZ	RS	SH	CD	DA	LB	DR	Command Line	
1	9	9	0	3	0	6	9	init	
134	20	20	8	30	0	30	12	wsttPtc	
147	14	14	5	6	0	6	9	initd	
151	60	60	29	30	0	30	21	bas	
168	12	12	6	7	0	5	6	logd	
172	22	22	8	11	0	11	14	dcr-m	
176	46	46	4	9	0	27	42	zabts	
198	26	26	4	7	0	21	24	crsptd	
199	17	17	6	6	0	5	11	igmp-m	
2	0	0	0	0	0	0	0	kewntd	
20	10	10	0	2	0	6	30	spstgtd	
208	174	169	112	122	0	46	56	modem_smt	
209	174	169	112	122	0	46	56	modem_smt	
210	174	169	112	122	0	46	56	modem_smt	
211	174	169	112	122	0	46	56	modem_smt	
212	174	169	112	122	0	46	56	modem_smt	
214	5	4	0	1	0	3	4	logn	
215	174	169	112	122	0	46	56	modem_smt	
3	0	0	0	0	0	0	0	ksolnqd_CPU0	
390	40	40	7	30	0	30	33	dncpd	
4	0	0	0	0	0	0	0	kewspd	
466	73	73	5	9	0	64	60	ripd	
5	0	0	0	0	0	0	0	krcslamd	
568	41	41	32	34	0	7	9	OCConfigd	
6	0	0	0	0	0	0	0	bdfush	
65	0	0	0	0	0	0	0	kppp_thread	
7	0	0	0	0	0	0	0	kupdate	
73	18	18	9	11	0	7	9	dncupdate	
8	0	0	0	0	0	0	0	swapper	

4.4 Memory Usage

The **Memory Usage** page of your Configuration Manager displays the memory currently being used by the modem:

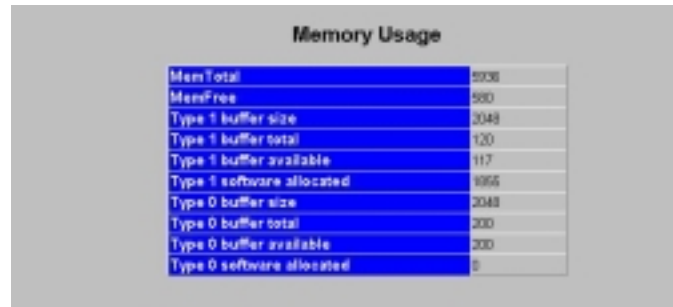

Memory Usage	
MemTotal	4936
MemFree	800
Type 1 buffer size	2048
Type 1 buffer total	120
Type 1 buffer available	117
Type 1 software allocated	895
Type 0 buffer size	2048
Type 0 buffer total	200
Type 0 buffer available	200
Type 0 software allocated	0

4.5 ADSL Connection Monitor

The **ADSL Connection Monitor** page displays information about the modem's ADSL connection.



ADSL Status			
Date	12/12/2004		
Mode	0 Line Access A		
Bit Rate	Interframe	Upstream	Downstream
Fast	Fast	0 Kbps	0 Kbps
Cell Rate	Interframe	0 Kbps	0 Kbps
Fast	Fast	Total 0 Kbps (0 CPU)	Total 0 Kbps (0 CPU)
SNR	Fast	Total 0 Kbps (0 CPU)	Total 0 Kbps (0 CPU)
SNR	Fast	0.0 dB	0.0 dB
DMC	0 in 16 minute (0 per 16 minute count, 0 per 24 hour count) (0 DMC)		
ATU	1.92x10 ⁴		

Connections Status							
Index	RTN	RTN	State	Protocol	Auth	IP Address	Primary
	QC	GM					Class
1	0.00	---	Established	PPP	Auth	192.168.1.104	192.168.1.104

In the **Configuration** box, you can modify the system file as indicated:

Monitor period	Sets the Monitor Interval shown on the System Status page. The default is 60 seconds. Type a new value in seconds.
Enable CRC History	1 = Displays error counts in the CRC History box below. 0 (the default) = Disables error count display.
CRC Monitor Period 1	Sets the first sample period for the CRC error count displayed in the box below. The default is 15 minutes. Type a new value in minutes.
CRC Monitor Period 2	The second sample period for the CRC error count displayed in the box below. The default is 24 hours. Type a new value in hours.

Click **Update** to refresh the display.

The **CRC History** box displays the errors of each 15-minute period, for the past 1500 minutes. You can adjust the 15-minute period in the **CRC Monitor Period 1** field described above. **Note:** a maximum of 100 intervals are recorded and the 1500 minutes value is therefore dependent on the interval time used.

To enable the display of CRC history, you must set the **Enable CRC History** parameter to 1.

5

Administration

Administrative options in the Configuration Manager let you

- View the system log
- Set up a new password
- Update the modem's firmware
- Reset the modem to the defaults
- Reboot the modem
- Upload a file
- Log out

5.1 System Log

The **System Log** page of the Configuration Manager displays a sliding window of the latest system events. Only the most recent events are visible.

Note: Since there is no real-time clock on the modem, the date and time information displayed in the log file assumes that the time the system last booted was Jan 1 00:00:00.

To view the file, click the **System Log** button on the **Advanced Setup** page of the Configuration Manager.

```

Jan 1 00:00:03 (none) user info dns-m: add_server upstream server 151.203.0.84
Jan 1 00:00:03 (none) user info dns-m: add_server upstream server 151.203.0.86
Jan 1 00:00:03 (none) daemon info dns-m: add_ip localhost (127.0.0.1)
Jan 1 00:00:03 (none) daemon info dns-m: add_ip area.home.net (192.168.0.1)
Jan 1 00:00:03 (none) daemon info dns-m: add_ip area.home.net (192.168.0.1)
Jan 1 00:00:03 (none) daemon info dns-m: add_ip area.home.net (192.168.0.1)
Jan 1 00:00:04 (none) daemon info dnsm: IGMP Proxy Started
Jan 1 00:00:06 (none) daemon info dnsm: No DHCPDISCOVER received
Jan 1 00:00:06 (none) daemon info dnsm: No DHCPDISCOVER received
Jan 1 00:00:07 (none) user info init: Starting pid214, console/daemonize 'binlogmgr'
Jan 1 00:00:15 (none) user info configure: not logged in. Access timeout
Jan 1 00:00:19 (none) user info configure: session opened for admin
Jan 1 00:00:27 (none) daemon info syslog: P/V: Auto Search : DSL ShowTime
Jan 1 00:00:28 (none) daemon info syslog: P/V: Auto Search cone 0 loop 3: Searching D06 PPPoE LLC
Jan 1 00:00:29 (none) user notice dnsm: dnsm: kpppd UP 151.203.216.104->13.3.95.1
Jan 1 00:00:29 (none) daemon info syslog: P/V: Auto Search cone 0: Found D06 PPPoE LLC
Jan 1 00:00:30 (none) daemon info dnsm: DHCPDISCOVER on eth0 to 255.255.255.255 port 67 interval 2
Jan 1 00:00:30 (none) daemon info dnsm: dnsm: soft restart (172)
Jan 1 00:00:30 (none) user info dns-m: add_server upstream server 151.203.0.84
Jan 1 00:00:30 (none) user info dns-m: add_server upstream server 151.203.0.86
Jan 1 00:00:31 (none) daemon notice dnsm: dnsm: failed to run dnsm: dnsm
Jan 1 00:00:32 (none) daemon info dnsm: DHCPDISCOVER on eth0 to 255.255.255.255 port 67 interval 1
Jan 1 00:00:32 (none) daemon info dnsm: DHCPDISCOVER on eth0 to 255.255.255.255 port 67 interval 1
Jan 1 00:00:33 (none) daemon info dnsm: No DHCPDISCOVER received
Jan 1 00:11:43 (none) user notice dnsm: dnsm: kpppd DOWN
Jan 1 00:11:46 (none) daemon info syslog: P/V: Auto Search cone 0: Stated
Jan 1 00:11:46 (none) daemon info syslog: P/V: Auto Search cone 0 loop 3: Searching D06 PPPoE LLC
Jan 1 00:11:48 (none) user notice dnsm: dnsm: kpppd UP 151.203.216.104->13.3.95.1
Jan 1 00:11:48 (none) daemon info syslog: P/V: Auto Search cone 0: Found D06 PPPoE LLC
Jan 1 00:11:48 (none) daemon info dnsm: DHCPDISCOVER on eth0 to 255.255.255.255 port 67 interval 2
Jan 1 00:11:48 (none) daemon info dnsm: dnsm: soft restart (172)
Jan 1 00:11:48 (none) user info dns-m: add_server upstream server 151.203.0.84

```

5.2 Password

On the **Advanced Setup** page of the Configuration Manager, click the **Password** button to change a password.

User ID	The current user ID.
New password	A password of your choice. You can use any keyboard character except a semicolon or quotation mark.
Confirm password	The password entered above.

5.3 Firmware Update

The update file is available on the Hayes web site: **www.hayesmicro.com** or **www.hayes.co.uk**. Before you start the update process, access the web site and download the file to your hard drive.

To access the Firmware Update page, on the **Advanced Setup** page of your Configuration Manager, click the **Firmware Update** button.

Important: When you open the **Firmware Update** page, the modem driver shuts down in order to free sufficient resources to upload new firmware. Therefore, if you decide not to complete the process, you must reboot the modem in order for it to resume normal operation.



File to upload	Binary file downloaded from the Hayes web site. If the update consists of more than one file, follow the directions in the <i>readme</i> file included with the firmware as to which file to upload first.
Browse	Displays your computer's file directory, where you select the update file.
Send	Uploads the binary file to the modem's flash memory.

When the "update completed successfully" message appears, click **Reboot**.

5.4 Reset to Default


Caution: This option also resets the login password and the LAN IP address of the modem to the default value.

On the **Advanced Setup** page of your Configuration Manager, click the **Reset to Default** button to restore the modem to the factory defaults.

At the “Are you sure you want to reset the configuration to the factory defaults?” message, click **OK**. A system message confirms the reset and prompts you to reboot the modem.

5.5 Reboot System

On the **Advanced Setup** page of the Configuration Manager, select the **Reboot System** button to reset the modem. The following message appears:

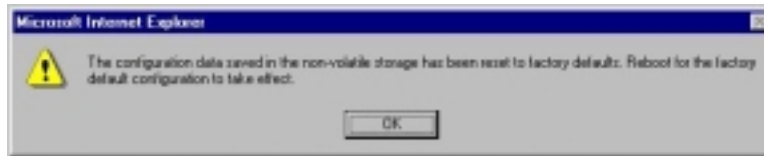

Click **OK** to continue.

5.6 File Upload

The **File Upload** option is for Technical Support use.

5.7 Logout

To log out of the Configuration Manager, click the **Advanced Setup** button, and then **Logout**:



Type your **User ID** and **Password**, then click **Enter**.

5.8 Diagnostic Info

Click the **Diagnostic Info** button in the Configuration Manager to display comprehensive information on the modem:

```
###[uname -a]###[
Linux asax 2.4.18-ac18-rak1-001-2.4.2 #0 Mon Jan 21 13:01:38 EDT 2004 asax#1 unknown
###[cat /etc/inetd.conf]###[
Filesystem asax built Tue Jan 22 05:48:38 EDT 2004 by root on localhost
###[cat /proc/meminfo]###[
Mem: 407844k total: 452198k free: 155488k shared: 0k buffers: 128832k cached: 148924k
MemTotal: 452196k
MemFree: 155488k
MemShared: 0k
Buffers: 128832k
Cached: 148924k
SwapCached: 0k
Active: 2272k
Inactive_smem: 292k
Inactive_nmem: 92k
Inactive_target: 1888k
HighTotal: 0k
HighFree: 0k
LowTotal: 452196k
LowFree: 155488k
SwapTotal: 0k
SwapFree: 0k
###[cat /proc/adsl/oxs]###[
version = version 1.18.04.05.19.01.00 Apr 22 2004 NCCWP-RFP2-ADSL_DCR_16_7_20
state=okonline
mode=0 dat asax #
upstream_rate_interleaved=8 Kbps
upstream_rate_accelerated=16 Kbps
downstream_rate_interleaved=8 Kbps
downstream_rate_accelerated=16 Kbps
upstream_snr=31.8 dB
downstream_snr=36.8 dB
upstream_cell_rate_interleaved>Total 8 (active 8) CPS
upstream_cell_rate_accelerated>Total 17 (active 8) CPS
downstream_cell_rate_interleaved>Total 8 (active 8) CPS
```

This information may be useful to our Technical Support staff in troubleshooting your modem.

Appendix A

DSL Internet Settings Tables

These tables are for customers whose service providers do not supply them with the settings necessary to connect to the Internet. Many DSL providers use different settings depending on the region in which they are operating, which is why there may be more than one setting for your service provider.

Note to USA customers

If your DSL service provider is not shown below, first use the settings for **Service Provider Not Shown** at the bottom of the table. If those settings don't work, use the settings for the company that provides local telephone service in your area. (Refer to page 14 for more detailed installation instructions on entering the settings.)

USA Service Providers	VPI	VCI	Protocol	Encapsulation
AllTel (1)	0	35	PPPoE	LLC
AllTel (2)	0	35	1483 Bridged IP	LLC
August.net (1)	0	35	1483 Bridged IP	LLC
August.net (2)	8	35	1483 Bridged IP	LLC
BellSouth	8	35	PPPoE	LLC
CenturyTel (1)	8	35	PPPoE	LLC
CenturyTel (2)	8	35	1483 Bridged IP	LLC
Covad	0	35	PPPoE	LLC
Earthlink (1)	0	35	PPPoE	LLC
Earthlink (2)	8	35	PPPoE	LLC
GWI	0	35	1483 Bridged IP	LLC
Qwest (1)	0	32	PPPoA	LLC
Qwest (2)	0	32	PPPoA	VC
SBC (1)	0	35	PPPoE	LLC
SBC (2)	0	35	1483 Bridged IP	LLC
SBC (3)	8	35	1483 Bridged IP	LLC
Sprint (1)	0	35	PPPoA	LLC
Sprint (2)	8	35	PPPoE	LLC
Verizon (1)	0	35	PPPoE	LLC
Verizon (2)	0	35	1483 Bridged IP	LLC
Service Provider Not Shown	0	35	PPPoE	LLC

(If the settings for **Service Provider Not Shown** do not work, try the settings for the company that provides local phone service in your area.)

Service Providers outside USA	VPI	VCI	Protocol	Encapsulation
Belgium-ADSL Office	8	35	1483 Routed IP	LLC
Belgium-Turboline	8	35	PPPoA	LLC
Denmark-Cybercity, Tiscali	0	35	PPPoA	VC
France (1)	8	35	PPPoE	LLC
France (2)	8	67	PPPoA	LLC
France (3)	8	35	PPPoA	VC
Iceland-Islandssimi	0	35	PPPoA	VC
Iceland-Siminn	8	48	PPPoA	VC
Italy	8	35	PPPoA	VC
Netherlands-MX Stream	8	48	PPPoA	VC
Portugal	0	35	PPPoE	LLC
Saudi Arabia (1)	0	33	PPPoE	LLC
Saudi Arabia (2)	0	35	PPPoE	LLC
Saudi Arabia (3)	0	33	1483 Bridged IP	LLC
Saudi Arabia (4)	0	33	1483 Routed IP	LLC
Saudi Arabia (5)	0	35	1483 Bridged IP	LLC
Saudi Arabia (6)	0	35	1483 Routed IP	LLC
Spain-Albura, Tiscali	1	32	PPPoA	VC
Spain-Colt Telecom, Ola Internet	0	35	PPPoA	VC
Spain-EresMas, Retevision	8	35	PPPoA	VC
Spain-Telefonica (1)	8	32	PPPoE	LLC
Spain-Telefonica (2), Terra	8	32	1483 Routed IP	LLC
Spain-Wanadoo (1)	8	35	PPPoA	VC
Spain-Wanadoo (2)	8	32	PPPoE	LLC
Spain-Wanadoo (3)	8	32	1483 Routed IP	LLC
Sweden-Telenordia	8	35	PPPoE	VC
Sweden-Telia	8	35	1483 Bridged IP	LLC
Switzerland	8	35	PPPoE	LLC
Turkey (1)	8	35	PPPoE	LLC
Turkey (2)	8	35	PPPoA	VC
UK (1)	0	38	PPPoA	VC
UK (2)	0	38	PPPoE	LLC
Venezuela-CANTV	0	33	1483 Routed IP	LLC
Vietnam	0	35	PPPoE	LLC

Appendix B

Front Panel Description



LED	Description
LINK	Blinks as modem is making its DSL connection, or when the DSL line is disconnected or not enabled. Steady on when modem is connected.
LAN	Blinks when there is activity on the Local Area Network.
USB	Lights when USB connection is established.
PWR	Lights when modem is plugged into a power source.

Note: If you ever need to reset the modem manually, unbend a paper clip and insert one end into the **RESET** pinhole on the rear panel to depress a pushbutton switch. Hold for five seconds.

Appendix C

Locating a MAC Address

You need a computer's MAC (Media Access Control) address to:


- request a static IP address from the modem's DHCP server in order to set up a firewall filter
- configure a MAC filter for a Pure Bridge Connection.

Follow the instructions below to locate a MAC address.

You can also use these instructions to find the computer's IP address, which is displayed in the same block of information as the MAC address.

Windows 98SE/Me/2000/XP

- 1 Open the **Command Prompt** or **MS-DOS** window.
- 2 At the **C:\WINDOWS** prompt, type **ipconfig** [space] **-all** or **ipconfig** [space] **/all**.
- 3 A window similar to the following appears:

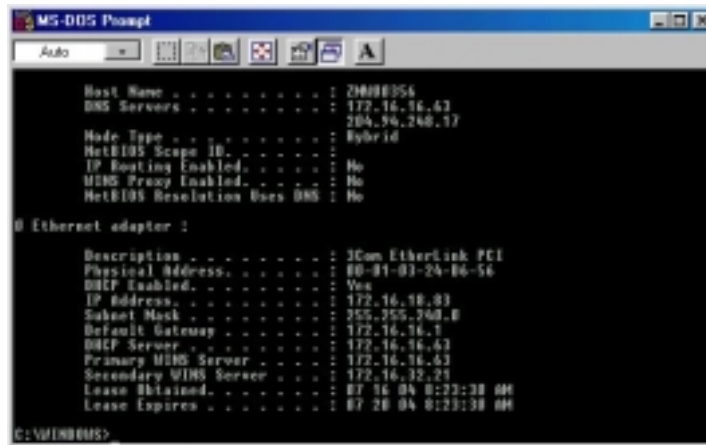

Your MAC address is displayed as the 12-digit **Physical Address** or **Internet Adapter** address.

Macintosh Systems

For Mac OS 7.6.1 - 9.2.2 and Above but not OS X:

- 1 From the **Apple** menu, choose **Apple System Profiler**.
- 2 In the **Apple System Profiler** window, click the **Network Overview** arrow and then the **AppleTalk** arrow. Find the 12-character Hardware Address (**E-MAC** address) and make a note of it.

For Mac OS X:

- 1 From the **Dock**, choose **System Preferences** and then **Network**. The **Network** pane appears.
- 2 Under the **Configure** drop-down tab, choose **Built-in Ethernet** or **Ethernet**.
- 3 Make sure that the **TCP/IP** tab is selected. Find the 12-character Hardware Address (**E-MAC address**) and make a note of it.
- 4 Click **Save** and close the **Network** pane.

Linux Systems

- 1 At the command prompt, type **ifconfig [space] -a**.
- 2 Your MAC address is displayed as a 12-digit **Hardware Address**.

Appendix D

Macintosh and Linux Users: Configuring TCP/IP Settings

If you are using a Macintosh computer or the Linux operating system, you must ensure that your computer's network, or TCP/IP settings, are configured correctly. Otherwise, you will not be able to connect to the Internet.

If you are a Windows user, you don't have to perform this task because Windows automatically configures your network settings.

- **Linux Users:** Turn to page 83.
- **Macintosh users:** Continue below.

Macintosh TCP/IP Settings

Depending on your Mac OS, the directions for configuring your Macintosh's network settings will differ. For OS X, follow the instructions below. Otherwise go to page 83.

Mac OS X

- 1** From the **Dock**, choose **System Preferences** and then **Network** to display the **Network** pane. (For OS X 3, you also have to click the **Configure** button.)
- 2** From the **Location:** list box, make sure **Automatic** is selected.
- 3** Under the **Show** drop-down tab, choose **Built-in Ethernet**.
- 4** On the **TCP/IP** tab, make sure that **Using DHCP** is highlighted in the **Configure:** list box. Do not enter anything into the **DHCP Client ID** field.

Note: If you want to use a static IP address—for example, if you are setting up a WAN IP filter (page 44)—

highlight **Manually** in the **Configure:** menu and then enter the static IP address, subnet mask, etc.

- 5 Click **Apply Now** (or **Save** if prompted) and close the **Network** pane.

For Mac OS X, you're done with your network settings. Now return to **Establishing Communication** on page 9.

Mac OS 7.6.1 - 9.2.2

- 1 From the **Apple** menu, choose **Control Panels** and then **TCP/IP** to display the **TCP/IP** dialog box.
- 2 Under **Connect via:**, select **Ethernet built-in**.
Under **Configure:**, select **Using DHCP Server**.
Do not enter anything in the **DHCP Client ID** field.
- 3 Close the **TCP/IP** dialog box. You will be asked if you want to save the changes. Click **Save**.

Now return to **Establishing Communication** on page 9.

Linux Network Settings

The instructions for setting up boot-time DHCP vary significantly by distribution, so you may want to refer to your particular version's documentation.

Note:

If you have other network cards installed, you will need to pick distinct Ethernet identifiers for each (eth0, eth1, eth2, etc.). If you select an identifier other than eth0 for your ADSL Duo, use that identifier throughout.

For RedHat

Edit or create **/etc/sysconfig/network-scripts/ifcfg-eth0** so that it contains the following three lines:

DEVICE=eth0

ONBOOT=yes

BOOTPROTO=dhcp

For SuSE

Edit the file `/etc/rc.config`; search for the variables **NETCONFIG**, **NETDEV_0**, and **IFCONFIG_0**.

Set them as follows (see the instructions in `rc.config`):

```
NETCONFIG="_0"
```

```
NETDEV_0="eth0"
```

```
IFCONFIG_0="dhcpcplient"
```

Reboot with this command: `/sbin/shutdown -r now`.

For Debian

Add this line to the file `/etc/network/interfaces`: **iface eth0 inet dhcp**.

Reboot with this command: `/sbin/shutdown -r now`.


Now return to **Establishing Communication** on page 9.

Appendix E

Troubleshooting

Our Technical Support staff is ready to help you with any questions you may have about your ADSL modem or Internet connection options. You may, however, find an easy solution to your problem by referring to these troubleshooting tips. You should also refer to the Frequently Asked Questions (FAQs) on the CD (click on Customer Support), and visit our website for the latest tips: www.hayesmicro.com

I installed the software and connected the Hayes ADSL modem to my phone line, but I cannot connect to the Internet.

On the **Login** page of your Configuration Manager, type your **User ID** and **Password**. On the **Basic Setup** page click the **Advanced Setup** button , and on the **Advanced Setup** page, click the **ADSL Status** button to open the **ADSL Status** page:



The screenshot displays the 'ADSL Status' page. At the top, it shows 'State: showtime' and 'Mode: 0 dnt Area A'. Below this is a table with columns for 'Upstream' and 'Downstream' metrics. The table includes rows for Bit Rate, Cell Rate, SNR, CRC, and BER. Below the table are two buttons: 'Reset CRC counters' and 'Disable Automatic Retrain'. At the bottom, there is a 'Connections Status' section with a table for 'PPP Connections' showing a single active connection with IP address 151.203.243.54 and DNS servers 151.203.0.04 and 151.203.0.05.

		Upstream	Downstream
Bit Rate	Interleaved	0 Kbps	0 Kbps
	Fast	160 Kbps	864 Kbps
Cell Rate	Interleaved	Total 0 (active 0) CPS	Total 0 (active 0) CPS
	Fast	Total 377 (active 0) CPS	Total 2007 (active 0) CPS
SNR		31.0 db	35.0 db
CRC			0 in 15 minute (0 per 15-minute count, 0 per 24-hour count) (Tx CRC 0)
BER			0 (0e+00)

Reset CRC counters
Disable Automatic Retrain

PPP Connections									
VC	ATM VC	ATM OAM	State	Protocol	Auth	IP Address	Primary DNS	Secondary DNS	
0	0.35	--	Connected ppp-001.etc0	ppp0e	ppp	151.203.243.54	151.203.0.04	151.203.0.05	

If the **State** box at the top of the page says “showtime,” make sure that:

- The RJ-11 phone cord is firmly plugged into the wall jack and the **ADSL** port on the back of the modem.
- The RJ-11 phone cord is connected to a DSL-enabled phone jack. You cannot use a standard telephone jack for DSL service unless your service provider has activated it for DSL.
- Your RJ-11 phone cord is not defective. Replace the phone cord with a known good one.
- Your Ethernet or USB connections are okay. Check that the correct ADSL Duo front panel light is lit (**LAN** or **USB**). This will confirm that the connection is good.
- You have installed phone filters on all the phones and fax machines using the same DSL line as the modem. These devices can produce noise and interfere with your DSL connection.
- You did not inadvertently change your modem’s DSL configuration values. If you think this may be the case, using a paper clip, press the **RESET** button on the modem’s back panel. While holding in this button, count to five, and then release the button. The front panel **LINK** light will turn off and then blink slowly, about once per second. You are now guaranteed that all system settings are restored to the unit’s factory defaults. (Note: If you had changed your Protocol, VPI, VCI, or encapsulation settings since purchasing the modem, you need to re-enter this information; refer to page 11 if you need help).

If the **State** box at the top of the ADSL Status page says “showtime,” but the **State** field under **Connection Status** at the bottom of the page does not say “Connected,” make sure that:

- Your computer’s TCP/IP properties are correct.

Windows users:

Go to **Start | Settings | Network and Dial-up Connections**.

Right-click **Local Area Connection**, select **Properties**, highlight your NIC card's **TCP/IP** entry and click **Properties**.

If you are using DHCP (dynamic IP addressing): In the Windows **TCP/IP Properties** dialog box that displays, make sure that “**Obtain an IP address automatically**” and “**Obtain a DNS server address automatically**” are selected. All other fields should be blank.

If you are using a static IP address: In the Windows **TCP/IP Properties** dialog box that displays, both the Default Gateway IP address and the DNS server IP address must match the LAN IP address of the modem.

Macintosh users: TCP/IP instructions are on page 82.

Linux users: TCP/IP instructions are on page 83.

- You have entered the proper Protocol, VPI, VCI, and Encapsulation Mode settings for your DSL service provider. Refer to the tables beginning on page 77.
- You have typed your DSL Username and Password correctly.
- Your service provider's DSL connection is functioning properly by placing a call to customer support.

I type http://10.0.0.2 into my Web browser's address bar, but the modem's Login page won't open so I can't communicate with the modem.

- If you are using a Macintosh or Linux computer, your Internet settings may need adjustment; turn to Appendix D on page 82 for instructions.
- If you are using Mac OS X 10.3 and above, renew your IP address: Go to **System Preferences | Network**. Click the **Configure** button and then the **Renew DHCP Lease** button.
- If you are using a Windows computer, perform a Release/Renew operation.

For Windows 2000/XP: From the desktop, click **Start | (All) Programs | Accessories | Command Prompt**. Then type **ipconfig /all** and press **Enter**. In the subsequent dialog box, make sure the NIC adapter is highlighted in the dropdown list,

click **Renew** and then click **Release**. Then type 10.0.0.2 into your browser's address bar, and the Login page should display.

For Windows 95/98/Me: From the desktop, click **Start** | **Run**, type **winipcfg**, and click **OK**. In the subsequent dialog box, make sure the NIC adapter is highlighted in the list, click **Renew** and then click **Release**. Then type 10.0.0.2 into your browser's address bar, and the Login page should display.

Why do I hear static or noise when I'm using my telephone?

If that phone does not have its own filter, you may hear static or high-pitched noise if you make a phone call while your ADSL modem is on. A filter also prevents a phone from interfering with, or dropping, your DSL connection.

I accidentally unplugged the USB cable while using my modem. This resulted in a general protection fault (GPF) error message. What should I do?

You must plug the modem back in and restart your computer to rectify this problem.

Appendix F

Regulatory Information

U.S. FCC Part 68 Statement

This equipment complies with Part 68 of the FCC rules and the requirements adopted by the ACTA. The unit bears a label on the back which contains among other information a product identifier in the format US:AAAEQ##TXXXX. If requested, this number must be provided to the telephone company.

This equipment uses the following standard jack types for network connection: RJ11C.

This equipment contains an FCC compliant modular jack. It is designed to be connected to the telephone network or premises wiring using compatible modular plugs and cabling which comply with the requirements of FCC Part 68 rules.

The Ringer Equivalence Number, or REN, is used to determine the number of devices which may be connected to the telephone line. An excessive REN may cause the equipment to not ring in response to an incoming call. In most areas, the sum of the RENs of all equipment on a line should not exceed five (5.0).

In the unlikely event that this equipment causes harm to the telephone network, the telephone company can temporarily disconnect your service. The telephone company will try to warn you in advance of any such disconnection, but if advance notice isn't practical, it may disconnect the service first and notify you as soon as possible afterwards. In the event such a disconnection is deemed necessary, you will be advised of your right to file a complaint with the FCC.

From time to time, the telephone company may make changes in its facilities, equipment, or operations which could affect the operation of this equipment. If this occurs, the telephone company is required to provide you with advance notice so you can make the modifications necessary to obtain uninterrupted service.

There are no user serviceable components within this equipment. See Warranty flyer for repair or warranty information.

It shall be unlawful for any person within the United States to use a computer or other electronic device to send any message via a telephone facsimile unless such message clearly contains, in a margin at the top or bottom of each transmitted page or on the first page of the transmission, the date and time it is sent and an identification of the business, other entity, or individual sending the message and the telephone number of the sending machine or of such business, other entity, or individual. The telephone number provided may not be a 900 number or any other number for which charges exceed local or long distance transmission charges. Telephone facsimile machines manufactured on and after December 20, 1992, must clearly mark such identifying information on each transmitted message. Facsimile modem boards manufactured on and after December 13, 1995, must comply with the requirements of this section.

This equipment cannot be used on public coin phone service provided by the telephone company. Connection to Party Line Service is subject to state tariffs. Contact your state public utility commission, public service commission, or corporation commission for more information.

U.S. FCC Part 15 Emissions Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Industry Canada Emissions Statement

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

Cet appareil numérique de la classe B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

Industry Canada CS03 Statement

Notice: The Industry Canada label identifies certified equipment. This certification means that the equipment meets telecommunications network protective, operational and safety requirements as prescribed in the appropriate Terminal Equipment Technical Requirements document(s). The Department does not guarantee the equipment will operate to the user's satisfaction.

Before installing the equipment, users should ensure that it is permissible to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of concern. The customer should be aware that compliance with the above conditions may not prevent degradation of service in some situations.

Repairs to certified equipment should be coordinated by a representative designated by the supplier. Any repairs or alterations made by the user to this equipment, or equipment malfunctions, may give the telecommunications company cause to request the user to disconnect the equipment.

Users should ensure for their own protection that the electrical ground connections of the power utility, telephone lines and internal metallic water pipe system, if present, are connected together. This precaution may be particularly important in rural areas. Caution: Users should not attempt to make such connections themselves, but should contact the appropriate electric inspection authority, or electrician, as appropriate. Notice: The Ringer Equivalence Number (REN) assigned to each terminal device provides an indication of the maximum number of terminals allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the Ringer Equivalence Numbers of all the devices does not exceed 5.

Declaration of Conformity

The manufacturer declares under sole responsibility that this equipment is compliant to Directive 1999/5/EC (R&TTE Directive) via the following:

Directive	Standard	Test Report
73/23/EEC-Low Voltage	EN 60950 : 2000 IEC 60950 : 3 rd ed. 1999	Electrical safety
89/336/EEC-EMC	EN 55022 : 1998 EN 55024 :1998	EMC-emissions EMC-immunity

This product is CE Marked.

Electrostatic Discharge Statement

The unit may require resetting after a severe electrostatic discharge event.

Additional compliance information is located on the CD.