

Panasonic

Advanced Hybrid System Installation Manual

Model No. **KX-TA308**



Please read this manual before connecting the Advanced Hybrid System.

Thank you for purchasing this Panasonic Model KX-TA308,
Advanced Hybrid System.

System Components

System Components Table

| | Model | Description |
|---------------------------|---|--|
| Service Unit | KX-TA308 | Advanced Hybrid System (Main Unit) |
| Telephones | KX-TA30820 KX-TA30830 KX-TA30850 KX-T7885 KX-TD7895 | Proprietary Telephone Proprietary Telephone with Backlit Display Proprietary Telephone Wireless Proprietary Telephone Wireless Proprietary Telephone |
| Optional Equipment | KX-T30865 | Doorphone |

The KX-TA308XX series telephones are available only for the KX-TA308.
For details about the KX-T7885 and KX-TD7895, refer to the “Operating Instructions”
for each wireless phone.

Attention

- Keep the unit away from heating appliances and electrical noise generating devices such as fluorescent lamps, motors and televisions. These noise sources can interfere with the performance of the Advanced Hybrid System.
- This unit should be kept free of dust, moisture, high temperature (more than 40 °C {104 °F}) and vibration, and should not be exposed to direct sunlight.
- Never attempt to insert wires, pins, etc. into the vents or other holes of this unit.
- If there is any trouble, disconnect the unit from the telephone line. Plug the telephone directly into the telephone line. If the telephone operates properly, do not reconnect the unit to the line until the trouble has been repaired by an authorized Panasonic Factory Service Center. If the telephone does not operate properly, chances are that the trouble is in the telephone system, and not in the unit.
- Do not use benzine, thinner, or the like, or any abrasive powder to clean the cabinet. Wipe it with a soft cloth.

WARNING

THIS UNIT MAY ONLY BE INSTALLED AND SERVICED BY QUALIFIED SERVICE PERSONNEL.

WHEN A FAILURE OCCURS WHICH RESULTS IN THE INTERNAL PARTS BECOMING ACCESSIBLE, DISCONNECT THE POWER SUPPLY CORD IMMEDIATELY AND RETURN THIS UNIT TO YOUR DEALER.

DISCONNECT THE TELECOM CONNECTION BEFORE DISCONNECTING THE POWER CONNECTION PRIOR TO RELOCATING THE EQUIPMENT, AND RECONNECT THE POWER FIRST.

THIS UNIT IS EQUIPPED WITH AN EARTHING CONTACT PLUG. FOR SAFETY REASONS THIS PLUG MUST ONLY BE CONNECTED TO AN EARTHING CONTACT SOCKET WHICH HAS BEEN INSTALLED ACCORDING TO REGULATIONS.

THE POWER SUPPLY CORD IS USED AS THE MAIN DISCONNECT DEVICE, ENSURE THAT THE SOCKET-OUTLET IS LOCATED/INSTALLED NEAR THE EQUIPMENT AND IS EASILY ACCESSIBLE.

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

The serial number of this product may be found on the label affixed to the side of the unit. You should note the model number and the serial number of this unit in the space provided and retain this book as a permanent record of your purchase to aid in identification in the event of theft.

MODEL NO.: _____

SERIAL NO.: _____

Attention

When you ship the product

Carefully pack and send it prepaid, adequately insured and preferably in the original carton. Attach a postage-paid letter, detailing the symptom, to the outside of the carton. **DO NOT** send the product to the Executive or Regional Sales offices. They are **NOT** equipped to make repairs.

Product service

Panasonic Factory Servicenters for this product are listed in the servicenter directory. Consult your certified Panasonic dealer for detailed instructions.

For your future reference

DATE OF PURCHASE _____

NAME OF DEALER _____

DEALER'S ADDRESS _____

DEALER'S TEL NO. _____

Important Safety Instructions

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

1. Read and understand all instructions.
2. Follow all warnings and instructions marked on the product.
3. Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
4. Do not use this product near water, for example, near a bathtub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool.
5. Do not place this product on an unstable cart, stand, or table. The product may fall, causing serious damage to the product.
6. Slots and openings in the cabinet and the back or bottom are provided for ventilation, to protect it from overheating, these openings must not be blocked or covered. The openings should never be blocked by placing the product on the bed, sofa, rug, or other similar surface. This product should never be placed near or over a radiator or heat register. This product should not be placed in a built-in installation unless proper ventilation is provided.
7. This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your dealer or local power company.
8. This product is equipped with a three wire grounding type plug, a plug having a third (grounding) pin. This plug will only fit into a grounding type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the grounding type plug.
9. Do not allow anything to rest on the power cord. Do not locate this product where the cord will be abused by people walking on it.
10. Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.

Important Safety Instructions

11. Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in a risk of fire or electric shock. Never spill liquid of any kind on the product.
12. To reduce the risk of electric shock, do not disassemble this product, but take it to a qualified serviceman when some service or repair work is required. Opening or removing covers may expose you to dangerous voltages or other risks. Incorrect reassembly can cause electric shock when the appliance is subsequently used.
13. Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - A. When the power supply cord or plug is damaged or frayed.
 - B. If liquid has been spilled into the product.
 - C. If the product has been exposed to rain or water.
 - D. If the product does not operate normally by following the operating instructions. Adjust only those controls, that are covered by the operating instructions because improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal operation.
 - E. If the product has been dropped or the cabinet has been damaged.
 - F. If the product exhibits a distinct change in performance.
14. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
15. Do not use the telephone to report a gas leak in the vicinity of the leak.

SAVE THESE INSTRUCTIONS

F.C.C. Requirements and Relevant Information

1. Notification to the Telephone Company

This equipment complies with Part 68 of the FCC rules and the requirements adopted by the ACTA. On the side of this equipment is a label that contains, among other information, a product identifier in the format: ACJMF04BKX-TA308. If requested, this number must be provided to the telephone company.

Installation must be performed by a qualified professional installer. If required, provide the telephone company with the following technical information:

- Telephone numbers to which the system will be connected
- Make: Panasonic
- Model: KX-TA308
- Ringer Equivalence No.: 0.4B
- Facility Interface Code: 02LS2
- Service Order Code: 9.0F
- Required Network Interface Jack: RJ11

2. Ringer Equivalence Number (REN)

The REN is used to determine the number of devices that may be connected to a telephone line. Excessive RENs on a telephone line may result in the devices not ringing in response to an incoming call. In most, but not all areas, the sum of RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to a line, as determined by the total RENs, contact the local telephone company.

3. Incidence of Harm to the Telephone Lines

If this equipment causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. But if advance notice isn't practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.

4. Changes in Telephone Company Communications Facilities, Equipment, Operations and Procedures

The telephone company may make changes in its facilities, equipment, operations or procedures that could affect the operation of the equipment. If this happens the telephone company will provide advance notice in order for you to make necessary modifications to maintain uninterrupted service.

5. Trouble with This Equipment

If trouble is experienced with this equipment, for repair or warranty information, please see the attached warranty, which includes the Servicenter Directory. If the equipment is causing harm to the telephone network, the telephone company may request that you disconnect the equipment until the problem is resolved.

6. Connection to Party Line

Connection to party line service is subject to state tariffs. Contact the state public utility commission, public service commission or corporation commission for information.

F.C.C. Requirements and Relevant Information

CAUTION

If your home has specially wired alarm equipment connected to the telephone line, ensure the installation of this equipment does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.

Note

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this device.

When programming emergency numbers and / or making test calls to emergency numbers:

1. Remain on the line and briefly explain to the dispatcher the reason for the call before hanging up.
2. Perform such activities in the off-peak hours, such as early morning hours or late evenings.

WARNING

The software contained in the TRS feature to allow user access to the network must be upgraded to recognize newly established network area codes and exchange codes as they are placed into service. Failure to upgrade the premises PBXs or peripheral equipment to recognize the new codes as they are established will restrict the customer and the customer's employees from gaining access to the network and to these codes.

KEEP THE SOFTWARE UP-TO-DATE WITH THE LATEST DATA.

Introduction

This Installation Manual provides technical information for the Panasonic Advanced Hybrid System, KX-TA308. It is designed to serve as an overall technical reference for the system and includes a description of the system, its hardware and software, features and services and environmental requirements.

This manual contains the following sections.

Section 1, System Outline

Provides general information on the system including system capacity and specifications.

Section 2, Installation

Contains the basic system installation and wiring instructions.

Section 3, Features

Describes all the basic, optional and programmable features in alphabetical order. It also provides information about the programming required, conditions, connection references, related features and operation for every feature.

Section 4, System Programming

Provides step-by-step programming instructions for a proprietary telephone.

Section 5, List

Lists the tone/ring tone and default values for system programming.

Section 6, Troubleshooting

Provides information for system and telephone troubleshooting.

Section 7, Programming Tables

Provides a reference for entering user-programmed data.

NOTE

The following document may be used in conjunction with this manual.

- User Manual for the KX-TA308 System, Proprietary Telephones and Single Line Telephones

Trademarks

- IBM is a registered trademark of International Business Machines Corporation in the United States.
- All other trademarks identified herein are the property of their respective owners.

Contents

Section 1 System Outline

| | | |
|------------|--|------------|
| 1.1 | System Highlights | 1-2 |
| 1.2 | Basic System Construction | 1-3 |
| 1.3 | Proprietary Telephones | 1-3 |
| 1.4 | Pre-installed Cards | 1-4 |
| 1.4.1 | Caller ID Card | 1-4 |
| 1.4.2 | Doorphone/Door Opener Card | 1-4 |
| 1.5 | Specifications | 1-5 |
| 1.5.1 | General Description | 1-5 |
| 1.5.2 | Characteristics | 1-6 |
| 1.5.3 | System Capacity | 1-7 |

Section 2 Installation

| | | |
|------------|--|-------------|
| 2.1 | Before Installation | 2-2 |
| 2.2 | Installation of the Main Unit | 2-4 |
| 2.2.1 | Unpacking | 2-4 |
| 2.2.2 | Location of Interfaces | 2-4 |
| 2.2.3 | Wall Mounting | 2-5 |
| 2.2.4 | Frame Ground Connection | 2-6 |
| 2.3 | Connection | 2-8 |
| 2.3.1 | System Connection Diagram | 2-8 |
| 2.3.2 | Opening the Side Cover | 2-9 |
| 2.3.3 | Outside (CO) Line Connection | 2-10 |
| 2.3.4 | Extension Connection | 2-13 |
| 2.3.5 | External Pager (Paging Equipment) Connection | 2-14 |
| 2.3.6 | External Music Source Connection | 2-15 |
| 2.3.7 | Paralleled Telephone Connection (for a Proprietary Telephone and a Single Line Telephone) | 2-16 |
| 2.3.8 | Polarity Sensitive Telephone Connection | 2-17 |
| 2.3.9 | Printer and PC Connection | 2-18 |
| 2.4 | Doorphone/Door Opener Card | 2-21 |
| 2.4.1 | Doorphone and Door Opener Connection | 2-21 |
| 2.4.2 | Doorbell/Door Chime Connection | 2-25 |
| 2.4.3 | Securing the cords | 2-26 |
| 2.5 | Auxiliary Connection for Power Failure Transfer | 2-27 |
| 2.6 | Closing the Side Cover | 2-28 |
| 2.7 | Starting the System for the First Time | 2-29 |
| 2.8 | System Restart | 2-30 |
| 2.9 | System Data Clear | 2-31 |

Section 3 Features

| | | |
|----------|---|------------|
| A | Absent Message Capability | 3-2 |
| | Account Code Entry | 3-3 |
| | Answering, Direct Outside (CO) Line | 3-4 |
| | Automatic Callback Busy (Camp-On) | 3-5 |
| B | Background Music (BGM) | 3-6 |

Contents

| | | |
|----------|--|------|
| | Busy Lamp Field | 3-7 |
| | Busy Station Signaling (BSS) | 3-7 |
| | Button, Direct Station Selection (DSS) | 3-8 |
| | Button, Flexible | 3-9 |
| | Button, Group-CO (G-CO) | 3-12 |
| | Button, Other-CO (O-CO) | 3-13 |
| | Button, Single-CO (S-CO) | 3-14 |
| | Buttons on Proprietary Telephones | 3-15 |
| C | CALL FORWARDING FEATURES – SUMMARY | 3-18 |
| | Call Forwarding – All Calls | 3-18 |
| | Call Forwarding – Busy/No Answer | 3-19 |
| | Call Forwarding – Follow Me | 3-20 |
| | Call Forwarding – to an Outside (CO) Line | 3-21 |
| | Call Hold – Intercom | 3-22 |
| | Call Hold – Outside (CO) Line | 3-23 |
| | Call Hold, Exclusive – Intercom | 3-24 |
| | Call Hold, Exclusive – Outside (CO) Line | 3-24 |
| | Call Hold Retrieve – Intercom | 3-25 |
| | Call Hold Retrieve – Outside (CO) Line | 3-25 |
| | Call Log, Incoming | 3-26 |
| | Call Park | 3-28 |
| | Call Pickup, Directed | 3-28 |
| | Call Pickup, Group | 3-29 |
| | Call Pickup Deny | 3-29 |
| | Call Retrieving from a TAM (Telephone Answering Machine) | 3-30 |
| | Call Splitting | 3-30 |
| | CALL TRANSFER FEATURES – SUMMARY | 3-31 |
| | Call Transfer, Screened – to Extension | 3-31 |
| | Call Transfer, Screened – to an Outside (CO) Line | 3-32 |
| | Call Transfer, Unscreened – to Extension | 3-33 |
| | Call Waiting | 3-34 |
| | Call Waiting from a Central Office | 3-35 |
| | Caller ID | 3-36 |
| | Caller ID Call Waiting | 3-37 |
| | Calling Party Control (CPC) Signal Detection | 3-38 |
| | Conference | 3-39 |
| | Conference, Unattended | 3-40 |
| | Confirmation Tones | 3-41 |
| D | Data Line Security | 3-43 |
| | Dial Tones, Distinctive | 3-44 |
| | Dial Type Selection | 3-45 |
| | Direct In Lines (DIL) | 3-46 |
| | Direct Inward System Access (DISA) | 3-47 |
| | Display, Call Information | 3-53 |
| | Display, in Idle | 3-54 |
| | Display, Self-Extension Number | 3-55 |
| | Display Contrast Adjustment | 3-55 |

Contents

| | | |
|----------|--|------|
| | Do Not Disturb (DND) | 3-56 |
| | Do Not Disturb (DND) Override | 3-56 |
| | Door Opener | 3-57 |
| | Doorbell/Door Chime | 3-58 |
| | Doorphone Call | 3-60 |
| E | Electronic Station Lockout | 3-61 |
| | Emergency Call | 3-62 |
| | End-to-End DTMF Signaling (Tone Through) | 3-62 |
| | Executive Busy Override – Extension | 3-63 |
| | Executive Busy Override – Outside (CO) Line | 3-64 |
| | Extension Group | 3-65 |
| | External Feature Access | 3-66 |
| F | Flash | 3-67 |
| H | Handset/Headset | 3-67 |
| | Hands-free Answerback | 3-68 |
| | Hands-free Operation | 3-68 |
| | Hold Alarm/Hold Recall | 3-69 |
| | Host PBX Access | 3-70 |
| I | Intercept Routing | 3-71 |
| | Intercom Calling | 3-72 |
| L | LED Indication, Intercom | 3-73 |
| | LED Indication, Outside (CO) Line | 3-74 |
| | Limited Call Duration | 3-75 |
| | Line Access, Automatic | 3-76 |
| | Line Access, Direct | 3-77 |
| | Line Access, Individual | 3-78 |
| | Line Access, Outside (CO) Line Group | 3-79 |
| | Line Preference – Incoming (No Line/Prime Line/Ringing Line) | 3-80 |
| | Line Preference – Outgoing (Idle Line/No Line/Prime Line) | 3-81 |
| | Local Carrier-Based Voice Mail Service | 3-82 |
| | Lockout | 3-83 |
| | Log-In/Log-Out | 3-84 |
| M | Manager Extension | 3-85 |
| | Message Waiting | 3-86 |
| | Message Waiting for Another Extension | 3-87 |
| | Microphone Mute | 3-88 |
| | Mixed Station Capacities | 3-88 |
| | Music on Hold | 3-89 |
| O | One-Touch Dialing | 3-90 |
| | One-Touch Transfer Using a DSS Button | 3-91 |
| | Operator | 3-92 |
| | Operator Call | 3-92 |
| | Outside (CO) Line Connection Assignment | 3-93 |
| | Outside (CO) Line Connection Assignment – Outgoing | 3-93 |
| | Outside (CO) Line Group | 3-94 |
| P | PAGING FEATURES – SUMMARY | 3-95 |
| | Paging – All | 3-95 |

Contents

| | | |
|----------|--|-------|
| | Paging – External | 3-96 |
| | Paging – Group | 3-96 |
| | Paralleled Telephone | 3-97 |
| | Pause Insertion, Automatic | 3-98 |
| | Personal Speed Dialing | 3-99 |
| | Pickup Dialing | 3-100 |
| | Power Failure Transfer | 3-101 |
| | Pulse to Tone Conversion | 3-102 |
| R | Redial, Last Number | 3-103 |
| | Redial, Saved Number | 3-103 |
| | Ring Group | 3-104 |
| | Ringling, Delayed | 3-104 |
| | Ringling, Discriminating | 3-105 |
| | Ringling Pattern Selection for Intercom Calls and Outside (CO) Lines | 3-106 |
| | Ringling Tone Selection for Doorphones | 3-107 |
| | Room Monitor | 3-109 |
| S | Secret Dialing | 3-110 |
| | Station Feature Clear | 3-111 |
| | Station Hunting | 3-112 |
| | Station Message Detail Recording (SMDR) | 3-113 |
| | Station Programming | 3-115 |
| | Station Programming Data Default Set | 3-116 |
| | System Data Default Set | 3-117 |
| | System Programming with a Proprietary Telephone | 3-117 |
| | System Speed Dialing | 3-118 |
| T | Time (Day/Night/Lunch) Service | 3-119 |
| | Time-Out, Variable | 3-120 |
| | Timed Reminder | 3-122 |
| | Timed Reminder, Remote (Wake-Up Call) | 3-122 |
| | Toll Restriction | 3-123 |
| | Toll Restriction for Special Carrier Access | 3-129 |
| | Toll Restriction for System Speed Dialing | 3-130 |
| | Toll Restriction Override by Account Codes | 3-131 |
| | Toll Restriction — Station Lock Boundary Class | 3-133 |
| V | Volume Control – Handset Receiver/Headset/Ringer/Speaker | 3-134 |
| W | Walking COS | 3-135 |

Section 4 System Programming

| | | |
|------------|---|------------|
| 4.1 | General Programming Instructions | 4-2 |
| 4.1.1 | Using Proprietary Telephones | 4-3 |
| 4.1.2 | Programming Methods | 4-5 |
| 4.1.3 | Entering Characters | 4-6 |
| 4.1.4 | Programming Example | 4-8 |
| 4.2 | System Programming | 4-9 |
| [000] | Date and Time Setting | 4-9 |
| [001] | System Speed Dialing Entry | 4-11 |
| [002] | System Password | 4-13 |

Contents

| | | |
|-------------|--|------|
| [005] | One-Touch Transfer Using a DSS Button | 4-14 |
| [006] | Time (Day/Night/Lunch) Service Changing Mode | 4-15 |
| [007] | Time (Day/Night/Lunch) Service Start Time | 4-16 |
| [008] | Operator Assignment | 4-18 |
| [009] | Extension Number Assignment | 4-19 |
| [010] | LCD Time Display Selection | 4-20 |
| [011] | System Speed Dialing Name Setting | 4-21 |
| [100] | Hunting Group Set | 4-22 |
| [101] | Station Hunting Type | 4-23 |
| [104] | Hold Mode Selection | 4-24 |
| [105] | Conference Tone | 4-25 |
| [106] | External Paging Access Tone | 4-26 |
| [107] | DTMF Receiver Check | 4-27 |
| [108] | Flash Mode for a Station Locked Extension | 4-28 |
| [109] | CO Indicator Assignment | 4-29 |
| [110] | Flash Key Mode | 4-30 |
| [111] | Hold Music Selection | 4-31 |
| [112] | DSS Button Indication Mode | 4-32 |
| [115] | Extension Ringing Pattern Selection | 4-33 |
| [117] | Call Pickup Tone | 4-34 |
| [118] | Pulse Restriction | 4-35 |
| [119] | Redialing After Pulse to Tone Conversion | 4-36 |
| [125] | Toll Restriction Check for * and # | 4-37 |
| [200] | Hold Recall Time | 4-38 |
| [201] | Transfer Recall Time | 4-39 |
| [202] | Call Forwarding Start Time | 4-40 |
| [203] | Pickup Dial Delay Time | 4-41 |
| [204] | Call Duration Count Start Time | 4-42 |
| [205] | Outside-to-Outside (CO-to-CO) Line Duration Time Limit | 4-43 |
| [206] | Dialing Start Time | 4-44 |
| [208] | Interdigit Time | 4-45 |
| [211] | No Dial Disconnection | 4-46 |
| [300] | Carrier Code Assignment | 4-47 |
| [301] | Toll Restriction — System Speed Dialing Boundary Class | 4-48 |
| [302]–[305] | Toll Restriction — Class 2 – 5 Denied Codes | 4-49 |
| [306] | Toll Restriction — Exception Codes | 4-50 |
| [309] | Emergency Dial Number Set | 4-51 |
| [310] | Account Codes | 4-52 |
| [311] | Automatic Pause Insertion Codes | 4-53 |
| [312] | Toll Restriction — Station Lock Boundary Class | 4-54 |
| [400] | Outside (CO) Line Connection Assignment | 4-55 |
| [401] | Dial Mode | 4-56 |
| [402] | Pulse Speed Selection | 4-57 |
| [403] | Host PBX Access Codes | 4-58 |
| [404] | Outside (CO) Line Group Assignment | 4-60 |
| [405]–[407] | Flexible Outward Dialing Assignment — Day/Night/Lunch | 4-61 |
| [408]–[410] | Flexible Ringing Assignment — Day/Night/Lunch | 4-62 |

Contents

| | | |
|-------------|---|-------|
| [411]–[413] | Delayed Ringing Assignment — Day/Night/Lunch | 4-64 |
| [414]–[416] | Outside (CO) Line Mode — Day/Night/Lunch | 4-66 |
| [417] | Pause Time | 4-68 |
| [418] | Flash Time | 4-69 |
| [419] | Automatic Designated Outside (CO) Line Access | 4-70 |
| [420] | Calling Party Control (CPC) Signal | 4-71 |
| [421] | CPC Detection for Outgoing Calls | 4-73 |
| [422] | Disconnect Time | 4-74 |
| [423] | Outside (CO) Line Ringing Pattern Selection | 4-75 |
| [435] | Local Carrier-Based Voice Mail Signaling Assignment | 4-76 |
| [436] | Local Carrier-Based Voice Mail Access Dial Assignment | 4-77 |
| [437] | Extension Access to Local Carrier-Based Voice Mail Assignment | 4-79 |
| [500] | DISA Incoming Dialing Mode Selection | 4-80 |
| [501] | DISA Built-in Auto Attendant | 4-81 |
| [504] | DISA Delayed Answer Time | 4-82 |
| [506] | DISA Busy Mode | 4-83 |
| [507] | DISA Intercept Mode | 4-84 |
| [508] | DISA Ringing Time before Intercept | 4-85 |
| [509] | DISA Ringing Time after Intercept | 4-86 |
| [510] | DISA No Dial Mode | 4-87 |
| [511] | DISA Security Type | 4-88 |
| [512] | DISA Security Codes | 4-89 |
| [515] | Intercept Time for Internal DISA | 4-90 |
| [516] | DISA Incoming Assignment | 4-91 |
| [517] | DISA AA Wait Time | 4-92 |
| [518] | DISA Tone Selection after the Security Code | 4-93 |
| [530] | DISA Security Codes Digits Selection | 4-94 |
| [600] | Extension Group Assignment | 4-95 |
| [601]–[603] | TRS – Class of Service (COS) Assignment — Day/Night/Lunch | 4-96 |
| [604] | Extension Name Setting | 4-97 |
| [605] | Account Code Entry Mode | 4-98 |
| [606] | Call Transfer to an Outside (CO) Line | 4-100 |
| [607] | Call Forwarding to an Outside (CO) Line | 4-101 |
| [608] | Executive Busy Override | 4-102 |
| [609] | Do Not Disturb Override | 4-103 |
| [610] | Paralleled Telephone Connection | 4-104 |
| [611] | TAM (Telephone Answering Machine) Extension | 4-105 |
| [612] | Room Monitor Assignment | 4-106 |
| [617] | Wireless PT Port Assignment | 4-107 |
| [618] | Message Waiting for Another Extension | 4-108 |
| [700]–[702] | Doorphone Ringing Assignment — Day/Night/Lunch | 4-109 |
| [703]–[705] | Door Opener Assignment — Day/Night/Lunch | 4-110 |
| [706] | Doorphone Ringing/Tone Pattern Selection | 4-111 |
| [707] | Doorphone Access Tone Selection | 4-112 |
| [708] | Doorphone Ringing Time | 4-113 |
| [709] | Door Opener Time | 4-114 |

Contents

| | | |
|-------|---|-------|
| [710] | Doorphone Ring/Chime Selection | 4-115 |
| [711] | Doorphone Chime Assignment | 4-116 |
| [712] | Doorphone Chime Pattern Selection | 4-117 |
| [800] | SMDR RS-232C Communication Parameters | 4-119 |
| [801] | SMDR Parameter | 4-121 |
| [802] | Incoming/Outgoing Call Selection for Printing | 4-122 |
| [803] | Secret Speed Dialing/One-Touch Dialing Printing | 4-123 |
| [804] | System Data Dump | 4-124 |
| [805] | SMDR Account Code Selection | 4-126 |
| [900] | Caller ID Assignment | 4-127 |
| [901] | Caller ID Area Code Assignment | 4-128 |
| [902] | Caller ID Modification for Local Calls | 4-129 |
| [903] | Caller ID Modification for Long Distance Calls | 4-130 |
| [904] | Caller ID Log Priority Selection | 4-131 |
| [906] | Caller ID SMDR Format | 4-132 |
| [907] | Caller ID SMDR Printout Selection | 4-133 |
| [908] | Caller ID Call Waiting Time | 4-134 |
| [909] | Common Area Call Log Check Assignment | 4-135 |
| [913] | Caller ID Call Waiting Assignment | 4-136 |
| [914] | Caller ID Call Waiting CAS Receive Time | 4-137 |
| [915] | Caller ID Checksum | 4-138 |
| [963] | Call Forwarding Selection | 4-139 |
| [968] | Incoming Lamp Control | 4-140 |
| [998] | ROM Version | 4-141 |
| [999] | System Data Clear | 4-142 |

Section 5 List

| | | |
|------------|-----------------------------|------------|
| 5.1 | Tone/Ring Tone | 5-2 |
| 5.2 | Default Values | 5-4 |

Section 6 Troubleshooting

| | | |
|------------|---------------------------|------------|
| 6.1 | Installation | 6-2 |
| 6.2 | Connection | 6-3 |
| 6.3 | Operation | 6-4 |

Section 7 Programming Tables 7-1

Section 1

System Outline

This section provides general information on the system,
including system capacity and specifications.

1.1 System Highlights

System Capacity

| | Basic System |
|--------------------|--------------|
| Outside (CO) lines | 3 |
| Extensions | 8 |

Paralleled Telephone Connection

Every jack in the system also supports the parallel connection of a proprietary telephone and a single line device. They share the same extension number and are considered by the system to be one extension.

Hybrid System

This system supports the connection of analog proprietary telephones and single line devices such as single line telephones, fax machines, and data terminals.

Proprietary Telephones (PT)

The system supports three different models of analog proprietary telephones which range from a set with a monitor to a set with a display and speakerphone button.

Wireless Proprietary Telephones

This system supports two models of wireless proprietary telephones. These phones provide system features that make them superior to regular cordless telephones. Please refer to wireless phone manuals for complete operating instructions.

Programming System

The system is programmed from a proprietary telephone with display. A PC is not required.

Caller ID

Allows the user to see the name or telephone number of a caller on the telephone display before answering a call.

Caller ID Call Waiting

Allows the user to see the name or telephone number of a second caller during a conversation.


Local Carrier-Based Voice Mail Service

Allows the user to receive remote voice mail service from the telephone company to record caller messages when calls cannot be answered.

1.2 Basic System Construction

The KX-TA308 Advanced Hybrid System has a capacity of three outside (CO) lines and eight extensions. It is capable of supporting Panasonic analog proprietary telephones, and single line devices such as single line telephones and a fax machine.

To expand its capabilities, the system can be equipped with optional components or customer-supplied peripherals such as an external speaker and external music source (e.g., a radio).

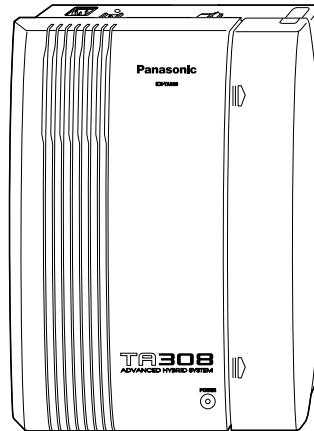

1.3 Proprietary Telephones

The following Panasonic proprietary telephones are available for use with this system.

| Proprietary Telephone | Description |
|-----------------------|---|
| KX-TA30820 | Speakerphone, 12 Flexible CO |
| KX-TA30830 | Backlit Display, Speakerphone, 12 Flexible CO |
| KX-TA30850 | Monitor, 12 Flexible CO |
| KX-T7885 | Wireless Proprietary Telephone |
| KX-TD7895 | Wireless Proprietary Telephone |

Note: Flexible CO: Flexible CO button (programmable)

1.4 Pre-installed Cards

1.4.1 Caller ID Card

A Caller ID Card is pre-installed to the system. This card supports the following.

Caller ID:

Receives the Caller ID Service from the Central Office. A specified display proprietary telephone with Caller ID service can display the information. It can also display caller's information which has been stored in the system according to the Caller ID service.

Local Carrier-Based Voice Mail Service:

Allows the user to receive the voice mail service from the telephone company. After subscription, the voice mail system can answer calls automatically instead of the PBX when the line is busy or calls are not answered, and callers can leave their messages in a mailbox provided by the telephone company.

Programming References

See "Programming References" in Section 3, Features, Caller ID, Caller ID Call Waiting and Local Carrier-Based Voice Mail Service.

Feature References

Section 3, Features


Caller ID

Caller ID Call Waiting

Local Carrier-Based Voice Mail Service

1.4.2 Doorphone/Door Opener Card

This card supports two doorphones and two door openers. The doorphone is optional (KX-T30865).

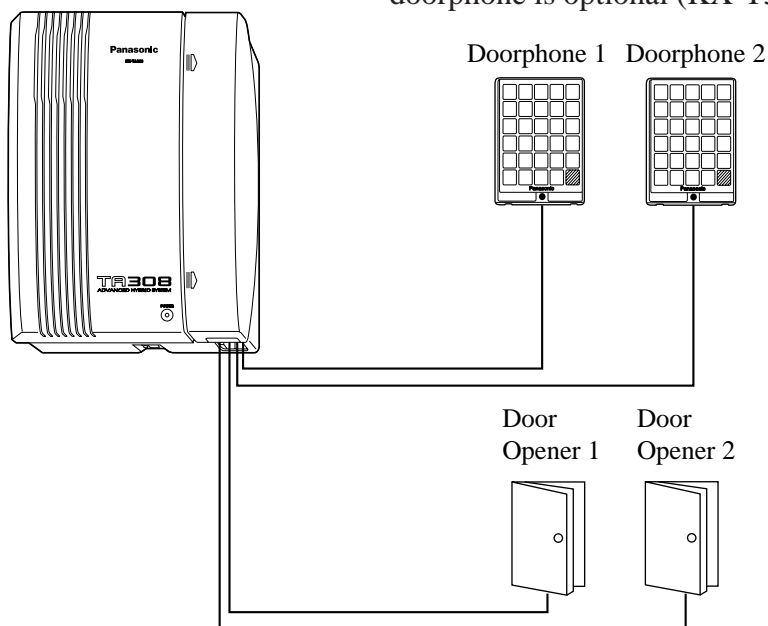

1.5 Specifications

1.5.1 General Description

| | | |
|--------------------------|--|---|
| System Capacity | Outside (CO) Lines | 3 max. |
| | Extensions | 8 max. |
| Control Method | CPU: 16 bit CPU | |
| | Control ROM: 4 Mbit, Control RAM: 1 Mbit | |
| Switching | Space Division CMOS Crosspoint Switch | |
| Power Supplies | Primary | 120 V AC, 60 Hz (1.2 A) |
| | Secondary | Circuit Volt: +5 V, +26 V |
| Power Consumption | 45 W (When power is off by the Power Switch: 1.2 W) | |
| Dialing | Dial Pulse (DP) 10 pps, 20 pps, Tone (DTMF) Dialing, DTMF-DP | |
| Intercom Paths | 4 | |
| Connector | Outside (CO) Lines | 2-pin Modular Connector (RJ11) |
| | Extensions/Doorphone | 4-pin Modular Connector |
| | Pager/Music Source | EIAJ RC-6701 A plug (two-conductor, ø 3.5 mm in diameter) |

Extension Connection Cable

| | |
|--|--------------------------|
| Single Line Telephone | 1 pair wire (T, R) |
| KX-TA30820/ KX-TA30830/ KX-TA30850 | 2 pair wire (T, R, H, L) |

SMDR (Station Message Detail Recording)

| | |
|-------------------|---|
| Interface | Serial Interface (RS-232C) (D-SUB, 9-pin) |
| Output Equipment | Printer |
| Recording Details | Date, Time, Extension Number, Outside (CO) Line Number, Dialed Number, Call Duration, Account Code, Caller ID |

1.5.2 Characteristics

| | | |
|---------------------------|--|----------------------------|
| Station Loop Limit | KX-TA30820 / KX-TA30830 / KX-TA30850 / | 40 Ω |
| | Single Line Telephone | 600 Ω including set |
| | Doorphone | 20 Ω |

Minimum Leakage Resistance 15 000 Ω

Maximum Number of Station Instruments per Line

Each extension port supports one proprietary telephone or one single line telephone. If Parallel Connection is used, the maximum number of single line devices that can be connected in parallel is just one device (one SLT, one fax, one cordless, etc.).

Ring Voltage 80 Vrms at 20 Hz depending on the Ringing Load

Central Office Loop Limit 1 600 Ω max.

Environmental Requirements 0 °C – 40 °C {32 °F – 104 °F},
10 % – 90 % relative humidity

Hookswitch Flash Time Range 204 ms – 1 000 ms

Door Opener 60 V DC, 1 A (Max) / 40 V AC, 1 A (Max)*

Doorbell/Door Chime 60 V DC, 1 A (Max) / 40 V AC, 1 A (Max)*

Dimensions (H×W×D) 284 mm × 368 mm × 95 mm
{14½" × 11⅛" × 3¾"}

Mass (Weight) Approx. 2.5 kg {5.6 lb}

* Please make sure these values are not exceeded.

1.5.3 System Capacity

Lines, Cards, Station Equipment

| Item | Max. Quantity |
|----------------------------|---------------|
| Service Units | 1 |
| Outside (CO) Lines | 3 |
| Extension Jacks | 8 |
| Station Terminals | 16 |
| Caller ID Card | 1 |
| Doorphone/Door Opener Card | 1 |
| Doorphones | 2 |
| Door Openers | 2 |
| Doorbell/Door Chime | 2 |
| External Pager | 1 |
| External Music Source | 1 |

System Data

| Item | Max. Quantity |
|--------------------------|---|
| Operator | 1 |
| System Speed Dialing | 100 |
| One-Touch Dialing | 12 per extension (proprietary telephone) |
| Personal Speed Dialing | 10 per extension |
| Call Park Areas | 10 |
| Absent Messages | 6 |
| Toll Restriction Classes | 5 |
| Extension Groups | 8 |

Section 2

Installation

This section contains the basic system installation and wiring instructions.

2.1 Before Installation

Please read the following notes concerning installation and connection before installing the system and terminal equipment.

Safety Installation Instructions

When installing telephone wiring, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

1. Never install telephone wiring during a lightning storm.
2. Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.
3. Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected at the network interface.
4. Use caution when installing or modifying telephone lines.

Installation Precautions

This system is designed for wall mounting only. Avoid installing in the following places. (Doing so may result in malfunction, noise, or discoloration.)

1. In direct sunlight and hot, cold, or humid places. (Temperature range: 0 °C – 40 °C {32 °F – 104 °F})
2. Sulfuric gases produced in areas where there are thermal springs, etc. may damage the equipment or contacts.
3. Places in which shocks or vibrations are frequent or strong.
4. Dusty places, or places where water or oil may come into contact with the system.
5. Near high-frequency generating devices such as sewing machines or electric welders.
6. On or near computers, telexes, or other office equipment, as well as microwave ovens or air conditioners. (It is preferable not to install the system in the same room with the above equipment.)
7. Install at least 1.8 m {6 feet} away from radios and televisions. (Both the system and Panasonic proprietary telephones)
8. Do not obstruct area around the system (for reasons of maintenance and inspection — be especially careful to allow space for cooling above and at the sides of the system).


Wiring Precautions

Be sure to follow these instructions when wiring the unit:

1. Do not wire the telephone cable in parallel with an AC power source, computer, telex, etc. If the cables are run near those wires, shield the cables with metal tubing or use shielded cables and ground the shields.

2.1 Before Installation

2. If cables are run on the floor, use protectors to prevent the wires from being stepped on. Avoid wiring under carpets.
3. Avoid using the same power supply outlet for computers, telexes, and other office equipment. Otherwise, the system operation may be interrupted by the induction noise from such equipment.
4. Please use one pair telephone wire for extension connection of (telephone) equipment such as single line telephones, data terminals, answering machines, computers, etc., except Panasonic proprietary telephones (e.g., KX-TA30830).
5. Unplug the system during wiring. After all of the wiring is completed, plug in the system.
6. Mis-wiring may cause the system to operate improperly. Refer to Section 6.1 “Installation” and Section 6.2 “Connection”.
7. If an extension does not operate properly, disconnect the telephone from the extension line and then connect again, or turn off the Power Switch of the system and then on again.
8. The system is equipped with a 3-wire grounding type plug. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the purpose of the grounding-type plug.
9. Outside (CO) Lines should be installed with lightning protectors. For details, refer to Section 2.3.3 “Outside (CO) Line Connection – Installing Lightning Protectors”.

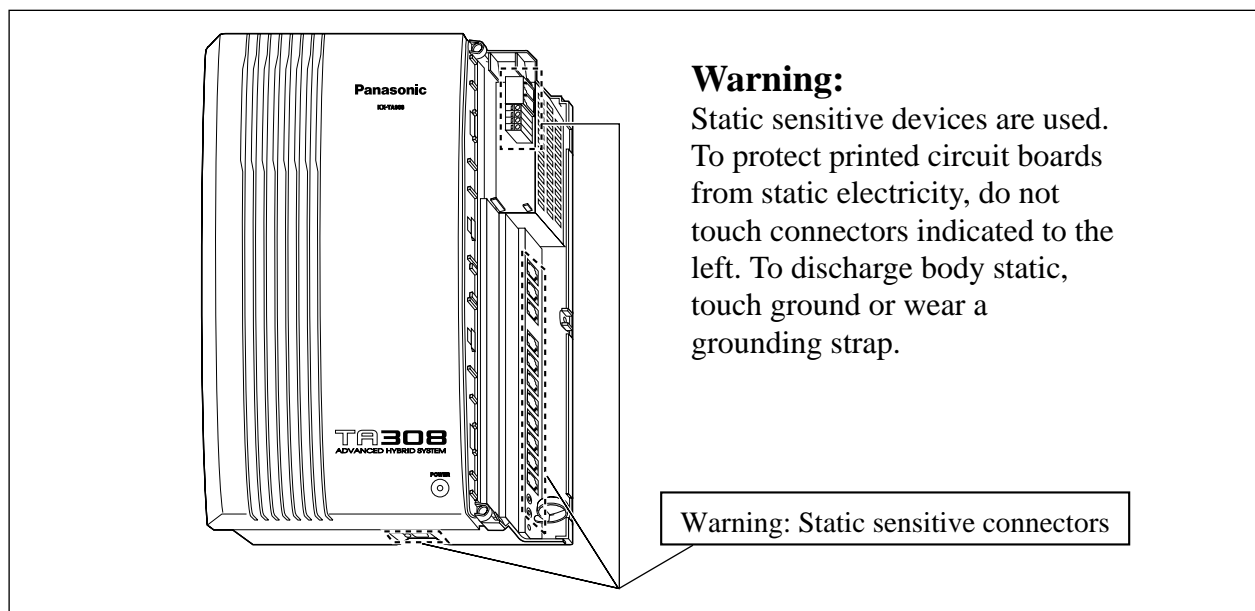


2.2 Installation of the Main Unit

2.2.1 Unpacking

Unpack the box and check the items below.

| | |
|----------------------------------|-------|
| Main Unit | one |
| AC Cord | one |
| Template | one |
| Screws (Wall Mounting) | three |
| Washers (Wall Mounting) | three |
| Pager Connector | one |
| Music Source Connector | one |
| Terminal Boxes (Doorphone) | two |
| Telephone Line Cords (Doorphone) | two |

2.2.2 Location of Interfaces

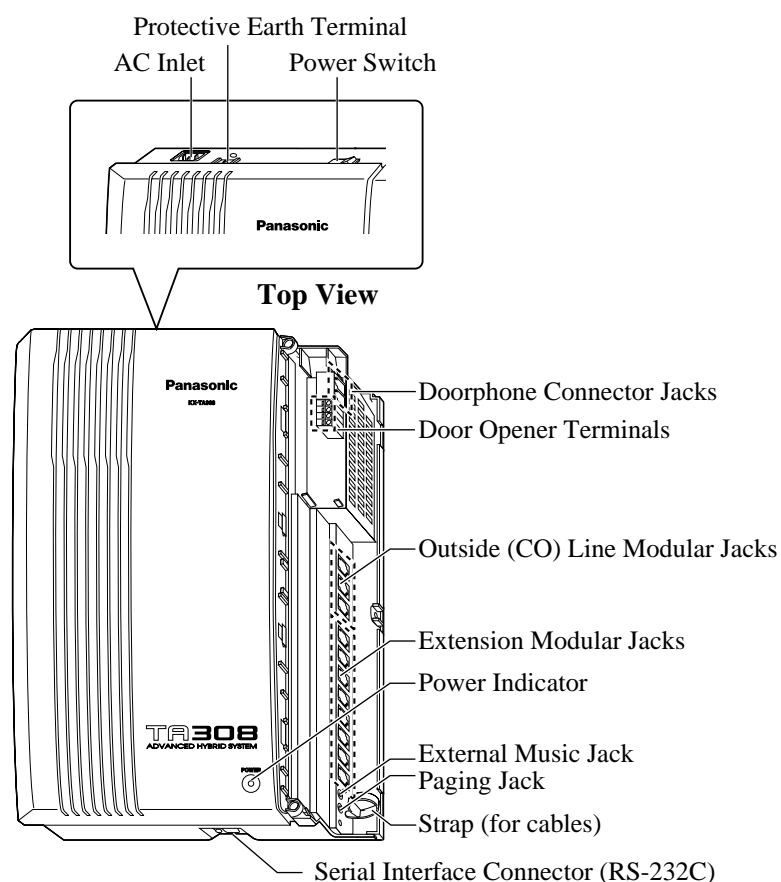


2.2.3 Wall Mounting


This set is designed for wall mounting only. The wall where the main unit is to be mounted must be able to support the weight of the main unit. If screws other than the ones supplied are used, use screws with the same diameter as the ones enclosed.

Mounting on a Wooden Wall


1. Place the template (included) on the wall to mark the screw positions.

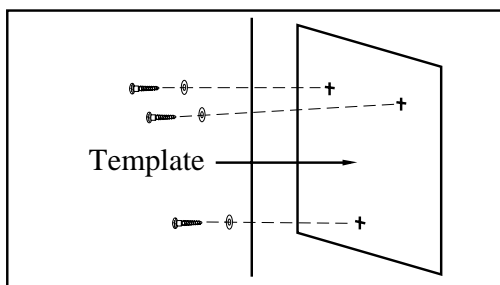

2. Install the screws (included) into the wall.

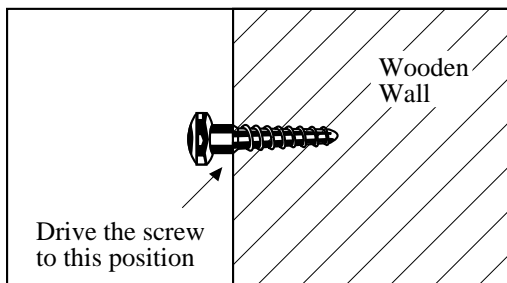


3. Hook the main unit on the screw heads.

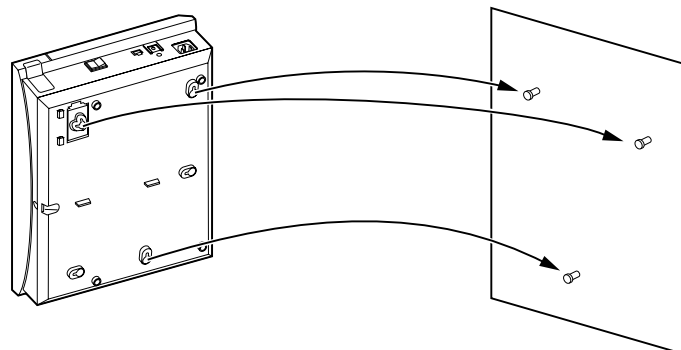


Mounting on a Concrete or Mortar Wall

1. Place the template (included) on the wall to mark the screw positions.
2. Drill holes and drive the anchor plugs (user-supplied) with a hammer, flush to the wall.

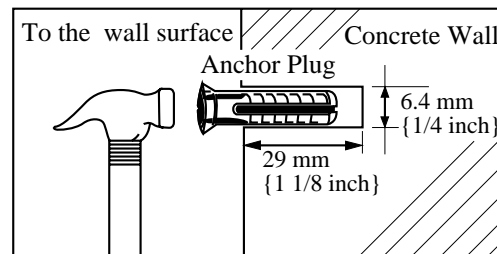

3. Install the screws (included) into the anchor plugs.

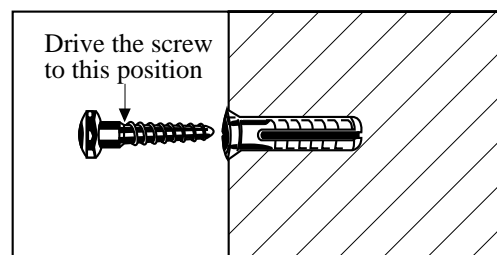


4. Hook the main unit on the screw heads.

2.2.4 Frame Ground Connection

IMPORTANT!!!

Connect the frame of the main unit to the ground.

1. Loosen the screw.
2. Insert the grounding wire (user-supplied)*.
3. Tighten the screw.
4. Connect the grounding wire to the ground.

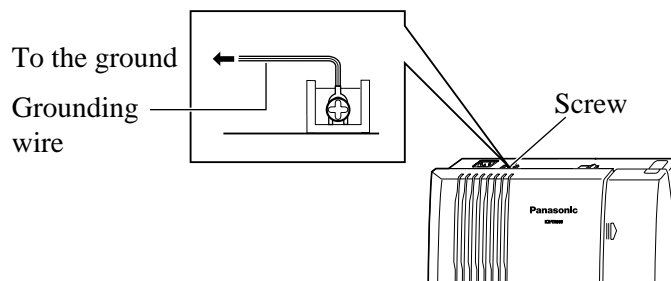

* For grounding wire, green-and-yellow insulation is required, and the cross-sectional area of the conductor must be more than 0.75 mm² or 18 AWG.

- Be sure to comply with applicable local regulations (e.g., law, guidelines).
- Proper grounding (connection to earth) is very important to protect the Advanced Hybrid System from the bad effects of external noise or to reduce the risk to the user of electrocution in the case of lightning strike.
- The ground wire of the AC cable has an effect against the external noise and lightning strikes, but it may not be enough to protect the Advanced Hybrid System. A permanent connection between earth and the ground terminal of the Advanced Hybrid System must be made.

In most of North America, the ground provided by the “Third wire ground” at the commercial or residential power outlet will be satisfactory. However, in some cases this ground may be installed incorrectly. Therefore, the following test procedure should be performed.

Test Procedure


1. Obtain a suitable voltmeter and set it for a possible reading of up to 250 V AC.
2. Connect the meter probes between the two main AC voltage points on the wall outlet. The reading obtained should be 108 V AC – 132 V AC.
3. Move one of the meter probes to the 3rd prong terminal (GND).
Either the same reading or a reading of 0 V should be obtained.

2.2.4 Frame Ground Connection

4. If a reading of 0 V at one terminal and a reading of 108 V AC – 132 V AC at the other terminal is not obtained, the outlet is not properly grounded.
This condition should be corrected by a qualified electrician (per article 250 of the National Electrical Code).
5. If a reading of 0 V at one terminal and a reading of 108 V AC – 132 V AC at the other terminal is obtained, then set the meter to the “OHMS/RX1” scale, place one probe at the GND Terminal and the other probe at the terminal which gave a reading of 0 V.
A reading of less than 1 Ω should be obtained.
If the reading is not obtained, the outlet is not adequately grounded. See a qualified electrician.


2.3 Connection

2.3.1 System Connection Diagram

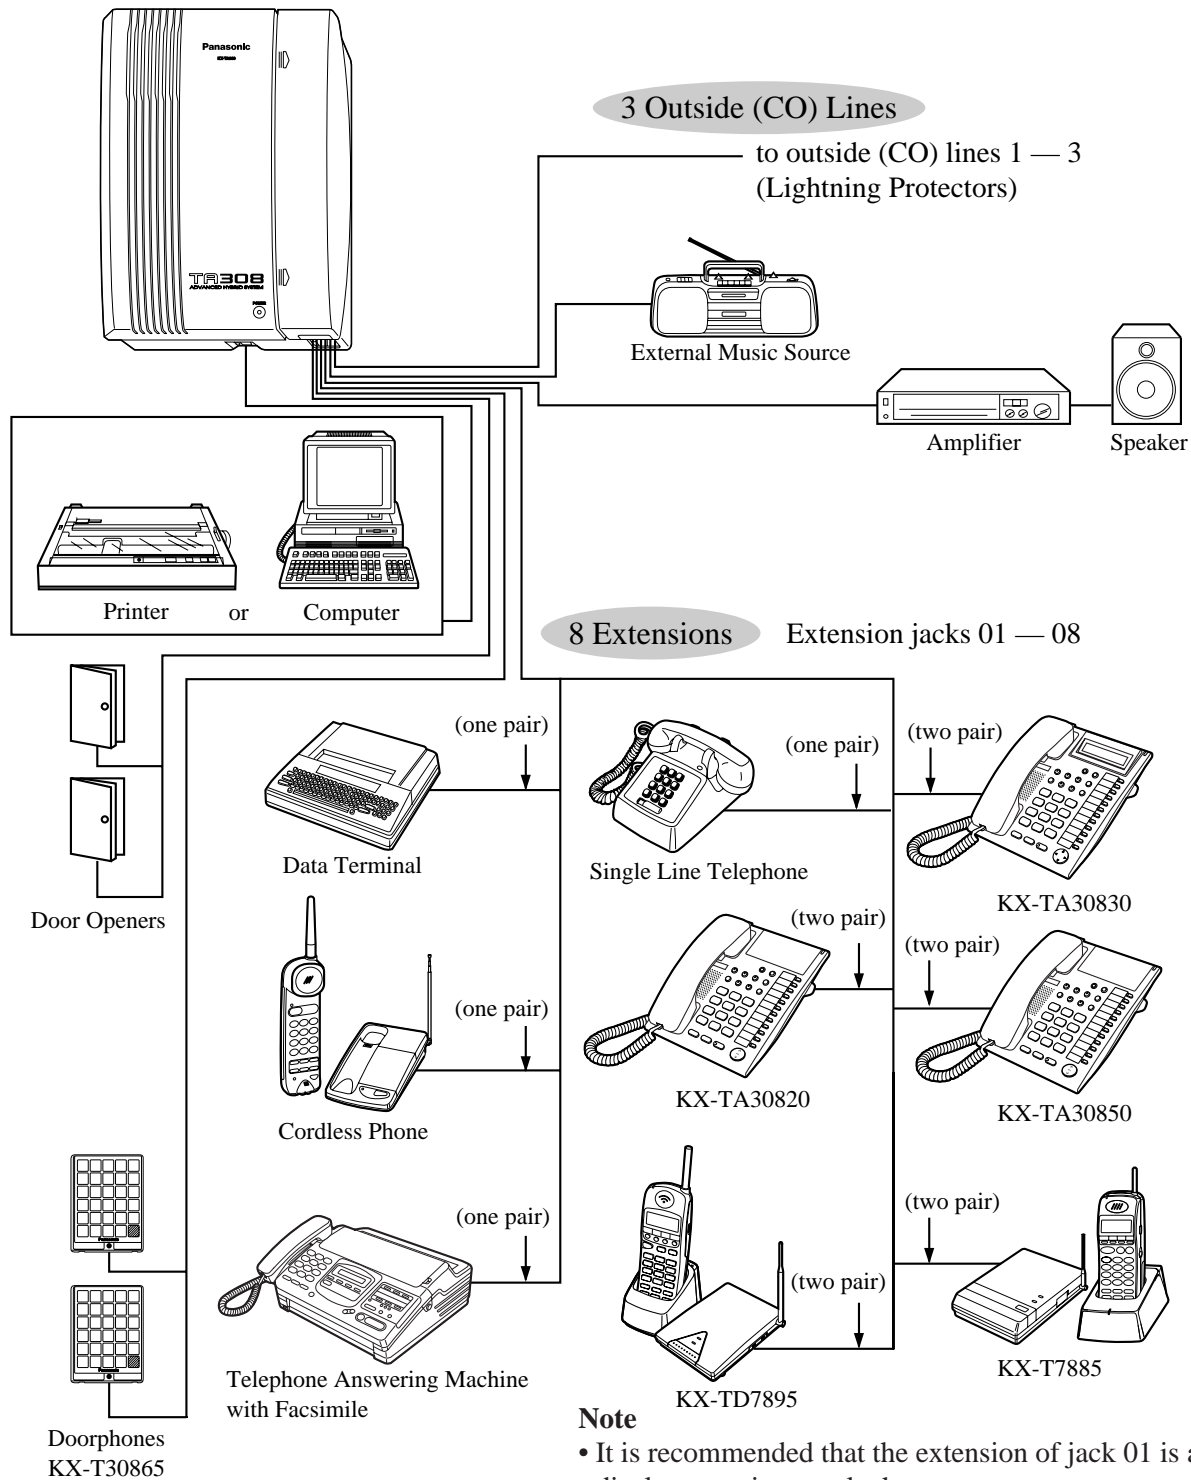

2.3.2 Opening the Side Cover

1. Loosen the screw.
2. Remove the right side cover.

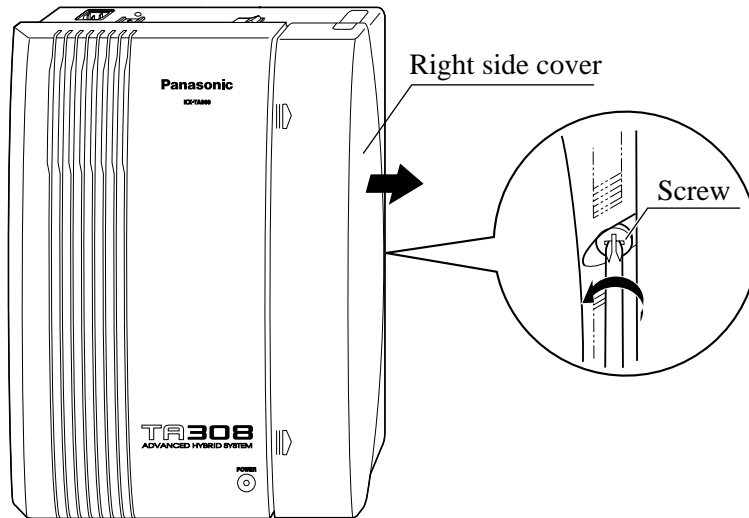


Note The screw cannot be removed from the cover.

2.3.3 Outside (CO) Line Connection

Connection

1. Insert the modular plugs of the telephone line cords (2-conductor wiring) into the modular jacks on the system.
2. Connect the line cord to the terminal board or the modular jacks from the Central Office jack.

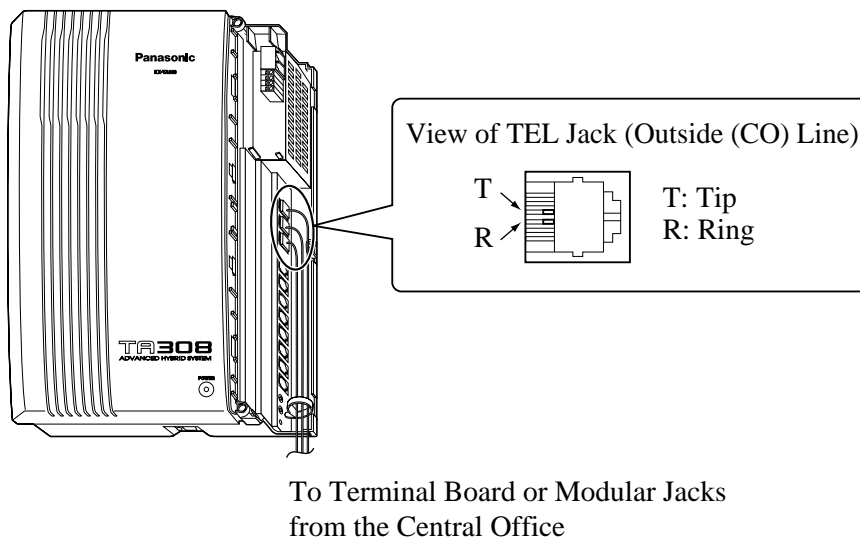

2.3.3 Outside (CO) Line Connection

Installing Lightning Protectors


A lightning protector is a device to be installed on an outside (CO) line to prevent a dangerous surge from entering the building and damaging the equipment.

A dangerous surge can occur if a telephone line comes in contact with a power line. Problems due to lightning surges have been steadily increasing with the development of electronic equipment. In many countries, there are regulations requiring the installation of a lightning protector. A lightning strike to a telephone cable which is 10 m {33 feet} above ground can be as high as 200 000 V. This system should be installed with lightning protectors. In addition, grounding (connection to earth ground) is very important to protect the system.

Recommended lightning protectors

- TELESPIKE BLOK MODEL TSB (TRIPPE MFG. CO.)
- SPIKE BLOK MODEL SK6-0 (TRIPPE MFG. CO.)
- Super MAX™ (PANAMAX)
- MP1 (ITW LINK)

Installation

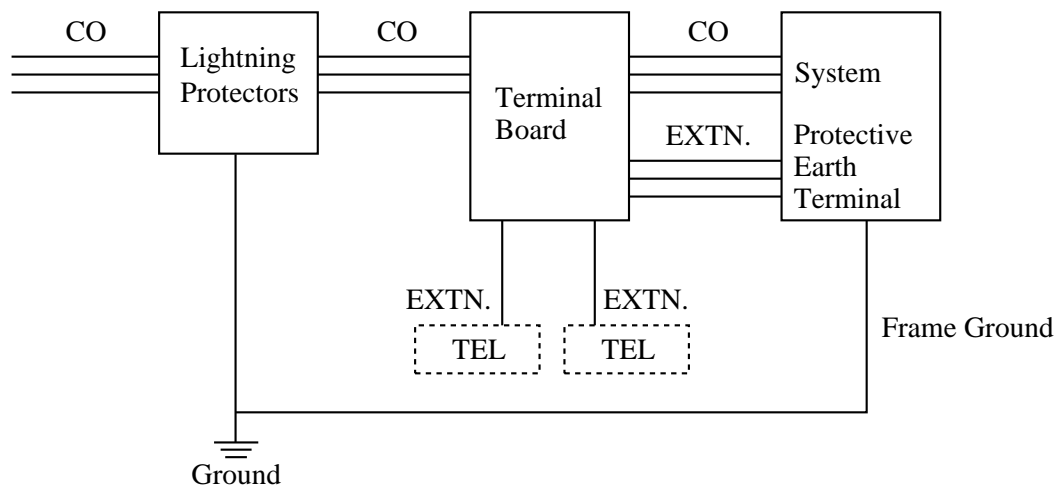


CO: Outside (CO) line

EXTN.: Extension line

TEL: Telephone

2.3.3 Outside (CO) Line Connection

Installation of an Earth Rod

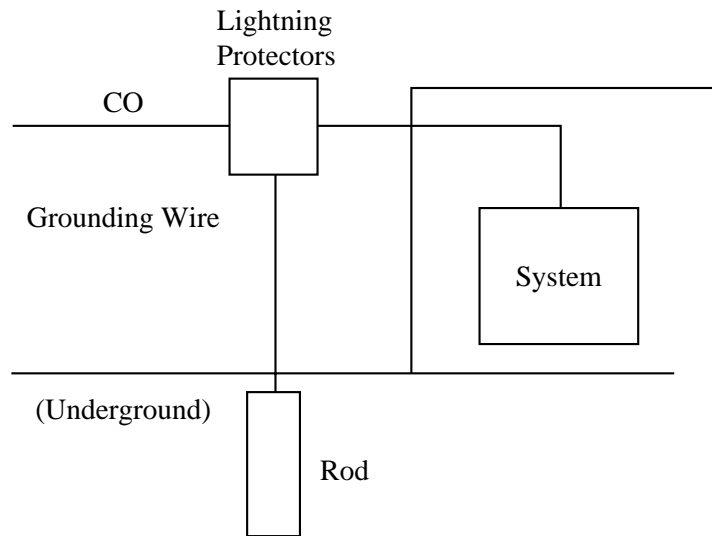

- | | |
|--|----------------------------------|
| 1) Installation location of the earth rod .. | Near the protector |
| 2) Check obstructions | None |
| 3) Composition of the earth rod | Metal |
| 4) Depth of the earth rod | More than 50 cm { 20 inches } |
| 5) Size of the grounding wire | Thickness more than 18 AWG |
| 6) Length of the grounding wire | As short as possible |

Note

- The above example is only a recommendation.
- The length of the earth rod and required depth depend on the composition of the soil.

2.3.4 Extension Connection

Extension jacks 01 – 08 are for single line telephones and analog proprietary telephones.

Telephone Wiring

The maximum length of the extension line cord (twisted cable) which connects the system and the extension is as follows.

| | Diameter of the line | Max. length |
|--|-------------------------|--------------------|
| Single Line Telephone | 22 AWG | 1798 m {5900 feet} |
| (Station Loop Limit: 600 Ω including set) | 24 AWG | 1128 m {3700 feet} |
| | 26 AWG | 698 m {2290 feet} |
| Proprietary Telephone | 22 AWG | 360 m {1180 feet} |
| (Station Loop Limit: 40 Ω) | 24 AWG | 229 m {750 feet} |
| | 26 AWG | 140 m {460 feet} |


2 or 4-conductor wiring is required for each extension as listed below. There are four pins possible for connection: “T” (Tip), “R” (Ring), “L” (Low) and “H” (High).

| Telephone | Wiring |
|---|--------------------------|
| Single line telephone | 1 pair wire (T, R) |
| Proprietary telephone (e.g., KX-TA30830) | 2 pair wire (L, H, T, R) |

- Note
- If a telephone or answering machine with an A-A1 relay is connected to the system, set the A-A1 relay switch on the telephone or answering machine to the OFF position.

Connection

Insert the modular plugs of the telephone line cords (2 or 4-conductor wiring) into the modular jacks on the system.

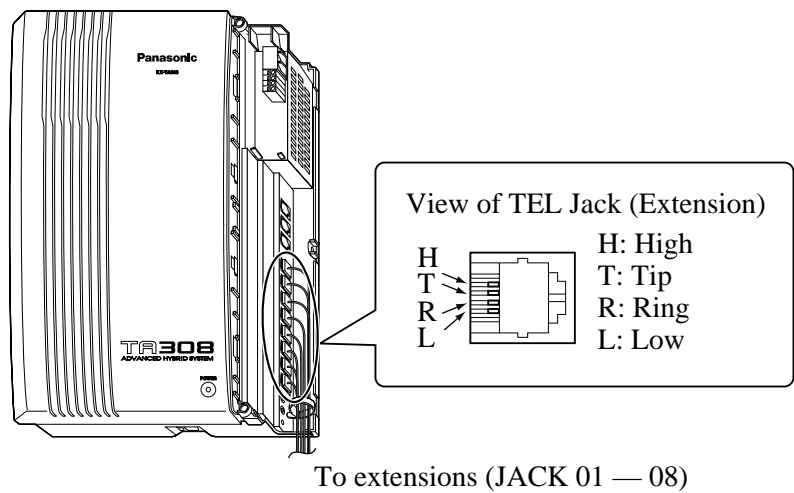

2.3.5 External Pager (Paging Equipment) Connection


One external pager (user-supplied) can be connected to the KX-TA308 as illustrated below.

Use an EIAJ RC-6701 A plug (two-conductor, \varnothing 3.5 mm in diameter).

- Output impedance: 600 Ω

Maximum length of the cable

AWG 18 – 22: Under 10 m {33 feet}

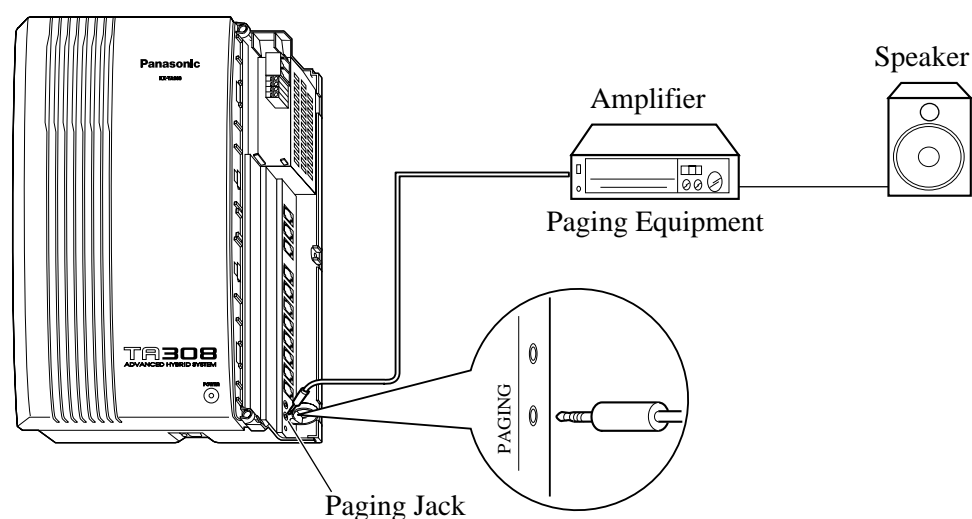

- Note**
- To adjust the sound level of the pager, use the volume control on the amplifier.

Programming Reference

Section 4, System Programming

[106] External Paging Access Tone

Feature References

Section 3, Features

Paging – All

Paging – External

2.3.6 External Music Source Connection

One music source, such as a radio (user-supplied), can be connected to the KX-TA308 as illustrated below.


Insert the plug to the earphone/headphone jack on the external music source.

Use an EIAJ RC-6701 A plug (two-conductor, \varnothing 3.5 mm in diameter).

- Input impedance: 8 Ω

Maximum length of the cable

AWG 18 – 22: Under 10 m { 33 feet }

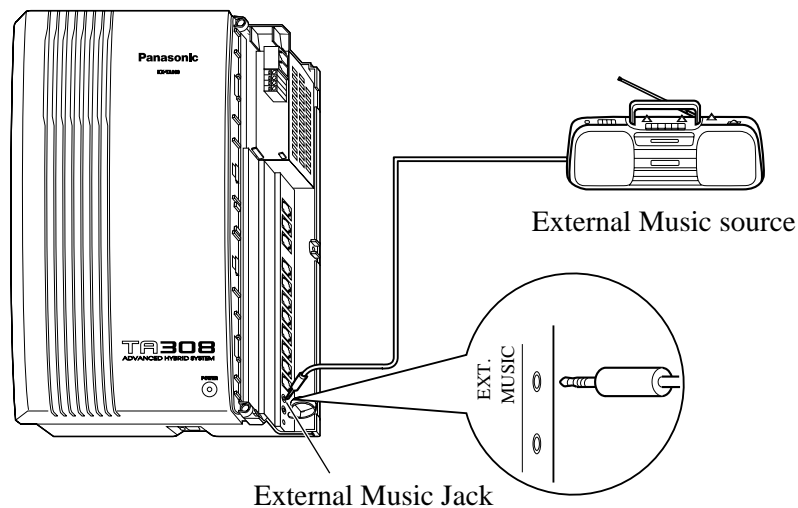

- Note**
- System programming for the music source used for Music on Hold is required.
 - To adjust the sound level of the Music on Hold, use the volume control on the external music source.

Programming Reference

Section 4, System Programming

[111] Hold Music Selection

Feature References

Section 3, Features

Background Music (BGM)


Music on Hold

2.3.7 Paralleled Telephone Connection

(for a Proprietary Telephone and a Single Line Telephone)

Any single line telephone can be connected in parallel with a proprietary telephone as follows.

Using a Modular T-Adaptor

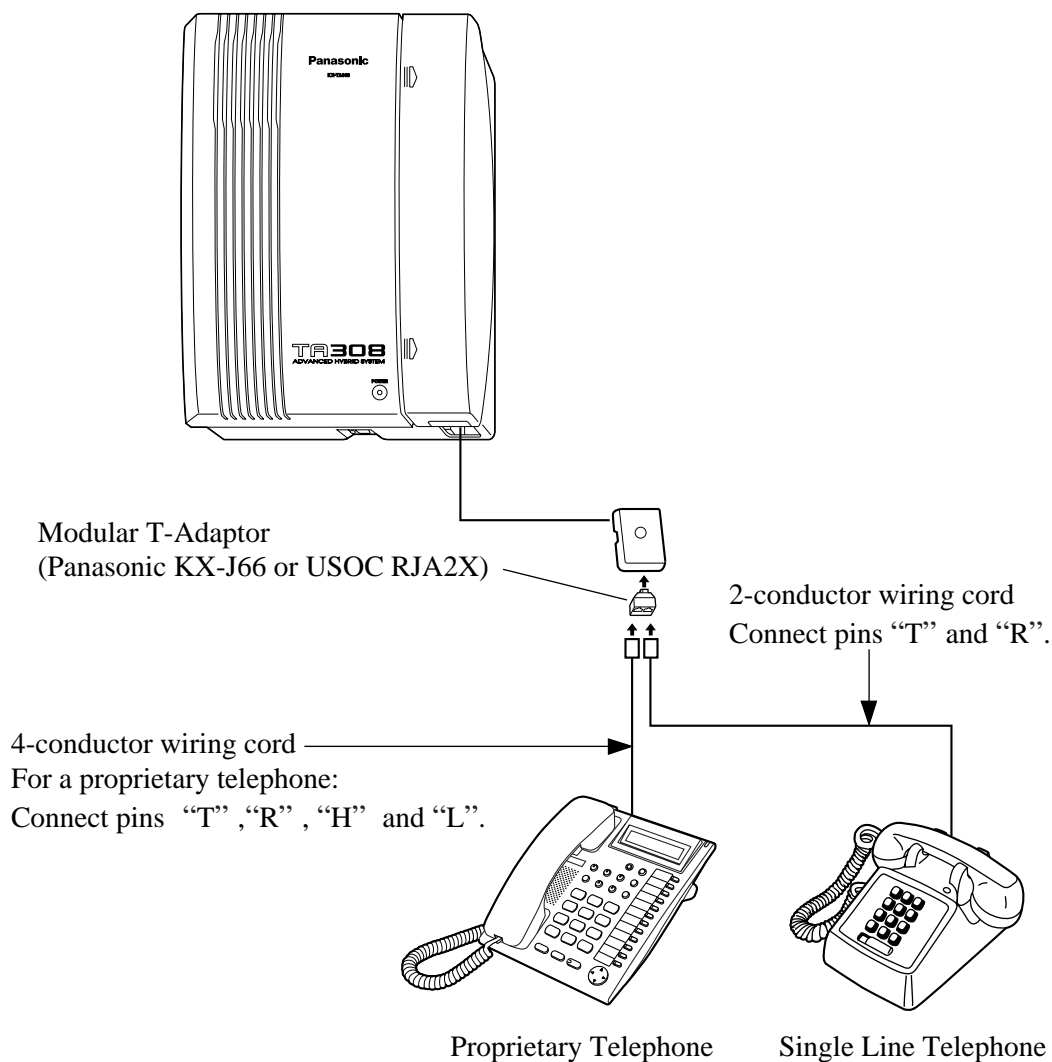

Programming Reference


Section 4, System Programming
[610] Paralleled Telephone Connection

Feature Reference

Section 3, Features
Paralleled Telephone

2.3.8 Polarity Sensitive Telephone Connection

If the telephone is polarity sensitive, follow the procedure below:

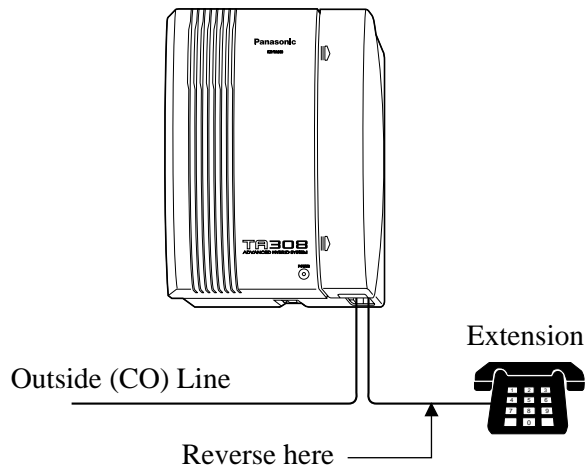

1. Complete all the required extension wiring.
2. Confirm that dialing can be done from all the extensions using a touchtone telephone.
If dialing fails, the polarity between the extension and the system must be reversed.

3. Reverse as shown.


4. Unplug the system.

5. Connect all outside (CO) lines.

6. Confirm that dialing can be done on the following extension using a touchtone telephone.

Extension (T, R) of jack 01: Outside (CO) line 1

If dialing fails, the polarity between the system and the outside (CO) line must be reversed.

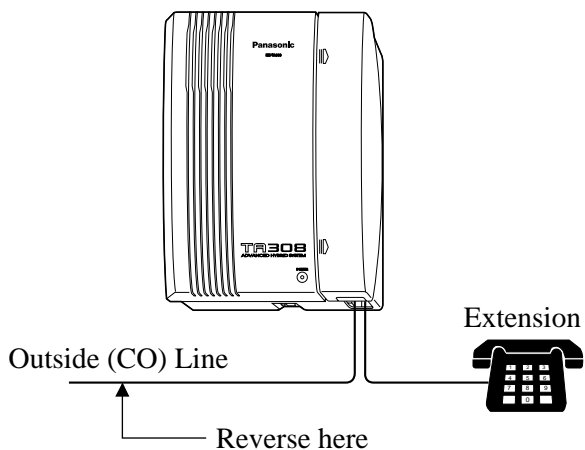


7. Reverse as shown.

8. Every time an extension telephone is replaced, repeat the procedure above.

2.3.9 Printer and PC Connection

A user-supplied printer or personal computer (PC) can be connected to the system. These are used to print out or refer to the SMDR call records and system programming data.

Connect the printer cable or the PC cable to the Serial Interface (RS-232C) connector. The cable must be shielded and the maximum length is 2 m {6.5 feet}.

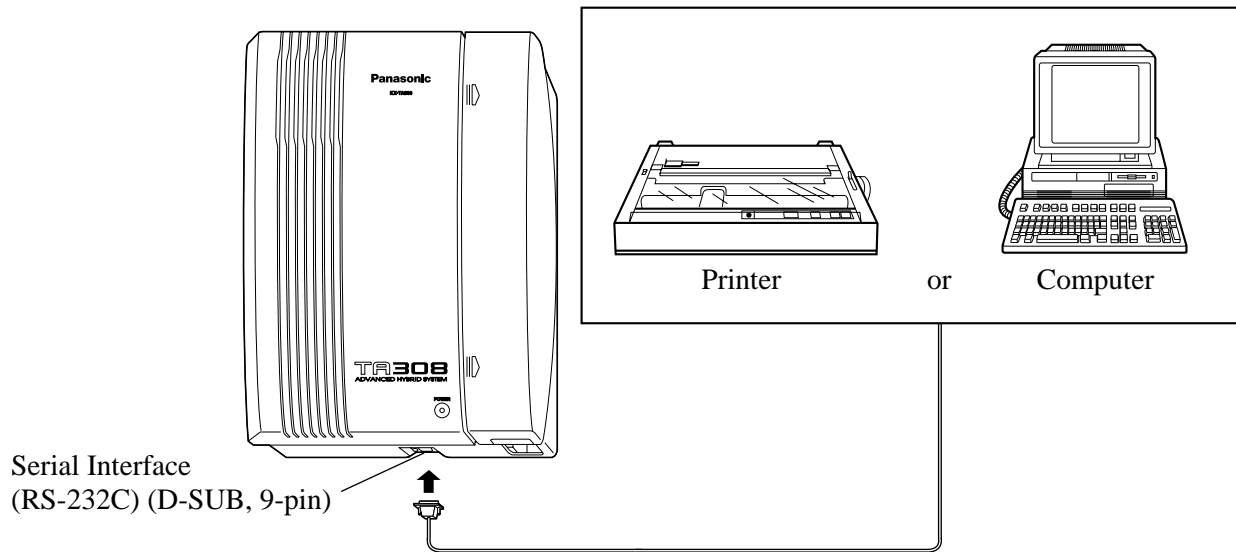

Arrange the cables so that the printer will be connected to the system as shown in the appropriate chart on the following page. When using special accessories such as cable, the user should use those specified in this installation manual to comply with the limits for a class B digital device pursuant to the FCC Rules.


The pin configuration of the Serial Interface (RS-232C) Connector is as follows.

| Pin no. | Signal name | | Circuit type | |
|---------|-------------|---------------------|--------------|-------|
| | | | EIA | CCITT |
| 2 | RXD | Received Data | BB | 104 |
| 3 | TXD | Transmitted Data | BA | 103 |
| 4 | DTR | Data Terminal Ready | CD | 108.2 |
| 5 | SG | Signal Ground | AB | 102 |
| 6 | DSR | Data Set Ready | CC | 107 |
| 7 | RTS | Request To Send | CA | 105 |
| 8 | CTS | Clear To Send | CB | 106 |


2.3.9 Printer and PC Connection

Connection Chart for a Printer / Personal Computer with the KX-TA308

If a printer or a PC with a 9-pin cable is connected, follow the chart below.

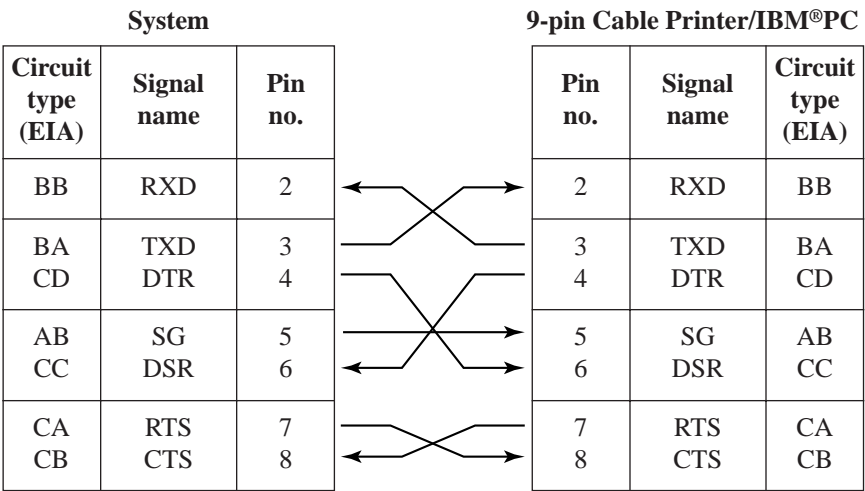

If a printer or a PC with a 25-pin cable is connected, follow the chart below.

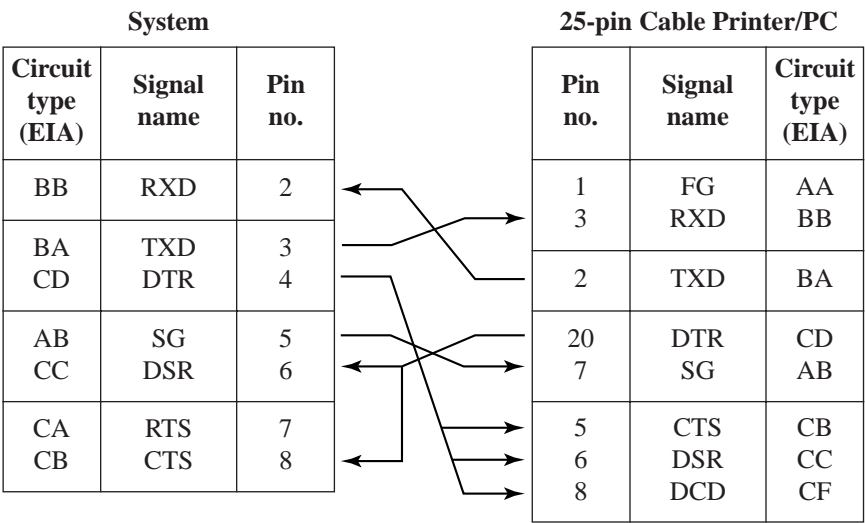

2.3.9 Printer and PC Connection

Serial Interface (RS-232C) Signals

Frame Ground: FG

Connects the unit frame and the earth ground conductor of the AC power cord.

Transmitted Data: SD (TXD) (output)

Conveys signals from the unit to the printer. A “Mark” condition is held unless data or BREAK signals are being transmitted.

Received Data: RD (RXD) (input)

Conveys signals from the printer.

Request to Send: RS (RTS) (output)

This lead remains ON whenever DR (DSR) is ON.

Clear To Send: CS (CTS) (input)

When the CS (CTS) circuit is ON, it indicates that the printer is ready to receive data from the unit. The unit does not attempt to transfer data or receive data when the CS (CTS) circuit is OFF.

Data Set Ready: DR (DSR) (input)

When the DR (DSR) circuit is ON, it indicates the printer is ready. The DR (DSR) circuit being ON does not indicate that communication has been established with the printer.

Signal Ground: SG

Connects the DC ground of the unit for all interface signals.

Data Terminal Ready: ER (DTR) (output)

This signal line is turned ON by the unit to indicate that it is ON LINE. The ER (DTR) circuit being ON does not indicate that communication has been established with the printer. It is switched OFF when the unit is OFF LINE.

Data Carrier Detect: CD (DCD) (input)

When ON, it indicates the data terminal (DTE) that the carrier signal is being received.

Programming References

Section 4, System Programming

[800] SMDR RS-232C Communication Parameters

[801] SMDR Parameter

Feature Reference

Section 3, Features

Station Message Detail Recording (SMDR)

2.4 Doorphone/Door Opener Card


2.4.1 Doorphone and Door Opener connection

Two doorphones (KX-T30865) and two door openers (user-supplied) can be installed.


Maximum cable length

The maximum length of the doorphone and door opener line cord which connects the system is as follows.

| | Diameter of the line | Max. length |
|----------------------|----------------------|------------------|
| Doorphone | 22 AWG | 180 m {590 feet} |
| (Station Loop | 24 AWG | 113 m {370 feet} |
| Limit: 20 Ω) | 26 AWG | 70 m {230 feet} |
| Door Opener | 22 AWG | 180 m {590 feet} |

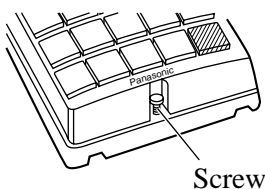

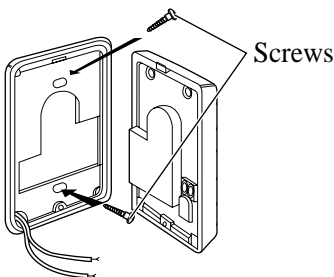

1. Loosen the screw to open the doorphone unit.




2. Attach the base cover to a wall using two screws.

Note Two kinds of screws are included. Please choose the appropriate one depending on your type of wall.

 Type 1: When a doorphone plate has been fixed to the wall.

 Type 2: When you wish to install the doorphone directly to the wall.

3. Connect the wires to the screws located in the front cover.

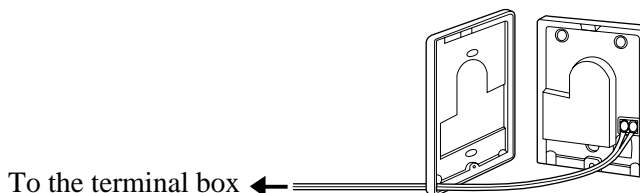


4. Put the doorphone together and re-install the screw.

2.4.1 Doorphone and Door Opener Connection

Connection of the Doorphone


1. Connect the Doorphone/Door Opener Card to the terminal boxes using 2-conductor modular connectors.
2. Connect the wires of doorphone to the red and green screws on the terminal box.

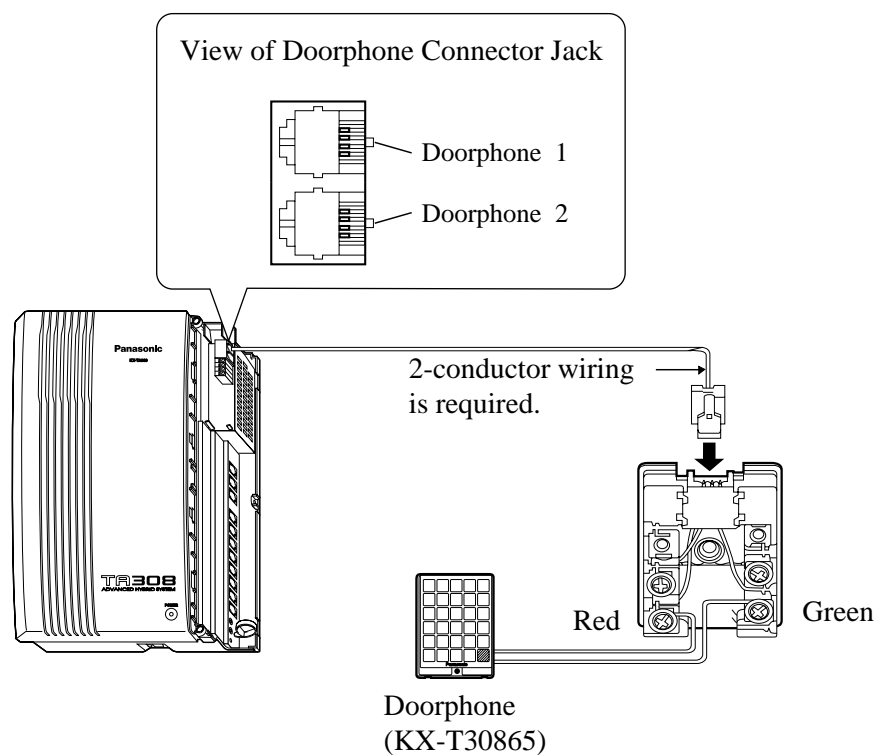



2.4.1 Doorphone and Door Opener Connection

Connecting Door Openers

While pressing the button below a hole with a driver, insert the wire from the door opener into the hole.

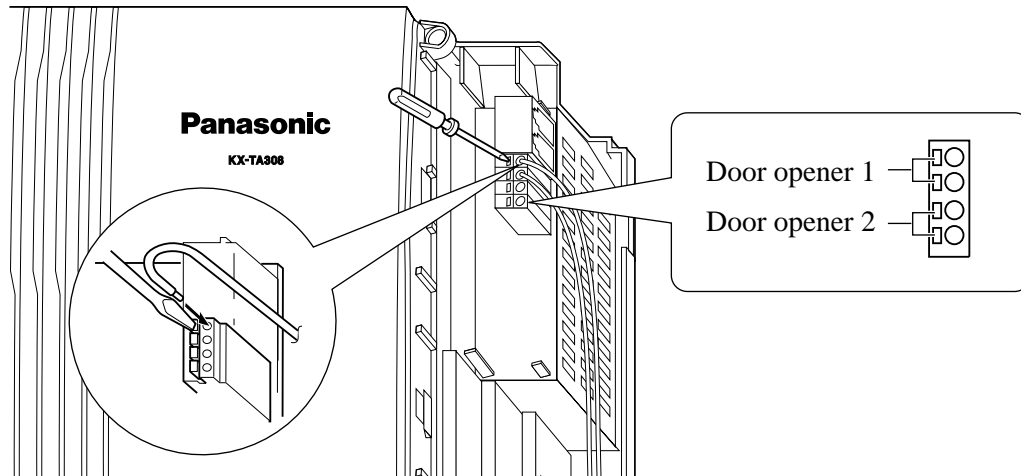

- Note**
- We recommend using UL1015 wire or the equivalent for wiring.
 - The wire should be between 0.4 mm and 1.2 mm {1/64 inch – 3/64 inch} in diameter including the coating.

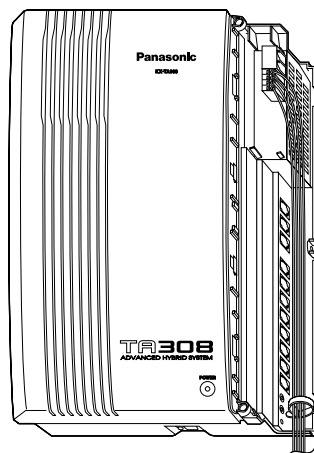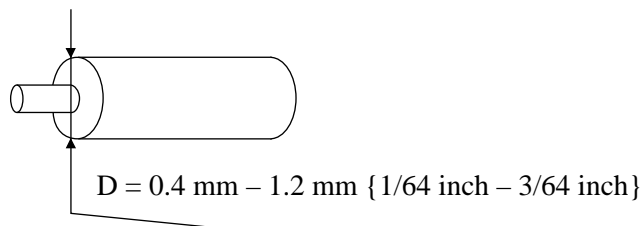

To the door openers

2.4.1 Doorphone and Door Opener Connection

Programming References

Section 4, System Programming

[700]–[702] Doorphone Ringing Assignment — Day/Night/Lunch

[703]–[705] Door Opener Assignment — Day/Night/Lunch

Feature References

Section 3, Features

Door Opener


Doorphone Call

2.4.2 Doorbell/Door Chime Connection

Connecting Doorbell/Door Chime

While pressing the button below a hole with a screwdriver, insert the wire from the doorbell/door chime into the hole. The user can install a standard doorbell/door chime of the United States. For more details, please consult your dealer.

For information about how to connect the doorphones (KX-T30865) and door openers, refer to 2.4.1 Doorphone and Door Opener Connection.

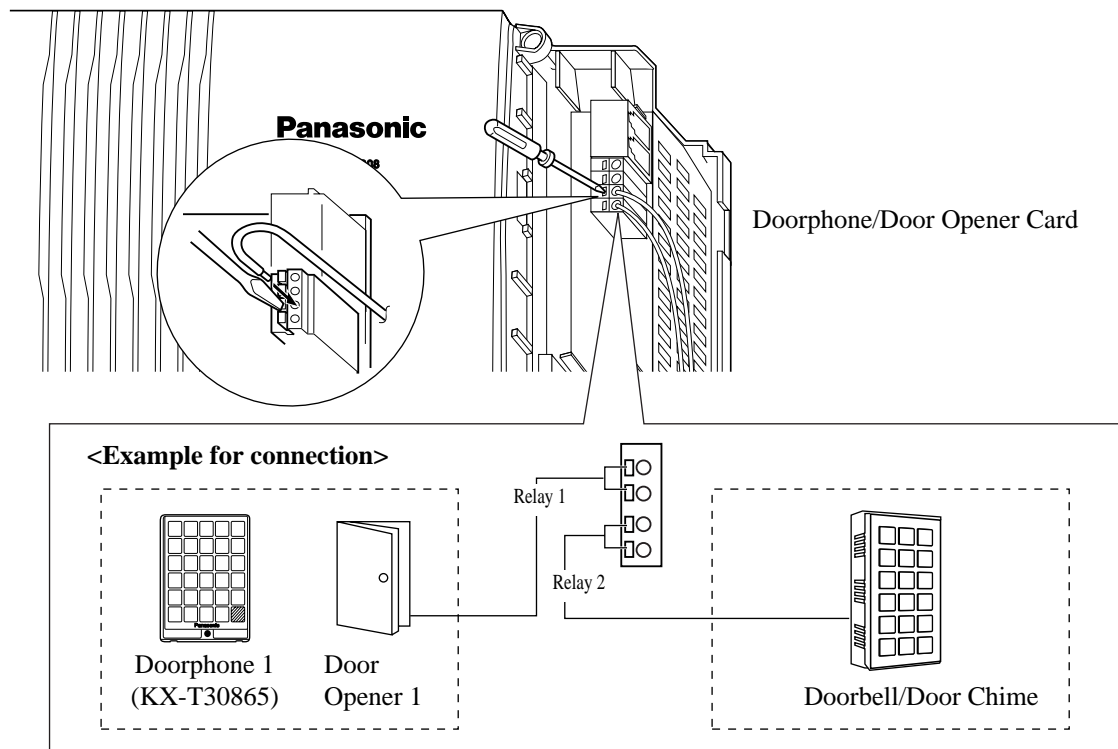

Programming References

Section 4, System Programming

- [700]–[702] Doorphone Ringing Assignment — Day/Night/Lunch
- [703]–[705] Door Opener Assignment — Day/Night/Lunch
- [708] Doorphone Ringing Time
- [710] Doorphone Ring/Chime Selection
- [711] Doorphone Chime Assignment
- [712] Doorphone Chime Pattern Selection


Feature References

Section 3, Features

- Door Opener
- Doorbell/Door Chime
- Doorphone Call


2.4.3 Securing the cords

1. Wrap the black Velcro® strap firmly around the all cords.

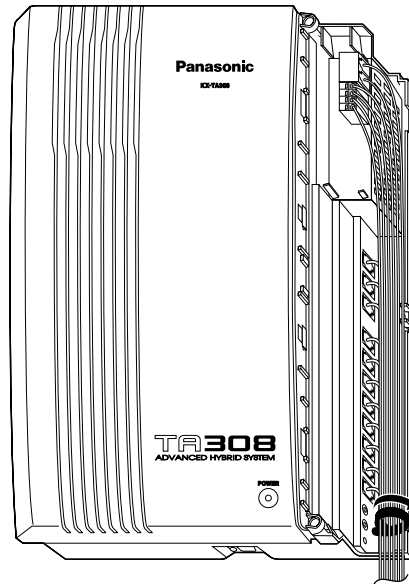

2. Close the right side cover and secure the screw.

Note • To detach the black Velcro strap, remove the black screw with a screwdriver.

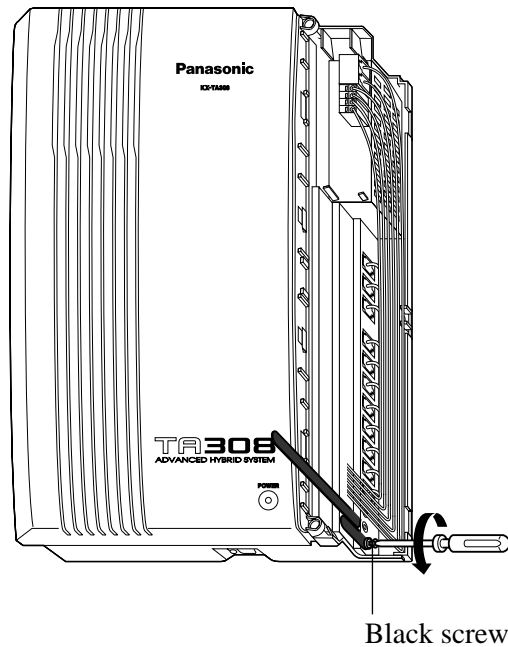

2.5 Auxiliary Connection for Power Failure Transfer

Power failure transfer connects a specific single line telephone to the selected outside (CO) line in the event of system power failure, as follows.

Outside (CO) Line 1 – Extension (T, R) Jack 01

Connection of outside (CO) line 1 and the respective extension requires no auxiliary connection.

- Note**
- In the event of a power failure, system memory is protected by a factory-provided lithium battery. There is no memory loss except the Camp-on, Saved Number Redial, Last Number Redial, Call Park and Message Waiting memories.
 - The system automatically changes the current connection to the above connection when the power supply stops.
 - Proprietary telephones cannot be used during a system power failure. Therefore, we recommend connecting a single line telephone in parallel with the proprietary telephone connected to JACK 01.

Feature References


Section 3, Features

Paralleled Telephone

Power Failure Transfer

2.6 Closing the Side Cover

1. Replace the right side cover and tighten the screw.
2. Tie together all of the connected cords and attach them to the wall so that the cords cannot be pulled out of the system.

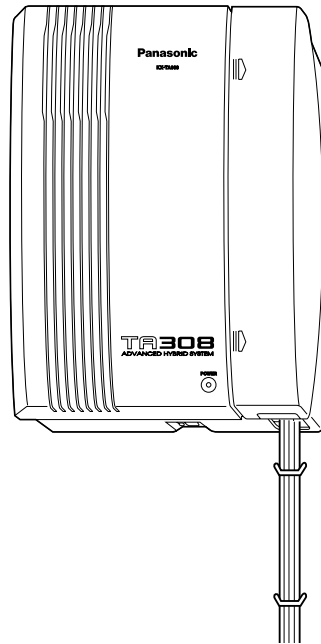


2.7 Starting the System for the First Time

1. Plug the AC power cord into the system and an AC outlet.
2. Turn the Power Switch on. (The power indicator will light.)
3. Perform the following operation with a proprietary telephone connected to JACK 01.
 - a) Press the PROGRAM button.
 - b) Dial * #.
 - c) Enter the system password, 1234.
 - d) Enter 999.
 - e) Press NEXT (SP-PHONE button).
 - f) Keep pressing SELECT (AUTO ANSWER/MUTE button) until “All Para” is displayed.
 - g) Press STORE (AUTO DIAL/STORE button).
 - h) Press END (HOLD button).
 - i) Press the PROGRAM button.

The system will be initialized with the default values. If the system does not work properly, see “2.9, System Data Clear”.

- CAUTION**
- The system will continue to be powered even if the Power Switch is turned “OFF”.
 - The power supply cord is used as the main disconnect device. Ensure that the outlet is located/installed near the equipment and is easily accessible.

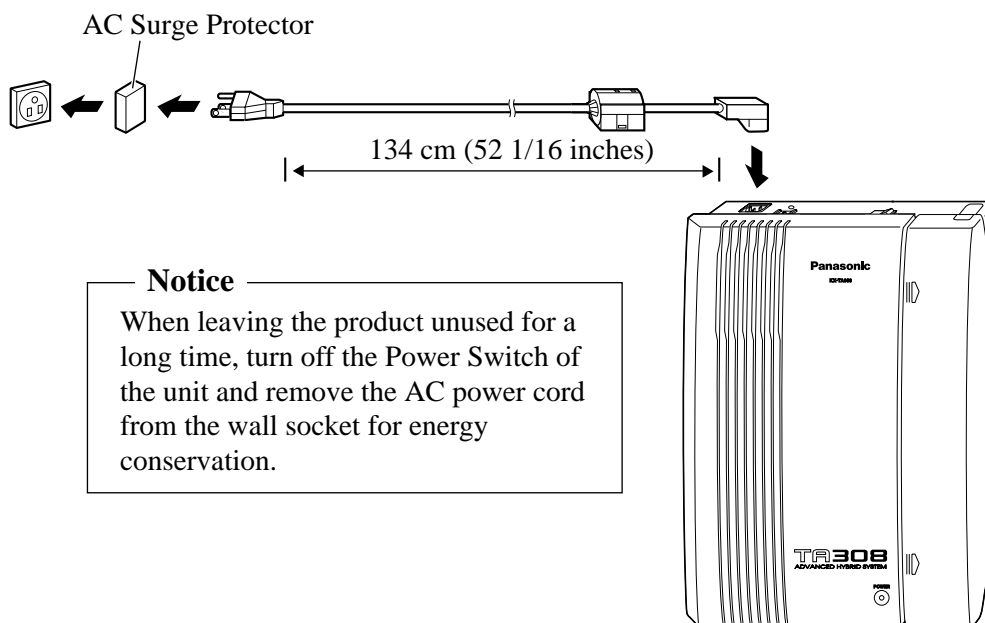

2.8 System Restart

After starting the system, if the system does not operate properly, restart the system.

Before restarting the system, try the system feature again to confirm whether there definitely is a problem or not.

System Restart causes the following.

1. Camp-on is cleared.
2. Calls on Hold are terminated.
3. Calls on Exclusive Hold are terminated.
4. Calls in progress are terminated.
5. Call Park is cleared.
6. Last Number Redial is cleared.
7. Saved Number Redial is cleared.
8. Message Waiting is cleared.

Other data is not cleared by System Restart.


1. Turn the Power switch off and then on.

Notice If the system still does not operate properly, please see Section 2.9, “System Data Clear”.


2.9 System Data Clear

When the system does not operate properly after restarting, you can clear the programming data stored in the system. The system will restart with the default settings. First, try system program [999]. If the system still does not operate properly, please follow the procedure below.

1. Loosen the screw and open the right side cover.
2. Remove the two screws.

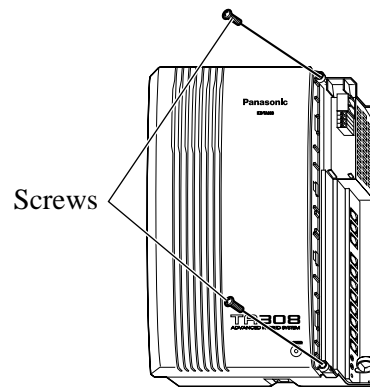


3. Open the left side cover.

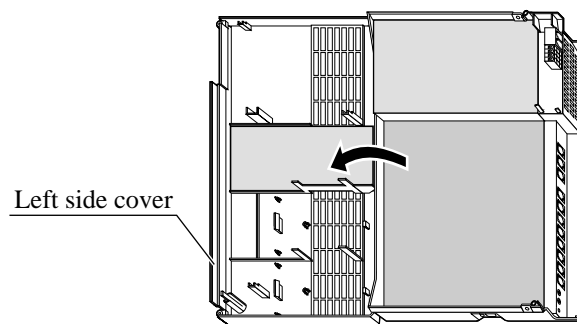

2.9 System Data Clear

4. Slide the System Clear Switch to the “CLEAR” position.
5. Press the Reset Button.
6. Return the System Clear Switch to the “NORMAL” position before the power indicator stops flashing.
(The power indicator will flash for about 10 seconds.)

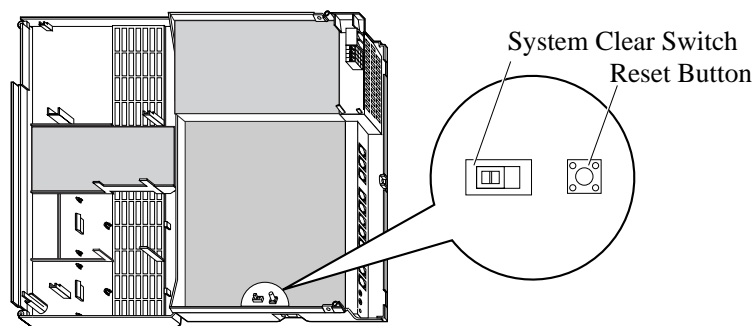

CAUTION To protect the printed circuit boards (P-boards) from static electricity, do not touch parts on the P-boards. Before touching the System Clear Switch and Reset Button, put on a grounding strap.

Notice After pressing the Reset Button, return the System Clear Switch to the “NORMAL” position in step 6 before the power indicator stops flashing. Otherwise, the system will not clear.

Condition

- Be sure the frame of the main unit is connected to the ground. Refer to Section 2.2.4 “Frame Ground Connection”.

Programming Reference

Section 4, System Programming
[999] System Data Clear

Section 3

Features

This section describes every basic, optional, and programmable feature in alphabetical order. It also provides information about the conditions, connection references, programming required, related features, and operation for every feature.

Absent Message Capability

Description

Allows an extension user to set a message which will be displayed at the calling extension to show the reason for the called extension's absence. Six messages can be programmed as desired, which are available for every extension user. Setting or canceling a message can be done by individual extension users but only callers with a display telephone can view the message.

Conditions

- The six messages are shown below. “%” means a parameter to be entered when assigning a message at an extension.
 - (1) Will Return Soon
 - (2) Gone Home
 - (3) At Ext % % % (extension number)
 - (4) Back at % % : % % AM (or PM) (hour : minute)
 - (5) Out Until % % / % % (month / day)
 - (6) In a Meeting
- An extension user can only select one message at a time. The selected message is displayed every time the user goes off-hook.

Programming References

No programming required.

Feature References

None

Operation Reference — User Manual

Telephone Features
Absent Message Capability

Account Code Entry

Description

An Account Code is used to identify incoming and outgoing outside calls for accounting and billing purposes. The account code is appended to the Station Message Detail Recording (SMDR) call record. For incoming outside calls, account codes are optional. For outgoing outside calls, there are four modes available to enter an account code: Verify-All mode, Verify-Toll mode, Forced mode, and Option mode. One mode is selected for each extension.

In Verify-All mode, the user must always enter a pre-assigned account code when making any of the following calls unless it has previously been stored in memory.

- Call Forwarding – to Outside (CO) Line
- Last Number Redial
- Line Access
- One-Touch Dialing
- Personal Speed Dialing
- Pickup Dialing
- Saved Number Redial
- System Speed Dialing

In Verify-Toll mode, the user can enter a pre-assigned account code only when the user needs to override toll restriction. Calls with COS numbers 3 through 5 will be treated as calls with COS number 2. Calls with COS numbers 1 and 2 will not be affected.

In Forced mode, the user must always enter an account code. The code can be any number.

In Option mode, the user can enter any account code if needed.

Conditions

- An account code can be stored into Memory Dialing (System/Personal Speed Dialing, One-Touch Dialing, Pickup Dialing, Call Forwarding – to Outside (CO) Line).
- Account code entry after CPC detection must be done within 30 seconds. Otherwise, the SMDR call record is activated and the code cannot be entered.
- In any mode, emergency dial numbers stored in program [309] “Emergency Dial Number Set” can be dialed out without an account code entry.

Programming References

Section 4, System Programming

- [310] Account Codes
- [601]–[603] TRS – Class of Service (COS) Assignment
 - Day/Night /Lunch
- [605] Account Code Entry Mode
- [805] SMDR Account Code Selection

Feature Reference

Section 3, Features

Toll Restriction Override by Account Codes

Operation Reference — User Manual

Telephone Features
Account Code Entry

Answering, Direct Outside (CO) Line

Description

Allows a proprietary telephone user to answer an incoming call by simply pressing the appropriate CO button without lifting the handset or pressing the SP-PHONE/MONITOR button.

Condition

- This feature allows the user to specify which line will be answered when multiple incoming lines are ringing.

Programming References

No programming required.

Feature Reference

Section 3, Features
Outside (CO) Line Connection Assignment

Operation Reference
— User Manual

Telephone Features
Answering, Direct Outside (CO) Line

Automatic Callback Busy (Camp-On)

Description

Allows the caller to be notified when the called party or selected outside (CO) line becomes free.

Automatic Callback – Extension

If the caller answers the callback ringing (Camp-On Recall), the called extension will automatically start ringing.

Automatic Callback – Outside (CO) Line

If the caller answers the callback ringing (Camp-On Recall), the line will be automatically selected to allow the user to make an outside call.

Conditions

- If the callback ringing (Camp-On Recall) is not answered in four rings (within 10 seconds), the callback will be canceled.
- More than one extension user can set this function to one extension or outside (CO) line at the same time.

Programming References

No programming required.

Feature References

None

Operation Reference — User Manual

Telephone Features
Automatic Callback Busy (Camp-On)

Background Music (BGM)

Description

Allows a proprietary telephone user to listen to background music from the speaker monitor on their telephone.

Conditions

- A user-supplied external music source, such as a radio, must be connected. One external music source can be connected to the system.
- The music source is used for BGM and/or Music on Hold.
- The music is interrupted when you go off-hook.

Connection Reference

Section 2, Installation

2.3.6 External Music Source Connection

Programming References

No programming required.

Feature Reference

Section 3, Features

Music on Hold

Operation Reference

— User Manual

Telephone Features

Background Music (BGM)

Busy Lamp Field

| | |
|------------------------------|--|
| Description | The LED (Light Emitting Diode) indicators of the DSS (Direct Station Selection) buttons, corresponding to selected extensions, show whether the extensions are idle or busy. |
| Conditions | <ul style="list-style-type: none"> • This function is available for flexible CO buttons assigned as DSS buttons on proprietary telephones. • A DSS button indicator lights red if the corresponding extension is busy. |
| Programming Reference | Station Programming User Manual Flexible Button Assignment – Direct Station Selection (DSS) Button |
| Feature Reference | Section 3, Features Button, Direct Station Selection (DSS) |
| Operation References | Not applicable. |

Busy Station Signaling (BSS)

| | |
|---|--|
| Description | When attempting to call a busy extension, Busy Station Signaling allows you to signal the extension to answer your call. The called extension user hears a Call Waiting tone and then is able to answer the call. |
| Condition | <ul style="list-style-type: none"> • This feature only works if the called extension has activated Call Waiting. If Call Waiting is activated, the caller will hear a ringback tone. If not, the caller will hear a reorder tone. |
| Programming References | No programming required. |
| Feature Reference | Section 3, Features Call Waiting |
| Operation Reference — User Manual | Telephone Features Busy Station Signaling (BSS) |

Button, Direct Station Selection (DSS)

Description A DSS button allows a proprietary telephone user one-touch access to other extension users.

Conditions

- A flexible CO button on a proprietary telephone can be assigned as a DSS button using station programming.
- Once a button is assigned as a DSS button, the Busy Lamp Field (BLF) status is available. The MESSAGE button has no LED (Light Emitting Diode) indicator.
- The mode of a DSS button can be programmed to disconnect the outside (CO) line and call the extension, or hold and transfer the call to the extension (One-Touch Transfer Using a DSS Button).

Programming References

Section 4, System Programming
[005] One-Touch Transfer Using a DSS Button
Station Programming **User Manual**
Flexible Button Assignment – Direct Station Selection (DSS) Button

Feature References **Section 3, Features**
Busy Lamp Field
One-Touch Transfer Using a DSS Button

Operation References **Basic Operations**
— User Manual Making Calls
Telephone Features
Call Transfer – to Extension

Button, Flexible

Description

The use of Flexible Buttons is determined by station programming. The following two types of Flexible Buttons are provided on proprietary telephones (PT) :

- Flexible CO buttons
- MESSAGE button

The table below shows all of the features which can be assigned to Flexible Buttons.

| Button Features to be assigned | CO | MESSAGE |
|-----------------------------------|----|---------|
| Group-CO | ✓ | |
| Other-CO | ✓ | |
| Single-CO | ✓ | |
| Caller ID Indication — Common | ✓ | |
| Caller ID Indication — Personal | ✓ | |
| Caller ID Selection — Common | ✓ | |
| Caller ID Selection — Personal | ✓ | |
| Conference | ✓ | |
| FWD/DND | ✓ | |
| Log-In/Log-Out | ✓ | |
| Saved Number Redial | ✓ | |
| Message Waiting | | ✓ |
| Another Extension Message Waiting | ✓ | |
| Direct Station Selection (DSS) | ✓ | |
| One-Touch Dialing | ✓ | ✓ |


“✓” indicates that the feature is available.

The following table shows the default settings of the Flexible CO buttons.

| CO button | Feature | Ext.101 | Ext.102 | Ext.103 | Ext.104 | Ext.105 | Ext.106 | Ext.107 | Ext.108 |
|---------------|-------------------|---------------|---------------|---------------|---------------|---------------|---------------|---------------|---------------|
| LINE 1 | S-CO | CO1 | CO1 | CO1 | CO1 | CO1 | CO1 | CO1 | CO1 |
| LINE 2 | S-CO | CO2 | CO2 | CO2 | CO2 | CO2 | CO2 | CO2 | CO2 |
| LINE 3 | S-CO | CO3 | CO3 | CO3 | CO3 | CO3 | CO3 | CO3 | CO3 |
| 4* | DSS | Ext.102 | Ext.101 | Ext.101 | Ext.101 | Ext.101 | Ext.101 | Ext.101 | Ext.101 |
| 5* | DSS | Ext.103 | Ext.103 | Ext.102 | Ext.102 | Ext.102 | Ext.102 | Ext.102 | Ext.102 |
| 6* | DSS | Ext.104 | Ext.104 | Ext.104 | Ext.103 | Ext.103 | Ext.103 | Ext.103 | Ext.103 |
| 7* | DSS | Ext.105 | Ext.105 | Ext.105 | Ext.105 | Ext.104 | Ext.104 | Ext.104 | Ext.104 |
| 8* | DSS | Ext.106 | Ext.106 | Ext.106 | Ext.106 | Ext.106 | Ext.105 | Ext.105 | Ext.105 |
| 9* | DSS | Ext.107 | Ext.107 | Ext.107 | Ext.107 | Ext.107 | Ext.107 | Ext.106 | Ext.106 |
| 10* | DSS | Ext.108 | Ext.108 | Ext.108 | Ext.108 | Ext.108 | Ext.108 | Ext.108 | Ext.107 |
| 11* | One-Touch Dialing | Paging ANSWER | Paging ANSWER | Paging ANSWER | Paging ANSWER | Paging ANSWER | Paging ANSWER | Paging ANSWER | Paging ANSWER |
| 12* | One-Touch Dialing | Paging —All | Paging —All | Paging —All | Paging —All | Paging —All | Paging —All | Paging —All | Paging —All |

Ext. : Extension

* CO button numbers above 3 are not indicated on the KX-TA308XX series telephones.

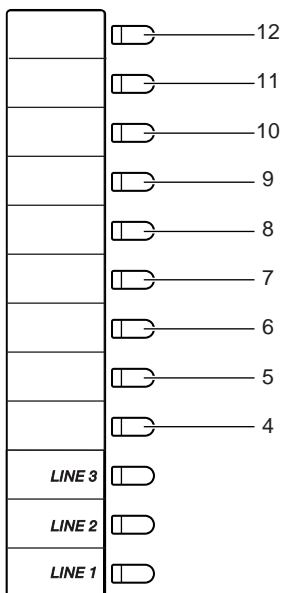

- Incoming and outgoing calls on a line are shown in the following priority.
Single-CO > Group-CO

Station Programming User Manual
Flexible Button Assignment

Section 3, Features

Buttons on Proprietary Telephones

Not applicable.

Button, Group-CO (G-CO)

Description

To support efficient utilization of outside (CO) lines, a group of outside (CO) lines (outside (CO) line group) can be assigned to a CO button. The function is referred to as Group-CO (G-CO). Any incoming call from any outside (CO) line in the outside (CO) line group arrives at the G-CO button. To make an outside call, the user can access an idle outside (CO) line in the group by simply pressing the assigned G-CO button.

Conditions

- A G-CO button is not originally provided on a proprietary telephone (PT). It can be programmed on a CO button by station programming.
- The extension for receiving and/or originating calls on outside (CO) lines must be programmed.
- The same outside (CO) line group can be assigned to more than one G-CO button on the same PT.
- The same line can be assigned to a Single-CO (S-CO) button and a G-CO button.
- Immediate, delayed, no ringing or no incoming call (disable) can be selected on an extension-outside (CO) line basis.
- Users can choose a desired ringing pattern for each outside (CO) line by system programming.

Programming References

Section 4, System Programming

- [400] Outside (CO) Line Connection Assignment
- [404] Outside (CO) Line Group Assignment
- [405]–[407] Flexible Outward Dialing Assignment — Day/Night/Lunch
- [408]–[410] Flexible Ringing Assignment — Day/Night/Lunch
- [411]–[413] Delayed Ringing Assignment — Day/Night/Lunch
- [423] Outside (CO) Line Ringing Pattern Selection

Station Programming User Manual

Flexible Button Assignment – Group-CO (G-CO) Button

Feature References

Section 3, Features

- | | |
|--------------------------------------|--------------------------------|
| Answering, Direct Outside (CO) Line | Ringling, Delayed |
| LED Indication, Outside (CO) Line | Ringling Pattern Selection for |
| Line Access, Outside (CO) Line Group | Intercom Calls and Outside |
| Outside (CO) Line Group | (CO) Lines |

Operation References — User Manual

Basic Operations

- Making Calls
- Receiving Calls

Telephone Features

- Answering, Direct Outside (CO) Line
- Outward Dialing – Line Access, Outside (CO) Line Group

Button, Other-CO (O-CO)

Description Outside (CO) lines, which are not assigned to an S-CO or G-CO button, can be assigned to a flexible CO button on a proprietary telephone (PT). The assigned button serves as the Other-CO (O-CO) button. An incoming call on an outside (CO) line arrives at the O-CO. To make an outside call, the PT user simply presses the assigned O-CO button.

- Conditions**
- An O-CO button is not originally provided on a PT. A flexible CO button can be assigned as an O-CO button by station programming.
 - Immediate, delayed, no ringing or no incoming call (disable) can be selected on an extension – outside (CO) line basis.
 - Users can choose a desired ringing pattern for each outside (CO) line by system programming.

Programming References

Section 4, System Programming
[400] Outside (CO) Line Connection Assignment
[404] Outside (CO) Line Group Assignment
[405]–[407] Flexible Outward Dialing Assignment — Day/Night/Lunch
[408]–[410] Flexible Ringing Assignment — Day/Night/Lunch
[411]–[413] Delayed Ringing Assignment — Day/Night/Lunch
[423] Outside (CO) Line Ringing Pattern Selection
Station Programming User Manual
Flexible Button Assignment – Other-CO (O-CO) Button

Feature References

Section 3, Features
Answering, Direct Outside (CO) Line Line Access, Direct
LED Indication, Outside (CO) Line Ringing, Delayed
Line Access, Automatic Ringing Pattern Selection for
Intercom Calls and Outside
(CO) Lines

Operation References
— User Manual

Basic Operations
Making Calls
Receiving Calls
Telephone Features
Answering, Direct Outside (CO) Line
Outward Dialing – Line Access, Automatic

Button, Single-CO (S-CO)

Description

A Single-CO (S-CO) button is an outside (CO) line access button. This allows a proprietary telephone user to access a specific line by pressing an S-CO button. An incoming call can be directed to an S-CO button.

Conditions

- The default setting for CO buttons is changeable. (Flexible CO Button)
- An S-CO button provides outside (CO) line status.
- One outside (CO) line can be assigned to both an S-CO and a Group-CO (G-CO) button.
- Incoming calls are indicated on a proprietary telephone, when an extension is assigned as the incoming call destination and an S-CO, G-CO and/or O-CO button is assigned.
- Immediate, delayed, no ringing or no incoming call (disable) can be selected on an extension–outside (CO) line basis.
- Users can choose a desired ringing pattern for each outside (CO) line by system programming.

Programming References

Section 4, System Programming

[400] Outside (CO) Line Connection Assignment

[404] Outside (CO) Line Group Assignment

[405]–[407] Flexible Outward Dialing Assignment — Day/Night/Lunch

[408]–[410] Flexible Ringing Assignment — Day/Night/Lunch

[411]–[413] Delayed Ringing Assignment — Day/Night/Lunch

[423] Outside (CO) Line Ringing Pattern Selection

Station Programming User Manual

Flexible Button Assignment – Single-CO (S-CO) Button

Feature References

Section 3, Features

Answering, Direct Outside (CO) Line

LED Indication, Outside (CO) Line

Line Access, Direct

Line Access, Individual

Ringing, Delayed

Ringing Pattern Selection for
Intercom Calls and Outside
(CO) Lines

Operation References — User Manual

Basic Operations

Making Calls

Receiving Calls

Telephone Features

Answering, Direct Outside (CO) Line

Outward Dialing – Line Access, Individual

Buttons on Proprietary Telephones

Description

Proprietary telephones are provided with the feature/line access buttons listed below.

KX-TA Proprietary Telephones

| Buttons | 30820 | 30830 | 30850 |
|----------------------|-------|-------|-------|
| AUTO ANSWER/MUTE❖ | ✓ | ✓ | |
| AUTO DIAL/STORE❖ | ✓ | ✓ | ✓ |
| CO❖* | ✓(12) | ✓(12) | ✓(12) |
| CONF❖ | ✓ | ✓ | ✓ |
| FLASH/RECALL | ✓ | ✓ | ✓ |
| FWD/DND❖ | ✓ | ✓ | ✓ |
| HOLD | ✓ | ✓ | ✓ |
| INTERCOM❖ | ✓ | ✓ | ✓ |
| MESSAGE* | ✓ | ✓ | ✓ |
| MONITOR❖ | | | ✓ |
| Navigator Key | | ✓ | |
| PAUSE | ✓ | ✓ | ✓ |
| PROGRAM | ✓ | ✓ | ✓ |
| REDIAL | ✓ | ✓ | ✓ |
| SP-PHONE❖ | ✓ | ✓ | |
| TRANSFER | ✓ | ✓ | ✓ |
| VOICE CALL❖ | | | ✓ |
| Volume Key | ✓ | | ✓ |
| Message/Ringer Lamp❖ | ✓ | ✓ | ✓ |

✓: The button is provided on the designated telephone.

❖: The button has an LED (Light Emitting Diode).

* : Buttons which can be changed to function as a feature button are called flexible buttons.

(x): Shows the number of buttons only if more than one button is provided.

The functions of the listed buttons are described below.

AUTO ANSWER/MUTE (KX-TA30820/KX-TA30830): Used for answering an extension automatically, or turns the microphone off during a conversation.

AUTO DIAL/STORE: Used for System Speed Dialing and storing program changes.

CO (Central Office line): Can make or receive an outside call or can be re-assigned to a different CO or various feature buttons.

CONF (Conference): Used to establish a three-party conference.

FLASH/RECALL: Allows you to disconnect the current call and originate another call without hanging up (Flash). Sends a flash signal to the Central Office or host PBX to access their features (External Feature Access).

FWD/DND (Call Forwarding/Do Not Disturb): Used to program Call Forwarding, and set Do Not Disturb.

HOLD: Used to place a call on hold.

INTERCOM: Used to make or receive intercom calls.

MESSAGE: Used to send a message, display the current message, call back the message sender, or can be assigned as another feature button. The Message/Ringer Lamp lights when a message waiting indication is left.

MONITOR (KX-TA30850): Used for a hands-free operation.

PAUSE: Inserts a pause in a speed dial number.

PROGRAM: Used to enter and exit the Programming mode.

REDIAL: Used for Last Number Redialing.

SP-PHONE (Speakerphone — KX-TA30820/KX-TA30830): Used for a hands-free speakerphone operation. Pressing the button causes the telephone to switch between the handset and hands-free operation.

TRANSFER: Transfers a call to another extension or external destination.

VOICE CALL (KX-TA30850): Used to receive a notification via monitor in place of ringing.

Navigator Key (KX-TA30830): Used to adjust the volume and the display contrast or select desired items for each function.

Volume Key (KX-TA30820/KX-TA30850): Used to adjust the volume.

Message/Ringer Lamp: Used to inform telephone users visually that they have an incoming call or message from an external party or extension. The table below shows the lighting patterns for the Message/Ringer Lamp.

| Lamp | Status |
|----------|--------------------------------|
| Flashing | The user has an incoming call. |
| On | The user has a message. |

Conditions

- Certain buttons are equipped with light indicators (LED's) to show the line or feature status.
- CO buttons can be classified according to the following three types:
Single-CO (S-CO) button / Group-CO (G- CO) button / Other-CO (O- CO) button

Programming Reference

Station Programming User Manual
Flexible Button Assignment

Feature References None

Operation References Refer to the appropriate operating instructions.
— User Manual

CALL FORWARDING FEATURES – SUMMARY

Description

Call Forwarding features enable an extension user to have their calls forwarded to a specified destination. The user may determine the conditions of how their calls will be forwarded. The following Call Forwarding features are available:

- Call Forwarding – All Calls**
- Call Forwarding – Busy/No Answer**
- Call Forwarding – Follow Me**
- Call Forwarding – to an Outside (CO) Line**

Call Forwarding – All Calls

Description

This feature is used when a user wants all their calls to be automatically re-directed to another extension.

Conditions

- The types of calls which are forwarded by this feature are:
 - Outside calls – DIL; DISA; Normal
 - Intercom calls – Extension; Transfer
- The extensions which have already been assigned as a forwarded destination cannot set the Call Forwarding feature.
- Although calls can be forwarded, Message Waiting cannot. The Message/Ringer Lamp will light on the original called extension.
- If the Do Not Disturb (DND) feature has already been set, setting the Call Forwarding feature will cancel DND.
- System Programming determines which extensions are able to perform this feature for certain outside calls.

Programming References

Section 4, System Programming
 [963] Call Forwarding Selection
Station Programming User Manual
 Flexible Button Assignment – FWD/DND Button

Feature References

None

Operation Reference — User Manual

Telephone Features
 Call Forwarding — All Calls

Call Forwarding – Busy/No Answer

Description A user's calls are forwarded to another extension if their extension is busy or they do not answer the call within a pre-determined time.

- Conditions**
- The types of calls which are forwarded by this feature are:
Outside calls – DIL; DISA; Normal
Intercom calls – Extension; Transfer
 - The extensions which have been already assigned as the forwarded destination cannot set the Call Forwarding feature.
 - Although calls can be forwarded, Message Waiting cannot. The Message/Ringer Lamp will light on the original called extension.
 - If the Do Not Disturb (DND) feature has already been set, setting the Call Forwarding feature will cancel DND.
 - System Programming determines which extensions are able to perform this feature for certain outside calls.

Programming References

Section 4, System Programming
 [202] Call Forwarding Start Time
 [963] Call Forwarding Selection
Station Programming User Manual
 Flexible Button Assignment – FWD/DND Button

Feature References None

Operation Reference
 — User Manual Telephone Features
 Call Forwarding — Busy/No Answer

Call Forwarding – Follow Me

Description

If a user forgets to set Call Forwarding – All Calls before they leave their desk, this allows them to set the same feature from the destination extension.

Condition

- Same as the conditions for Call Forwarding – All Calls.
- System Programming determines which extensions are able to perform this feature for certain outside calls.

Programming References**Section 4, System Programming**

[963] Call Forwarding Selection

Station Programming User Manual

Flexible Button Assignment – FWD/DND Button

Feature Reference**Section 3, Features**

Call Forwarding – All Calls

Operation Reference
— User Manual**Telephone Features**

Call Forwarding — Follow Me

Call Forwarding – to an Outside (CO) Line

Description

Calls directed to an extension will be sent to an external destination. The outside telephone number must be pre-programmed.

Conditions

- The types of calls which are forwarded by this feature are:
Outside calls – DIL; DISA
Intercom calls – Extension; Transfer
- The forwarding extension's Toll Restriction and Account Code Entry requirements still apply.
- If the Do Not Disturb (DND) feature has already been set, setting the Call Forwarding feature will cancel DND.
- System programming determines which extensions are able to perform this feature.
- If a call between two outside parties is established by this feature, the duration of the call is determined by the system timer. An alarm tone is generated to both outside parties 15 seconds before the time-out. The call is disconnected at the time-out.

Programming References

Section 4, System Programming
 [205] Outside-to-Outside (CO-to-CO) Line Duration Time Limit
 [607] Call Forwarding to an Outside (CO) Line
Station Programming User Manual
 Flexible Button Assignment – FWD/DND Button

Feature Reference

Section 3, Features
 Limited Call Duration

Operation Reference — User Manual

Telephone Features
 Call Forwarding — to an Outside (CO) Line

Call Hold – Intercom

Description

This is used to place an intercom call on hold. The held call can be retrieved by the user who held it or by any other extension.

Conditions

- Only one intercom call can be placed on hold (up to ten calls in the system – Call Park). With a proprietary telephone, outside calls and one intercom call can be placed on hold at the same time. With a single line telephone, either one outside or intercom call can be held.
- If a call on hold is not retrieved within a pre-assigned period of time, Hold Alarm/Hold Recall occurs.

Programming References**Section 4, System Programming**

[104] Hold Mode Selection

[200] Hold Recall Time

Feature References**Section 3, Features**

Call Park

Hold Alarm/Hold Recall

Operation Reference

— User Manual

Telephone Features

Call Hold

Call Hold – Outside (CO) Line

Description

Allows an extension user to put an outside call on hold. The held call can be retrieved by the user who held it or by any other extension.

Conditions

- With a single line telephone, the user can hold only one call, either an extension or outside call.
- Music is sent to the party on hold, if available (Music on Hold).
- If a call on hold is not retrieved within a specific period of time, Hold Alarm/Hold Recall occurs.
- If an external party is placed on hold and not retrieved within 30 minutes, it will be automatically disconnected.

Programming References**Section 4, System Programming**

[104] Hold Mode Selection

[200] Hold Recall Time

Feature References**Section 3, Features**

Hold Alarm/Hold Recall

Music on Hold

Operation Reference
— User Manual**Telephone Features**

Call Hold

Call Hold, Exclusive – Intercom

Description Allows a proprietary telephone user to prevent other extension users from retrieving a held intercom call. Only the user who held the call can retrieve it.

Conditions

- Only one intercom call can be placed on Call Hold or Exclusive Call Hold at a time.
- If a call on hold is not retrieved within a pre-assigned period of time, Hold Alarm/Hold Recall occurs.
- This feature is not available for single line telephones.

Programming Reference

Section 4, System Programming
[200] Hold Recall Time

Feature Reference

Section 3, Features
Hold Alarm/Hold Recall

Operation Reference — User Manual

Telephone Features
Call Hold, Exclusive

Call Hold, Exclusive – Outside (CO) Line

Description Allows a proprietary telephone user to prevent other extension users from retrieving a held outside call. Only the user who held the call can retrieve it.

Conditions

- If a call on hold is not retrieved within a pre-assigned period of time, Hold Alarm/Hold Recall occurs.
- If an external party is placed on hold and not retrieved in 30 minutes, it will be automatically disconnected.
- Music is sent to the party on hold, if available (Music on Hold).

Programming Reference

Section 4, System Programming
[200] Hold Recall Time

Feature References

Section 3, Features
Hold Alarm/Hold Recall
Music on Hold

Operation Reference — User Manual

Telephone Features
Call Hold, Exclusive

Call Hold Retrieve – Intercom

Description Allows an extension user to retrieve a call that has been placed on hold by another extension.

Condition A confirmation tone is sent to the user when the hold is retrieved by entering the feature number.

Programming References
No programming required.

Feature Reference **Section 3, Features**
Call Hold – Intercom

Operation Reference **Telephone Features**
— User Manual Call Hold Retrieve

Call Hold Retrieve – Outside (CO) Line

Description Allows an extension user to retrieve a specific outside call that has been placed on hold by another extension.

Condition A confirmation tone is sent to the user when the hold is retrieved by entering the feature number.

Programming References
No programming required.

Feature Reference **Section 3, Features**
Call Hold – Outside (CO) Line

Operation Reference **Telephone Features**
— User Manual Call Hold Retrieve

Call Log, Incoming

Description

If display proprietary telephone (KX-TA30830) users cannot answer a call, the incoming outside call information from the Caller ID service is automatically logged in the system and the Caller ID Indication button indicator lights. Moreover, the user can call back the caller by checking the call log. There are two kinds of call log areas available in the system. One is the personal area, which stores call logs per telephone. The other is the common area, which stores call logs for the system. Up to 20 calls can be logged in each personal area and up to 300 calls in the common area.

The displayed information is as follows:

- The received outside (CO) line number and name
- The date and time the call was received

Conditions

- The user's area code must be assigned before they use the Caller ID feature.
- To check the caller's information stored in the personal area, the user needs to assign the Caller ID Indication — Personal button. For the common area, the Caller ID Indication — Common button is necessary.
- The call is registered when the PT finishes ringing. If a call is directed to a certain PT, the call will be registered in the PT's personal area and the PT's Caller ID Indication — Personal button indicator will light. A call via an outside (CO) line assigned "Normal" in programs [414]-[416] "Outside (CO) Line Mode — Day/Night/Lunch" or a call via the DISA Intercept Routing feature will be registered in the common area and all corresponding PT's Caller ID Indication — Common button indicators will light. However in this case, if nobody has assigned the Caller ID Indication — Common button, the call will be registered in a PT's personal area that is connected to the lowest jack number and the PT's Caller ID Indication — Personal button will light.
- After someone has checked the new call log in the common area, all corresponding Caller ID Indication — Common button indicators will turn off.
- Information is also registered even if a transferred call (unscreened) is not answered. In this case, the information will be stored in the transferred extension's personal area.
- When the call log in the personal area is full (20 calls are stored), the user can select how the 21st call is treated. Overwriting the data by replacing the oldest call with the newest one at their extension, or disregarding the 21st call can be selected (Default: Record the new call) (Call Log, Incoming). When the call log in the common area is full (300 calls are stored), only the operator or manager can select the 301st call treatment (Default: Record the new call) (The 301st Call Log, Incoming in the Common Area Treatment).

- A telephone user can lock their display so that the incoming call information stored in their personal area is not shown on the display. The operator or manager can cancel the lock. The call information stored in the common area can be locked and unlocked only by the operator and manager.
- The system automatically modifies the incoming caller's number, depending on programming, for local or long distance calls. The modified number will be recorded so it can be called back. Users can also modify the number manually.

<Example>

| | Caller's number provided by CO | Recorded caller's number |
|---------------------|-----------------------------------|---------------------------------|
| Local call: | 2011234567 | 1234567 (modified by [902]) |
| Long distance call: | 7149876543 | 17149876543 (modified by [903]) |

Programming References

| | |
|---|-------------|
| Section 4, System Programming | |
| [900] Caller ID Assignment | |
| [901] Caller ID Area Code Assignment | |
| [902] Caller ID Modification for Local Calls | |
| [903] Caller ID Modification for Long Distance Calls | |
| [904] Caller ID Log Priority Selection | |
| [909] Common Area Call Log Check Assignment | |
| Station Programming | User Manual |
| Flexible Button Assignment – Caller ID Indication Button, | |
| Caller ID Selection Button | |

| | |
|-------------------|---------------------|
| Feature Reference | Section 3, Features |
| | Caller ID |

| | |
|----------------------|---|
| Operation References | Telephone Features |
| — User Manual | Call Log, Incoming |
| | Call Log Lock, Incoming in the Personal Area |
| | Operator/Manager Service Features |
| | Call Log, Incoming in the Common Area — CLEAR ALL |
| | Call Log Lock, Incoming in the Common Area |
| | Electronic Station Lockout — CANCEL ALL |
| | The 301st Call Log, Incoming in the Common Area Treatment |

Call Park

| | |
|---|---|
| Description | Allows an extension user to place a held call into a system parking area. This releases the user from the parked call to perform other operations. The parked call can be retrieved by any extension user. |
| Conditions | <ul style="list-style-type: none">• The system contains ten parking areas, each of which has its own call park number.• If a parked call is not retrieved within a pre-assigned period of time, Hold Alarm/Hold Recall occurs.• If a parked call is not retrieved in 30 minutes, it will be automatically disconnected. |
| Programming Reference | Section 4, System Programming [200] Hold Recall Time |
| Feature Reference | Section 3, Features Hold Alarm/Hold Recall |
| Operation Reference — User Manual | Telephone Features Call Park |

Call Pickup, Directed

| | |
|---|--|
| Description | Allows an extension user to answer a call ringing at any other extension. |
| Conditions | <ul style="list-style-type: none">• The user can pick up an incoming outside, intercom, or doorphone call.• A confirmation tone is sent to the user when the call is picked up. The tone can be disabled.• Hold recalls and camp on recalls cannot be picked up. |
| Programming Reference | Section 4, System Programming [117] Call Pickup Tone |
| Feature References | None |
| Operation Reference — User Manual | Telephone Features Call Pickup, Directed |

Call Pickup, Group

| | |
|---|--|
| Description | Allows an extension user to answer a call that is ringing at another telephone, if the call is ringing within the user's extension group. |
| Conditions | <ul style="list-style-type: none">• The user can pick up an incoming outside, intercom, or doorphone call.• A confirmation tone is sent to the user when the call is picked up. The tone can be disabled. |
| Programming References | Section 4, System Programming [117] Call Pickup Tone [600] Extension Group Assignment |
| Feature References | None |
| Operation Reference — User Manual | Telephone Features Call Pickup, Group |

Call Pickup Deny

| | |
|---|--|
| Description | Allows a user to prevent other extensions from picking up calls ringing at their extension by using the call pickup feature. |
| Condition | A Distinctive Dial Tone is sent to the extension user by this feature when the user goes off-hook. |
| Programming References | No programming required. |
| Feature References | Section 3, Features Call Pickup, Directed Call Pickup, Group |
| Operation Reference — User Manual | Telephone Features Call Pickup Deny |

Call Retrieving from a TAM (Telephone Answering Machine)

| | |
|---|---|
| Description | Allows an extension user to answer an incoming call received by TAM. |
| Conditions | None |
| Programming Reference | Section 4, System Programming [611] TAM (Telephone Answering Machine) Extension |
| Feature References | None |
| Operation Reference — User Manual | Telephone Features Call Retrieving from a TAM (Telephone Answering Machine) |

Call Splitting

| | |
|---|--|
| Description | Allows an extension user to alternate between two other parties. Placing the current call on hold allows the user to have a conversation with the other party. |
| Condition | • Call Splitting is not possible during a Doorphone Call or Paging. |
| Programming References | No programming required. |
| Feature References | None |
| Operation Reference — User Manual | Telephone Features Call Splitting |

CALL TRANSFER FEATURES – SUMMARY

Description

Call Transfer features allow a user to transfer a call to another party. This operation can be screened or unscreened. Screened call transfer is used when the user wants to announce the call to the other party before completing the transfer. Unscreened call transfer immediately releases the caller to the called party. An intercom or an outside call can be transferred to an extension or to an external party by the following.

Call Transfer, Screened – to Extension

Call Transfer, Screened – to an Outside (CO) Line

Call Transfer, Unscreened – to Extension

Call Transfer, Screened – to Extension

Description

Allows an extension user to voice-announce to the extension and transfer the call.

Condition

- If music on hold is enabled, music is sent to the caller while being transferred. Sending a cyclic tone or music on hold to the caller can be programmed by program [111].

Programming References

Section 4, System Programming

[005] One-Touch Transfer Using a DSS Button

[111] Hold Music Selection

Feature Reference

Section 3, Features

One-Touch Transfer Using a DSS Button

Operation Reference
— User Manual

Telephone Features

Call Transfer — to Extension

Call Transfer, Screened – to an Outside (CO) Line

Description

Allows a proprietary telephone user to voice-announce to an external party and transfer the call.

Conditions

- System programming determines which extensions are able to perform this feature.
- A single line telephone user cannot transfer a received call to an external party.
- If a call between two external parties is established using this feature, the duration of the call is restricted by a system timer. Hold Alarm/Hold Recall is generated to the extension who transferred the call 50 seconds before the time-out. Also, an alarm tone is generated to both outside parties 15 seconds before the time-out. The call is disconnected at the time-out unless the extension rejoins the conversation.
- If music on hold is enabled, music is sent to the caller while being transferred. Sending a cyclic tone or music on hold to the caller can be programmed by program [111].

Programming References**Section 4, System Programming**

[111] Hold Music Selection

[205] Outside-to-Outside (CO-to-CO) Line Duration Time Limit

[606] Call Transfer to an Outside (CO) Line

Feature Reference**Section 3, Features**

Hold Alarm/Hold Recall

Operation Reference
— User Manual**Telephone Features**

Call Transfer — to an Outside (CO) Line

Call Transfer, Unscreened – to Extension

Description

Allows a user to transfer an intercom or outside call directly to an extension party. After dialing the destination extension, the user waits for the ringback tone and replaces the handset.

Conditions

- If the destination party does not answer within the pre-determined time, the call will return to the user (Transfer Recall).
- This feature is possible when the destination is sending a ringback or busy tone. If the destination is busy, Camp-On Transfer occurs.
- The ringing signal pattern depends on the party being transferred: outside or extension call ringing.
- If music on hold is enabled, music is sent to the caller while being transferred. Sending a cyclic tone or music on hold to the caller is programmable by program [111].

Programming References

Section 4, System Programming

[005] One-Touch Transfer Using a DSS Button

[111] Hold Music Selection

[201] Transfer Recall Time

Feature Reference

Section 3, Features

One-Touch Transfer Using a DSS Button

Operation Reference — User Manual

Telephone Features

Call Transfer — to Extension


Call Waiting

Description

During a conversation, a call waiting tone notifies the user that another incoming call is waiting. They can answer the second call by disconnecting or placing the current call on hold. The call waiting tone can be activated or deactivated by dialing the appropriate feature number.

Conditions

- A call waiting tone is generated when an outside call is received, or when an extension caller executes Busy Station Signaling, or when a doorphone call is received, if Call Waiting is enabled.
- Setting Data Line Security temporarily cancels Call Waiting which has been turned on by an extension user.
- For proprietary telephone users, two types of call waiting tones (Tone 1 and Tone 2) are provided for an incoming outside call and intercom call. A proprietary telephone user can select the desired type by station programming. As for a doorphone call, Tone 1 is used as a call waiting tone (not changeable).
- Tone 2 depends on the assignment in program [423] “Outside (CO) Line Ringing Pattern Selection” for outside (CO) lines and program [115] “Extension Ringing Pattern Selection” for intercom calls.

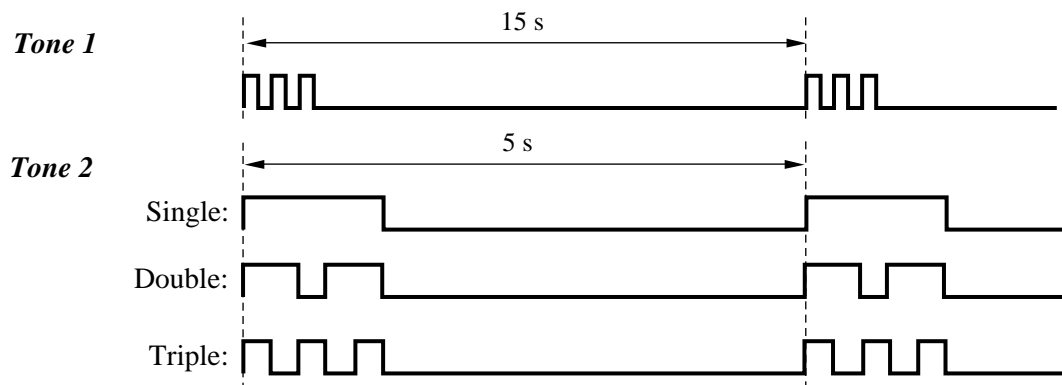

Programming References

Section 4, System Programming

[115] Extension Ringing Pattern Selection

[423] Outside (CO) Line Ringing Pattern Selection

[968] Incoming Lamp Control

Station Programming

User Manual

Call Waiting Tone Type Assignment

Feature References

Section 3, Features

Busy Station Signaling (BSS)

Data Line Security

Operation Reference — User Manual

Telephone Features

Call Waiting

Call Waiting from a Central Office

| | |
|---|--|
| Description | During a conversation, a call waiting tone offered by the Central Office notifies the user that another incoming call is waiting. They can answer the second call by placing the current call on hold. |
| Conditions | None |
| Programming References | Section 4, Features [110] Flash Key Mode [418] Flash Time |
| Feature Reference | Section 3, Features Call Waiting Caller ID Call Waiting |
| Operation Reference — User Manual | Telephone Features Call Waiting from a Central Office |

Caller ID

Description

Provides a display proprietary telephone user with the caller's information, such as their name and telephone number, on the outside (CO) line assigned to receive Caller ID service calls.

Conditions

- The outside (CO) lines where the Caller ID service is offered by a Central Office must be assigned.
- A display PT (KX-TA30830) user can record the caller information received by Caller ID (Call Log, Incoming feature).
- If the Caller ID service provides both the number and name, the user can select the initial display, number or name, by system programming.
- An assigned name in program [011] "System Speed Dialing Name Setting" will be displayed when the caller's telephone number matches one of System Speed Dialing numbers assigned in program [001] "System Speed Dialing Entry" and a Central Office does not provide the caller's name.
- If a Central Office provides a caller's name, the name from the Central Office will be displayed even when a name assigned in program [011] is effective.

Programming References

Section 4, System Programming

- [900] Caller ID Assignment
- [901] Caller ID Area Code Assignment
- [902] Caller ID Modification for Local Calls
- [903] Caller ID Modification for Long Distance Calls
- [904] Caller ID Log Priority Selection
- [906] Caller ID SMDR Format
- [907] Caller ID SMDR Printout Selection
- [915] Caller ID Checksum

Feature Reference

Section 3, Features

Call Log, Incoming

Operation References

— User Manual

Telephone Features

Call Information/Log, Incoming
Call Log, Incoming

Caller ID Call Waiting

Description

During a conversation, a call waiting tone offered by the Central Office informs the user that there is a call waiting. If the Caller ID service provides them with a caller's information, such as the name and telephone number, the new caller's information will be displayed (flashing) on their extension (KX-TA30830 only) during the assigned time. They can answer the second call by disconnecting the first call or placing it on hold.

Conditions

- The second caller information display timer can be programmed. If the user does not press the FLASH/RECALL button while the information is displayed (flashing), the display stops flashing. In this situation, the caller information is automatically recorded in the user's personal area and the user's Caller ID Indication — Personal button indicator lights if the call has been directed to the user. A call via an outside (CO) line assigned "Normal" in programs [414]-[416] "Outside (CO) Line Mode — Day/Night/Lunch" is automatically recorded in the common area and all corresponding user's Caller ID Indication — Common button indicators light. However in this case, if nobody has assigned the Caller ID Indication — Common button, the call information is recorded in an user's personal area that is connected to the lowest jack number and the user's Caller ID Indication — Personal button indicator lights.
- This feature is available during a conversation with an external party except for the following cases: (1) during a conference call, (2) while holding a call, (3) while transferring a call, and (4) during an outside-to-outside (CO-to-CO) line call.
- A contract with the Central Office may be required for the Call Waiting service. Consult the Central Office for details.

Programming References

Section 4, Features

- [900] Caller ID Assignment
- [908] Caller ID Call Waiting Time
- [913] Caller ID Call Waiting Assignment
- [914] Caller ID Call Waiting CAS Receive Time
- [915] Caller ID Checksum
- [968] Incoming Lamp Control

Feature References

Section 3, Features

Call Log, Incoming Call Waiting from a Central Office

Operation References — User Manual

Telephone Features

Call Information/Log, Incoming Caller ID Call Waiting

Calling Party Control (CPC) Signal Detection

Description

The Calling Party Control (CPC) Signal is an on-hook indication (disconnect signal) sent from the outside (CO) line when the telephone is hung up at the other end. To maintain efficient utilization of outside (CO) lines, the system monitors their state and when a CPC Signal is detected from a line, the system disconnects the line and alerts the extension with a reorder tone.

Conditions

- CPC Signal Detection is enabled or disabled for incoming and outgoing outside calls by system programming.
- Generally, CPC for Signal Detection works for incoming outside calls, and does not work for outgoing outside calls (except after they are placed on Call Hold or Exclusive Call Hold). In this case, if an extension user remains off-hook after an outgoing outside call is completed, the system will not release all the switches used to establish the connection. The connected outside (CO) line will continue to be in use. To prevent this, CPC Signal Detection can be programmed to work for outgoing outside calls.
- If a CPC Signal is detected during a Conference call, the line will be disconnected and the remaining two parties can resume their call.
- If a CPC Signal is detected during a call between a DISA caller and an extension or external party, the line will be disconnected.

Programming References

Section 4, System Programming

[420] Calling Party Control (CPC) Signal

[421] CPC Detection for Outgoing Calls

Feature References

None

Operation References

Not applicable.

Conference

Description

The system supports three-party conference calls, including external or internal parties. During a two-party conversation, the extension user can add a third party to their conversation, thereby establishing a conference.

Conditions

- Possible conference combinations are: 1-intercom and 2-outside calls; 2-intercom and 1-outside calls; and 3-intercom calls.
- A three-party call can also be established by Executive Busy Override.
- When a two-party call is changed to a three-party call or vice versa, a confirmation tone is sent to all three parties. The tone can be disabled.

Programming References

Section 4, System Programming
 [105] Conference Tone
Station Programming **User Manual**
 Flexible Button Assignment – Conference (CONF) Button

Feature Reference

Section 3, Features
 Conference, Unattended

Operation Reference — User Manual

Telephone Features
 Conference

Conference, Unattended

Description

When a proprietary telephone user is in a conference with two external parties, the user can leave the conference to allow the other two parties to continue the conversation. This is called an Unattended Conference. The user may return to the conference, if desired.

Conditions

- An Unattended Conference can be established when the extension is allowed to transfer a call to an outside (CO) line.
- The duration of an unattended conference is restricted by a system timer. Hold Alarm/Hold Recall is enabled at the extension who left the conference 50 seconds before the time-out. An alarm tone is generated to both outside parties 15 seconds before the time-out. The call is disconnected at the time-out unless the extension rejoins the conversation.

Programming References

Section 4, System Programming

[205] Outside-to-Outside (CO-to-CO) Line Duration Time Limit

[606] Call Transfer to an Outside (CO) Line

Feature References

Section 3, Features

Conference

Hold Alarm/Hold Recall

Limited Call Duration

Operation Reference — User Manual

Telephone Features

Conference, Unattended

Confirmation Tones

Description

When various features are completed, the system confirms the success of the operation by sending a confirmation tone to the extension user through the speaker of the telephone.


Confirmation tone 1:

- (a) Indicates that the new setting is different from the previous setting.
- (b) Sets or cancels Electronic Station Lockout.



Confirmation tone 2:

- (a) Indicates that the new setting is the same as the previous setting.
- (b) Also, sent when various features are successfully performed or accessed. (e.g., Call Hold, Automatic Callback Busy)

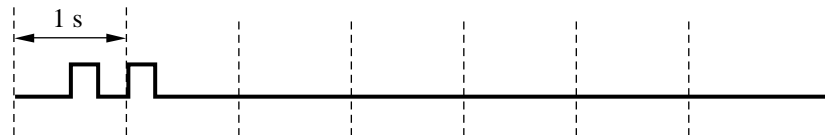


Confirmation tone 3:

Sent when a conversation is established just after dialing.
For example, when accessing the following features by their feature numbers:


- Conference
- Call Pickup
- Paging – External
- Paging Answer

This tone can be disabled by system programming so that the user can start talking immediately.

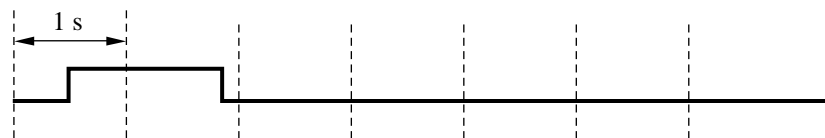

Confirmation tone 4:

Sent when changing a three-party call (created by Executive Busy Override or Conference) to a two-party call. This tone can be disabled by system programming.

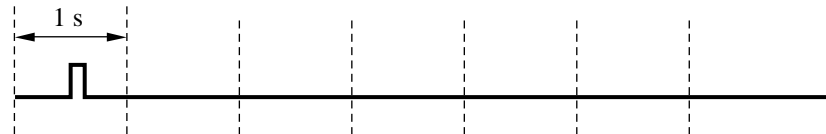**Condition**

- Confirmation Tones 1 and 2 are provided to reconfirm assigned features.

Programming References**Section 4, System Programming**

- [105] Conference Tone
- [106] External Paging Access Tone
- [117] Call Pickup Tone

Feature References

None

Operation References

Not applicable.

Data Line Security

Description

Data Line Security is a feature that can be set at individual extensions. Once set, communication between the extension and the other party is protected from signals such as Call Waiting, Hold Alarm/Hold Recall and Executive Busy Override. Data equipment or a facsimile may be connected to an extension jack so that the user can perform data communications. During communication, Data Line Security maintains secure data transmission against tones or interruptions from other extensions.

Conditions

None

Programming References

No programming required.

Feature References

Section 3, Features
Call Waiting
Executive Busy Override
Hold Alarm/Hold Recall

Operation Reference
— User Manual


Telephone Features
Data Line Security

Dial Tones, Distinctive

Description

Three types of dial tone patterns are available to give information about features activated on the telephone.

Dial tone 1: This is a normal dial tone. None of the features listed below are activated.

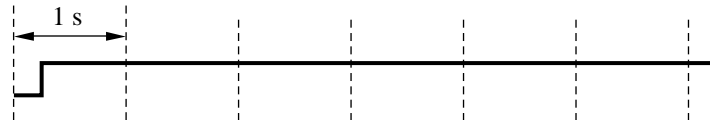


Dial tone 2: Sent when any one of the features below are set.

- Absent Message Capability
- Background Music (BGM) (for proprietary telephones only)
- Call Forwarding
- Call Pickup Deny
- Data Line Security
- Do Not Disturb (DND)
- Electronic Station Lockout
- Message Waiting (for proprietary telephones only)
- Pickup Dialing (for single line telephones only)
- Timed Reminder



Dial tone 3: Sent when performing Account Code Entry and sent when answering a Timed Reminder call.

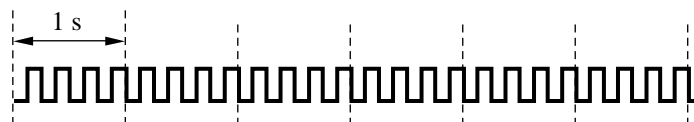

Conditions

None

Programming References

No programming required.

Feature References

None

Operation References

Not applicable.

Dial Type Selection

Description

Allows an extension user to select the desired dialing mode for each outside (CO) line regardless of the originating extension (rotary or tone). There are three dialing modes available.

DTMF (Dual Tone Multi-Frequency) Mode

The dialing signal from an extension, either tone or rotary, is converted to tone dialing. DTMF signals are transmitted to the outside (CO) line.

Pulse Dial (Rotary) Mode

The dialing signal from an extension, either tone or rotary, is converted to rotary dialing. Rotary pulses are transmitted to the outside (CO) line.

Call Blocking Mode

Set this mode for outside (CO) lines that can receive both tone and rotary dialing, but are under contract with the Central Office for rotary dialing only. When dialing to a line using a touchtone telephone, only rotary dialing is sent to the Central Office.

Conditions

- Extension users can temporarily convert the pre-assigned rotary dialing mode to DTMF mode (Pulse to Tone Conversion). DTMF mode cannot be changed to rotary.
- Either DTMF or rotary dialing can be assigned for the DISA (Direct Inward System Access) outgoing line. With DISA, pulse to tone conversion is not possible.
- If an outside (CO) line can receive both DTMF and pulse signals and is contracted for DTMF with a Central Office, the DTMF mode should be selected for the line. If it is contracted for rotary mode, the Call Blocking mode should be selected for the line.
- If a line is assigned to the Pulse Dial mode, select an appropriate pulse speed, if necessary.
- After a held call is retrieved, the dial mode returns to the one originally programmed for the outside (CO) line.

Programming References

Section 4, System Programming

[401] Dial Mode

[402] Pulse Speed Selection

Feature References

Section 3, Features

End-to-End DTMF Signaling
(Tone Through)

Pulse to Tone Conversion

Operation References

Not applicable.

Direct In Lines (DIL)

| | |
|-------------------------------|---|
| Description | Enables an incoming outside call to go directly to one extension. DIL places an incoming outside call to only one extension. This outside (CO) line can be used by multiple extension users to make calls, but can only be used by one extension to receive calls. DIL can have different destinations for the day, night and lunch modes (Time Service). |
| Condition | <ul style="list-style-type: none">• If the Station Hunting feature is assigned to the destination extension, the call will be hunted. |
| Programming References | Section 4, System Programming [414]–[416] Outside (CO) Line Mode — Day/Night/Lunch |
| Feature Reference | Section 3, Features Station Hunting |
| Operation References | Not applicable. |

Direct Inward System Access (DISA)

Description

Allows an outside caller to access specific system features after hearing a short beep as if the caller is an extension in the system. The caller can have direct access to features such as:

- Placing an incoming call to an extension, operator or ring group. The caller also has the option of dialing the route for an extension using a one digit number (DISA built-in auto attendant number) via DISA calls.
- Calling an external party.

One of the following must be selected to have direct access to these features: (1) None Security, (2) Trunk (Outside (CO) Line) Security, or (3) All Security. In None Security mode, any caller can make outside or intercom calls. In Trunk (Outside (CO) Line) Security mode, a pre-assigned DISA security code must be entered to make outside calls. In All Security mode, a pre-assigned DISA security code must be entered to make both outside and intercom calls. This prevents callers from making unauthorized calls. However, when making an outside call by Call Forwarding – to Outside (CO) Line, the call is allowed (exception).

Conditions

- The following items are required for the DISA feature.
 - “DISA1” must be assigned to outside (CO) line(s) as the outside (CO) line mode.
- After the DISA Delayed Answer Time expires and a ringback tone is returned to the caller, a DISA call will be answered. The caller can dial after the tone.
- This system can store up to ten programmable DISA built-in auto attendant numbers. Each number is one digit.
- The DISA built-in auto attendant number may be the same as the first digit of other numbers (extension number, etc.). To avoid confusion, the system waits for the second digit for a preprogrammed amount of time (default: 2 seconds). If the timer expires, the system will assume that the first digit is a DISA built-in auto attendant number.
- The DISA line can be used to originate outside calls if a security code (if required) has been dialed.
- This system can store up to four programmable DISA security codes. The number of digits of the codes can be programmed (default: 4 digits). Each code should be different.
- The duration of outside-to-outside (CO-to-CO) line calls can be limited. When the specified time expires, both lines are disconnected. A warning tone is sent to both parties 15 seconds before the time-limit.
- To detect the end of an outside-to-outside (CO-to-CO) line call, CPC Signal Detection can be assigned.

- If a wrong DISA security code is entered, three beeps will be heard. The call will be disconnected after three failed attempts.

Programming References

Section 4, System Programming

To enable the DISA feature

- [414]–[416] Outside (CO) Line Mode — Day/Night/Lunch
- [420] Calling Party Control (CPC) Signal
- [421] CPC Detection for Outgoing Calls
- [500] DISA Incoming Dialing Mode Selection
- [501] DISA Built-in Auto Attendant
- [506] DISA Busy Mode
- [510] DISA No Dial Mode
- [511] DISA Security Type
- [512] DISA Security Codes
- [516] DISA Incoming Assignment
- [518] DISA Tone Selection after the Security Code
- [530] DISA Security Codes Digits Selection

To set DISA timer values

- [205] Outside-to-Outside (CO-to-CO) Line Duration Time limit
- [504] DISA Delayed Answer Time
- [517] DISA AA Wait Time

To enable the Intercept Routing feature

- [408]–[410] Flexible Ringing Assignment — Day/Night/Lunch
- [507] DISA Intercept Mode
- [508] DISA Ringing Time before Intercept
- [509] DISA Ringing Time after Intercept
- [515] Intercept Time For Internal DISA

Feature Reference

Section 3, Features

Intercept Routing

Operation Reference — User Manual

Telephone Features

Direct Inward System Access (DISA)

When you enable the Outside – Outside Line Call feature of **Direct Inward System Access (DISA) function**, if a third party discovers the password (a DISA security code) of the system, you have a risk that they will make illegal phone calls using your telephone line, and the cost may be charged to your account.

In order to avoid this problem, we strongly recommend the following points:

- 1: Carefully maintain the secrecy of the password.
- 2: Specify a complicated password as long and random as you can make it.
- 3: Change the password frequently.


Condition

- The manager (jack number 01) can change the DISA security codes in program [512] “DISA Security Codes”, and change the number of digits of the DISA security codes in program [530] “DISA Security Codes Digits Selection” with their extension password.

Operation Reference — User Manual

Operator/Manager Service Features
 Manager Programming
 Extension Password Set (Manager only)

Flow chart of possible cases and results for DISA calls

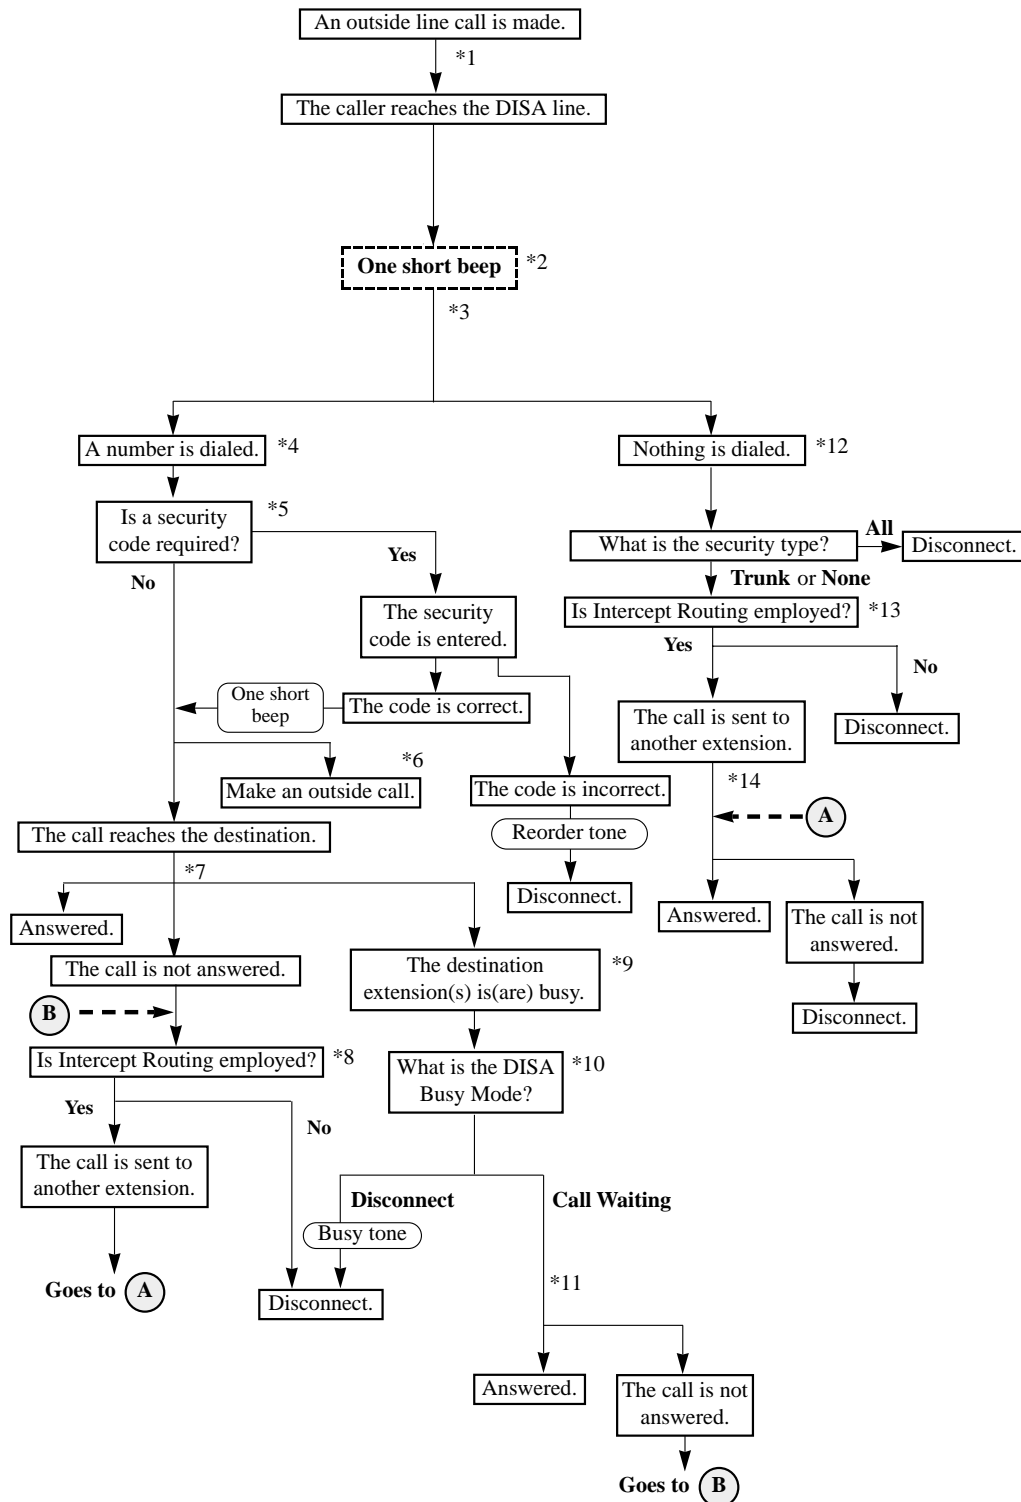

-
- *1: The DISA Delayed Timer starts. This is the time between a call reaching the system and being received. The time is assigned in program [504] “DISA Delayed Answer Time”.
 - *2: When a call is received and the system answers, the system sends a short beep to the caller.
 - *3: The Intercept Timer for Internal DISA starts. This is the time the system waits for the number sent by the caller. If nothing is entered by the caller during this time, the system will regard it as “Nothing is dialed”. The time is assigned in program [515] “Intercept Time for Internal DISA”.
 - *4: The system can accept the following numbers:
 - **100 through 199** as an extension number.
 - **81 through 83** as an outside (CO) line group line access number.
 - **9** as an automatic line access number when “Without AA” is assigned in program [500] “DISA Incoming Dialing Mode Selection”. Even if “With AA” is assigned, 9 is regarded as the automatic line access number if nothing is assigned to “9” in program [501] “DISA Built-in Auto Attendant”.
 - **0** as the operator call number when the operator is assigned in program [008] “Operator Assignment” and “Without AA” is assigned in program [500] “DISA Incoming Dialing Mode Selection”. Even if “With AA” is assigned, 0 is regarded as the operator call number if nothing is assigned to “0” in program [501] “DISA Built-in Auto Attendant”.
 - **0 through 9** as a built-in auto attendant number when “With AA” is assigned in program [500] “DISA Incoming Dialing Mode Selection”. The DISA AA Wait timer starts after receiving the first 1-digit number. If the timer expires, the system will assume that the first digit is an AA number. The time is assigned in program [517] “DISA AA Wait Time”.
 - *5: A security code is necessary when program [511] “DISA Security Type” is assigned as follows.
 - **All Security** – the system waits for a security code dialed after “✱”. When the security code matches a code programmed in program [512] “DISA Security Codes”, the system accepts the numbers after the code.
 - **Trunk Security** – the caller can access an outside (CO) line if the security code matches a code programmed in program [512] “DISA Security Codes”. The caller can access other destinations without the security code.

If the entered number is the same as one of the security codes, a short beep is heard. The beep can be disabled in program [518] “DISA Tone Selection after the Security Code”. If the number is wrong, three beeps will be heard. The call will be disconnected after three failed attempts.
 - *6: The caller must enter the desired phone number after hearing a dial tone from the Central Office.
 - *7: The DISA Ring Timer Before Intercept starts. The destination telephone(s) will ring for the time programmed in program [508] “DISA Ringing Time before Intercept”.
 - *8: The system treats the call according to program [507] “DISA Intercept Mode” as follows.
 - **Disconnect** – the call is disconnected.
 - **Intercept** – the call is sent to the extensions programmed in programs [408]–[410] “Flexible Ringing Assignment — Day/Night/Lunch”.

If the call is still not answered within the time programmed in program [509] “DISA Ringing Time after Intercept”, it will be disconnected.
 - *9: If the destination extension belongs to a hunting group and all extensions in the group are busy, the system checks the DISA Busy Mode. If the destination is the Ring group, the DISA Busy Mode will not work for the call. The system regards the call as unanswered.
-

- *10: The DISA Busy Mode is selected in program [506] “DISA Busy Mode”. There are two modes as follows:
 - **Disconnect** – the caller hears a busy tone and the call is disconnected.
 - **Call Waiting** – the destination extension hears the call waiting tone if they have enabled Call Waiting.
- *11: The DISA Ring Timer Before Intercept starts. The destination telephone(s) will ring for the time programmed in program [508] “DISA Ringing Time before Intercept”.
- *12: After the Intercept Timer for Internal DISA expires, the system regards that nothing was dialed .
- *13: The system treats the call according to program [510] “DISA No Dial Mode” as follows.
 - **Disconnect** – the call is disconnected.
 - **Intercept** – the call is sent to the extensions programmed in programs [408]–[410] “Flexible Ringing Assignment — Day/Night/Lunch”. If all of the extensions are assigned to “Disable”, the call will be disconnected.
- *14: The DISA Ring Timer After Intercept starts. The destination telephone(s) will ring for the time programmed in program [509] “DISA Ringing Time after Intercept”. If the call is not answered during the programmed time, the call will be disconnected.

Display, Call Information

Description

A display proprietary telephone shows the user the following call information.

Extension number and name

These are shown when calling or when called by an extension user, during an established intercom call, and while on-hook.

Display example: **102: Smith**

Dialed telephone number

This is shown when dialing the telephone number.

Display example: **91234567890**

Number or name of the caller

These are shown if the Caller ID feature is available.

Display examples: **1234567890**

Panasonic

Call duration

This is shown during an established outside call. The display remains for five seconds after the call is finished.

Display example: **CO 2 0:02'28**

Conditions

- Extension numbers and names are programmable. If an extension name is not stored, only the extension number will be displayed.
- The display does not show the intercom call duration.
- The outgoing outside call duration starts when the programmable timer expires.

Programming References

Section 4, System Programming

[009] Extension Number Assignment

[204] Call Duration Count Start Time

[604] Extension Name Setting

Feature Reference

Section 3, Features

Caller ID

Operation References

Not applicable.

Display, in Idle

Description

A display proprietary telephone can display: (1) date and time, (2) date and day of the week, or (3) extension number and name. One of the following displays is displayed while on-hook. The user can change the display by pressing the * key.

Conditions

- Display example (12 H): Month, Day, Time (AM/PM)

Jan 1 11:20PM

Display example (24 H): Month, Day, Time

Jan 1 23:20

Display example: Month, Day, Year, Day of the week

Jan 1, 2003 Wed

Display example: Extension number and name

123:Tony Viola

- The current date and time are set by system programming or the operator/manager service features.
- The user can select how to show the present time, 12-hour format or 24-hour format, by system programming.

Programming References

Section 4, System Programming

[000] Date and Time Setting

[010] LCD Time Display Selection

[604] Extension Name Setting

Feature References

None

Operation References

— User Manual

Operator / Manager Service Features

Date and Time Setting

Appendix

Display Examples

Display, Self-Extension Number

Description Allows a display proprietary telephone user to display his own jack number and extension number in the station programming mode.

Condition • Display example
 If the jack number is 02 and the extension number is 102:

Jack02<=>EXT102

Programming Reference
 Station Programming **User Manual**
 Self-Extension Number Confirmation (KX-TA30830 only)

Feature References None

Operation References Not applicable.

Display Contrast Adjustment

Description Allows a display proprietary telephone user to adjust the display contrast.

Condition • A lever on the telephone (Navigator key) is used to select one of three available levels.

Programming Reference
 Configuration **User Manual**
 Initial Settings — Display Contrast Adjustment (KX-TA30830 only)

Feature References None

Operation References Not applicable.

Do Not Disturb (DND)

| | |
|--------------------|--|
| Description | Allows an extension user to appear busy to incoming outside or intercom calls. This can be set or canceled by the extension user. |
| Conditions | <ul style="list-style-type: none">• If a proprietary telephone (PT) is not supplied with the FWD/DND button, it can be assigned to a flexible CO button.• DND does not work for the following calls: hold recalls or the Timed Reminder alarm.• A PT user in DND mode can answer a call by pressing the corresponding flashing button.• An extension in DND mode can be called by other extension users who are allowed to override DND in program [609] “Do Not Disturb Override”.• If the Call Forwarding feature has already been set, setting the DND feature will cancel Call Forwarding. |

Programming Reference

| | |
|---|--------------------|
| Station Programming | User Manual |
| Flexible Button Assignment – FWD/DND Button | |

Feature Reference

| |
|-------------------------------|
| Section 3, Features |
| Do Not Disturb (DND) Override |

Operation Reference — User Manual

| |
|---------------------------|
| Telephone Features |
| Do Not Disturb (DND) |

Do Not Disturb (DND) Override

| | |
|--------------------|---|
| Description | Allows a pre-assigned extension user to call another user who has set the Do Not Disturb feature. Dialing “2” enables the caller to override DND programmed on the called extension’s telephone and forces the telephone to ring. |
|--------------------|---|

| | |
|------------------|---|
| Condition | <ul style="list-style-type: none">• System programming determines which extension users can perform DND Override. |
|------------------|---|

Programming Reference

| |
|--------------------------------------|
| Section 4, System Programming |
| [609] Do Not Disturb Override |

Feature Reference

| |
|----------------------------|
| Section 3, Features |
| Do Not Disturb (DND) |

Operation Reference — User Manual

| |
|-------------------------------|
| Telephone Features |
| Do Not Disturb (DND) Override |

Door Opener

Description

Allows extension users to unlock the door for a visitor from their telephone. The door can be unlocked by extension users who have been programmed to enable this feature.

Conditions

- A user-supplied door opener must be installed to the door to be opened. Two door openers can be installed.
- The door opener will open the door even if a doorphone is not installed.
- The user can modify the door opener timer through system programming.

Connection Reference

Section 2, Installation

2.4.1 Doorphone and Door Opener Connection

Programming References

Section 4, System Programming

[703]–[705] Door Opener Assignment — Day/Night/Lunch

[709] Door Opener Time

Feature References

Section 3, Features

Doorbell/Door Chime

Doorphone Call

Operation Reference — User Manual

Telephone Features

Door Opener

Doorbell/Door Chime

Description

Extension users can receive not only ringing but also chiming as a doorphone call by connecting a doorbell/door chime to the relay connected with a door opener, when a visitor presses a doorphone button. They can recognize which doorphone call is coming by assigning a chime pattern (8 patterns) to each doorphone. Also they can select the ringing way (Ring/Chime/Ring & Chime) for each doorphone.

Conditions

• <Example>

— Taking the example that a doorbell/door chime is connected to Relay 2.
When only an extension connected to jack 01 can receive a doorphone call, each setting is as follows:

| Programming | Default | Change |
|--|---------------------------|--|
| [700]-[702] Doorphone Ringing Assignment — Day/Night/Lunch | All jacks: Enable | Jack 01: Enable Others: Disable |
| [703]-[705] Door Opener Assignment — Day/Night/Lunch | All jacks: Enable | Jack 01: Enable Others: Disable |
| [708] Doorphone Ringing Time | All doorphones: 15 s | All doorphones: 30 s |
| [710] Doorphone Ring/Chime Selection | All doorphones: Ring | All doorphones: Chime |
| [711] Doorphone Chime Assignment | All doorphones: Relay 2 | All doorphones: Relay 2 |
| [712] Doorphone Chime Pattern Selection | All doorphones: Pattern 1 | Doorphone 1: Pattern 1 Doorphone 2: Pattern 2 |

When default values are changed as shown in the above table, the system behaves in the following way:

- When a visitor presses the button of Doorphone 1:
 - A doorbell/door chime, connected to Relay 2, chimes with Pattern 1.
 - Extension 101 does not ring by setting “Doorphone 1: Chime” in program [710].
 - The INTERCOM button of Extension 101 flashes for 30 seconds. (PT only)
 - During 30 seconds, the extension user can answer the doorphone call at Extension 101 by going off-hook. And then he or she can unlock Door Opener 1, connected to Relay 1, by pressing “5”.
 - While having another call, the displayed item flashes when the Call Waiting feature is programmed.

- To perform the combination of the doorphone/door opener and the doorbell/door chime, connect the wire of the doorbell/door chime to the relay other than the relays used for door openers. Refer to the program [710].

Connection References

Section 2, Installation

- 2.4.1 Doorphone and Door Opener Connection
- 2.4.2 Doorbell/Door Chime Connection

Programming References

Section 4, System Programming

- [700]–[702] Doorphone Ringing Assignment — Day/Night/Lunch
- [703]–[705] Door Opener Assignment — Day/Night/Lunch
- [708] Doorphone Ringing Time
- [710] Doorphone Ring/Chime Selection
- [711] Doorphone Chime Assignment
- [712] Doorphone Chime Pattern Selection
- [968] Incoming Lamp Control

Feature References

Section 3, Features

- Door Opener
- Doorphone Call

Operation References

- User Manual

Telephone Features

- Call Waiting
- Door Opener
- Doorphone Call

Doorphone Call

Description

If a visitor presses the doorphone button, pre-assigned extensions will be called. The extension who answers the call can talk to the visitor. Any extension user can call a doorphone. The doorphones are also used for the Room Monitor feature.

Conditions

- Two doorphones can be installed.
- The extensions which can receive calls from each doorphone during the day, night and lunch modes must be programmed.
- If an extension user does not answer an incoming doorphone call within a programmed period of time, the ringing will stop and be canceled.
- A programmed extension user can open the door from the telephone to let the visitor in (Door Opener). This requires a user-supplied door opener.
- An access tone can be programmed to be sent to the monitored doorphone before monitoring starts.
- The ringing tone from the doorphone call is programmable.
- Doorphone 1 and Doorphone 2 cannot receive calls simultaneously. When one is in use, an extension user cannot have a conversation with the other.

Connection Reference

Section 2, Installation

2.4.1 Doorphone and Door Opener Connection

Programming References

Section 4, System Programming

- [700]–[702] Doorphone Ringing Assignment — Day/Night/Lunch
- [706] Door Ringing/Tone Pattern Selection
- [707] Doorphone Access Tone Selection
- [708] Doorphone Ringing Time
- [710] Doorphone Ring/Chime Selection
- [711] Doorphone Chime Assignment
- [712] Doorphone Chime Pattern Selection
- [968] Incoming Lamp Control

Feature References

Section 3, Features

Door Opener
Room Monitor

Operation References — User Manual

Telephone Features

Doorphone Call
Room Monitor

Electronic Station Lockout

Description

Allows an extension user to lock their station so that other users cannot make outgoing outside calls. Any 4-digit code can be used to lock the station. The same code is used to unlock it. The manager or operator can cancel this feature for all extensions.

Conditions

- Making intercom calls and receiving intercom or outside calls are permitted on the locked station.
- A toll restriction class can be assigned for this feature. Certain types of outgoing outside calls are permitted depending on the assigned toll restriction class.
- This feature will not block Emergency Calls. These calls are registered in [309] “Emergency Dial Number Set”.

Programming References

Section 4, System Programming

[108] Flash Mode for a Station Locked Extension

[312] Toll Restriction — Station Lock Boundary Class

Feature Reference

Section 3, Features

Toll Restriction — Station Lock Boundary Class

Operation References — User Manual

Telephone Features

Electronic Station Lockout

Operator/Manager Features

Electronic Station Lockout — CANCEL ALL

Emergency Call

| | |
|---|---|
| Description | Allows the extension user to call a pre-assigned emergency number regardless of any restrictions. |
| Conditions | <ul style="list-style-type: none">• Up to five emergency numbers can be stored. “911” is already stored by the default setting.• An emergency number can be dialed even in the following cases:<ul style="list-style-type: none">— in Account Code – Verify – All and Forced modes,— in any toll restriction COS number, and— in Electronic Station Lockout. |
| Programming Reference | Section 4, System Programming [309] Emergency Dial Number Set |
| Feature References | None |
| Operation Reference — User Manual | Telephone Features Emergency Call |

End-to-End DTMF Signaling (Tone Through)

| | |
|------------------------------|--|
| Description | DTMF signaling is required for access to special network services offered by some telephone companies. This system allows a proprietary telephone user to send DTMF signals to the line during a call in progress. |
| Conditions | <ul style="list-style-type: none">• If the line dial type is assigned to DTMF, the Tone Through mode is established automatically after the dialing sequence is finished and the call is established.• If the line dial type is assigned to pulse, the Tone Through mode is established after the dialing sequence is finished and the “*#” buttons are pressed (Pulse to Tone Conversion). |
| Programming Reference | [118] Pulse Restriction |
| Feature References | Section 3, Features Dial Type Selection Pulse to Tone Conversion |
| Operation References | Not applicable. |

Executive Busy Override – Extension

Description

Allows a pre-assigned extension user to interrupt an existing extension call, either between two inside parties or an external and inside party, to establish a three-party conference call. Extension users can prevent this feature from being executed by another extension user (Executive Busy Override Deny).

Conditions

- System programming determines which extension users can perform Executive Busy Override.
- This feature will not work if the extension has set Executive Busy Override Deny or Data Line Security.
- When a three-party call is changed to a two-party call or vice versa, a confirmation tone is sent to all three parties. This tone can be disabled by system programming.

Programming References

Section 4, System Programming

[105] Conference Tone

[608] Executive Busy Override

Feature References

Section 3, Features

Conference

Data Line Security

Operation Reference

— User Manual

Telephone Features

Executive Busy Override — Extension

Executive Busy Override – Outside (CO) Line

Description

Allows a proprietary telephone user to interrupt an existing outside call, either between two external parties or an external and inside party, to establish a three-party conference call. Extension users can prevent this feature from being executed by another extension user (Executive Busy Override Deny).

Conditions

- System programming determines which extension users can perform Executive Busy Override.
- This feature will not work if the extension has set Executive Busy Override Deny or Data Line Security.
- When a three-party call is changed to a two-party call or vice versa, a confirmation tone is sent to all three parties. This tone can be disabled by system programming.

Programming References

Section 4, System Programming

[105] Conference Tone

[608] Executive Busy Override

Feature References

Section 3, Features

Conference

Data Line Security

Operation Reference — User Manual

Telephone Features

Executive Busy Override — Outside (CO) Line

Extension Group

Description The system supports eight extension groups. Any member of an extension group can pick up a call directed to another group member (Group Call Pickup) or can make a voice announcement to another group member (Paging – Group). In addition, the Station Hunting feature can be enabled for each extension group. A DISA ring group is a specific extension group.

Condition • Each extension should belong to an extension group, but cannot belong to more than one group.

Programming Reference
 Section 4, System Programming
 [600] Extension Group Assignment

Feature References **Section 3, Features**
 Call Pickup, Group Paging – Group
 Direct Inward System Access (DISA) Station Hunting

Operation References Not applicable.

External Feature Access

Description

Allows an extension user to access the features of a host PBX or Central Office, such as Call Waiting, etc. This is performed by putting the current party on hold and sending a flash signal.

Conditions

- This feature is effective only during an outside call. However, if the FLASH feature (Disconnection signal) is activated by the user, this feature will not work.
- The flash time must be assigned as required by the host PBX or outside (CO) line.
- With a proprietary telephone, the FLASH/RECALL button is used to perform this feature . With a single line telephone, flashing the hookswitch and entering the feature number are used to perform this feature .
- During outside calls, a FLASH stored in System Speed Dialing, Personal Speed Dialing or One-Touch Dialing features as External Feature Access, not as a Flash.

Programming References

Section 4, System Programming

[110] Flash Key Mode

[418] Flash Time

Feature References

Section 3, Features

Flash

Host PBX Access

Operation Reference — User Manual

Telephone Features

External Feature Access

Flash

| | |
|---|---|
| Description | Allows a proprietary telephone user to disconnect the current call and originate another call without hanging up by using the FLASH/RECALL button. |
| Conditions | <ul style="list-style-type: none">• System programming may be required to perform this feature properly.• Pressing the FLASH/RECALL button re-starts the conversation duration, outputs an SMDR record and checks the toll restriction COS number again. |
| Programming References | Section 4, System Programming [110] Flash Key Mode [418] Flash Time [422] Disconnect Time |
| Feature Reference | Section 3, Features External Feature Access |
| Operation Reference — User Manual | Telephone Features Flash |

Handset/Headset

| | |
|-------------------------------|---|
| Description | The system supports the use of a headset on a proprietary telephone (KX-TA30830 only). |
| Conditions | <ul style="list-style-type: none">• The headset is an user supplied item.• To activate the headset, plug the headset into a proprietary telephone. |
| Programming References | No programming required. |
| Feature References | None |
| Operation References | Not applicable. |

Hands-free Answerback

| | |
|--|--|
| Description | Allows the speakerphone proprietary telephone user to talk to a caller without lifting the handset, if the user has set the hands-free answerback mode. If the user receives an intercom call in this mode, a hands-free conversation is established immediately after the user hears a beep and the caller hears a confirmation tone. |
| Conditions | <ul style="list-style-type: none">• The hands-free answerback mode is set or canceled by pressing the AUTO ANSWER button.• This feature does not work for calls from outside parties or doorphone calls. |
| Programming References | No programming required. |
| Feature References | None |
| Operation Reference —User Manual | Telephone Features Hands-free Answerback |


Hands-free Operation

| | |
|--|--|
| Description | Allows a proprietary telephone user to dial and talk to the other party without lifting the handset. Pressing the appropriate button provides the hands-free mode. |
| Conditions | <ul style="list-style-type: none">• This feature can be utilized by pressing one of the following buttons when the SP-PHONE/MONITOR button indicator is off: SP-PHONE button, MONITOR button, INTERCOM button, or CO button.• The KX-TA30850 can be used for hands-free dialing operations, etc., but cannot be used for a hands-free conversation. |
| Programming References | No programming required. |
| Feature References | None |
| Operation Reference —User Manual | Telephone Features Hands-free Operation |

Hold Alarm/Hold Recall

Description Prevents a call on hold from being kept waiting longer than a pre-determined time. If the timer expires, ringing or an alarm tone is generated as a reminder to the user who held the call. If the user is on-hook and their SP-PHONE/MONITOR button is off, the phone will ring. If the user is off-hook or in the hands-free mode when the timer expires, an alarm tone will be sent to the built-in speaker of a proprietary telephone (PT) or the handset receiver of a single line telephone at 15-second intervals.

- Conditions**
- Hold Recall and Hold Alarm can be disabled by programming.
 - During hold recall, a display PT indicates the held party.
 - An Alarm tone is sent as follows.

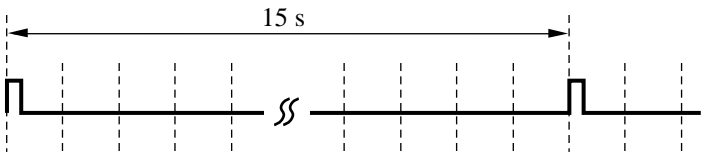

- While the Alarm tone is being sent, a display PT flashes the indication of the held party for five seconds at 15-second intervals in synch with the tone.
- This feature will not work if the extension has set Data Line Security.

Programming Reference

Section 4, System Programming
[200] Hold Recall Time

Feature References

| | |
|-------------------------------|-------------------------------------|
| Section 3, Features | |
| Call Hold – Intercom | Call Hold, Exclusive – Intercom |
| Call Hold – Outside (CO) Line | Call Hold, Exclusive – Outside (CO) |
| Data Line Security | Line |

Operation References Not applicable.

Host PBX Access

Description

The system may be installed behind an existing host PBX. This is performed by connecting a line from the host to an outside (CO) line in the Advanced Hybrid System.

Conditions

- A Host PBX Access Code is required to access outside (CO) lines of the host PBX.
- A pause, if programmed, can be inserted between the user-dialed Host PBX Access Code and the digits which follow (Automatic Pause Insertion). Program the pause time required by the Host PBX for that outside (CO) line group.
- Access to the host PBX during a conversation is also possible (External Feature Access).

Programming References

Section 4, System Programming

[403] Host PBX Access Codes

[417] Pause Time

Feature References

Section 3, Features

External Feature Access

Pause Insertion, Automatic

Operation References

Not applicable.

Intercept Routing

Description Provides automatic redirection of incoming outside calls via DISA. There are two types of Intercept Routing.

Condition

- The Intercept Routing feature works in the following cases.
 - (1) When nothing is dialed after the dial tone is sent to the caller.
 - (2) When the call is not answered within a programmed time. This is called Intercept Routing — No Answer (IRNA).

Programming References

Section 4, System Programming

[408]–[410] Flexible Ringing Assignment — Day/Night/Lunch

[507] DISA Intercept Mode

[508] DISA Ringing Time before Intercept

[509] DISA Ringing Time after Intercept

[510] DISA No Dial Mode

Feature References None

Operation References Not applicable.

Intercom Calling

Description

Allows an extension user to call another extension user within the system.

Conditions

- Extension numbers are assigned to all extensions by system programming.
- Names can be given to extension numbers by system programming. An extension number and a name, if programmed, will be shown on the display PT during an intercom call.
- DSS buttons assigned to flexible buttons permit one-touch access to an extension and provide the Busy Lamp Field. The MESSAGE button has no LED (Light Emitting Diode) indicator.
- After dialing an extension number, the user will hear one of the following.
 - Ringback tone: indicates the other extension is being called.
 - Busy tone: indicates the other extension is busy.
 - Do Not Disturb tone: indicates the other extension has assigned DND.
- A proprietary telephone user can select one of the Intercom Alert modes, Voice Call or Tone Call. Voice Call informs the called party of an incoming call with the calling party's voice, while Tone Call uses a ring tone. The calling party can only switch the pre-set mode at the called extension, from Voice Call to Tone Call.

Programming References

Section 4, System Programming

[009] Extension Number Assignment

[604] Extension Name Setting

Station Programming User Manual

Flexible Button Assignment – Direct Station Selection (DSS) Button

Intercom Alert Assignment

Feature References

Section 3, Features

Busy Lamp Field

Button, Direct Station Selection (DSS)

Operation References

—User Manual

Telephone Features

Intercom Calling

Switching to Tone Alert

LED Indication, Intercom

Description

The LED (Light Emitting Diode) indicator of the INTERCOM button indicates the line condition using a variety of lighting patterns. This allows the user to see the current state of the intercom line. The table below shows the lighting patterns and the intercom line conditions.

| INTERCOM Button | INTERCOM Line Condition |
|---------------------------|--|
| Off | Idle |
| Green On | Intercom call / Conference established |
| Flashing Green Slowly | Intercom call hold |
| Flashing Green Moderately | Intercom call exclusive hold |
| Flashing Green Rapidly | Incoming intercom / Doorphone call |

Conditions

None

Programming References

No programming required.

Feature Reference

Section 3, Features
Busy Lamp Field

Operation References

Not applicable.


LED Indication, Outside (CO) Line

Description

The LED (Light Emitting Diode) indicators of the buttons associated with outside (CO) lines show the line conditions using a variety of lighting patterns. This allows the user to see which lines are idle and which lines are in use. The table below shows the lighting patterns for different line conditions.

| CO Button | Outside (CO) Line Condition |
|---------------------------|---|
| Off | Idle |
| Green On | The user is using the line. |
| Flashing Green Slowly | The user has a held call or Hold Recall |
| Flashing Green Moderately | The user has one of the following: (1) exclusive hold, (2) outside-to-outside (CO-to-CO) line call, or (3) Conference, Unattended. |
| Flashing Red Rapidly | Incoming call |
| Red On | Other-use |
| Flashing Red Slowly | Other-hold* |
| Flashing Red Moderately | Local Carrier-Based Voice Mail Service* |

Flashing light patterns

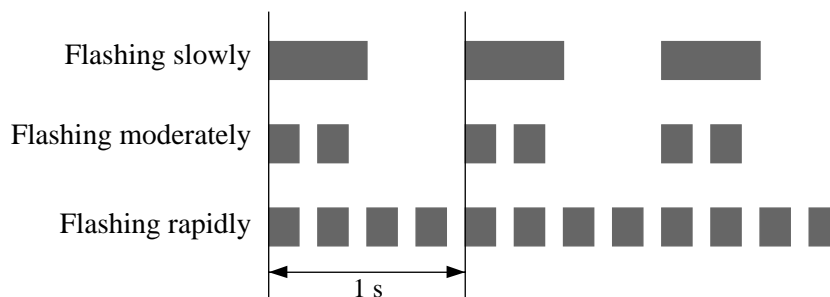

Condition

- Item with an * is only available on a Single-CO button.

Programming References

Station Programming **User Manual**
 Flexible Button Assignment – Group-CO (G-CO) Button,
 Other-CO (O-CO) Button,
 Single-CO (S-CO) Button

Feature References

Section 3, Features
 Button, Group-CO (G-CO) Button, Other-CO (O-CO)
 Button, Single-CO (S-CO)

Operation References

Not applicable.

Limited Call Duration

| | |
|------------------------------|--|
| Description | Limited Call Duration is a system programmable feature that disconnects an outside-to-outside (CO-to-CO) line call when a specific timer expires. A warning tone is sent to the caller 15 seconds before the time-limit. |
| Conditions | None |
| Programming Reference | Section 4, System Programming [205] Outside-to-Outside (CO-to-CO) Line Duration Time Limit |
| Feature References | Section 3, Features Call Forwarding – to an Outside (CO) Line Call Transfer, Screened – to an Outside (CO) Line Conference, Unattended Direct Inward System Access (DISA) |
| Operation References | Not applicable. |

Line Access, Automatic

Description

Allows an extension user to dial the automatic line access number (9) and access an idle line from the assigned outside (CO) lines.

Conditions

- Each extension is subject to system programming items to access outside (CO) lines.
- This feature requires a CO button (S-CO, G-CO or O-CO) assignment on a proprietary telephone (PT). Dialing the line access code selects a CO button on a PT according to the priority.
S-CO > G-CO > O-CO (on a hunted outside (CO) line)
- If Idle Line Preference – Outgoing is set on the telephone, the user can access an idle line only by going off-hook.
- After an outside (CO) line is seized, the system waits for a programmed time before dialing.

Programming References

Section 4, System Programming

[206] Dialing Start Time

[400] Outside (CO) Line Connection Assignment

[405]–[407] Flexible Outward Dialing Assignment — Day/Night/Lunch

[419] Automatic Designated Outside (CO) Line Access

Feature Reference

Section 3, Features

Outside (CO) Line Connection Assignment – Outgoing

Operation Reference — User Manual

Telephone Features

Outward Dialing – Line Access, Automatic

Line Access, Direct

Description

Allows a proprietary telephone user to select an outside (CO) line by pressing an idle CO button, which automatically establishes the hands-free operation mode and allows the user to perform On-Hook Dialing. The user does not need to press the SP-PHONE button, MONITOR button, or lift the handset.

Conditions

- There are three types of CO buttons which can be programmed at an extension: Single-CO button, Group-CO button and Other-CO button.
- Each extension is subject to system programming items to access outside (CO) lines.
- After an outside (CO) line is seized, the system waits for a programmed time before dialing.

Programming References

Section 4, System Programming

[206] Dialing Start Time

[400] Outside (CO) Line Connection Assignment

[405]–[407] Flexible Outward Dialing Assignment — Day/Night/Lunch

Station Programming User Manual

Flexible Button Assignment – Group-CO (G-CO) Button,
Other-CO (O-CO) Button,
Single-CO (S-CO) Button

Feature References

Section 3, Features

Button, Group-CO (G-CO)

Button, Other-CO (O-CO)

Button, Single-CO (S-CO)

Outside (CO) Line Connection Assignment – Outgoing

Operation Reference — User Manual

Telephone Features

Outward Dialing – Line Access, Automatic,

Line Access, Individual,

Line Access, Outside (CO) Line Group

Line Access, Individual

Description Allows a proprietary telephone user one-button access to an outside (CO) line without having to dial a line access code.

Conditions

- Each extension is subject to system programming items to access outside (CO) lines.
- This feature requires a Single-CO (S-CO) button assigned to a proprietary telephone.
- After an outside (CO) line is seized, the system waits for a programmed time before dialing.

Programming References

Section 4, System Programming
[206] Dialing Start Time
[400] Outside (CO) Line Connection Assignment
[405]–[407] Flexible Outward Dialing Assignment — Day/Night/Lunch
Station Programming User Manual
Flexible Button Assignment – Single-CO (S-CO) Button

Feature References **Section 3, Features**
Button, Single-CO (S-CO)
Outside (CO) Line Connection Assignment – Outgoing

Operation Reference **Telephone Features**
—User Manual Outward Dialing – Line Access, Individual

Line Access, Outside (CO) Line Group

Description

Allows an extension user to access an outside (CO) line group. An idle line is selected from the outside (CO) line group. To specify an outside (CO) line group, dial the feature number (8) and the desired outside (CO) line group number (1 through 3). A proprietary telephone user can also specify an outside (CO) line group by pressing a Group-CO button.

Conditions

- An idle line is selected in sequence from the lines in the specified outside (CO) line group.
- Group-CO buttons must be programmed prior to use.
- If Idle Line Preference – Outgoing is set on the telephone, the user can access an idle line only by going off-hook.
- Each extension is subject to system programming items to access outside (CO) lines.
- After an outside (CO) line is seized, the system waits for a programmed time before dialing.

Programming References

Section 4, System Programming
 [206] Dialing Start Time
 [400] Outside (CO) Line Connection Assignment
 [404] Outside (CO) Line Group Assignment
 [405]–[407] Flexible Outward Dialing Assignment — Day/Night/Lunch
Station Programming User Manual
 Flexible Button Assignment – Group-CO (G-CO) Button

Feature References

Section 3, Features
 Button, Group-CO (G-CO)
 Outside (CO) Line Connection Assignment – Outgoing
 Outside (CO) Line Group

Operation Reference — User Manual

Telephone Features
 Outward Dialing – Line Access, Outside (CO) Line Group

Line Preference – Incoming (No Line/Prime Line/Ringing Line)

Description

A proprietary telephone user can select the method used to answer incoming calls from the following three line preferences.

- (1) No Line Preference
No line is selected when the user goes off-hook. They must select a line to answer an incoming call.
- (2) Prime Line Preference
The user can assign a prime line beforehand and answer a call on that line, when multiple calls are received simultaneously.
- (3) Ringing Line Preference
When the user goes off-hook, they can answer a call ringing at their telephone.

Conditions

- Setting a new line preference feature will cancel the previous setting.
- If Prime Line Preference is selected and an incoming call arrives from a line other than the prime line, it cannot be answered just by going off-hook. The Prime Line should be assigned to a Single-CO button.
- If Ringing Line Preference is selected, going off-hook during the delay time will not answer a line programmed for “delayed ringing”.
- A single line telephone is always set to Ringing Line Preference and cannot be changed.

Programming References

Section 4, System Programming

[408]–[410] Flexible Ringing Assignment — Day/Night/Lunch

[411]–[413] Delayed Ringing Assignment — Day/Night/Lunch

Station Programming User Manual

Flexible Button Assignment – Group-CO (G-CO) Button,
Other-CO (O-CO) Button,
Single-CO (S-CO) Button

Preferred Line Assignment – Incoming

Feature References

None

Operation Reference

—User Manual

Basic Operation

Receiving Calls

Description

(1) Idle Line Preference:

(2) **No Line Preference:**

(3) Prime Line Preference:

Conditions

- ## Programming References

Station Programming User Manual

Preferred Line Assignment – Outgoing

Section 3, Features

Operation Reference

— User Manual

Features 3-81

Local Carrier-Based Voice Mail Service

Description

The system supports voice mail service, which is an answering system offered by the telephone company, to notify the called party of a message waiting. After subscription, the voice mail system can answer calls automatically instead of the PBX when the line is busy or calls are not answered, and callers can leave their messages in a mailbox provided by the telephone company.

The Message/Ringer Lamp will light red and the corresponding S-CO button will flash red moderately after the mailbox has received messages, on a Panasonic proprietary telephone (PT).

This feature is available only for PTs.

Conditions

- The system supports both the Stutter dial tone method and FSK method assigned on an outside (CO) line basis in program [435] “Local Carrier-Based Voice Mail Signaling Assignment”.
- The Message/Ringer Lamp lights red and the corresponding S-CO button flashes red moderately when a message has been recorded and stored in the mailbox of the telephone company. Going off-hook, pressing the flashing S-CO button (red, moderately) and then pressing the MESSAGE button allows a PT user to access the voice mail system and listen to the messages stored in the mailbox.
- The voice mail service access number can be up to 32 digits long, assigned on an outside (CO) line basis in program [436] “Local Carrier-Based Voice Mail Access Dial Assignment”. During this programming, pressing the INTERCOM (SECRET) button before and after any confidential parts of the number allows a PT user to prevent the display of all or part of a number. (Refer to Section 3 “Secret Dialing”).
- In program [437] “Extension Access to Local Carrier-Based Voice Mail Assignment”, the user can program which extensions can access the voice mail service on an outside (CO) line basis. More than one CO line can be assigned to one extension.
- When an outside (CO) line is set for “Stutter” in program [435] “Local Carrier-Based Voice Mail Signaling Assignment” and the user seizes the outside (CO) line, they will hear a stutter dial tone if a message is in their voice mail box. Approximately 5 seconds after the user hangs up one of the contracted outside (CO) lines, or approximately 3 minutes 46 seconds after the phone stops ringing, the PBX automatically seizes the line and checks if a message has been recorded. If a new message was recorded in the mailbox of the telephone company, the Message/Ringer Lamp lights red and the corresponding S-CO button flashes red moderately.
- If the voice mail service uses a stutter dial tone and the recorded message is over 3 minutes long, in some cases the Message/Ringer Lamp may not light and the corresponding S-CO button may not flash.
- A contract with the telephone company may be required for Local Carrier-Based Voice Mail Service. Consult the telephone company for details.

Programming References

Section 4, System Programming

- [435] Local Carrier-Based Voice Mail Signaling Assignment
- [436] Local Carrier-Based Voice Mail Access Dial Assignment
- [437] Extension Access to Local Carrier-Based Voice Mail Assignment

Feature References

Section 3, Features

Secret Dialing

Operation Reference — User Manual

Telephone Features

Local Carrier-Based Voice Mail Service

Lockout

Description

If one party in a conversation goes on-hook, both parties will be disconnected from the speech path automatically. This feature applies to extension and outside calls. A reorder tone is sent to the off-hook party before it is disconnected.

Condition

- For a single line telephone, if nothing is dialed within a certain period of time after the other party goes on-hook, a reorder tone will be sent to the single line telephone and then it will be disconnected from the speech path.

Programming References

No programming required.

Feature References

None

Operation Reference — User Manual

Telephone Features

Lockout

Log-In/Log-Out

Description

Assigns an extension to join (log-in) or leave (log-out) a hunting or ring group. Extensions in log-out status will not receive calls by Station Hunting or ring group but will receive other calls, unlike the DND feature.

Conditions

- There should be at least one extension that is in log-in status.
- The lighting patterns and status of the Log-In/Log-Out button are shown below.

| lighting pattern | Log-In/Log-Out button Status |
|------------------|------------------------------|
| Red On | Log-Out |
| Off | Log-In |

Programming Reference

Station Programming User Manual
Flexible Button Assignment – Log-In/Log-Out Button

Feature References

Section 3, Features
Direct Inward System Access (DISA)
Ring Group
Station Hunting

Operation Reference — User Manual

Telephone Features
Log-In/Log-Out

Manager Extension

Description

The extension connected to Jack 01 becomes the system manager. This extension can perform system programming and the following manager services.

- Canceling the Call Log Lock in the Common Area
- Canceling the Call Log Lock in the Personal Area and Electronic Station Lockout
- Changing the Day/Night/Lunch mode manually
- Clearing the call logs in the common area
- Setting/Canceling/Confirming the Timed Reminder (Wake-up Call) remotely
- Setting the Date and Time
- Setting the extension passwords
- Setting the treatment of the 301st call log in the common area

Conditions

None

Programming References

No programming required.

Feature References

None

Operation Reference
— User Manual

Operator/Manager Service Features

Message Waiting

Description

The system supports the feature to notify the called party of a message waiting. A proprietary telephone user with a MESSAGE button, knows there is a message if the Message/Ringer Lamp lights red. Pressing the MESSAGE button allows the user to call back the party that called.

Conditions

- Canceling the message can be performed from the extension sending it or from the extension receiving it.
- Messages are always left at the original extension. They cannot be sent to a Call Forwarding or Station Hunting destination.

Programming Reference

Station Programming User Manual
Flexible Button Assignment – Return to Message Waiting (MESSAGE) Button

Feature Reference

Section 3, Features
Call Forwarding
Message Waiting for Another Extension
Station Hunting

Operation Reference —User Manual

Telephone Features
Message Waiting

Message Waiting for Another Extension

Description

Allows a proprietary telephone user to be notified that there is a message waiting at another extension(s) by the red lit LED indicator on the Another Extension Message Waiting button on their own extension. Pressing the lit Another Extension Message Waiting button enables the user to call back the party that called.

Conditions

- System Programming determines which user can perform this feature.
- When the Message/Ringer Lamp on another extension lights red, the LED indicator on the Another Extension Message Waiting button also lights red.
- More than one Another Extension Message Waiting button can be assigned on one extension.
- After calling back all the called parties, the LED indicator on the Another Extension Message Waiting button on your extension and the Message/Ringer Lamp on another extension will go out simultaneously.
- The user can cancel all messages left at another extension by a feature number.
- The user can lock the Message Waiting for Another Extension feature so that another extension cannot check and/or clear messages left at the user's extension. The operator or manager can cancel the lock.

Programming References

Section 4, System Programming
 [618] Message Waiting for Another Extension
Station Programming **User Manual**
 Flexible Button Assignment – Another Extension Message Waiting
 Button

Feature Reference

Section 3, Features
 Message Waiting

Operation References — User Manual

Telephone Features
 Message Waiting for Another Extension
 Message Waiting for Another Extension Lock
Operator/Manager Service Features
 Electronic Station Lockout — CANCEL ALL

Microphone Mute

| | |
|---|---|
| Description | Allows a proprietary telephone user to turn off the microphone for privacy. |
| Conditions | <ul style="list-style-type: none">• The user's voice will only be muted during a hands-free conversation.• The user can hear the other party's voice during Microphone Mute. |
| Programming References | No programming required. |
| Feature References | None |
| Operation Reference — User Manual | Telephone Features Microphone Mute (— for KX-TA30820/KX-TA30830 only) |

Mixed Station Capacities

| | |
|-------------------------------|--|
| Description | This system supports a wide range of telephone sets, not only Proprietary Telephones (PT) in the Advanced Hybrid System, but also single line rotary telephones (10 pps/20 pps, using dial pulse signals) and single line push-button dialing telephones (touch tone). The hybrid method used in this system allows any telephone to be connected to an extension modular jack without an adaptor. |
| Condition | <ul style="list-style-type: none">• If a telephone is replaced with another one, the previous stored data (such as button features) remains. |
| Connection Reference | Section 2, Installation 2.3.4 Extension Connection |
| Programming References | No programming required. |
| Feature References | None |
| Operation References | Not applicable. |

Music on Hold

| | |
|------------------------------|---|
| Description | While an external party is on hold, music is automatically activated. |
| Conditions | <ul style="list-style-type: none">• Operations such as Call Hold, Exclusive Call Hold or Call Transfer activate Music on Hold.• A user-supplied external music source, such as a radio, must be connected to the system. One external music source can be connected to the system.• A music source is used for Music on Hold and/or BGM. System programming may require enabling Music On Hold. |
| Connection Reference | Section 2, Installation 2.3.6 External Music Source Connection |
| Programming Reference | Section 4, System Programming [111] Hold Music Selection |
| Feature Reference | Section 3, Features Background Music (BGM) |
| Operation References | Not applicable. |

One-Touch Dialing

Description

One-Touch Dialing offers a proprietary telephone (PT) user one-touch access to a desired party or system feature. This is activated by storing an extension number, telephone number or a feature number (up to 24-digits) in an One-Touch Dialing button. The number of buttons available depends on the type of PT. One-Touch Dialing buttons can be programmed to flexible buttons.

Conditions

- An account code can be stored into an One-Touch Dialing button.
- Speed Dialing, One-Touch Dialing and manual dialing can be used at the same time.
- The user can store a number consisting of 25 digits or more by dividing it and storing it in two One-Touch Dialing buttons. In this case, the line access code should be stored in the first button.

Programming Reference

Station Programming **User Manual**
Flexible Button Assignment – One-Touch Dialing Button

Feature References

None

Operation Reference — User Manual

Telephone Features
One-Touch Dialing

One-Touch Transfer Using a DSS Button

Description

This feature, if programmed, allows the proprietary telephone user to hold an outside call and quickly transfer it to an extension. While talking to an external party, pressing a DSS button on a proprietary telephone provides automatic hold and transfer. There is no need to press the TRANSFER button. The extension starts ringing immediately.

Condition

- If “With Transfer” is assigned, the user transfers an outside call by pressing the TRANSFER button followed by the DSS button.

Programming Reference

Section 4, System Programming
[005] One-Touch Transfer Using a DSS Button

Feature Reference

Section 3, Features
Button, Direct Station Selection (DSS)

Operation Reference — User Manual

Telephone Features
Call Transfer — to Extension

Operator

Description

The system supports one operator. Any extension can be designated as the operator.

The extension assigned as the operator has the ability to perform the following operations.

- Canceling the Call Log Lock in the Common Area
- Canceling the Call Log Lock in the Personal Area and Electronic Station Lockout
- Changing the Day/Night/Lunch mode manually
- Clearing the call logs in the common area
- Setting/Canceling/Confirming the Timed Reminder (Wake-up Call) remotely
- Setting the Date and Time
- Setting the treatment of the 301st call log in the common area

Conditions

None

Programming Reference

Section 4, System Programming
[008] Operator Assignment

Feature References

None

Operation Reference
— User Manual

Operator/Manager Service Features

Operator Call

Description

Allows an extension user to call an extension operator by dialing the feature number. One extension can be assigned as the operator.

Condition

- If an operator is not assigned, this feature is not available and the user will hear a reorder tone.

Programming Reference

Section 4, System Programming
[008] Operator Assignment

Feature References

None

Operation Reference
— User Manual

Telephone Features
Operator Call

Outside (CO) Line Connection Assignment

| | |
|------------------------------|--|
| Description | This allows a user to specify which outside (CO) lines are connected to their system. This prevents the user from calling a line which is not connected. When the user uses Automatic Line Access, an idle line is selected from the ones connected. |
| Conditions | <ul style="list-style-type: none">• If the user tries to make a call with a disconnected line, a reorder tone will sound to indicate that the line is out of use.• This is effective for all outgoing calls including DISA. |
| Programming Reference | Section 4, System Programming [400] Outside (CO) Line Connection Assignment |
| Feature References | None |
| Operation References | Not applicable. |

Outside (CO) Line Connection Assignment – Outgoing

| | |
|-------------------------------|--|
| Description | Allows a user to assign an outside (CO) line used for outgoing calls. This feature is useful in preventing unauthorized toll calls. |
| Conditions | <ul style="list-style-type: none">• When an extension user tries to make an outside call on a disallowed outside (CO) line, a reorder tone is sent to indicate that the user cannot use that outside (CO) line.• Day, Night and Lunch Service are programmed individually. (Time Service) |
| Programming References | Section 4, System Programming [405]–[407] Flexible Outward Dialing Assignment — Day/Night/Lunch |
| Feature References | None |
| Operation References | Not applicable. |

Outside (CO) Line Group

Description

Outside (CO) lines can be grouped into up to three outside (CO) line groups. This allows extensions to call outside parties without designating a specific outside (CO) line, since an outside (CO) line is automatically selected from the designated outside (CO) line group. All outside (CO) lines belong to an outside (CO) line group.

Condition

- Each outside (CO) line can only belong to one outside (CO) line group.

Programming Reference

Section 4, System Programming
[404] Outside (CO) Line Group Assignment

Feature References

None

Operation References

Not applicable.

PAGING FEATURES – SUMMARY

Description

Paging allows a user to make a voice announcement to many people at the same time. Their message is announced over the built-in speakers of proprietary telephones and/or an external speaker (external pager). The paged person can answer the page from a nearby telephone. Making and answering a page is possible from either a proprietary or single line telephone. The user can page with a call on hold in order to transfer the call (Paging and Transfer). It is also possible to deny a page.

The paging features are classified as follows.

Paging – All

Paging – External

Paging – Group

Paging – All

Description

Allows the user to make a voice announcement from the speakers of proprietary telephones and external paging device (external pager).

Conditions

- A confirmation tone is sent to the extensions, when a page is sent or answered.
- A confirmation tone is sent to the external pager, before the voice announcement. The tone can be disabled.
- A ringing or busy extension cannot receive a page.

Connection Reference

Section 2, Installation

2.3.5 External Pager (Paging Equipment) Connection

Programming Reference

Section 4, System Programming

[106] External Paging Access Tone

Feature References

None

Operation References — User Manual

Telephone Features

Paging — All

Paging and Transfer

Paging — ANSWER

Paging — DENY

Paging – External

| | | |
|--|---|--------------------------------------|
| Description | Allows the user to make a voice announcement using an external paging device (external pager). One pager can be connected. Any telephone user can answer the Paging – External. | |
| Conditions | <ul style="list-style-type: none"> • An external pager must be connected beforehand. • A confirmation tone is sent to the extensions and external pager, when a page is sent. The tone to the external pager can be disabled. | |
| Connection Reference | Section 2, Installation 2.3.5 External Pager (Paging Equipment) Connection | |
| Programming Reference | Section 4, System Programming [106] External Paging Access Tone | |
| Feature References | None | |
| Operation References — User Manual | Telephone Features Paging — External Paging — ANSWER | Paging and Transfer Paging — DENY |

Paging – Group

| | | |
|--|---|--------------------------------------|
| Description | Allows the user to select an extension group and make a voice announcement. All the proprietary telephones in the group will receive the page. If a member of the paged group answers the page, they can talk to the person through the connected line. | |
| Conditions | <ul style="list-style-type: none"> • To select all groups, page all of the extensions. • A confirmation tone is sent when a page is sent or answered. | |
| Programming References | No programming required. | |
| Feature Reference | Section 3, Features Extension Group | |
| Operation References — User Manual | Telephone Features Paging — External Paging — ANSWER | Paging and Transfer Paging — DENY |

Paralleled Telephone

Description

Any analog proprietary telephone can be connected in parallel with single line devices, such as a single line telephone, facsimile and data terminal.

When a parallel connection is made, an extension user can make and answer a call using either telephone.

Conditions

- A proprietary telephone (PT) can perform normal operations even if program [610] is assigned to “Disable”.
- If one telephone goes off-hook while the other telephone is having a call, a three-party call will be established. If one user goes on-hook, the other user will continue with the call.
- When receiving a call, both the PT and the single line telephone will ring except when the PT is in the Hands-free Answerback mode.
- When the single line telephone is operating, the display and LED indicator on the paired PT will work as if the PT is in operation.
- The extension user cannot originate a call from the single line telephone if the PT is:
 - playing BGM,
 - in programming mode, or
 - receiving a page announcement over the built-in speaker.
- The Call Waiting tone can only be heard by a PT.
- The paired single line telephone will not ring in the following cases.
 - When the PT user sets the Hands-free Answerback feature.
 - When the voice alerting mode is set on the PT
 - When calling an extension from a doorphone.
- The paired single line telephone cannot use the following features.
 - Call Splitting
 - Caller ID Call Waiting
 - Conference
 - Door Opener while talking to the doorphone
 - External Feature Access
 - Pickup Dialing
- The paired single line telephone user should not enter “49” before the account code. They cannot enter the account code during or after a call.

Connection Reference

Section 2, Installation

2.3.7 Paralleled Telephone Connection (for a Proprietary Telephone and a Single Line Telephone)

Programming Reference

Section 4, System Programming

[610] Paralleled Telephone Connection

Feature References

None

Operation Reference

— User Manual

Telephone Features

Paralleled Telephone Connection

Pause Insertion, Automatic

Description

This feature is used to insert a pre-assigned pause between the outside (CO) line access number, the host PBX code, carrier code or code assigned in program [311] and the dialed number.

Conditions

- This feature requires programming the host PBX codes, carrier codes and automatic pause insertion codes as well as the pause duration beforehand.
- This feature works for Speed Dialing, One-Touch Dialing, Last Number Redial, Saved Number Redial, Pickup Dialing, Call Forwarding – to Outside (CO) Line as well as for normal calls.
- Pressing the PAUSE button in a dialing number inserts a pause for a pre-assigned time.

Programming References

Section 4, System Programming

- [300] Carrier Code Assignment
- [311] Automatic Pause Insertion Codes
- [403] Host PBX Access Codes
- [417] Pause Time

Feature References

Section 3, Features

- Host PBX Access
- Toll Restriction

Operation References

Not applicable.

Personal Speed Dialing

Description

Allows an extension user to store frequently dialed numbers in order to place a call quickly. This is done by dialing the feature number and a speed dial number, from 0 to 9. Up to 10 numbers with a maximum of 24 digits per number can be stored in each telephone.

Conditions

- If a single line telephone user wants to check the stored number, exchange the single line telephone with a display proprietary telephone. The display PT user can check the stored numbers by pressing the feature number.
- A rotary telephone user cannot use this feature.

Programming References

No programming required.

Feature Reference

Section 3, Features
One-Touch Dialing

Operation Reference — User Manual

Telephone Features
Personal Speed Dialing

Pickup Dialing

Description

Allows a single line telephone user to make an outgoing call by going off-hook, if the user has stored the telephone number beforehand. This feature is also known as Hot Line.

Conditions

- A proprietary telephone and rotary telephone cannot program this feature.
- The user uses a feature number to activate or deactivate pickup dialing.
- If the feature is activated and the user goes off-hook, a dial tone will be generated for the delay time and then dialing will start. During the delay time, the user can dial another party overriding the Pickup Dialing feature.

Programming Reference

Section 4, System Programming
[203] Pickup Dial Delay Time

Feature References

None

Operation Reference — User Manual

Telephone Features
Pickup Dialing (Hot Line) (— Single Line Telephone only)

Power Failure Transfer

Description

If a power failure occurs, a specific extension telephone is automatically connected to a specific outside (CO) line. This provides an outside (CO) line call between the following extension and outside (CO) line.

Outside (CO) line 1 is connected to extension jack number 01. A single line telephone can work during a power failure. Connect a single line telephone to extension jack number 01.

Conditions

- All other conversations, except the above combinations, are disconnected during a power failure.
- Only an outside (CO) line can have a conversation. All other features do not work.

Connection References

Section 2, Installation

2.3.3 Outside (CO) Line Connection

2.3.4 Extension Connection

2.5 Auxiliary Connection for Power Failure Transfer

Programming References

No programming required.

Feature References

None

Operation Reference — User Manual

Telephone Features
Power Failure Transfer

Pulse to Tone Conversion

Description

This feature allows the extension user to change from pulse dialing to tone (DTMF) dialing so that the user can access special services, such as computer telephone services or Voice Mail, which require tones.

Conditions

- This feature only works for outside (CO) lines which have set the Pulse Dialing mode or Call Blocking mode.
- The user can select the dial mode for each outside (CO) line using the Dial Type Selection feature.
- Changing from tone to pulse is not possible.

Programming References

Section 4, System Programming

[119] Redialing After Pulse to Tone Conversion

[401] Dial Mode

Feature Reference

Section 3, Features

Dial Type Selection

Operation Reference — User Manual

Telephone Features

Pulse to Tone Conversion

Redial, Last Number

| | |
|---|--|
| Description | Every telephone in the system automatically saves the last telephone number dialed to an outside (CO) line and allows the extension user to dial the same number again. |
| Conditions | <ul style="list-style-type: none">• With a proprietary telephone, the REDIAL button is used to carry out Last Number Redial. With a single line telephone, the feature number is used. |
| Programming References | No programming required. |
| Operation Reference — User Manual | Telephone Features Redial, Last Number |

Redial, Saved Number

| | | | | | |
|---|--|--------------------------------------|--------------------|--|--|
| Description | Allows a proprietary telephone user to save a telephone number and redial the number afterwards. The user can store it during a conversation with an outside (CO) line. The saved number can be redialed until another number is stored. | | | | |
| Conditions | <ul style="list-style-type: none">• As the SAVE button is not provided on a PT, a flexible button can be assigned as the SAVE button. | | | | |
| Programming Reference | <table><tr><td>Station Programming</td><td>User Manual</td></tr><tr><td colspan="2">Flexible Button Assignment – SAVE Button</td></tr></table> | Station Programming | User Manual | Flexible Button Assignment – SAVE Button | |
| Station Programming | User Manual | | | | |
| Flexible Button Assignment – SAVE Button | | | | | |
| Feature References | Section 3, Features Button, Flexible | | | | |
| Operation Reference — User Manual | Telephone Features Redial, Saved Number | | | | |

Ring Group

| | |
|-------------------------------|--|
| Description | All extensions in a ring group ring simultaneously if the ring group is assigned as the destination of AA (DISA built-in auto attendant) number. A ring group is a specific extension group. |
| Conditions | None |
| Programming References | Section 4, System Programming [501] DISA Built-in Auto Attendant [600] Extension Group Assignment |
| Feature Reference | Section 3, Features Direct Inward System Access (DISA) |
| Operation References | Not applicable. |

Ringling, Delayed

| | |
|-------------------------------|---|
| Description | A telephone is originally set to ring immediately. This feature can be changed to delayed ringing or no ringing (disable) on an outside (CO) line number basis. |
| Conditions | <ul style="list-style-type: none">• This feature does not apply to DISA or DIL calls. If the destination is a DISA ring group, the delayed ringing feature will work.• The extension can answer an incoming call during no ring or the delay time by pressing the flashing button. |
| Programming References | Section 4, System Programming [408]–[410] Flexible Ringing Assignment — Day/Night/Lunch [411]–[413] Delayed Ringing Assignment — Day/Night/Lunch |
| Feature References | Section 3, Features Direct In Lines (DIL) Direct Inward System Access (DISA) Ring Group |
| Operation References | Not applicable. |

Ring, Discriminating


| | |
|-------------------------------|--|
| Description | Allows the extension user to identify an incoming call by its ringing pattern. (See section 5.1, “Tone/Ring Tone”.) |
| Conditions | <ul style="list-style-type: none">• If multiple incoming calls arrive at an on-hook extension simultaneously, priority is generally on a “first-come, first-serve” basis. For proprietary telephones (PT), when the Prime Line Preference – Incoming feature has been set, this line has priority.• A PT user can select a desired ringing pattern for each outside (CO) line, intercom, and the doorphone ringing tone for each doorphone. |
| Programming References | Section 4, System Programming [115] Extension Ringing Pattern Selection [423] Outside (CO) Line Ringing Pattern Selection [706] Doorphone Ringing/Tone Pattern Selection |
| Feature References | Section 3, Features Ringing Pattern Selection for Intercom Calls and Outside (CO) Lines Ringing Tone Selection for Doorphones |
| Operation References | Not applicable. |

Ringing Pattern Selection for Intercom Calls and Outside (CO) Lines

Description Allows an extension user to select the desired ringing pattern for an intercom call and each outside (CO) line. This distinguishes incoming outside calls from intercom calls.

Conditions

- There are three ringing patterns available. One of them can be assigned to an intercom call and an outside (CO) line. Available ringing patterns are as follows.

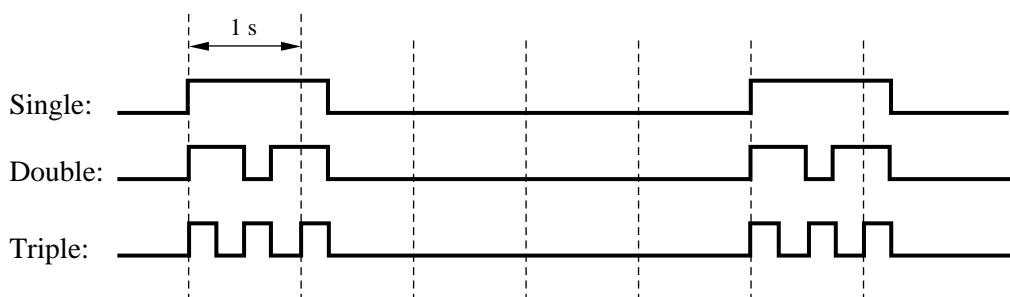

- Each extension user can disable the outside (CO) line ringing tone by station programming.

Programming References

Section 4, System Programming
 [115] Extension Ringing Pattern Selection
 [423] Outside (CO) Line Ringing Pattern Selection
Station Programming User Manual
 Outside (CO) Line Ringing Selection

Feature References None

Operation References Not applicable.

Ringing Tone Selection for Doorphones


Description

Allows an extension user to select the desired ringing tone or chiming pattern for each doorphone. This distinguishes incoming doorphone calls.


A PT user will hear a tone with the assigned pattern and a single line telephone user will hear a ringing tone with the assigned pattern.

Conditions

- There are four types of ringing tones as follows.

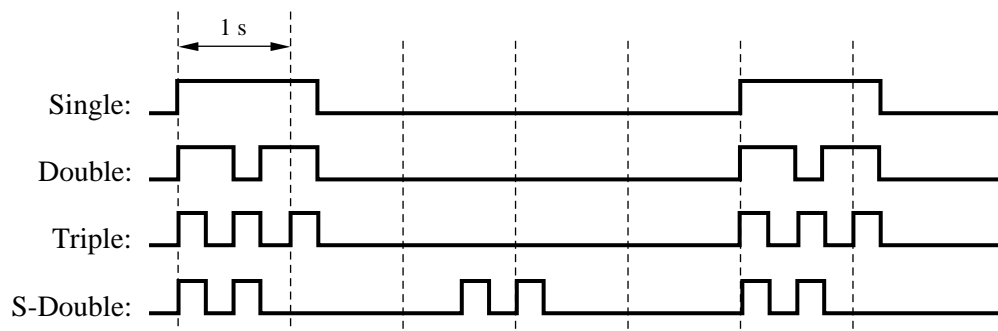

- There are eight types of chiming tones as follows.

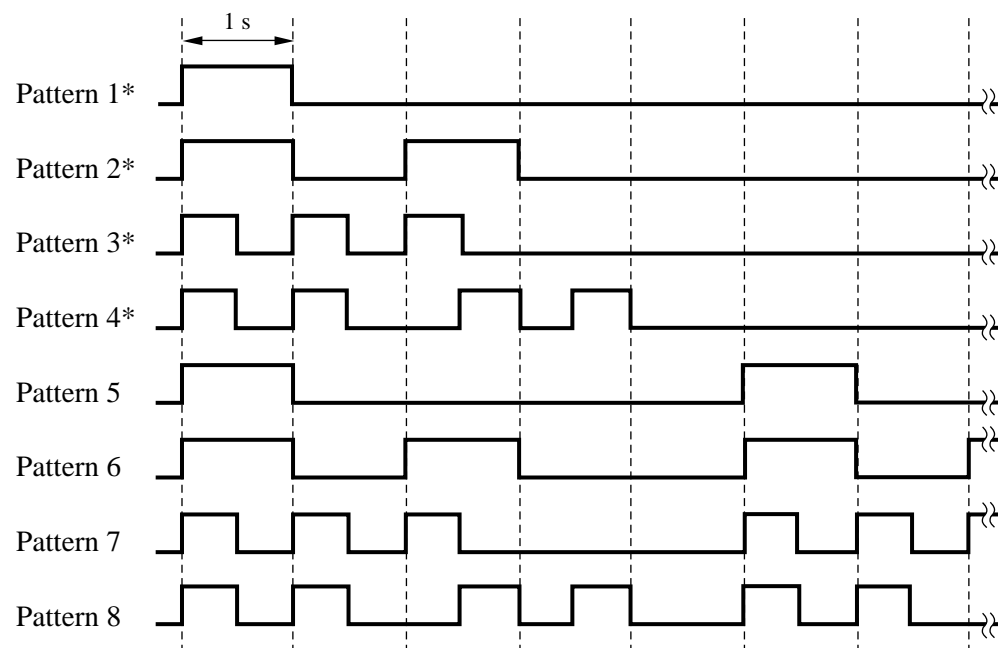

* The chime pattern occurs only once during the doorphone ringing time.

Programming References

Section 4, System Programming

[706] Doorphone Ringing/Tone Pattern Selection

[712] Doorphone Chime Pattern Selection

Feature References None

Operation References Not applicable.

Room Monitor

Description

Allows a user to monitor another room or the front door through a proprietary telephone or doorphone without them knowing.

Conditions

- The extensions which can be monitored must be programmed.
- An access tone will not be sent to the monitored proprietary telephone when monitoring starts.
- If a doorphone is used as the room monitor, a doorphone access tone will be heard when monitoring starts. The tone can be disabled.
- This feature is not available for the KX-TA30850.
- A single line telephone with a MUTE button can be used for monitoring.

Programming References

Section 4, System Programming

[612] Room Monitor Assignment

[707] Doorphone Access Tone Selection

Feature Reference

Section 3, Features

Doorphone Call

Operation Reference — User Manual

Telephone Features

Room Monitor

Secret Dialing

Description

Allows an extension user to conceal all or part of a registered telephone number that normally appears on the display. The user can hide System Speed Dialing or One-Touch Dialing numbers assigned to flexible buttons on proprietary telephones. When a display telephone user calls a Secret Dialing number, all or part of the number will not appear on the display.

Conditions

- When storing a number, press the INTERCOM button at the beginning and the end of the number to be concealed.
- The user can conceal one or more parts of a telephone number.
- Printing out the concealed parts on an SMDR can be assigned by system programming.

Programming References

Section 4, System Programming

[001] System Speed Dialing Entry

[803] Secret Speed Dialing/One-Touch Dialing Printing

Station Programming User Manual

Flexible Button Assignment – One-Touch Dialing Button

Feature References

Section 3, Features

One-Touch Dialing

Station Message Detail Recording (SMDR)

System Speed Dialing

Operation Reference — User Manual

Telephone Features

Secret Dialing

Station Feature Clear

Description

Allows an extension user to cancel the features set on the user's own telephone. The following features will be canceled by this feature.

- Absent Message Capability – The message set on the telephone
- Automatic Callback Busy (Camp-On)
- Background Music that has been turned on
- Call Forwarding
- Call Log, Incoming – Over-stored mode
- Call Pickup Deny
- Call Waiting
- Data Line Security
- Do Not Disturb (DND)
- Executive Busy Override Deny
- Log-In/Log-Out
- Message Waiting – All the messages that have been left by other extension users
- Pickup Dialing – The stored telephone number
- Paging – Deny
- Room Monitor
- Timed Reminder

Conditions

None

Programming References

No programming required.

Feature References

None

Operation Reference
— User Manual

Telephone Features
Station Feature Clear

Station Hunting

Description

If a called extension is busy, Station Hunting redirects the incoming call to an idle extension in the extension group. Idle extensions are automatically searched according to programming. Two hunting types are available as follows.

Circular hunting: The extensions are searched one time in numerical order until an idle one is found. If all extensions are busy, a busy tone will be heard. If the calling outside (CO) line is assigned to DIL and all hunting group extensions are busy, the call will be forwarded within the group until an extension becomes idle.

Terminate hunting: The extensions are searched from the destination jack until the call reaches the highest jack number in the group. If all higher number jacks are busy, the search will end and a busy tone will be heard. If the calling outside (CO) line is assigned to DIL and all hunting group extensions are busy, the call will be forwarded within the group until an extension becomes idle.

One hunting type can be selected for each extension group. To leave the hunting group temporarily, use the Log-Out function. To rejoin, use the Log-In feature.

Condition

- If the called extension has set Do Not Disturb, Call Forwarding or Log-Out, Station Hunting will skip the extension. However, Station Hunting will not skip the extension which receives the call first, even if it has set Do Not Disturb or Call Forwarding.

Programming References

Section 4, System Programming

- [100] Hunting Group Set
- [101] Station Hunting Type
- [600] Extension Group Assignment

Feature References

Section 3, Features

- Call Forwarding
- Do Not Disturb
- Extension Group
- Log-In/Log-Out

Station Message Detail Recording (SMDR)

Description

Station Message Detail Recording (SMDR) automatically prints out detailed call information of outside calls. A printer connected to the Serial Interface (RS-232C) port can be used to print incoming and outgoing outside calls, as well as print a hard copy of system programming. To print out the record of system programming items that have been assigned, use program [804] "System Data Dump". To print the call records, use program [802] "Incoming/Outgoing Call Selection for Printing", which allows a user to print out the following records.

- A record of all outgoing outside calls or outgoing toll calls
- A record of all incoming outside calls

An example of a printed call record:

| Date | Time | Ext. | CO | Dial number | Duration | Code |
|----------|----------|------|-----|----------------------------------|----------|--------|
| 12/31/98 | 12:52PM | 103 | 03 | 12345678901234567890123456789012 | 00:00'16 | |
| 12/31/98 | 12:53PM | 103 | 02 | < incoming >2013570846 | 00:01'43 | |
| 12/31/98 | *12:54PM | 101 | 02 | < incoming >1234567890123456 | 00:07'48 | |
| 12/31/98 | 1:04PM | 103 | 03 | 092...1438 | 00:00'06 | 4536 |
| 12/31/98 | 1:04PM | 102 | 03 | < DISA incoming >2013570846 | 00:00'09 | 0 |
| 12/31/98 | 1:05PM | 103 | 01 | < DISA incoming > | 00:00'08 | 0 |
| 12/31/98 | 1:06PM | 103 | 01 | 092123456789 | 00:00'08 | |
| 12/31/98 | 1:06PM | C-03 | 02 | 0921234567 | 00:00'17 | 2 |
| 12/31/98 | 1:07PM | 103 | 01 | 0921234567 | 00:11'00 | ..13 |
| 12/31/98 | 2:15PM | 103 | 01 | 0921234567 | 00:11'00 | .101 |
| 12/31/98 | 2:26PM | 103 | 01 | F/0927654321 | 00:03'00 | |
| 12/31/98 | 2:27PM | 116 | 03 | 9=0924567123 | 00:13'55 | |
| . | . | . | . | . | . | . |
| . | . | . | . | . | . | . |
| . | . | . | . | . | . | . |
| (1) | (2) | (3) | (4) | (5) | (6) | (7) |

Example of the SMDR printout format:

Explanation

- (1) Date: shows the date of the call as month/day/year.
- (2) Time: shows the time the call was started as Hour: Minute/AM or PM. "*" indicates a transferred call.
- (3) Ext.: shows the extension number, etc. that engaged in the call. "C-xx" indicates an outside-to-outside (CO-to-CO) call via DISA. The outside (CO) line which receives an incoming call is shown as xx.
- (4) CO: shows the outside (CO) line number used for the call.

(5) Dial number

Outgoing call: shows the called party's telephone number (maximum 32 digits). Valid digits are 0 through 9, * or #.

Received call: shows <incoming>. If a Caller ID is assigned to the other party, it will show <incoming> and the number.

An incoming call via DISA is shown as <DISA incoming>.

An incoming call via DIL is shown as <DIL incoming>.

(6) Duration: shows the duration of the call in hours/minutes/seconds.

(7) Code: shows the account code appended to the call, account code index number, the extension number which overrides toll restriction or the DISA security code status. Code "0" indicates a DISA incoming call without a DISA security code. Codes "1 to 4" indicate a DISA incoming call with DISA security code 01 to 04 respectively. DISA security codes are never printed out by SMDR.

Conditions

- This system can store information of up to 64 calls.
- This data is not deleted when the user resets the system.
- If FLASH is manually sent during a conversation to make another call without hanging up, etc., the call record will be printed out and a new record is started. "F/" will be printed at the top of the dial number on the new record.
- When a host PBX code is entered, "=" will be printed between the code and dialed number.

Connection Reference**Section 2, Installation**

2.3.9 Printer and PC Connection

Programming References**Section 4, System Programming**

- [000] Date and Time Setting
- [204] Call Duration Count Start Time
- [800] SMDR RS-232C Communication Parameters
- [801] SMDR Parameter
- [802] Incoming/Outgoing Call Selection for Printing
- [803] Secret Speed Dialing/One-Touch Dialing Printing
- [804] System Data Dump
- [805] SMDR Account Code Selection
- [906] Caller ID SMDR Format
- [907] Caller ID SMDR Printout Selection

Feature References

None

Operation References

Not applicable.

Station Programming

Description

Allows proprietary telephone (PT) users to customize their extensions according to their needs. The following programming items are available.

For a PT (KX-TA30820; KX-TA30830; KX-TA30850)

Call Waiting Tone Type Assignment

Flexible Button Assignment

Intercom Alert Assignment

Outside (CO) Line Ringing Selection

Preferred Line Assignment – Incoming/Outgoing

Station Programming Data Default Set

For a display PT (KX-TA30830) only,

Self-Extension Number Confirmation

For an operator and manager's extension PT only,

Date and Time Setting

Electronic Station Lockout — CANCEL ALL

For the manager's extension PT only,

Extension Password

Detailed information and programming instructions are described in the User Manual, Station Programming and Operator/Manager Service Features.

Condition

- During station programming, a PT is regarded as busy.

Programming References

| | |
|--|--------------------|
| Station Programming | User Manual |
| Operator/Manager Service Features . . . | User Manual |
| Date and Time Setting | |
| Electronic Station Lockout — CANCEL ALL | |
| Extension Password Set (Manager only) | |

Feature References

None

Operation References

Not applicable.

Station Programming Data Default Set

Description

Allows a proprietary telephone user to return all the following items programmed on the telephone to the default settings.

| Programming Items | Default |
|--------------------------------------|-----------------------------|
| Call Waiting Tone Type Assignment | Tone 1 |
| Intercom Alert Assignment | Tone Call |
| Outside (CO) Line Ringing Selection | Ring-all outside (CO) lines |
| Preferred Line Assignment – Incoming | Ringing Line |
| Preferred Line Assignment – Outgoing | No Line |

Station programming is used to set or cancel these items at individual telephones.

Condition

- This feature also cancels the Hands-free Answerback feature and pressing the AUTO ANSWER/MUTE button in the Room Monitor feature.

Programming Reference

Station Programming
Station Programming Data Default Set

User Manual

Feature References

Section 3, Features
Hands-free Answerback
Room Monitor
Station Programming

Operation References

Not applicable.

System Data Default Set

| | |
|------------------------------|--|
| Description | This system can re-initialize the system-programmed data. If all the programmed data is cleared, the system will restart using the default settings. |
| Condition | <ul style="list-style-type: none">• The default setting for each programming item is listed in Section 5.2, “Default Values”. |
| Programming Reference | Section 4, System Programming [999] System Data Clear |
| Feature References | None |
| Operation Reference | Section 2, Installation 2.9 System Data Clear |

System Programming with a Proprietary Telephone

| | |
|------------------------------|--|
| Description | To program the system, the user needs to connect a KX-TA30830 (Display Proprietary Telephone) to extension JACK 01. For more information and programming instructions, refer to Section 4, “System Programming”. |
| Conditions | <ul style="list-style-type: none">• During system programming, the system operates normally.• During system programming, the extension is regarded as busy.• To access system administration, a valid password must be entered. The password is factory-programmed and can be changed. |
| Programming Reference | Section 4, System Programming [002] System Password |
| Feature References | None |
| Operation References | Not applicable. |

System Speed Dialing

Description

This feature supports 100 abbreviated dial numbers that are available to all users. A system speed dial number is dialed out by pressing the AUTO DIAL/STORE button for a proprietary telephone and pressing “*” for a single line telephone, and a 2-digit code (00 through 99). Up to one hundred telephone numbers (32-digit) can be stored per system.

Conditions

- Toll Restriction for System Speed Dialing can be assigned by system programming.
 - Rotary single line telephones cannot use the feature.
- [For proprietary telephone users only]**
- Speed Dialing, One-Touch Dialing and manual dialing can be used together.

Programming References

Section 4, System Programming

- [001] System Speed Dialing Entry
- [011] System Speed Dialing Name Setting
- [301] Toll Restriction – System Speed Dialing Boundary Class

Feature Reference

Section 3, Features

Toll Restriction for System Speed Dialing

Operation Reference — User Manual

Telephone Features
System Speed Dialing

Time (Day/Night/Lunch) Service

Description

The system supports the day, night and lunch operation modes. The system operation for originating and receiving calls can be different for the day, night and lunch modes. The system operation for restricting toll calls can be programmed to prevent unauthorized toll calls in each mode.

Changing the Day/Night/Lunch Modes

The day/night/lunch modes can be changed either automatically at a pre-assigned time or manually by the operator or manager at any desired time.

Automatic Time Service: If a user selects the automatic changing mode, the system will change the day/night/lunch modes at the programmed time each day. The starting time of the day/night/lunch modes can be set for each day of the week.

Manual Time Service: If a user selects the manual changing mode, the operator or manager can change the day/night/lunch modes by dialing the feature number.

Conditions

- The following programming items may be assigned differently for the day mode, night mode and lunch mode.
 - [405]–[407] Flexible Outward Dialing Assignment — Day/Night/Lunch
 - [408]–[410] Flexible Ringing Assignment — Day/Night/Lunch
 - [411]–[413] Delayed Ringing Assignment — Day/Night/Lunch
 - [414]–[416] Outside (CO) Line Mode — Day/Night/Lunch
 - [601]–[603] TRS – Class of Service (COS) Assignment — Day/Night/Lunch
 - [700]–[702] Doorphone Ringing Assignment — Day/Night/Lunch
 - [703]–[705] Door Opener Assignment — Day/Night/Lunch
- The operator or manager can change the day, night or lunch mode even if the automatic changing mode is selected.

Programming References

Section 4, System Programming

- [006] Time (Day/Night/Lunch) Service Changing Mode
- [007] Time (Day/Night/Lunch) Service Start Time

Feature References

None

Operation References — User Manual

Telephone Features

Time (Day/Night/Lunch) Service

Operator/Manager Service Features

Time (Day/Night/Lunch) Service Setting

Time-Out, Variable

Description

Provides timers to control various features.
The following timers are programmable.

| System Timer Items | Range |
|---|---|
| Call Duration Count Start Time | 5 s/10 s/15 s/20 s/25 s/ 30 s/35 s/40 s/45 s/50 s/ Instantly (after dial) |
| Call Forwarding Start Time | 5 s/10 s/15 s/20 s (delay) |
| Caller ID Call Waiting Time | 10 s/20 s/30 s/40 s/60 s/120 s |
| Dialing Start Time | 0 ms/250 ms/500 ms/750 ms/ 1000 ms/1250 ms/1500 ms |
| Door Opener Time | 1 s/2 s/3 s/4 s/5 s/6 s/7 s/8 s |
| Doorphone Ringing Time | 15 s/30 s |
| Hold Recall Time | 30 s/1 min/1.5 min/2 min/ 3 min/4 min/5 min/6 min/ Disable |
| Interdigit Time | 5 s/10 s/15 s/20 s |
| Outside-to-Outside (CO-to-CO) Line Duration Time Limit | 1 min – 32 min |
| Pickup Dial Delay Time | 1 s/2 s/3 s/4 s |
| Transfer Recall Time | 15 s/30 s/1 min/2 min |
| Outside (CO) Line Timer Items | |
| Calling Party Control (CPC) Signal | Disable/22 ms/30 ms/ 38 ms/ ... /606 ms/614 ms (8 ms increments) |
| Disconnect Time | 0.5 s/1.5 s/4.0 s |
| Flash Time | 80 ms/100 ms/160 ms/ 300 ms/600 ms/900 ms/ 1200 ms |
| Pause Time | 1.5 s/2.5 s/3.5 s/4.5 s |
| Extension Timer Items | |
| Delayed Ringing Assignment | Immediate/5 s /10 s /15 s |
| DISA Timer Items | |
| DISA AA Wait Time | 1 s/2 s/3 s/4 s/5 s |
| DISA Delayed Answer Time | 0 s/3 s/6 s/12 s |
| DISA Ringing Time after Intercept | 10 s/20 s/30 s/40 s/60 s/ 120 s |
| DISA Ringing Time before Intercept | 10 s/20 s/30 s/40 s/60 s/ 120 s |
| Intercept Time for Internal DISA | 3 s/6 s/9 s |

Programming References

Section 4, System Programming

- [200] Hold Recall Time
- [201] Transfer Recall Time
- [202] Call Forwarding Start Time
- [203] Pickup Dial Delay Time
- [204] Call Duration Count Start Time
- [205] Outside-to-Outside (CO-to-CO) Line Duration Time Limit
- [206] Dialing Start Time
- [208] Interdigit Time
- [411]–[413] Delayed Ringing Assignment — Day/Night/Lunch
- [417] Pause Time
- [418] Flash Time
- [420] Calling Party Control (CPC) Signal
- [422] Disconnect Time
- [504] DISA Delayed Answer Time
- [508] DISA Ringing Time before Intercept
- [509] DISA Ringing Time after Intercept
- [515] Intercept Time for Internal DISA
- [517] DISA AA Wait Time
- [708] Doorphone Ringing Time
- [709] Door Opener Time
- [908] Caller ID Call Waiting Time

Feature References None

Operation References Not applicable.

Timed Reminder

Description

Each telephone can generate an alarm tone at a preset time as a wake-up tone or reminder. The alarm can be set to occur daily or just once.

Conditions

- Be sure that the system clock is working.
- Setting a new time clears the preset time.
- The alarm sounds for 30 seconds. To stop it, lift the handset or, with a proprietary telephone, press any button.
- There is no limit for the number of the extensions who can set Timed Reminder at the same time.

Programming References

No programming required.

Feature Reference

Section 3, Features
Timed Reminder, Remote (Wake-Up Call)

Operation Reference — User Manual

Telephone Features
Timed Reminder

Timed Reminder, Remote (Wake-Up Call)

Description

Allows the operator and manager to remotely set, cancel and confirm a wake-up call for an extension.

Conditions

- When either an operator/manager or extension sets a new time, the pre-set time is cleared.
- There is no limit for the number of the extensions that can set Timed Reminder at the same time.
- Each extension user can cancel this feature.

Programming References

No programming required.

Feature Reference

Section 3, Features
Timed Reminder

Operation Reference — User Manual

Operator/Manager Service Features
Timed Reminder, Remote (Wake-Up Call)

Toll Restriction

Description

Toll Restriction is a system programmable feature that can prohibit certain extension users from placing unauthorized toll calls.

Every extension is programmed to belong to one of five TRS – Classes of Service (COS). Each Class of Service is programmed to have a toll restriction class for the day mode, night mode and lunch mode.

There are five toll restriction COS numbers available. Toll restriction COS number 1 is the highest class and COS number 5 is the lowest. COS number 1 allows all toll calls. COS numbers 2 through 5 are used to restrict calls by combining pre-programmed deny and excepted codes.

Denied Code Classes

An outgoing outside call made by an extension with a toll restriction COS number between 2 and 5 is first checked against the assigned Denied Code Classes. If the first digits of the dialed number (not including the line access code) are not found in the class, the call can be made. There are five system programs for Denied Code Classes: **[302]–[305] Toll Restriction — Class 2 – 5 Denied Codes**. Each program is used to assign denied codes for Classes 2 through 5 respectively.

Each class can store up to 20 denied codes, each consisting of eleven digits.

Excepted Codes

These codes are used to override a programmed denied code. A call denied by the Denied Codes is checked against the selected Excepted Codes. If a match is found, the call can be made.

There is one system program for excepted codes: **[306] Toll Restriction — Exception Codes**. Up to eighty excepted codes, each consisting of eleven digits, can be stored. The number of codes available depends on the COS number.

Applicable Denied Code Classes and Excepted Codes depend on the assigned toll restriction COS number of an extension as follows.

| COS Number | Denied Codes | Excepted Codes |
|------------|---------------------------|-------------------------------------|
| 1 | None | None |
| 2 | Codes for Class 2 | All codes from Code number 01 to 80 |
| 3 | Codes for Classes 2 and 3 | 60 codes from Code number 01 to 60 |
| 4 | Codes for Classes 2 to 4 | 40 codes from Code number 01 to 40 |
| 5 | Codes for Classes 2 to 5 | 20 codes from Code number 01 to 20 |

[Explanation]

COS 1: allows all calls.

COS 2: denies the 20 codes stored in Denied Code Class 2 assigned in program [302], except all codes stored in Code numbers 01 through 80 assigned in program [306].

COS 3: denies the 40 codes stored in Denied Code Classes 2 and 3 assigned in programs [302] and [303], except the 60 codes stored in Code numbers 01 through 60 assigned in program [306].

COS 4: denies the 60 codes stored in Denied Code Classes 2 through 4 assigned in programs [302] through [304], except the 40 codes stored in Code numbers 01 through 40 assigned in program [306].

COS 5: denies the 80 codes stored in Denied Code Classes 2 through 5 assigned in programs [302] through [305], except the 20 codes stored in Code numbers 01 through 20 assigned in program [306].

Example of Toll Restriction programming

Here is an example to explain the procedure for Toll Restriction programming.

1. Determining the application

Determine the dialing numbers that should be denied for COS numbers 2 through 5. (1 is fixed and does not require programming.)

[Entry Example]

| COS number | Denied Codes | Excepted Codes |
|-------------------|---|--|
| 2 | Class 2 011xxxxxxx 976xxxxxxx 1xxx976xxxx | 0112xxxxxxx 9762xxxxxxx 1xx8976xxxx 9824xxxxxxx 123x975xxxx 092xxxxxxx x01xxxxxxx x12xxxxxxx x123xxxxxxx 4112xxxxxxx 12xx555xxxx |
| | ----- | |
| 3 | Class 2 011xxxxxxx 976xxxxxxx 1xxx976xxxx | 0112xxxxxxx 9762xxxxxxx 1xx8976xxxx 9824xxxxxxx 123x975xxxx 092xxxxxxx x01xxxxxxx x12xxxxxxx x123xxxxxxx 4112xxxxxxx 12xx555xxxx |
| | Class 3 982xxxxxxx 12xx975xxxx | |
| 4 | Class 2 011xxxxxxx 976xxxxxxx 1xxx976xxxx | 0112xxxxxxx 9762xxxxxxx 1xx8976xxxx 9824xxxxxxx 123x975xxxx 092xxxxxxx x01xxxxxxx x12xxxxxxx x123xxxxxxx 4112xxxxxxx |
| | Class 3 982xxxxxxx 12xx975xxxx | |
| 5 | Class 4 0xxxxxxx x0xxxxxxx x1xxxxxxx | |
| | Class 5 411xxxxxxx 1xxx555xxxx | |

Note: “x” means a digit.

2. Programming

[601]–[603] TRS – Class of Service (COS) Assignment
— Day/Night/Lunch

Assign a Class of Service (COS) to each extension.

[Example]

| Jack | COS (Day) | COS (Night) | COS (Lunch) |
|------|-----------|-------------|-------------|
| 01 | 1 | 1 | 1 |
| 02 | 1 | 5 | 1 |
| 03 | 2 | 4 | 5 |
| : | : | : | : |
| 08 | 5 | 5 | 5 |

[Explanation]


If your extension is jack 03;

- a) You cannot make a call whose toll call number is “011”, because the number “011” is one of the Denied Codes for Class 2.
- b) However, you can make a call whose toll call number is “0112”. The number, whose first 3 digits are “011”, is one of the Denied Codes for Class 2, but the number “0112” is one of the Excepted Codes. The Excepted Codes override the Denied Codes.

If your extension is jack 08;

- a) You cannot make a call whose toll call number is “1234976”, because the number “1xxx976xxx” is one of the Denied Codes for Class 2.
- b) However, you can make a call whose toll call number is “1234975680”. The number, whose first 7 digits are “1234975”, is one of the Denied Codes for Class 3, but the number “123x975xxx” is one of the Excepted Codes. The Excepted Codes override the Denied Codes.

Flow Chart of Toll Restriction

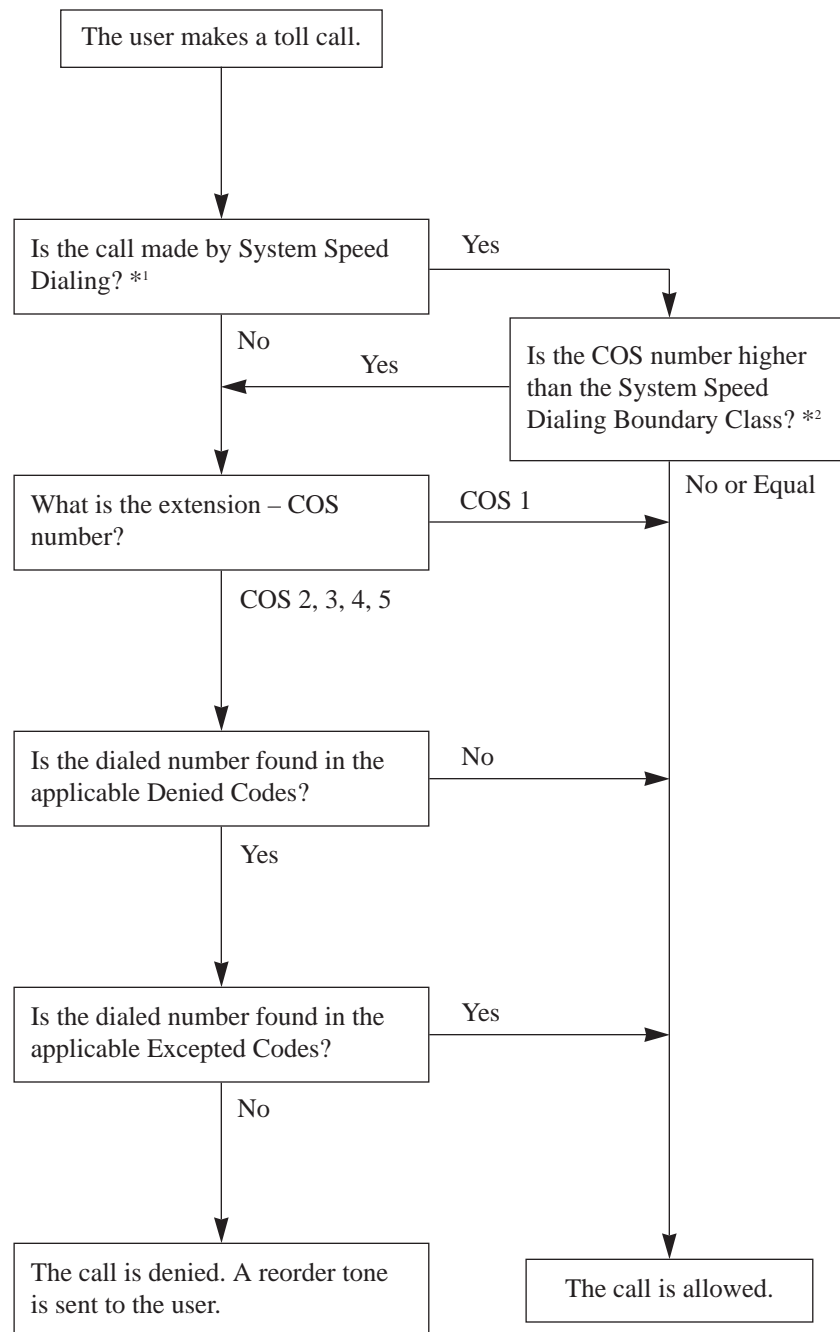

*1 System Speed Dial numbers are assigned in program [001] “System Speed Dialing Entry”.

*2 The System Speed Dialing Boundary Class is assigned in program [301] “Toll Restriction — System Speed Dialing Boundary Class”.

Conditions**WARNING**

The software contained in the TRS feature to allow user access to the network must be upgraded to recognize newly established network area codes and exchange codes as they are placed into service.

Failure to upgrade the premises PBXs or peripheral equipment to recognize the new codes as they are established will restrict the customer and the customer's employees from gaining access to the network and to these codes.

KEEP THE SOFTWARE UP-TO-DATE WITH THE LATEST DATA.

- Toll restriction checks are applied to the following features.
 - (1) Account Code Entry
 - (2) Dial Access, Automatic
 - (3) Dial Access, Outside (CO) Line Group
 - (4) Line Access, Individual
 - (5) Carrier Code Entry
 - (6) System Speed Dialing
- Emergency numbers, such as telephone numbers for the police or fire department, should be stored in program [309] "Emergency Dial Number Set" so that they will not be barred by toll restriction.
- If a stored Host PBX access code or a stored carrier code is found in the dialed number, the subsequent telephone numbers will be checked for toll restriction.
- It is programmable whether the "×" or "#" the user dials is to be checked or not on the Toll Restriction code. This is useful to prevent unauthorized calls which could be possible through certain Central Office exchange systems.

Programming References**Section 4, System Programming**

- [125] Toll Restriction Check for × and #
- [208] Interdigit Time
- [211] No Dial Disconnection
- [300] Carrier Code Assignment
- [301] Toll Restriction — System Speed Dialing Boundary Class
- [302]–[305] Toll Restriction — Class 2 – 5 Denied Codes
- [306] Toll Restriction — Exception Codes
- [601]–[603] TRS – Class of Service (COS) Assignment
— Day/Night/Lunch

Feature References**Section 3, Features**

- Toll Restriction for Special Carrier Access
- Toll Restriction for System Speed Dialing
- Toll Restriction Override by Account Codes
- Toll Restriction — Station Lock Boundary Class

Operation References

Not applicable.

Toll Restriction for Special Carrier Access

| | |
|------------------------------|---|
| Description | If the system has access to multiple telephone companies, access to a specific company requires a carrier code before the telephone number. Toll Restriction for these calls is activated by storing the carrier codes (maximum 20). If a stored carrier code is found in the dialed number, a toll restriction check starts with the subsequent telephone numbers. |
| Conditions | None |
| Programming Reference | Section 4, System Programming [300] Carrier Code Assignment |
| Feature Reference | Section 3, Features Toll Restriction |
| Operation References | Not applicable. |

Toll Restriction for System Speed Dialing

Description

Toll Restriction for System Speed Dialing is assigned separately from the extensions. There are five boundary classes available.

| Extension COS number | System Speed Dialing Boundary Class | | | | |
|----------------------|-------------------------------------|---|---|---|---|
| | 1 | 2 | 3 | 4 | 5 |
| 1 | N | N | N | N | N |
| 2 | C | N | N | N | N |
| 3 | C | C | N | N | N |
| 4 | C | C | C | N | N |
| 5 | C | C | C | C | N |

N = No restriction C = Checked

[Explanation]

The System Speed Dialing Boundary Class works with the COS number assigned to each extension.

- (1) Boundary Class 5: all extension users can make system speed dialing calls without checking any COS number.
- (2) Boundary Class 4: extensions with COS number 5 are checked. When the users make system speed dialing calls, toll restriction COS number 5 is applied to the numbers.
- (3) Boundary Class 3: extensions with COS numbers 4 and 5 are checked. When the users make system speed dialing calls, toll restriction COS numbers 4 and 5 are applied to the numbers.
- (4) Boundary Class 2: extensions with COS numbers 3 through 5 are checked. When the users make system speed dialing calls, toll restriction COS numbers 3 through 5 are applied to the numbers.
- (5) Boundary Class 1: extensions with COS numbers 2 through 5 are checked. When the users make system speed dialing calls, toll restriction COS numbers 2 through 5 are applied to the numbers.

Conditions

None

Programming Reference

Section 4, System Programming

[301] Toll Restriction — System Speed Dialing Boundary Class

Feature References

Section 3, Features

System Speed Dialing
Toll Restriction

Walking COS

Operation Reference — User Manual

Telephone Features

Toll Restriction Override – Toll Restriction for System Speed Dialing

Toll Restriction Override by Account Codes


Description

Allows an extension user to override toll restriction temporarily to make a toll call from a toll-restricted extension. The user can carry out this feature by entering a pre-assigned account code before dialing the telephone number. The user can make a toll call with the COS number 2.

Conditions

- The account code “Verify - Toll” mode at an extension permits users to override their toll restrictions.
- This feature can be used on extensions assigned to toll restriction COS numbers 3 through 5. The COS numbers 1 and 2 will not be changed.
- If the user does not enter an account code or enters an invalid one, a regular toll restriction check is done.
- When a user makes a call using this feature, it will appear on the SMDR printout with either the entered 4-digit account code or the 2-digit index of the entered account code. This selection is set in program [805] “SMDR Account Code Selection”.
- Users can also override toll restriction of another extension by using the Walking COS feature.

Flow Chart of TRS Override

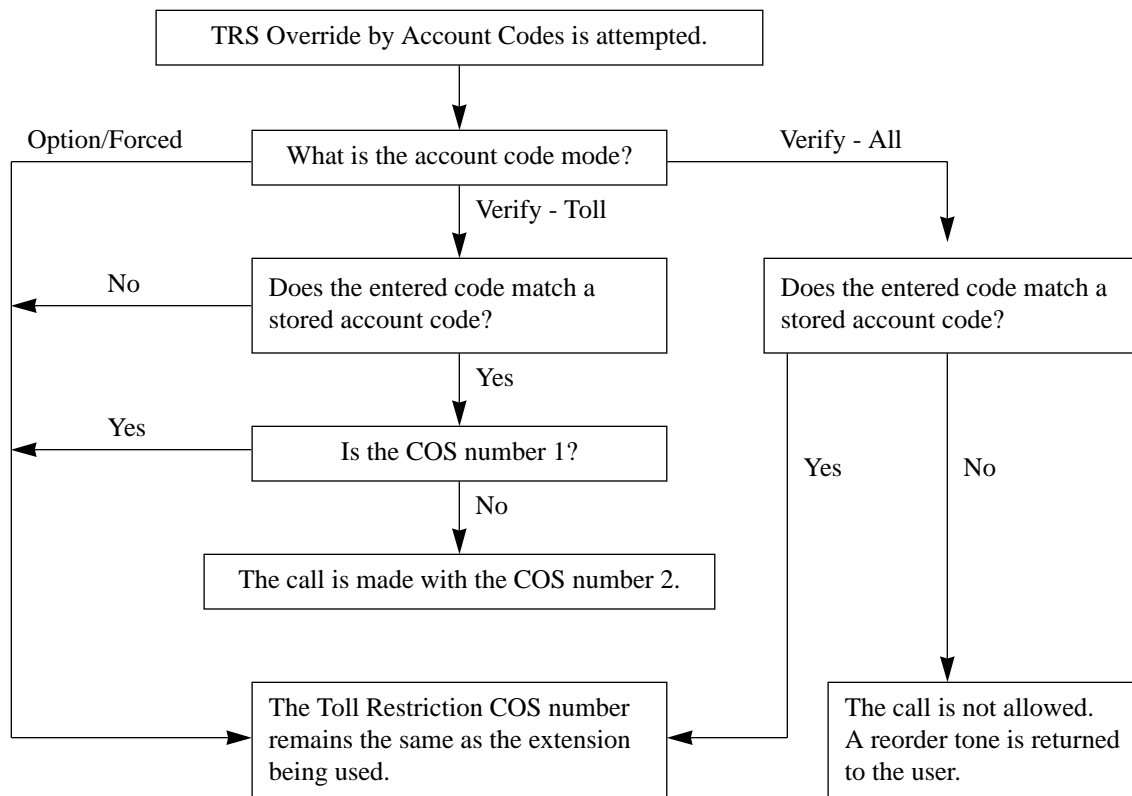

Programming References

Section 4, System Programming

[310] Account Codes

[605] Account Code Entry Mode

Operator/Manager Service Features . . . User Manual

Extension Password Set (Manager only)

Feature References

Section 3, Features

Account Code Entry

Station Message Detail Recording (SMDR)

Toll Restriction

Walking COS

Operation Reference

— User Manual

Telephone Features

Toll Restriction Override — Toll Restriction Override by Account Codes

Toll Restriction — Station Lock Boundary Class

| | |
|------------------------------|--|
| Description | <p>Allows assigning a toll restriction class when the Electronic Station Lockout feature is set.</p> <p>An extension user usually cannot make an outside call at a locked extension, however if a toll restriction class is assigned in program [312], the user can make an outside call at the locked extension.</p> |
| Condition | <ul style="list-style-type: none">• The more restrictive toll restriction COS number will take precedence. For example, if toll restriction COS number 3 is assigned to an extension and the station lock boundary class is 4, the extension user is allowed to make a call with toll restriction COS 4. |
| Programming Reference | <p>Section 4, System Programming</p> <p>[312] Toll Restriction — Station Lock Boundary Class</p> |
| Feature References | <p>Section 3, Features</p> <p>Electronic Station Lockout</p> <p>Toll Restriction</p> |
| Operation References | <p>Not applicable.</p> |

Volume Control – Handset Receiver/Headset/Ringer/Speaker

Description

Allows a proprietary telephone user to change the following as desired.

Handset receiver volume
Headset volume
Ringer volume
Speaker volume

Condition

- The procedure is as follows.

Slide the following lever or press UP and DOWN of the Navigator or Volume key, The Ringer Volume selector is located on the left side of the telephone.

Handset volume: Navigator Key/Volume Key (1-3 level)
Headset volume: Navigator Key (1-3 level)
Ringer volume: Ringer Volume Selector (OFF/LOW/HIGH)
Speaker volume: Navigator Key/Volume Key (1-12 level)

Programming References

No programming required.

Feature References

None

Operation Reference
— User Manual**Configuration**

Initial Settings — Volume Control – Handset Receiver/Headset/
Ringer/Speaker

Walking COS

Description

Allows a user who is not at their own telephone to override the toll restriction COS number of another extension. At the other extension, the user dials their extension password. For the duration of the call, the COS of the extension is changed to the COS of their own extension.

Condition

- When a user makes a call using this feature, the user's extension number will be displayed on the SMDR, not the extension where the user made the call.

Programming Reference

Operator/Manager Service Features . . . User Manual
Extension Password Set (Manager only)

Feature References

None

Operation Reference
— User Manual

Telephone Features
Walking COS

Section 4

System Programming

This section provides step-by-step programming instructions for a proprietary telephone.

4.1 General Programming Instructions

Default Setting

This system has factory default settings. If any of the programming needs to be changed, the necessary information will be found in Section 3, “Features”. This makes the system very simple to install and customize as required by the customer. Any required changes can be written in the “Programming Tables”.

Required Telephone Set

The following telephone set is required for system programming.

- Proprietary Telephone (PT): KX-TA30830

Extensions Used for Programming

Only the manager extension can perform system programming. The extension user connected to Jack number 01 is the manager extension.

4.1.1 Using Proprietary Telephones

Using the Overlay

A programming overlay is packed with the telephone at the factory. This overlay should be used at all times during programming. The features of the telephone keys change during programming as follows. (The original features are in parentheses.)

During Normal Operation


(PAUSE)
(SP-PHONE)/ ▼
(REDIAL)/ ▲
(AUTO ANSWER/MUTE)
(FLASH/RECALL)
(TRANSFER)
(FWD/DND)/ ►
(CONF)/ ◄
(INTERCOM)
(AUTO DIAL/STORE)
(HOLD)
(PROGRAM)

During Programming

PAUSE
NEXT
PREV (PREVIOUS)
SELECT
FLASH
CLEAR
►
◄ , -
SECRET
STORE
END
PROGRAM

Location of Controls with the Overlay

The picture below shows the feature of the buttons of the KX-TA30830 during programming.

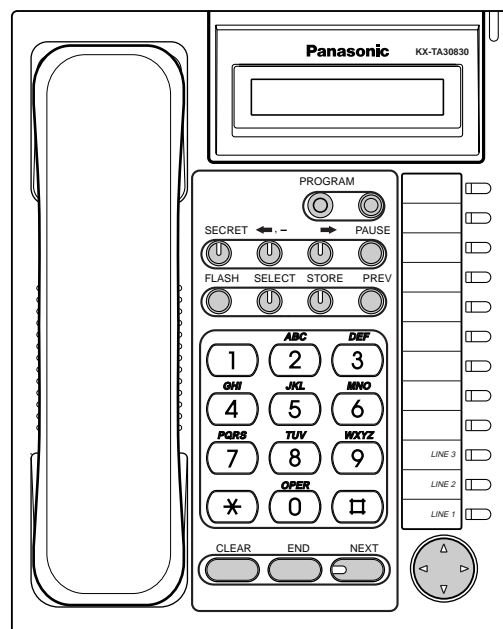



KX-TA30830

4.1.1 Using Proprietary Telephones

Viewing the Display

The display gives the user helpful information, such as the next step, previous entries, etc.

The KX-TA30830 utilizes one information line for programming. The display capacity is 16 digits. If the entry is longer than 16 digits, the user can shift the display by pressing the  or  button.

Before entering the programming mode

Before entering the programming mode, confirm that:

- The telephone is on-hook.
- No calls are on hold at your telephone.

Entering the programming mode

1. Press the PROGRAM button.
The display shows: PITS-PGM NO? →
2. Dial * #.
The display shows: Password:
3. Enter the **system password** (default 1234).
The display shows the initial system programming message: SYS-PGM NO? →

- Note**
- The entered system password is not shown on the display. The system password can be changed by system programming. Refer to Section 4.2 [002] “System Password”.
 - During the programming mode, the extension is treated as a busy extension.

4.1.2 Programming Methods

Advancing to the next stage

When “SYS-PGM NO? →” is displayed, the user can go to the desired program by entering the 3-digit program address.

Storing your data

Press **STORE** to store the data.

- The STORE indicator lights red and a confirmation tone is heard.

* **Confirmation tone (one beep)**

After pressing **STORE**, a beep will be heard. This informs the user that storing is completed.

* **Confirmation tone (two beeps)**

This informs the user that the parameter has already been stored.

* **Alarm tone (three beeps)**

If this alarm is heard, the user’s entry is not valid.

Making another selection within the same program address

- To make the next selection, press **NEXT**.
- To make the previous selection, press **PREV**.
- To make a specific selection, press **SELECT** and then enter the number.

Confirming the entries

The user may review the stored programming without making any changes.

Going to another program address

Press **END** and the initial system programming message will be displayed.

The display shows: SYS-PGM NO? →

Then enter a program address.

You can go to the higher number program address by pressing the **➡** button and the lower number by pressing the **⬅** button while the program title is displayed.

Display example: Day/Time Set _____ program title

Returning to the operation mode

Press the **PROGRAM** button.

4.1.3 Entering Characters

The user can enter characters to store names for extension numbers by using the dialing key pad and the buttons.

Each of the twelve dialing keys on the dialing key pad has seven characters assigned. See the Combination Table below.

| Press SELECT (Number of times) Keys | 0 | 1 | 2 | 3 | 4 | 5 | 6 |
|--|---|----|---|---|---|---|---|
| 1 | 1 | Q | q | Z | z | ! | ? |
| 2 | 2 | A | a | B | b | C | c |
| 3 | 3 | D | d | E | e | F | f |
| 4 | 4 | G | g | H | h | I | i |
| 5 | 5 | J | j | K | k | L | l |
| 6 | 6 | M | m | N | n | O | o |
| 7 | 7 | P | p | R | r | S | s |
| 8 | 8 | T | t | U | u | V | v |
| 9 | 9 | W | w | X | x | Y | y |
| 0 | 0 | | . | , | ' | : | ; |
| * | * | ” | + | – | = | < | > |
| # | # | \$ | % | & | @ | (|) |

Combination Table

Note All the alphabetical characters correspond to the letters printed above the twelve keys on a proprietary telephone. The exceptions are the letters Q, q, Z, z, and symbols.

The following example shows how to select a desired character. For example, to select the letter “M”:

1. Press **6**. (“M” is stored in key “6”.)
2. Press the **SELECT** button once.
 - Pressing the **SELECT** button an appropriate number of times enters the desired letter. Pressing **SELECT** twice enters the letter “m”, pressing three times enters “N”, and so on.

4.1.3 Entering Characters

Example of entering characters: to enter “Mike”:

The display shows:

- | | |
|------------------------------------|------|
| 1. Enter 6 . | 6 |
| 2. Press SELECT . | M |
| 3. Enter 4 . | M4 |
| 4. Press SELECT six times. | Mi |
| 5. Enter 5 . | Mi5 |
| 6. Press SELECT four times. | Mik |
| 7. Enter 3 . | Mik3 |
| 8. Press SELECT four times. | Mike |

- Note**
- To erase all the letters, press **CLEAR**.
 - To erase the last letter, press **◀**.

4.1.4 Programming Example

The following programming instructions assume that the user has already entered the programming mode.

Example: Program [001] “System Speed Dialing Entry”

| Sample of Description | Explanation |
|--|---|
| <div data-bbox="203 525 787 613"> 001⁽¹⁾ 4.2 System Programming⁽²⁾ <i>System Speed Dialing Entry⁽³⁾</i> </div> <hr/> <div data-bbox="215 634 799 751"> Description⁽⁴⁾ Used to program the System Speed Dialing numbers. These numbers are available to all extension users. There are 100 numbers available from 00 to 99. </div> <div data-bbox="215 766 771 827"> Selection⁽⁵⁾ • Speed dialing number: 00 – 99 • Telephone number: 32 digits (max.) </div> <div data-bbox="215 842 784 871"> Default⁽⁶⁾ All speed dialing numbers – Not stored </div> <div data-bbox="215 886 799 1554"> Programming⁽⁷⁾ 1. Enter 001.⁽⁸⁾ Display: Speed Dialing⁽⁹⁾ 2. Press NEXT.⁽¹⁰⁾ Display: Speed NO? →⁽¹¹⁾ 3. Enter a speed dialing number. Pressing NEXT also can enter speed dialing number 00. Display example: 00:Not Stored⁽¹²⁾ 4. Enter a telephone number.⁽¹³⁾ To delete the current entry, press CLEAR.⁽¹⁴⁾ To change the current entry, press CLEAR and enter the new number. 5. Press STORE.⁽¹⁵⁾ 6. To program another speed dialing number, press NEXT or PREV, or SELECT and enter the desired speed dialing number.⁽¹⁶⁾ 7. Repeat steps 4 through 6.⁽¹⁷⁾ 8. Press END.⁽¹⁸⁾ </div> <div data-bbox="215 1568 776 1717"> Conditions⁽¹⁹⁾ • Each speed dialing number has a maximum of 32 digits. The valid characters are 0 – 9, *, and # keys, and the FLASH, PAUSE, SECRET and – (hyphen) buttons. </div> <div data-bbox="532 1724 548 1801"> • • • • </div> <div data-bbox="215 1822 683 1883"> Feature Reference⁽²⁰⁾ Section 3, Features System Speed Dialing </div> | <div data-bbox="841 525 1411 579">(1) Program address: This address is printed at the top of every page to quickly find the desired program.</div> <div data-bbox="841 588 984 613">(2) Mode title.</div> <div data-bbox="841 623 1010 648">(3) Program title.</div> <div data-bbox="841 657 1382 682">(4) Provides a more detailed description of the program.</div> <div data-bbox="841 690 1247 716">(5) Shows the user the assignable choices.</div> <div data-bbox="841 724 1279 749">(6) Shows the user the factory default setting.</div> <div data-bbox="841 758 1411 903">(7) Shows the user programming procedures step by step. • During programming, use the overlay. • Before starting to program, enter the programming mode. (See “Entering the programming mode” on page 4-4.) </div> <div data-bbox="841 911 1135 936">(8) Enter the program address.</div> <div data-bbox="841 945 1227 970">(9) The display shows the program title.</div> <div data-bbox="841 978 1216 1003">(10) Press NEXT shown on the overlay.</div> <div data-bbox="841 1012 1346 1066">(11) The display asks the user to enter a speed dialing number.</div> <div data-bbox="841 1075 1378 1129">(12) If the telephone number has already been stored, the number is displayed.</div> <div data-bbox="841 1138 1411 1192">(13) Enter the telephone number that the user wants to store. The entry will be displayed as the user enters the digits.</div> <div data-bbox="841 1201 1273 1226">(14) Pressing CLEAR erases the whole entry.</div> <div data-bbox="841 1234 1411 1323">(15) The entry is now stored. The indicator lights red and a confirmation tone lets the user know that storing is completed. </div> <div data-bbox="841 1331 1411 1533">(16) Select the best way for the user to store another speed dialing number. Pressing NEXT/PREV allows the user to select the next higher/lower speed dialing number. The user can also continue pressing a button until the desired entry is displayed. If the user presses SELECT and the desired speed dialing number, the selected code will be displayed.</div> <div data-bbox="841 1541 1362 1566">(17) The user can continue programming another entry.</div> <div data-bbox="841 1575 1411 1719">(18) After all the entries have been stored, complete this program by pressing END. After pressing END, the user can go to any desired program address. The user can return to the initial system programming message mode at any time by pressing END.</div> <div data-bbox="841 1728 1411 1782">(19) Tells the user what should be noted or considered when doing the program.</div> <div data-bbox="841 1791 1386 1845">(20) Lists all of the features related to the program. These features are described in Section 3. </div> |

Date and Time Setting

Description

Sets the current date and time.

Selection

- Year: **00 – 99**
- Month: **Jan. – Dec.**
- Day: **1 – 31**
- Day of the week: **Sun / Mon / Tue / Wed / Thu / Fri / Sat**
- Hour: **1 – 12**
- Minute: **00 – 59**
- **AM / PM**

Default

03 Jan. 1 Wed 12:00 AM

Programming

1. Enter **000**.

Display: Day/Time Set

2. Press **NEXT**.

Display example: '03 Jan. 1 Wed

3. Enter the **year**.

To change the current entry, press **CLEAR** and enter the new year.

4. Press **➡**.

5. Keep pressing **SELECT** until the desired month is displayed.

6. Press **➡**.

7. Enter the **day**.

To change the current entry, press **CLEAR** and enter the new day.

8. Press **➡**.

9. Keep pressing **SELECT** until the desired day of the week is displayed.

10. Press **➡**.

Display example: 12:00 AM

11. Enter the **hour**.

To change the current entry, press **CLEAR** and enter the new hour.

12. Press **➡**.

Date and Time Setting (contd.)

13. Enter the **minute**.

To change the current entry, press **CLEAR** and enter the new minute.

14. Press **➡**.

15. Press **SELECT** for AM or PM.

16. Press **STORE**.

17. Press **END**.

Conditions

- After changing an entry, the user can press **STORE**. It is not necessary to perform the rest of the steps.
- To return to a previous field, press **⬅** in steps 4 through 15.
- If an alarm is heard after pressing **STORE**, check if the date is valid or not.
- The clock starts immediately after the **STORE** button is pressed.
- The operator and manager can set the date and time in the station programming mode.

Feature Reference

Section 3, Features
Display, in Idle

System Speed Dialing Entry

| | |
|--------------------|---|
| Description | Used to program the System Speed Dialing numbers. These numbers are available to all extension users. There are 100 numbers available from 00 to 99. |
| Selection | <ul style="list-style-type: none">• Speed dialing number: 00 – 99• Telephone number: 32 digits (max.) |
| Default | All speed dialing numbers – Not stored |
| Programming | <ol style="list-style-type: none">1. Enter 001. Display: Speed Dialing2. Press NEXT. Display: Speed NO? →3. Enter a speed dialing number. Pressing NEXT also can enter speed dialing number 00. Display example: 00:Not Stored4. Enter a telephone number. To delete the current entry, press CLEAR. To change the current entry, press CLEAR and enter the new number.5. Press STORE.6. To program another speed dialing number, press NEXT or PREV, or SELECT and enter the desired speed dialing number.7. Repeat steps 4 through 6.8. Press END. |

*System Speed Dialing Entry (contd.)***Conditions**

- Each speed dialing number has a maximum of 32 digits. The valid characters are **0 – 9, *, and # keys**, and the **FLASH, PAUSE, SECRET and – (hyphen) buttons**.
 - To store a flash signal, press **FLASH**.

Note: The stored flash will only be effective during a call in progress. (Refer to Section 3 “External Feature Access”.)
 - To store a hyphen, press the “–” button.
 - To store a pause, press **PAUSE**.
(Refer to Section 3 “Pause Insertion, Automatic”.)
 - To store a feature number to convert pulse signals to DTMF signals, press the ***** and **#** keys.
(Refer to Section 3 “Pulse to Tone Conversion”.)
 - To prevent the display of all or part of a number, press **INTERCOM** before and after any confidential parts of the number. (Refer to Section 3 “Secret Dialing”.)
- When storing an external number, include a line access code (9, 81 – 83) before the number. When dialing, a pause will automatically be inserted after the code.
- When storing an account code, enter the account code after the line access code. Press *** *** and then enter the account code.
(Refer to Section 3 “Account Code Entry”.)
- It is possible to store a number consisting of 33 digits or more by storing it in two speed dialing numbers. The line access code should be stored in the first speed dialing number.
- To access another speed dialing number in steps 3 through 6, press **SELECT** and start with step 3.
- To display parts of the number which have scrolled off the display, press **➡** or **⬅**.
- Program [011] “System Speed Dialing Name Setting” is used to name the speed dialing numbers.

Feature Reference

Section 3, Features
System Speed Dialing

System Password

| | |
|--------------------------|--|
| Description | Assigns the password required for entering the system programming mode or assigning extension passwords. |
| Selection | Password: 0000 – 9999999 |
| Default | 1234 |
| Programming | <ol style="list-style-type: none">1. Enter 002. Display: System Password2. Press NEXT. Display example: Password:12343. Enter a password. To change the current entry, press CLEAR and enter the new password.4. Press STORE.5. Press END. |
| Conditions | None |
| Feature Reference | Section 3, Features System Programming with a Proprietary Telephone |

One-Touch Transfer Using a DSS Button

Description

Enables or disables automatically holding an outside call when a DSS button assigned to a flexible button on a proprietary telephone is pressed. Through this assignment, the button can perform the following.

- With Transfer — Merely pressing a DSS button is enough to put an outside call on hold and execute the transfer; there is no need to press the TRANSFER button.
- Without Transfer — To transfer an outside call, it is necessary to first press the TRANSFER button and then a DSS button. Just pressing the DSS button will not execute the transfer.

Selection**With Transfer / Without Transfer****Default**

With Transfer

Programming

1. Enter **005**.
Display: DSS Mode
2. Press **NEXT**.
Display example: With Transfer
3. Keep pressing **SELECT** until the desired selection is displayed.
4. Press **STORE**.
5. Press **END**.

Condition

- This assignment applies to all DSS buttons on all proprietary telephones in the system.

Feature Reference

Section 3, Features
One-Touch Transfer Using a DSS Button

Time (Day/Night/Lunch) Service Changing Mode

| | |
|--------------------------|---|
| Description | This program is used to determine if the day/night/lunch mode is set automatically or manually. |
| Selection | Man (manual) / Auto (automatic) |
| Default | Manual |
| Programming | <ol style="list-style-type: none">1. Enter 006. Display: Day/Night Mode2. Press NEXT. Display example: Mode Change:Man3. Keep pressing SELECT until the desired selection is displayed.4. Press STORE.5. Press END. |
| Conditions | <ul style="list-style-type: none">• If automatic is assigned, the day/night/lunch mode is changed at the time programmed in [007] “Time (Day/Night/Lunch) Service Start Time”. However, if feature number “783#” is entered and the mode is changed to “lunch”, the mode will not be changed at the programmed time until feature number “780#” is entered.• The operator and manager can change the day/night/lunch mode at any time. |
| Feature Reference | Section 3, Features Time (Day/Night/Lunch) Service |

Time (Day/Night/Lunch) Service Start Time

| | |
|--------------------|---|
| Description | When automatic is programmed in program [006] “Time (Day/Night/Lunch) Service Changing Mode”, this program sets the starting time on a day of the week basis. |
| Selection | <ul style="list-style-type: none"> • Day of the week selection: Sunday / Monday / Tuesday / Wednesday / Thursday / Friday / Saturday / * (every day of the week) • Mode: Day / Night / Lunch-S (lunch starting time) / Lunch-E (lunch ending time) • Hour: 1 – 12 / None (no change) • Minute: 0 – 59 • AM / PM |
| Default | Every day of the week — Day – 9:00 AM / Night – 5:00 PM / Lunch-S – None / Lunch-E – None |
| Programming | <ol style="list-style-type: none"> 1. Enter 007. Display: Day/Night Time 2. Press NEXT. Display: Day of The Week 3. Press NEXT or PREV until the desired day of the week is displayed. To assign every day of the week, press * instead of NEXT or PREV. Display example: Sunday 4. Press SELECT. Display example: Day : 9:00AM To select another mode, keep pressing SELECT until the desired selection is displayed. 5. Press ➡. 6. Enter the hour. To set no change, keep pressing SELECT until “None” is displayed and go to step 11. If SELECT is pressed, the display shows the previous entry. If the previous setting was “None”, press SELECT to enter the starting time. To change the current entry, press CLEAR and enter the new time. 7. Press ➡. |

Time (Day/Night/Lunch) Service Start Time (contd.)

8. Enter the **minute**.
To change the current entry, press **CLEAR** and enter the new minutes.
9. Press **➡**.
10. Press **SELECT** for AM or PM.
11. Press **STORE**.
12. To program another time service mode, press **SELECT**.
13. Repeat steps 5 through 11.
14. To program another day of the week, press **NEXT** or **PREV**.
15. Repeat steps 4 through 14.
16. Press **END**.

Conditions

- If it is not necessary to change the time service, select “None” in step 6.
- To select the desired day, the user can also keep pressing **NEXT** in step 3. To assign every day of the week to the same selection, press the **✕** key in step 3. In this case, the display will show: **Every day**.
- The day or night mode is interrupted during the lunch mode. After the lunch mode is finished, the day or night mode will start again.

Feature Reference

Section 3, Features

Time (Day/Night/Lunch) Service

Operator Assignment

| | |
|--------------------------|---|
| Description | Assigns the jack number for the operator. The operator has the ability to perform operator services. |
| Selection | Jack number: 01 – 08 / Disable (no operator) |
| Default | Jack-01 |
| Programming | <ol style="list-style-type: none">1. Enter 008. Display: Operator Ext2. Press NEXT. Display example: OPT :Jack-013. Enter a jack number. To assign no operator, press CLEAR. To change the current entry, press CLEAR and enter the new jack number.4. Press STORE.5. Press END. |
| Conditions | None |
| Feature Reference | Section 3, Features Operator |

Extension Number Assignment

| | |
|---------------------------|---|
| Description | Assigns an extension number to each extension. |
| Selection | <ul style="list-style-type: none">• Jack number: 01 – 08• Extension Number: 100 – 199 |
| Default | Jack 01 – 08 = EXT 101 – 108 |
| Programming | <ol style="list-style-type: none">1. Enter 009. Display: Extension No Set2. Press NEXT. Display: Jack NO? →3. Enter a jack number. Pressing NEXT also can enter jack number 01. Display example: Jack01:EXT1014. Enter an extension number. To change the current entry, press CLEAR and enter the new number.5. Press STORE.6. To program another jack, press NEXT or PREV, or SELECT and enter the desired jack number.7. Repeat steps 4 through 6.8. Press END. |
| Conditions | <ul style="list-style-type: none">• Program [604] “Extension Name Setting” is used to name the extensions.• An extension number which has been assigned to one jack cannot be used for another jack. If an assigned number is entered, an alarm tone will be heard and the entry is invalid. |
| Feature References | Section 3, Features Display, Call Information Intercom Calling |

LCD Time Display Selection

| | |
|--------------------------|--|
| Description | Selects how the current time and date will be displayed on a proprietary telephone while it is idle. Either 12-hour format or 24-hour format (military time) is available. |
| Selection | 12 HOUR / 24 HOUR |
| Default | 12 HOUR |
| Programming | <ol style="list-style-type: none">1. Enter 010. Display: Time Display2. Press NEXT. Display example: 12 HOUR3. Press SELECT until the desired selection is displayed.4. Press STORE.5. Press END. |
| Condition | <ul style="list-style-type: none">• Programs [000] “Date and Time Setting” and [007] “Time (Day/Night/Lunch) Service Start Time”, and the Timed Reminder feature are assigned using 12-hour format regardless of this program. The SMDR printout is also printed using 12-hour format. |
| Feature Reference | Section 3, Features Display, in Idle |

System Speed Dialing Name Setting

| | |
|--------------------------|--|
| Description | Assigns a name to each System Speed Dialing number. The name will be displayed when making a call by using the System Speed Dialing feature. It will also be used for the Caller ID feature. |
| Selection | <ul style="list-style-type: none">• Speed dialing number: 00 – 99• Name: 16 characters (max.) |
| Default | All speed dialing numbers — Not stored |
| Programming | <ol style="list-style-type: none">1. Enter 011. Display: Speed Dial Name2. Press NEXT. Display: Speed NO? →3. Enter a speed dialing number. Pressing NEXT also can enter speed dialing number 00. Display example: 00:Not Stored4. Enter a name. For entering characters, please refer to “4.1.3 Entering Characters”. To delete the current entry, press CLEAR. To change the current entry, press CLEAR and enter the new name.5. Press STORE.6. To program another speed dialing number, press NEXT or PREV, or SELECT and enter the desired speed dialing number.7. Repeat steps 4 through 6.8. Press END. |
| Conditions | <ul style="list-style-type: none">• Speed dialing numbers are programmed in program [001] “System Speed Dialing Entry”.• Each name has a maximum of 16 characters. |
| Feature Reference | Section 3, Features System Speed Dialing |

| | |
|--------------------------|--|
| Description | Assigns to enable or disable the station hunting feature for each extension group. |
| Selection | <ul style="list-style-type: none">• Extension group number: 1 – 8, * (* = all extension groups)• Disable / Enable |
| Default | All extension groups — Disable |
| Programming | <ol style="list-style-type: none">1. Enter 100. Display: Hunting Group2. Press NEXT. Display: Group NO? →3. Enter an extension group number. Pressing NEXT also can enter extension group number 1. Display example: Group1:Disable4. Keep pressing SELECT until the desired selection is displayed.5. Press STORE.6. To program another extension group, press NEXT or PREV, or SELECT and enter the desired extension group number.7. Repeat steps 4 through 6.8. Press END. |
| Conditions | <ul style="list-style-type: none">• Program [600] “Extension Group Assignment” is used to assign the extension group members.• To assign all extension groups, press the * key in step 3. In this case, the display will show: Group*:Mixed. |
| Feature Reference | Section 3, Features Station Hunting |

Station Hunting Type

| | |
|--------------------------|---|
| Description | Used to set the Station Hunting type for each extension group. There are two Station Hunting types available: Circular and Terminating. If circular is assigned for a group, all of the extensions in the group are searched one time until an idle one is found. If terminating is assigned, searching stops at the extension which has the highest jack number in the group. |
| Selection | <ul style="list-style-type: none">• Extension group number: 1 – 8, * (* = all extension groups)• Terminate (terminating) / Circular |
| Default | All extension groups – Terminate |
| Programming | <ol style="list-style-type: none">1. Enter 101. Display: Hunting Type2. Press NEXT. Display: Group NO? →3. Enter an extension group number. Pressing NEXT also can enter extension group number 1. Display example: Group1:Terminate4. Keep pressing SELECT until the desired selection is displayed.5. Press STORE.6. To program another extension group, press NEXT or PREV, or SELECT and enter the desired extension group number.7. Repeat steps 4 through 6.8. Press END. |
| Conditions | <ul style="list-style-type: none">• Program [600] “Extension Group Assignment” is used to assign the extension group members.• If all extensions are busy, a busy tone will be heard. |
| Feature Reference | Section 3, Features Station Hunting |

*Hold Mode Selection***Description**

Assigns the call hold mode for single line telephones.
Each mode is explained as follows.

| | Operation | |
|---------------|---|---|
| | To hold | To transfer |
| Hold-1 | Flash the hookswitch + on-hook | Flash the hookswitch + extension number or line access code |
| Hold-2 | Flash the hookswitch + feature number (20) + on-hook | Flash the hookswitch + extension number or line access code |
| Hold-3 | Flash the hookswitch + feature number (20) + on-hook | Flash the hookswitch + feature number (20) + extension number or line access code |

Selection**Hold-1 / Hold-2 / Hold-3****Default**

Hold-1

Programming

1. Enter **104**.
Display: Hold Mode
2. Press **NEXT**.
Display example: Hold-1
3. Keep pressing **SELECT** until the desired selection is displayed.
4. Press **STORE**.
5. Press **END**.

Conditions

None

Feature References

Section 3, Features
Call Hold – Intercom
Call Hold – Outside (CO) Line

Conference Tone

| | |
|--------------------------|--|
| Description | Assigns whether or not a confirmation tone is sent before starting and ending a conference call. This assignment also works for the Executive Busy Override feature. |
| Selection | Enable / Disable |
| Default | Enable |
| Programming | <ol style="list-style-type: none">1. Enter 105. Display: Conference Tone2. Press NEXT. Display example: Enable3. Keep pressing SELECT until the desired selection is displayed.4. Press STORE.5. Press END. |
| Conditions | None |
| Feature Reference | Section 3, Features Conference |

External Paging Access Tone

| | |
|---------------------------|---|
| Description | Used to remove the confirmation tone for the external pager. The default setting sends confirmation tone to the external pager before paging is sent. |
| Selection | Enable / Disable |
| Default | Enable |
| Programming | <ol style="list-style-type: none">1. Enter 106. Display: Ext-Pag Ack-Tone2. Press NEXT. Display example: Page: Enable3. Keep pressing SELECT until the desired selection is displayed.4. Press STORE.5. Press END. |
| Condition | <ul style="list-style-type: none">• The external pager is a user-supplied item. One external pager can be installed to the system. |
| Feature References | Section 3, Features Confirmation Tones Paging — All Paging — External |

DTMF Receiver Check

| | |
|---------------------------|---|
| Description | Enables or disables the DTMF receiver to check whether the DTMF receivers are activated normally or not. Two DTMF receivers work with the following card. DTMF-R 1 and 2 — basic extension card (jacks 01 – 08) |
| Selection | <ul style="list-style-type: none">• DTMF Receiver number: 1 – 2, * (* = all DTMF receiver)• Enable / Disable |
| Default | All DTMF receivers — Enable |
| Programming | <ol style="list-style-type: none">1. Enter 107. Display: DTMF-R Selection2. Press NEXT. Display:DTMF-R NO? →3. Enter the DTMF receiver number. Pressing NEXT also can enter DTMF receiver number 1. Display example:DTMF-R1:Enable4. Keep pressing SELECT until the desired selection is displayed.5. Press STORE.6. To program another DTMF receiver, press NEXT or PREV, or SELECT and enter the desired DTMF receiver number.7. Repeat steps 4 through 6.8. Press END. |
| Conditions | None |
| Feature References | None |

Flash Mode for a Station Locked Extension


| | |
|--------------------------|--|
| Description | Assigns whether or not an extension where the electronic station lockout feature has been set, can send a flash signal during a conversation with an external party. |
| Selection | Enable / Disable |
| Default | Disable |
| Programming | <ol style="list-style-type: none">1. Enter 108. Display: Locked Ext Flash2. Press NEXT. Display example: FLASH:Disable3. Keep pressing SELECT until the desired selection is displayed.4. Press STORE.5. Press END. |
| Conditions | None |
| Feature Reference | Section 3, Features Electronic Station Lockout |

CO Indicator Assignment

| | |
|---------------------------|--|
| Description | Assigns whether or not an extension user can answer an incoming outside call when they were was not assigned to receive calls in programs “[408]–[410] Flexible Ringing Assignment — Day/Night/Lunch”. |
| Selection | <p>Enable (A CO button indicator will flash when a call is received. An extension user can answer the call by pressing the flashing button.)</p> <p>Disable (A CO button indicator lights when a call is received, but an extension user cannot answer the call.)</p> |
| Default | Enable |
| Programming | <ol style="list-style-type: none">1. Enter 109. Display: CO Indicator2. Press NEXT. Display example:Enable3. Keep pressing SELECT until the desired selection is displayed.4. Press STORE.5. Press END. |
| Conditions | None |
| Feature References | None |

Flash Key Mode

| | |
|---------------------------|---|
| Description | Assigns sending a flash signal when the FLASH/RECALL button on a proprietary telephone is pressed. |
| Selection | MODE 1 (A flash signal is sent during the time programmed in program “[418] Flash Time”) MODE 2 (A flash signal is sent while the FLASH/RECALL button is pressed.) |
| Default | MODE 2 |
| Programming | <ol style="list-style-type: none">1. Enter 110. Display: Flash Key2. Press NEXT. Display example:MODE 13. Keep pressing SELECT until the desired selection is displayed.4. Press STORE.5. Press END. |
| Condition | <ul style="list-style-type: none">• For MODE 2, a flash signal will be sent for the programmed time in program [418] if the FLASH/RECALL button is pressed for less than the programmed time. |
| Feature References | Section 3, Features External Feature Access Flash |

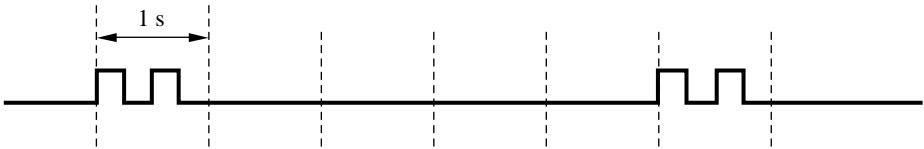
| | |
|-------------------|---|
| Description | Used to determine the music source use for Music on Hold for outside calls. |
| Selection | External / Tone |
| Default | External |
| Programming | <div><div>1. Enter 111.</div><div>Display: Hold Music</div><div>2. Press NEXT.</div><div>Display example:External</div><div>3. Keep pressing SELECT until the desired selection is displayed.</div><div>4. Press STORE.</div><div>5. Press END.</div></div> |
| Conditions | <div><div><div>The external music source is a user-supplied item. One music source can be installed.</div><div>If “Tone” is assigned, the following cyclic tone is sent to the held outside (CO) line.</div></div><div></div></div> |
| Feature Reference | Section 3, Features Music on Hold |

DSS Button Indication Mode

| | |
|---------------------------|---|
| Description | Enables or disables the Busy Lamp Field (BLF) on a DSS button assigned to a flexible CO button to indicate the Forward (FWD) or Do Not Disturb (DND) status of corresponding extensions. |
| Selection | Enable (FWD/DND — flashing) / Disable (FWD/DND — off) |
| Default | Enable |
| Programming | <ol style="list-style-type: none">1. Enter 112. Display: DSS Indication2. Press NEXT. Display example: Enable3. Keep pressing SELECT until the desired selection is displayed.4. Press STORE.5. Press END. |
| Conditions | None |
| Feature References | None |

Description

Selects the extension ringing pattern when an intercom call is received.
The ringing patterns are shown below.

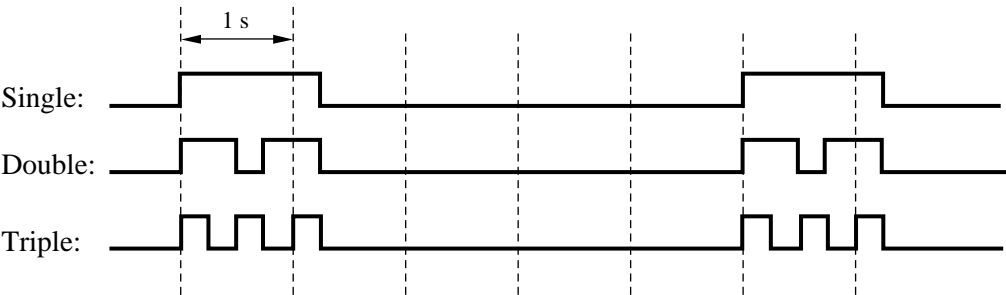

Selection

Single / Double / Triple

Default

Double

- Programming
1.

Enter **115**.

Display: Ext Ring Pattern
2.

Press **NEXT**.

Display example: Double
3.

Keep pressing **SELECT** until the desired selection is displayed.
4.

Press **STORE**.
5.

Press **END**.

Conditions

- The programs [423] “Outside (CO) Line Ringing Pattern Selection” and [706] “Doorphone Ringing/Tone Pattern Selection” should be considered when assigning this program.

Feature Reference

Section 3, Features

Ringing Pattern Selection for Intercom Calls and Outside (CO) Lines

| | |
|---------------------------|---|
| Description | Enables or disables the confirmation tone sent when the Call pickup feature is activated. |
| Selection | Enable / Disable |
| Default | Enable |
| Programming | <ol style="list-style-type: none">1. Enter 117. Display: Call Pickup Tone2. Press NEXT. Display example: Enable3. Keep pressing SELECT until the desired selection is displayed.4. Press STORE.5. Press END. |
| Conditions | None |
| Feature References | Section 3, Features Call Pickup, Directed Call Pickup, Group |

Pulse Restriction

| | |
|---------------------------|---|
| Description | Enables or disables sending pulse dialing to the Central Office during a conversation with an external party, when Pulse or Call block is selected in program [401] “Dial Mode”. |
| Selection | Enable / Disable |
| Default | Enable |
| Programming | <ol style="list-style-type: none">1. Enter 118. Display: Pulse Restrict2. Press NEXT. Display example: Enable3. Keep pressing SELECT until the desired selection is displayed.4. Press STORE.5. Press END. |
| Conditions | None |
| Feature References | None |

Redialing After Pulse to Tone Conversion

| | |
|--------------------------|--|
| Description | Enables or disables sending tone dialing to the Central Office when an extension user redials after changing from pulse to tone mode by pressing * and #. |
| Selection | Enable / Disable |
| Default | Disable |
| Programming | <ol style="list-style-type: none">1. Enter 119. Display: Redial After * #2. Press NEXT. Display example: Disable3. Keep pressing SELECT until the desired selection is displayed.4. Press STORE.5. Press END. |
| Conditions | None |
| Feature Reference | Section 3, Features Pulse to Tone Conversion |

*Toll Restriction Check for * and #*

| | |
|--------------------------|--|
| Description | Assigns whether the entered “*” and “#” are checked by toll restriction or not. This assignment is required for certain Central Offices to prevent toll fraud. Some Central Offices ignore the user-dialed “*” and “#”. If the user’s Central Office ignores these symbols, select “Disable”. |
| Selection | Enable (check) / Disable (does not check) |
| Default | Enable |
| Programming | <ol style="list-style-type: none">1. Enter 125. Display: TRS Check for * #2. Press NEXT. Display example: Enable3. Keep pressing SELECT until the desired selection is displayed.4. Press STORE.5. Press END. |
| Conditions | None |
| Feature Reference | Section 3, Features Toll Restriction |

| | |
|--------------------------|--|
| Description | Assigns the length of the hold recall timer. This timer is used to alert an extension that a call has been held for an extended period of time. |
| Selection | Time: 30 sec / 1 min / 1.5 min / 2 min / 3 min / 4 min / 5 min / 6 min / Disable (= Hold Recall disabled) (seconds/minutes) |
| Default | 30 sec |
| Programming | <ol style="list-style-type: none">1. Enter 200. Display: Hold Recall Time2. Press NEXT. Display example: Time:30 sec3. Keep pressing SELECT until the desired selection is displayed.4. Press STORE.5. Press END. |
| Condition | <ul style="list-style-type: none">• When “Disable” is selected, the hold alarm is also disabled. |
| Feature Reference | Section 3, Features Hold Alarm/Hold Recall |

Transfer Recall Time

| | |
|--------------------------|---|
| Description | Assigns the length of the transfer recall timer. If a transferred call is not answered within the programmed time, the call will be returned to the person who initiated the transfer. |
| Selection | Time: 15 sec / 30 sec / 1 min / 2 min (seconds/minutes) |
| Default | 30 sec |
| Programming | <ol style="list-style-type: none">1. Enter 201. Display: Transfer Recall2. Press NEXT. Display example: Time:30 sec3. Keep pressing SELECT until the desired selection is displayed.4. Press STORE.5. Press END. |
| Conditions | None |
| Feature Reference | Section 3, Features Call Transfer, Unscreened — to Extension |

Call Forwarding Start Time

| | |
|--------------------------|--|
| Description | Sets the time for the Call Forwarding – No Answer feature. If a call is not answered within the programmed time, the call will be forwarded to the destination. |
| Selection | 5 sec delay / 10 sec delay / 15 sec delay / 20 sec delay (seconds) |
| Default | 15 sec delay |
| Programming | <ol style="list-style-type: none">1. Enter 202. Display: Call FWD Delay2. Press NEXT. Display example: 15sec delay3. Keep pressing SELECT until the desired selection is displayed.4. Press STORE.5. Press END. |
| Conditions | None |
| Feature Reference | Section 3, Features Call Forwarding – Busy/No Answer |

Pickup Dial Delay Time

| | |
|--------------------------|--|
| Description | Sets the length of time for the Pickup Dialing feature. If the telephone user lifts the handset, the programmed party will be called when the time expires. This delay gives the user an opportunity to enter numbers before automatic dialing occurs. |
| Selection | 1 sec / 2 sec / 3 sec / 4 sec (seconds) |
| Default | 3 sec |
| Programming | <ol style="list-style-type: none">1. Enter 203. Display: Pickup Dial Time2. Press NEXT. Display example: PUD Time:3sec3. Keep pressing SELECT until the desired selection is displayed.4. Press STORE.5. Press END. |
| Conditions | None |
| Feature Reference | Section 3, Features Pickup Dialing |

Call Duration Count Start Time

| | |
|---------------------------|--|
| Description | Sets the number of seconds the system waits between the end of dialing and the start of the SMDR timer for outgoing toll calls. When the system has sent all the digits to the central office and this timer expires, the system will start counting the call. A display telephone shows the elapsed time of the call. The starting time and the duration of a call are recorded in the SMDR record. |
| Selection | Instantly / 5 s / 10 s / 15 s / 20 s / 25 s / 30 s / 35 s / 40 s / 45 s / 50 s after dial (seconds) |
| Default | 10 s after dial |
| Programming | <ol style="list-style-type: none">1. Enter 204. Display: Durat-Time Count2. Press NEXT. Display example: 5s after dial3. Keep pressing SELECT until the desired selection is displayed.4. Press STORE.5. Press END. |
| Condition | <ul style="list-style-type: none">• The timer starts counting after all the digits are dialed. This timer does not apply to incoming calls. The timer for incoming calls starts immediately. |
| Feature References | Section 3, Features Display, Call Information Station Message Detail Recording (SMDR) |

Outside-to-Outside (CO-to-CO) Line Duration Time Limit

| | |
|---------------------------|--|
| Description | Sets the maximum time allowed for a conversation between two external parties. When the timer expires, the Outside-to-Outside (CO-to-CO) Line call is disconnected. |
| Selection | Time (minutes): 1 – 32 |
| Default | 10 min |
| Programming | <ol style="list-style-type: none">1. Enter 205. Display: CO-CO Dur. Limit2. Press NEXT. Display example: Time:10min3. Enter the time. To change the current entry, press CLEAR and enter the new time.4. Press STORE.5. Press END. |
| Conditions | None |
| Feature References | Section 3, Features Call Forwarding – to an Outside (CO) Line Call Transfer, Screened – to an Outside (CO) Line Conference, Unattended Direct Inward System Access (DISA) |

Dialing Start Time

| | |
|---------------------------|--|
| Description | Sets the number of milliseconds the system waits before dialing after an outside (CO) line is seized. |
| Selection | 0 msec / 250 msec / 500 msec / 750 msec / 1000 msec / 1250 msec / 1500 msec (milliseconds) |
| Default | 0 msec |
| Programming | <ol style="list-style-type: none">1. Enter 206. Display: Dial Start Time2. Press NEXT. Display example: Time: 0 msec3. Keep pressing SELECT until the desired selection is displayed.4. Press STORE.5. Press END. |
| Conditions | None |
| Feature References | Section 3, Features Line Access, Automatic Line Access, Direct Line Access, Individual |

Interdigit Time

| | |
|--------------------------|--|
| Description | Assigns the maximum time allowed between digits for an outgoing outside call. |
| Selection | 5 sec / 10 sec / 15 sec / 20 sec (seconds) |
| Default | 10 sec |
| Programming | <ol style="list-style-type: none">1. Enter 208. Display: Interdigit Time2. Press NEXT. Display example: Time:10 sec3. Keep pressing SELECT until the desired selection is displayed.4. Press STORE.5. Press END. |
| Conditions | <ul style="list-style-type: none">• The interdigit timer applies until the toll restriction check is completed. When the timer expires, an outgoing outside call will be disconnected while dialing, if “Enable” was selected in program [211] “No Dial Disconnection”.• For a single line telephone, an outgoing outside call will be released from a DTMF receiver when the interdigit timer expires. |
| Feature Reference | Section 3, Features Toll Restriction |

No Dial Disconnection

| | |
|---------------------------|--|
| Description | Enables or disables disconnecting an outside (CO) line if an extension user does not dial anything within 10 seconds after an outside (CO) line is seized. |
| Selection | Enable (disconnect) / Disable (does not disconnect) |
| Default | Disable |
| Programming | <ol style="list-style-type: none">1. Enter 211. Display: No Dial Mode2. Press NEXT. Display example: Disable3. Keep pressing SELECT until the desired selection is displayed.4. Press STORE.5. Press END. |
| Condition | <ul style="list-style-type: none">• The interdigit timer assigned in program [208] “Interdigit Time” applies until the toll restriction check is completed. When the timer expires, an outgoing outside call will be disconnected while dialing, if “Enable” was selected in this program. |
| Feature References | None |

Carrier Code Assignment

| | |
|---------------------------|--|
| Description | Assigns carrier codes. This allows the system to recognize a special user-dialed carrier code in order to apply toll restriction. The system disregards the assigned code and toll restriction is applied to the numbers after the code. |
| Selection | <ul style="list-style-type: none">• Code number: 01 – 20• Carrier code number: 10 digits (max.) |
| Default | All codes – Not stored |
| Programming | <ol style="list-style-type: none">1. Enter 300. Display: Carrier Excepted2. Press NEXT. Display: CODE NO? →3. Enter a code number. Pressing NEXT also can enter code number 01. Display example: 01:Not Stored4. Enter a carrier code number. To delete the current entry, press CLEAR. To change the current entry, press CLEAR and enter the new number.5. Press STORE.6. To program another code, press NEXT or PREV, or SELECT and enter the desired code number.7. Repeat steps 4 through 6.8. Press END. |
| Condition | <ul style="list-style-type: none">• Each carrier code number has a maximum of ten digits, consisting of 0 – 9, *, # and x (PAUSE button). The character “x” can be used as a wild card character and is entered by pressing the PAUSE button. |
| Feature References | Section 3, Features Pause Insertion, Automatic Toll Restriction for Special Carrier Access |

Toll Restriction — System Speed Dialing Boundary Class

| | |
|--------------------------|---|
| Description | Assigns the Toll Restriction class for System Speed Dialing numbers. |
| Selection | Boundary COS-1 / Boundary COS-2 / Boundary COS-3 / Boundary COS-4 / Boundary COS-5 |
| Default | Boundary COS-1 |
| Programming | <ol style="list-style-type: none">1. Enter 301. Display: SSD Boundary2. Press NEXT. Display example: Boundary COS-13. Keep pressing SELECT until the desired selection is displayed.4. Press STORE.5. Press END. |
| Conditions | None |
| Feature Reference | Section 3, Features Toll Restriction for System Speed Dialing |

*Toll Restriction — Class 2 – 5 Denied Codes***Description**

These allow the user to specify which numbers are toll-restricted for each toll restriction class as follows.

Program [302]: restricts COS numbers 2 – 5.

Program [303]: restricts COS numbers 3 – 5.

Program [304]: restricts COS numbers 4 – 5.

Program [305]: restricts COS number 5.

Selection

- Code number: **01 – 20**
- Toll restriction number: **11 digits**

Default

All codes – Not stored

Programming

1. Enter a **program address (302 to 305)**.

Display example: COS-2 Table

2. Press **NEXT**.

Display: CODE NO? →

3. Enter a **code number**.

Pressing **NEXT** also can enter code number 01.

Display example: 01:

4. Enter a **toll call number**.

To delete the current entry, press **CLEAR**.

To change the current entry, press **CLEAR** and enter the new number.

5. Press **STORE**.

6. To program another code, press **NEXT** or **PREV**, or **SELECT** and enter the desired **code number**.

7. Repeat steps 4 through 6.

8. Press **END**.

Conditions

- There is a maximum of 20 numbers which can be restricted for each program. Each number must have eleven digits, consisting of **0 – 9**, *****, **#** and **x** (PAUSE button). The character “x” can be used as a wild card character and is entered by pressing the PAUSE button.
- Program [306] “Toll Restriction — Exception Codes” is used to assign exceptions to these numbers. Programs [601]–[603] “TRS – Class of Service (COS) Assignment — Day/Night/Lunch” are used to set the toll restriction value for each extension.

Feature Reference

Section 3, Features
Toll Restriction

Toll Restriction — Exception Codes

| | |
|--------------------------|--|
| Description | This allows the user to assign numbers which are exceptions to toll restriction specified in programs [302] – [305]. |
| Selection | <ul style="list-style-type: none"> • Code number: 01 – 80 • Exception number: 11 digits |
| Default | All codes – Not stored |
| Programming | <ol style="list-style-type: none"> 1. Enter 306. Display: Excepted Table 2. Press NEXT. Display: CODE NO?→ 3. Enter a code number. Pressing NEXT also can enter code number 01. Display example: 01: 4. Enter an exception number. To delete the current entry, press CLEAR. To change the current entry, press CLEAR and enter the new number. 5. Press STORE. 6. To program another code, press NEXT or PREV, or SELECT and enter the desired code number. 7. Repeat steps 4 through 6. 8. Press END. |
| Conditions | <ul style="list-style-type: none"> • There is a maximum of eighty numbers. Each number must have eleven digits, consisting of 0 – 9, *, # and x (PAUSE button). The character “x” can be used as a wild card character and is entered by pressing the PAUSE button. • Code numbers 01 – 80 apply to COS number 2, 01 – 60 apply to COS number 3, 01 – 40 apply to COS number 4, and 01 – 20 apply to COS number 5. |
| Feature Reference | Section 3, Features Toll Restriction |

Emergency Dial Number Set

| | |
|---------------------------|---|
| Description | Stores up to five emergency numbers. Emergency numbers are not subject to toll restriction, Account Code – Forced/Verify - All modes or Electronic Station Lockout. |
| Selection | <ul style="list-style-type: none">• Code number: 1 – 5• Emergency number: 24 digits (max.) |
| Default | Code-01 = 911, Other Codes = Not stored |
| Programming | <ol style="list-style-type: none">1. Enter 309. Display: Emergency Code2. Press NEXT. Display: CODE NO? →3. Enter a code number. Pressing NEXT also can enter code number 1. Display example: 01:4. Enter an emergency number. To delete the current entry, press CLEAR. To change the current entry, press CLEAR and enter the new number.5. Press STORE.6. To program another code, press NEXT or PREV, or SELECT and enter the desired code number.7. Repeat steps 4 through 6.8. Press END. |
| Condition | <ul style="list-style-type: none">• Each emergency number has a maximum of 24 digits, consisting of 0 – 9. |
| Feature References | Section 3, Features Account Code Entry Electronic Station Lockout Emergency Call Toll Restriction |

| | |
|---------------------------|--|
| Description | Assigns the account codes for Account Code Entry, Verify – All and Verify – Toll modes. If Verify – All is assigned in program [605] “Account Code Entry Mode”, an account code is required to make an outside call. If Verify – Toll is assigned, an account code is only required to override toll restriction. |
| Selection | <ul style="list-style-type: none">• Code number: 01 – 24• Account code: 4 digits |
| Default | All codes – Not stored |
| Programming | <ol style="list-style-type: none">1. Enter 310. Display: Account Code2. Press NEXT. Display: CODE NO? →3. Enter a code number. Pressing NEXT also can enter code number 01. Display example: CODE-01:....4. Enter an account code. To delete the current entry, press CLEAR. To change the current entry, press CLEAR and enter the new account code.5. Press STORE.6. To program another code number, press NEXT or PREV, or SELECT and enter the desired code number.7. Repeat steps 4 through 6.8. Press END. |
| Conditions | <ul style="list-style-type: none">• Each verifiable account code has 4 digits, consisting of 0 – 9.• Program [605] “Account Code Entry Mode” is used to select the Account Code Entry mode. |
| Feature References | Section 3, Features Account Code Entry Toll Restriction Override by Account Codes |

Automatic Pause Insertion Codes

Description

Assigns up to 40 automatic pause insertion codes which are checked with the outside outgoing call number. When one of the codes is the same as the call number, the pause time assigned in program [417] “Pause Time” is automatically inserted after the code. If a second dial tone is sent from the Central Office, it is convenient to assign the area code as the pause code.

Selection

- Code number: **01 – 40**
- Pause code number: **11 digits (max.)**

Default

All codes – Not stored

Programming

1. Enter **311**.
Display: Auto Pause Code
2. Press **NEXT**.
Display: CODE NO? →
3. Enter a **code number**.
Pressing **NEXT** also can enter code number 01.
Display example: 01:.....
4. Enter a **pause code**.
To delete the current entry, press **CLEAR**.
To change the current entry, press **CLEAR** and enter the new number.
5. Press **STORE**.
6. To program another code number, press **NEXT** or **PREV**, or **SELECT** and enter the desired **code number**.
7. Repeat steps 4 through 6.
8. Press **END**.

Condition

- Each pause code number has a maximum of eleven digits, consisting of **0 – 9**.

Feature Reference

Section 3, Features
Pause Insertion, Automatic

Toll Restriction — Station Lock Boundary Class

| | |
|---------------------------|--|
| Description | Assigns the Toll Restriction COS number when the Electronic Station Lockout is set. |
| Selection | COS-2 / COS-3 / COS-4 / COS-5 / Disable |
| Default | Disable |
| Programming | <ol style="list-style-type: none">1. Enter 312. Display: LOCK Boundary2. Press NEXT. Display example: Boundary Disable3. Keep pressing SELECT until the desired selection is displayed.4. Press STORE.5. Press END. |
| Conditions | None |
| Feature References | Section 3, Features Electronic Station Lockout Toll Restriction — Station Lock Boundary Class |

Outside (CO) Line Connection Assignment

| | |
|--------------------------|---|
| Description | Used to identify which outside (CO) lines are connected to the system. This prevents users from calling a line which is not connected. |
| Selection | <ul style="list-style-type: none">• Outside (CO) line number: 1 – 3, * (* = all outside (CO) lines)• Connect / Not Connect |
| Default | All outside (CO) lines – Connect |
| Programming | <ol style="list-style-type: none">1. Enter 400. Display: CO Connection2. Press NEXT. Display: CO NO? →3. Enter an outside (CO) line number. Pressing NEXT also can enter outside (CO) line number 1. Display example: CO 1:Connect4. Keep pressing SELECT until the desired selection is displayed.5. Press STORE.6. To program another outside (CO) line, press NEXT or PREV, or SELECT and enter the desired outside (CO) line number.7. Repeat steps 4 through 6.8. Press END. |
| Condition | <ul style="list-style-type: none">• To assign all outside (CO) lines to the same selection, press the * key in step 3. In this case, the display will show: CO *:Mixed. |
| Feature Reference | Section 3, Features Outside (CO) Line Connection Assignment |

| | |
|--------------------------|--|
| Description | <p>Each outside (CO) line can be programmed for DTMF, pulse or call blocking. This program assigns the selection to each line.</p> <p>DTMF: The dialing signals from an extension, either tone or pulse, are converted to tone signals and transmitted to an outside (CO) line.</p> <p>Pulse: The dialing signals from an extension, either tone or pulse, are converted to pulse signals and transmitted to an outside (CO) line.</p> <p>Call Blocking: If the Central Office can receive both DTMF and pulse signals but the user is contracted for pulse, select this mode. When dialing with a touch tone telephone, only the pulse signals are sent to an outside (CO) line.</p> |
| Selection | <ul style="list-style-type: none"> • Outside (CO) line number: 1 – 3, * (* = all outside (CO) lines) • DTMF Mode / Pulse Mode / C.BLK Mode (Call Blocking) |
| Default | All outside (CO) lines — DTMF Mode |
| Programming | <ol style="list-style-type: none"> 1. Enter 401. Display: CO Dial Mode 2. Press NEXT. Display: CO NO? → 3. Enter an outside (CO) line number. Pressing NEXT also can enter outside (CO) line number 1. Display example: CO 1:DTMF Mode 4. Keep pressing SELECT until the desired selection is displayed. 5. Press STORE. 6. To program another outside (CO) line, press NEXT or PREV, or SELECT and enter the desired outside (CO) line number. 7. Repeat steps 4 through 6. 8. Press END. |
| Conditions | <ul style="list-style-type: none"> • To assign all outside (CO) lines to the same selection, press the * key in step 3. In this case, the display will show: CO *:Mixed. • If pulse or call blocking is assigned, set the line pulse speed in program [402] “Pulse Speed Selection”. |
| Feature Reference | <p>Section 3, Features</p> <p>Dial Type Selection</p> |

Pulse Speed Selection

| | |
|--------------------------|--|
| Description | An outside (CO) line set for pulse or call blocking mode in program [401] “Dial Mode” can have two pulse rates, 10 pps (low) and 20 pps (high). This program sets the pulse speed for each outside (CO) line which has set the pulse or call blocking mode. |
| Selection | <ul style="list-style-type: none">• Outside (CO) line number: 1 – 3, * (* = all outside (CO) lines)• Low Speed (10 pps) / High Speed (20 pps) |
| Default | All outside (CO) lines – Low Speed |
| Programming | <ol style="list-style-type: none">1. Enter 402. Display: Pulse Speed2. Press NEXT. Display: CO NO? →3. Enter an outside (CO) line number. Pressing NEXT also can enter outside (CO) line number 1. Display example: CO 1: Low Speed4. Keep pressing SELECT until the desired selection is displayed.5. Press STORE.6. To program another outside (CO) line, press NEXT or PREV, or SELECT and enter the desired outside (CO) line number.7. Repeat steps 4 through 6.8. Press END. |
| Conditions | <ul style="list-style-type: none">• To assign all outside (CO) lines to the same selection, press the * key in step 3. In this case, the display will show: CO *:Mixed.• The required pulse speed is determined by the outside (CO) or Host PBX line. |
| Feature Reference | Section 3, Features Dial Type Selection |

Host PBX Access Codes

| | |
|--------------------|---|
| Description | Assigns Host PBX access codes. If the system is installed behind a host PBX system, an access code is required to make an outside call. Up to eight codes can be stored for an outside (CO) line connected to the host PBX. |
| Selection | <ul style="list-style-type: none">• Outside (CO) line number: 1 – 3, * (* = all outside (CO) lines)• Access code: 1 or 2 digits, eight different entries (max.) |
| Default | All outside (CO) lines – Not stored |
| Programming | <ol style="list-style-type: none">1. Enter 403. Display: Host PBX Access2. Press NEXT. Display: CO NO? →3. Enter an outside (CO) line number. Pressing NEXT also can enter outside (CO) line number 1. Display example: CO 1:Not Stored4. Enter an access code. To delete the current entry, press CLEAR. To change the current entry, press CLEAR and enter the new access code. Display example: CO 1:015. To enter more access codes for the same outside (CO) line, press “,” (CONF button) and enter the access codes until all of the required entries are completed. Display example: CO 1:01,08,10,226. Press STORE.7. To program another outside (CO) line, press NEXT or PREV, or SELECT and enter the desired outside (CO) line number.8. Repeat steps 4 through 7.9. Press END. |

Host PBX Access Codes (contd.)

Conditions

- This program is only required if a host PBX is connected to the system.
- There is a maximum of eight access codes per outside (CO) line. Each code has one or two digits, consisting of **0 – 9**.
- When the programmed codes are dialed, Automatic Pause Insertion and Toll Restriction are applied to all calls. The programmed pause time (in program [417] “Pause Time”) is automatically inserted after the access code.
- To assign all outside (CO) lines to the same selection, press the **✱** key in step 3. In this case, the display will show: CO ✱:Mixed.

Feature References

| | |
|-------------------------|----------------------------|
| Section 3, Features | |
| External Feature Access | Pause Insertion, Automatic |
| Host PBX Access | |

Outside (CO) Line Group Assignment

| | |
|--------------------------|--|
| Description | Each outside (CO) line must be assigned to an outside (CO) line group (trunk group). This program defines the outside (CO) line group assignment for each outside (CO) line. For example, if there are multiple telephone service companies available, the outside (CO) lines can be grouped by company. |
| Selection | <ul style="list-style-type: none"> • Outside (CO) line number: 1 – 3, * (* = all outside (CO) lines) • Outside (CO) line group (Trunk) number: 1 – 3 |
| Default | CO1 — TRK GRP-1; CO2 — TRK GRP-2; CO3 — TRK GRP-3; |
| Programming | <ol style="list-style-type: none"> 1. Enter 404. Display: Trunk Group 2. Press NEXT. Display: CO NO? → 3. Enter an outside (CO) line number. Pressing NEXT also can enter outside (CO) line number 1. Display example: CO 1:TRK GRP-1 4. Enter the outside (CO) line group number. To change the current entry, enter the new outside (CO) line group number. 5. Press STORE. 6. To program another outside (CO) line, press NEXT or PREV, or SELECT and enter the desired outside (CO) line number. 7. Repeat steps 4 through 6. 8. Press END. |
| Condition | <ul style="list-style-type: none"> • To assign all outside (CO) lines to the same outside (CO) line group, press the * key in step 3. In this case, the display will show: CO *:Mixed. |
| Feature Reference | Section 3, Features Outside (CO) Line Group |

*Flexible Outward Dialing Assignment — Day/Night/Lunch***Description**

Determines which outside (CO) lines can be accessed by an extension in the day, night and lunch modes. The extension users can make outgoing outside calls using the assigned outside (CO) lines.

Selection

- Outside (CO) line number: **1 – 3, *** (* = all outside (CO) lines)
- Jack number: **01 – 08, *** (* = all jacks)
- **Enable / Disable**

Default

All outside (CO) lines – all jacks – Enable — Day/Night/Lunch

Programming

1. Enter a **program address (405 for day, 406 for night or 407 for lunch)**.

Display example: Day Out CO

2. Press **NEXT**.

Display: CO NO? →

3. Enter an **outside (CO) line number**.

Pressing **NEXT** also can enter outside (CO) line number 1.

Display example: CO 1:#01:Enable

4. Enter the desired **jack number** after pressing the # key.

The user can also keep pressing **▶** or **◀** until the desired jack number is displayed.

5. Keep pressing **SELECT** until the desired selection is displayed.

6. Press **STORE**.

7. To program another jack, press **▶** or **◀**, or # and enter the desired **jack number**.

8. Repeat steps 5 through 7.

9. To program another outside (CO) line, press **NEXT** or **PREV**, or **SELECT** and the desired **outside (CO) line number**.

10. Repeat steps 4 through 9.

11. Press **END**.

Condition

- To assign all jacks or outside (CO) lines to the same selection, press the * key in step 3 or 4. In these cases, the display will show:
CO *:# *:Mixed.

Feature References**Section 3, Features**

Outside (CO) Line Connection Assignment – Outgoing Time (Day/Night/Lunch) Service

Flexible Ringing Assignment — Day/Night/Lunch

Description

Allows more than one extension to ring in the day, night and lunch modes. All incoming calls from the programmed outside (CO) lines are directed to the specified extensions.

Selection

- Outside (CO) line number: **1 – 3, *** (* = all outside (CO) lines)
- Jack number: **01 – 08, *** (* = all jacks)
- **Disable / Enable**

Default

All outside (CO) lines – all jacks – Enable — Day/Night/Lunch

Programming

1. Enter a **program address (408 for day, 409 for night or 410 for lunch).**

Display example: Day In CO

2. Press **NEXT**.

Display: CO NO? →

3. Enter an **outside (CO) line number**.

Pressing **NEXT** also can enter outside (CO) line number 1.

Display example: CO 1:#01:Enable

4. Enter the **jack number** after pressing the # key.

The user can also keep pressing **➡** or **⬅** until the desired jack number is displayed.

5. Keep pressing **SELECT** until the desired selection is displayed.

6. Press **STORE**.

7. To program another jack, press **➡** or **⬅**, or # and enter the desired **jack number**.

8. Repeat steps 5 through 7.

9. To program another outside (CO) line, press **NEXT** or **PREV**, or **SELECT** and the desired **outside (CO) line number**.

10. Repeat steps 4 through 9.

11. Press **END**.

Conditions

- An extension can be assigned as the destination for as many outside (CO) lines required.
- To assign all jacks or all outside (CO) lines to the same selection, press the * key in step 3 or step 4. In these cases, the display will show:
CO *:# *:Mixed.

Feature References

Section 3, Features

Ring, Delayed

Time (Day/Night/Lunch) Service

*Delayed Ringing Assignment — Day/Night/Lunch***Description**

Assigns the ringing start time for each jack in the day, night and lunch modes.

Selection

- Outside (CO) line number: **1 – 3, *** (* = all outside (CO) lines)
- Jack number: **01 – 08, *** (* = all jacks)
- **Immdtly** (immediate ringing) / **5 sec** / **10 sec** / **15 sec**

Default

All outside (CO) lines – all jacks – Immdtly — Day/Night/Lunch

Programming

1. Enter a **program address** (**411 for day, 412 for night or 413 for lunch**).

Display example: Day Delayed CO

2. Press **NEXT**.

Display: CO NO? →

3. Enter an **outside (CO) line number**.

Pressing **NEXT** also can enter outside (CO) line number 1.

Display example: CO 1:#01:Immdtly

4. Enter a **jack number** after pressing the # key.

The user can also keep pressing **➡** or **⬅** until the desired outside (CO) line number is displayed.

5. Keep pressing **SELECT** until the desired selection is displayed.

6. Press **STORE**.

7. To program another jack, press **➡** or **⬅**, or # and enter the desired **jack number**.

8. Repeat steps 5 through 7.

9. To program another outside (CO) line, press **NEXT** or **PREV**, or **SELECT** and the desired **outside (CO) line number**.

10. Repeat steps 4 through 9.

11. Press **END**.

Conditions

- To assign all jacks or outside (CO) lines to the same selection, press the * key in step 3 or step 4. In these cases, the display will show:
CO *:# *:Mixed.
- There are four notification methods.
 - (1) Immediate ringing: rings immediately
 - (2) 5 second delay
 - (3) 10 second delay
 - (4) 15 second delay

Feature References

Section 3, Features
Ringing, Delayed
Time (Day/Night/Lunch) Service

*Outside (CO) Line Mode — Day/Night/Lunch***Description**

Selects the mode of an incoming outside call on each outside (CO) line in the day, night and lunch modes. There are the following three modes.

Normal: an incoming outside call will be received at the extension(s) assigned in programs [408]–[410].

DIL: an incoming outside call will be received at the assigned extension.

DISA1: an incoming outside call will be received at an extension through the DISA feature. A caller will hear a tone.

Selection

- Outside (CO) line number: **1 – 3, *** (* = all outside (CO) lines)
- **Normal / DIL + extension jack number (01 through 08) / DISA1**

Default

All outside (CO) lines – Normal — Day/Night/Lunch

Programming

1. Enter a **program address (414 for day, 415 for night or 416 for lunch)**.

Display example: CO Day/Mode

2. Press **NEXT**.

Display: CO NO? →

3. Enter an **outside (CO) line number**.

Pressing **NEXT** also can enter outside (CO) line number 1.

Display example: CO 1:Normal

4. Keep pressing **SELECT** until the desired selection is displayed and if “DIL” is selected, enter the **extension jack number**.
5. Press **STORE**.
6. To program another outside (CO) line, press **NEXT** or **PREV**, or **SELECT** and enter the desired **outside (CO) line number**.
7. Repeat steps 4 through 6.
8. Press **END**.

Condition

- To assign all the outside (CO) lines to the same selection, press the * key in step 3. In this case, the display will show: CO *:Mixed.

Feature Reference**Section 3, Features**

Direct In Lines (DIL)

Direct Inward System Access (DISA)

Pause Time

| | |
|---------------------------|--|
| Description | Assigns the length of the pause time. The programmed pause time is automatically inserted after a line access code or host PBX access code programmed in [403] “Host PBX Access Codes”, or can be manually inserted by the user with the PAUSE button. |
| Selection | <ul style="list-style-type: none">• Outside (CO) line number: 1 – 3, * (* = all outside (CO) lines)• Time (seconds): 1.5 sec / 2.5 sec / 3.5 sec / 4.5 sec |
| Default | All outside (CO) lines — 1.5 sec |
| Programming | <ol style="list-style-type: none">1. Enter 417. Display: Pause Time2. Press NEXT. Display: CO NO? →3. Enter an outside (CO) line number. Pressing NEXT also can enter outside (CO) line number 1. Display example: CO 1:1.5sec4. Keep pressing SELECT until the desired time is displayed.5. Press STORE.6. To program another outside (CO) line, press NEXT or PREV, or SELECT and enter the desired outside (CO) line number.7. Repeat steps 4 through 6.8. Press END. |
| Condition | <ul style="list-style-type: none">• To assign all outside (CO) lines to the same selection, press the * key in step 3. In this case, the display will show: CO *:Mixed. |
| Feature References | Section 3, Features Host PBX Access Pause Insertion, Automatic |

Flash Time

| | |
|---------------------------|--|
| Description | Assigns the length of the flash time. If the system is installed behind a host PBX, External Feature Access (EFA) is necessary to obtain its services. To enable this feature, select the required hooking signal sending time for an outside (CO) line. |
| Selection | <ul style="list-style-type: none">• Outside (CO) line number: 1 – 3, * (* = all outside (CO) lines)• Time (milliseconds): 80 ms / 100 ms / 160 ms / 300 ms / 600 ms / 900 ms / 1200 ms |
| Default | All outside (CO) lines – 600 ms |
| Programming | <ol style="list-style-type: none">1. Enter 418. Display: Flash Time Set2. Press NEXT. Display: CO NO? →3. Enter an outside (CO) line number. Pressing NEXT also can enter outside (CO) line number 1. Display example: CO 1: 600ms4. Keep pressing SELECT until the desired time is displayed.5. Press STORE.6. To program another outside (CO) line, press NEXT or PREV, or SELECT and enter the desired outside (CO) line number.7. Repeat steps 4 through 6.8. Press END. |
| Conditions | <ul style="list-style-type: none">• The required flash time is determined by the central office or host PBX lines.• To assign all outside (CO) lines to the same selection, press the * key in step 3. In this case, the display will show: CO *:Mixed. |
| Feature References | Section 3, Features External Feature Access Flash |

Automatic Designated Outside (CO) Line Access

| | |
|---------------------------|---|
| Description | Assigns the sequence in which outside (CO) lines will be accessed during the Automatic Line Access mode. When a user dials the feature number for automatic line access (9), an idle line is searched for in the programmed outside (CO) lines. |
| Selection | <ul style="list-style-type: none">• Outside (CO) line number: 1 – 3, * (* = all outside (CO) lines)• Enable / Disable |
| Default | All outside (CO) lines — Enable |
| Programming | <ol style="list-style-type: none">1. Enter 419. Display: Auto Line Access2. Press NEXT. Display: CO NO? →3. Enter an outside (CO) line number. Pressing NEXT also can enter outside (CO) line number 1. Display example: CO 1:Enable4. Keep pressing SELECT until the desired selection is displayed.5. Press STORE.6. To program another outside (CO) line, press NEXT or PREV, or SELECT and enter the desired outside (CO) line number.7. Repeat steps 4 and 6.8. Press END. |
| Condition | <ul style="list-style-type: none">• To assign all outside (CO) lines to the same selection, press the * key in step 3. In this case, the display will show: CO *:Mixed. |
| Feature References | Section 3, Features Line Access, Automatic Line Preference – Outgoing |

*Calling Party Control (CPC) Signal***Description**

Assigns the required minimum duration of the CPC Signal for incoming outside calls. If programmed, the system disconnects the line when the CPC signal is detected.

Selection

- Outside (CO) line number: **1 – 3, *** (* = all outside (CO) lines)
- Time number (milliseconds): **00** (Disable) / **01** (22 ms) / **02** (30 ms) / **03** (38 ms) / **04** (46 ms) / **05** (54 ms) / **06** (62 ms) / **07** (70 ms) / **08** (78 ms) / **09** (86 ms) / **10** (94 ms) / **11** (102 ms) / **12** (110 ms) / **13** (118 ms) / **14** (126 ms) / **15** (134 ms) / **16** (142 ms) / **17** (150 ms) / **18** (158 ms) / **19** (166 ms) / **20** (174 ms) / **21** (182 ms) / **22** (190 ms) / **23** (198 ms) / **24** (206 ms) / **25** (214 ms) / **26** (222 ms) / **27** (230 ms) / **28** (238 ms) / **29** (246 ms) / **30** (254 ms) / **31** (262 ms) / **32** (270 ms) / **33** (278 ms) / **34** (286 ms) / **35** (294 ms) / **36** (302 ms) / **37** (310 ms) / **38** (318 ms) / **39** (326 ms) / **40** (334 ms) / **41** (342 ms) / **42** (350 ms) / **43** (358 ms) / **44** (366 ms) / **45** (374 ms) / **46** (382 ms) / **47** (390 ms) / **48** (398 ms) / **49** (406 ms) / **50** (414 ms) / **51** (422 ms) / **52** (430 ms) / **53** (438 ms) / **54** (446 ms) / **55** (454 ms) / **56** (462 ms) / **57** (470 ms) / **58** (478 ms) / **59** (486 ms) / **60** (494 ms) / **61** (502 ms) / **62** (510 ms) / **63** (518 ms) / **64** (526 ms) / **65** (534 ms) / **66** (542 ms) / **67** (550 ms) / **68** (558 ms) / **69** (566 ms) / **70** (574 ms) / **71** (582 ms) / **72** (590 ms) / **73** (598 ms) / **74** (606 ms) / **75** (614 ms)

Default

All outside (CO) lines – 42 (350 ms)

Programming

1. Enter **420**.
Display: CPC Detection
2. Press **NEXT**.
Display: CO NO? →
3. Enter an **outside (CO) line number**.
Pressing **NEXT** also can enter outside (CO) line number 1.
Display example: CO 1: N= 42
4. Enter a **time number**.
5. Press **STORE**.

Calling Party Control (CPC) Signal (contd.)

6. To program another outside (CO) line, press **NEXT** or **PREV**, or **SELECT** and enter the desired **outside (CO) line number**.
7. Repeat steps 4 and 6.
8. Press **END**.

Conditions

- To assign all outside (CO) lines to the same selection, press the ***** key in step 3. In this case, the display will show: CO * : N= Mixed.
- Program [421] “CPC Detection for Outgoing Calls” is used to program CPC Signal Detection for outgoing outside calls.

Feature Reference

Section 3, Features
Calling Party Control (CPC) Signal Detection

CPC Detection for Outgoing Calls


| | |
|--------------------------|--|
| Description | Enables or disables CPC Signal Detection during an outside call in progress. If enabled, the system disconnects the line at the time set in program [420] “Calling Party Control (CPC) Signal” when the CPC signal is detected. |
| Selection | <ul style="list-style-type: none">• Outside (CO) line number: 1 – 3, * (* = all outside (CO) lines)• Enable (detect) / Disable (will not detect) |
| Default | All outside (CO) lines — Disable |
| Programming | <ol style="list-style-type: none">1. Enter 421. Display: CPC Out Detect2. Press NEXT. Display: CO NO? →3. Enter an outside (CO) line number. Pressing NEXT also can enter outside (CO) line number 1. Display example: CO 1:Disable4. Keep pressing SELECT until the desired selection is displayed.5. Press STORE.6. To program another outside (CO) line, press NEXT or PREV, or SELECT and enter the desired outside (CO) line number.7. Repeat steps 4 through 6.8. Press END. |
| Condition | <ul style="list-style-type: none">• To assign all outside (CO) lines to the same selection, press the * key in step 3. In this case, the display will show: CO *:Mixed. |
| Feature Reference | Section 3, Features Calling Party Control (CPC) Signal Detection |

Disconnect Time

| | |
|--------------------------|---|
| Description | Determines the amount of time to send the disconnect signal from the system to the Central Office or host PBX. |
| Selection | <ul style="list-style-type: none">• Outside (CO) line number: 1 – 3, * (* = all outside (CO) lines)• Time (seconds): 0.5 sec / 1.5 sec / 4.0 sec |
| Default | All outside (CO) lines – 1.5 sec |
| Programming | <ol style="list-style-type: none">1. Enter 422. Display: Disconnect Time2. Press NEXT. Display: CO NO? →3. Enter an outside (CO) line number. Pressing NEXT also can enter outside (CO) line number 1. Display example: CO 1:1.5sec4. Keep pressing SELECT until the desired time is displayed.5. Press STORE.6. To program another outside (CO) line, press NEXT or PREV, or SELECT and enter the desired outside (CO) line number.7. Repeat steps 4 through 6.8. Press END. |
| Conditions | <ul style="list-style-type: none">• The disconnect time must be longer than the requirement of the Central Office or host PBX.• To assign all outside (CO) lines to the same selection, press the * key in step 3. In this case, the display will show: CO *:Mixed. |
| Feature Reference | Section 3, Features Flash |

*Outside (CO) Line Ringing Pattern Selection***Description**

Assigns an incoming outside call ringing pattern for each outside (CO) line. There are three types of patterns as follows.

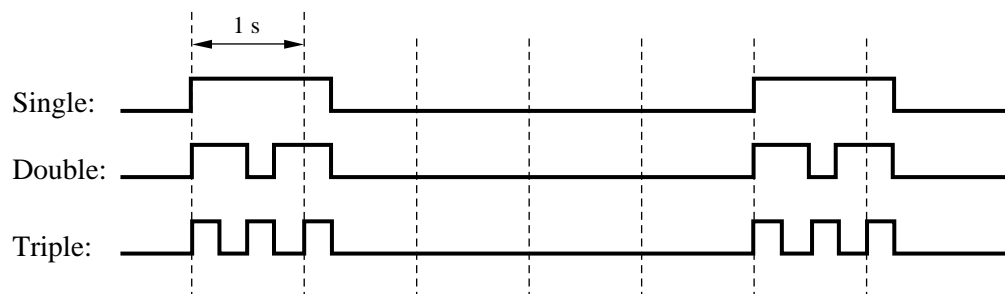**Selection**

- Outside (CO) line number: **1 – 3, *** (* = all outside (CO) lines)
- **Single / Double / Triple**

Default

Single

Programming

1. Enter **423**.
Display: CO Ring Pattern
2. Press **NEXT**.
Display: CO NO? →
3. Enter an **outside (CO) line number**.
Pressing **NEXT** also can enter outside (CO) line number 1.
Display example: CO 1:Single
4. Keep pressing **SELECT** until the desired time is displayed.
5. Press **STORE**.
6. To program another outside (CO) line, press **NEXT** or **PREV**, or **SELECT** and enter the desired **outside (CO) line number**.
7. Repeat steps 4 through 6.
8. Press **END**.

Conditions

- To assign all outside (CO) lines to the same selection, press the ***** key in step 3. In this case, the display will show: CO *:Mixed.
- The programs [115] “Extension Ringing Pattern Selection” and [706] “Doorphone Ringing/Tone Pattern Selection” should be considered when assigning this program.

Feature Reference**Section 3, Features**

Ringling Pattern Selection for Intercom Calls and Outside (CO) Lines

Local Carrier-Based Voice Mail Signaling Assignment

| | |
|--------------------------|--|
| Description | Selects the type of signal that the system expects to receive from the telephone company's voice mail service. This signal indicates the presence or absence of voice mail messages in the mailbox. |
| Selection | <ul style="list-style-type: none">• Outside (CO) line number: 1 – 3, * (* = all outside (CO) lines)• Disable / Stutter (Stutter dial tone method) / FSK (FSK method) |
| Default | All outside (CO) lines – Disable |
| Programming | <ol style="list-style-type: none">1. Enter 435. Display: CO VM Type2. Press NEXT. Display: CO NO? →3. Enter an outside (CO) line number. Pressing NEXT also can enter outside (CO) line number 1. Display example: CO 1:Disable4. Keep pressing SELECT until the desired selection is displayed.5. Press STORE.6. To program another outside (CO) line, press NEXT or PREV, or SELECT and enter the desired outside (CO) line number.7. Repeat steps 4 through 6.8. Press END. |
| Condition | <ul style="list-style-type: none">• To assign all outside (CO) lines to the same selection, press the * key in step 3. In this case, the display will show: CO *:Mixed. |
| Feature Reference | Section 3, Features Local Carrier-Based Voice Mail Service |

Local Carrier-Based Voice Mail Access Dial Assignment

Description

Assigns the voice mail service access number. This allows a PT user to access the telephone company's voice mail service when a message is left in the mailbox. The PT user can access the voice mail service and listen to the message stored in the mailbox by pressing the corresponding CO button (flashing red moderately) and then the MESSAGE button after going off-hook.

Selection

- Outside (CO) line number: **1 – 3**
- Voice mail service access number: **32 digits (max.)**

Default

All outside (CO) lines – Not stored

Programming

1. Enter **436**.
Display: CO VM Dial
2. Press **NEXT**.
Display: CO NO? →
3. Enter an **outside (CO) line number**.
Pressing **NEXT** also can enter outside (CO) line number 1.
Display example: #1:Not Stored
4. Enter a **voice mail service access number**.
To delete the current entry, press **CLEAR**.
To change the current entry, press **CLEAR** and enter the new number.
5. Press **STORE**.
6. To program another outside (CO) line, press **NEXT** or **PREV**, or **SELECT** and enter the desired **outside (CO) line number**.
7. Repeat steps 4 through 6.
8. Press **END**.

Local Carrier-Based Voice Mail Access Dial Assignment (contd.)





Conditions

- Each voice mail service access number has a maximum of 32 digits. The valid characters are **0 – 9**, *****, and **#** keys, and the **FLASH**, **PAUSE**, **SECRET** and **– (hyphen)** buttons.
 - To store a flash signal, press **FLASH**.
Note: The stored flash will only be effective during a call in progress. (Refer to Section 3 “External Feature Access”.)
 - To store a hyphen, press the “**–**” button.
 - To store a pause, press **PAUSE**.
(Refer to Section 3 “Pause Insertion, Automatic”.)
 - To store a feature number to convert pulse signals to DTMF signals, press the ***** and **#** keys.
(Refer to Section 3 “Pulse to Tone Conversion”.)
 - To prevent the display of all or part of a number, press **INTERCOM** before and after any confidential parts of the number. (Refer to Section 3 “Secret Dialing”.)
- To access another voice mail service access number in steps 4 through 6, press **SELECT** and start with step 3.
- To display parts of the number which have scrolled off the display, press **➡** or **⬅**.

Feature Reference**Section 3, Features**

Local Carrier-Based Voice Mail Service

Extension Access to Local Carrier-Based Voice Mail Assignment

| | |
|--------------------------|---|
| Description | Selects which extensions can access the voice mail service offered by the telephone company on an outside (CO) line basis. When set up as described below, the system flashes the corresponding CO button (red, moderately) and lights the Message/Ringer Lamp when a message is stored in the mailbox at the telephone company. |
| Selection | <ul style="list-style-type: none"> • Outside (CO) line number: 1 – 3, * (* = all outside (CO) lines) • Jack number: 01 – 08, * (* = all jacks) • Enable / Disable |
| Default | All outside (CO) lines — all jacks — Enable |
| Programming | <ol style="list-style-type: none"> 1. Enter 437. Display: CO VM Service 2. Press NEXT. Display: CO NO? → 3. Enter an outside (CO) line number. Pressing NEXT also can enter outside (CO) line number 1. Display example: CO 1:#01:Enable 4. Enter a jack number after pressing the # key. The user can also keep pressing  or  until the desired outside (CO) line number is displayed. 5. Keep pressing SELECT until the desired selection is displayed. 6. Press STORE. 7. To program another jack, press  or , or # and enter the desired jack number. 8. Repeat steps 5 through 7. 9. To program another outside (CO) line, press NEXT or PREV, or SELECT and the desired outside (CO) line number. 10. Repeat steps 4 through 9. 11. Press END. |
| Condition | <ul style="list-style-type: none"> • To assign all outside (CO) lines or all jacks to the same selection, press the * key in step 3 or step 4. In these cases, the display will show: CO *:# *:Mixed. |
| Feature Reference | Section 3, Features Local Carrier-Based Voice Mail Service |

DISA Incoming Dialing Mode Selection

| | |
|--------------------------|--|
| Description | <p>Selects the mode of an incoming DISA call. There are two modes as follows.</p> <p>Without AA: the system can receive an extension number, line access number and operator call number, and send the call to the designated destination.</p> <p>With AA: the system can receive an extension number, line access number, operator call number and auto attendant (AA) number, and send the call to the designated destination.</p> |
| Selection | Without AA / With AA |
| Default | Without AA |
| Programming | <ol style="list-style-type: none">1. Enter 500. Display: DISA Dial Mode2. Press NEXT. Display example: Without AA3. Keep pressing SELECT until the desired selection is displayed.4. Press STORE.5. Press END. |
| Condition | <ul style="list-style-type: none">• The program [501] “DISA Built-in Auto Attendant” is used to assign the destination of each AA number. |
| Feature Reference | Section 3, Features Direct Inward System Access (DISA) |

DISA Built-in Auto Attendant

| | |
|--------------------------|--|
| Description | Assigns the DISA built-in auto attendant number. The extension number can be assigned as a one digit number and used as a DISA built-in auto attendant number. |
| Selection | <ul style="list-style-type: none">• DISA built-in auto attendant (AA) number: 0 – 9• Jack number: 01 – 08 / Ring Group number: 1 – 8 |
| Default | All numbers — Not stored |
| Programming | <ol style="list-style-type: none">1. Enter 501. Display: DISA Built-In2. Press NEXT. Display: AA NO? →3. Enter a DISA built-in auto attendant number. Pressing NEXT also can enter DISA AA number 0. Display example: 0:Not Stored4. Press SELECT until the desired selection is displayed and enter an extension or ring group number. To change the current entry, press CLEAR and enter the new number. Display example: 0:Jack-015. Press STORE.6. To program another DISA AA number, press NEXT or PREV, or SELECT and enter the desired DISA AA number.7. Repeat steps 4 through 6.8. Press END. |
| Conditions | <ul style="list-style-type: none">• To enable this feature, the user must select “With AA” in program [500] “DISA Incoming Dialing Mode Selection”.• This system can store up to ten programmable DISA built-in auto attendant numbers.• If the user would like to use a line access number “9” and/or operator number “0” in the “With AA” mode, do not assign auto attendant number(s) which correspond to the line access number and/or operator number (0 and/or 9). |
| Feature Reference | Section 3, Features Direct Inward System Access (DISA) |

DISA Delayed Answer Time

| | |
|---------------------------|---|
| Description | Assigns the time from a call being received and answered using the DISA feature. |
| Selection | 0 sec / 3 sec / 6 sec / 12 sec (seconds) |
| Default | 3 sec |
| Programming | <ol style="list-style-type: none">1. Enter 504. Display: Ans Delay Time2. Press NEXT. Display example: Time: 3sec3. Keep pressing SELECT until the desired selection is displayed.4. Press STORE.5. Press END. |
| Condition | <ul style="list-style-type: none">• The outside (CO) lines which are assigned as “Enable” in program [900] “Caller ID Assignment” are always set to 6 seconds even if “0 sec” or “3 sec” is selected in this program. |
| Feature References | Section 3, Features Direct Inward System Access (DISA) |

DISA Busy Mode

| | |
|--------------------------|---|
| Description | Selects the mode when destination extension of the call via DISA is busy. There are two modes as follows. Call Waiting: a call waiting tone is sent and then the call is held until the called party responds. Disconnect: the call is disconnected after the busy tone. |
| Selection | Call Waiting / Disconnect |
| Default | Disconnect |
| Programming | <ol style="list-style-type: none">1. Enter 506. Display: DISA Busy Mode2. Press NEXT. Display example: Disconnect3. Keep pressing SELECT until the desired selection is displayed.4. Press STORE.5. Press END. |
| Conditions | None |
| Feature Reference | Section 3, Features Direct Inward System Access (DISA) |

DISA Intercept Mode

| | |
|---------------------------|--|
| Description | <p>Intercept Routing provides an automatic re-direction of DISA calls which cannot or have not been answered within the programmed time. This program is used to select whether the call is disconnected or re-directed.</p> <p>Intercept: the call is directed to the extensions assigned in programs [408]–[410].</p> <p>Disconnect: the call is disconnected.</p> |
| Selection | Disconnect / Intercept |
| Default | Intercept |
| Programming | <ol style="list-style-type: none">1. Enter 507. Display: DISA IRNA Mode2. Press NEXT. Display example: Intercept3. Keep pressing SELECT until the desired selection is displayed.4. Press STORE.5. Press END. |
| Conditions | None |
| Feature References | Section 3, Features Direct Inward System Access (DISA) Intercept Routing |

DISA Ringing Time before Intercept

| | |
|---------------------------|---|
| Description | Selects the time for the Intercept Routing — No Answer (IRNA) feature. If a DISA call is not answered within the programmed time, the call will be redirected to the programmed extension. |
| Selection | 10 sec / 20 sec / 30 sec / 40 sec / 60 sec / 120 sec (seconds) |
| Default | 20 sec |
| Programming | <ol style="list-style-type: none">1. Enter 508. Display: DISA Befor IRNA2. Press NEXT. Display example: Time: 20sec3. Keep pressing SELECT until the desired selection is displayed.4. Press STORE.5. Press END. |
| Condition | <ul style="list-style-type: none">• Programs [408]–[410] “Flexible Ringing Assignment — Day/Night/Lunch” are used to program the destination of Intercept Routing in the day, night and lunch modes. |
| Feature References | Section 3, Features Direct Inward System Access (DISA) Intercept Routing |

DISA Ringing Time after Intercept

| | |
|---------------------------|---|
| Description | Selects the time that the extension will ring for after being re-directed by the Intercept Routing — No Answer (IRNA) feature. If a call is not answered within the programmed time, the call will be disconnected. |
| Selection | 10 sec / 20 sec / 30 sec / 40 sec / 60 sec / 120 sec (seconds) |
| Default | 20 sec |
| Programming | <ol style="list-style-type: none">1. Enter 509. Display: DISA After IRNA2. Press NEXT. Display example: Time: 20sec3. Keep pressing SELECT until the desired selection is displayed.4. Press STORE.5. Press END. |
| Conditions | None |
| Feature References | Section 3, Features Direct Inward System Access (DISA) Intercept Routing |

DISA No Dial Mode

| | |
|---------------------------|--|
| Description | <p>Selects the mode when nothing is dialed after a beep after a programmed length of time for the DISA1 mode. There are two modes as follows.</p> <p>Intercept: the call is directed to the extensions assigned in programs [408]–[410] for the time programmed in [509] “DISA Ringing Time after Intercept”.</p> <p>Disconnect: the call is disconnected.</p> |
| Selection | • Intercept / Disconnect |
| Default | DISA1 — Intercept |
| Programming | <ol style="list-style-type: none">1. Enter 510. Display: DISA No Dial2. Press NEXT. Display example: DISA1:Disconnect3. Keep pressing SELECT until the desired selection is displayed.4. Press STORE.5. Press END. |
| Conditions | None |
| Feature References | Section 3, Features Direct Inward System Access (DISA) Intercept Routing |

| | |
|--------------------------|---|
| Description | Assigns the security mode for outside calls from a DISA (Direct Inward System Access) caller. There are three modes: None Security, Trunk Security (outside (CO) line security), and All Security. None Security mode allows the caller to access an outside (CO) line without dialing a DISA security code. Trunk Security mode requires the caller to enter a DISA security code before making an outside call. All Security mode requires the caller to enter a DISA security code before making either an outside call or an intercom call. |
| Selection | None Security / Trunk Security / All Security |
| Default | Trunk Security |
| Programming | <ol style="list-style-type: none">1. Enter 511. Display: Security Type2. Press NEXT. Display example: Trunk Security3. Keep pressing SELECT until the desired selection is displayed.4. Press STORE.5. Press END. |
| Condition | <ul style="list-style-type: none">• Program [512] “DISA Security Codes” is used to program the DISA Security Codes. |
| Feature Reference | Section 3, Features Direct Inward System Access (DISA) |

DISA Security Codes

| | |
|--------------------------|---|
| Description | Assigns the DISA (Direct Inward System Access) Security Codes. |
| Selection | <ul style="list-style-type: none">• Code number : 1 – 4• DISA security code: 4 digits (programmable) |
| Default | All codes — Not stored |
| Programming | <ol style="list-style-type: none">1. Enter 512. Display: Security Code2. Press NEXT. Display: CODE NO? →3. Enter a code number. Pressing NEXT also can enter code number 1. Display example: 01:*12344. Enter a DISA security code. To change the current entry, press CLEAR and enter the new code.5. Press STORE.6. To program another code, press NEXT or PREV, or SELECT and enter the desired code number.7. Repeat steps 4 through 6.8. Press END. |
| Conditions | <ul style="list-style-type: none">• This setting is required if All Security mode or Trunk (outside (CO) line) Security mode is selected in program [511] “DISA Security Type”.• There are four programmable security codes. Each code should be different and composed of numerical digits, 0 – 9.• The number of digits for the security codes can be programmed in [530] “DISA Security Codes Digits Selection”.• The used security code numbers (not security codes) are printed on the SMDR. |
| Feature Reference | Section 3, Features Direct Inward System Access (DISA) |

Intercept Time for Internal DISA

| | |
|--------------------------|---|
| Description | Selects the time that the system waits for DTMF signals when a call is received via the internal DISA. If the system does not receive the DTMF signals within the assigned period of time, the call will be disconnected or sent to extensions programmed in [408]–[410] according to program [510]. |
| Selection | 3 sec / 6 sec / 9 sec (seconds) |
| Default | 3 sec |
| Programming | <ol style="list-style-type: none">1. Enter 515. Display: Internal DISA2. Press NEXT. Display example: Time: 3 sec3. Keep pressing SELECT until the desired selection is displayed.4. Press STORE.5. Press END. |
| Conditions | None |
| Feature Reference | Section 3, Features Direct Inward System Access (DISA) |

DISA Incoming Assignment

| | |
|--------------------------|---|
| Description | Assigns the extensions which can receive calls via DISA. |
| Selection | <ul style="list-style-type: none">• Jack number: 01 – 08, * (* =all jacks)• Enable / Disable |
| Default | All jacks — Enable |
| Programming | <ol style="list-style-type: none">1. Enter 516. Display: DISA Assign2. Press NEXT. Display: Jack NO? →3. Enter a jack number. Pressing NEXT also can enter jack number 01. Display example: #01:Enable4. Keep pressing SELECT until the desired selection is displayed.5. Press STORE.6. To program another jack, press NEXT or PREV, or SELECT and enter the desired jack number.7. Repeat steps 4 through 6.8. Press END. |
| Conditions | <ul style="list-style-type: none">• If a caller attempts to access an extension which is set to “Disable”, the caller will hear a reorder tone and the call will be disconnected.• If a call via DISA is received by a ring group, this program will not work for extensions in that ring group. In this case, disabled extensions will still ring.• To assign all jacks to the same selection, press the * key in step 3. In this case, the display will show: # * :Mixed. |
| Feature Reference | Section 3, Features Direct Inward System Access (DISA) |

DISA AA Wait Time

| | |
|--------------------------|--|
| Description | Selects the time that the system waits for a second digit entry. If the timer expires, the system will assume that the first digit is a DISA built-in auto attendant number (AA number) if an AA number is assigned in program [501] "DISA Built-in Auto Attendant". For example, if a number is not dialed within the programmed time after dialing 1, the system will assume that "1" is an AA number. |
| Selection | 1 sec / 2 sec / 3 sec / 4 sec / 5 sec (seconds) |
| Default | 2 sec |
| Programming | <ol style="list-style-type: none">1. Enter 517. Display: DISA AA Time2. Press NEXT. Display example: Time: 2 sec3. Keep pressing SELECT until the desired selection is displayed.4. Press STORE.5. Press END. |
| Condition | <ul style="list-style-type: none">• The AA wait timer will only work when "1" or "8" is dialed. |
| Feature Reference | Section 3, Features Direct Inward System Access (DISA) |

DISA Tone Selection after the Security Code

| | |
|--------------------------|---|
| Description | Enables or disables sending a beep to a caller after the Security Code is entered. If enabled, a beep is sent to the caller when the code entered is the same as one of the security codes assigned in program [512] “DISA Security Codes”. |
| Selection | Enable / Disable |
| Default | Enable |
| Programming | <ol style="list-style-type: none">1. Enter 518. Display: DISA Dial Tone2. Press NEXT. Display example: Enable3. Keep pressing SELECT until the desired selection is displayed.4. Press STORE.5. Press END. |
| Conditions | None |
| Feature Reference | Section 3, Features Direct Inward System Access (DISA) |

DISA Security Codes Digits Selection

| | |
|--------------------------|--|
| Description | Selects the number of digits for the DISA security codes assigned in program [512] “DISA Security Codes”. |
| Selection | Number of digits: 4 – 10 digits |
| Default | 4 digits |
| Programming | <ol style="list-style-type: none">1. Enter 530. Display: Security Digits2. Press NEXT. Display example: 4 digits3. Keep pressing SELECT until the desired selection is displayed.4. Press STORE.5. Press END. |
| Condition | <ul style="list-style-type: none">• When the setting has been changed in this program, the DISA security codes, if already assigned, will be canceled. |
| Feature Reference | Section 3, Features Direct Inward System Access (DISA) |

Extension Group Assignment

| | |
|--------------------|---|
| Description | Assigns an extension group for each extension. Extension groups are used for Group Call Pickup, Station Hunting, Paging – Group and Ring Group. |
| Selection | <ul style="list-style-type: none"> • Jack number: 01 – 08, * (* = all jacks) • Extension group number (EXT GRP): 1 – 8 |
| Default | All jacks — EXT GRP-1 |
| Programming | <ol style="list-style-type: none"> 1. Enter 600. Display: Extension Group 2. Press NEXT. Display: Jack NO? → 3. Enter a jack number. Pressing NEXT also can enter jack number 01. Display example: #01:EXT GRP-1 4. Enter the extension group number. To change the current entry, enter the new extension group number. 5. Press STORE. 6. To program another jack, press NEXT or PREV, or SELECT and enter the desired jack number. 7. Repeat steps 4 through 6. 8. Press END. |
| Conditions | <ul style="list-style-type: none"> • There is a maximum of eight extension groups. Each extension can only belong to one group. • To assign all jacks to the same extension group, press the * key in step 3. In this case, the display will show: # *:Mixed. |

Feature References**Section 3, Features**

Call Pickup, Group
Extension Group
Station Hunting

Paging – Group
Ring Group

| | |
|--------------------------|--|
| Description | Programs Toll Restriction (TRS) – Class of Service (COS) for each extension. |
| Selection | <ul style="list-style-type: none"> • Jack number: 01 – 08, * (* = all jacks) • COS-1 / COS-2 / COS-3 / COS-4 / COS-5 |
| Default | All jacks – COS-1 — Day/Night/Lunch |
| Programming | <ol style="list-style-type: none"> 1. Enter a program address (601 for day, 602 for night, or 603 for lunch). Display example: Day Toll Restr 2. Press NEXT. Display: Jack NO? → 3. Enter a jack number. Pressing NEXT also can enter jack number 01. Display example: #01: COS-1 4. Keep pressing SELECT until the desired selection is displayed. 5. Press STORE. 6. To program another jack, press NEXT or PREV, or SELECT and enter the desired jack number. 7. Repeat steps 4 through 6. 8. Press END. |
| Condition | <ul style="list-style-type: none"> • To assign all jacks to the same COS, press the * key in step 3. In this case, the display will show: # *:Mixed. |
| Feature Reference | Section 3, Features Toll Restriction |

Extension Name Setting

| | |
|---------------------------|--|
| Description | Assigns names to the extensions. |
| Selection | <ul style="list-style-type: none">• Jack number: 01 – 08• Name: 10 characters (max.) |
| Default | All jacks – Not stored |
| Programming | <ol style="list-style-type: none">1. Enter 604. Display: Extension Name2. Press NEXT. Display: Jack NO? →3. Enter a jack number. Pressing NEXT also can enter jack number 01. Display: #01:4. Enter a name. For entering characters, see Section 4.1.3 “Entering Characters”. To delete the current entry, press CLEAR. To change the current entry, press CLEAR and enter the new name.5. Press STORE.6. To program another jack, press NEXT or PREV, or SELECT and enter the desired jack number.7. Repeat steps 4 through 6.8. Press END. |
| Conditions | <ul style="list-style-type: none">• There is a maximum of 8 names. Each name has a maximum of 10 characters.• Program [009] “Extension Number Assignment” is used to assign the extension numbers. |
| Feature References | Section 3, Features Display, Call Information Display, in Idle Intercom Calling |

*Account Code Entry Mode***Description**

Selects the account code input mode for each extension jack. There are four account code modes: Option, Forced, Verify-All and Verify-Toll.

Option mode: The user can enter any account code, if needed.

Forced mode: The user must always enter an account code. The code can be any number.

Verify – All mode: The user must always enter a pre-assigned account code to make an outside call.

Verify – Toll mode: The user can enter an assigned account code to override toll restriction. The toll restriction COS numbers 3 through 5 will be changed temporarily to the COS number 2. (The COS numbers 1 and 2 will not be changed.)

Selection

- Jack number: **01 – 08, *** (* = all jacks)
- **Option / Forced / Verify – All / Verify – Toll**

Default

All jacks – Option

Programming

1. Enter **605**.
Display: Call Accounting
2. Press **NEXT**.
Display: Jack NO? →
3. Enter a **jack number**.
Pressing **NEXT** also can enter jack number 01.
Display: #01:Option
4. Keep pressing **SELECT** until the desired selection is displayed.
5. Press **STORE**.
6. To program another jack, press **NEXT** or **PREV**, or **SELECT** and enter the desired **jack number**.
7. Repeat steps 4 through 6.
8. Press **END**.

Account Code Entry Mode (contd.)

Conditions

- To assign all jacks to the same selection, press the * key in step 3. In this case, the display will show: # *:Mixed.
- Program [310] “Account Codes” is used to define the Account Codes for the Verify modes.
- Programs [601]–[603] “TRS – Class of Service (COS) Assignment — Day/Night/Lunch” is used to assign a Class of Service to each extension.

Feature References

Section 3, Features

Account Code Entry

Toll Restriction Override by Account Codes

Call Transfer to an Outside (CO) Line

| | |
|--------------------------|---|
| Description | Enables or disables performing the Call Transfer to an Outside (CO) Line feature. |
| Selection | <ul style="list-style-type: none">• Jack number: 01 – 08, * (* = all jacks)• Enable / Disable |
| Default | All jacks – Disable |
| Programming | <ol style="list-style-type: none">1. Enter 606. Display: Transfer to CO2. Press NEXT. Display: Jack NO? →3. Enter a jack number. Pressing NEXT also can enter jack number 01. Display example: #01:Disable4. Keep pressing SELECT until the desired selection is displayed.5. Press STORE.6. To program another jack, press NEXT or PREV, or SELECT and enter the desired jack number.7. Repeat steps 4 through 6.8. Press END. |
| Condition | <ul style="list-style-type: none">• To assign all jacks to the same selection, press the * key in step 3. In this case, the display will show: # *:Mixed. |
| Feature Reference | Section 3, Features Call Transfer, Screened – to an Outside (CO) Line |

Call Forwarding to an Outside (CO) Line

| | |
|--------------------------|---|
| Description | Enables or disables performing the Call Forwarding to an Outside (CO) Line feature. |
| Selection | <ul style="list-style-type: none">• Jack number: 01 – 08, * (* = all jacks)• Disable / Enable |
| Default | All jacks – Disable |
| Programming | <ol style="list-style-type: none">1. Enter 607. Display: CO Forward2. Press NEXT. Display: Jack NO? →3. Enter a jack number. Pressing NEXT also can enter jack number 01. Display example: #01:Disable4. Keep pressing SELECT until the desired selection is displayed.5. Press STORE.6. To program another jack, press NEXT or PREV, or SELECT and enter the desired jack number.7. Repeat steps 4 through 6.8. Press END. |
| Condition | <ul style="list-style-type: none">• To assign all jacks to the same selection, press the * key in step 3. In this case, the display will show: # *:Mixed. |
| Feature Reference | Section 3, Features Call Forwarding – to an Outside (CO) Line |

Executive Busy Override

| | |
|---------------------------|--|
| Description | Enables or disables performing Executive Busy Override – Extension/Outside (CO) Line. Executive Busy Override allows a user to interrupt an established call. |
| Selection | <ul style="list-style-type: none">• Jack number: 01 – 08, * (* = all jacks)• Disable / Enable |
| Default | All jacks – Disable |
| Programming | <ol style="list-style-type: none">1. Enter 608. Display: Busy Override2. Press NEXT. Display: Jack NO? →3. Enter a jack number. Pressing NEXT also can enter jack number 01. Display example: #01:Disable4. Keep pressing SELECT until the desired selection is displayed.5. Press STORE.6. To program another jack, press NEXT or PREV, or SELECT and enter the desired jack number.7. Repeat steps 4 through 6.8. Press END. |
| Condition | <ul style="list-style-type: none">• To assign all jacks to the same selection, press the * key in step 3. In this case, the display will show: # *:Mixed. |
| Feature References | Section 3, Features Executive Busy Override – Extension Executive Busy Override – Outside (CO) Line |

Do Not Disturb Override

| | |
|--------------------------|---|
| Description | Enables or disables performing the Do Not Disturb (DND) Override feature. |
| Selection | <ul style="list-style-type: none">• Jack number: 01 – 08, * (* = all jacks)• Disable / Enable |
| Default | All jacks – Disable |
| Programming | <ol style="list-style-type: none">1. Enter 609. Display: DND Override2. Press NEXT. Display: Jack NO? →3. Enter a jack number. Pressing NEXT also can enter jack number 01. Display example: #01:Disable4. Keep pressing SELECT until the desired selection is displayed.5. Press STORE.6. To program another jack, press NEXT or PREV, or SELECT and enter the desired jack number.7. Repeat steps 4 through 6.8. Press END. |
| Condition | <ul style="list-style-type: none">• To assign all jacks to the same selection, press the * key in step 3. In this case, the display will show: # *:Mixed. |
| Feature Reference | Section 3, Features Do Not Disturb (DND) Override |

Paralleled Telephone Connection

| | |
|--------------------------|---|
| Description | A Paralleled Telephone Connection allows a single line telephone to be connected to the same jack as a proprietary telephone. This program assigns which jacks can perform the paralleled telephone connection feature. |
| Selection | <ul style="list-style-type: none">• Jack number: 01 – 08, * (* = all jacks)• Disable / Enable |
| Default | All jacks – Disable |
| Programming | <ol style="list-style-type: none">1. Enter 610. Display: Parallel Connect2. Press NEXT. Display: Jack NO? →3. Enter a jack number. Pressing NEXT also can enter jack number 01. Display example: #01:Disable4. Keep pressing SELECT until the desired selection is displayed.5. Press STORE.6. To program another jack, press NEXT or PREV, or SELECT and enter the desired jack number.7. Repeat steps 4 through 6.8. Press END. |
| Condition | <ul style="list-style-type: none">• To assign all jacks to the same selection, press the * key in step 3. In this case, the display will show: # *:Mixed. |
| Feature Reference | Section 3, Features Paralleled Telephone |

TAM (Telephone Answering Machine) Extension

| | |
|--------------------------|--|
| Description | Assigns the jacks that can accept a TAM connection. When a jack is TAM-enabled, the “Call Retrieving from a TAM” feature becomes available. |
| Selection | <ul style="list-style-type: none">• Jack number: 01 – 08, * (* = all jacks)• Disable / Enable |
| Default | All jacks – Disable |
| Programming | <ol style="list-style-type: none">1. Enter 611. Display: TAM Extension2. Press NEXT. Display: Jack NO? →3. Enter a jack number. Pressing NEXT also can enter jack number 01. Display example: #01:Disable4. Keep pressing SELECT until the desired selection is displayed.5. Press STORE.6. To program another jack, press NEXT or PREV, or SELECT and enter the desired jack number.7. Repeat steps 4 through 6.8. Press END. |
| Condition | <ul style="list-style-type: none">• To assign all jacks to the same selection, press the * key in step 3. In this case, the display will show: # *:Mixed. |
| Feature Reference | Section 3, Features Call Retrieving from a TAM (Telephone Answering Machine) |

Room Monitor Assignment

| | |
|--------------------------|---|
| Description | Assigns which extensions can be monitored by another telephone. |
| Selection | <ul style="list-style-type: none">• Jack number: 01 – 08, * (* = all jacks)• Disable / Enable |
| Default | All jacks – Disable |
| Programming | <ol style="list-style-type: none">1. Enter 612. Display: Room Monitor2. Press NEXT. Display: Jack NO? →3. Enter a jack number. Pressing NEXT also can enter jack number 01. Display example: #01:Disable4. Keep pressing SELECT until the desired selection is displayed.5. Press STORE.6. To program another jack, press NEXT or PREV, or SELECT and enter the desired jack number.7. Repeat steps 4 through 6.8. Press END. |
| Conditions | <ul style="list-style-type: none">• To assign all jacks to the same selection, press the * key in step 3. In this case, the display will show: # *:Mixed.• The jacks which are assigned to “DISABLE” cannot accept feature number “7351#” for the room monitor feature. |
| Feature Reference | Section 3, Features Room Monitor |

Wireless PT Port Assignment

| | |
|--------------------|---|
| Description | Used to identify whether a Panasonic Wireless Phone (e.g., KX-TD7894, KX-TD7895, KX-T7880 or KX-T7885) is connected to an extension jack or not. |
| Selection | <ul style="list-style-type: none">• Jack number: 01 – 08, * (* = all jacks)• Not Connect / Connect |
| Default | All jacks – Not Connect |
| Programming | <ol style="list-style-type: none">1. Enter 617. Display: Wireless PT Port2. Press NEXT. Display: Jack NO? →3. Enter a jack number. Pressing NEXT also can enter jack number 01. Display example: #01:Not Connect4. Keep pressing SELECT until the desired selection is displayed.5. Press STORE.6. To program another jack, press NEXT or PREV, or SELECT and enter the desired jack number.7. Repeat steps 4 through 6.8. Press END. |
| Conditions | <ul style="list-style-type: none">• To assign all jacks to the same selection, press the * key in step 3. In this case, the display will show: # *:Mixed.• If “Connect” is not assigned for the jack which is connected the Panasonic Wireless Phone, the wireless phone may work incorrectly. |

Message Waiting for Another Extension

| | |
|--------------------------|--|
| Description | Enables or disables performing the Message Waiting for Another Extension feature. If disabled, an extension user cannot assign the Another Extension Message Waiting button. |
| Selection | <ul style="list-style-type: none">• Jack number: 01 – 08, * (* = all jacks)• Disable / Enable |
| Default | All jacks – Enable |
| Programming | <ol style="list-style-type: none">1. Enter 618. Display: Another MW Set2. Press NEXT. Display: Jack NO? →3. Enter a jack number. Pressing NEXT also can enter jack number 01. Display example: #01:Enable4. Keep pressing SELECT until the desired selection is displayed.5. Press STORE.6. To program another jack, press NEXT or PREV, or SELECT and enter the desired jack number.7. Repeat steps 4 through 6.8. Press END. |
| Condition | <ul style="list-style-type: none">• To assign all jacks to the same selection, press the * key in step 3. In this case, the display will show: # *:Mixed. |
| Feature Reference | Section 3, Features Message Waiting for Another Extension |

*Doorphone Ringing Assignment — Day/Night/Lunch***Description**

These programs assign which extensions will ring when a doorphone call is received in the day, night and lunch modes.

Selection

- Doorphone number: **1 – 2, *** (* = all doorphones)
- Jack number: **01 – 08, *** (* = all jacks)
- **Enable / Disable**

Default

All doorphones – all jacks – Enable — Day/Night/Lunch

Programming

1. Enter a **program address (700 for day, 701 for night or 702 for lunch)**.

Display example: Day Door Phone

2. Press **NEXT**.

Display: Door NO? →

3. Enter a **doorphone number**.

Pressing **NEXT** also can enter doorphone number 1.

Display example: DP-1:#01:Enable

4. Keep pressing **➡** until the desired jack number is displayed or enter a **jack number** after pressing the # key.
5. Keep pressing **SELECT** until the desired selection is displayed.
6. Press **STORE**.
7. To program another jack, press **➡** or **⬅**, or # and the desired **jack number**.
8. Repeat steps 5 through 7.
9. To program another doorphone, press **NEXT** or **PREV**, or **SELECT** and enter the desired **doorphone number**.
10. Repeat steps 4 through 9.
11. Press **END**.

Conditions

- To assign all doorphones and all jacks to the same selection, press the ***** key in steps 3 and 4.
In this case, the display will show: DP-*:# *:Mixed.
- Two doorphones can be installed to the system.

Feature References**Section 3, Features**

Doorphone Call


Time (Day/Night/Lunch) Service

Door Opener Assignment — Day/Night/Lunch

| | |
|---------------------------|---|
| Description | These programs assign which extensions can open a door in the day, night and lunch modes. |
| Selection | <ul style="list-style-type: none"> • Door opener number: 1 – 2, * (* = all door openers) • Jack number: 01 – 08, * (* = all jacks) • Enable / Disable |
| Default | All door openers – all jacks – Enable — Day/Night/Lunch |
| Programming | <ol style="list-style-type: none"> 1. Enter a program address (703 for day, 704 for night or 705 for lunch). Display example: Day Door-Open 2. Press NEXT. Display: Door NO? → 3. Enter a door opener number. Pressing NEXT also can enter doorphone number 1. Display example: DP-1:#01:Enable 4. Keep pressing ➡ until the desired jack number is displayed or enter a jack number after pressing the # key. 5. Keep pressing SELECT until the desired selection is displayed. 6. Press STORE. 7. To program another jack number, press ➡ or ⬅, or # and the desired jack number. 8. Repeat steps 5 through 7. 9. To program another door opener, press NEXT or PREV, or SELECT and enter the desired door opener number. 10. Repeat steps 4 through 9. 11. Press END. |
| Conditions | <ul style="list-style-type: none"> • To assign all door openers and all jacks to the same selection, press the * key in steps 3 and 4. In this case, the display will show: DP-*:# *:Mixed. • Two door openers can be installed per system. |
| Feature References | Section 3, Features Door Opener Time (Day/Night/Lunch) Service |

*Doorphone Ringing/Tone Pattern Selection***Description**

Assigns an incoming doorphone call ringing pattern for each doorphone. There are four types of patterns as follows.

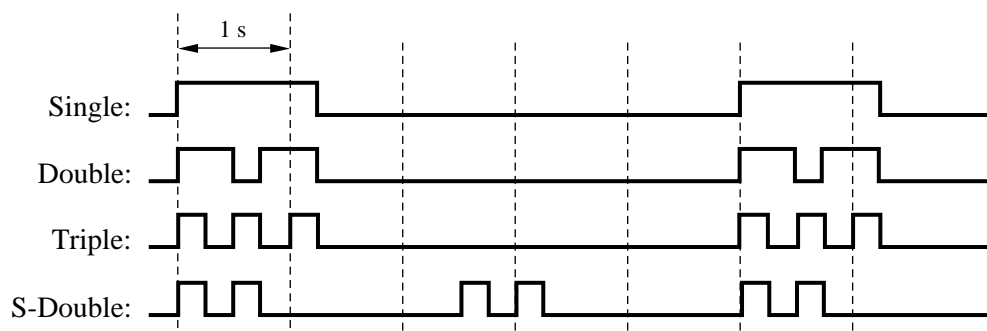**Selection**

- Doorphone number: 1 – 2, * (* = all doorphones)
- **Single / Double / Triple / S-Double**

Default

All doorphones — Triple

Programming

1. Enter **706**.
Display: Door Ring Tone
2. Press **NEXT**.
Display: Door NO? →
3. Enter a **doorphone number**.
Pressing **NEXT** also can enter doorphone number 1.
Display example: DP-1:Triple
4. Keep pressing **SELECT** until the desired selection is displayed.
5. Press **STORE**.
6. To program another doorphone, press **NEXT** or **PREV**, or **SELECT** and enter the desired **doorphone number**.
7. Repeat steps 4 through 6.
8. Press **END**.

Conditions

- To assign all doorphones to the same selection, press the * key in step 3. In this case, the display will show: DP-*:Mixed.
- PT users will hear the assigned pattern tone instead of ringing.
- The programs [115] “Extension Ringing Pattern Selection” and [423] “Outside (CO) Line Ringing Pattern Selection” should be considered when assigning this program.

Feature Reference

Section 3, Features
Doorphone Call

Doorphone Access Tone Selection

| | |
|---------------------------|---|
| Description | Enables or disables sending a doorphone access tone to a monitored doorphone. If enabled, the access tone is heard from the doorphone when monitoring starts. |
| Selection | <ul style="list-style-type: none">• Doorphone number: 1 – 2, * (* = all doorphones)• Enable / Disable |
| Default | All doorphones — Enable |
| Programming | <ol style="list-style-type: none">1. Enter 707. Display: Door Ack-Tone2. Press NEXT. Display: Door NO? →3. Enter a doorphone number. Pressing NEXT also can enter doorphone number 1. Display example: DP-1:Enable4. Keep pressing SELECT until the desired selection is displayed.5. Press STORE.6. To program another doorphone, press NEXT or PREV, or SELECT and enter the desired doorphone number.7. Repeat steps 4 through 6.8. Press END. |
| Condition | <ul style="list-style-type: none">• To assign all doorphones to the same selection, press the * key in step 3. In this case, the display will show: DP-*:Mixed. |
| Feature References | Section 3, Features Doorphone Call Room Monitor |

Doorphone Ringing Time

| | |
|--------------------------|--|
| Description | Selects the doorphone ringing time. |
| Selection | <ul style="list-style-type: none">• Doorphone number: 1 – 2, * (* = all doorphones)• 15 sec / 30 sec (seconds) |
| Default | All doorphones — 15 sec |
| Programming | <ol style="list-style-type: none">1. Enter 708. Display: Doorphone R-Time2. Press NEXT. Display: Door NO? →3. Enter a doorphone number. Pressing NEXT also can enter doorphone number 1. Display example: DP-1:15 sec4. Keep pressing SELECT until the desired selection is displayed.5. Press STORE.6. To program another doorphone, press NEXT or PREV, or SELECT and enter the desired doorphone number.7. Repeat steps 4 through 6.8. Press END. |
| Condition | <ul style="list-style-type: none">• To assign all doorphones to the same selection, press the * key in step 3. In this case, the display will show: DP-*:Mixed. |
| Feature Reference | Section 3, Features Doorphone Call |

Door Opener Time

| | |
|--------------------------|--|
| Description | Selects the door opener time. The door is unlocked for the assigned period of time. |
| Selection | <ul style="list-style-type: none">• Door Opener number: 1 – 2, * (* = all door openers)• 1 sec / 2 sec / 3 sec / 4 sec / 5 sec / 6 sec / 7 sec / 8 sec (seconds) |
| Default | All door openers — 5 sec |
| Programming | <ol style="list-style-type: none">1. Enter 709. Display: Door-Opener Time2. Press NEXT. Display: Door NO? →3. Enter a door opener number. Pressing NEXT also can enter doorphone number 1. Display example: DP-1: 5 sec4. Keep pressing SELECT until the desired selection is displayed.5. Press STORE.6. To program another door opener, press NEXT or PREV, or SELECT and enter the desired door opener number.7. Repeat steps 4 through 6.8. Press END. |
| Condition | <ul style="list-style-type: none">• To assign all door openers to the same selection, press the * key in step 3. In this case, the display will show: DP-*:Mixed. |
| Feature Reference | Section 3, Features Door Opener |

Doorphone Ring/Chime Selection


| | |
|---------------------------|--|
| Description | <p>Assigns an incoming doorphone call ringing way for each doorphone. The ringing way depends on the selection as follows, when a visitor presses the doorphone button:</p> <p>Ring: Rings an extension pre-assigned in programs [700]-[702].</p> <p>Chime: Chimes instead of ringing.</p> <p>Ring & Chime: Rings a pre-assigned extension and chimes simultaneously.</p> |
| Selection | <ul style="list-style-type: none"> • Doorphone number: 1 – 2, * (* = all doorphones) • Ring / Chime / Ring & Chime |
| Default | All doorphones — Ring |
| Programming | <ol style="list-style-type: none"> 1. Enter 710. Display: Door Ring/Chime 2. Press NEXT. Display: Door NO? → 3. Enter a doorphone number. Pressing NEXT also can enter doorphone number 1. Display example: DP-1:Ring 4. Keep pressing SELECT until the desired selection is displayed. 5. Press STORE. 6. To program another doorphone, press NEXT or PREV, or SELECT and enter the desired doorphone number. 7. Repeat steps 4 through 6. 8. Press END. |
| Condition | <ul style="list-style-type: none"> • To assign all doorphones to the same selection, press the * key in step 3. In this case, the display will show: DP-*:Mixed. |
| Feature References | <p>Section 3, Features</p> <p>Doorbell/Door Chime</p> <p>Doorphone Call</p> |

Doorphone Chime Assignment

| | |
|---------------------------|--|
| Description | Assigns each doorphone to the relay to which a doorbell/door chime should be connected, when assigned “Chime” or “Ring & Chime” in program [710]. One doorbell/door chime is available for any doorphone. The relay other than the relays connected to door openers should be selected. |
| Selection | <ul style="list-style-type: none"> • Doorphone number: 1 – 2, * (* = all doorphones) • Relay 1 / Relay 2 |
| Default | All doorphones — Relay 2 |
| Programming | <ol style="list-style-type: none"> 1. Enter 711. Display: Chime Assign 2. Press NEXT. Display: Door NO? → 3. Enter a doorphone number. Pressing NEXT also can enter doorphone number 1. Display example: DP-1:Relay 2 4. Keep pressing SELECT until the desired selection is displayed. 5. Press STORE. 6. To program another doorphone, press NEXT or PREV, or SELECT and enter the desired doorphone number. 7. Repeat steps 4 through 6. 8. Press END. |
| Condition | <ul style="list-style-type: none"> • To assign all doorphones to the same selection, press the * key in step 3. In this case, the display will show: DP-*:Mixed. |
| Feature References | Section 3, Features Doorbell/Door Chime Doorphone Call |

*Doorphone Chime Pattern Selection***Description**

Assigns an incoming doorphone call chiming pattern for each doorphone. There are eight patterns as follows:

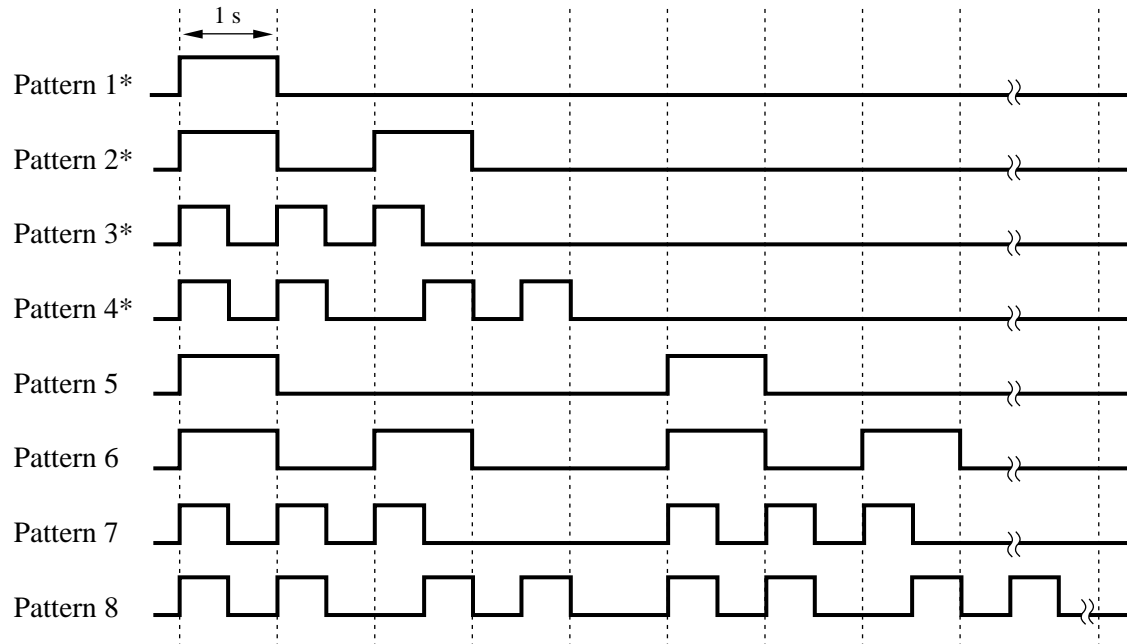

* The chime pattern occurs only once during the doorphone ringing time.

Selection

- Doorphone number: **1 – 2, *** (* = all doorphones)
- **Pattern 1 / Pattern 2 / Pattern 3 / Pattern 4 / Pattern 5 / Pattern 6 / Pattern 7 / Pattern 8**

Default

All doorphones — Pattern 1

Programming

1. Enter **712**.
Display: Chime Pattern
2. Press **NEXT**.
Display: Door NO? →
3. Enter a **doorphone number**.
Pressing **NEXT** also can enter doorphone number 1.
Display example: DP-1:Pattern 1
4. Keep pressing **SELECT** until the desired selection is displayed.
5. Press **STORE**.

Doorphone Chime Pattern Selection (contd.)

6. To program another doorphone, press **NEXT** or **PREV**, or **SELECT** and enter the desired **doorphone number**.
7. Repeat steps 4 through 6.
8. Press **END**.

Condition

- To assign all doorphones to the same selection, press the ***** key in step 3. In this case, the display will show: DP-*:Mixed.

Feature References

Section 3, Features
Doorbell/Door Chime
Doorphone Call

SMDR RS-232C Communication Parameters

Description

Assigns the communication parameters for the Serial Interface (RS-232C).

New line code: Selects the code for the printer or personal computer. If the printer or personal computer automatically feeds lines with a carriage return, select "CR". If not, select "CR+LF".

Baud rate: The baud rate code indicates the data transmission speed from the system to the printer or personal computer.

Word length: The word length code indicates how many bits compose a character.

Parity: The parity code indicates what type of parity is used to detect an error in the string of bits composing a character. Make the selection depending on the requirements of the printer or personal computer.

Stop bit: The stop bit code indicates the end of a bit string which composes a character. Select a value depending on the requirements of the printer or personal computer.

Selection

- New line code: **CR+LF / CR**
(CR=Carriage Return, LF=Line Feed)
- Baud rate (baud): **150 / 300 / 600 / 1200 / 2400 / 4800 / 9600**
- Word length (bits): **7 / 8**
- Parity: **None / Mark / Space / Even / Odd**
- Stop bit length (bits): **1 / 2**

Default

New line code = CR+LF;
Baud rate = 9600;
Word length = 8;
Parity = Mark;
Stop bit = 1

Programming

1. Enter **800**.
Display: RS232C Parameter
2. Press **NEXT** to program the new line code.
Display example: NL-Code:CR+LF
3. Keep pressing **SELECT** until the desired selection is displayed.
4. Press **STORE**.
5. Press **NEXT** to program the baud rate.
Display example: Baud Rate:9600B

SMDR RS-232C Communication Parameters (contd.)

6. Keep pressing **SELECT** until the desired selection is displayed.
7. Press **STORE**.
8. Press **NEXT** to program the word length.
Display example: Word Length:8bit
9. Keep pressing **SELECT** until the desired selection is displayed.
10. Press **STORE**.
11. Press **NEXT** to program the parity bit.
Display example: Parity:Mark
12. Keep pressing **SELECT** until the desired selection is displayed.
13. Press **STORE**.
14. Press **NEXT** to program the stop bit.
Display example: Stop Bit:1bit
15. Keep pressing **SELECT** until the desired selection is displayed.
16. Press **STORE**.
17. Press **END**.

Condition

- The following combinations are invalid.

| Parity | Word Length | Stop Bit |
|--------|-------------|----------|
| Mark | 8 | 2 |
| Space | 8 | 1 |
| Space | 8 | 2 |

Feature Reference

Section 3, Features
Station Message Detail Recording (SMDR)

SMDR Parameter

| | |
|--------------------------|--|
| Description | Used to match the SMDR output to the paper size being used in the printer. The page length determines the number of lines per page. The skip perforation determines the number of lines to be skipped at the end of every page. |
| Selection | <ul style="list-style-type: none">• Page length (lines): 4 – 99• Skip perforation (lines): 0 – 95 |
| Default | Page length – 66; Skip perforation – 0 |
| Programming | <ol style="list-style-type: none">1. Enter 801. Display: SMDR Parameter2. Press NEXT to program the page length. Display example: Page Length:663. Enter the page length. To change the current entry, press CLEAR and enter the new page length.4. Press STORE.5. Press NEXT to program the skip perforation. Display example: Skip Perf: 06. Enter the skip perforation. To change the current entry, press CLEAR and enter the new skip perforation.7. Press STORE.8. Press END. |
| Conditions | <ul style="list-style-type: none">• The page length should be at least four lines longer than the skip perforation length.• The title is placed on the first three lines of every page.• The programmed format becomes valid only if the Serial Interface (RS-232C) cable is connected. If a printer is already connected, disconnect it and connect again. Otherwise the previous format will be used. |
| Feature Reference | Section 3, Features Station Message Detail Recording (SMDR) |

Incoming/Outgoing Call Selection for Printing

| | |
|--------------------------|--|
| Description | Used to determine which calls will produce an SMDR printout. |
| Selection | <ul style="list-style-type: none">• Outgoing calls: On (all calls) / Off (no printing) / Toll (printing toll calls only)• Incoming calls: On (all calls) / Off (no printing) |
| Default | Outgoing calls – On; Incoming calls – On |
| Programming | <ol style="list-style-type: none">1. Enter 802. Display: Call Printing2. Press NEXT to program outgoing calls. Display example: Outgoing:On3. Keep pressing SELECT until the desired selection is displayed.4. Press STORE.5. Press NEXT to program incoming calls. Display example: Incoming:On6. Keep pressing SELECT until the desired selection is displayed.7. Press STORE.8. Press END. |
| Conditions | <ul style="list-style-type: none">• A printer must be connected to the Serial Interface (RS-232C) port provided on the system.• When “Toll” is selected, only calls which are checked in programs [302]–[305] “Toll Restriction — Class 2 – 5 Denied Codes” and are allowed, are printed out. |
| Feature Reference | Section 3, Features Station Message Detail Recording (SMDR) |

Secret Speed Dialing/One-Touch Dialing Printing

| | |
|---------------------------|---|
| Description | Enables or disables printing out the secret dial numbers stored in speed dialing and one-touch dialing on the SMDR. |
| Selection | • No printing / Printing |
| Default | No printing |
| Programming | <ol style="list-style-type: none">1. Enter 803. Display: Secret Printing2. Press NEXT. Display example: No Printing3. Keep pressing SELECT until the desired selection is displayed.4. Press STORE.5. Press END. |
| Conditions | None |
| Feature References | Section 3, Features Secret Dialing Station Message Detail Recording (SMDR) |

*System Data Dump***Description**

Starts or stops printing the assigned data. All or a specific area of current programmed data is printed out. The areas are as follows.

All Para: All data

System Para: All data except the following programs.

CO Para: Programmed data of [400]–[403], [405]–[423], [435]–[437], [900] and [913].

Ext Para: Programmed data of [516], [600]–[618], [904], [909] and [963] if a proprietary telephone is connected. The assigned data on the CO buttons are also printed out.
Programmed data of [516], [600]–[612] and [963] if a single line telephone is connected. The stored Personal Speed Dialing numbers are also printed out.

Speed Dial: Programmed data of [001], [011]

Stop Output: Stops printing.

Selection

All Para / System Para / CO Para + outside (CO) line number:

1 – 3, * (* = all outside (CO) lines) /

Ext Para + jack number: 01 – 08, * (* = all jacks) /

Speed Dial / Stop Output

Default

Not applicable.

Programming

1. Enter **804**.

Display: System Data Dump

2. Press **NEXT**.

Display: Menu:All Para

3. Keep pressing **SELECT** until the desired selection is displayed.

4. Press **STORE**.

5. If CO Para or Ext Para is selected, enter an **outside (CO) line number** or a **jack number**.

6. Press **STORE**.

7. Press **END**.

System Data Dump (contd.)

Condition

- A printer must be connected to the Serial Interface (RS-232C) port provided on the system.

Feature Reference

Section 3, Features
Station Message Detail Recording (SMDR)

SMDR Account Code Selection

| | |
|---------------------------|---|
| Description | Selects the account code type printed on the SMDR. There are the following two types. CODE: the 4-digit account code number programmed in [310] “Account Codes”. INDEX: a 2-digit code number (01 – 24). |
| Selection | CODE / INDEX |
| Default | CODE |
| Programming | <ol style="list-style-type: none">1. Enter 805. Display: Account Select2. Press NEXT. Display example: CODE3. Keep pressing SELECT until the desired selection is displayed.4. Press STORE.5. Press END. |
| Condition | <ul style="list-style-type: none">• The printing of the index of the account code only occurs if the extension user entered their account code in the “Verify – All” or “Verify – Toll” input mode as programmed in [605] “Account Code Entry Mode”. |
| Feature References | Section 3, Features Account Code Entry Station Message Detail Recording (SMDR) |

Caller ID Assignment

| | |
|--------------------------|--|
| Description | Enables or disables the Caller ID feature for outside (CO) lines which have contracted the Caller ID Service by a Central Office. |
| Selection | <ul style="list-style-type: none">• Outside (CO) line number: 1 – 3, * (* = all outside (CO) lines)• Enable / Disable |
| Default | All outside (CO) lines – Enable |
| Programming | <ol style="list-style-type: none">1. Enter 900. Display: CID Assign2. Press NEXT. Display: CO NO? →3. Enter an outside (CO) line number. Pressing NEXT also can enter outside (CO) line number 1. Display example: CO 1:Disable4. Keep pressing SELECT until the desired selection is displayed.5. Press STORE.6. To program another outside (CO) line, press NEXT or PREV, or SELECT and enter the desired outside (CO) line number.7. Repeat steps 4 through 6.8. Press END. |
| Conditions | <ul style="list-style-type: none">• To assign all outside (CO) lines to the same selection, press the * key in step 3. In this case, the display will show: CO *:Mixed. |
| Feature Reference | Section 3, Features Caller ID |

Caller ID Area Code Assignment

| | |
|---------------------------|---|
| Description | Assigns the required area code when using the Caller ID feature. By assigning the area code, the system records the caller's phone number modified by programs [902] "Caller ID Modification for Local Calls" and [903] "Caller ID Modification for Long Distance Calls". |
| Selection | <ul style="list-style-type: none">• Code number: 1 – 5• Area code: 6 digits max. |
| Default | All codes – Not stored |
| Programming | <ol style="list-style-type: none">1. Enter 901. Display: CID Area Code2. Press NEXT. Display: CODE NO? →3. Enter a code number. Pressing NEXT also can enter code number 1. Display example: CODE-01:.....4. Enter an area code. To delete the current entry, press CLEAR. To change the current entry, press CLEAR and enter the new area code.5. Press STORE.6. To program another code number, press NEXT or PREV, or SELECT and enter the desired code number.7. Repeat steps 4 through 6.8. Press END. |
| Condition | <ul style="list-style-type: none">• The area code can be six digits long. Valid numbers are from 0 to 9. |
| Feature References | Section 3, Features Call Log, Incoming Caller ID |

Caller ID Modification for Local Calls

| | |
|---------------------------|--|
| Description | <p>Assigns the removed digits from a received local caller's number, and adds a number to make the final number which serves as the Caller ID number. The system records the modified caller's number in the incoming call log list so that the extension user can call back the caller.</p> <p>Digits are removed from or added to the beginning of the received number.</p> |
| Selection | <ul style="list-style-type: none">• Number of digits to be deleted: 0 – 9 (0 = no deletion)• Number to be added: 4 digits (max.) |
| Default | Deleted digits – 3; Added number – blank |
| Programming | <ol style="list-style-type: none">1. Enter 902. Display: CID Local Call2. Press NEXT. Display example: Del:3 Add:....3. Enter the number of digits to be deleted. To change the current entry, press CLEAR and enter the new number.4. Press ➡ to program the number to be added, if required.5. Enter the number to be added. To change the current entry, press CLEAR and enter the new number.6. Press STORE.7. Press END. |
| Condition | <ul style="list-style-type: none">• The added number has a maximum of 4 digits, consisting of 0 – 9, * and #. |
| Feature References | <p>Section 3, Features Call Log, Incoming Caller ID</p> |

Caller ID Modification for Long Distance Calls

Description

Assigns the removed digits from a received long distance caller's number, and adds a number to make the final number which serves as the Caller ID number. The system records the modified caller's number in the incoming call log list so that the extension user can call back the caller.

Digits are removed from or added to the beginning of the received number.

Selection

- Number of digits to be deleted: **0 – 9** (0 = no deletion)
- Number to be added: **4 digits (max.)**

Default

Deleted digits – 0; Added number – 1

Programming

1. Enter **903**.
Display: CID LD Call
2. Press **NEXT**.
Display example: Del:0 Add:1...
3. Enter the **number of digits to be deleted**.
To change the current entry, press **CLEAR** and enter the new number.
4. Press **➡** to program the number to be added, if required.
5. Enter the **number to be added**.
To change the current entry, press **CLEAR** and enter the new number.
6. Press **STORE**.
7. Press **END**.

Condition

- The added number has a maximum of 4 digits, consisting of **0 – 9, *** and **#**.

Feature References

Section 3, Features
Call Log, Incoming
Caller ID

Caller ID Log Priority Selection

| | |
|--------------------------|--|
| Description | Selects the first display of an incoming outside call by the Caller ID service. |
| Selection | <ul style="list-style-type: none">• Jack number: 01 – 08, * (* = all jacks)• Number / Name |
| Default | All jacks – Name |
| Programming | <ol style="list-style-type: none">1. Enter 904. Display: CID Priority2. Press NEXT. Display: Jack NO? →3. Enter a jack number. Pressing NEXT also can enter jack number 01. Display example: #01:Name4. Keep pressing SELECT until the desired selection is displayed.5. Press STORE.6. Press END. |
| Conditions | <ul style="list-style-type: none">• This program is available when the Caller ID service provides both the name and number. If only the number is provided, this program is not necessary.• To assign all jacks to the same selection, press the * key in step 3. In this case, the display will show: # *:Mixed. |
| Feature Reference | Section 3, Features Caller ID |

Caller ID SMDR Format

| | |
|---------------------------|--|
| Description | Selects whether a Caller ID number is printed out or not on the SMDR. |
| Selection | Without CID (not printed) / With CID (printed) |
| Default | With CID |
| Programming | <ol style="list-style-type: none">1. Enter 906. Display: CID SMDR Format2. Press NEXT. Display example: With CID3. Keep pressing SELECT until the desired selection is displayed.4. Press STORE.5. Press END. |
| Condition | <ul style="list-style-type: none">• Even if a name is also sent by the Caller ID service, only the number is printed. |
| Feature References | Section 3, Features Caller ID Station Message Detail Recording (SMDR) |

Caller ID SMDR Printout Selection

| | |
|---------------------------|--|
| Description | Selects whether a Caller ID number is printed out or not on the SMDR before the call is answered. |
| Selection | Enable (printed) / Disable (not printed) |
| Default | Disable |
| Programming | <ol style="list-style-type: none">1. Enter 907. Display: Caller-ID Inf.2. Press NEXT. Display example: Disable3. Keep pressing SELECT until the desired selection is displayed.4. Press STORE.5. Press END. |
| Conditions | None |
| Feature References | Section 3, Features Caller ID Station Message Detail Recording (SMDR) |

Caller ID Call Waiting Time

| | |
|--------------------------|--|
| Description | Assigns the length of the second caller information display timer. The caller's information flashes on the display of a proprietary telephone during the assigned time when a caller's information is sent from the Central Office with a Call Waiting tone. |
| Selection | Time: 10 sec / 20 sec / 30 sec / 40 sec / 60 sec / 120 sec |
| Default | 30 sec |
| Programming | <ol style="list-style-type: none">1. Enter 908. Display: C.W CID Time2. Press NEXT. Display example: Time: 30sec3. Keep pressing SELECT until the desired selection is displayed.4. Press STORE.5. Press END. |
| Conditions | <ul style="list-style-type: none">• If a proprietary telephone user does not talk to the caller on the display (flashing) by pressing the FLASH/RECALL button during the assigned time, the caller's information will be recorded automatically on the telephone and the Caller ID Indication button indicator lights.• The TRANSFER button and HOLD button do not work during the assigned time. |
| Feature Reference | Section 3, Features Caller ID Call Waiting |

Common Area Call Log Check Assignment

| | |
|--------------------------|---|
| Description | Enables or disables checking call logs stored in the common area. If enabled, the Caller ID Indication — Common button and Caller ID Selection — Common button can be assigned. |
| Selection | <ul style="list-style-type: none">• Jack number: 01 – 08, * (* = all jacks)• Disable / Enable |
| Default | All jacks – Enable |
| Programming | <ol style="list-style-type: none">1. Enter 909. Display: Call Log Assign2. Press NEXT. Display: Jack NO? →3. Enter a jack number. Pressing NEXT also can enter jack number 01. Display example: #01:Enable4. Keep pressing SELECT until the desired selection is displayed.5. Press STORE.6. To program another jack, press NEXT or PREV, or SELECT and enter the desired jack number.7. Repeat steps 4 through 6.8. Press END. |
| Condition | <ul style="list-style-type: none">• To assign all jacks to the same selection, press the * key in step 3. In this case, the display will show: # *:Mixed. |
| Feature Reference | Section 3, Features Call Log, Incoming |

Caller ID Call Waiting Assignment

| | |
|--------------------------|--|
| Description | Enables or disables the Caller ID Call Waiting feature for outside (CO) lines which have contracted Caller ID Service with a Central Office. |
| Selection | <ul style="list-style-type: none"> • Outside (CO) line number: 1 – 3, * (* = all outside (CO) lines) • Enable / Disable |
| Default | All outside (CO) lines — Enable |
| Programming | <ol style="list-style-type: none"> 1. Enter 913. Display: C.W CID Assign 2. Press NEXT. Display: CO NO? → 3. Enter an outside (CO) line number. Pressing NEXT also can enter outside (CO) line number 1. Display example: CO 1:Enable 4. Keep pressing SELECT until the desired selection is displayed. 5. Press STORE. 6. To program another outside (CO) line, press NEXT or PREV, or SELECT and enter the desired outside (CO) line number. 7. Repeat steps 4 through 6. 8. Press END. |
| Conditions | <ul style="list-style-type: none"> • To assign all outside (CO) lines to the same selection, press the * key in step 3. In this case, the display will show: CO *:Mixed. • When “Disable” is assigned in program [900] “Caller ID Assignment”, the Caller ID Call Waiting feature does not perform even if “Enable” is assigned in this program. |
| Feature Reference | Section 3, Features Caller ID Call Waiting |

Caller ID Call Waiting CAS Receive Time

| | |
|--------------------------|--|
| Description | The telephone company calls the system “Customer Premise Equipment (CPE)”. If you have a Caller ID Call Waiting during a conversation, the telephone company will send to the CPE a CAS (CPE Alerting Signal). If the CAS duration is too long or too short, the CAS is ignored. If the CAS is accepted, then the system will respond and the Caller ID Call Waiting feature will be performed. This program assigns the allowable CAS duration. Normally, it should not be necessary to change the default setting. |
| Selection | • Mode 1 (40 ms through 120 ms) / Mode 2 (64 ms through 96 ms) / Mode 3 (72 ms through 96 ms) |
| Default | Mode 3 |
| Programming | <ol style="list-style-type: none">1. Enter 914. Display: C.W CID Receive2. Press NEXT. Display example: MODE 33. Keep pressing SELECT until the desired selection is displayed.4. Press STORE.5. Press END. |
| Condition | • This program is available when “Enable” is assigned in programs [900] “Caller ID Assignment” and [913] “Caller ID Call Waiting Assignment”. |
| Feature Reference | Section 3, Features Caller ID Call Waiting |

| | |
|---------------------------|--|
| Description | Enables or disables to select the checksum mode. Normally, it should not be necessary to change the default setting. For further details on the checksum, consult your dealer. |
| Selection | • Enable / Disable |
| Default | Enable |
| Programming | <ol style="list-style-type: none">1. Enter 915. Display: CID Check Sum2. Press NEXT. Display example: Enable3. Keep pressing SELECT until the desired selection is displayed.4. Press STORE.5. Press END. |
| Conditions | None |
| Feature References | Section 3, Features Caller ID Caller ID Call Waiting |

Call Forwarding Selection

| | |
|--------------------------|---|
| Description | Enables or disables the Call Forwarding feature for each extension for an outside call via an outside (CO) line assignment “Normal” in programs [414]-[416] “Outside (CO) Line Mode — Day/Night/Lunch”. If disabled, an extension user cannot forward the outside call even if the user has set the Call Forwarding feature. |
| Selection | <ul style="list-style-type: none"> • Jack number: 01 – 08, * (* = all jacks) • Disable / Enable |
| Default | All jacks – Disable |
| Programming | <ol style="list-style-type: none"> 1. Enter 963. Display: FWD Selection 2. Press NEXT. Display: Jack NO? → 3. Enter a jack number. Pressing NEXT also can enter jack number 01. Display example: #01:Disable 4. Keep pressing SELECT until the desired selection is displayed. 5. Press STORE. 6. To program another jack, press NEXT or PREV, or SELECT and enter the desired jack number. 7. Repeat steps 4 through 6. 8. Press END. |
| Conditions | <ul style="list-style-type: none"> • This assignment also works for an outside call via the DISA Intercept Routing feature or when a call via DISA is received by a ring group. • To assign all jacks to the same selection, press the * key in step 3. In this case, the display will show: # *:Mixed. |
| Feature Reference | Section 3, Features Call Forwarding – All Calls Call Forwarding – Busy/No Answer Call Forwarding – Follow Me |

Incoming Lamp Control

| | |
|---------------------------|--|
| Description | Enables or disables the Message/Ringer Lamp flashing when an extension is in use or idle, and one of the following occurs: <ul style="list-style-type: none">– An intercom call is incoming to the extension and Call Waiting Tone 1 is assigned.– A doorphone call from any doorphone is incoming to the extension.– An outside (CO) call with Caller ID information is incoming to the extension.– A doorphone call from any doorphone and a doorbell/door chime is selected. |
| Selection | Disable (Message/Ringer Lamp — Off) / Enable (Message/Ringer Lamp — Flashing) |
| Default | Disable |
| Programming | <ol style="list-style-type: none">1. Enter 968. Display: Incoming Lamp2. Press NEXT. Display example: Disable3. Keep pressing SELECT until the desired selection is displayed.4. Press STORE.5. Press END. |
| Conditions | None |
| Feature References | Section 3, Features Call Waiting Caller ID Call Waiting Doorbell/Door Chime Doorphone Call |

| | |
|--------------------|--|
| Description | <div>Confirms the System ROM version.</div> <div>Display example: Y871BA 030101(M)</div> <div><div>Version</div><div>Date</div></div> |
| Programming | <div><div>1.</div><div>Enter 998.</div><div>Display: ROM Version</div></div> <div><div>2.</div><div>Press NEXT.</div><div>The display shows the system ROM version.</div></div> <div><div>3.</div><div>Press END.</div></div> |
| Conditions | None |
| Feature References | None |

| | |
|--------------------------|---|
| Description | Clears the system data which have been programmed. The system will re-start with the default settings. |
| Selection | All Para / System Para / CO Para + outside (CO) line number: 1 – 3, * (* = all outside (CO) lines) / Ext Para + jack number: 01 – 08, * (* = all jacks) / Speed Dial |
| Programming | <ol style="list-style-type: none">1. Enter 999. Display: System Clear2. Press NEXT. Display: Menu:All Para3. Keep pressing SELECT until the desired selection is displayed.4. Press STORE.5. If CO Para or Ext Para is selected, enter an outside (CO) line or jack number.6. Press STORE.7. Press END. |
| Condition | • Please refer to program [804] for each parameter. |
| Feature Reference | Section 3, Features System Data Default Set |


Section 5

List

This section lists the tone, ring and default values of system programming.


5.1 Tone/Ring Tone

< TONE >

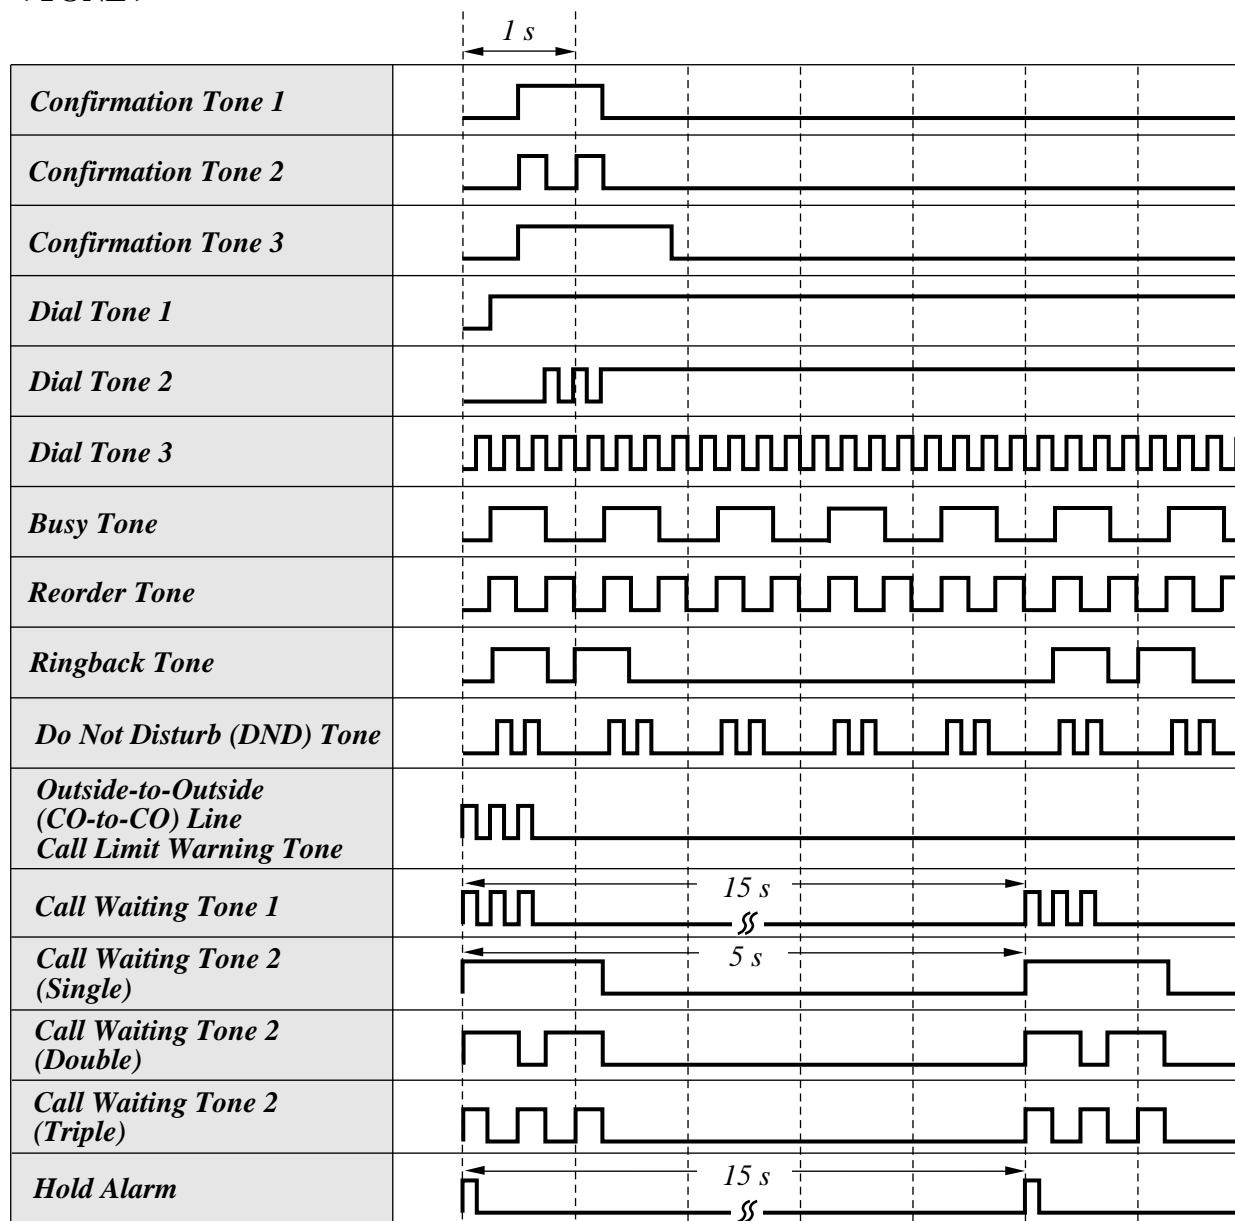

5.1 Tone/Ring Tone

< RING TONE >

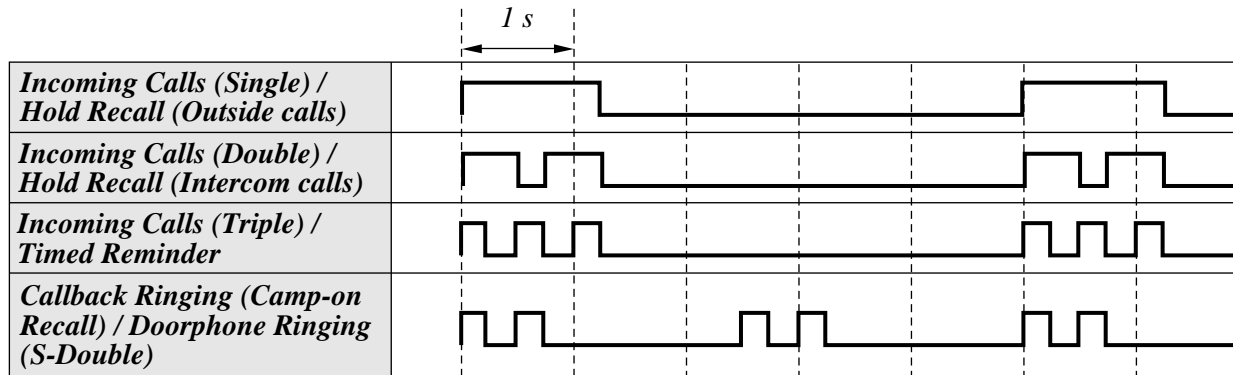

5.2 Default Values

| Address | Program | Default |
|---------|--|---|
| [000] | Date and Time Setting | 03 Jan. 1 Wed 12:00 AM |
| [001] | System Speed Dialing Entry | All speed dialing numbers — Not stored |
| [002] | System Password | 1234 |
| [005] | One-Touch Transfer Using a DSS Button | With Transfer |
| [006] | Time (Day/Night/Lunch) Service Changing Mode | Manual |
| [007] | Time (Day/Night/Lunch) Service Start Time | Every day of the week — Day – 9:00 AM / Night – 5:00 PM / Lunch-S – None / Lunch-E – None |
| [008] | Operator Assignment | Jack-01 |
| [009] | Extension Number Assignment | Jack 01 – 08 = EXT 101 – 108 |
| [010] | LCD Time Display Selection | 12 HOUR |
| [011] | System Speed Dialing Name Setting | All speed dialing numbers — Not stored |
| [100] | Hunting Group Set | All extension groups — Disable |
| [101] | Station Hunting Type | All extension groups — Terminate |
| [104] | Hold Mode Selection | Hold-1 |
| [105] | Conference Tone | Enable |
| [106] | External Paging Access Tone | Enable |
| [107] | DTMF Receiver Check | All DTMF receivers — Enable |
| [108] | Flash Mode for a Station Locked Extension | Disable |
| [109] | CO Indicator Assignment | Enable |
| [110] | Flash Key Mode | MODE 2 |
| [111] | Hold Music Selection | External |
| [112] | DSS Button Indication Mode | Enable |
| [115] | Extension Ringing Pattern Selection | Double |
| [117] | Call Pickup Tone | Enable |
| [118] | Pulse Restriction | Enable |
| [119] | Redialing After Pulse to Tone Conversion | Disable |
| [125] | Toll Restriction Check for * and # | Enable |

5.2 Default Values

| Address | Program | Default |
|-------------|--|---|
| [200] | Hold Recall Time | 30 s |
| [201] | Transfer Recall Time | 30 s |
| [202] | Call Forwarding Start Time | 15 s delay |
| [203] | Pickup Dial Delay Time | 3 s |
| [204] | Call Duration Count Start Time | 10 s after dial |
| [205] | Outside-to-Outside (CO-to-CO) Line Duration Time Limit | 10 min |
| [206] | Dialing Start Time | 0 ms |
| [208] | Interdigit Time | 10 s |
| [211] | No Dial Disconnection | Disable |
| [300] | Carrier Code Assignment | All codes — Not stored |
| [301] | Toll Restriction — System Speed Dialing Boundary Class | Boundary COS-1 |
| [302]–[305] | Toll Restriction — Class 2 – 5 Denied Codes | All codes — Not stored |
| [306] | Toll Restriction — Exception Codes | All codes — Not stored |
| [309] | Emergency Dial Number Set | Code-01 = 911, Other Codes = Not stored |
| [310] | Account Codes | All codes — Not stored |
| [311] | Automatic Pause Insertion Codes | All codes — Not stored |
| [312] | Toll Restriction — Station Lock Boundary Class | Disable |
| [400] | Outside (CO) Line Connection Assignment | All outside (CO) lines — Connect |
| [401] | Dial Mode | All outside (CO) lines — DTMF Mode |
| [402] | Pulse Speed Selection | All outside (CO) lines — Low Speed |
| [403] | Host PBX Access Codes | All outside (CO) lines — Not stored |
| [404] | Outside (CO) Line Group Assignment | CO1 — TRK GRP-1; CO2 — TRK GRP-2; CO3 — TRK GRP-3 |
| [405]–[407] | Flexible Outward Dialing Assignment — Day/Night/Lunch | All outside (CO) lines – all jacks – Enable — Day/Night/Lunch |
| [408]–[410] | Flexible Ringing Assignment — Day/Night/Lunch | All outside (CO) lines – all jacks – Enable — Day/Night/Lunch |

5.2 Default Values

| Address | Program | Default |
|-------------|--|---|
| [411]–[413] | Delayed Ringing Assignment — Day/Night/Lunch | All outside (CO) lines – all jacks – Immdtly — Day/Night/Lunch |
| [414]–[416] | Outside (CO) Line Mode — Day/Night/Lunch | All outside (CO) lines – Normal — Day/Night/Lunch |
| [417] | Pause Time | All outside (CO) lines — 1.5 s |
| [418] | Flash Time | All outside (CO) lines — 600 ms |
| [419] | Automatic Designated Outside (CO) Line Access | All outside (CO) lines — Enable |
| [420] | Calling Party Control (CPC) Signal | All outside (CO) lines — 42 (350 ms) |
| [421] | CPC Detection for Outgoing Calls | All outside (CO) lines — Disable |
| [422] | Disconnect Time | All outside (CO) lines — 1.5 s |
| [423] | Outside (CO) Line Ringing Pattern Selection | Single |
| [435] | Local Carrier-Based Voice Mail Signaling Assignment | All outside (CO) lines — Disable |
| [436] | Local Carrier-Based Voice Mail Access Dial Assignment | All outside (CO) lines — Not stored |
| [437] | Extension Access to Local Carrier-Based Voice Mail Assignment | All outside (CO) lines – all jacks — Enable |
| [500] | DISA Incoming Dialing Mode Selection | Without AA |
| [501] | DISA Built-in Auto Attendant | All numbers — Not stored |
| [504] | DISA Delayed Answer Time | 3 s |
| [506] | DISA Busy Mode | Disconnect |
| [507] | DISA Intercept Mode | Intercept |
| [508] | DISA Ringing Time before Intercept | 20 s |
| [509] | DISA Ringing Time after Intercept | 20 s |
| [510] | DISA No Dial Mode | DISA1 — Intercept |
| [511] | DISA Security Type | Trunk Security |
| [512] | DISA Security Codes | All codes – Not stored |
| [515] | Intercept Time for Internal DISA | 3 s |
| [516] | DISA Incoming Assignment | All jacks — Enable |

5.2 Default Values

| Address | Program | Default |
|-------------|---|--|
| [517] | DISA AA Wait Time | 2 s |
| [518] | DISA Tone Selection after the Security Code | Enable |
| [530] | DISA Security Codes Digits Selection | 4 digits |
| [600] | Extension Group Assignment | All jacks — EXT GRP-1 |
| [601]–[603] | TRS – Class of Service (COS) Assignment — Day/Night/Lunch | All jacks – COS-1 — Day/Night/Lunch |
| [604] | Extension Name Setting | All jacks — Not stored |
| [605] | Account Code Entry Mode | All jacks — Option |
| [606] | Call Transfer to an Outside (CO) Line | All jacks — Disable |
| [607] | Call Forwarding to an Outside (CO) Line | All jacks — Disable |
| [608] | Executive Busy Override | All jacks — Disable |
| [609] | Do Not Disturb Override | All jacks — Disable |
| [610] | Paralleled Telephone Connection | All jacks — Disable |
| [611] | TAM (Telephone Answering Machine) Extension | All jacks — Disable |
| [612] | Room Monitor Assignment | All jacks — Disable |
| [617] | Wireless PT Port Assignment | All jacks — Not Connect |
| [618] | Message Waiting for Another Extension | All jacks — Enable |
| [700]–[702] | Doorphone Ringing Assignment — Day/Night/Lunch | All doorphones – all jacks – Enable — Day/Night/Lunch |
| [703]–[705] | Door Opener Assignment — Day/Night/Lunch | All door openers – all jacks – Enable — Day/Night/Lunch |
| [706] | Doorphone Ringing/Tone Pattern Selection | All doorphones — Triple |
| [707] | Doorphone Access Tone Selection | All doorphones — Enable |
| [708] | Doorphone Ringing Time | All doorphones — 15 s |
| [709] | Door Opener Time | All door openers — 5 s |
| [710] | Doorphone Ring/Chime Selection | All doorphones — Ring |
| [711] | Doorphone Chime Assignment | All doorphones — Relay 2 |
| [712] | Doorphone Chime Pattern Selection | All doorphones — Pattern 1 |

5.2 Default Values

| Address | Program | Default |
|---------|---|---|
| [800] | SMDR RS-232C Communication Parameters | New line code = CR+LF; Baud rate = 9600; Word length = 8; Parity = Mark; Stop bit = 1 |
| [801] | SMDR Parameter | Page length — 66; Skip perforation — 0 |
| [802] | Incoming/Outgoing Call Selection for Printing | Outgoing calls — On; Incoming calls — On |
| [803] | Secret Speed Dialing/One-Touch Dialing Printing | No printing |
| [804] | System Data Dump | Not applicable. |
| [805] | SMDR Account Code Selection | CODE |
| [900] | Caller ID Assignment | All outside (CO) lines — Enable |
| [901] | Caller ID Area Code Assignment | All codes — Not stored |
| [902] | Caller ID Modification for Local Calls | Deleted digits — 3; Added number — blank |
| [903] | Caller ID Modification for Long Distance Calls | Deleted digits — 0; Added number — 1 |
| [904] | Caller ID Log Priority Selection | All jacks — Name |
| [906] | Caller ID SMDR Format | With CID |
| [907] | Caller ID SMDR Printout Selection | Disable |
| [908] | Caller ID Call Waiting Time | 30 s |
| [909] | Common Area Call Log Check Assignment | All jacks — Enable |
| [913] | Caller ID Call Waiting Assignment | All outside (CO) lines — Enable |
| [914] | Caller ID Call Waiting CAS Receive Time | Mode 3 |
| [915] | Caller ID Checksum | Enable |
| [963] | Call Forwarding Selection | All jacks — Disable |
| [968] | Incoming Lamp Control | Disable |
| [998] | ROM Version | Not applicable. |
| [999] | System Data Clear | Not applicable. |

Section 6


Troubleshooting

This section provides information for system
and telephone troubleshooting.

6.1 Installation

| PROBLEM | PROBABLE CAUSE | POSSIBLE SOLUTION |
|--|--|---|
| Extension does not operate. | Something is wrong with the connection between the system and extension. A telephone with an A-A1 relay is connected. Something is wrong with the extension. | Take the extension and plug it into the same extension port using a short telephone cord. If the telephone works correctly, the connection between the system and the extension must be repaired. Use a 2 wire cord. Set the A-A1 relay switch on the telephone to the “OUT” or “OFF” position. Take the extension and plug it into another extension port that is working. If the telephone does not work, replace the phone. |
| Improper reset operation. | | Turn the Power Switch off and on. |
| Noise during external paging. | Induced noise on the wire between the system and the amplifier. | Use a shielded cable as the connection wire between the system and amplifier. A short shielded cable is recommended. |
| Volume distortion from external music source. | Excessive input level from external music source. | Decrease the output level of the external music source by using the volume control on the music source. |
| Speed Dialing or One-Touch Dialing does not function. | Wrong programming. | Enter an outside (CO) line access number (9, 81 through 83) in programming. |
| A proprietary telephone connected to extension jacks 01 through 08 does not operate, but a single line telephone operates. | An extension (H, L) jack 01 through 08 may have been shorted. | Turn the Power Switch off and fix the shorted part, then turn the Power Switch on. |

6.2 Connection

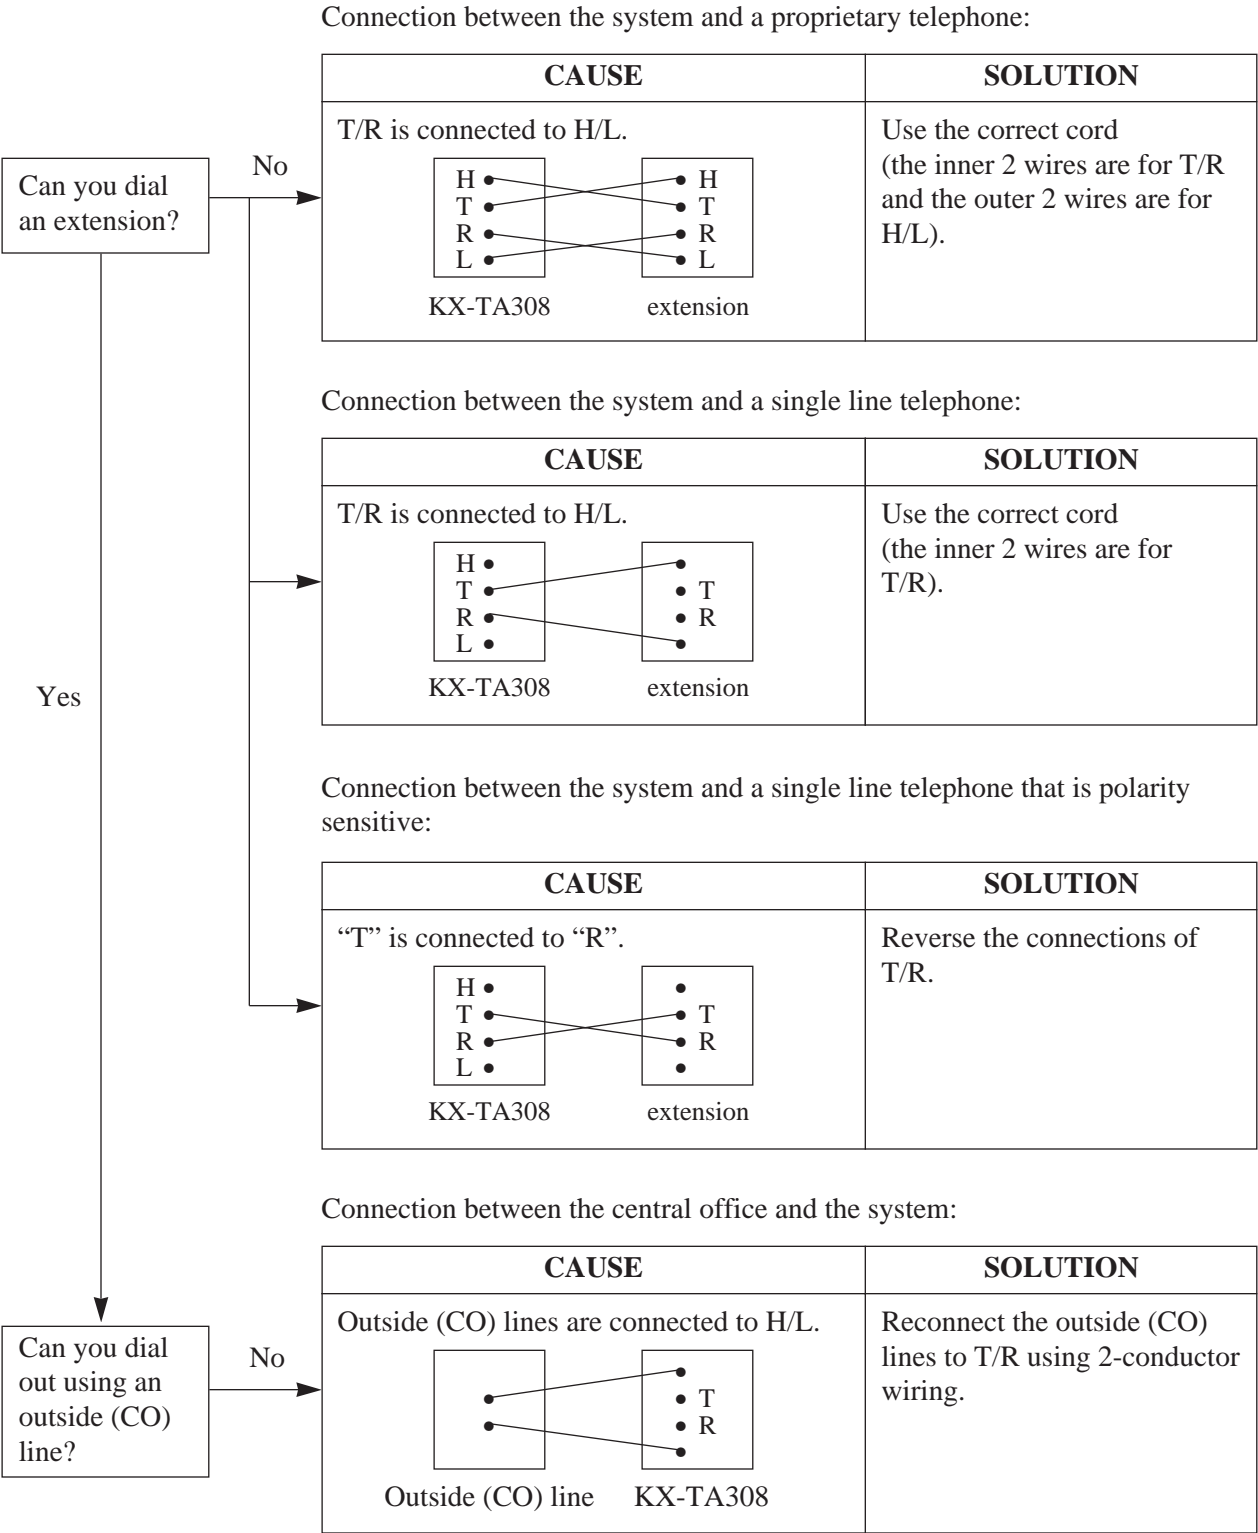

6.3 Operation

| PROBLEM | PROBABLE CAUSE | POSSIBLE SOLUTION |
|--|--|---|
| The unit does not ring. | <ul style="list-style-type: none">• An outside (CO) line number is not programmed.• The Ringer Volume Selector is set to “OFF”. | <ul style="list-style-type: none">• Program outside (CO) line numbers.• Set to “HIGH” or “LOW”. |
| During a power failure, the extension connected to JACK 01 does not operate. | A PT is connected to the jack. | Disconnect the PT and connect a single line telephone. |
| Originating an outside call cannot be performed. | The corresponding CO button does not exist on the proprietary telephone. | Program the CO button. See the Flexible Button Assignment in the User Manual. |
| A tone type single line telephone (SLT) user cannot make a call. | There may be something wrong with a DTMF receiver. | <ol style="list-style-type: none">1. Select “Enable” for DTMF receiver 1 and “Disable” for DTMF receiver 2 in program [107].2. Make a call using a tone type SLT connected to one of extension jacks 01 – 08.3. If you cannot make the call, the problem may have been caused by DTMF receiver 1. If the call can be made, go to step 4.4. Try DTMF receiver 2. Select “Disable” for DTMF receiver 1 and “Enable” for DTMF receiver 2 in program [107], and make another call. If you cannot make the call, the problem may have been caused by DTMF receiver 2. |

Section 7

Programming Tables

This section provides a reference for entering user-programmed data.

7 Programming Tables

| [000] Date and Time Setting | | | | | | | |
|-----------------------------|-------------------|------------------------|-----------------|--------------------------------|------------------|---------------------|---------|
| | Year (00 – 99) | Month (Jan. – Dec.) | Day (1 – 31) | Day of the week (Sun – Sat) | Hour (1 – 12) | Minute (00 – 59) | AM / PM |
| Default | '03 | Jan. | 1 | Wed | 12 | 00 | AM |
| Change | | | | | | | |

| [002] System Password | | | | |
|-----------------------|---|-------------------------------|---|--|
| Default | | Parameter: 4– 7 digits, 0 – 9 | | |
| 1 | 2 | 3 | 4 | |

| [005] One-Touch Transfer Using a DSS Button | | |
|--|---------|-----------|
| | Default | Selection |
| With Transfer | ✓ | |
| Without Transfer | | |

| [006] Time (Day/Night/Lunch) Service Changing Mode | | |
|---|---------|-----------|
| | Default | Selection |
| Manual | ✓ | |
| Automatic | | |

| [007] Time (Day/Night/Lunch) Service Start Time | | | | | | | | | |
|---|-----------|-----------|------|------|------|------|------|------|------|
| | Default | Change | | | | | | | |
| | Every day | Every day | Sun. | Mon. | Tue. | Wed. | Thu. | Fri. | Sat. |
| Day | 9:00 AM | | | | | | | | |
| Night | 5:00 PM | | | | | | | | |
| Lunch-S | None | | | | | | | | |
| Lunch-E | None | | | | | | | | |

| [008] Operator Assignment | | |
|---------------------------|---------|----------|
| | Default | Jack no. |
| Operator | Jack-01 | |

| [010] LCD Time Display Selection | | |
|----------------------------------|---------|-----------|
| | Default | Selection |
| 12 HOUR | ✓ | |
| 24 HOUR | | |

7 Programming Tables

| | [001] System Speed Dialing Entry | [011] System Speed Dialing Name Setting |
|---------|-----------------------------------|---|
| SPD no. | Telephone number (32 digits max.) | Name (max. 16 characters) |
| | Default: All – Not stored | Default: All – Not stored |
| 00 | | |
| 01 | | |
| 02 | | |
| 03 | | |
| 04 | | |
| 05 | | |
| 06 | | |
| 07 | | |
| 08 | | |
| 09 | | |
| 10 | | |
| 11 | | |
| 12 | | |
| 13 | | |
| 14 | | |
| 15 | | |
| 16 | | |
| 17 | | |
| 18 | | |
| 19 | | |
| 20 | | |
| 21 | | |
| 22 | | |
| 23 | | |
| 24 | | |
| 25 | | |
| 26 | | |
| 27 | | |
| 28 | | |
| 29 | | |
| 30 | | |
| 31 | | |
| 32 | | |
| 33 | | |
| 34 | | |
| 35 | | |
| 36 | | |
| 37 | | |
| 38 | | |
| 39 | | |

7 Programming Tables

| | [001] System Speed Dialing Entry | [011] System Speed Dialing Name Setting |
|---------|-----------------------------------|---|
| SPD no. | Telephone number (32 digits max.) | Name (max. 16 characters) |
| | Default: All – Not stored | Default: All – Not stored |
| 40 | | |
| 41 | | |
| 42 | | |
| 43 | | |
| 44 | | |
| 45 | | |
| 46 | | |
| 47 | | |
| 48 | | |
| 49 | | |
| 50 | | |
| 51 | | |
| 52 | | |
| 53 | | |
| 54 | | |
| 55 | | |
| 56 | | |
| 57 | | |
| 58 | | |
| 59 | | |
| 60 | | |
| 61 | | |
| 62 | | |
| 63 | | |
| 64 | | |
| 65 | | |
| 66 | | |
| 67 | | |
| 68 | | |
| 69 | | |
| 70 | | |
| 71 | | |
| 72 | | |
| 73 | | |
| 74 | | |
| 75 | | |
| 76 | | |
| 77 | | |
| 78 | | |
| 79 | | |

7 Programming Tables

| | [001] System Speed Dialing Entry | [011] System Speed Dialing Name Setting |
|---------|-----------------------------------|---|
| SPD no. | Telephone number (32 digits max.) | Name (max. 16 characters) |
| | Default: All – Not stored | Default: All – Not stored |
| 80 | | |
| 81 | | |
| 82 | | |
| 83 | | |
| 84 | | |
| 85 | | |
| 86 | | |
| 87 | | |
| 88 | | |
| 89 | | |
| 90 | | |
| 91 | | |
| 92 | | |
| 93 | | |
| 94 | | |
| 95 | | |
| 96 | | |
| 97 | | |
| 98 | | |
| 99 | | |

| | [009] Extension Number Assignment | | [600] Extension Group Assignment | | | | | | | | [604] Extension Name Setting |
|-----------------------|--------------------------------------|--------|-------------------------------------|---|---|---|---|---|---|---|--|
| Extension jack no. | Extension no. (100...199) | | Extension group no. (1...8) | | | | | | | | Extension name (10 characters max.) |
| | Default: All – Group 1 | | | | | | | | | | |
| | Default | Change | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | Default: All – Not stored |
| 01 | 101 | | | | | | | | | | |
| 02 | 102 | | | | | | | | | | |
| 03 | 103 | | | | | | | | | | |
| 04 | 104 | | | | | | | | | | |
| 05 | 105 | | | | | | | | | | |
| 06 | 106 | | | | | | | | | | |
| 07 | 107 | | | | | | | | | | |
| 08 | 108 | | | | | | | | | | |
| * | | | | | | | | | | | |

7 Programming Tables

| [100] Hunting Group Set | | | | | | | | | | |
|-------------------------|---------|-------------------------------------|---|---|---|---|---|---|---|---|
| Selection | Default | Extension group no. (1...8, *: all) | | | | | | | | |
| | All | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | * |
| Disable | ✓ | | | | | | | | | |
| Enable | | | | | | | | | | |

| [101] Station Hunting Type | | | | | | | | | | |
|----------------------------|---------|-------------------------------------|---|---|---|---|---|---|---|---|
| Selection | Default | Extension group no. (1...8, *: all) | | | | | | | | |
| | All | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | * |
| Terminate | ✓ | | | | | | | | | |
| Circular | | | | | | | | | | |

| | [107] DTMF Receiver Check | | |
|-----------|---------------------------|-----------------------------------|-----|
| | Default | DTMF receiver no. (1...2, *: all) | |
| Selection | All | 1 | 2 * |
| Disable | | | |
| Enable | ✓ | | |

| | [112] DSS Button Indication Mode | |
|-----------|----------------------------------|---------|
| | Enable | Disable |
| Selection | Enable | Disable |
| Default | ✓ | |
| Change | | |

| | [104] Hold Mode Selection | | | [105] Conference Tone | | [106] External Paging Access Tone | |
|-----------|---------------------------|--------|--------|-----------------------|---------|-----------------------------------|---------|
| | Hold-1 | Hold-2 | Hold-3 | Enable | Disable | Enable | Disable |
| Selection | Hold-1 | Hold-2 | Hold-3 | Enable | Disable | Enable | Disable |
| Default | ✓ | | | ✓ | | ✓ | |
| Change | | | | | | | |

| | [108] Flash Mode for a Station Locked Extension | | [109] CO Indicator Assignment | | [110] Flash Key Mode | | [111] Hold Music Selection | |
|-----------|---|---------|-------------------------------|---------|----------------------|--------|----------------------------|------|
| | Enable | Disable | Enable | Disable | MODE 1 | MODE 2 | External | Tone |
| Selection | Enable | Disable | Enable | Disable | MODE 1 | MODE 2 | External | Tone |
| Default | | ✓ | ✓ | | | ✓ | ✓ | |
| Change | | | | | | | | |

| | [115] Extension Ringing Pattern Selection | | | [117] Call Pickup Tone | | [118] Pulse Restriction | |
|-----------|---|--------|--------|------------------------|---------|-------------------------|---------|
| | Single | Double | Triple | Enable | Disable | Enable | Disable |
| Selection | Single | Double | Triple | Enable | Disable | Enable | Disable |
| Default | | ✓ | | ✓ | | ✓ | |
| Change | | | | | | | |

7 Programming Tables

| | [119] Redialing after Pulse to Tone Conversion | | [125] Toll Restriction Check for * and # | |
|-----------|---|---------|---|---------|
| Selection | Enable | Disable | Enable | Disable |
| Default | | ✓ | ✓ | |
| Change | | | | |

| [200] Hold Recall Time | | | | | | | | | |
|------------------------|------|-------|---------|-------|-------|-------|-------|-------|---------|
| Selection | 30 s | 1 min | 1.5 min | 2 min | 3 min | 4 min | 5 min | 6 min | Disable |
| Default | ✓ | | | | | | | | |
| Change | | | | | | | | | |

| | [201] Transfer Recall Time | | | | [202] Call Forwarding Start Time | | | | [203] Pickup Dial Delay Time | | | |
|-----------|-------------------------------|------|-------|-------|-------------------------------------|------|------|------|---------------------------------|-----|-----|-----|
| Selection | 15 s | 30 s | 1 min | 2 min | 5 s | 10 s | 15 s | 20 s | 1 s | 2 s | 3 s | 4 s |
| Default | | ✓ | | | | | ✓ | | | | ✓ | |
| Change | | | | | | | | | | | | |

| [204] Call Duration Count Start Time | | | | | | | | | | | |
|--------------------------------------|-----|------|------|------|------|------|------|------|------|------|-----------|
| Selection | 5 s | 10 s | 15 s | 20 s | 25 s | 30 s | 35 s | 40 s | 45 s | 50 s | Instantly |
| Default | | ✓ | | | | | | | | | |
| Change | | | | | | | | | | | |

| | [205] Outside-to-Outside (CO-to-CO) Line Duration Time Limit | |
|-----------|--|--|
| Selection | 1...32 minutes | |
| Default | 10 minutes | |
| Change | | |

| | [206] Dialing Start Time | | | | | | |
|-----------|--------------------------|--------|--------|--------|---------|---------|---------|
| Selection | 0 ms | 250 ms | 500 ms | 750 ms | 1000 ms | 1250 ms | 1500 ms |
| Default | ✓ | | | | | | |
| Change | | | | | | | |

7 Programming Tables

| | [208] Interdigit Time | | | | [211] No Dial Disconnection | |
|-----------|-----------------------|------|------|------|-----------------------------|---------|
| Selection | 5 s | 10 s | 15 s | 20 s | Enable | Disable |
| Default | | ✓ | | | | ✓ |
| Change | | | | | | |

| [301] Toll Restriction — System Speed Dialing Boundary Class | | | | | |
|--|-------|-------|-------|-------|-------|
| Selection | COS-1 | COS-2 | COS-3 | COS-4 | COS-5 |
| Default | ✓ | | | | |
| Change | | | | | |

| [300] Carrier Code Assignment | | | |
|-------------------------------|-------------------------------|----------|-------------------------------|
| CODE no. | Carrier code (10 digits max.) | CODE no. | Carrier code (10 digits max.) |
| Default: All | Not stored | | |
| 01 | | 11 | |
| 02 | | 12 | |
| 03 | | 13 | |
| 04 | | 14 | |
| 05 | | 15 | |
| 06 | | 16 | |
| 07 | | 17 | |
| 08 | | 18 | |
| 09 | | 19 | |
| 10 | | 20 | |

7 Programming Tables

| | [302] Toll Restriction – Class 2 Denied Codes | [303] Toll Restriction – Class 3 Denied Codes | [304] Toll Restriction – Class 4 Denied Codes | [305] Toll Restriction – Class 5 Denied Codes |
|-------------|--|--|--|--|
| CODE no. | Telephone no. (11 digits) | | | |
| Default | All: Not stored | | | |
| 01 | | | | |
| 02 | | | | |
| 03 | | | | |
| 04 | | | | |
| 05 | | | | |
| 06 | | | | |
| 07 | | | | |
| 08 | | | | |
| 09 | | | | |
| 10 | | | | |
| 11 | | | | |
| 12 | | | | |
| 13 | | | | |
| 14 | | | | |
| 15 | | | | |
| 16 | | | | |
| 17 | | | | |
| 18 | | | | |
| 19 | | | | |
| 20 | | | | |

7 Programming Tables

| [306] Toll Restriction – Exception Codes | | | |
|--|---------------------------|----------|---------------------------|
| CODE no. | Telephone no. (11 digits) | CODE no. | Telephone no. (11 digits) |
| Default | All: Not stored | | |
| 01 | | 41 | |
| 02 | | 42 | |
| 03 | | 43 | |
| 04 | | 44 | |
| 05 | | 45 | |
| 06 | | 46 | |
| 07 | | 47 | |
| 08 | | 48 | |
| 09 | | 49 | |
| 10 | | 50 | |
| 11 | | 51 | |
| 12 | | 52 | |
| 13 | | 53 | |
| 14 | | 54 | |
| 15 | | 55 | |
| 16 | | 56 | |
| 17 | | 57 | |
| 18 | | 58 | |
| 19 | | 59 | |
| 20 | | 60 | |
| 21 | | 61 | |
| 22 | | 62 | |
| 23 | | 63 | |
| 24 | | 64 | |
| 25 | | 65 | |
| 26 | | 66 | |
| 27 | | 67 | |
| 28 | | 68 | |
| 29 | | 69 | |
| 30 | | 70 | |
| 31 | | 71 | |
| 32 | | 72 | |
| 33 | | 73 | |
| 34 | | 74 | |
| 35 | | 75 | |
| 36 | | 76 | |
| 37 | | 77 | |
| 38 | | 78 | |
| 39 | | 79 | |
| 40 | | 80 | |

7 Programming Tables

| [309] Emergency Dial Number Set | |
|---------------------------------|---|
| CODE no. | Emergency no. (24 digits max.) |
| Default | Code-01 = 911, Other codes = Not stored |
| 1 | |
| 2 | |
| 3 | |
| 4 | |
| 5 | |

| [310] Account Codes | | | |
|---------------------|-------------------------|----------|-------------------------|
| CODE no. | Account code (4 digits) | CODE no. | Account code (4 digits) |
| Default | All: Not stored | | |
| 01 | | 13 | |
| 02 | | 14 | |
| 03 | | 15 | |
| 04 | | 16 | |
| 05 | | 17 | |
| 06 | | 18 | |
| 07 | | 19 | |
| 08 | | 20 | |
| 09 | | 21 | |
| 10 | | 22 | |
| 11 | | 23 | |
| 12 | | 24 | |

7 Programming Tables

| [311] Automatic Pause Insertion Codes | | | |
|---------------------------------------|-----------------------------|----------|-----------------------------|
| CODE no. | Pause code (11 digits max.) | CODE no. | Pause code (11 digits max.) |
| Default | All: Not stored | | |
| 01 | | 21 | |
| 02 | | 22 | |
| 03 | | 23 | |
| 04 | | 24 | |
| 05 | | 25 | |
| 06 | | 26 | |
| 07 | | 27 | |
| 08 | | 28 | |
| 09 | | 29 | |
| 10 | | 30 | |
| 11 | | 31 | |
| 12 | | 32 | |
| 13 | | 33 | |
| 14 | | 34 | |
| 15 | | 35 | |
| 16 | | 36 | |
| 17 | | 37 | |
| 18 | | 38 | |
| 19 | | 39 | |
| 20 | | 40 | |

| [312] Toll Restriction – Station Lock Boundary Class | | |
|--|---------|--------|
| | Default | Change |
| Disable | ✓ | |
| COS-2 | | |
| COS-3 | | |
| COS-4 | | |
| COS-5 | | |

7 Programming Tables

| | [400] Outside (CO) Line Connection Assignment | | [401] Dial Mode | | | [402] Pulse Speed Selection | |
|------------------|---|------------|-----------------|-------|---------------|-----------------------------|------------|
| Outside line no. | Selection | | Selection | | | Selection | |
| | Connect | No Connect | DTMF | Pulse | Call Blocking | Low Speed | High Speed |
| Default: All | ✓ | | ✓ | | | ✓ | |
| 1 | | | | | | | |
| 2 | | | | | | | |
| 3 | | | | | | | |
| * | | | | | | | |

| | [403] Host PBX Access Codes | | | | | | | [404] Outside (CO) Line Group Assignment | |
|------------------|---|--|--|--|--|--|--|--|--------|
| Outside line no. | Access codes (1 or 2 digits, 8 different entries max.) | | | | | | | Outside line group no. (1...3) | |
| Default | All: Not stored | | | | | | | Default | Change |
| 1 | | | | | | | | 1 | |
| 2 | | | | | | | | 2 | |
| 3 | | | | | | | | 3 | |
| * | | | | | | | | * | |

| [405] Flexible Outward Dialing Assignment — Day | | | | | | | | |
|---|----------------|---------|----------------|---------|----------------|---------|---------|---------|
| Extension jack no. | Outside line 1 | | Outside line 2 | | Outside line 3 | | ※ (All) | |
| | Selection | | | | | | | |
| | Enable | Disable | Enable | Disable | Enable | Disable | Enable | Disable |
| Default: All | ✓ | | ✓ | | ✓ | | ✓ | |
| 01 | | | | | | | | |
| 02 | | | | | | | | |
| 03 | | | | | | | | |
| 04 | | | | | | | | |
| 05 | | | | | | | | |
| 06 | | | | | | | | |
| 07 | | | | | | | | |
| 08 | | | | | | | | |
| ※ | | | | | | | | |

7 Programming Tables

| [406] Flexible Outward Dialing Assignment — Night | | | | | | | | | |
|---|----------------|---------|----------------|---------|----------------|---------|---------|---------|--|
| Extension jack no. | Outside line 1 | | Outside line 2 | | Outside line 3 | | ✕ (All) | | |
| | Selection | | | | | | | | |
| | Enable | Disable | Enable | Disable | Enable | Disable | Enable | Disable | |
| Default: All | ✓ | | ✓ | | ✓ | | ✓ | | |
| 01 | | | | | | | | | |
| 02 | | | | | | | | | |
| 03 | | | | | | | | | |
| 04 | | | | | | | | | |
| 05 | | | | | | | | | |
| 06 | | | | | | | | | |
| 07 | | | | | | | | | |
| 08 | | | | | | | | | |
| ✕ | | | | | | | | | |

| [407] Flexible Outward Dialing Assignment — Lunch | | | | | | | | | |
|---|----------------|---------|----------------|---------|----------------|---------|---------|---------|--|
| Extension jack no. | Outside line 1 | | Outside line 2 | | Outside line 3 | | ✕ (All) | | |
| | Selection | | | | | | | | |
| | Enable | Disable | Enable | Disable | Enable | Disable | Enable | Disable | |
| Default: All | ✓ | | ✓ | | ✓ | | ✓ | | |
| 01 | | | | | | | | | |
| 02 | | | | | | | | | |
| 03 | | | | | | | | | |
| 04 | | | | | | | | | |
| 05 | | | | | | | | | |
| 06 | | | | | | | | | |
| 07 | | | | | | | | | |
| 08 | | | | | | | | | |
| ✕ | | | | | | | | | |

7 Programming Tables

| [408] Flexible Ringing Assignment — Day | | | | | | | | |
|---|----------------|---------|----------------|---------|----------------|---------|---------|---------|
| Extension jack no. | Outside line 1 | | Outside line 2 | | Outside line 3 | | ✕ (All) | |
| | Selection | | | | | | | |
| | Enable | Disable | Enable | Disable | Enable | Disable | Enable | Disable |
| Default: All | ✓ | | ✓ | | ✓ | | ✓ | |
| 01 | | | | | | | | |
| 02 | | | | | | | | |
| 03 | | | | | | | | |
| 04 | | | | | | | | |
| 05 | | | | | | | | |
| 06 | | | | | | | | |
| 07 | | | | | | | | |
| 08 | | | | | | | | |
| ✕ | | | | | | | | |

| [409] Flexible Ringing Assignment — Night | | | | | | | | |
|---|----------------|---------|----------------|---------|----------------|---------|---------|---------|
| Extension jack no. | Outside line 1 | | Outside line 2 | | Outside line 3 | | ✕ (All) | |
| | Selection | | | | | | | |
| | Enable | Disable | Enable | Disable | Enable | Disable | Enable | Disable |
| Default: All | ✓ | | ✓ | | ✓ | | ✓ | |
| 01 | | | | | | | | |
| 02 | | | | | | | | |
| 03 | | | | | | | | |
| 04 | | | | | | | | |
| 05 | | | | | | | | |
| 06 | | | | | | | | |
| 07 | | | | | | | | |
| 08 | | | | | | | | |
| ✕ | | | | | | | | |

7 Programming Tables

| [410] Flexible Ringing Assignment — Lunch | | | | | | | | |
|---|----------------|---------|----------------|---------|----------------|---------|---------|---------|
| Extension jack no. | Outside line 1 | | Outside line 2 | | Outside line 3 | | ✕ (All) | |
| | Selection | | | | | | | |
| | Enable | Disable | Enable | Disable | Enable | Disable | Enable | Disable |
| Default: All | ✓ | | ✓ | | ✓ | | ✓ | |
| 01 | | | | | | | | |
| 02 | | | | | | | | |
| 03 | | | | | | | | |
| 04 | | | | | | | | |
| 05 | | | | | | | | |
| 06 | | | | | | | | |
| 07 | | | | | | | | |
| 08 | | | | | | | | |
| ✕ | | | | | | | | |

| [411] Delayed Ringing Assignment — Day | | | | | | | | | | | | | | | | |
|--|---|---|----|----|----------------|---|----|----|----------------|---|----|----|---------|---|----|----|
| Extension jack no. | Outside line 1 | | | | Outside line 2 | | | | Outside line 3 | | | | ※ (All) | | | |
| | Selection (I: Immediately, 5: 5 seconds delay, 10: 10 seconds delay, 15: 15 seconds delay) | | | | | | | | | | | | | | | |
| | I | 5 | 10 | 15 | I | 5 | 10 | 15 | I | 5 | 10 | 15 | I | 5 | 10 | 15 |
| Default: All | ✓ | | | | ✓ | | | | ✓ | | | | ✓ | | | |
| 01 | | | | | | | | | | | | | | | | |
| 02 | | | | | | | | | | | | | | | | |
| 03 | | | | | | | | | | | | | | | | |
| 04 | | | | | | | | | | | | | | | | |
| 05 | | | | | | | | | | | | | | | | |
| 06 | | | | | | | | | | | | | | | | |
| 07 | | | | | | | | | | | | | | | | |
| 08 | | | | | | | | | | | | | | | | |
| ※ | | | | | | | | | | | | | | | | |

7 Programming Tables

| [412] Delayed Ringing Assignment — Night | | | | | | | | | | | | | | | | |
|--|---|---|----|----|----------------|---|----|----|----------------|---|----|----|---------|---|----|----|
| Extension jack no. | Outside line 1 | | | | Outside line 2 | | | | Outside line 3 | | | | ✕ (All) | | | |
| | Selection (I: Immediately, 5: 5 seconds delay, 10: 10 seconds delay, 15: 15 seconds delay) | | | | | | | | | | | | | | | |
| | I | 5 | 10 | 15 | I | 5 | 10 | 15 | I | 5 | 10 | 15 | I | 5 | 10 | 15 |
| Default: All | ✓ | | | | ✓ | | | | ✓ | | | | ✓ | | | |
| 01 | | | | | | | | | | | | | | | | |
| 02 | | | | | | | | | | | | | | | | |
| 03 | | | | | | | | | | | | | | | | |
| 04 | | | | | | | | | | | | | | | | |
| 05 | | | | | | | | | | | | | | | | |
| 06 | | | | | | | | | | | | | | | | |
| 07 | | | | | | | | | | | | | | | | |
| 08 | | | | | | | | | | | | | | | | |
| ✕ | | | | | | | | | | | | | | | | |

| [413] Delayed Ringing Assignment — Lunch | | | | | | | | | | | | | | | | |
|--|---|---|----|----|----------------|---|----|----|----------------|---|----|----|---------|---|----|----|
| Extension jack no. | Outside line 1 | | | | Outside line 2 | | | | Outside line 3 | | | | ✕ (All) | | | |
| | Selection (I: Immediately, 5: 5 seconds delay, 10: 10 seconds delay, 15: 15 seconds delay) | | | | | | | | | | | | | | | |
| | I | 5 | 10 | 15 | I | 5 | 10 | 15 | I | 5 | 10 | 15 | I | 5 | 10 | 15 |
| Default: All | ✓ | | | | ✓ | | | | ✓ | | | | ✓ | | | |
| 01 | | | | | | | | | | | | | | | | |
| 02 | | | | | | | | | | | | | | | | |
| 03 | | | | | | | | | | | | | | | | |
| 04 | | | | | | | | | | | | | | | | |
| 05 | | | | | | | | | | | | | | | | |
| 06 | | | | | | | | | | | | | | | | |
| 07 | | | | | | | | | | | | | | | | |
| 08 | | | | | | | | | | | | | | | | |
| ✕ | | | | | | | | | | | | | | | | |

7 Programming Tables

| | [414] Outside (CO) Line Mode — Day | | | | [415] Outside (CO) Line Mode — Night | | | | [416] Outside (CO) Line Mode — Lunch | | | |
|---------------------|--|-----|-----------|----|---|-----|-----------|----|---|-----|-----------|----|
| Outside line no. | Selection — N: Normal, DIL + Extension jack no. (01···08), D1: DISA1 | | | | | | | | | | | |
| | N | DIL | Extn. no. | D1 | N | DIL | Extn. no. | D1 | N | DIL | Extn. no. | D1 |
| Default: All | ✓ | | | | ✓ | | | | ✓ | | | |
| 1 | | | | | | | | | | | | |
| 2 | | | | | | | | | | | | |
| 3 | | | | | | | | | | | | |
| ✱ | | | | | | | | | | | | |

| | [417] Pause Time | | | | [418] Flash Time | | | | | | | |
|------------------|---------------------|-----|-----|-----|--------------------------|-----|-----|-----|-----|-----|------|--|
| Outside line no. | Selection (seconds) | | | | Selection (milliseconds) | | | | | | | |
| | 1.5 | 2.5 | 3.5 | 4.5 | 80 | 100 | 160 | 300 | 600 | 900 | 1200 | |
| Default: All | ✓ | | | | | | | | ✓ | | | |
| 1 | | | | | | | | | | | | |
| 2 | | | | | | | | | | | | |
| 3 | | | | | | | | | | | | |
| ✱ | | | | | | | | | | | | |

| | [419] Automatic Designated Outside (CO) Line Access | | [420] Calling Party Control (CPC) Signal | | [421] CPC Detection for Outgoing Calls | |
|------------------|---|---------|---|--|--|---------|
| Outside line no. | Selection | | Selection: 00 (Disable), 01 (22 ms)···75 (614 ms) | | Selection | |
| | Enable | Disable | | | Enable | Disable |
| Default: All | ✓ | | 42 (350 milliseconds) | | | ✓ |
| 1 | | | | | | |
| 2 | | | | | | |
| 3 | | | | | | |
| ✱ | | | | | | |

| | [422] Disconnect Time | | | [423] Outside (CO) Line Ringing Pattern Selection | | |
|------------------|-----------------------|-----|-----|---|--------|--------|
| Outside line no. | Selection (seconds) | | | Selection | | |
| | 0.5 | 1.5 | 4.0 | Single | Double | Triple |
| Default: All | | ✓ | | ✓ | | |
| 1 | | | | | | |
| 2 | | | | | | |
| 3 | | | | | | |
| ✱ | | | | | | |

7 Programming Tables

| [435] Local Carrier-Based Voice Mail Signaling Assignment | | | | | |
|---|---------|--|---|---|---|
| Selection | Default | Outside (CO) line no. (1...3, * : All) | | | |
| | All | 1 | 2 | 3 | * |
| Stutter | | | | | |
| FSK | | | | | |
| Disable | ✓ | | | | |

| [436] Local Carrier-Based Voice Mail Access Dial Assignment | |
|---|--|
| Outside line no. | Voice mail service access no. (32 digits max.) |
| Default | All: Not stored |
| 1 | |
| 2 | |
| 3 | |

| [437] Extension Access to Local Carrier-Based Voice Mail Assignment | | | | | | | | |
|---|----------------|---------|----------------|---------|----------------|---------|---------|---------|
| Extension jack no. | Outside line 1 | | Outside line 2 | | Outside line 3 | | ※ (All) | |
| | Selection | | | | | | | |
| | Enable | Disable | Enable | Disable | Enable | Disable | Enable | Disable |
| Default: All | ✓ | | ✓ | | ✓ | | ✓ | |
| 01 | | | | | | | | |
| 02 | | | | | | | | |
| 03 | | | | | | | | |
| 04 | | | | | | | | |
| 05 | | | | | | | | |
| 06 | | | | | | | | |
| 07 | | | | | | | | |
| 08 | | | | | | | | |
| ※ | | | | | | | | |

| | [500] DISA Incoming Dialing Mode Selection | | [504] DISA Delayed Answer Time | | | |
|-----------|--|---------|--------------------------------|-----|-----|------|
| | Without AA | With AA | 0 s | 3 s | 6 s | 12 s |
| Selection | | | | | | |
| Default | ✓ | | | ✓ | | |
| Change | | | | | | |

7 Programming Tables

| [501] DISA Built-in Auto Attendant | | |
|------------------------------------|------------------------------------|-----------------------------|
| Auto attendant no. | Selection | |
| | Jack: Extension jack no. (01...08) | GRP: Ring group no. (1...8) |
| Default | All: Not stored | |
| 0 | | |
| 1 | | |
| 2 | | |
| 3 | | |
| 4 | | |
| 5 | | |
| 6 | | |
| 7 | | |
| 8 | | |
| 9 | | |

| | [506] DISA Busy Mode | | [507] DISA Intercept Mode | | [508] DISA Ringing Time before Intercept | | | | | |
|-----------|----------------------|--------------|---------------------------|------------|--|------|------|------|------|-------|
| | Disconnect | Call Waiting | Intercept | Disconnect | 10 s | 20 s | 30 s | 40 s | 60 s | 120 s |
| Selection | | | | | | | | | | |
| Default | ✓ | | ✓ | | | ✓ | | | | |
| Change | | | | | | | | | | |

| | [509] DISA Ringing Time after Intercept | | | | | | [510] DISA No Dial Mode | |
|-----------|---|------|------|------|------|-------|-------------------------|------------|
| | 10 s | 20 s | 30 s | 40 s | 60 s | 120 s | DISA 1 | |
| Selection | | | | | | | Intercept | Disconnect |
| Default | | ✓ | | | | | ✓ | |
| Change | | | | | | | | |

| | [511] DISA Security Type | | | [512] DISA Security Codes | | | |
|-----------|--------------------------|-----|------|--------------------------------|---------|---------|---------|
| | Trunk | All | None | 0...9, 4 digits (programmable) | | | |
| Selection | | | | | | | |
| Default | ✓ | | | All codes = Not stored | | | |
| Change | | | | CODE=01 | CODE=02 | CODE=03 | CODE=04 |

7 Programming Tables

| | [515] Intercept Time for Internal DISA | | | [517] DISA AA Wait Time | | | | |
|-----------|---|-----|-----|----------------------------|-----|-----|-----|-----|
| | 3 s | 6 s | 9 s | 1 s | 2 s | 3 s | 4 s | 5 s |
| Selection | | | | | | | | |
| Default | ✓ | | | | ✓ | | | |
| Change | | | | | | | | |

| [516] DISA Incoming Assignment | | | | | |
|--------------------------------|-----------|---------|-----------------------|-----------|---------|
| Extension jack no. | Selection | | Extension jack no. | Selection | |
| | Enable | Disable | | Enable | Disable |
| Default: All | ✓ | | 05 | | |
| 01 | | | 06 | | |
| 02 | | | 07 | | |
| 03 | | | 08 | | |
| 04 | | | ✕ | | |

| | [518] DISA Tone Selection after the Security Code | |
|-----------|--|---------|
| | Enable | Disable |
| Selection | | |
| Default | ✓ | |
| Change | | |

| | [530] DISA Security Codes Digits Selection |
|-----------|---|
| | 4 – 10 digits |
| Selection | |
| Default | 4 digits |
| Change | |

| | [601] TRS – Class of Service (COS) Assignment — Day | | | | | [602] TRS – Class of Service (COS) Assignment — Night | | | | | [603] TRS – Class of Service (COS) Assignment — Lunch | | | | |
|-----------------------|--|---|---|---|---|--|---|---|---|---|--|---|---|---|---|
| | COS no. (1...5) | | | | | COS no. (1...5) | | | | | COS no. (1...5) | | | | |
| Extension jack no. | 1 | 2 | 3 | 4 | 5 | 1 | 2 | 3 | 4 | 5 | 1 | 2 | 3 | 4 | 5 |
| Default: All | ✓ | | | | | ✓ | | | | | ✓ | | | | |
| 01 | | | | | | | | | | | | | | | |
| 02 | | | | | | | | | | | | | | | |
| 03 | | | | | | | | | | | | | | | |
| 04 | | | | | | | | | | | | | | | |
| 05 | | | | | | | | | | | | | | | |
| 06 | | | | | | | | | | | | | | | |
| 07 | | | | | | | | | | | | | | | |
| 08 | | | | | | | | | | | | | | | |
| ✕ | | | | | | | | | | | | | | | |

7 Programming Tables

| | [605] Account Code Entry Mode | | | | [606] Call Transfer to an Outside (CO) Line | |
|-----------------------|----------------------------------|--------|------------|-------------|--|---------|
| Extension jack no. | Selection | | | | Selection | |
| | Option | Forced | Verify-All | Verify-Toll | Enable | Disable |
| Default: All | ✓ | | | | | ✓ |
| 01 | | | | | | |
| 02 | | | | | | |
| 03 | | | | | | |
| 04 | | | | | | |
| 05 | | | | | | |
| 06 | | | | | | |
| 07 | | | | | | |
| 08 | | | | | | |
| * | | | | | | |

| | [607] Call Forwarding to an Outside (CO) Line | | [608] Executive Busy Override | | [609] Do Not Disturb Override | | [610] Paralleled Telephone Connection | |
|-----------------------|--|---------|----------------------------------|---------|----------------------------------|---------|--|---------|
| Extension jack no. | Selection | | Selection | | Selection | | Selection | |
| | Enable | Disable | Enable | Disable | Enable | Disable | Enable | Disable |
| Default: All | | ✓ | | ✓ | | ✓ | | ✓ |
| 01 | | | | | | | | |
| 02 | | | | | | | | |
| 03 | | | | | | | | |
| 04 | | | | | | | | |
| 05 | | | | | | | | |
| 06 | | | | | | | | |
| 07 | | | | | | | | |
| 08 | | | | | | | | |
| * | | | | | | | | |

7 Programming Tables

| | [611] TAM Extension | | [612] Room Monitor Assignment | | [617] Wireless PT Port Assignment | | [618] Message Waiting for Another Extension | |
|-----------------------|------------------------|---------|-------------------------------------|---------|---|---------|---|---------|
| Extension jack no. | Selection | | Selection | | Selection | | Selection | |
| | Enable | Disable | Enable | Disable | Not Connect | Connect | Enable | Disable |
| Default: All | | ✓ | | ✓ | ✓ | | ✓ | |
| 01 | | | | | | | | |
| 02 | | | | | | | | |
| 03 | | | | | | | | |
| 04 | | | | | | | | |
| 05 | | | | | | | | |
| 06 | | | | | | | | |
| 07 | | | | | | | | |
| 08 | | | | | | | | |
| ✖ | | | | | | | | |

| | [700] Doorphone Ringing Assignment — Day | | | | [701] Doorphone Ringing Assignment — Night | | | | [702] Doorphone Ringing Assignment — Lunch | | | |
|-----------------------|--|---|---|---|--|---|---|---|--|---|---|---|
| Extension jack no. | 1...2: Doorphone no., E: Enable / D: Disable | | | | | | | | | | | |
| | 1 | | 2 | | 1 | | 2 | | 1 | | 2 | |
| | E | D | E | D | E | D | E | D | E | D | E | D |
| Default: All | ✓ | | ✓ | | ✓ | | ✓ | | ✓ | | ✓ | |
| 01 | | | | | | | | | | | | |
| 02 | | | | | | | | | | | | |
| 03 | | | | | | | | | | | | |
| 04 | | | | | | | | | | | | |
| 05 | | | | | | | | | | | | |
| 06 | | | | | | | | | | | | |
| 07 | | | | | | | | | | | | |
| 08 | | | | | | | | | | | | |
| ✖ | | | | | | | | | | | | |

7 Programming Tables

| | [703] Door Opener Assignment — Day | | | | [704] Door Opener Assignment — Night | | | | [705] Door Opener Assignment — Lunch | | | |
|-----------------------|--|---|---|---|--|---|---|---|--|---|---|---|
| Extension jack no. | 1…2: Doorphone no., E: Enable / D: Disable | | | | | | | | | | | |
| | 1 | | 2 | | 1 | | 2 | | 1 | | 2 | |
| | E | D | E | D | E | D | E | D | E | D | E | D |
| Default: All | ✓ | | ✓ | | ✓ | | ✓ | | ✓ | | ✓ | |
| 01 | | | | | | | | | | | | |
| 02 | | | | | | | | | | | | |
| 03 | | | | | | | | | | | | |
| 04 | | | | | | | | | | | | |
| 05 | | | | | | | | | | | | |
| 06 | | | | | | | | | | | | |
| 07 | | | | | | | | | | | | |
| 08 | | | | | | | | | | | | |
| ✱ | | | | | | | | | | | | |

| | [706] Doorphone Ringing /Tone Pattern Selection | | | | [707] Doorphone Access Tone Selection | | [708] Doorphone Ringing Time | |
|------------------|--|--------|--------|----------|--|---------|---------------------------------|------|
| Doorphone no. | Selection | | | | Selection | | Selection | |
| | Single | Double | Triple | S-Double | Enable | Disable | 15 s | 30 s |
| Default: All | | | ✓ | | ✓ | | ✓ | |
| 1 | | | | | | | | |
| 2 | | | | | | | | |
| ✱ | | | | | | | | |

| [709] Door Opener Time | | | | | | | | |
|------------------------|-----------|-----|-----|-----|-----|-----|-----|-----|
| Door opener no. | Selection | | | | | | | |
| | 1 s | 2 s | 3 s | 4 s | 5 s | 6 s | 7 s | 8 s |
| Default: All | | | | | ✓ | | | |
| 1 | | | | | | | | |
| 2 | | | | | | | | |
| ✱ | | | | | | | | |

7 Programming Tables

| | [710] Doorphone Ring/Chime Selection | | | [711] Doorphone Chime Assignment | |
|---------------|---|-------|--------------|----------------------------------|---------|
| Doorphone no. | Selection | | | Selection | |
| | Ring | Chime | Ring & Chime | Relay 1 | Relay 2 |
| Default: All | ✓ | | | | ✓ |
| 1 | | | | | |
| 2 | | | | | |
| ✕ | | | | | |

| [712] Doorphone Chime Pattern Selection | | | | | | | | |
|---|-----------|-----------|-----------|-----------|-----------|-----------|-----------|-----------|
| Doorphone no. | Selection | | | | | | | |
| | Pattern 1 | Pattern 2 | Pattern 3 | Pattern 4 | Pattern 5 | Pattern 6 | Pattern 7 | Pattern 8 |
| Default: All | ✓ | | | | | | | |
| 1 | | | | | | | | |
| 2 | | | | | | | | |
| ✕ | | | | | | | | |

| [800] SMDR RS-232C Communication Parameters | | | | | | | | | | | | | | | | | | |
|---|---------------|----|-----------|-----|-----|------|------|------|------|-------------|---|--------|-------|------|-----|------|----------|---|
| Selection | New line code | | Baud rate | | | | | | | Word length | | Parity | | | | | Stop bit | |
| | CR+LF | CR | 150 | 300 | 600 | 1200 | 2400 | 4800 | 9600 | 7 | 8 | Mark | Space | Even | Odd | None | 1 | 2 |
| Default | ✓ | | | | | | | | ✓ | | ✓ | ✓ | | | | | ✓ | |
| Change | | | | | | | | | | | | | | | | | | |

| [801] SMDR Parameter | | |
|---------------------------|---------|-----------|
| | Default | Selection |
| Page length (4...99) | 66 | |
| Skip perforation (0...95) | 0 | |

| [802] Incoming/Outgoing Call Selection for Printing | | | |
|---|------|---------|-----------|
| | | Default | Selection |
| Incoming calls | On | ✓ | |
| | Off | | |
| Outgoing calls | On | ✓ | |
| | Off | | |
| | Toll | | |

| | [803] Secret Speed Dialing/ One-Touch Dialing Printing | | [805] SMDR Account Code Selection | |
|-----------|---|----------|--------------------------------------|-------|
| Selection | No Printing | Printing | CODE | INDEX |
| Default | ✓ | | ✓ | |
| Change | | | | |

7 Programming Tables

| [900] Caller ID Assignment | | | | | |
|----------------------------|---------|--|---|---|---|
| Selection | Default | Outside (CO) line no. (1...3, ✕ : All) | | | |
| | All | 1 | 2 | 3 | ✕ |
| Enable | ✓ | | | | |
| Disable | | | | | |

| [901] Caller ID Area Code Assignment | |
|--------------------------------------|---------------------------------|
| CODE no. | Parameter: 6 digits max., 0 – 9 |
| Default | All: Not stored |
| 1 | |
| 2 | |
| 3 | |
| 4 | |
| 5 | |

| | [902] Caller ID Modification for Local Calls | | [903] Caller ID Modification for Long Distance Calls | |
|---|---|--------|---|--------|
| | Default | Change | Default | Change |
| Number of digits to be deleted (0...9, 0: no deletion) | 3 | | 0 | |
| Number to be added (4 digits max.) | blank (not stored) | | 1 | |

| [904] Caller ID Log Priority Selection | | |
|--|-----------|------|
| Extension jack no. | Selection | |
| | Number | Name |
| Default: All | | ✓ |
| 01 | | |
| 02 | | |
| 03 | | |
| 04 | | |
| 05 | | |
| 06 | | |
| 07 | | |
| 08 | | |
| ✕ | | |

7 Programming Tables

| Selection | [906] Caller ID SMDR Format | | [907] Caller ID SMDR Printout Selection | |
|-----------|-----------------------------|----------|---|---------|
| | Without CID | With CID | Enable | Disable |
| Default | | ✓ | | ✓ |
| Change | | | | |

| [908] Caller ID Call Waiting Time | | | | | | |
|-----------------------------------|------|------|------|------|------|-------|
| Selection | 10 s | 20 s | 30 s | 40 s | 60 s | 120 s |
| Default | | | ✓ | | | |
| Change | | | | | | |

| Extension jack no. | [909] Common Area Call Log Check Assignment | | [963] Call Forwarding Selection | |
|--------------------|---|---------|---------------------------------|---------|
| | Selection | | Selection | |
| | Enable | Disable | Enable | Disable |
| Default: All | ✓ | | | ✓ |
| 01 | | | | |
| 02 | | | | |
| 03 | | | | |
| 04 | | | | |
| 05 | | | | |
| 06 | | | | |
| 07 | | | | |
| 08 | | | | |
| ✱ | | | | |

| [913] Caller ID Call Waiting Assignment | | | | | |
|---|---------|--|---|---|---|
| Selection | Default | Outside (CO) line no. (1...3, ✱ : All) | | | |
| | All | 1 | 2 | 3 | ✱ |
| Enable | ✓ | | | | |
| Disable | | | | | |

| Selection | [914] Caller ID Call Waiting CAS Receive Time | | | [915] Caller ID Checksum | | [968] Incoming Lamp Control | |
|-----------|---|--------|--------|--------------------------|---------|-----------------------------|---------|
| | Mode 1 | Mode 2 | Mode 3 | Enable | Disable | Enable | Disable |
| Default | | | ✓ | ✓ | | | ✓ |
| Change | | | | | | | |

**Panasonic Consumer Electronics Company,
Division of Matsushita Electric Corporation of America**
One Panasonic Way, Secaucus,
New Jersey 07094

**Panasonic Sales Company,
Division of Matsushita Electric of Puerto Rico, Inc.**
Ave. 65 de Infantería, Km. 9.5,
San Gabriel Industrial Park, Carolina,
Puerto Rico 00985

<http://www.panasonic.com/csd>

Copyright:

This manual is copyrighted by Panasonic Communications Co., Ltd. (PCC).
You may print out this manual solely for internal use with this model. Except above, you may not
reproduce this manual in any form, in whole or part, without the prior written consent of PCC and its
licensee.

© 2003 Panasonic Communications Co., Ltd. All Rights Reserved.

PSQX3023ZA KK1203HK0