



AY018 Wideband HF Antenna

User Manual

Revision	Description	Date
01	First issue	25/12/2011



INDEX

INDEX2

1. PURPOSE OF MANUAL3

2. REFERENCE SPECIFICATIONS.....3

3. ATTACHED DOCUMENTS.....3

4. SAFETY INSTRUCTIONS4

5. PRODUCT DESCRIPTION.....5

5.1. HIGHLIGHTS.....5

5.2. MECHANICAL FEATURES5

5.3. ELECTRICAL FEATURES5

5.4. WORKING PRINCIPLE6

5.5. PHYSICAL LAYOUT.....6

5.6. RADIATION PATTERNS7

6. INSTALLATION.....8

6.1. ROOF MOUNT MODEL10

 a. *Mounting Using Extension Pole*11

 b. *Direct Wall Mounting*12

6.2. NAVAL MOUNT VERSION13

6.3. ELECTRICAL CONNECTIONS14



Wideband HF Antenna User Manual

Doc. N. : AY018.006.R01

Page 3 of 14

1. Purpose of Manual

This manual describes all the features and technical specifications for the wideband HF antenna model AY018, furthermore contains detailed information necessary for installation and operation.

Such manual is intended both to radio operators as well as service and maintenance technicians putting into service the antenna connected with other units (i.e.: hf SSB transceivers).

2. Reference Specifications

MIL-STD-461E	Requirements for the Control of Electromagnetic Interference Emissions and Susceptibility.
MIL-STD-810F	Department of Defense Test Method Standard for Environmental Engineering considerations and Laboratory

3. Attached documents

Model	Title
AY018.201.01	Roof Mount Antenna
AY018.202.01	Naval Mount Antenna

4. Safety Instructions

**Warning**

At no time during assembly, installation adjustment or operation should any part of this product be allowed to come into contact with electric power line. Nor should this product be installed in such a way that any part of it may contact power line during normal operation or in the event of structural failure. Failure to exercise extreme care in this matter can result in damage property, personal injury or even death.

**Caution**

Some parts of the equipment become very hot and will cause burns if accidentally touched.

**Warning during installation**

Antenna installation is very easy, make sure that all parts and hardware are present before beginning the assembly and installation. Work in a clear area where dropped hardware may be easily recovered. Consult the parts pictorial page and parts list below.



5. Product Description

The AY018 is a relative high efficiency broadband vertical radiator intended for use with frequency agile transmission systems over the 2 - 30 MHz HF band (i.e.: HF/ALE systems).

It is produced in two different versions, respectively AY018.201 for the roof mounting solution and AY018.202 for the naval mounting solution.

5.1. Highlights

- Minimal maintenance requirements
- High Reliability
- Broadband: a decade frequency interval typical
- No tuning devices
- SWR 1:1.5 typical on entire bandwidth
- 50 ohm coax feed line (a MIL quality RG-213/U is suggested)
- RF power 1.0 kilowatt P.E.P., 500 watt average
- Rugged fiberglass element and steel mounting for harsh environment

5.2. Mechanical Features

- Length 10 meters
- Weight 20 Kg
- Sections 2
- Bottom diameter 57 mm
- Antenna structure epoxy fiberglass
- Finishing Polyurethane paint
- Colour grey RAL 7030
- Irradiation element material high Q Teflon line
- Ferrule material inox steel per AISI 316
- Working temperature -35 °C to +80 °C
- Max wind resistance 180 Km/h

5.3. Electrical Features

- Frequency 2 to 30 MHz
- Impedance 50 ohm
- Polarization Vertical
- Horizontal radiation pattern 360 °
- Vertical radiation pattern See diagram
- Connection to TX 50 Ohms coax cable (recommended RG-213/U)
- Ground Yes



5.4. Working Principle

The AY-018 is a wideband HF whip antenna intended for use with ALE capable transceivers for HF communication. Although no external tuning is necessary for operation over the 3 to 30 MHz band, an ATU (Antenna Tuner Unit) can be used to improve SWR ratio.

By the way, working principle is based on unique method of coupling transmission line transformers. A detailed analysis of the impedance adapter network revealed that it actually consists of two separate transformers with inter-coupled windings. This technique is used in conjunction with a single feedback winding on one of the transformers.

The overall result is a complex design that form a network, which improves the match at specific frequencies introducing, where necessary, an additional series impedance.

5.5. Physical layout

The basement of the 10 meter self-supporting whip is mounted on a U-shaped, special grade stainless steel, sturdy plate, see Fig. 9 and Fig. 11. The impedance adaptor, along with toroidal transformers, is mounted in a aluminum enclosure with integral heat sink, see Fig. 12.

5.6. Radiation Patterns

The typical vertical radiation patterns on several frequencies of the HF spectrum is provided in Fig. to . In this case the antenna is mounted on a building roof.

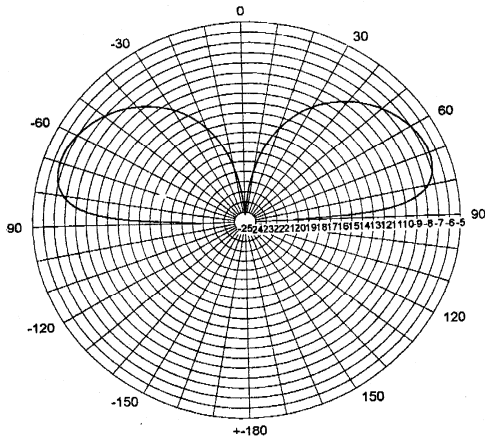


Fig. 1 - Pattern radiation F=3 MHz

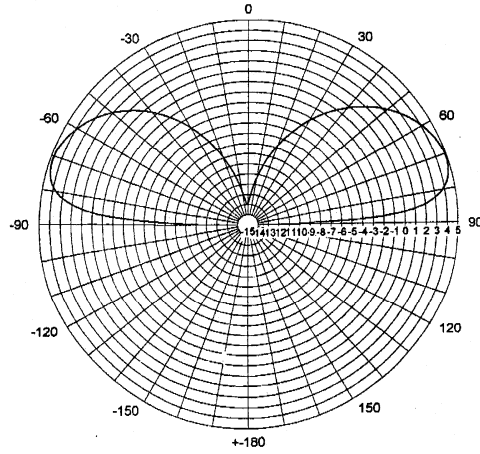


Fig. 2 - Pattern radiation F=7 MHz

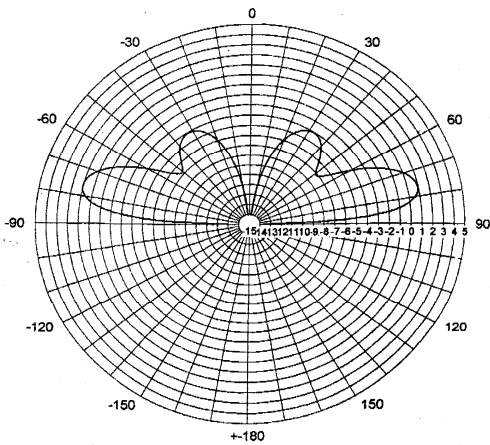


Fig. 3 - Pattern radiation F=14 MHz

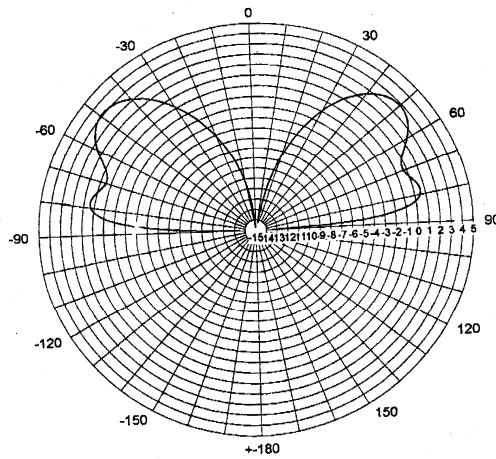


Fig. 4 - Pattern radiation F=20 MHz

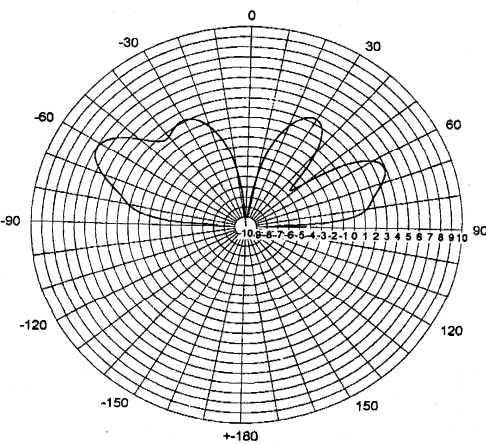


Fig. 5 - Pattern radiation F=26 MHz

6. Installation

As with all antennas, great care should be exercised in the choice of a site for the AY018, pattern radiation as well as operating bandwidth and SWR can be greatly influenced by the antenna' proximity to the earth and other conductors.

The ideal mounting for the AY018 is 6 to 10ft (2-3m) above ground, as far away as possible from reflecting metal objects. A flat roof on a concrete building is also good. This guarantees low radiation angles. Mounting too close to a house (30ft or less) is less recommended.

This results in an inferior radiation pattern and, more importantly, a heavily increased noise level from house installations, power lines, etc..

Mounting on a mast or tower higher than 10ft results in high radiation pattern (up to 60 degrees).

As with all good antennas, the AY018 reacts to nearby objects such as other antennas, lightning protection systems, wires, etc..

This is particularly pronounced with items that are closer than one wavelength and longer than 1/2 wavelength at the working frequencies. Under these circumstances, the antenna can receive its own signal back, resulting in increased SWR.

Thanks to its design the antenna is electrically connected to ground, that's for safety and low static noise. The base mount needs to be well grounded.

The diagram below represents a real SWR performance relative to a typical installation on a building roof, the average return loss value is more than 15 dB or 1:1,4 in terms of VSWR.

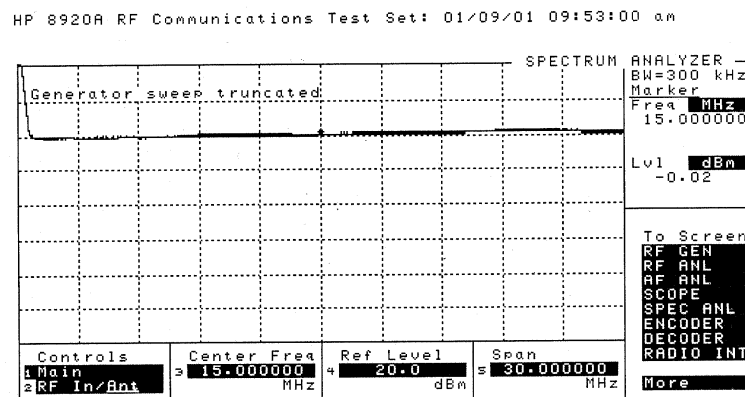


Figure 6 - Typical SWR performance (Reference level = 0dB)

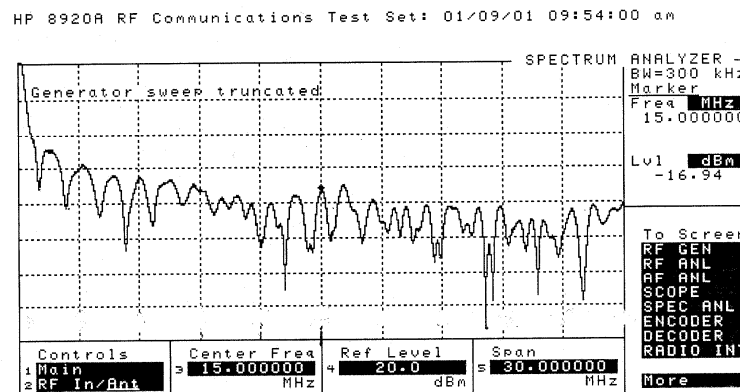


Figure 7 - Typical SWR Performance (Measure level = 20dB return loss average)

6.1. Whip assembly

All models of antennas are delivered with the Whip divided in 2 sections. The first operation to be done at installation is to assemble the 2 sections by means of suitable threaded joints.

6.2. Roof Mount Model

The AY018.201, is the roof mounting model, it is provided of a suitable stainless steel brackets which allows the installation through an extension pole or mast.

This method is always the best if the supporting pole (diameter 58.5mm \pm 5%, not supplied) is height enough to guarantee an average height of the antenna of not less of 6 to 10ft (2-3m) above surroundings buildings.

Optionally the antenna can be mounted directly to the wall using an opportune adapter bracket (not supplied).

The contents of the delivered package is shown below.

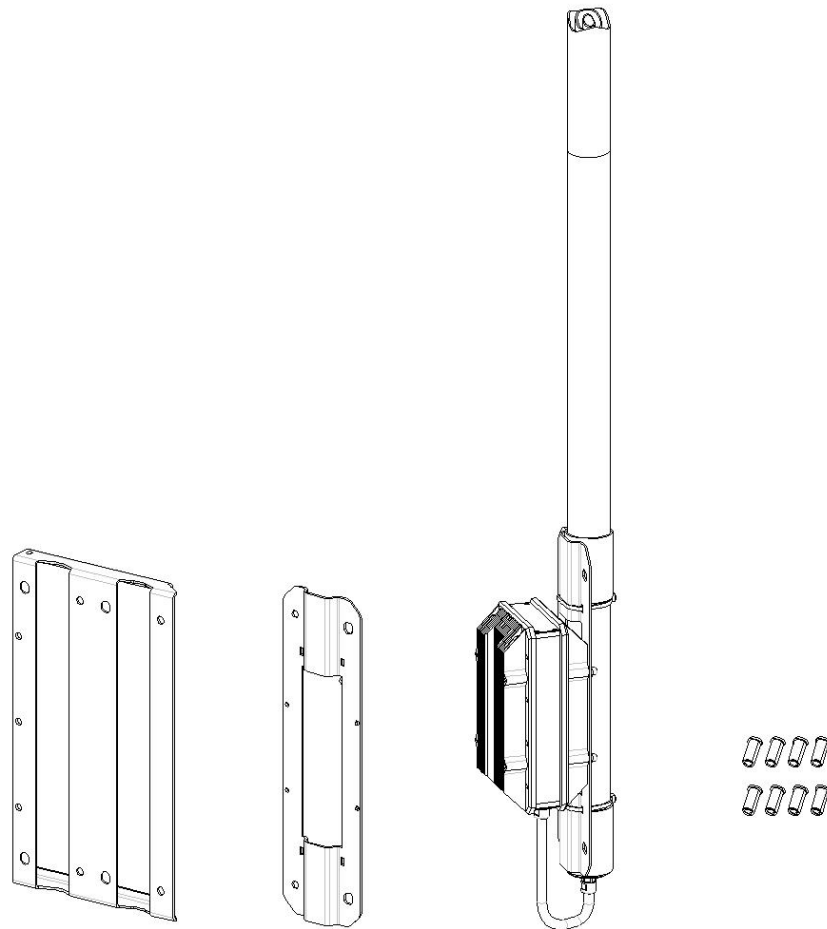


Fig. 8 - AY018.201 parts included in the delivery package

The package is comprehensive of the following parts.

1. Horizontal Bracket type A
2. # 2 Whip Bracket type B (one is supplied already fitted to the Whip and Tuning Unit)
3. Two section (5 meters length) of Fiberglass Whip with Tuning Adaptor box
4. # 8 Special Nuts
5. # 8 M10x30 screws
6. # 8 M10 lock washers

a. Mounting Using Extension Pole

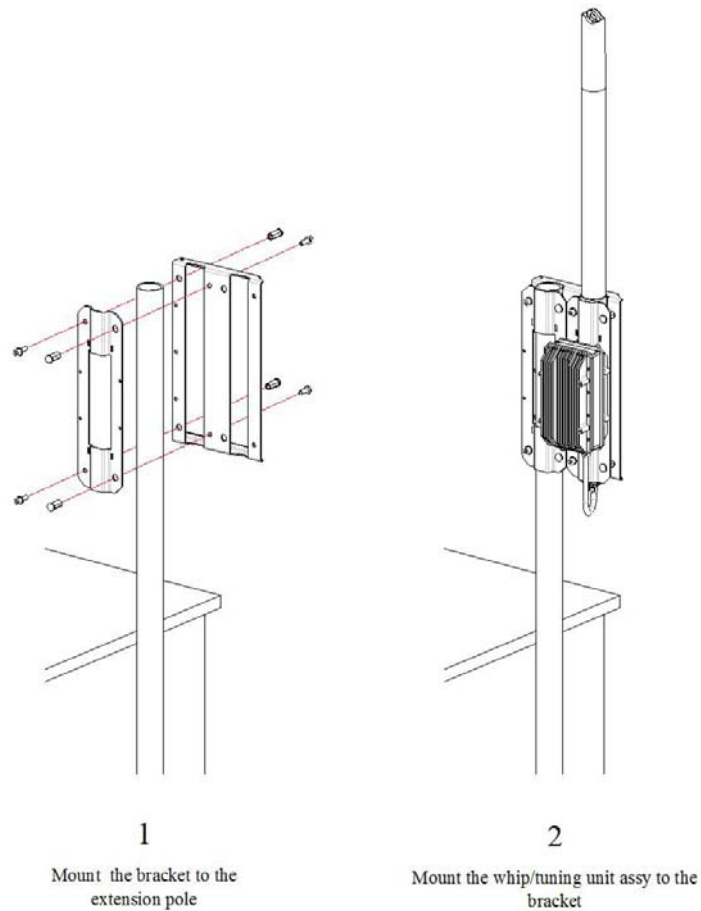


Fig. 9 - Mounting using Extension Pole

You must follow, step-by-step, the procedure described below.

1. Check presence of extension pole (not supplied) installed as required in paragraph 6.1.
2. Install as shown in step 1 of Fig. 10 the Horizontal Bracket on top of the pole by means of 4 Special Nuts and 4 screws.
3. Assure as shown in step 2 the of Fig. 10 Whip/Tuning adaptor using the supplied hardware (as shown in the precedent step).

b. Direct Wall Mounting

By means of a suitable Wall bracket (not supplied, orderable with P/N AY018.201.02), you can install the antenna directly on the wall.

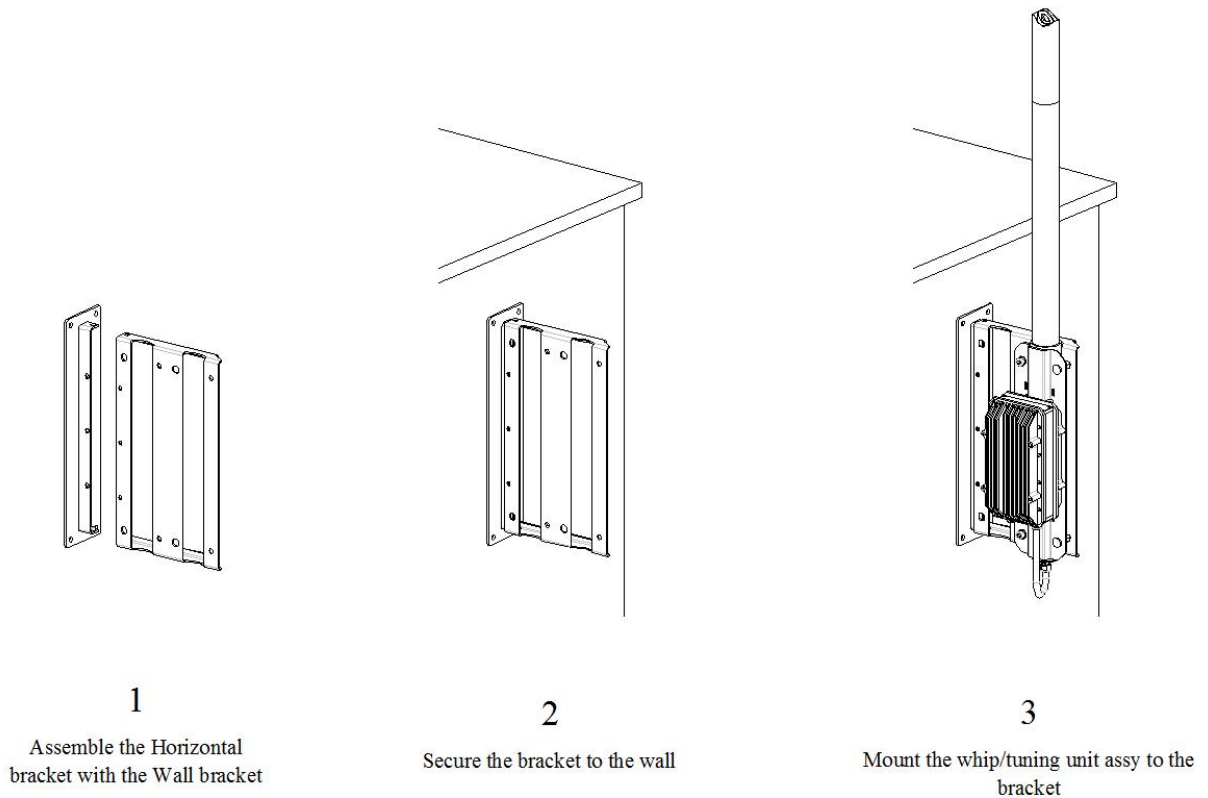


Fig. 10 - Direct Wall Mounting

You must follow, step-by-step, the procedure described below.

1. As shown in the figure above, it is necessary to assemble the Horizontal bracket with the Wall bracket (not supplied)
2. Secure the Wall Bracket to the wall in the most appropriate way.
3. After step 2. you need to assure the whip/tuning adaptor assembly to the Wall Bracket by #4 Special Nuts.

6.3. Naval Mount Version

The AY018.202 model is the marine version of the wideband antenna and is fully assembled with a special mounting basement suitable for ship deck floor installation.

Because of its design, mechanical installation is very easy, therefore is sufficient to secure the antenna basement to the ship deck floor previously prepared.

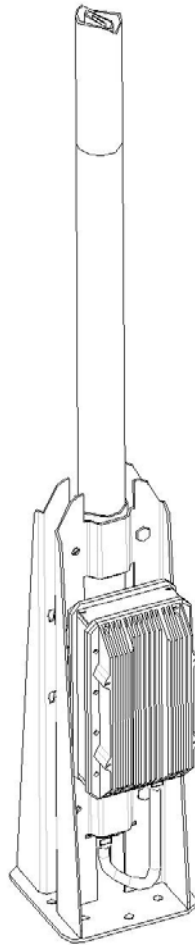


Figura 10 - Naval Mounting model

6.4. Electrical connections

The antenna electrical connections are located at the bottom of the Tuning Unit as shown in the figure below.

The feeding input is the N connector (female)

The ground connection is represented by the M6 screw with wing nut and lock washer.










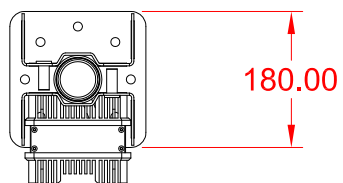
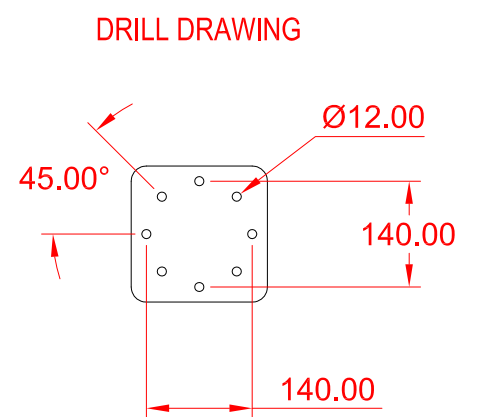
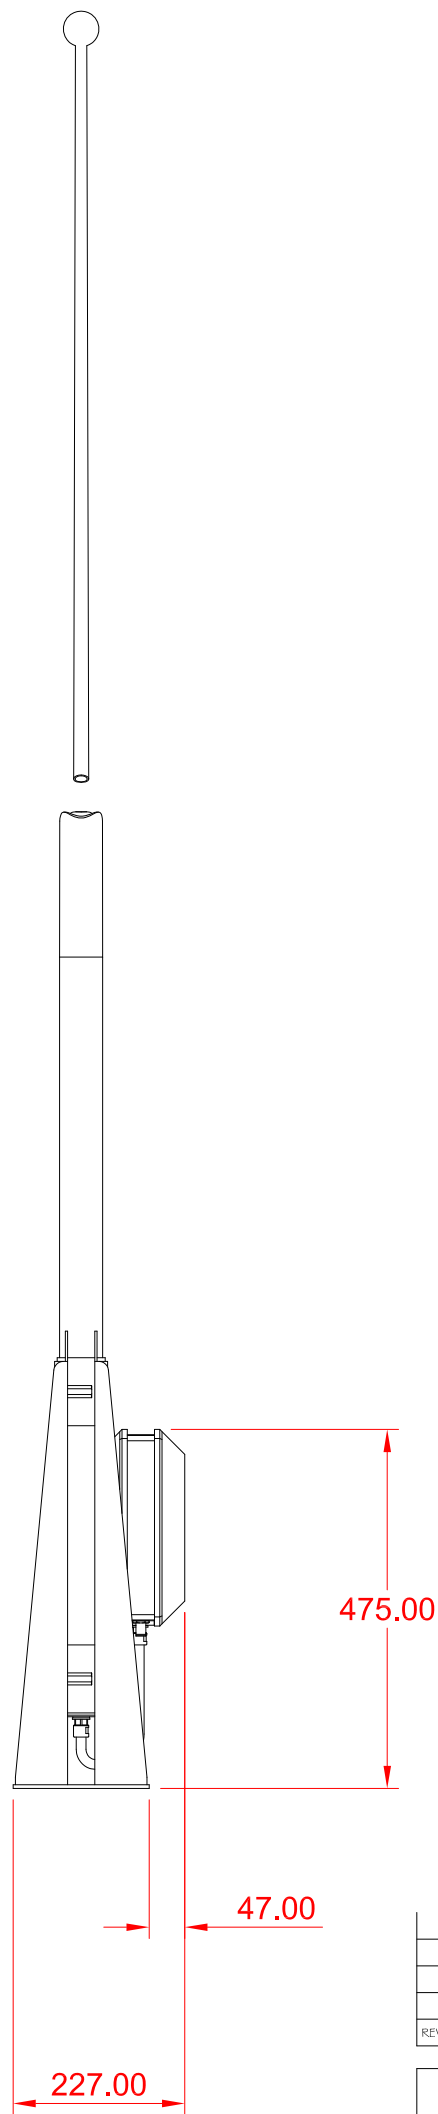
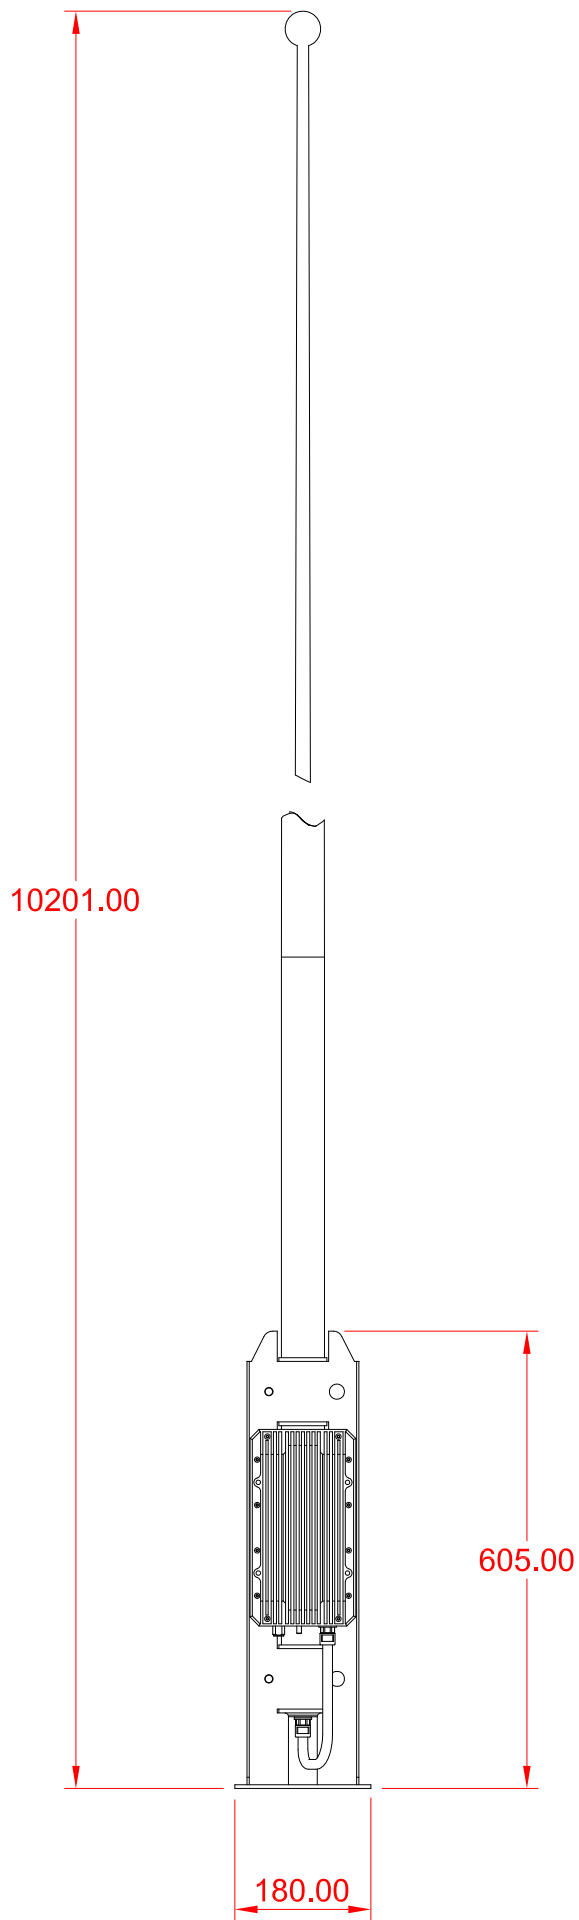
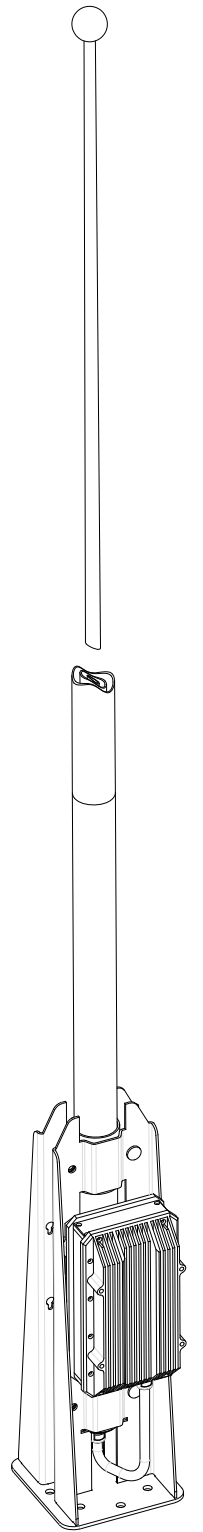
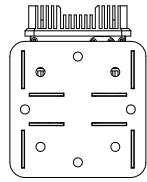


Figure 11 - Electrical Connections



REV	DATA	DESCRIZIONE	DISEGNATORE

 Athis S.r.l. www.aythis.it	 Dimensioni in mm Tolleranze UNI ISO 8015 UNI ISO 2768	N° DISEGNO AY018.201.R01
		DISEGNATORE SM
TITOLO ROOF MOUNT ANTENNA DISEGNO MECCANICO		
CODICE PARTE AY018.201	PROGETTO AY018 - W.B. HF ANTENNA	
FOGLIO 01 DI 01	FORMATO A3	SCALA 1:10 DATA 31/12/2011
<small>Il presente documento è destinato all'uso e alla visione del personale Aythis S.r.l. Le informazioni in esso contenute sono di proprietà della Aythis S.r.l. e non possono essere riprodotte o divulgate se non previa autorizzazione scritta della stessa Aythis S.r.l.</small>		

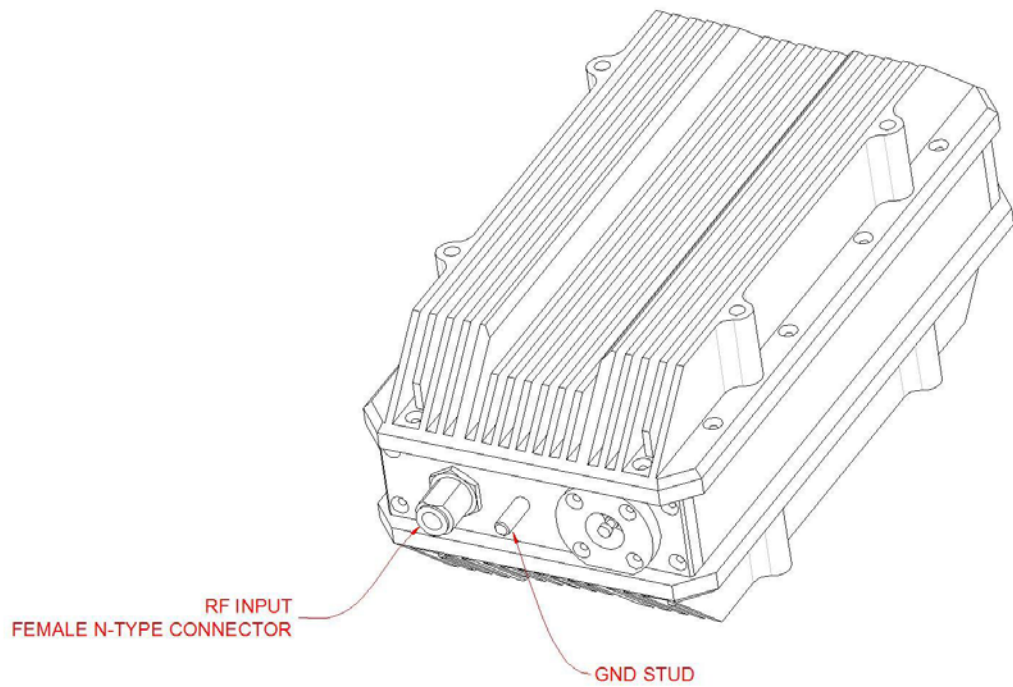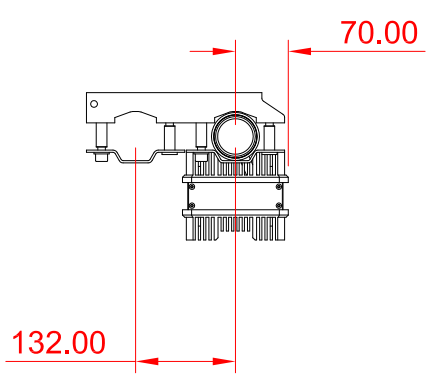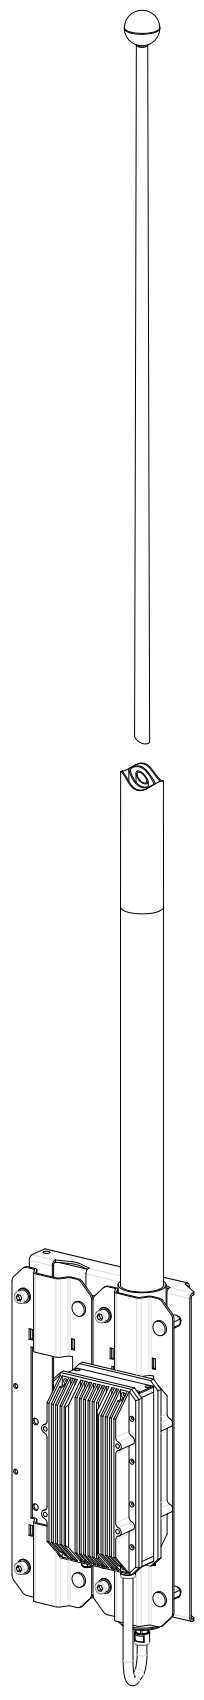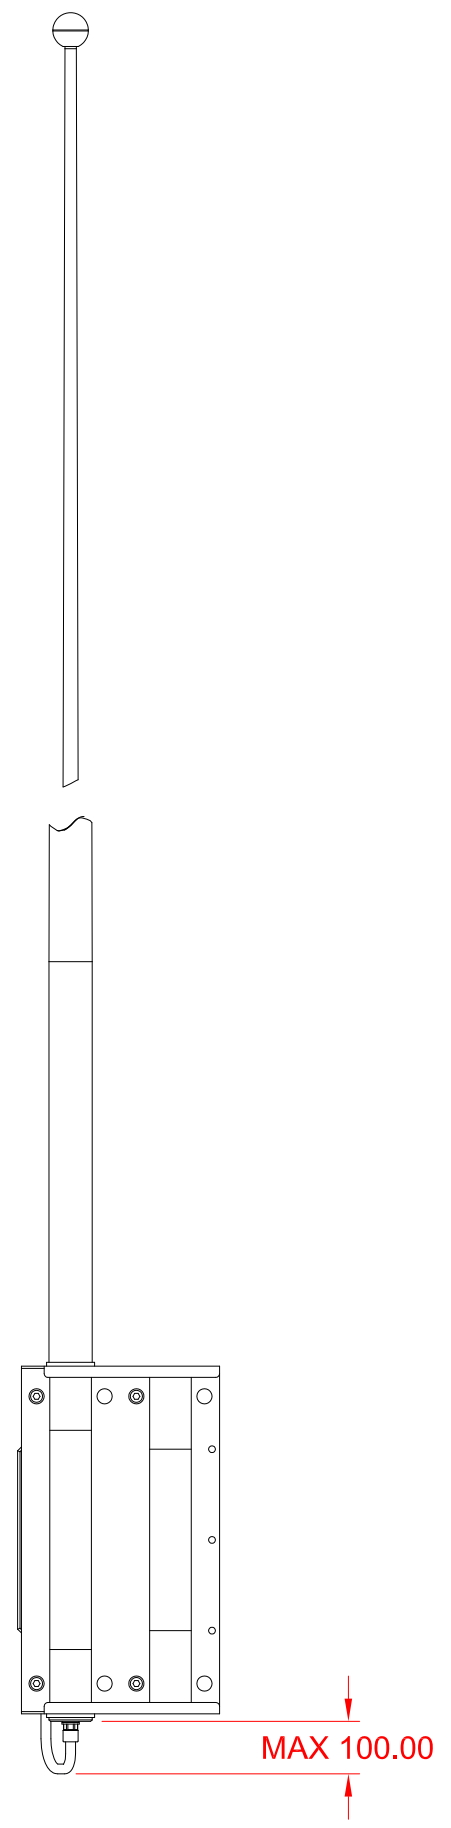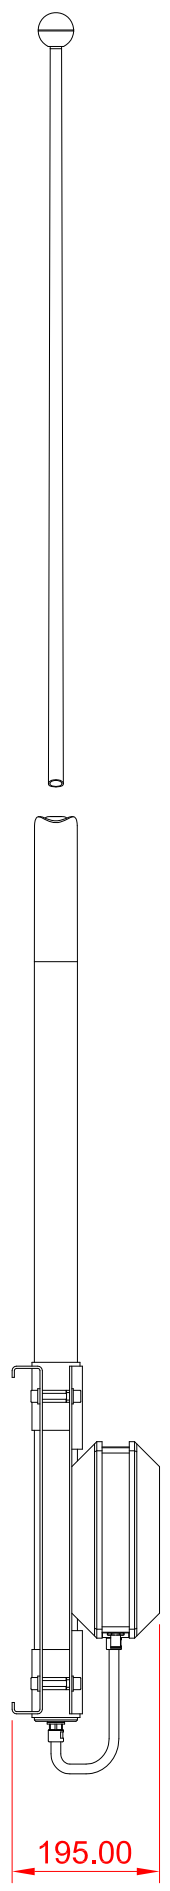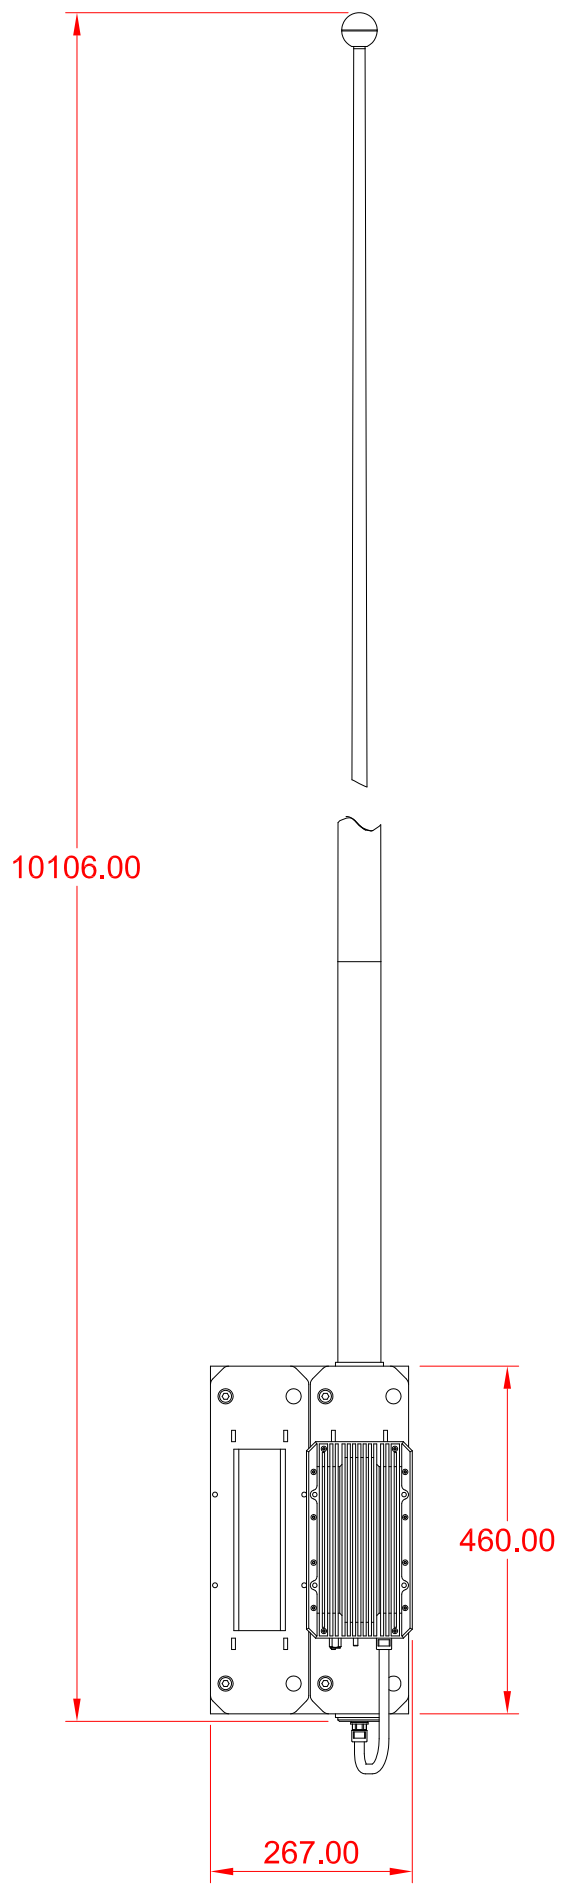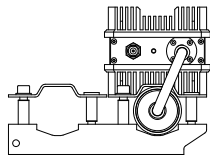

REV	DATA	DESCRIZIONE	DISEGNATORE

			N° DISEGNO
Athis S.r.l. www.aythis.it		Dimensioni in mm Tolleranze UNI ISO 8015 UNI ISO 2768	AY018.202.R01
TITOLO		DISEGNATORE	
NAVAL MOUNT ANTENNA DISEGNO MECCANICO		SM	
CODICE PARTE	AY018.202	PROGETTO	AY018 - W.B. HF ANTENNA
FOGLIO	01	DI	01
FORMATO	A3	SCALA	1:10
		DATA	31/12/2011

Il presente documento è destinato all'uso e alla visione del personale Aythis S.r.l. Le informazioni in esso contenute sono di proprietà della Aythis S.r.l. e non possono essere riprodotte o divulgate se non previa autorizzazione scritta della stessa Aythis S.r.l.