



Read this document carefully before using this device. The guarantee will be expired by damaging of the device if you don't attend to the directions in the user manual. Also we don't accept any compensations for personal injury, material damage or capital disadvantages.

ENDA EDP 741 DIGITAL POTENTIOMETER

Thank you for choosing ENDA EDP 741 potentiometer.

- * 72x72mm sized.
- * 4 digits display.
- * Easy to use by front panel keypad.
- * Display scale can be adjusted between -1999 and 8000.
- * Decimal point can be adjusted between 1. and 3. digits.
- * 0-10V output with adjustable minimum and maximum values.
- * 'Soft on' and 'soft off' properties can be selected.
- * Parameter access protection on 3 levels.
- * Easy connection by removable screw terminal.
- * CE marked according to European Norms.

Order Code : EDP741-□□□□□□

1

Supply Voltage
230VAC...230V AC
24VAC.....24V AC
SM.....9-30V DC / 7-24V AC



R^oHS
Compliant

TECHNICAL SPECIFICATIONS

ENVIRONMENTAL CONDITIONS	
Ambient/storage temperature	0 ... +50°C/-25 ... +70°C (with no icing)
Max. relative humidity	80% up to 31°C decreasing linearly 50% at 40°C.
Rated pollution degree	According to EN 60529 Front panel : IP65 Rear panel : IP20
Height	Max. 2000m

Do not use the device in locations subject to corrosive and flammable gases.

ELECTRICAL CHARACTERISTICS	
Supply	230V AC +10% -20%, 50/60Hz or 24V AC ±10%, 50/60Hz or optional 9-30V DC / 7-24V AC ±10% SMPS
Power consumption	Max. 7VA
Wiring	2.5mm ² screw-terminal connections
Date retention	EEPROM (Min. 10 years)
EMC	EN 61326-1: 1997, A1: 1998, A2: 2001 (Performance criterion B for the EMC standard)
Safety requirements	EN 61010-1: 2001 (pollution degree 2, overvoltage category II, measurement category I)

OUTPUT	
0-10V output	Maximum 20mA, digitally adjusted potentiometer output. Resolution : 1/10000 V Fluctuation : Maximum 30mV Rise time from 0 to 10V is maximum 300ms

HOUSING	
Housing type	Suitable for flush-panel mounting according to DIN 43 700.
Dimensions	W72xH72xD97mm
Weight	Approx. 350g (after packing)
Enclosure material	Self extinguishing plastics

While cleaning the device, solvents (thinner, benzine, acid etc.) or corrosive materials must not be used.

TERMS

1) Adjusted potentiometer value is seen in run mode
Parameter name, value or its unit in programming mode.

2) Increment key during run mode.
Increment or parameter selection key during programming mode.

3) Decrement key during run mode.
Decrement or parameter selection key during programming mode.

4) Used for selecting menus in programming mode.

5) Used for selecting run or programming modes and for adjusting parameters.

(1) Digital display	4 digits 7 segment red LED display
Character height	14.2mm
(2),(3),(4),(5) Keypad	Micro switch

DIMENSIONS

Depth 97mm

Panel cut-out 75mm

Flush mounting clamp

Panel

Rubber packing

Connection cables

For removing mounting clamps:







- Push the flush-mounting clamp in direction 1 as shown in the figure left.
- Then, pull out the clamp in direction 2.

Note 1) While panel mounting, additional distance required for connection cables should be considered.
2) Panel thickness should be maximum 10mm.
3) If there is no 90mm free space at back side of the device, it would be difficult to remove it from the panel.

CONNECTION DIAGRAM




ENDA EDP 741 is intended for installation in control panels. Make sure that the device is used only for intended purpose. The shielding must be grounded on the instrument side. During an installation, all of the cables that are connected to the device must be free of energy. The device must be protected against inadmissible humidity, vibrations, severe soiling and make sure that the operation temperature is not exceeded. All input and output lines that are not connected to the supply network must be laid out as shielded and twisted cables. These cables should not be close to the power cables or components. The installation and electrical connections must be carried on by a qualified staff and must be according to the relevant locally applicable regulations.

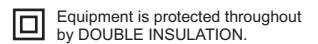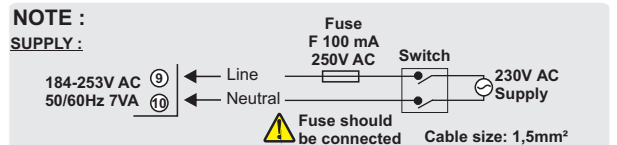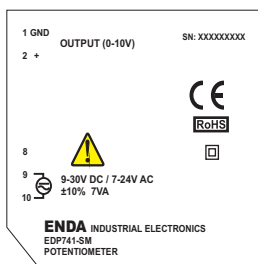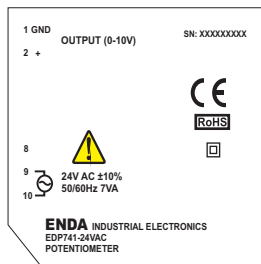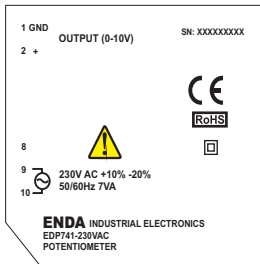


Note: 1) Mains supply cords shall meet the requirements of IEC 60227 or IEC 60245.
2) In accordance with the safety regulations, the power supply switch shall bring the identification of the relevant instrument and it should be easily accessible by the operator.

Run mode

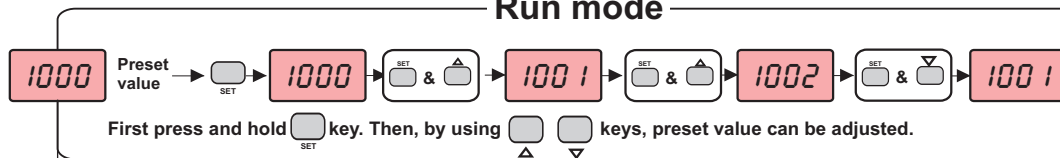

If *oE.tY* and *o.d.tY* parameters is adjusted to any value except *dSAb* parameter, output can be controlled with and buttons.



Programming mode



U.oPt.

dPnt. = Decimal point. Decimal point can be adjusted between 1. and 3. digits. See NOTE 1 for programming.

L.SCL. = Lower value of the scale. It can be adjusted between -1999 and (*H.SCL.*-100) Output becomes 0V at the adjusted value. See NOTE 1 for programming.

H.SCL. = Upper value of the scale It can be adjusted between (*L.SCL.*+100) and 8000. Output becomes 10V at the adjusted value. See NOTE 1 for programming.

Lo.L.i. = Lower limit for preset value. It can be adjusted between *L.SCL.* and *H.i.L.i.* See NOTE 1 for programming.

H.i.L.i. = Upper limit for preset value. It can be adjusted between *Lo.L.i.* and *H.SCL.* See NOTE 1 for programming.

P.on.C. = Control parameter when first energized. *oFF*= When first energized, output is the voltage that lower limit value is indicated. Attention: If this parameter is selected, the set value that was adjusted before is seen when set button is pressed at first. In addition, if increasing or decreasing that value is wanted the set value is equalized to lower limit value and then adjustment can be done. *on*= When first energized, output is the voltage that the set value is indicated. *S.St.r.*= When first energized, output is increased slowly from the voltage that lower limit value is indicated to the voltage that set value is indicated during *r.t.i.* See NOTE 1 for programming.

o.E.t.Y. = Adjusted type of the output to preset value with button. *dSAb.* = Output cannot be adjusted to preset value with button. *Enb.* = Output can be adjusted to preset value with button. *S.on.* = Output is increased to voltage that set value is displayed with button during *r.t.i.* See NOTE 1 for programming.

o.d.t.Y. = Adjusted type of the output to lower limit value with button. *dSAb.* = Output cannot be adjusted to lower limit value with button. *Enb.* = Output can be adjusted to lower limit value with button. *S.oFF.* = Output is increased to voltage that lower limit value is displayed with button during *d.t.i.* See NOTE 1 for programming.

r.t.i. = increasing time for output. It is adjusted between 1 and 250 seconds. Output is increased slowly to the set value during adjusted time. See NOTE 1 for programming.

d.t.i. = decreasing time for output. It is adjusted between 1 and 250 seconds. Output is decreased slowly to the lower limit value during adjusted time. See NOTE 1 for programming.

P.i.d.t. = increasing and decreasing speed of preset value. It is adjusted between 1 and 3. *P.i.d.t.*=1, set value changes one by one. *P.i.d.t.*=2, set value changes 10 at each step. *P.i.d.t.*=3, set value changes 100 at each step. See NOTE 1 for programming.

S.Cod. = Access code for safety menu. This parameter should be 222. See NOTE 1 for programming.

10.CA. = calibration for 0-10V output. The device should be calibrated until 10.000V is obtained at the output. Calibration procedure is as explained below. When key is pressed, previous calibration value is seen. While holding key, calibration value should be adjusted until 10.000V is seen at the output by using keys. If key is released, the new calibration value is saved in an EEPROM.

S.Cod. = Access code for safety menu. This parameter should be 333. See NOTE 1 for programming.

U.o.Sc. = *U.oPt.* menu protection level parameter. *nonE* = No menu is seen. *P.no* = Menu is seen but can not be programmed. *P.YES* = Menu is seen and programming is possible. See NOTE 1 for programming.

d.o.Sc. = *d.oPt.* menu protection level parameter. *nonE* = No menu is seen. *P.no* = Menu is seen but can not be programmed. *P.YES* = Menu is seen and programming is possible. See NOTE 1 for programming.

d.CA.S. = *d.CAL.* menu protection level parameter. *nonE* = No menu is seen. *P.no* = Menu is seen but can not be programmed. *P.YES* = Menu is seen and programming is possible. See NOTE 1 for programming.

Parameter adjustment method

NOTE 1

For adjusting a selected parameter first press and hold key. Then, by using keys, adjustment can be made.

If increment key is pressed and held 0.6 seconds, the value of the selected parameter changes rapidly. If waited enough, the value increases 100 at each step. After 1 second following the release of the key, initial condition is returned. The same procedure is valid for the decrement key.

