



AVANTI FALL PROTECTION SYSTEM

User's Manual and Installation Instructions

ANSI

AVANTI Fall Protection System

User's Manual and Installation Instructions

All safety statements, specifications, hazards, and inspections defined shall apply only to the version of product specified in this manual. The images and representations in this manual may vary slightly from the actual product you are using; please review your product label(s) to ensure a proper match.

Date of publication:

2nd Edition: February 2013

Revision 2: 20/7/13

Manufacturer:

Avanti Wind Systems A/S

Høgevej 19

3400 Hillerød

Denmark

P: (+45) 4824 9024

F: (+45) 4824 9124

E: info@avanti-online.com

I: www.avanti-online.com

2



ANSI

Sales & Services:

Australia	Avanti Wind Systems PTY LTD	P: +61 (0) 7 3902 1445
China	Avanti Wind Systems	P: +86 21 5785 8811
Denmark	Avanti Wind Systems A/S	P: +45 4824 9024
Germany	Avanti Wind Systems GmbH	P: +49 (0) 41 21-7 88 85 – 0
Spain	Avanti Wind Systems SL	P: +34 976 149 524
UK	Avanti Wind Systems Limited	P: +44 0 1706 356 442
USA	Avanti Wind Systems, Inc	P: +1 (262) 641-9101
India	Avanti Wind Systems, PL	P: +91 44 6455 5911

Index

- 1 Caution6
- 2 Danger6
- 3 Description of equipment.7
 - 3.1 Purpose7
 - 3.2 Function8
 - 3.3 Component overview.8
- 4 Daily inspection8
- 5 Directions for use8
- 6 Maintenance.10
- 7 Annual inspection10
- 8 Ordering spare parts10
- 9 Marking.11

Installation manual

- 10 Fitting instructions12
- 11 Inspection before initial use15

Appendix A: The Improved AVANTI Fall Protection System
Type 2000/200216

Appendix B: Avanti Shock Absorber17

Appendix C: Inspection Before Initial Use Report18

Appendix D: Checklist /Visual Test for the Runner20

Appendix E: Registration Form for the Runner22

Limited Warranty

Avanti Wind Systems A/S warrants that commencing from the date of shipment to the Customer, and continuing for a period of the longer of 365 days thereafter, or the period set forth in the standard AVANTI warranty, the Fall Protection System ("Product") described in this Manual will be free from defects in material and workmanship under normal use and service when installed and operated in accordance with the provisions of this manual.

This warranty is made only to the original user of the Product. The sole and exclusive remedy and the entire liability of AVANTI under this limited warranty, shall be, at the option of AVANTI, a replacement of the Product (including incidental and freight charges paid by the customer) with a similar new or reconditioned Product of equivalent value, or a refund of the purchase price if the Product is returned to AVANTI, freight and insurance prepaid. The obligations of AVANTI are expressly conditioned upon return of the Product in strict accordance with the return procedures of AVANTI.

This warranty does not apply if the Product (i) has been altered without the authorization of AVANTI or its authorized representative; (ii) has not been installed, operated, repaired, or maintained in accordance with this Manual or other instructions from AVANTI; (iii) has been subjected to abuse, neglect, casualty, or negligence; (iv) has been furnished by AVANTI to Customer without charge; or (v) has been sold on an "AS-IS" basis.

Except as specifically set forth in this Limited Warranty, ALL EXPRESS OR IMPLIED CONDITIONS, REPRESENTATIONS AND WARRANTIES,

INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTY OR CONDITION OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, NON-INFRINGEMENT, SATISFACTORY QUALITY, COURSE OF DEALING, LAW, USAGE OR TRADE PRACTICE ARE HERBY EXCLUDED TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW AND ARE EXPRESSLY DISCLAIMED BY AVANTI. IF, PURSUANT TO ANY APPLICABLE LAW, TO THE EXTENT AN IMPLIED WARRANTY CANNOT BE EXCLUDED AS PROVIDED IN THIS LIMITED WARRANTY, ANY IMPLIED WARRANTY IS LIMITED IN TIME TO THE SAME DURATION AS THE EXPRESS WARRANTY PERIOD SET FORTH ABOVE. BECAUSE SOME STATES DO NOT PERMIT LIMITATIONS ON THE DURATION OF IMPLIED WARRANTIES, THIS MAY NOT APPLY TO A GIVEN CUSTOMER. THIS LIMITED WARRANTY GIVES CUSTOMER SPECIFIC LEGAL RIGHTS, AND CUSTOMER MAY HAVE OTHER LEGAL RIGHTS UNDER APPLICABLE LAWS. This disclaimer shall apply even if the express warranty fails of its essential purpose.

In any cases of dispute the English original shall be taken as authoritative.

EC Type-Examination Certificate

Directive for Personal Protective Equipment

Certificate No.: **DK-0200-PPE-2034 version 1**
Issued by FORCE Certification A/S - EC-notified body number 0200

In accordance with the Directorate of National Labour Inspection's Regulation No. 1273 of December 18th 1996, which in Denmark implements the Council Directives No. 89/686, No. 93/68, No. 93/95 and No. 96/58, EC type-examination certificate is issued to:

Manufacturer:	AVANTI Wind Systems A/S Høgevej 17-19 3400 Hillerød Denmark
Identification of Personal Protective Equipment:	
Type:	Equipment for protection against falls from a height. Guided type fall arrest system with safety rail on vertically fixed ladders. With integrated energy absorber. Optional use of climb-assist system.
Designation:	Avanti Fall Arrest System 2000/2002 (improved edition)
Weight of user:	40-136 kg
Minimum service temperature:	-30°C
Max. number of multiple users:	3
Manufactured by:	AVANTI Wind Systems A/S with sub-suppliers as stated in the appendix to the EC type-examination certificate.

The examined samples are found to fulfil the relevant requirements stated for the following tests:	
EN 353-1:2002	Guided type fall arresters including a rigid anchor line
prEN 353-1:2008	Guided type fall arresters including a rigid anchor line
TUV NEL Fall-back Test	Fall-back test using anthropometric test dummies
Avanti Climb-assist	System combined with the use of Avanti Climb-assist and release-strap (optional)
AS/NZS 1891.3:1997	Fall-arrest devices (clause 3.2, 3.3, 3.4, 3.7, and 3.8)
RFU CNB/P/11.073	Requirements and test procedure

Documentation for observance of relevant requirements stated in Appendix II of Regulation No. 1273 of December 18th 1996 and the basis for the type examination are described in the appendix to this certificate. The manufacturer must inform FORCE Certification A/S of any contemplated changes. The examined type of personal protective equipment is class III equipment and a quality control agreement with a notified body must be available.

FORCE Certification A/S task No.: 112-21691

Date of issue: 2012-02-07
Date of expiry: 2017-02-07


Niels Ovesen
Certification manager
Kasper Munk Eliasen
Examiner

Extracts from this EC Type-Examination Certificate may only be reproduced with a written permission from FORCE Certification A/S

1 Caution

- a) A competent person is familiar with and is trained within the AVANTI Fall Protection System, and the following standards: EN 363, EN 353-1, ANSI-ASC A14.3-2008, ANSI/ASSE Z359.1-2007, CAN/CSA Z259.12-01 and CAN/CSA Z259.2.1-98. An AVANTI Fall Protection Technician has successfully participated in the AVANTI Fall Protection course and is considered competent. A user is familiar with the correct usage of the AVANTI Fall Protection System and has had an introduction to personal protection equipment.
- b) Assembly, maintenance and testing of the Fall Protection System may only be performed by a competent person.
- c) Users are obliged to read and understand this User's Manual.
- d) A copy of the User's Manual must be handed out to the fall protection users and must be available for reference.
- e) If more than one person is trusted with one of the above tasks, the employer shall appoint a supervisor in charge of operation.
- f) If the Fall Protection System is re-sold outside the original country of destination the reseller shall provide instructions for use, for maintenance, for periodic examination and for repair in the language of the country in which the product is to be used.
- g) Please insure the ladder system with the Fall Protecting System is capable of supporting: for USA: not less than 5000 lb (22,6kN) static load, for Canada: not less than 27 kN, for EU: not less than 15 kN
- h) Always remove the runner from the rail when not in use; the runner is not intended to be parked on the rail when freely suspended.
- i) The system is only to be operated by users being properly trained in daily inspections, working at heights and practical operation of the system.
- j) For optimal operation, enhanced safety and better climbing ergonomics; the climber is recommended to maintain a minimum distance of 4" (10 cm) from torso to ladder during regular climb. A good climbing position is easily obtained by leaning the upper back against the tower.

2 Danger

- a) The Fall Protection System may not be used by persons under influence of alcohol or drugs that may jeopardize working safety.
- b) Only people instructed to the AVANTI Fall Protection System by a qualified trainer may use the system.
- c) The owner must ensure that a rescue plan that deals with any emergencies that could arise during work is in place and that the users are familiar with this.
- d) If any damage or faults are found during operation, or in case of circumstances which may jeopardize safety:
 - Immediately stop the work in progress
 - Contact the authority responsible e.g. the turbine owner or the site foreman.
- e) No warranty is provided against damage resulting from reconstruction or modification of equipment or use of non-original parts which are not approved by the manufacturer.
- f) The Fall Protection System may not be used outside its limitations, or for any purpose other than for which it is intended.
- g) The AVANTI fall protection runner should be treated as personal protection equipment.
- h) Keep a distance of 20 feet (6 meters) between each user during ascent and descent.
- i) In the first two meters the user may not be protected against hitting the ground. Take precautions.
- j) Prior to initial use a competent person must inspect the system.

- k) Clean off any oil, grease, or residue on the rail.
- l) If oil, grease, chemicals or residue has leaked onto the shock absorber or in any kind been in contact with the webbing, have an AVANTI fall protection technician replace the shock absorber.
- m) After 5 years of use replace the shock absorber. Date of manufacture is printed on the shock absorber label.
- n) Operation temperature -31 Deg / +140 Fahrenheit(-35 / +60 Celcius).
- o) In connection with the Fall Protection System only full body harnesses approved according to EN 361, ANSI Z359.1 and CSA Z259.10 may be used.
- p) The complete Fall Protection System has been manufactured and tested according to applicable parts of EN 353-1, CANCSA Z259.1-98 and ANSI Z359.1
- q) Ladders supplied by AVANTI comply with the requirements of EN 131, EN ISO 14122 and ANSI 14.3
- r) The Avanti supplied Carabiner is tested according to CSA , ANSI Z359.1-2007 and EN 362 requirements.
- s) All parts and units have been especially developed for the AVANTI Fall Protection System Type 2002 and as such cannot be used in other Fall Protection Systems.
- t) These instructions must be kept together with the Fall Protection System.
- u) Whenever using the AVANTI Fall Protection System it's very important to always make sure that the harness is connected by the D-ring complying with the demands for climbing in vertical fall arrest safety systems on ladders. This information shall be described in the user manual from your harness supplier.

- v) It's necessary to use alternative fall protection when stepping on or off the ladder. The runner must not be disconnected from the rail before establishing alternative fall protection. The runner must always be attached to the D-ring in the harness before connecting or disconnecting it to the rail.
- w) When working or resting at the ladder it's essential that the user utilizes alternative safety. The AVANTI Fall Protection System is only tested as fall arrest safety when ascending or descending the ladder.
- x) Don't ever twist the shock absorber, it may cause the system to fail.

The owner must verify the need for 3rd party fall protection device inspections with the local authority and comply with the standards specified.

3 Description of Equipment

7

3.1 Purpose

The Fall Protection Devices in this User's Manual serves the following purposes:

- The Fall Protection System is intended for use during ascent and descent on stationary ladders installed in towers, pylons, well shafts, manholes, etc.
- The Fall Protection System is a safety device traveling on a rail which prevents free fall during climbing.
- The fall protection safety rail is designed for permanent installation in one place.
- The Fall Protection System can be mounted on different shapes and brands of ladders, as long as approval is issued by AVANTI according to section 10d.


The Fall Protection System is not designed for:

- Securing horizontally.
- Securing Equipment.

3.2 Function

The Fall Protection System is comprised of a safety rail mounted on a ladder and a runner which can be clicked onto the rail. The user attaches the runner to their harness by means of an integrated shock absorber and carabiner. When starting the climb the user clicks the runner. When climbing the runner glides upward on the safety rail. In case the user experiences a fall the runner will lock onto the safety rail and arrest the fall.

3.3 Component overview:

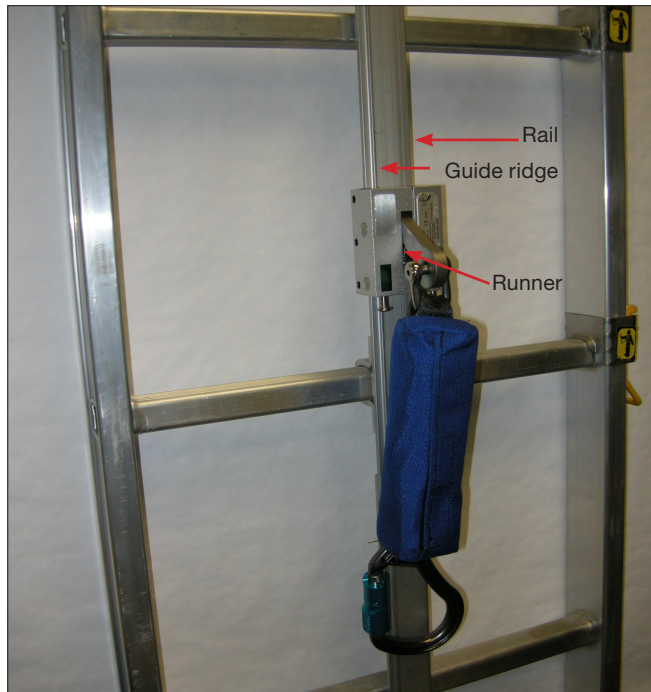

Rail and runner on ladder



Runner with shock absorber pack and carabiner.

4 Daily Inspection

- 1) Before any use the runner must be checked for visual damage, wear and tear, and other defects, according to appendix B.
- 2) During ascent look for visible damage and loose parts along with loose bolts on ladder, rail or joints.
- 3) Equipment with defects or equipment that leaves doubt concerning safe use must be checked by a competent person.



STOP if the runner looks defective / or parts are missing, do not use it.


5 Directions for Use





DANGER!

- The runner, the shock absorber pack, and the carabiner comprise a safety system. Never adapt, extend, or in any way change this system.
- The runner may only be used if the bottom left steel tap lock has popped out in lock position.
- The arrow on the runner must point upward – otherwise it will not block a fall.

Correct mounting

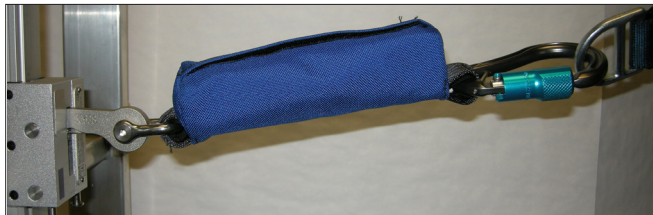

Incorrect mounting

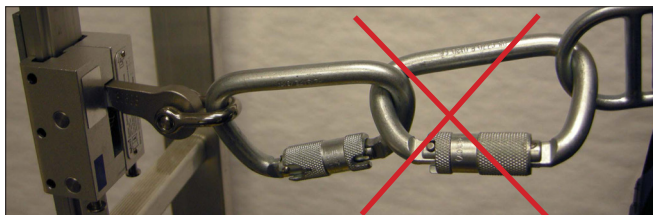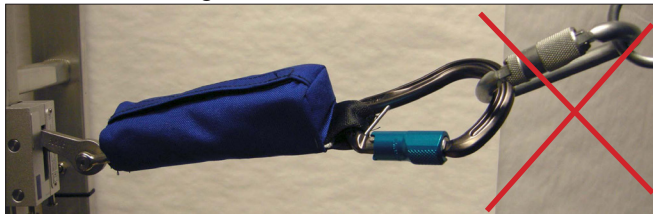

Instructions:

- Before using this Fall Protection System make sure to wear an approved harness worn in accordance to the manufacturer's instructions.
- With the arrow on the runner portion of the Fall Arrest System pointing in the "UP" direction, and the rest of the unit not twisted, fasten the carabiner to the user's body harness at the chest D-ring connection on the harness. Consult the harness manufacturer's manual for an approved fall arrest connection.


Always make sure that the carabiner of the Fall Protection System is connected to the D-ring of the full body harness when attaching/detaching the runner.

- With the arrow on the plate pointing upwards the runner is clicked onto the safety rail. (see picture 1)

Open runner by pushing bottom left steel tap lock and pull left and right runner side apart.

Place one of the runner sides on its respective safety rail side with the runner arrow pointing upward (1).

1

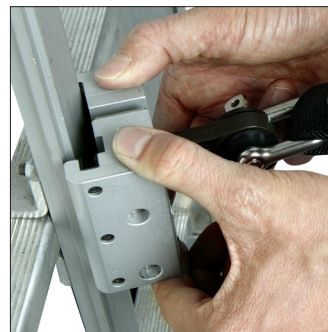


2



While lifting the break lever, tilt the runner so both runner sides are around each side of the safety rail (2).

3

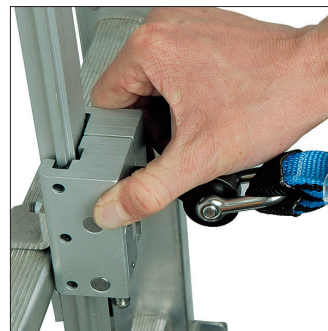

Push the two runner body parts together until the bottom left steel tap lock pops back in position and locks the runner body. Make sure it is locked correctly (3).

Detach runner by pushing the bottom left steel tap and pull the runner sides apart.

Before detaching assure you are in a safe area or secured by another fall protection device.

DANGER!

- a) If the fall protection System has blocked a fall take the ladder and runner out of use. Contact a Fall Protection Technician so they can inspect the affected ladder/rail and the runner.
- b) When ever using the AVANTI Fall Protection System it is very important to always make sure, that the harness is connected by the D-ring complying with the demands for climbing vertical fall arrest safety systems on ladders. This information shall be described in the user manual from your harness supplier.
- c) To ensure safety it is very important that the runner is attached to the correct D-ring of the harness before connecting to or disconnecting from the ladder/fall arrest system. This way the user can't drop the runner. Only connect or disconnect the runner from the rail while standing on a safe support or adequately tied-off with secondary fall protection system.
- d) When working or resting at the ladder it is essential that the user uses a secondary fall protection system. The AVANTI Fall Protection System is only approved as fall arrest safety when ascending or descending the ladder.



WARNING!

- The fall arrester shall be attached to no more than one personal fall-arrest system.
- Use is not suitable when the user is positioned on an unstable surface, fine-grain material, or particulate.

6 Maintenance

- a) Keep all parts free of oil, grease, paint and chemicals.
- b) Never place liquids or sharp objects in the vicinity of the Fall Protection System as these may damage the equipment.
- c) The shock absorber pack can be cleaned using a weak detergent-solution and a soft brush. Subsequently, rinse with clean water.
- d) If the system gets wet let the shock absorber pack air-dry naturally. Do not use any kind of heating.
- e) Store runner out of direct sunlight and protected from heat and dust.

At minimum, every 12 months, the Fall Protection System should be inspected by an AVANTI Fall Protection Technician.

7 Annual Inspection

Once a year a competent person must inspect the fall protection system according to ANSI Z359.2-2007. If the Annual tests are not performed this will void the warranty and AVANTI will renounce all liability and claims that may appear. AVANTI conducts Fall Protection Courses on a regular basis. If interested, contact AVANTI.

8 Ordering Spare Parts

When parts are found to be missing, stop working - the system must be taken out of use!

Rail and ladder: Contact a competent person and let him/her replace/repair the missing parts and conduct a Fall Protection System inspection.

Runner: Contact AVANTI and let them replace/repair the missing parts and conduct a runner inspection.

9 Marking

Upward direction when runner is attached to rail

Read instructions before use

Runner production no.

Compliance

AVANTI product name

Standard no.




Runner rating plate

EEC-notified body no.

Standard no.

Production batch no.

Read instructions before use

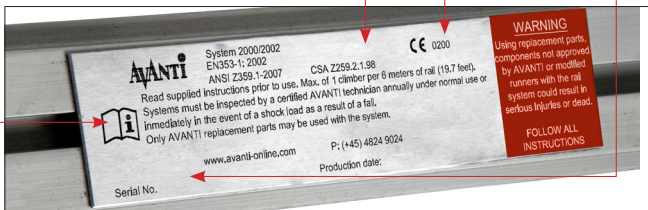

Rail rating plate



Shock absorber pack label

10 Fitting Instructions

- a) A competent person must be in charge of the Fall Protection System installation. The competent person takes full responsibility for the installation and guarantee that the installation is done in accordance with these instructions.
- b) Prior to mounting the system, ensure that the ladder involved will be able to carry the load.
Please refer to manufacturer's documentation to check that the system fulfils mandatory standards.
- c) Ensure that the ladder intended for mounting the AVANTI Fall Protection System complies with the requirements of EN 131, EN ISO 14122 and ANSI 14.3. E.g. internal rung width must be minimum 340mm (All AVANTI ladders are compliant)
- d) Ladders with rung geometry different from AVANTI's may require special rung fittings.
These must be calculated and approved by AVANTI.
- e) Before installing the fall protection rail ensure that all parts are present.
Refer to parts list delivered along with the Fall Protection System.

Installing the AVANTI Fall Protection System you will need the following parts.



Rung fitting




Rung fitting mounted on a Safety rail.



Hammerhead bolt with self-locking nut



Fish joint connector

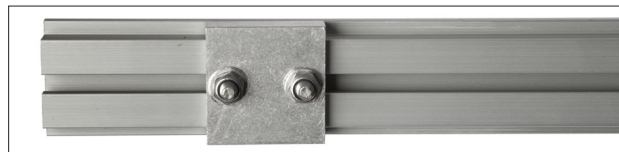


Stopper





Runner with shock absorber pack and carabiner.

Mounting of rail on ladder:

1. Place the safety rail in the center of the ladder with **the guide ridge situated on the left side.**

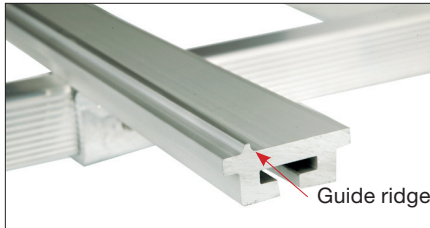

2. Mount the fall protection rung fittings with hammerhead bolts and self-locking nuts as follows:
 - a) At the bottom or second to last rung of the safety rail ladder.
 - b) At min. every 3rd rung never allowing more than 2 rungs in a row without rung fitting.
 - c) At the top rung of the safety rail ladder.
3. When joining more ladder sections use fish joint connector. Assure that 2 hammerhead bolts and self-locking nuts are used for each rail end - that is 4 per fish joint. minimum 1 mm – maximum 4 mm gap between the rail connections . (see photo of Fish joint connector in section 10).
4. The indicator mark on the hammerhead bolt must be positioned at an angle of 70° to the safety rail. (see fig)
5. Tighten the hammerhead nut with 8 NM of torque.
6. Self-locking nuts must be used at all times, ensure that:
 - The bolt extends from the nut by at least half of the thread diameter.
 - If it has become possible to loosen the nut by hand replace the nut.

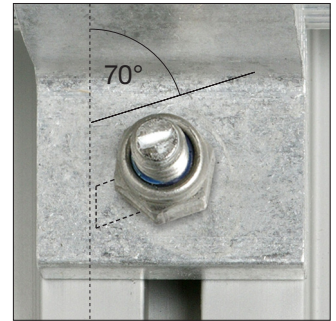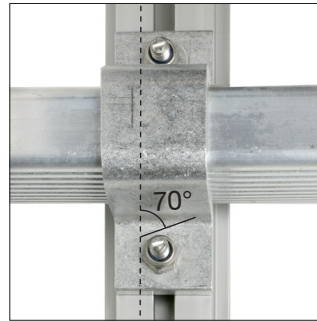

7. At the top and bottom of the safety rail mount a stopper.
8. During installation in wind turbine towers mount a temporary stopper on the rail top of each individual tower section, then technicians can use the Fall Protection System when erecting (connecting tower sections) the tower. These temporary stoppers should be removed when the fall protection rail is joined to the next tower section.




Connection of ladder and rail in tower flange connections.

In case the rail and ladder is installed in a wind turbine tower before the tower is assembled the ladder and rail may need adjustment during tower assembly. Please follow the cutting and fitting instructions below.

Ladder Top:


A rung fitting is always mounted on the top rung of each tower section.

1. After cutting-off the safety rail above the rung, the safety rail must extend minimum 55mm **above** the rung (see Fig. A below).
2. If the rail is cut to less than 100 mm **above** the step ($x < 100$ mm) the fitting must be moved down one step (See fig. B below).

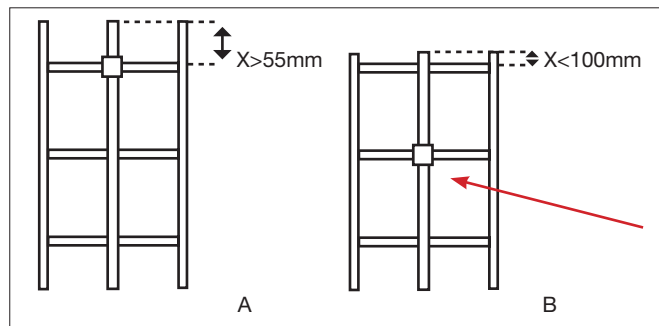

Ladder Bottom:

3. After cutting-off the safety rail **below** the rung, the safety rail must extend minimum 55mm below the rung.
4. If the rail is cut to less than 100 mm **below** the rung ($x < 100$ mm), the rung fitting - if any, must be moved up one rung (See fig. D below).

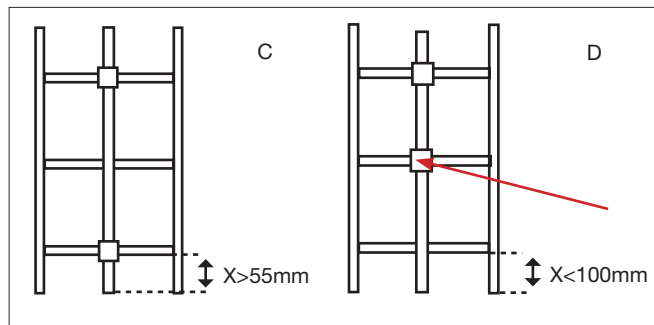

5. If it is not a bottom tower section there must always be a rung fitting on one of the two lower rungs. If this is not the case this must be retro fitted.

General mounting instructions:

- The AVANTI Fall protection System shall only be installed with original system parts.
- All system elements must be checked on site, even if the ladders are supplied with the rails already mounted.
- The ladder joints are to absorb the vibrations and torsional stress. Not the safety rail.
- Top end of the rail is allowed to pass the ladder rung with 100 mm.
- Any cutting of the rail has to be done with 90° accuracy across and through the rail.
- Connecting rail assemblies need to have a minimum gap of 0.5 mm and maximum 4mm.
- Never use a metal hammer on the rail. This will damage the rail coating and guide ridge.

11 Inspection Before Initial Use

Before first use a competent person must inspect the Fall Protection System. The result of the inspection must be entered in the enclosed Inspection before initial use report in appendix A and filed for later reference.

Ladder rung:

- Ensure that no dents, holes, or cracks have any influence on the step stability.
- Dents may not exceed 10 mm in diameter or be more than 1 mm deep.
- If dents are found on the rung edges or corners the step stability can no longer be guaranteed. Replace step.

Ladder stile:

- Ensure that no dents, holes, or cracks have any influence on the stile stability.
- Dents may not exceed 20mm in diameter or be more than 1 mm deep.
- If dents are found on the stile edges or corners the stile stability can no longer be guaranteed. Replace the ladder section.

Ladder connections:

- Maximum deviation on rung distance at flange connection is 30mm.

Ladder end:

- At the top end and bottom end of the ladder a protection guard such as the AVANTI rubber feet or end cap must be in place. During construction of wind turbine towers a temporary top stopper must be mounted on the fall protection rail at each individual tower section.

Safety rail:

- Ensure that the safety rail fittings are mounted according to the mounting section in this manual.
- Ensure that no sharp rail ends are present.
- Check the legibility of the product marking. If markings are not present have AVANTI replace them.
- Ensure that top and bottom stoppers are mounted.

Safety rail connections:

- Ensure that fish joint connectors are mounted using 4 hammerhead bolts, 2 on each safety rail section leaving a minimum 1 mm – maximum 4 mm gap between the rail connections and that the indicator mark on the hammerhead bolt is turned 70°
- Make sure all hammerhead bolts and self locking nuts present on the system are torqued with 8 NM of torque.

Appendix A: The Improved AVANTI Fall Protection System Type 2000/2002

The present AVANTI Fall Protection System is an improved edition of the Type 2000/2002.

The use and maintenance is similar for the two editions.


The modifications in the new edition have improved the safety of the AVANTI Fall Protection System.

During tests exceeding the required program described in rfu/CNB/P/11.073, this new runner version has passed the complex Fall Back Dynamics test with lower weights than the prescribed nominal load, as it has passed with both 50kg, 70kg, 100kg and 136kg, and the side maximum distance dynamic test with both 50kg and 136kg.

16



Standard model

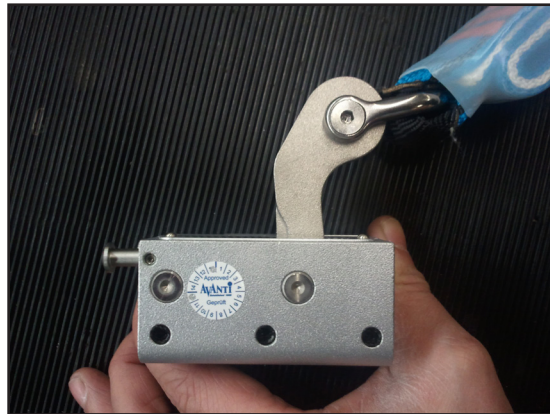

Improved model

The new edition will fit the same safety rail as the previous model.



AVANTI Fall Protection Rail System

Appendix B: Avanti Shock Absorber Pack

Avanti Part Number 47699105

Intended Purpose of Device:

The intended purpose of this device is to assist with the initial impact caused by a fall. It will absorb some of the energy of a fall instead of transferring it all to the user of the fall protection system.

Hazard Warnings:

Please read and follow all instructions before use.

The device is to be inspected before use and must be recertified on an annual basis. If the device shows any sign of damage or past deployment, device is to be destroyed and then replaced with a new unit. Failure to inspect and replace a damaged unit could potentially result in injury to a user during a fall.


WARNING!

If a fall occurs or an inspection reveals an unsafe condition, the device is to be taken out of service until a competent person determines whether it is safe for use or should be destroyed.

Instructions for use:

The AVANTI shock absorber pack is to be attached between a shackle and a carabiner. The shackle is also to be attached to a runner (Fig 1).

Fig 1

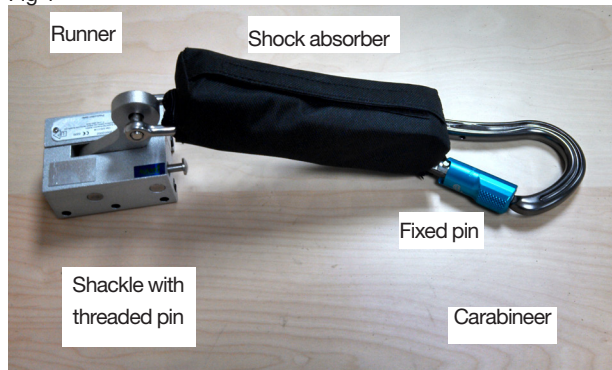

The shackle is to be threaded through one end of the shock absorber pack and securely closed with the threaded shackle pin.

The carabiner is to be threaded through the other end of the shock absorber and secured in place with a permanently fixed pin.

In the event that there is a fall and the shock absorber pack deploys, the shock absorber pack will elongate up to 4 feet (1.3m) (X_{max}) and absorb some of the energy of the fall for the user. If a shock absorber is elongated or deployed to any length other than the originally non-deployed length, it must be replaced and is no longer capable of functioning (Fig 2).

The manufacturer's published value of average arrest force (F_{avg}) 640-740 lbs.

Fig 2



Maintenance:

The AVANTI Shock absorber pack is to be inspected prior to each use. Abrasions, rips, or any other sign of external damage must result in replacement.

Please see the warning below.

If the AVANTI shock absorber pack is elongated or deployed at any length other than the original length shown in FIG1.0 than the device must be destroyed and replaced.





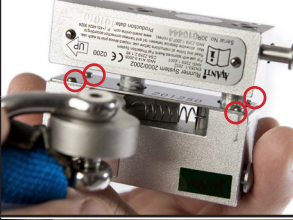



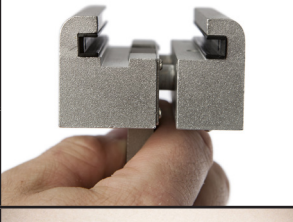
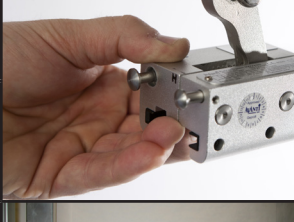


The AVANTI shock absorber pack is considered part of an assembly including a runner and a carabiner. This assembly is to be returned to AVANTI for inspection annually.

TEST FORM:			
AVANTI FALLPROTECTION TYPE 2000/2002 EN 353-1 CE:DK-0200-C.894 EN 353-1 CE:DK-0200-C.1165 ANSI Z359.1-2007		User's Name: Phone: Name of inspector: Date of inspection:	
Tower (WEA-No.):			
Ladder inspection		OK	not OK
Rung:	No dents, holes, or cracks influence on rung stability	<input type="checkbox"/>	<input type="checkbox"/>
	No dents larger than 10 mm in diameter or 1 mm deep	<input type="checkbox"/>	<input type="checkbox"/>
	No dents on rung corners	<input type="checkbox"/>	<input type="checkbox"/>
	Other damage: _____		
Stile:	No dents, holes, or cracks influence on stile stability	<input type="checkbox"/>	<input type="checkbox"/>
	No dents on stile larger than 20 mm in diameter or 1 mm deep	<input type="checkbox"/>	<input type="checkbox"/>
	No dents on stile corners	<input type="checkbox"/>	<input type="checkbox"/>
	Other damage: _____		
Ladder connections:	Distance between ladder ends less than 30 mm	<input type="checkbox"/>	<input type="checkbox"/>
Ladder ends:	AVANTI rubber feet or end cap mounted	<input type="checkbox"/>	<input type="checkbox"/>
General:	Free of dirt (oil, corrosion etc.) on ladder	<input type="checkbox"/>	<input type="checkbox"/>
Rail			
Rung fitting:	At 1 st or 2 nd rung at the beginning of each ladder section	<input type="checkbox"/>	<input type="checkbox"/>
	At 1 st or 2 nd rung at the end of each ladder section	<input type="checkbox"/>	<input type="checkbox"/>
	At min. Every 3 rd rung	<input type="checkbox"/>	<input type="checkbox"/>
	Min. 2 fittings for each shortened rail	<input type="checkbox"/>	<input type="checkbox"/>
	Other damage: _____		
Rail connections (Fish joint):	Fish joint connector fastened with 2 hammerhead bolts on each rail	<input type="checkbox"/>	<input type="checkbox"/>
	All hammerhead bolt indication marks in an angle of 70° to the rail	<input type="checkbox"/>	<input type="checkbox"/>
	Min 1mm, max 4 mm distance between rail ends	<input type="checkbox"/>	<input type="checkbox"/>
	Other damage: _____		
Rail:	No sharp edges	<input type="checkbox"/>	<input type="checkbox"/>
	Mounted in accordance to the installation instructions	<input type="checkbox"/>	<input type="checkbox"/>
	Rail mounted with guide ridge on left side (see 3.3)	<input type="checkbox"/>	<input type="checkbox"/>
General:	Free of dirt (oil, corrosion etc.) on rail	<input type="checkbox"/>	<input type="checkbox"/>
	Other damage: _____		
General			
	Resting platform in place and fixed	<input type="checkbox"/>	<input type="checkbox"/>
	All hardware in place and torqued	<input type="checkbox"/>	<input type="checkbox"/>
	Labels and markings legible	<input type="checkbox"/>	<input type="checkbox"/>
	Other damage: _____		
Is the Ladder safe for use: <input type="checkbox"/> YES <input type="checkbox"/> NO Is the Rail safe for use: <input type="checkbox"/> YES <input type="checkbox"/> NO			
If Rail use is prohibited mark "Is the Rail safe for use" as NO. In this case the Ladder must not be used either. Mark "Is the Ladder safe for use" as NO.			
These inspections may only be performed by AVANTI or by a competent person. At least every 12 months an inspection by an AVANTI fall protection technician or competent person shall be carried out. The inspection results must be entered in a test journal and filed for later reference.		Inspector's Signature	

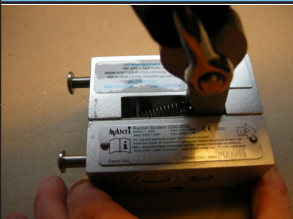TEST FORM:			
AVANTI FALLPROTECTION TYPE 2000/2002 EN 353-1 CE:DK-0200-C.894 EN 353-1 CE:DK-0200-C.1165 ANSI Z359.1-2007		User's Name: Phone: Name of inspector: Date of inspection:	
Tower (WEA-No.):			
Ladder inspection		OK	not OK
Rung:	No dents, holes, or cracks influence on rung stability	<input type="checkbox"/>	<input type="checkbox"/>
	No dents larger than 10 mm in diameter or 1 mm deep	<input type="checkbox"/>	<input type="checkbox"/>
	No dents on rung corners	<input type="checkbox"/>	<input type="checkbox"/>
	Other damage: _____		
Stile:	No dents, holes, or cracks influence on stile stability	<input type="checkbox"/>	<input type="checkbox"/>
	No dents on stile larger than 20 mm in diameter or 1 mm deep	<input type="checkbox"/>	<input type="checkbox"/>
	No dents on stile corners	<input type="checkbox"/>	<input type="checkbox"/>
	Other damage: _____		
Ladder connections:	Distance between ladder ends less than 30 mm	<input type="checkbox"/>	<input type="checkbox"/>
Ladder ends:	AVANTI rubber feet or end cap mounted	<input type="checkbox"/>	<input type="checkbox"/>
General:	Free of dirt (oil, corrosion etc.) on ladder	<input type="checkbox"/>	<input type="checkbox"/>
Rail			
Rung fitting:	At 1 st or 2 nd rung at the beginning of each ladder section	<input type="checkbox"/>	<input type="checkbox"/>
	At 1 st or 2 nd rung at the end of each ladder section	<input type="checkbox"/>	<input type="checkbox"/>
	At min. Every 3 rd rung	<input type="checkbox"/>	<input type="checkbox"/>
	Min. 2 fittings for each shortened rail	<input type="checkbox"/>	<input type="checkbox"/>
	Other damage: _____		
Rail connections (Fish joint):	Fish joint connector fastened with 2 hammerhead bolts on each rail	<input type="checkbox"/>	<input type="checkbox"/>
	All hammerhead bolt indication marks in an angle of 70° to the rail	<input type="checkbox"/>	<input type="checkbox"/>
	Min 1mm, max 4 mm distance between rail ends	<input type="checkbox"/>	<input type="checkbox"/>
	Other damage: _____		
Rail:	No sharp edges	<input type="checkbox"/>	<input type="checkbox"/>
	Mounted in accordance to the installation instructions	<input type="checkbox"/>	<input type="checkbox"/>
	Rail mounted with guide ridge on left side (see 3.3)	<input type="checkbox"/>	<input type="checkbox"/>
General:	Free of dirt (oil, corrosion etc.) on rail	<input type="checkbox"/>	<input type="checkbox"/>
	Other damage: _____		
General			
	Resting platform in place and fixed	<input type="checkbox"/>	<input type="checkbox"/>
	All hardware in place and torqued	<input type="checkbox"/>	<input type="checkbox"/>
	Labels and markings legible	<input type="checkbox"/>	<input type="checkbox"/>
	Other damage: _____		
Is the Ladder safe for use: <input type="checkbox"/> YES <input type="checkbox"/> NO Is the Rail safe for use: <input type="checkbox"/> YES <input type="checkbox"/> NO			
If Rail use is prohibited mark "Is the Rail safe for use" as NO. In this case the Ladder must not be used either. Mark "Is the Ladder safe for use" as NO.			
These inspections may only be performed by AVANTI or by a competent person. At least every 12 months an inspection by an AVANTI fall protection technician or competent person shall be carried out. The inspection results must be entered in a test journal and filed for later reference.		Inspector's Signature	

TEST FORM:			
AVANTI FALLPROTECTION TYPE 2000/2002 EN 353-1 CE:DK-0200-C.894 EN 353-1 CE:DK-0200-C.1165 ANSI Z359.1-2007		User's Name:	
Tower (WEA-No.):		Phone:	
		Name of inspector:	
		Date of inspection:	
Ladder inspection		OK	not OK
Rung:	No dents, holes, or cracks influence on rung stability	<input type="checkbox"/>	<input type="checkbox"/>
	No dents larger than 10 mm in diameter or 1 mm deep	<input type="checkbox"/>	<input type="checkbox"/>
	No dents on rung corners	<input type="checkbox"/>	<input type="checkbox"/>
	Other damage: _____		
Stile:	No dents, holes, or cracks influence on stile stability	<input type="checkbox"/>	<input type="checkbox"/>
	No dents on stile larger than 20 mm in diameter or 1 mm deep	<input type="checkbox"/>	<input type="checkbox"/>
	No dents on stile corners	<input type="checkbox"/>	<input type="checkbox"/>
	Other damage: _____		
Ladder connections:	Distance between ladder ends less than 30 mm	<input type="checkbox"/>	<input type="checkbox"/>
Ladder ends:	AVANTI rubber feet or end cap mounted	<input type="checkbox"/>	<input type="checkbox"/>
General:	Free of dirt (oil, corrosion etc.) on ladder	<input type="checkbox"/>	<input type="checkbox"/>
Rail			
Rung fitting:	At 1 st or 2 nd rung at the beginning of each ladder section	<input type="checkbox"/>	<input type="checkbox"/>
	At 1 st or 2 nd rung at the end of each ladder section	<input type="checkbox"/>	<input type="checkbox"/>
	At min. Every 3 rd rung	<input type="checkbox"/>	<input type="checkbox"/>
	Min. 2 fittings for each shortened rail	<input type="checkbox"/>	<input type="checkbox"/>
	Other damage: _____		
Rail connections (Fish joint):	Fish joint connector fastened with 2 hammerhead bolts on each rail	<input type="checkbox"/>	<input type="checkbox"/>
	All hammerhead bolt indication marks in an angle of 70° to the rail	<input type="checkbox"/>	<input type="checkbox"/>
	Min 1mm, max 4 mmdistance between rail ends	<input type="checkbox"/>	<input type="checkbox"/>
	Other damage: _____		
Rail:	No sharp edges	<input type="checkbox"/>	<input type="checkbox"/>
	Mounted in accordance to the installation instructions	<input type="checkbox"/>	<input type="checkbox"/>
	Rail mounted with guide ridge on left side (see 3.3)	<input type="checkbox"/>	<input type="checkbox"/>
General:	Free of dirt (oil, corrosion etc.) on rail	<input type="checkbox"/>	<input type="checkbox"/>
	Other damage: _____		
General			
	Resting platform in place and fixed	<input type="checkbox"/>	<input type="checkbox"/>
	All hardware in place and torqued	<input type="checkbox"/>	<input type="checkbox"/>
	Labels and markings legible	<input type="checkbox"/>	<input type="checkbox"/>
	Other damage: _____		
Is the Ladder safe for use: <input type="checkbox"/> YES <input type="checkbox"/> NO Is the Rail safe for use: <input type="checkbox"/> YES <input type="checkbox"/> NO			
If Rail use is prohibited mark "Is the Rail safe for use" as NO. In this case the Ladder must not be used either. Mark "Is the Ladder safe for use" as NO.			
These inspections may only be performed by AVANTI or by a competent person. At least every 12 months an inspection by an AVANTI fall protection technician or competent person shall be carried out. The inspection results must be entered in a test journal and filed for later reference.		Inspector's Signature	

Appendix D: Checklist /Visual test for the Runner

ISSUE DESCRIPTION		PASS	FAIL	VISUAL TEST		ISSUE DESCRIPTION		PASS	FAIL	VISUAL TEST	
1	Is the runner's body free from corrosion, deformation and other damage?					7	Is the Carabiner and shackle free from marks, deformities, wear or traces of corrosion?				
COMMENTS						COMMENTS					
2	Is the break lever free from corrosion, deformation and other damage?					8	Is the locking mechanism of the Carabiner functioning good? Is the return spring and articulation of the gate working properly?				
COMMENTS						COMMENTS					
3	Are the 4 rivets securely attached to the middle plate? Is the middle plate free of damage or bending?					9	Is the shock absorber's black strap completely covered in the locking pin?				
COMMENTS						COMMENTS					
4	Are the 2 rivets attached securely to the aluminum serial plate?					10	Is the runner easy to close and open? Does it has a frictionless operation?				
COMMENTS						COMMENTS					
5	Are the synthetic guides in place and free from bruises and marks? Is the blank aluminum plate present and sitting tight?					11	Does the break lever move smoothly up and down? Are both the spring and shackle securely attached?				
COMMENTS						COMMENTS					
6	Is the shock absorber pack in normal shape and free from cuts, burns, seams visible signs of wear?					12	Is the runner sliding smoothly on the rail?				
COMMENTS						COMMENTS					

Appendix E: Registration form for the Runner

[illegible]

