

AN0009: Getting Started with EFM32, EZR32, and EFM32 Gemstones




This application note introduces the software examples, libraries, documentation, and software tools available for EFM32, EZR32, and EFM32 Gemstones.

In addition to providing a basic introduction to the tools available for these devices, this document includes several basic firmware exercises to familiarize the reader with the Starter Kit and Development Kit hardware, the emlib firmware library, and the Simplicity Studio software tools.

Note that this document focuses on the MCU portion of the devices. For wireless products (EZR32), see the additional wireless getting started information available in the user guide specifically for the product. More information on the hardware for any product can be found in the kit user guide. More information about Simplicity Studio in general can be found in AN0822: "Simplicity Studio™ User Guide". Application notes can be found on the Silicon Labs website (www.silabs.com/32bit-appnotes) or using the [Application Notes] tile in Simplicity Studio.

KEY POINTS

- Simplicity Studio contains everything needed to develop with EFM32, EZR32, and EFM32 Gemstones.
- Things you will learn:
 - Basic register operation
 - Using emlib functions
 - Blinking LEDs and reading buttons
 - LCD controller
 - Energy Modes
 - Real-Time Counter operation

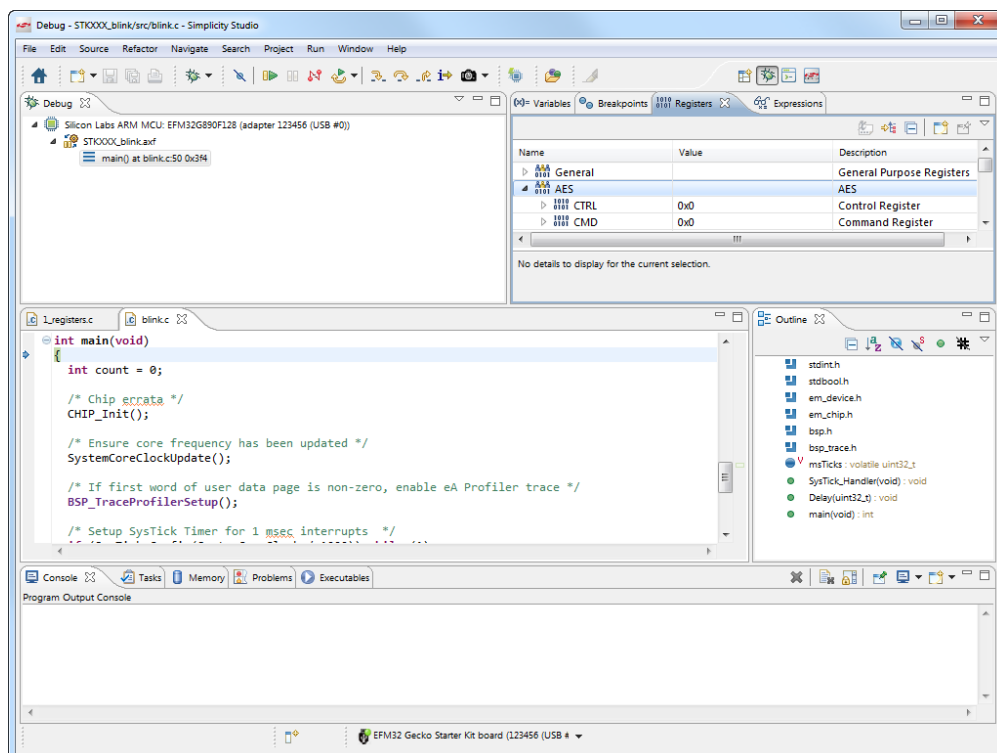

1. Introduction

1.1 Prerequisites

The examples in this application note require access to a supported Silicon Labs device. Supported devices include the EFM32, EZR32, and EFM32 Gemstones kit (either Starter or Development). Before working on this tutorial, ensure a compatible IDE is available by either:

- installing Simplicity Studio from Silabs.com (<http://www.silabs.com/simplicity>), or
- if IAR is preferred, install the latest Segger J-Link drivers to support the kit (<https://www.segger.com/jlink-software.html>)

In Simplicity Studio, ensure that all the available packages are installed and up to date by clicking on the **[Update Software]** button at the top-right of the main window:



Note: While Simplicity Studio includes a fully-functional integrated IDE, it also supports some third party IDEs, including IAR. For this reason, it is recommended to install Simplicity Studio regardless of the preferred IDE for easy access to these examples as well as the full suite of features provided to facilitate development of EFM32, EZR32, and EFM32 Gemstones solutions.

1.2 How to Use this Application Note

The source code for this application note is placed in individual folders named after the kit for which each example is intended.

The easiest way to access the example source code and projects is through the **[Application Notes]** tile in Simplicity Studio. Simply click this tile to open the **[Application Notes]** dialog:

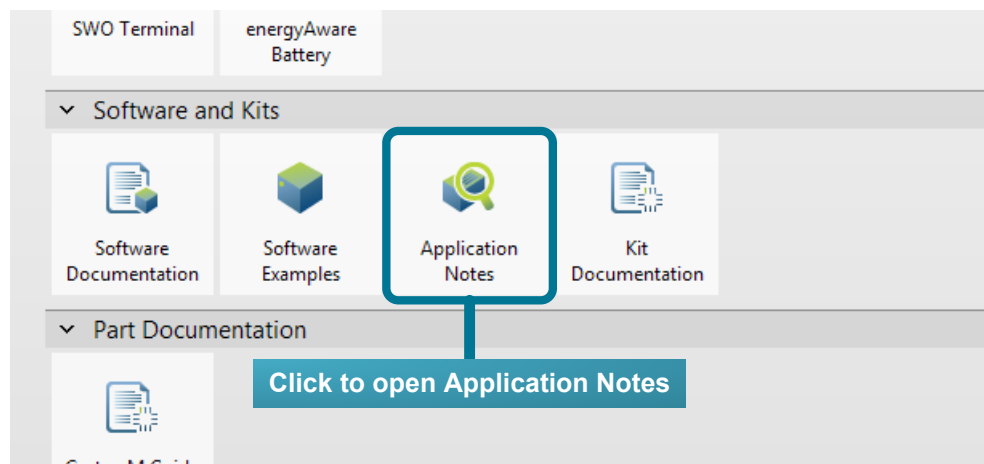


Figure 1.1. Application Notes Tile in Simplicity Studio

Within the **[Application Notes]** dialog, navigate to and select the **[AN0009 Getting Started with EFM32]** entry, then click the **[Import Project...]** button to view the list of available example projects. Use the project names to identify examples compatible with the kit and select one to import that project into the IDE (by default, this is the Simplicity Studio IDE, but this configuration can be changed to an alternative IDE, if desired).

Alternatively, projects for multiple IDEs are stored in separate folders (*iar*, *arm*, etc.) in the filesystem that hosts these examples, accessible with the **[Open Folder]** button in the Simplicity Studio Applications Notes dialog. These projects can be manually loaded in the appropriate IDE. All of the IAR projects are also collected in one common workspace called *efm32.eww*. Since the projects are slightly different for the various kits, make sure to open the project that is prefixed with the name of the kit in use.

Note: The code examples in this application note are not complete, and the reader is required to fill in small pieces of code throughout the exercises. A completed code file (postfixed with **_solution.c*) also exists for each example.

2. Register Operation

This chapter explains the basics of how to write C-code for the EFM32 devices using the defines and library functions supplied in the [CMSIS] and [emlib] software libraries.

2.1 Address

The EFM32, EZR32, and EFM32 Gemstones devices consist of several different types of peripherals (CMU, RTC, ADC...). Some peripherals in the device exist only as one instance, like the Clock Management Unit (CMU). Other peripherals like Timers (TIMERn) exist as several instances and the name is postfixed by a number (n) denoting the instance number. Usually, two instances of a peripheral are identical, but are placed in different regions of the memory map. However, some peripherals have a different feature set for each of the instances. For example, USART0 can have an IrDA interface, while USART1 cannot. Such differences will be explained in the device data sheet and the reference manual.

Each peripheral instance has a dedicated address region which contains registers that can be accessed by read/write operations. The peripheral instances and memory regions are found in the device data sheet. The starting address of a peripheral instance is called the base address. The reference manual for the device series contains a complete description of the registers within each peripheral. The address for each register is given as an offset from the base address for the peripheral instance.

2.2 Register Description

The EFM32, EZR32, and EFM32 Gemstones devices use a 32-bit bus for write/read access to the peripherals, and each register in a peripheral contains 32 bits, numbered 0-31. Unused bits are marked as reserved and should not be modified. The bits used by the peripheral can either be single bits (e.g. OUTEN bit in the figure below) or grouped together in bitfields (e.g. PRSSEL bitfield in the figure below). Each bitfield is described with the following attributes:

- Bit position
- Name
- Reset value
- Access type
- Description

24.5.1 IDAC_CTRL - Control Register

Offset	Bit Position																																					
0x000	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0						
Reset									0x0								0		0	0	0									0x00					0	0	0	0
Access									RW								RW		RW	RW	RW									RW					RW	RW	RW	RW
Name									PRSSEL								OUTENPRS		APORTMASTERDIS	EM2DELAY	PWRSEL									APORTOUTSEL					OUTEN	MINOUTTRANS	CURSINK	EN

Bit	Name	Reset	Access	Description
31:24	Reserved	<i>To ensure compatibility with future devices, always write bits to 0. More information in 1.2 Conventions</i>		

23:20 PRSSEL 0x0 RW **IDAC Output PRS channel Select**
 Selects which PRS channel to use, when OUTENPRS is set.

Value	Mode	Description
0	PRSCH0	PRS Channel 0 selected.
1	PRSCH1	PRS Channel 1 selected.
2	PRSCH2	PRS Channel 2 selected.
3	PRSCH3	PRS Channel 3 selected.
4	PRSCH4	PRS Channel 4 selected.
5	PRSCH5	PRS Channel 5 selected.
6	PRSCH6	PRS Channel 6 selected.
7	PRSCH7	PRS Channel 7 selected.
8	PRSCH8	PRS Channel 8 selected.
9	PRSCH9	PRS Channel 9 selected.
10	PRSCH10	PRS Channel 10 selected.
11	PRSCH11	PRS Channel 11 selected.

Figure 2.1. Example Register Description

2.3 Access Types

Each register has a set access type for all of the bit fields within that register. The access types describes the reaction to read or write operation to the bit field. The different access types found for the registers in the devices are described in the table below.

Table 2.1. Register Access Types

Access Type	Description
R	Read only. Writes are ignored
RW	Readable and writable
RW1	Readable and writable. Only writes to 1 have effect
W1	Read value undefined. Only writes to 1 have effect
W	Write only. Read value undefined.
RWH	Readable, writable, and updated by hardware

2.4 CMSIS and emlib

The Cortex Microcontroller Software Interface Standard (CMSIS) is a common coding standard for all ARM Cortex devices. The CMSIS library provided by Silicon Labs contains header files, defines (for peripherals, registers and bitfields), and startup files for all devices. In addition, CMSIS also includes functions that are common to all Cortex devices, like interrupt handling, intrinsic functions, etc. Although it is possible to write to registers using hard coded address and data values, it is recommended to use the defines to ensure portability and readability of the code.

In order to use these defines, projects must include `em_device.h` in the c-file. This is a common header file for all EFM32, EZR32, and EFM32 Gemstones devices. Within this file, the header file content for the appropriate device is included in the project builds according to the preprocessor symbols defined for the project.

To simplify the programming of EFM32, EZR32, and EFM32 Gemstones devices, Silicon Labs developed and maintains a complete C-function library called [**emlib**] that provides efficient, clear, and robust access to and control of all peripherals and core functions in the device. This library resides within the `em_xxx.c` (e.g. `em_dac.c`) and `em_xxx.h` files in the `emlib` folder.

In the source files included with this application note, the `em_chip.h` is included in each and a call to `CHIP_Init()` exists near the beginning of every `main()` function. Like the content of `em_device.h`, the actions taken within the `CHIP_Init()` function depends on the specific part in use, but will include correcting for known errata and otherwise ensuring consistent behavior across devices. For this reason, do not run any code in the main function prior to running the `CHIP_Init()` function.

2.4.1 CMSIS Documentation

Complete Doxygen documentation for the EFM32, EZR32, and EFM32 Gemstones [**CMSIS**] library and [**emlib**] is available via the [**Software Documentation**] tile in the [**Software and Kits**] grouping of Simplicity Studio main page. This documentation is also available on the Silicon Labs website at <http://devtools.silabs.com/dl/documentation/doxygen/>.

2.4.2 Peripheral Structs

In the emlib header files, the register defines for each peripheral type are grouped in structs as defined in the example below:

```
typedef struct
{
  __IO uint32_t CTRL;
  __I uint32_t STATUS;
  __IO uint32_t CH0CTRL;
  __IO uint32_t CH1CTRL;
  __IO uint32_t IEN;
  __I uint32_t IF;
  __O uint32_t IFS;
  __O uint32_t IFC;
  __IO uint32_t CH0DATA;
  __IO uint32_t CH1DATA;
  __O uint32_t COMBDATA;
  __IO uint32_t CAL;
  __IO uint32_t BIASPROG;
} DAC_TypeDef;
```

Recall that a register address consists of a base address for the peripheral instance plus an additional offset. The peripheral structs in [emlib] simplify writing to a register and abstract away these underlying addresses and offsets. Hence, writing to CH0DATA, in the DAC0 peripheral instance can then be done like this:

```
DAC0->CH0DATA = 100;
```

Similarly, reading a register can be done like this:

```
myVariable = DAC0->STATUS;
```

2.4.3 Bit Field Defines

Every device has relevant bit fields defined for each peripheral. These definitions are found within the `efm32xx_xxx.h` (e.g. `efm32tg_dac.c.h`) files and are automatically included with the appropriate [emlib] peripheral header file.

```
#define _DAC_CTRL_REFRSEL_SHIFT          20
#define _DAC_CTRL_REFRSEL_MASK          0x3000000UL
#define _DAC_CTRL_REFRSEL_DEFAULT       0x00000000UL
#define _DAC_CTRL_REFRSEL_8CYCLES       0x00000000UL
#define _DAC_CTRL_REFRSEL_16CYCLES      0x00000001UL
#define _DAC_CTRL_REFRSEL_32CYCLES      0x00000002UL
#define _DAC_CTRL_REFRSEL_64CYCLES      0x00000003UL
#define DAC_CTRL_REFRSEL_DEFAULT         (_DAC_CTRL_REFRSEL_DEFAULT << 20)
#define DAC_CTRL_REFRSEL_8CYCLES         (_DAC_CTRL_REFRSEL_8CYCLES << 20)
#define DAC_CTRL_REFRSEL_16CYCLES        (_DAC_CTRL_REFRSEL_16CYCLES << 20)
#define DAC_CTRL_REFRSEL_32CYCLES        (_DAC_CTRL_REFRSEL_32CYCLES << 20)
#define DAC_CTRL_REFRSEL_64CYCLES        (_DAC_CTRL_REFRSEL_64CYCLES << 20)
```

For every register bitfield, associated shift, mask and default value bit fields are also defined.

```
#define DAC_CTRL_DIFF                     (0x1UL << 0)
#define _DAC_CTRL_DIFF_SHIFT              0
#define _DAC_CTRL_DIFF_MASK              0x1UL
#define _DAC_CTRL_DIFF_DEFAULT            0x00000000UL
#define DAC_CTRL_DIFF_DEFAULT             (_DAC_CTRL_DIFF_DEFAULT << 0)
```

2.4.4 Register Access Examples

When setting a bit in a control register, it is important to make sure firmware does not unintentionally clear other bits in the register. To ensure this, the mask with the bit firmware needs to set can be OR'ed with the original contents, as shown in the example below:

```
DAC0->CTRL = DAC0->CTRL | DAC_CTRL_LPFEN;
```

A more compact version is:

```
DAC0->CTRL |= DAC_CTRL_LPFEN;
```

Clearing a bit is done by ANDING the register with a value with all bits set except for the bit to be cleared:

```
DAC0->CTRL = DAC0->CTRL & ~DAC_CTRL_LPFEN; // or
DAC0->CTRL &= ~DAC_CTRL_LPFEN;
```

When setting a new value to a bit field containing multiple bits, a simple OR function will not do, since this will risk that the original bit field contents OR'ed with the mask will give a wrong result. Instead, make sure to clear the entire bit field (and only the bit field) before ORing in the new value:

```
DAC0->CTRL = (DAC0->CTRL & ~_DAC_CTRL_REFRSEL_MASK) | DAC_CTRL_REFRSEL_16CYCLES;
```

2.4.5 Grouped Registers

Some registers are grouped together within each peripheral. An example of such a group is the registers associated with each GPIO port, like the Data Out Register (DOUT) in the figure below. Each GPIO port (A, B, C, ...) contains a DOUT register and the description below is common for all of these. The x in GPIO_Px_DOUT indicates the port wild card.

27.5.4 GPIO_Px_DOUT - Port Data Out Register

Offset	Bit Position																															
0x00C	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Reset																	0x0000															
Access																	RW															
Name																	DOUT															

Bit	Name	Reset	Access	Description
31:16	Reserved	<i>To ensure compatibility with future devices, always write bits to 0. More information in 1.2 Conventions</i>		
15:0	DOUT	0x0000	RW	Data Out Data output on pin.

Figure 2.2. Grouped Registers in GPIO

In the CMSIS defines the port registers are grouped in an array P[x]. When using this array, we must index it using numbers instead of the port letters (A=0, B=1, C=2, ...). Accessing the DOUT register for port C can be done like this:

```
GPIO->P[2].DOUT = 0x000F;
```

3. Example 1 — Register Operation

This example will show how to write and read registers using the CMSIS defines. This tutorial also shows how to observe and manipulate register contents through the debugger in Simplicity Studio or IAR Embedded Workbench. While the examples are shown only for Simplicity Studio and IAR, the tasks can also be completed in other supported IDEs.

For Simplicity Studio:

1. Connect the kit to the PC.
2. Open Simplicity Studio and click the **[Refresh detected hardware]** button on the left. Once the kit appears, click on the kit.
3. Click the **[Application Notes]** tile.
4. Search for **[AN0009]** and click the document in the list, then click the **[Import Project...]** button.
5. Select the **[<kit_name>_1_registers.slsproj]** option in the dialog and click **[OK]**.
6. Double-click on the `1_registers.c` file to open it in the editor view. There's a marker where custom code should be added.

For IAR:

1. Open up the efm32 workspace (`an\an0009_efm32_getting_started\iar\efm32.eww`).
2. Select the **[<kit_name>_1_register]** project in IAR EW.
3. In the main function in the `1_registers.c` (inside Source Files), there's a marker where custom code should be added.

3.1 Step 1 — Enable Timer Clock

In this example, we are going to use `TIMER0`. By default the 14 MHz RC oscillator is running, but all peripheral clocks are disabled, so we must turn on the clock for `TIMER0` before we use it. If we look in the CMU chapter of the reference manual, we see that the clock to `TIMER0` can be switched on by setting the `TIMER0` bit in the `HFPERCLKEN0` register in the CMU peripheral.

3.2 Step 2 — Start Timer

Starting the Timer is done by writing a 1 to the `START` bit in the `CMD` register in `TIMER0`.

3.3 Step 3 — Wait for Threshold

Create a while-loop that waits until the counter is 1000 before proceeding.

3.4 Observation

For Simplicity Studio, make sure the [**<kit_name>_1_register**] project is active by clicking the project in the left-hand [**Project**] view. Then, press the [**Debug**] button to automatically build and download the code to the device. Click the [**Registers**] view and find the STATUS register in TIMER0. After expanding the register, notice that the RUNNING bit set to 0.

In the code view, double-click the left pane to place a breakpoint before firmware starts the timer and click the [**Resume**] button. Then, watch the RUNNING bit get set to 1 in the [**Registers**] view when single stepping over the expression using the [**Step Over**] button. Continue to single step and note that the content of the CNT registers is increasing. Try writing a different value to the CNT register by entering it directly in the [**Registers**] view.

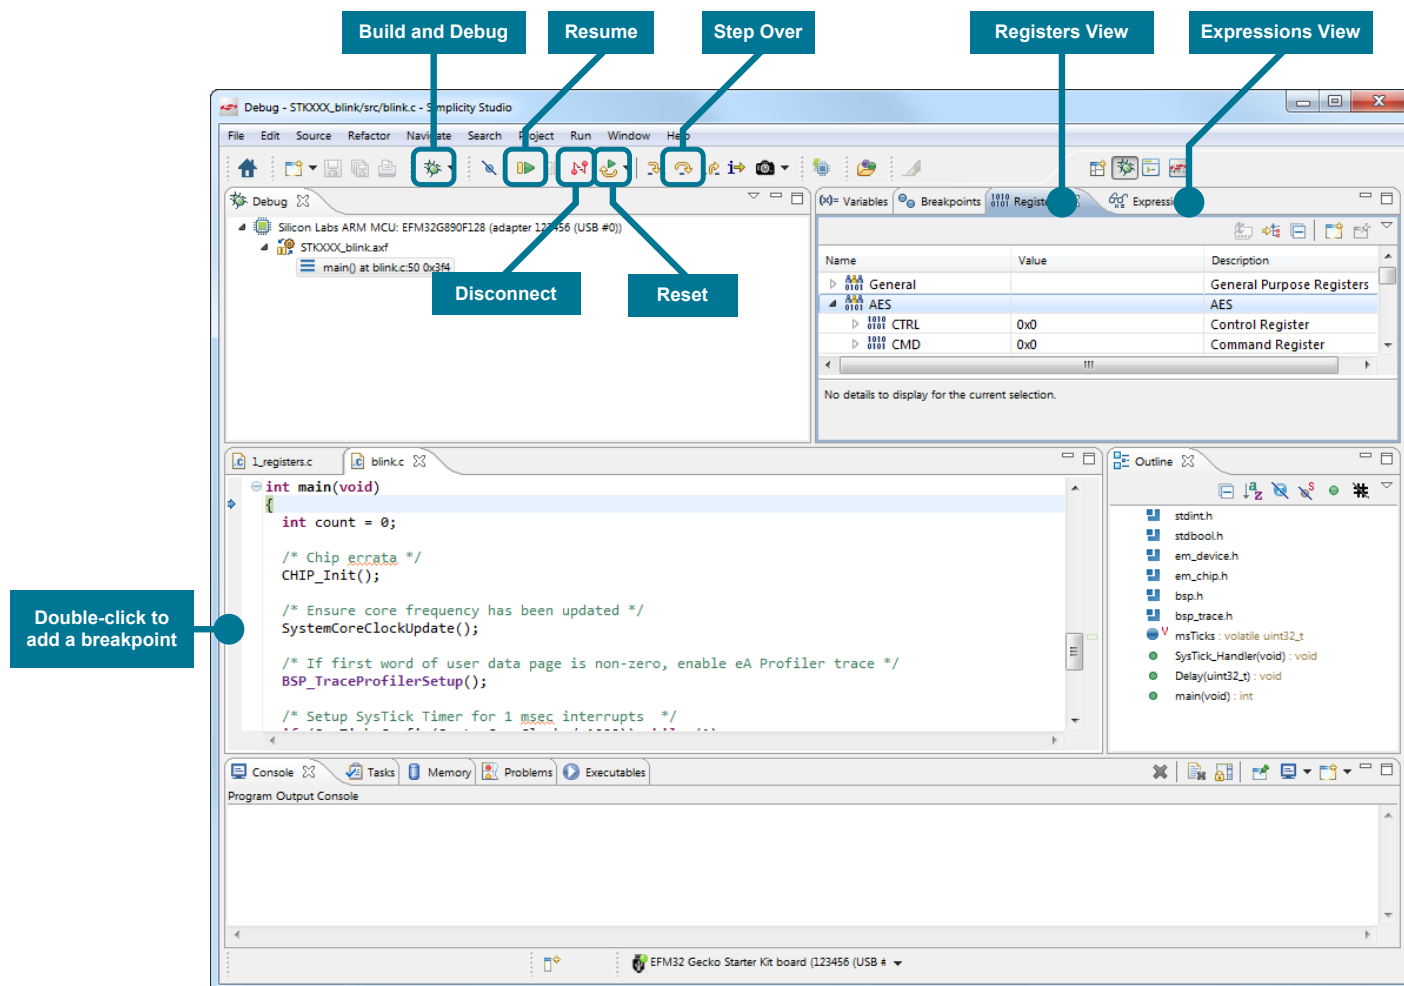


Figure 3.1. Debug View in Simplicity Studio

For IAR, make sure the <kit_name>_1_register project is active by pressing the corresponding tab at the bottom of the Workspace window. Then, press the Download & Debug button and go to View->Register and find the STATUS register in TIMER0. After expanding the register, notice that the RUNNING bit is set to 0.

Place the cursor in front of the line where firmware starts the timer and press [**Run to Cursor**]. Then, watch the RUNNING bit get set to 1 in the Register View when clicking the [**Single Step**] button to move over the expression. Continue to click the [**Single Step**] button to see the content of the CNT registers increasing. Try writing a different value to the CNT register by entering it directly in the Register View.

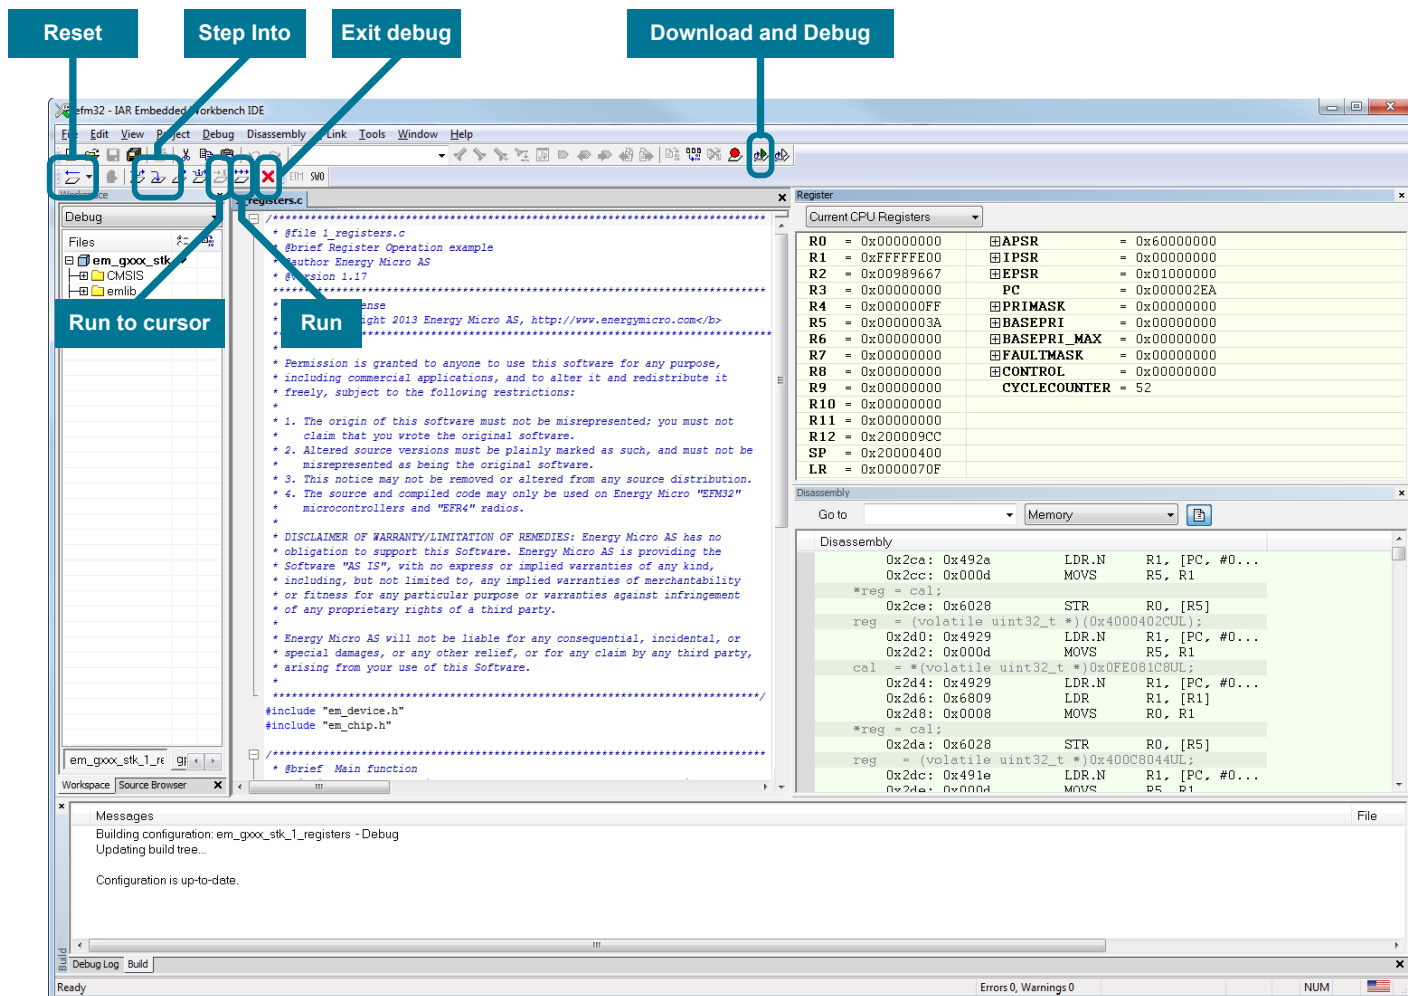


Figure 3.2. Debug View in IAR

4. Example 2a — Blinking LEDs with an STK

Since accessing the LEDs is done differently for the Development Kits and the Starter Kits, this example is split into two parts: 2a (for STK), and 2b (for DK). In this example for the STKs, the aim is to use the GPIO pins to light up the LEDs on the STK and change the LED configuration every time a button is pressed. Instead of accessing the registers directly, use the emlib functions to configure the peripherals.

The starting The AN0009 application note includes a [`<kit_name>_2_leds`] example in Simplicity Studio, and the IAR efm32 workspace contains a project called `<kit_name>_2_leds`, which will be used in this example. The emlib C-files are included in the project. The corresponding header files are included at the beginning of the C-files.

For details on which emlib functions exist and how to use them, open the API documentation through through Simplicity Studio using the [**Software Documentation**] tile (or by going to <http://devtools.silabs.com/dl/documentation/doxygen/>). After clicking on the emlib link for the correct device series (Gecko, Tiny Gecko etc.), open up [**Modules->EM_Library**] and select the CMU peripheral. Find a list of functions for this peripheral by scrolling down to the [**Functions**] section. These functions can be used to to easily operate the Clock Management Unit.

The screenshot shows the 'EM_Library' section of the EFM32 Silicon Labs EMLIB Peripheral Library. The 'CMU' module is selected, and the 'Functions' section is expanded to show a list of functions for the Clock Management Unit. The functions listed are:

Return Type	Function Name	Parameters	Description
void	CMU_ClockEnable	(CMU_Clock_TypeDef clock, bool enable)	Enable/disable a clock.
uint32_t	CMU_ClockFreqGet	(CMU_Clock_TypeDef clock)	Get clock frequency for a clock point.
CMU_ClkDiv_TypeDef	CMU_ClockDivGet	(CMU_Clock_TypeDef clock)	Get clock divisor/prescaler.
CMU_Select_TypeDef	CMU_ClockSelectGet	(CMU_Clock_TypeDef clock)	Get currently selected reference clock used for a clock branch.
void	CMU_ClockDivSet	(CMU_Clock_TypeDef clock, CMU_ClkDiv_TypeDef div)	Set clock divisor/prescaler.
void	CMU_ClockSelectSet	(CMU_Clock_TypeDef clock, CMU_Select_TypeDef ref)	Select reference clock/oscillator used for a clock branch.
CMU_HFRCOBand_TypeDef	CMU_HFRCOBandGet	(void)	Get HFRCO band in use.
void	CMU_HFRCOBandSet	(CMU_HFRCOBand_TypeDef band)	Set HFRCO band and the tuning value based on the value in the calibration table made during production.
void	CMU_HFRCOStartupDelaySet	(uint32_t delay)	Set the HFRCO startup delay.

Figure 4.1. Documentation for the CMU-specific emlib Functions

4.1 Step 1 — Turn on GPIO clock

In the list of CMU functions we find the following function to turn on the clock to the GPIO:

```
void CMU_ClockEnable(CMU_Clock_TypeDef clock, bool enable)
```

If we click on the function, we are shown a description of how to use the function. Clicking on the `[CMU_Clock_TypeDef]` link goes to a list of the allowed enumerators for the clock argument. To turn on the GPIO, add the following:

```
CMU_ClockEnable(cmuClock_GPIO, true);
```

The screenshot shows the Silicon Labs EFM32 emlib Peripheral Library documentation. On the left is a tree view of modules, with 'GPIO' selected. The main content area displays the function signature: `void CMU_ClockEnable (CMU_Clock_TypeDef clock, bool enable)`. Below the signature, it states 'Enable/disable a clock.' and provides a general description: 'In general, module clocking is disabled after a reset. If a module clock is disabled, the registers of that module are not accessible and reading from such registers may return undefined values. Writing to registers of clock disabled modules have no effect. One should normally avoid accessing module registers of a module with a disabled clock.' A 'Note' section explains that enabling/disabling a LF clock requires synchronization into the low frequency domain. The 'Parameters' section lists `clock` (the clock to enable/disable) and `enable` (true to enable, false to disable). It also provides the definition location (line 1038 of `em_cmu.c`), references (`BITBAND_Peripheral()`, `CMU_ClockFreqGet()`, and `cmuClock_CORE`), and is referenced by `DMA_Init()`. At the bottom, there are links for 'Here is the call graph for this function:' and 'Here is the caller graph for this function:'.

Figure 4.2. CMU_ClockEnable Function Description

4.2 Step 2 — Configure GPIO Pins for LEDs

The User Manual for a kit is available in Simplicity Studio using the `[Kit Documentation]` tile. This document describes the usage of all the pins, including the user LED(s). These LED(s) are connected as follows on several example kits:

- EFM32-Gxxx-STK: 4 LEDs on port C, pins 0-3
- EFM32TG-STK3300: 1 LED on port D, pin 7
- EFM32GG-STK3700: 2 LEDs on port E, pins 2-3
- EFM32ZG-STK3200: 2 LEDs on port C, pins 10-11

Consult the user guide for information specific to the kit in use.

Looking into the available functions for the GPIO, the following function can be used to configure the mode of the GPIO pins:

```
void GPIO_PinModeSet(GPIO_Port_TypeDef port, unsigned int pin,
    GPIO_Mode_TypeDef mode, unsigned int out)
```

Use this function to configure the LED pin(s) as Push-Pull outputs with the initial DOUT value set to 0.

4.3 Step 3 — Configure a GPIO Pin for a Button

Look at the User Manual for the STK to find where Push Button 0 (PB0) is connected on the kit in use. This button is connected on several example kits as follows:

- EFM32-Gxxx-STK: Port B, pin 9
- EFM32TG-STK3300: Port D, pin 8
- EFM32GG-STK3700: Port B, pin 9
- EFM32ZG-STK3200: Port C, pin 8

Configure this pin as an input to be able to detect the button state.

4.4 Step 4 — Change LED Status when a Button is Pressed

Write a loop that toggles the LED(s) every time PB0 is pressed. Make sure to not only check that the button is pressed, but also that it is released, so that the LED(s) only toggle once for each button press. PB0 is pulled high by an external resistor.

4.5 Extra Task — LED Animation

Experiment with creating different blinking patterns on the LED(s), like fading and running LEDs (if there are multiple LEDs). Because the device typically runs in the 14 MHz range by default, add a delay function to be able to see the LEDs changing in real-time. Using the code for TIMER0 in Example 1, create the following function:

```
void Delay(uint16_t milliseconds)
```

Use the PRESC bitfield in TIMER0_CTRL to reduce the clock frequency to a desired value.

5. Example 2b — Blinking LEDs with a DK

Use a Development Kit to run this example. The aim is to use the GPIO pins to light up the LEDs on the DK and change the LED configuration every time the joystick is moved. The AN0009 application note includes a [`<kit_name>_2_leds`] example in Simplicity Studio, and the IAR efm32 workspace contains a project called `<kit_name>_2_leds`, which will be used in this example.

5.1 Board Support Library

The Development Kits use a board controller to configure the functions of the development kit, including lighting the user leds and reading buttons/joystick. These functions can be controlled by the MCU device by communicating with the board controller via either SPI or External Bus Interface. The device can then configure the registers in the board controller to set up the functions wanted. The Board Support Library includes drivers for handling access to the DK. An initialize function must be run first to configure either the EBI or the SPI connection:

```
void DVK_init(void);
```

Devices with LCD support will automatically be set up with SPI access, while devices without LCD support will use EBI by default. The yellow lights to the left of the MCU board on the DK indicate which connection is active.

Note that the connection to the board controller will occupy the EBI or the USART2 (SPI) on the device as well as the pin connections for these. These resources can not be used for other purposes simultaneously. As the DVK functions also take care of all the settings needed for the DK connection like GPIO settings etc, no other emlib functions are necessary.

5.2 Step 1 — Change LED Status when the Joystick is Moved

Write a while loop that increases a value every time the joystick is moved and display this value on the LEDs. The 16 user LEDs on the DK are configured by the following function:

```
void DVK_setLEDs(uint16_t leds);
```

Look inside `dvk.h` for a function to read the joystick status, as well. Please note that by default the buttons and joystick on the DK are used to control the menu on the TFT display. To use the buttons and joystick with the device, press the AEM button. The button/joystick status is shown in the upper right hand corner of the TFT display.

5.3 Extra Task — LED Animation

Experiment with creating different moving patterns on the LEDs, like fading and running LEDs. Because the device runs at ~14 MHz as default, a delay function is needed to be able to see the LEDs changing in real-time. Using the code from `TIMER0` in Example 1 to create the following function:

```
void Delay(uint16_t milliseconds)
```

Use the `PRESC` bitfield in `TIMER0_CTRL` to reduce the timer clock frequency to a desired value.

6. Example 3a — Segment LCD Controller

This example requires either an STK or a DK with a Segment LCD. This example will demonstrate how to use the Segment LCD controller and display information on the LCD display. The LCD controller includes an autonomous animation feature which will also be demonstrated. The AN0009 application note includes a [`<kit_name>_3_lcd`] example in Simplicity Studio, and the IAR efm32 workspace contains a project called `<kit_name>_3_lcd`, which will be used in this example.

6.1 Step 1 — Initialize the LCD controller

The LCD controller driver is located in the development kit and starter kit library. First, run the initialize function found in `segmentlcd.h` to set up the LCD controller.

6.2 Step 2 — Write to the LCD display

By default, all LCD segments are switched off after initialization. The LCD controller driver includes several functions to control the different segment groups on the display. A few examples are:

```
void SegmentLCD_Number(int value)
void SegmentLCD_Write(char *string)
void SegmentLCD_Symbol(lcdSymbol s, int on);
```

Experiment with putting custom text, numbers, or symbols on the display and try to make things move about a bit. Use the Delay function from Example 2. A Delay function can also be found in the solution file.

6.3 Step 3 — Animate Segments

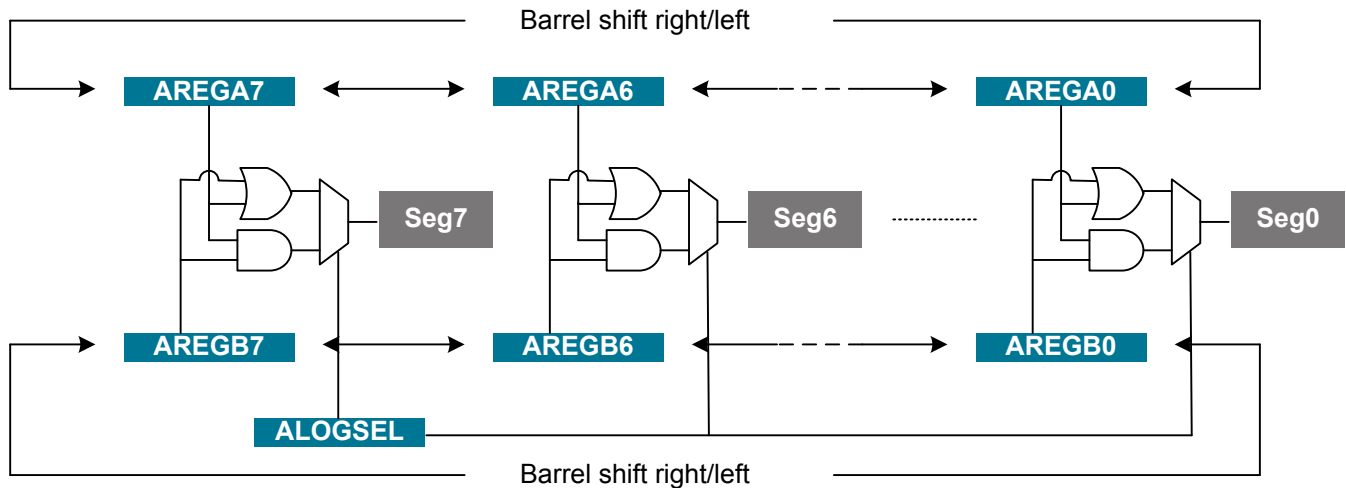


Figure 6.1. Animation Function

The LCD controller contains an animation feature which can animate up to 8 segments (8-segment ring on the LCD display) autonomously. The data displayed in the animated segments is a logic function (AND or OR) of two register bits for each segment. The two register arrays (LCD_AREGA, LCD_AREGB) can then be set up to be barrelshifted either left or right every time the Frame Counter overflows. The Frame Counter can be set up to overflow after a configurable number of frames. This is not covered by the LCD driver, so firmware has to manipulate the LCD registers by doing direct register writes. The following registers must be set up:

LCD_BACTRL:

- Set Frame Counter Enable bit
- Configure Frame Counter period by setting the FCTOP field
- Set Animation Enable bit
- Select either AND or OR as logic function
- Configure AREGA and AREGB shift direction
- For the STK3700, also set the ALOC bit to SEG8TO15

LCD_AREGA/LCD_AREGB:

- Write data used for animation to these registers.

Play around a bit with the configuration of the animated segments and watch the results on the LCD display.

7. Example 3b — Memory LCD

This example requires an STK equipped with a Memory LCD (e.g. Happy Gecko, Zero Gecko, or Pearl Gecko). This example shows how to configure the Memory LCD driver and write text on the Memory LCD. The software project called `<kit_name>_3_lcd` will be used in this example.

The Board Support Package for the STK includes a driver for the memory LCD. Documentation for this driver is found in the **[Kit BSP's and Drivers]** section (scroll to the bottom) under **[Software Documentation]** in Simplicity Studio.

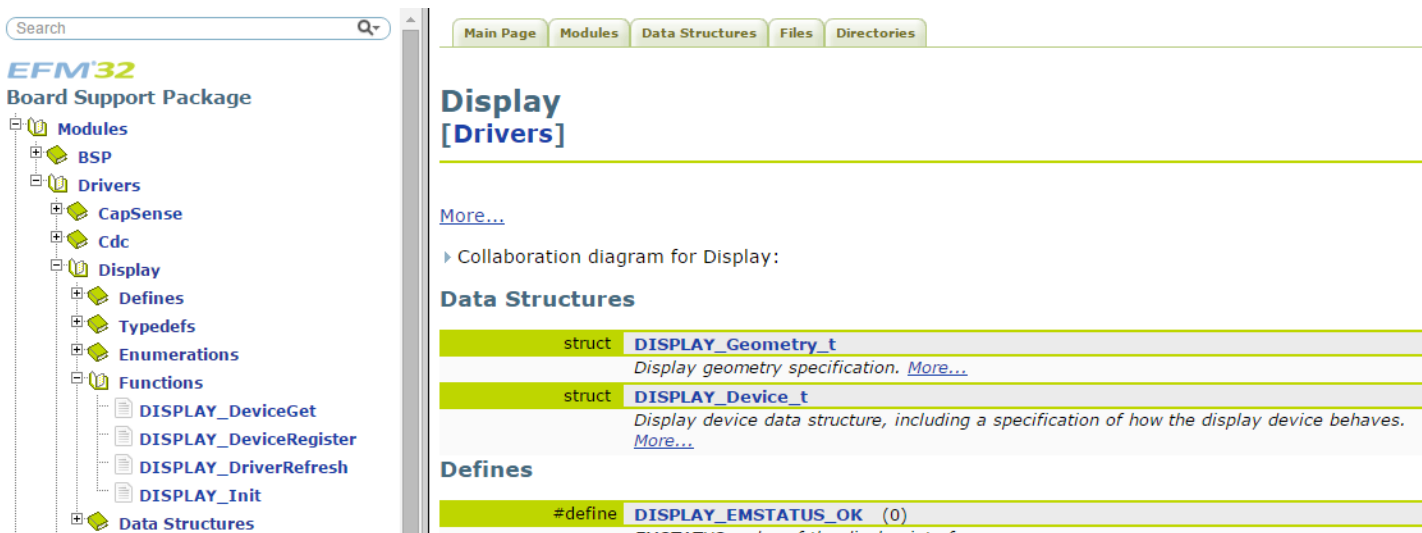


Figure 7.1. BSP Documentation for the Display Driver

7.1 Step 1 — Configure the Display Driver

First, initialize the DISPLAY driver with `DISPLAY_Init()`.

The Board Support Package includes `TEXTDISPLAY`, which is an interface for printing text to a DISPLAY device. Use `TEXTDISPLAY_New()` to create a new `TEXTDISPLAY` interface.

7.2 Step 2 — Write Text to the Memory LCD

`TEXTDISPLAY` implements basic functions for writing text to the Memory LCD. Try `TEXTDISPLAY_WriteString()` and `TEXTDISPLAY_WriteChar()`.

8. Example 4 — Energy Modes

This example shows how to enter different Energy Modes (EMx) and wake up using an RTC interrupt. The project called <kit_name>_4_energymodes is used in this example.

8.1 Advanced Energy Monitor with a DK

The Development Kits includes current measurement of the VMCU power domain, which is used to power the device and the LCD display on the MCU board. The VMCU domain is also available on the prototyping board, so other external components in the prototype can be added to the measurements. The current measurement can be monitored real-time on the TFT display on the main board and also on a PC using the Energy Profiler available in Simplicity Studio.

8.2 Advanced Energy Monitor with STK

The Starter Kits includes current measurement of the VMCU power domain, which is used to power the device and the LCD display in addition to other components in the application part of the starter kit. The real-time current measurement can be monitored on a PC using the Energy Profiler available in Simplicity Studio.

8.3 Step 1 — Enter EM1

To enter EM1, execute a Wait-For-Interrupt instruction. An intrinsic function for this (part of CMSIS) is shown below:

```
__WFI();
```

After executing this instruction, observe that the current consumption drops.

8.4 Step 2 — Enter EM2

Entering EM2 is also done by executing the WFI-instruction, except with the SLEEPDEEP bit in the SCB_SCR register also set, and with a low frequency oscillator enabled. To enter EM2, first enable a low frequency oscillator (either LFRCO or LFXO) before going to deep sleep. In this example, enable the LFRCO and wait for it to stabilize by using the following emlib function:

```
void CMU_OscillatorEnable(CMU_Osc_Typedef osc, bool enable, bool wait)
```

Now, enter EM2 by setting SLEEPDEEP and executing the WFI-instruction:

```
SCB->SCR |= SCB_SCR_SLEEPDEEP_Msk;
__WFI();
```

In addition, the EMU emlib functions include functions for entering Energy Modes, which firmware can use instead of setting the SLEEPDEEP bit and executing the WFI-instruction manually:

```
void EMU_EnterEM2(bool restore)
```

Note: When in an active debug session, the device will not be allowed to go below EM1. To measure the current consumption in EM2, end the debugging session and reset the device with the reset button on the MCU board/STK.

8.5 Step 3 — Enter EM3

To enter EM3, first disable all low frequency oscillators before going to deep sleep (which is accomplished by using the same technique as for EM2). Disable the LFRCO originally enabled in Step 2 by using the following emlib function:

```
void CMU_OscillatorEnable(CMU_Osc_TypeDef osc, bool disable, bool wait)
```

Now, enter EM3 by setting SLEEPDEEP and executing the WFI-instruction:

```
SCB->SCR |= SCB_SCR_SLEEPDEEP_Msk;
__WFI();
```

In addition, the EMU emlib functions include functions for entering Energy Modes, which firmware can use instead of disabling LF oscillators, setting the SLEEPDEEP bit, and executing the WFI-instruction manually:

```
void EMU_EnterEM3(bool restore)
```

Note: When in an active debug session, the device will not be allowed to go below EM1. To measure the current consumption in EM3, end the debugging session and reset the device with the reset button on the MCU board/STK.

8.6 Step 4 — Configure the Real-Time Counter

To wake up from EM2, configure the Real-Time Counter (RTC) to give an interrupt after 5 seconds. First, enable the clock to the RTC by using the CMU emlib functions. To communicate with Low Energy/Frequency peripherals like the RTC, also enable the clock for the LE interface (cmuClock_CORE).

The emlib initialization function for the RTC requires a configuration struct as an input:

```
void RTC_Init(const RTC_Init_TypeDef *init)
```

The struct is already declared in the code, but firmware must set the 3 parameters in the struct before using it with the `RTC_Init` function:

```
rtcInit.comp0Top = true;
```

Next, set compare value 0 (COMP0) in the RTC, which will set interrupt flag COMP0 when the compare value matches the counter value. Chose a value that will equal 5 seconds given that the RTC runs at 32.768 kHz:

```
void RTC_CompareSet(unsigned int comp, uint32_t value)
```

Now the RTC COMP0 flag will be set on a compare match, but the corresponding enable bit must also be set to generate an interrupt request from the RTC:

```
void RTC_IntEnable(uint32_t flags)
```

The RTC interrupt request is enabled on a comparator match, but to trigger an interrupt, the RTC interrupt request line must be enabled in the Cortex-M. The `IRQn_Type` to use is `RTC_IRQn`.

```
NVIC_EnableIRQ(RTC_IRQn);
```

An interrupt handler for the RTC is already included in the code (`RTC_IRQHandler`), but it is empty. In this function, add a function call to clear the RTC COMP0 interrupt flag. If firmware does not do this, the Cortex-M will be stuck in the interrupt handler, since the interrupt is never deasserted. Look for the RTC emlib function to clear the interrupt flag.


8.7 Extra Task — Segment LCD Controller in EM2

As an extra task, enable the LCD controller (assuming there's a Segment LCD on the kit in use) and write something on the LCD display before going to EM2. Use the segment animation from the previous example in EM2.

Note: This extra task does not apply to the kits that feature a Memory LCD instead of a segment LCD.

9. Summary

Congratulations! You now know the basics of Energy Friendly Programming, including register and GPIO operation, use of basic functions on the DK/STK and LCD, in addition to handling different Energy Modes in the device and the emlib/CMSIS functions. The **[Software Examples]** tile in Simplicity Studio contains several more examples to explore, and additional Application Notes are available using the **[Application Notes]** tile.

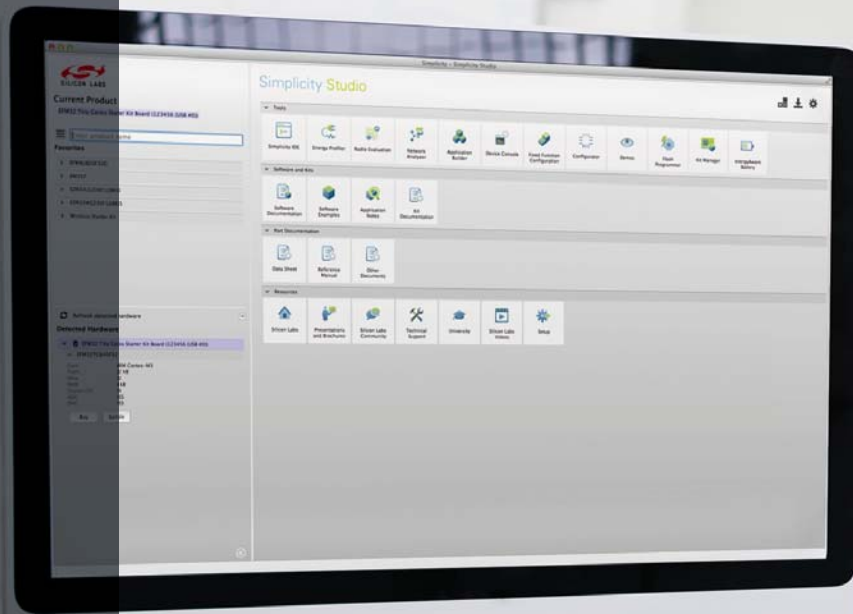

Simplicity Studio

One-click access to MCU and wireless tools, documentation, software, source code libraries & more. Available for Windows, Mac and Linux!



IoT Portfolio
www.silabs.com/IoT



SW/HW
www.silabs.com/simplicity



Quality
www.silabs.com/quality



Support and Community
community.silabs.com

Disclaimer

Silicon Laboratories intends to provide customers with the latest, accurate, and in-depth documentation of all peripherals and modules available for system and software implementers using or intending to use the Silicon Laboratories products. Characterization data, available modules and peripherals, memory sizes and memory addresses refer to each specific device, and "Typical" parameters provided can and do vary in different applications. Application examples described herein are for illustrative purposes only. Silicon Laboratories reserves the right to make changes without further notice and limitation to product information, specifications, and descriptions herein, and does not give warranties as to the accuracy or completeness of the included information. Silicon Laboratories shall have no liability for the consequences of use of the information supplied herein. This document does not imply or express copyright licenses granted hereunder to design or fabricate any integrated circuits. The products must not be used within any Life Support System without the specific written consent of Silicon Laboratories. A "Life Support System" is any product or system intended to support or sustain life and/or health, which, if it fails, can be reasonably expected to result in significant personal injury or death. Silicon Laboratories products are generally not intended for military applications. Silicon Laboratories products shall under no circumstances be used in weapons of mass destruction including (but not limited to) nuclear, biological or chemical weapons, or missiles capable of delivering such weapons.

Trademark Information

Silicon Laboratories Inc., Silicon Laboratories, Silicon Labs, SiLabs and the Silicon Labs logo, CMEMS®, EFM, EFM32, EFR, Energy Micro, Energy Micro logo and combinations thereof, "the world's most energy friendly microcontrollers", Ember®, EZLink®, EZMac®, EZRadio®, EZRadioPRO®, DSPLL®, ISOmodem®, Precision32®, ProSLIC®, SiPHY®, USBXpress® and others are trademarks or registered trademarks of Silicon Laboratories Inc. ARM, CORTEX, Cortex-M3 and THUMB are trademarks or registered trademarks of ARM Holdings. Keil is a registered trademark of ARM Limited. All other products or brand names mentioned herein are trademarks of their respective holders.



SILICON LABS

Silicon Laboratories Inc.
 400 West Cesar Chavez
 Austin, TX 78701
 USA

<http://www.silabs.com>