

# Gigaset DX800A all in one –

## New and updated functions

---

This document is a supplement to the user guide (full version) and the user guide for the Web configurator for the Gigaset DX800A all in one phone:

In the time since the user guides were completed, the functionality of this device has been increased. These changes are described in this document.

### Contents

<b>Overview of the new and updated functions</b> .....	<b>2</b>
<b>Description of new and updated functions</b> .....	<b>3</b>
Connecting a phone or a doorline to the FAX port .....	3
Answering machine:	
Recording two user specific announcements for the answer & record mode ....	6
Internal Hold Mode when making a call to several users (ISDN/VoIP) .....	7
Configuring an internal subscriber without a send connection .....	8
Changing the dialling mode, switching to tone dialling (analogue fixed line) ....	8
Delete functionality from a function key .....	9
Extended IP configuration via Web configurator .....	10
Further base settings via Web configurator .....	10
Editing Bluetooth GSM connections via Web configurator .....	11
Supplements to „Defining dialling plans“ .....	12
Downgrading the firmware .....	12
Changed structure of the Web configurator menu .....	14
Supplements and corrections to several functions .....	15
<b>Function no longer in use – the Gigaset.net assistant</b> <b>(country-/provider-specific)</b> .....	<b>16</b>
<b>Menu overviews</b> .....	<b>17</b>
Gigaset DX800A all in one connected to VoIP and analogue fixed line .....	17
Gigaset DX800A all in one connected to VoIP and ISDN .....	22

## Overview of the new and updated functions

# Overview of the new and updated functions

---

### New and extended functions

- ◆ Extended possibility to connect devices to the FAX port:  
Instead of the fax machine you can connect an analogue phone or a door bell with two-way intercom to your Gigaset's FAX port. → [page 3](#)  
From now on you can make internal calls via the Fax port and transfer calls to other handsets.
- ◆ Two personal announcements can be saved for each answering machine.  
Now, you can record for each local answering machine two announcements for the advisory mode. When activating the answering machine you can select which announcement shall be used. → [page 6](#)
- ◆ External call held internally on your device  
When making a call via ISDN or VoIP: Dependant from the settings of your phone external calls (during toggling or an external consultation call) are internally held on your phone or on the phone exchange of your provider. During the internal hold both ISDN/VoIP lines are busy. → [page 7](#)
- ◆ Configuring an internal subscriber without a send connection.  
You can configure your phone or each of the registered handsets so that you cannot make external calls. But you can accept external calls and make calls to an internal subscriber. → [page 8](#)
- ◆ Changing the dialling mode when you are connected to an analogue PABX.  
You can change the dialling mode via base station's menu or via Web configurator. → [page 8](#)
- ◆ The Web configurator allows additional IP settings for the base station. So you can define a device name by which the base station can be addressed within the local network. → [page 10](#)
- ◆ Further settings of the base station can be made via Web configurator: Enabling the registration mode, changing system PIN and activating VoIP status message display. → [page 10](#)
- ◆ Via Web configurator you can change Bluetooth GSM connections' names in the **Known Devices** list and delete the GSM connections from the list. → [page 11](#)
- ◆ After the first firmware update you can downgrade the firmware to the previous version. → [page 12](#)
- ◆ The structure of the Web configurator menu has changed. → [page 14](#)

### Function no longer in use


- ◆ When you open the gigaset.net directory for the first time, you are no longer prompted to create your own Gigaset.net entry. → [page 16](#)

## Description of new and updated functions

### Connecting a phone or a doorline to the FAX port

This section extends the section „Connecting/Using other devices - connecting a fax machine (ISDN)“ in the user guide for your Gigaset phone.

Instead of a fax machine you can connect an analogue telephone or a corded analogue doorline interface device (Doorline Type 2) to the base via the FAX port.

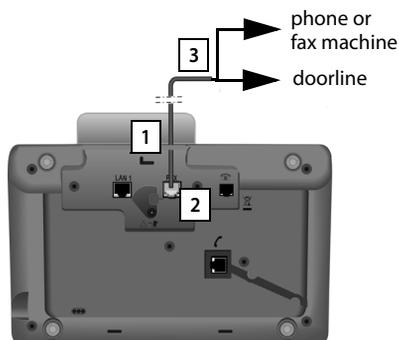

1. Insert one end of the connection cable (6 pin with 2 mini western jacks 6/6) from the rear into the recess in the housing of your phone.
2. Plug the jack into the fax port on the base (labelled: **FAX**).
3. Connect the connection cable to the port on the analogue phone/the doorline intercom.

You do not explicitly have to register the device to the base. It is automatically "registered", once you have activated the FAX port on the base. The device is added to the list of internal parties with the internal name **INT 8**. The internal number **8** can not be changed.

When activating the FXS port you have to specify the type of device you want to connect to the port.

### Activating/deactivating the FAX port

This section replaces the section „Configuring the system settings - Activating/deactivating the Fax port (ISDN)“ in the user guide for your Gigaset phone.

To register a fax machine/a phone or a doorline to the base, you must activate the FAX port, i.e. set the port to **Telephony / Fax** or **Doorline** mode.

The FAX port is deactivated by default.

When you activate the FAX port, it is regarded as registered. The internal number **8** is assigned to it/the connected device. **INT 8** is displayed in the list of internal parties (even if there is no device connected).

 →  **Settings** → **System** → **FXS Port**

## Description of new and updated functions

- ▶ You can enter data in the following fields:

### Mode:

#### Telephony / Fax

Activate the FXS port. You can connect a fax machine or an analogue phone to the FXS port.

You can assign external and internal connections to the FAX port. The first MSN in the configuration (ISDN) or the analogue fixed line will be assigned to the FAX port as a send connection automatically. All configured connections of the phone are assigned to the FAX port as receive connections.

You can change this assignment.

#### Doorline

Activate the FXS port. You can connect a corded, analogue doorline interface, working with DTMF codes.

Only internal connections are possible via the FAX port. Neither send nor receive connections are assigned to it.

Therefore dialling from the doorline device is restricted to \* (asterisk) for a collective call and the digits 1-7 for calls to the corresponding internal subscriber.

To enable calls from doorline these digits or "\*" should be assigned as DTMF codes to selected keys of the device during configuration process. Default values of doorline DTMF codes depend on the selected country.

Doorline calls are shown as regular internal calls.

#### Off

Deactivate the FAX port. **INT 8** will be removed from the internal list. It is no longer possible to establish a connection to/via FAX port.

To control the doorline device the base station must send different DTMF codes to the doorline device. When you have selected the **Doorline** mode, the following fields are displayed in which you can enter the needed codes (4 characters maximum, permitted are the digits 0..9 and the special characters "#", "\*").

#### Door Open Code :

Insert a DTMF code for triggering the door opening mechanism.

#### Door Connect Code :

Insert a DTMF code for accepting the call and connecting the audio channel.

#### Door Disconnect Code:

Insert a DTMF code for ending the call and disconnecting the audio channel.

- ▶ Press the **Save** display key to save the settings.

## Description of new and updated functions

### Doorline calls

**Prerequisite:** Incoming and outgoing doorline calls are only possible if FXS Port is set to **Doorline** mode.

#### Please note

Incoming doorline calls are signalled as regular internal calls from internal subscribers. The internal name of the FXS port **INT 8** is displayed.

### Call from doorline

The call from the doorline device can be started either to all internal subscribers (collective call) or to a selected internal subscriber.

If the doorline device initiates a call to an internal subscriber, which is not reachable, the doorline device stays in busy state.

If the doorline device initiates a call to an internal subscriber, which is in the call state, the internal call waiting from doorline is presented.

The incoming doorline call is signalled on the base station/handset.

- ▶ Pick up the receiver or press the handsfree key  to send the **Door Connect Code** to the doorline device. You can talk to the caller.  
In this state any internal or external call waiting is signalled to the base station/handset. You cannot accept or react to it.
- ▶ Press the **Open Door** display key to open the door.  
The **Door Open Code** is sent to the doorline device. The door is opened.
- ▶ Put the receiver on hook/press the red end key  to close the connection.  
The **Door Disconnect Code** is sent to the doorline device.

### Call to doorline

To call the doorline proceed as follows:

- ▶ Press the  control key.  
The phone tries to initiate an internal call.
- ▶ Select **INT 8** for the doorline device.
- ▶ Pick up the receiver or press the handsfree key .

If the doorline device is available, you are connected with the doorline.

- ▶ Press the **Open Door** display key to open the door.  
The **Door Open Code** is sent to the doorline device. The door is opened.

If the doorline device is busy:

- ▶ Press the red end key  to return to idle state.

#### Please note

- ◆ The doorline device accepts calls automatically.
- ◆ If the receiver is on hook the handsfree mode is automatically switched on.

### Notes on the FXS port in Telephony / Fax mode

When connecting a multifunction device (fax/phone) or a phone to the FXS port, you must observe the following:

## Description of new and updated functions

- ◆ There is no ringing tone when you pick up.
- ◆ CLIP is not supported for incoming calls.
- ◆ If the answering machine takes a call on the device's receive connection, it continues to ring.
- ◆ If a receive connection is only assigned to the fax machine/phone, then calls to the corresponding number will not be entered in the call lists (it is not possible to delete the entries from the base or a handset).
- ◆ To call an internal subscriber or to make an internal consultation call during an external call enter an „R“ in front of the corresponding internal number.
- ◆ Other internal functions such as "internal transfer" are not supported.

## Notes on the FXS port in Doorline mode

- ◆ If one of the participants of the internal call is a doorline device, an incoming external or internal call is not signalled (as call waiting) to any of the participants. If no other handset can present the call, the caller hears the busy tone.
- ◆ An incoming call from the doorline device during an internal or external call is presented as regular internal call waiting. Before you can accept the call from the doorline device you have to end the external/internal call.

## Answering machine: Recording two user specific announcements for the answer & record mode

### Recording an announcement

This section amends the section „Operating the base's answering machine - Operating via the base - Recording a personal announcement/advisory“ in the user guide for your Gigaset phone.

For each answering machine you now can record two personal announcements for the answer and record mode and one advisory message for answer only mode.

You can record the two announcements as follows:

 →  → **Announcements** → **Record Announcemnt.**

 If necessary, select answering machine and press **OK**.

 Select **Announcement 1 /Announcement 2** and press **OK**.

**OK** Press the display key to start the recording.

You hear the ready tone (short tone).

▶ Now say your announcement (at least 3 seconds).

**End** Press the display key to end the recording.

After recording, the announcement is played back for you to check. You can re-record the announcement with **New**.

### Playing back announcements

This section amends the section „Operating the base's answering machine - Operating via the base - Playing back announcements“ in the user guide for your Gigaset phone.

You can play back the announcements as follows:

## Description of new and updated functions

 →  → **Announcements** → **Play Announcement**

 If necessary, select answering machine and press **OK**.

 Select **Announcement 1** / **Announcement 2** and press **OK**.

If the selected announcement has not been recorded or has been deleted, the pre-recorded announcement is played back instead.

### Activating answering machine, selecting an announcement

This section amends the section „Operating the base's answering machine - Operating via the base - Activating/deactivating and setting answering machine mode“ in the user guide for your Gigaset phone.

 →  → **Activation**

 If necessary, select answering machine (✓ = on).

**OK** Press the display key.

► You can enter data in the following fields:

#### Activation:

Select **On** or **Off** to activate/deactivate the answering machine.

#### Mode:

Select **Answer & Record**, **Answer only** or **Alternating**.

If **Answer & Record** or **Alternating** is selected:

#### Answer & Record with:

Select **Announcement 1** / **Announcement 2**.

If the selected announcement has not been recorded or has been deleted, the pre-recorded announcement is used instead of that.

If **Alternating** mode is selected:

#### Record from:

Enter hours/minutes for the start of the period in 4-digit format.  
(The time **must** be set.)

#### Record until:

Enter hours/minutes for the end of the period in 4-digit format.

**Save** Press the display key.

#### Please note

If no system time is available, the answering machine changes from **Alternating** or **Answer & Record** mode to **Answer only** mode until the system time is available again.

## Internal Hold Mode when making a call to several users (ISDN/VoIP)

Your ISDN/VoIP connection offers you two telephone lines that you can use at the same time. For this reason you have the following two options to hold an external participant during an external consultation call or during call swapping:

- ◆ Hold connection externally: The call is put on hold in the telephone exchange. Therefore your second ISDN/VoIP line can be used by another party.

## Description of new and updated functions

- ◆ Hold connection internally: The call is put on hold in your base station. In this case both ISDN lines or both VoIP lines are occupied. If the second ISDN/VoIP line is in use by another party, an external consultation call or accepting a waiting call is **not** possible.

To activate/deactivate the internal hold mode, select

 →  **Settings** → **Telephony** → **Internal Hold Mode** ( = On)

By factory default, the **Internal Hold Mode** is deactivated, i.e. external calls are held on the telephon exchange (central office of the net provider).

## Configuring an internal subscriber without a send connection

This section extends the section „Configuring the system settings- Assigning send and receive connections to internal parties - Assigning a send connection“ in the user guide for your Gigaset phone.

You can configure your phone or each of the registered handsets so that you cannot make external calls. You can only make calls to internal subscribers.

 →  **Settings** → **Telephony** → **Send Connections**

Select and press **OK**.



Enter the system PIN if necessary and press **OK**.

A list of the internal parties (base, handsets, device connected to the FAX port INT8 – where applicable) is displayed.



Select the internal party that should not be allowed to set up external calls and press the display key **OK**.



Select **No outgoing calls** to block all outgoing calls from this internal party.



Press the display key to save the changes.

### Please note

If you select **No outgoing calls**, all outgoing calls, calls to the network mailbox and sending of SMS, E-Mail or fax from this internal party is blocked.

If the internal subscriber tries to make an external call, to send an SMS and so on the message **Not possible** is displayed.

## Changing the dialling mode, switching to tone dialling (analogue fixed line)

### Changing the dialling mode (analogue fixed line)

This section extends the chapter „Connecting the base to the PABX“ in the user guide for your Gigaset phone. It applies to connections via the analogue fixed line.

Changing the dialling mode is only necessary if the PABX the phone is connected to requires it; see the PABX user manual.

The following dialling modes can be selected:

- ◆ Tone dialling (**Tone**),

## Description of new and updated functions

### ◆ Pulse dialling (Pulse).

Regardless of the setting options above, after dialling or during a call, the phone automatically switches to tone dialling (DTMF) e.g., for controlling an answering machine remotely.

 →  → **Telephony** → **Dialling Mode**

 Select dialling mode and press **OK** (● = set value).

### Please note

Tone dialling (DTMF) is now the most common dialling mode. Pulse dialling mode (PD) is used only for a few old PABXs.

### Changing the dialling mode via Web configurator

This section extends the section „Telephony – Connections - Setting the fixed line network connection“ in the user guide for the Web configurator.

You can additionally switch between tone and pulse dialling mode via the Web configurator:

- ▶ Open the **Settings** → **Telephony** → **Connections** Web page.
- ▶ Select **Edit** in the **Fixed Line Connection** area.
- ▶ For **Dialling mode** select
  - Pulse dial** for Pulse dialling mode
  - DTMF** for Tone dialling mode
- ▶ Select **Set** to save your settings.

### Switching temporarily to tone dialling (DTMF)

This section extends the chapter „Connecting the base to the PABX“ in the user guide for your Gigaset phone. It applies to connections via the analogue fixed line.

If your PABX still operates with pulse dialling (PD), but you need tone dialling for a connection (e.g., to listen to the network mailbox), you must switch to tone dialling for the call.

**Prerequisite:** You are conducting a call or have already dialled an external number.

 Press the star key.

After the call ends, pulse dialling is automatically reactivated.

## Delete functionality from a function key

This section amends the section „Setting up the base- Changing key assignments“ in the user guide for your Gigaset phone.

To delete the functionality from a function key proceed as follows:

- ▶ Press and **hold** the function key until a list of possible key assignments is displayed.
- ▶ Press the display key **Clear** to delete the key assignment.

## Description of new and updated functions

### Extended IP configuration via Web configurator

This section extends the section „IP Configuration – Connecting to the LAN“ in the user guide for the Web configurator.

#### Defining a name for the base station in the network

Instead of the local IP address you can use this name to address the base station within the local network.

- ▶ Open the **Settings** → **IP Configuration Web** page.
- ▶ Click the **Show Advanced Settings** button to show additional fields.

In the **Remote Management** area

- ▶ In the **Device Name in the Network** field enter a name for your base station (up to 75 characters).
- ▶ Click on the **Set** button to save the changes.

The device name of the base station is displayed on the **Status** page of the Web configurator.

### Further base settings via Web configurator

Via the Web configurator page **Settings** → **Management** → **Miscellaneous** you can additionally make the following base settings:

- ◆ Enabling registration mode on the base station
- ◆ Changing the system PIN
- ◆ Activating VoIP status message display

#### Registering handsets

You can register up to six handsets with your phone. The registration must be initiated on the phone and the handset.

- ▶ Open the **Settings** → **Management** → **Miscellaneous** Web page.
- ▶ Click on the **Start Registration** button to enable registration mode on the base station. Registration mode is active for approximately 60 seconds.

After that, you are prompted to start the registration on the handset.

- ▶ Start the registration on the handset within 60 seconds as described in the handset's user manual.

Once registration is complete, the handset returns to idle status. The display shows the internal number for the handset, e.g., **INT 2**. The handset is added to the list of registered handsets on the **Status** tab.

#### Changing system PIN of the phone

Protect the system settings of your phone with a 4-digit PIN known only to you.

Before changing important system settings and when logging into the Web configurator, you are prompted to enter the system PIN.

The default setting for the PIN is **0000**.

## Description of new and updated functions

- ▶ Open the **Settings → Management → Miscellaneous** Web page.
- ▶ Enter a new 4-digit system PIN for the base station in the **New PIN** field (four digits from 0 to 9).
- ▶ Click on the **Set** button, the new PIN is enabled.

### Activating VoIP status message display

You can display VoIP status messages on your telephone when there are VoIP connection problems. These messages give you information on the status of a connection and contain a provider-specific status code that helps the service team to analyse the problem.

A table with possible status codes and their meaning can be found in the phone's detailed user guide,

- ▶ Open the **Settings → Management → Miscellaneous** Web page.
- ▶ Click on the **Yes / No** option next to **Show VoIP status on handset** to enable or disable the message display.
- ▶ Select **Set** to save the changes.

## Editing Bluetooth GSM connections via Web configurator

This section extends the section „Telephony – Connections: Configuring phone connections“ in the user guide for the Web configurator.

In the list with all possible connections on the **Settings → Telephony → Connections** Web page the GSM mobile phones being included in the **Known Devices** list on the base are displayed.

For each GSM connection, the Bluetooth name is displayed with which the corresponding mobile phone is stored in the **Known Devices** list as well as its status.

Possible values for the status are:

#### Active

Bluetooth is activated on the base. The mobile phone is registered with the base, i.e. it appears in the **Known Devices** list. However, the mobile phone is not yet activated. The **Connect Mobile** option is **not** set for this mobile phone. No calls can be made from the base via the corresponding GSM connection.

#### Connected

The mobile phone is displayed in the **Known Devices** list and is active. The **Connect Mobile** option is set for this mobile phone.

#### Bluetooth is off

Bluetooth is deactivated on the base.

### Editing/deleting Bluetooth GSM connections

- ▶ Open the **Settings → Telephony → Connections** Web page.
- ▶ Select the **Edit** button next to the GSM connection that you want to edit.

#### Connection Name or Number

Enter the number of the mobile phone or define a name for the GSM connection (max. 16 characters). This name is displayed on the base e.g., in the **Known Devices** list, in the lists for receive/send connections and in the call lists as receive connection (number that the caller dialled).

## Description of new and updated functions

- ▶ Select **Set** to save the changes.

Or:

- ▶ Click the **Cancel** button to reject the changes you have made.

Then you return to the list of connections.

Or:

- ▶ Click the **Delete Connection** button to delete the GSM connection from the configuration. You can no longer be contacted via this phone number or make calls via this connection.

If the connection you have deleted was the send connection of an internal subscriber, then a new send connection will automatically be assigned to this internal subscriber. This is the fixed line network number if the phone is connected to the analogue fixed line network.

## Supplements to „Defining dialling plans“

This section extends the „Telephony – Dialling Plans - Defining dialling plans – cost control“ in the user guide for the Web configurator.

### Blocking numbers

You can define numbers that are not allowed to be dialled at the base station as well as at any registered handset.

You define such dialling plans as follows:

#### Phone Number

Enter the number or the first digits of the phone number which should not be dialled (max. 15 digits).

#### Connection

Select **Block** from the list.

- ▶ Click on the **Add** button. The dialling plan is activated immediately.

If you try to dial the number, **Not possible** is displayed.

### The option „Use Area Codes“

When defining a dialling plan you can establish that for each call via VoIP the local area code shall precede. For that activate the option **Use Area Codes** corresponding to your dialling plan

## Downgrading the firmware

This section extends the section „Management – Firmware Update: Updating the base's firmware“ in the user guide for the Web configurator.

You can reload the firmware version that was loaded before the last update on the phone.

- ▶ Open the **Settings → Management → Firmware Update** Web page.
- ▶ Select the **Downgrade Firmware** button. The text above this button shows the version of the firmware that will be reloaded.


### Description of new and updated functions

- ▶ In the following dialog box, click the **OK** button to confirm the prompt.  
The firmware is reloaded to the phone. The new firmware is overwritten. Your connection to the Web configurator is terminated, and the base is rebooted.  
This process can take up to 3 minutes.

## Description of new and updated functions

## Changed structure of the Web configurator menu

The structure of the web configurator menu has changed. Changes are marked orange

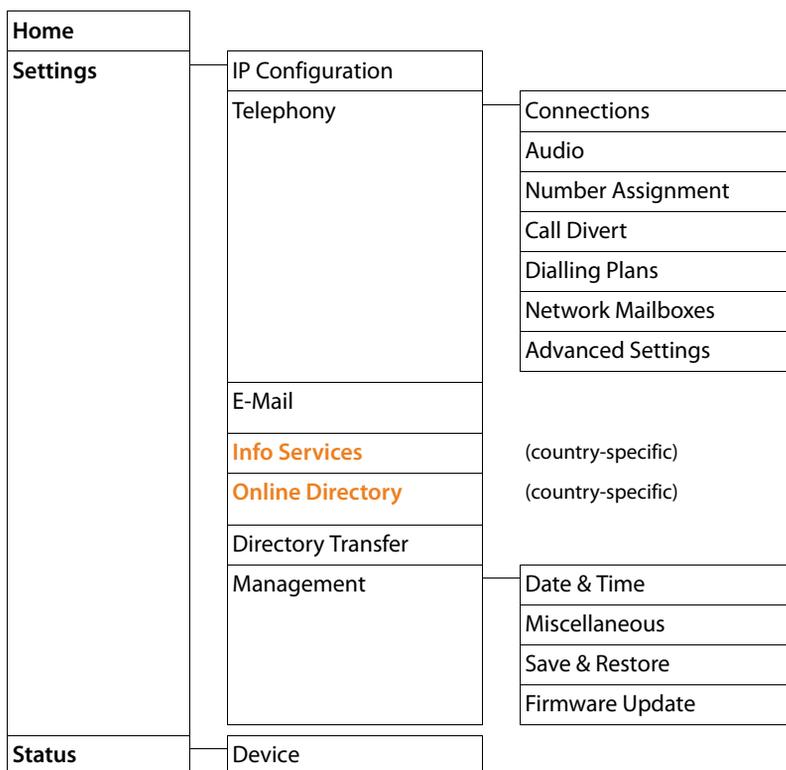

## Supplements and corrections to several functions

### ◆ Cancelling an incoming call:

To cancel an incoming call, replace the receiver, press the red end key  or, for VoIP Calls, press the display key **Reject**.

### ◆ Display during an incoming call with CNIP (country-specific):

If the number of the caller is stored in your directory, the caller's number (not the CNIP information) is replaced by the corresponding directory entry.

Both, CNIP and directory name replacement may be shown together.

### ◆ Making calls using network services (country-/provider-specific):

For some functions, you must press the softkey **Send** instead of **OK** or **Save** to submit changes.

### ◆ Searching for subscribers in the Gigaset.net directory:

There is no display key **Search** available to start a search in the directory.

You can start a search as follows:

 →  **Contacts** → **Online Directories** → **Gigaset.net**

**Gigaset.net name:**

Enter the name or part of a name (max. 25 characters).

**Options** → **Search**

Select and press **OK**, to start the search.

### ◆ Bluetooth: Adding the data device/mobile phone to the known devices list:

If the new device fails to register, the list of known devices will remain unchanged (only if no device was selected to be replaced).

### ◆ Changing the default connection:

When you switch the analogue fixed network over to ISDN or vice versa some messages are displayed. The only available display key is **OK** and not any longer **No** and **Yes**. You can only agree to the system messages.

### ◆ Activating the screensaver **Info Services**:

For using the **Info Services** screensaver you do not have to activate the display of info services via the Web configurator any longer as a prerequisite.

Depending on the information feed selected for the screensaver, a display key appears on the right (e.g., **More**) for calling up further functions. To return to idle display, proceed as follows:

▶ Press and **hold** the red end key .

▶ Start dialling .

Function no longer in use – the Gigaset.net assistant (country-/provider-specific)

## Function no longer in use – the Gigaset.net assistant (country-/provider-specific)

---

When you open the gigaset.net directory for the first time, you are no longer prompted to create your own Gigaset.net directory entry.

To create your own entry in the Gigaset.net directory, proceed as follows:

- ▶ Select  →  **Contacts** → **Online Directories** → **Gigaset.net** and press **OK**, to open the Gigaset.net directory.
- ▶ Select **Options** → **Own details** and press **OK**.

**Change**

Press the display key.



Enter the name that you would like to be listed under in the Gigaset.net directory and press **OK**. The name may contain a maximum of 25 characters.

If an entry with this name already exists, the message **Nickname exists! Please choose another one** is displayed. You are prompted to enter a name again.

To delete the entry You can delete the name with **<C** and press **OK**.

### Data protection notice

If you enter a nickname at this point, it is stored on a central Gigaset server. The nickname appears in the Gigaset.net directory, and other subscribers that use the Gigaset.net service can call you using this nickname.

**By entering your data, you agree to having your data saved.** If you do not wish this to happen, you can cancel the operation at this point.

Further information about the Gigaset.net service data saved can be found at [www.gigaset.net/privacy-policy](http://www.gigaset.net/privacy-policy)

## Menu overviews

Instead of scrolling to locate a menu function, you can select a function more quickly by opening the menu and keying in a digit combination (or shortcut).

### Example:

- ▶ To open the main menu press  when the base is in **idle status**.
- ▶ Press     for "Set ringer melody volume."

## Gigaset DX800A all in one connected to VoIP and analogue fixed line

1  <b>Select Services</b>	(country-/provider-specific)	→ <b>page 15</b>
1 Automatic Recall	Fixed line connection only	
2 Next Call		
	1 Withhold Number	
	2 Send Number	(country-/provider-specific)
	3 Call Waiting	Fixed line connection only
2 Withhold No. Next Call	(country-/provider-specific) Fixed line connection only	
3 Call Divert	Internal	
	Fixed Line	
	IP1	
	IP2	
	:	
	IP6	
4 Call Waiting		
5 Withhold # All Calls		
6 Network Mailbox	Fixed line connection only	
7 Call Protection		
8 Fixed Destination Call		
9 Unknown Call Reject.	Fixed line connection only	
- Transfer (ECT)		
- Ringback Off		

## Menu overviews

### 2 Bluetooth

1	Activation
2	Search for Headset
3	Search for Mobile
4	Search for Data Device
5	Known Devices
6	Own Device

→ page 15

### 3 Additional Features

1	Info Centre	(country-/provider-specific)								
2	Resource Directory	<table border="1"> <tr><td>1</td><td>Screensavers</td></tr> <tr><td>2</td><td>Caller Pictures</td></tr> <tr><td>3</td><td>Sounds</td></tr> <tr><td>4</td><td>Capacity</td></tr> </table>	1	Screensavers	2	Caller Pictures	3	Sounds	4	Capacity
1	Screensavers									
2	Caller Pictures									
3	Sounds									
4	Capacity									

### 4 Call Lists

1	All Calls
2	Outgoing Calls
3	Accepted Calls
4	Missed Calls

### 5 Messaging (country-/provider-specific)

1	SMS	<table border="1"> <tr><td>1</td><td>New SMS</td></tr> <tr><td>2</td><td>Incoming</td></tr> <tr><td>3</td><td>Draft</td></tr> <tr><td>4</td><td>Settings</td></tr> </table>	1	New SMS	2	Incoming	3	Draft	4	Settings	<table border="1"> <tr><td>1</td><td>Service Centres</td></tr> <tr><td>3</td><td>Notification</td></tr> <tr><td>4</td><td>Status Report</td></tr> </table>	1	Service Centres	3	Notification	4	Status Report
1	New SMS																
2	Incoming																
3	Draft																
4	Settings																
1	Service Centres																
3	Notification																
4	Status Report																
2	E-mail																

6  Answering Machine

1	Play Messages	1 Net AM: Fixed Line 3 Net AM: IP1 4 Net AM: IP2 : 8 Net AM: IP6 9 Answer Machine 1 - Answer Machine 2 - Answer Machine 3	
2	Activation	1 Answer Machine 1 2 Answer Machine 2 3 Answer Machine 3	→ page 7
3	Announcements	1 Record Announcemnt. 2 Play Announcement 3 Delete Announcemnt. 4 Record Advisory Msg. 5 Play Advisory Message 6 Delete Advisory Msg.	Answer Machine 1 to 3 → page 6 Answer Machine 1 to 3 → page 6 Answer Machine 1 to 3 Answer Machine 1 to 3 Answer Machine 1 to 3 Answer Machine 1 to 3
4	Recordings		
5	Call Screening	1 Desktop Phone 2 Handset	
6	Network Mailboxes	1 Net AM: Fixed Line 2 Net AM: IP1 3 Net AM: IP2 : 7 Net AM: IP6	Fixed line connection only
7	Set Key 1	1 Net AM: Fixed Line 2 Net AM: IP1 3 Net AM: IP2 : 7 Net AM: IP6 8 Answer Machine	Fixed line connection only

## Menu overviews

### 7 **Organiser**

1	Calendar
2	Alarm Clock
3	Missed Alarms

### 8 **Contacts**

1	Directory
2	Online Directories

2	Gigaset.net	(country-/provider-specific)
1	Online Directory	The online directories available are displayed with provider-specific names
3	Yellow Pages	
4	Prv.NetDir	(country-/provider-specific)

→ [page 16](#),  
→ [page 15](#)

### 9 **Settings**

1	VoIP Wizard
2	Date/Time
3	Audio Settings
4	Display
5	Language
6	Registration

1	Call Volume
2	Ringer Settings
3	Advisory Tones
4	Music on hold
1	Screensaver
	Info Ticker
2	Backlight
1	Register Handset
2	De-register Handset

1	Volume
2	Melodies
3	Time Control
4	Anon. Call Silencing

→ [page 15](#)

**Menu overviews**

7	Telephony	1	Area Codes				
		3	Send Connections	INT 1 ... INT 8	→ page 8		
		4	Receive Connections	INT 1 ... INT 8 Answer Machine 1 ... Answer Machine 3			
			Dialling Mode	1 Dialling Mode 2 Pulse	→ page 8		
		7	Recall	Fixed line connection only			
		8	Access Code				
			Internal Hold Mode	VoIP connections only	→ page 7		
		8	System	1	Reset		
				2	DECT Interface		
				3	FXS Port		→ page 3
4	Repeater Mode			country-specific			
5	Local Network						
6	Update Firmware				→ page 12		
7	System PIN						
9	Eco Mode	1	Eco Mode	country-specific			
		2	Eco Mode+	country-specific			

## Menu overviews

## Gigaset DX800A all in one connected to VoIP and ISDN

### 1 Select Services (country-/provider-specific)

Next Call
Call Divert
Call Waiting
Withhold # All Calls
Busy on Busy
Transfer (ECT)
Ringback Off

Withhold Number
Keypad Control
Internal
MSN1
MSN2
:
MSN10
IP1
IP2
:
IP6

ISDN connection only

→ [page 15](#)

### 2 Bluetooth

1 Activation
2 Search for Headset
3 Search for Mobile
4 Search for Data Device
5 Known Devices
6 Own Device

→ [page 15](#)

### 3 Additional Features

1 Info Centre
2 Resource Directory

(country-/provider-specific)

1 Screensavers
2 Caller Pictures
3 Sounds
4 Capacity

4  **Call Lists**

1	All Calls
2	Outgoing Calls
3	Accepted Calls
4	Missed Calls

5  **Messaging** (country-/provider-specific)

1	SMS
2	E-mail

1	New SMS
2	Incoming
3	Draft
4	Settings

1	Service Centres
2	Notification
4	Status Report

6  **Answering Machine**

1	Play Messages
2	Activation
3	Announcements

1	Net AM: ISDN
3	Net AM: IP1
4	Net AM: IP2
	:
8	Net AM: IP6
9	Answer Machine 1
-	Answer Machine 2
-	Answer Machine 3
1	Answer Machine 1
2	Answer Machine 2
3	Answer Machine 3
1	Record Announcemnt.
2	Play Announcement
3	Delete Announcemnt.
4	Record Advisory Msg.
5	Play Advisory Message
6	Delete Advisory Msg.

ISDN connection only

→ page 7

→ page 6

→ page 6

Answer Machine 1 to 3

## Menu overviews

4	Recordings
5	Call Screening
7	
6	Network Mailboxes
7	Set Key 1

1	Desktop Phone
2	Handset

1	Net AM: ISDN
2	Net AM: IP1
3	Net AM: IP2
	:
7	Net AM: IP6

1	Net AM: ISDN
2	Net AM: IP1
3	Net AM: IP2
	:
7	Net AM: IP6
8	Answer Machine

### 7 **Organiser**

1	Calendar
2	Alarm Clock
3	Missed Alarms

### 8 **Contacts**

1	Directory
2	Online Directories

1	Gigaset.net
2	Online Directory
3	Yellow Pages
4	Prv.NetDir

(country-/provider-specific)

The online directories available are displayed with provider-specific names

→ [page 15](#)

→ [page 16](#)



## Menu overviews

8	System	1	Reset	
		2	DECT Interface	
		3	FXS Port	
		4	Repeater Mode	(country-specific)
		5	Local Network	
		6	Update Firmware	
		7	System PIN	
9	Eco Mode	1	Eco Mode	(country-specific)
		2	Eco Mode+	(country-specific)

→ [page 3](#)

→ [page 12](#)