

TVERTRIP PROFI



USER MANUAL

TverTrip model: Profi

Firmware version: 3.4

Manual edition: 1.0

TverTrip Profi v 3.4
User manual
www.tvertrip.com

All product information may be changed without prior notice. All statements, information and recommendations in this guide are assumed correct but given without warranty of any kind, express or implied. Users must assume full responsibility for their use.

Developers, manufactures and distributors of TverTrip devices are not liable for any indirect, special or consequential damages, including, without limitation, lost profits, loss of or damage any cars equipment and any property arising from the use of or inability to use this guide, even if developers, manufactures of TverTrip devices, its suppliers, partners or distributors have been advised of the possibility of such damages.

© TverTrip, 2011

Contents

1 Introduction.....	4
2 Technical specifications.....	4
3 Warranty.....	4
4 Installation of the device.....	4
4.1 Wires description.....	4
4.2 Connectors.....	5
4.3 Probes connecton.....	6
4.4 External relay (only for TverTrip Profi Dakar edition).....	7
4.5 TverTrip Sport connector.....	7
5 First setup.....	8
5.1 Time setup.....	8
5.2 Date setup.....	8
5.3 Choose the probe.....	8
5.4 Calibration number setup.....	9
5.4.1 Known calibration number.....	9
5.4.2 Calibration kilometer.....	9
5.4.3 Known distance.....	9
5.4.4 Using GPS receiver.....	9
6 User interface.....	9
6.1 Commands list.....	10
6.2 Remote display control.....	12
7 Additional information.....	12

1 Introduction

TverTrip Profi is a rally computer purposed to help in the navigation in a difficult environment of any auto-sports competitions, which use roadbook's navigation such as rally, rally-raids, trophy-raids, car-orienteeing.

It's already been used in famous rally-raids such Dakar, Africa Race, Silk Way. It is very reliable, lightweight and easy to use device. If you are beginner in navigation, you will need only few buttons to control it during the race. For skillful navigators it will help to control many parameters like speeding or average speed or distance limits.

2 Technical specifications

Operating temperature range	-30 .. +50 °C
Voltage	10..15V DC
Current consumption	less than 270mA
Current consumption, power save mode	less than 40mA
Nonvolatile memory battery	CR2032
Battery resource	more than one year
Car's power network malfunction protection	Yes
Wrong polarity protection	Yes
Overvoltage protection	Yes

Device stores all current values in nonvolatile memory, it allows to use TverTrip Profy after its disconnection from power supply.

3 Warranty

The manufacturer guarantees fault-free operation of the TverTrip Profi within 12 months period from the date of manufacture. Date of manufacture is determined by electronic mark stored inside the unit. During warranty period repairing of TverTrip Profi is free of charge in the case of manufacturing defects.

In the case of physical damage claims for quality are not accepted.

Warranty does not apply to the battery.

4 Installation of the device

To use TverTrip Profi you have to install a device on car's dashboard at easy accessible to the navigator place, then connect it to probes and car's electric network.

4.1 Wires description

Connect TverTrip Profi wires as decribed in the table 1. Power supply may be connected via a switch to power down the device when it's not used.

Table 1. Wires description

Wire color	Signal	Description
Grey		Not used
Yellow	SW2	External CLR2 button
Brown	HALL1/PROBE1-	Input Probe 1
Violet	HALL2/PROBE2-	Input Probe 2
Blue	UHALL	Output for the Hall sensor power supply (+5/+9V 100mA max)
White	PROBE+	
Pink		Not used
Red	+12V	Power supply, connect to car's +12V via 5A fuse
Black	Gnd	Car's ground
Green	DISP2	Remote display TverTrip Pilot data channel


4.2 Connectors

On the picture 1 jumper 5-9V sets the Hall's probe DC voltage on UHALL wire. With jumper set on (default) UHALL = 5V, without jumper UHALL = 9V.

Connector 1 is used to connect standard inductive probes.

Connector 2 is used for power supply, remote button, remote display.


Connector 3 is used to connect standard probes.

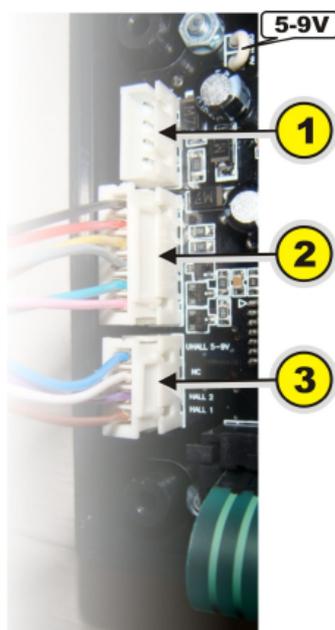


Picture 1. Connectors.

4.3 Probes connecton


You may choose any connection variant, suitable for your car. Wires' colors may differ from shown on pictures depending on used probe types. Refer to probe's documentation for details.

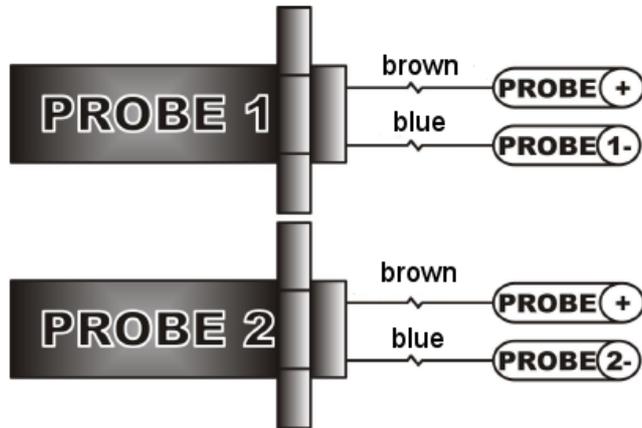


Picture 2. Standard inductive probes (connector 1).

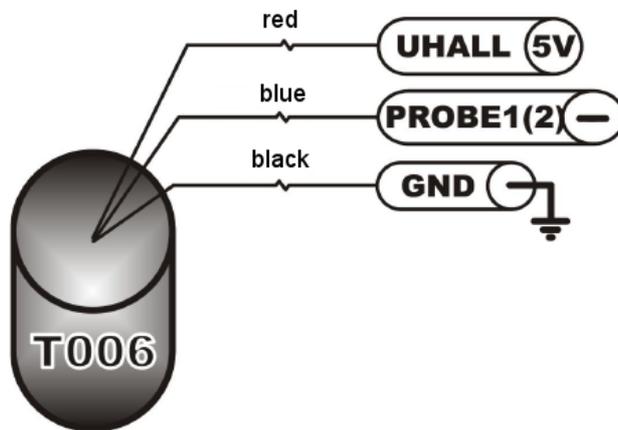

Picture 3. Universal speedometer probe (connector 2).

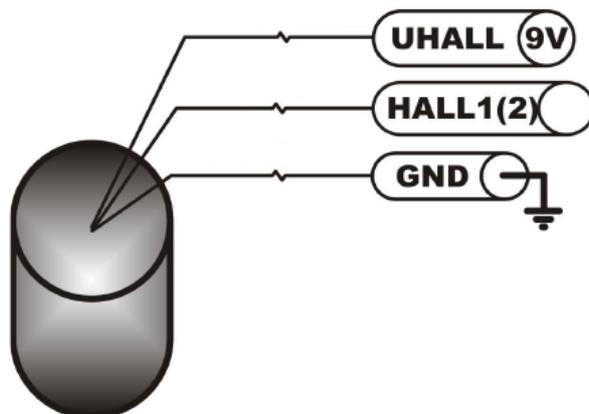

Picture 4. Hall effect sensor (connector 2).

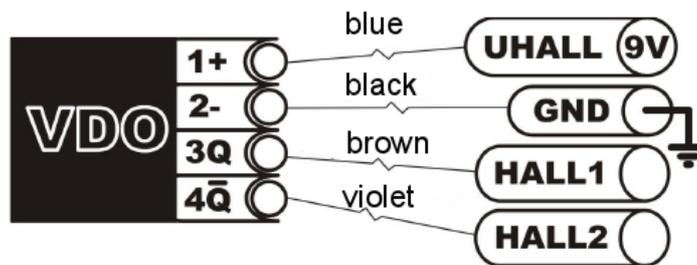


Picture 5. VDO sensor (connector 2).

Warning: VDO sensors have a low loading capacity. We recommend to connect HALL1 and HALL2 inputs to different VDO sensor outputs. In such scheme is permitted to connect in parallel up to 3 TverTrip Profi devices to one VDO sensor.

4.4 External relay (only for TverTrip Profi Dakar edition)

TverTrip Profi Dakar edition has additional connector for external relay, which may switch on any alarm devices in cases of speeding or exceeding of other specified limits.

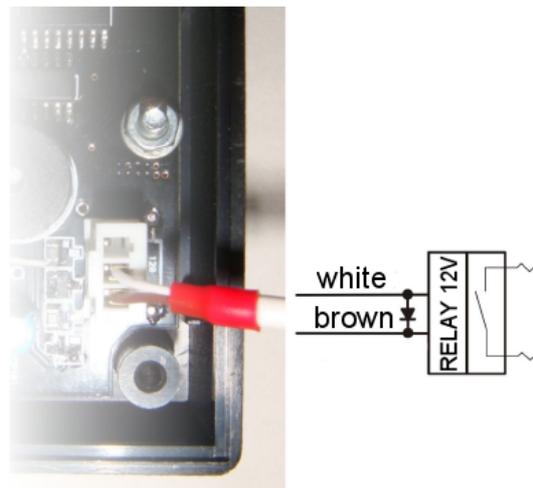

Picture 5. Connection of external alarm relay.

Relay should be for 12V DC. Additional protection diode should be used according recommendations of relay manufacturer.

4.5 TverTrip Sport connector

If you already have previous version of TverTrip, TverTrip Sport, you may use its connector to connect TverTrip Profi. In this case you have to solder TverTrip Profi wires to DB9 connector as shown in the table 2.

Table 2. TverTrip Sport connector

DB9 pin	Wire color	Signal	Description
1	Yellow	SW2	External CLR2 button
4	Brown	HALL1/PROBE1-	Input Probe 1
3	Violet	HALL2/PROBE2-	Input Probe 2
6	Blue	UHALL	Output for the Hall sensor power supply (+5/+9V 100mA max)
9	Red	+12V	Power supply, connect to car's +12V via 5A fuse
7	Black	Gnd	Car's ground
8	Green	DISP2	Remote display TverTrip Pilot data channel

5 First setup

After connecting the device, check again all wires and connectors. Switch power on, all three display lines should show zeros. Time and date setup is not necessary for simple navigation, but they are helpful in competitions where time limits are used. Calibration number setup is mandatory, without correct calibration number TverTrip can't show correct distance and speed. Calibration number depends on the probe's type, car's transmission parameters, wheels diameter, and should be checked before an every race. TverTrip Profi has two calibration numbers which may be swap or changed very quickly for example, in case of the tires change during the race.

5.1 Time setup

To change a current time press "F" then "TIME" keys. After that enter 6 digits of current time in HHMMSS format (hours, minutes, seconds). Enter the leading zeros if hours or minutes values are less than 10. To save the time value press "F" key or CLR(STR1) to cancel.

5.2 Date setup

To change a current date press in sequence "F", "STR3", "7" keys, and enter 6 digits of the current date in DDMMYY format (day, month, year). Enter the leading zeros if day or month values are less than 10, for example, 080311 combination means 8 March of 2011. To save the date press "F" key or CLR(STR1) to cancel.

5.3 Choose the probe

In case you have two probes, connected to TverTrip Profi, you have to choose one of them to operation. Depending on probes types you may need to have different calibration numbers for different probes. If both probes measure the same value (for example, they both installed on the one wheel) you may use one calibration number for both probes.

To check which probe is being used now, you have to press "PROBE" key. In the third line will be shown "P1" for first probe or "P2" for second probe. Press "PROBE" key again to return to normal display mode.

To change the current probe press "PROBE" and "1" or "2" keys for the first or second probe accordingly.

5.4 Calibration number setup

Calibration number is a distance in millimeters which car passes from one pulse of probe to the next one. To choose which calibration number will be used as active, press "CAS" key and "1" key for the first or "2" for the second calibration number. Its current value will be shown. To exit of this mode press any key.

5.4.1 Known calibration number

If calibration number is known, press "F", "CAS" keys, and enter 5 digits of calibration number (with leading zeros), and press "F" key to store this number or CLR(STR1) to cancel.

In case of unknown calibration number it may be measured by different methods, described below.

5.4.2 Calibration kilometer

In some races roadbooks are made by using so called calibration kilometer, which may differ from the real one. To setup TverTrip in such case you have to drive to the beginning of calibration kilometer (some sign, chosen by race organizer). Stop the car, press "F", "CAL" keys, on third display line will be shown "C00000". Drive car smoothly to the end of calibration kilometer, stop the car and press "F", "CAL" keys. Calibration number is fixed at the moment of pressing on "CAL" key. New calibration number will be shown on third line. To save it press "F" key or "CLR(STR1)" to cancel.

5.4.3 Known distance

If there is a some known distance you may calibrate TverTrip Profy by this method. Drive to the beginning of the distance, reset local distance counter in the second line by pressing "CLR(STR2)" key, drive smoothly known distance and stop. Press "CAL" key, values on the first and second distance lines will be frozen, now you may change calibration number by pressing "+/-" key to increase it, and "PROBE" key to decrease it. Distances will be recounted with new calibration number. When you will get exact distance on second line, press "F" key to store calibration number or "CLR(STR1)" to cancel any changes.

When you will have some experience in this method, you may drive without stops through known distance. You just have to press "CLR(STR2)" and "CAL" keys in exact road points and adjust calibration number. You even don't have to reset distance counter if you know distance value at the end of the road.

5.4.4 Using GPS receiver

This method suitable for both setup and check of the calibration number. On a smooth and straight road drive a car with constant speed and set calibration number by any previously discussed ways thus both speeds on GPS receiver and TverTrip were equal.

6 User interface

TverTrip Profi has digit LED display with three lines and two keyboard sections. Left keyboard section has ten keys, which work as function keys to change device's parameters, display values and as numpad to enter numbers. Right keyboard section consists of three clearing keys to zero different counters and "F" key used as "Function" key to change function keys behavior and as "Enter" key to finish commands.

6.1 Commands list

Some commands demands only one key, some demands keys combination. To enter keys combination you should press one key after another, as described in a commands list. For example, "F", "DST" command means you should press "F" key, release it, then press "DST" key and release it. You should not press several keys simultaneously, only one by one.

If command demands some additional numbers input, it is usually finished by "F(ENTER)" key or you may cancel command by "CLR(STR1)" key.

Table 3 contains full commands descriptions listed by function keys numbers.

Table 3. Commands list

	Command	Action
1	FRZ	Freeze/Unfreeze values on the first and second display lines. Reset local distance interval in the second line.
2	F, FRZ	Switch off the display for power saving. Only one point stays visible. To turn on the display press any button besides "F".
3	CAL	Start known distance calibration mode. Freezes the first and second lines. To change current calibration number press "+/-" key to raise its value or "PROBE" to lower its value. Frozen distance values recounted by the new calibration number. To store new calibration number press "F" key or "CLR(STR1)" to cancel.
4	F, CAL	Start calibration kilometer calibration mode. At the beginning of calibration kilometer press "F", "CAL", in the third line C00000 will be shown. After passing calibration kilometer press "F", "CAL", in the third line new calibration number will be shown. To store new calibration number press "F" key or "CLR(STR1)" to cancel.
5	TSD	Show in the third line speed / average speed / deviation from the mean speed.
6	F, TSD	Setup the mean speed. Enter 3 digits of mean speed value with leading zero in kilometers per hour. To store the mean speed press "F" key or "CLR(STR1)" to cancel.
7	CAS	Show and change the current calibration number. Press key "1" for the first calibration number, key "2" for the second one. To exit from this mode press any key.
8	F, CAS	Set calibration number. Enter 5 digits with leading zeros. To store new calibration number press "F" key or "CLR(STR1)" to cancel.
9	DST	Show in the first line total distance / current date / current time.
10	F, DST	Set the total distance counter in the first line in tens meters. Local distance from the second line will be added to this value. Enter 5 digits with leading zeros. For example, 05023 means 50 km 230 m. To store distance press "F" key or "CLR(STR1)" to cancel.
11	DSS	Show in the second line local distance / stopwatch.
12	F, DSS	Set the total distance counter in the first line in tens meters. Enter 5 digits with leading zeros. For example, 05023 means 50 km 230 m.

13	TIME	Show in the third line deviation from the mean speed in seconds / speed. Value of the deviation may be positive or negative.
14	F, TIME	Set current time in 6 digit HHMMSS format (hours, minutes, seconds). To store time press "F" key or "CLR(STR1)" to cancel.
15	TIS	Start / Stop stopwatch.
16	F, TIS	Reset stopwatch.
17	+/-	Switch the direct or reverse distance count. If a distance is displayed minus sign in its line will be shown.
18	F, +/-	Change display brightness (3 values).
19	PROBE	Show the active probe in the third line. P1 means first probe, P2 means second probe is used. Press "PROBE" again to leave this mode. To change active probe press "1" or "2" key accordingly.
20	F, PROBE	Show in the third line stored mean speed / speed.
21	CLR STR1	In different setup modes is used to escape from value setting or exit to standard mode: first line – total distance, second line – interval distance, third line – current speed. To reset total distance counter in the first line press and hold this key more than 3 seconds.
22	CLR STR2	Reset local distance counter in the second line.
23	F, STR2	Remote display TverTrip Pilot control. See section 6.2 for more details.
24	F, STR2, +/-	Change remote display brightness (3 values).
25	CLR STR3	Reset mean speed. To reset all counters press and hold this key more than 5 seconds. After reset the first probe and the first calibration number will be used as active.
26	F,STR3,0	Set and turn on the distance limit. Enter 5 digits with leading zeros. To store this value press "F" key or "CLR(STR1)" to cancel. If distance limit is set, in the first digit in the third line symbol $\bar{\text{—}}$ will be shown. If this limit is reached external relay will be switched on. To turn off alarm press CLR(STR1) key. To turn off distance limit press "F", "CLR(STR3)", "0", if distance limit is on.
27	F,STR3,1	Set the maximum speed limit. In case of exceeding of this speed limit external relay will be switched on continuously. Enter 3 digits of speed limit value with leading zero in kilometers per hour. To store it press "F" key or "CLR(STR1)" to cancel.
28	F,STR3,2	Set the medium speed limit. In case of exceeding of this speed limit external relay will be switched in a pulse mode. Enter 3 digits of speed limit value with leading zero in kilometers per hour. To store it press "F" key or "CLR(STR1)" to cancel.

29	F,STR3,3	Set the low speed limit. In case of exceeding of this speed limit external relay will be switched in a pulse mode with a long period between pulses. Enter 3 digits of speed limit value with leading zero in kilometers per hour. To store it press "F" key or "CLR(STR1)" to cancel.
30	F,STR3,4	Switch on speeding alarm via external relay. Speed limits are set as described above. In the first digit of the third line symbol 'L' will be shown.
31	F,STR3,5	Switch off speeding alarm via external relay.
32	F,STR3,7	Set the current date. Enter 6 digits of the current date in DDMMYY format (day, month, year). Enter the leading zeros if day or month values are less then 10, for example, 090511 combination means 9 May of 2011. To save the date press "F" key or CLR(STR1) to cancel.
33	F,STR3,9	Show the device firmware version. Press any key to return back.

6.2 Remote display control

TverTrip Profi may be used with additional display for drivers TverTrip Pilot. It helps to a driver to control current speed and local distance interval or any other parameters described in the table 4. To setup TverTrip Pilot you should do next steps on the TvetTrip Profi control panel:

- 1) Press "F", "CLR(STR2)" keys to set remote display control mode. In the third line of TverTrip Profi "E1 X" will be shown, where "X" is a parameter's number shown on the first line of remote display.
- 2) Enter parameter number by pressing according number key. On the third line "E2 X" will be shown, where "X" is a number of parameter, shown on the second line of remote display.
- 3) Enter second parameter's number by numpad. Device will return back from this mode automatically.

Table 4. Remote display parameters

Number	Remote display parameter
0	Time
1	Speed
2	Mean speed
3	Standard mode: first line – speed, second line – total distance
4	Deviation from the mean speed in km/h
5	Stopwatch
6	Deviation from the mean speed in seconds
7	Total distance
8	Local distance interval

7 Additional information

Latest news, documentation and additional information about TverTrip products you can get on the web-site www.tvertrip.com.

Feel free to ask any questions via e-mail by address info@tvertrip.com.