

REG10J0001-0100



Renesas Starter Kit for H8SX1582 User's Manual

RENESAS SINGLE-CHIP MICROCOMPUTER
H8SX FAMILY

Rev.1.00
Revision date : 25.11.2005

Renesas Technology Europe Ltd.
www.renesas.com

Table of Contents

| | |
|--------------------------------------|----|
| Table of Contents | ii |
| Chapter 1. Preface | 4 |
| Chapter 2. Purpose | 5 |
| Chapter 3. Power Supply | 6 |
| 3.1. Requirements | 6 |
| 3.2. Power – Up Behaviour | 6 |
| Chapter 4. Board Layout | 7 |
| 4.1. Component Layout | 7 |
| 4.2. Board Dimensions | 8 |
| Chapter 5. Block Diagram | 9 |
| Chapter 6. User Circuitry | 10 |
| 6.1. Switches | 10 |
| 6.2. LEDs | 10 |
| 6.3. Potentiometer | 10 |
| 6.4. Serial port | 11 |
| 6.5. LCD Module | 12 |
| 6.6. Option Links | 13 |
| 6.7. Oscillator Sources | 14 |
| 6.8. Reset Circuit | 14 |
| Chapter 7. Modes | 15 |
| 7.1. FDT Settings | 15 |
| 7.1.1. Boot mode | 16 |
| 7.1.2. User Boot mode | 17 |
| 7.1.3. User Mode | 18 |
| Chapter 8. Programming Methods | 19 |
| 8.1. Serial Port Programming | 19 |
| 8.2. E10A Header | 19 |
| Chapter 9. Headers | 20 |
| 9.1. Microcontroller Headers | 20 |
| 9.2. Application Headers | 24 |
| Chapter 10. Code Development | 26 |
| 10.1. Overview | 26 |
| 10.2. Compiler Restrictions | 26 |
| 10.3. Mode Support | 26 |
| 10.4. Breakpoint Support | 26 |
| 10.5. Code located in RAM | 26 |
| 10.6. HMon Code Size | 26 |
| 10.7. Memory Map | 28 |

| | |
|--|----|
| 10.8. Baud Rate Setting..... | 29 |
| 10.9. Interrupt mask sections | 29 |
| Chapter 11. Component Placement..... | 30 |
| Chapter 12. Additional Information | 31 |
| REVISION HISTORY | 32 |

Chapter 1. Preface

Cautions

This document may be, wholly or partially, subject to change without notice.

All rights reserved. No one is permitted to reproduce or duplicate, in any form, a part or this entire document without the written permission of Renesas Technology Europe Limited.

Trademarks

All brand or product names used in this manual are trademarks or registered trademarks of their respective companies or organisations.

Copyright

© Renesas Technology Europe Ltd. 2005. All rights reserved.

© Renesas Technology Corporation. 2005. All rights reserved.

Website: <http://www.renesas.com/>

Glossary

| | |
|------|--------------------------------|
| BRR | Baud Rate Register |
| ERR | Error Rate |
| HMON | Embedded Monitor |
| RTE | Renesas Technology Europe Ltd. |
| RSK | Renesas Starter Kit |
| RSO | Renesas Solutions Corp. |

Chapter 2.Purpose

This RSK is an evaluation tool for Renesas microcontrollers.

Features include:

- Renesas Microcontroller Programming.
- User Code Debugging.
- User Circuitry such as switches, LEDs and potentiometer(s).
- Sample Application.
- Sample peripheral device initialisation code.

The CPU board contains all the circuitry required for microcontroller operation.

This manual describes the technical details of the RSK hardware. The Quick Start Guide and Tutorial Manual provide details of the software installation and debugging environment.

Chapter 3. Power Supply

3.1. Requirements

This CPU board operates from a 5V power supply.

A diode provides reverse polarity protection only if a current limiting power supply is used.

All CPU boards are supplied with an E8 debugger. This product is able to power the CPU board with up to 300mA. When the CPU board is connected to another system that system should supply power to the CPU board.

All CPU boards have an optional centre positive supply connector using a 2.0mm barrel power jack.

Warning

The CPU board is neither under nor over voltage protected. Use a centre positive supply for this board.

3.2. Power – Up Behaviour

When the RSK is purchased the CPU board has the 'Release' or stand alone code from the example tutorial code pre-programmed into the Renesas microcontroller. On powering up the board the user LEDs will start to flash. Switch 2 will cause the LEDs to flash at a rate controlled by the potentiometer.

Chapter 4.Board Layout

4.1.Component Layout

The following diagram shows top layer component layout of the board.

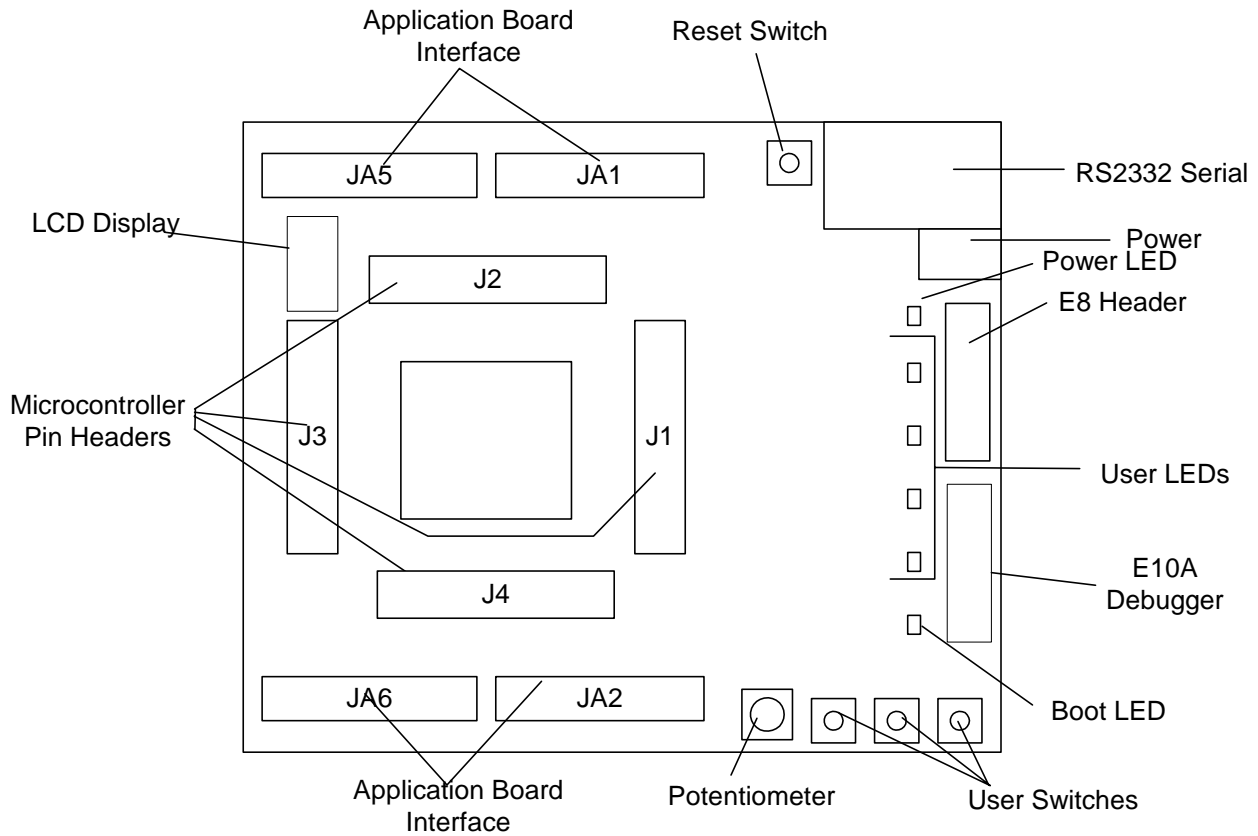


Figure 4-1: Board Layout

4.2.Board Dimensions

The following diagram gives the board dimensions and connector positions. All through hole connectors are on a common 0.1" grid for easy interfacing.

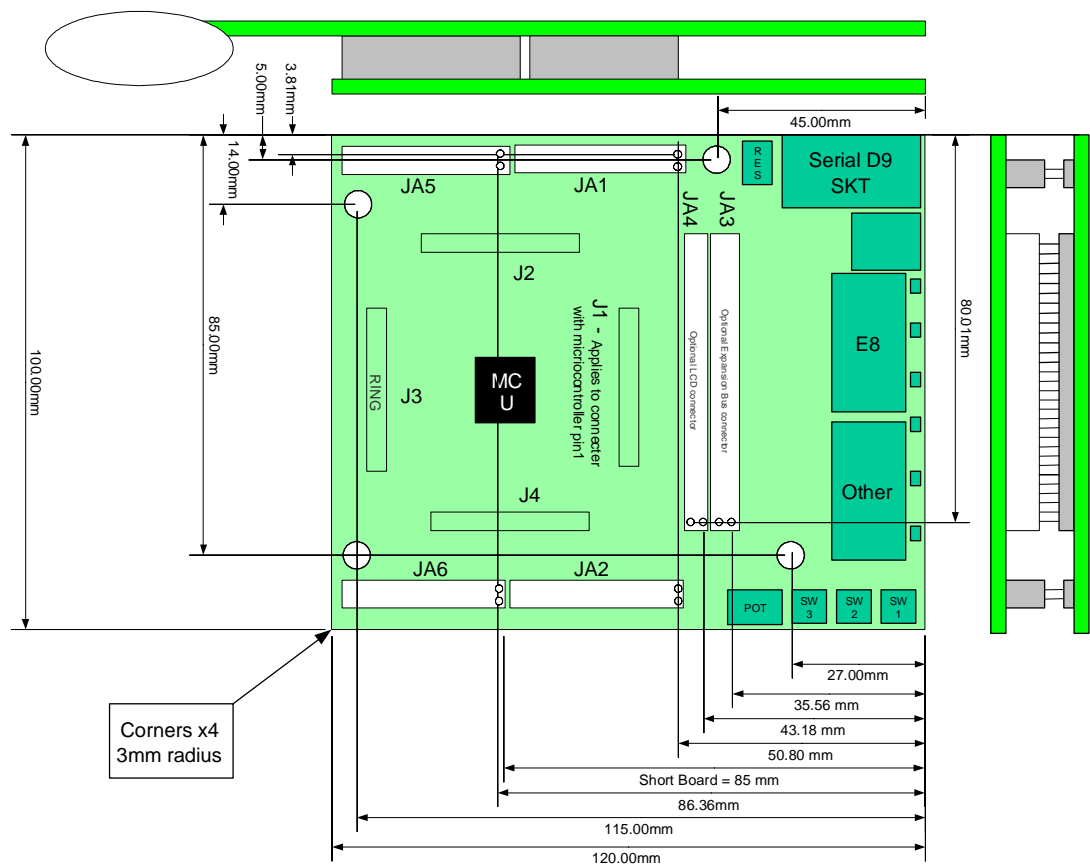


Figure 4-2 : Board Dimensions

Chapter 5. Block Diagram

Figure 5-1 shows the CPU board components and their connectivity.

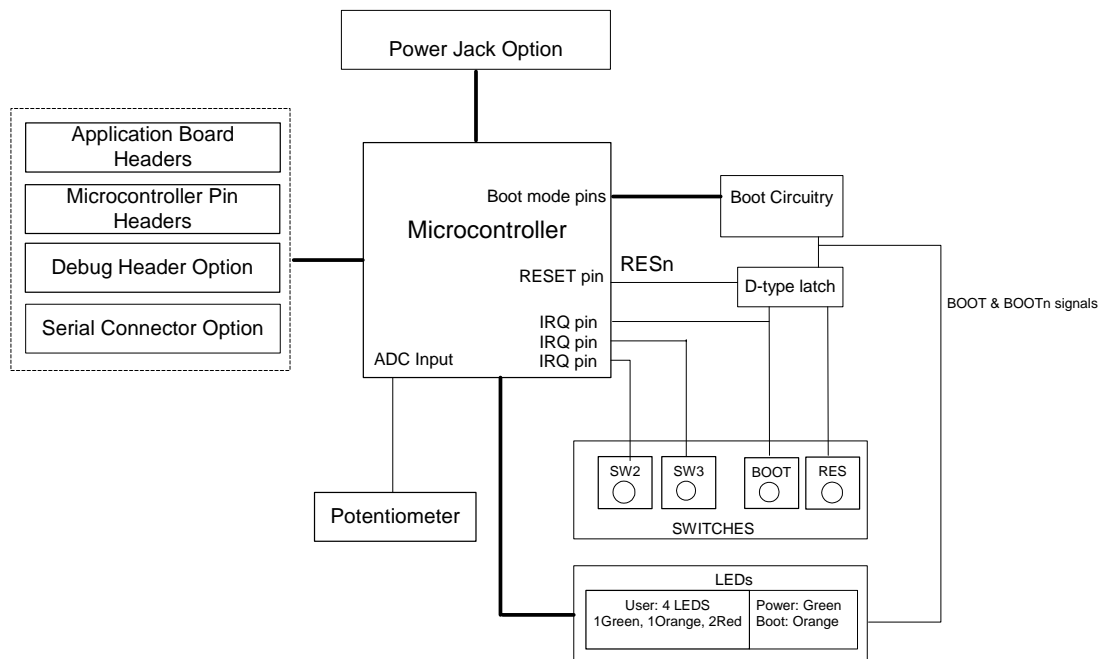


Figure 5-1: Block Diagram

Figure 5-2 shows the connections to the RSK.

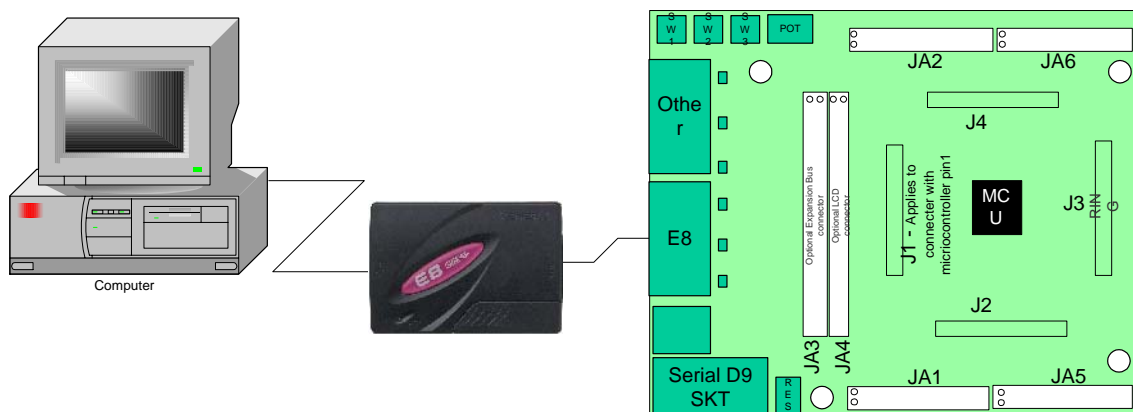


Figure 5-2 : RSK Connctions

Chapter 6. User Circuitry

6.1. Switches

There are four switches located on the CPU board. The function of each switch and its connection are shown in Table 6-1.

| Switch | Function | Microcontroller |
|-----------|--|---|
| RES | When pressed; the CPU board microcontroller is reset. | RESn |
| SW1/BOOT* | Connects to an IRQ input for user controls. The switch is also used in conjunction with the RES switch to place the device in BOOT mode when not using the E8 debugger. | IRQ8-A, Pin 58 (Port 2, pin 0) |
| SW2* | Connects to an IRQ line for user controls. | IRQ9-A, Pin 59 (Port 2, pin 1) |
| SW3* | Connects to the ADC trigger input. Option link allows connection to IRQ line. The option is a pair of OR links. | ADTRG, Pin 57 (Port 1, pin 7) OR IRQ10-A, Pin 60 (Port 2, pin 2) |

Table 6-1: Switch Functions

*Refer to schematic for detailed connectivity information.

6.2. LEDs

There are six LEDs on the CPU board. The green 'POWER' LED lights when the board is powered. The orange BOOT LED indicates the device is in BOOT mode when lit. The four user LEDs are connected to an IO port and will light when their corresponding port pin is set low.

Table 6-2, below, shows the LED pin references and their corresponding microcontroller port pin connections.

| LED Reference (As shown on silkscreen) | Microcontroller Port Pin function | Microcontroller Pin Number | Polarity |
|--|-----------------------------------|----------------------------|------------|
| LED0 | Port I 0 | 113 | Active Low |
| LED1 | Port I 1 | 115 | Active Low |
| LED2 | Port I 2 | 118 | Active Low |
| LED3 | Port I 3 | 12 | Active Low |

Table 6-2: LED Port

6.3. Potentiometer

A single turn potentiometer is connected to AN0 of the microcontroller. This may be used to vary the input analog voltage value to this pin between AVCC and Ground.

6.4.Serial port

The microcontroller programming serial port (SCI4) is connected to the E8 connector. This serial port can optionally be connected to the RS232 transceiver by moving option resistors and fitting the D connector in position J9. The connections to be moved are listed in the following table.

| Description | Function | Fit For E8 | Remove for E8 | Fit for RS232 | Remove for RS232 |
|-------------|-------------------------|------------|---------------|---------------|------------------|
| SCI4 Tx | Programming Serial Port | R15 | R14 | R14 | R15 |
| SCI4 Rx | Programming Serial Port | R12 | R13 | R13 | R12 |
| SCI4 Clk | Programming Serial Port | R10 | NA | NA | NA |

Table 6-3 - Serial Option Links

The board is designed to accept a straight through RS232 cable. A secondary microcontroller serial port is available and connected to the application headers. Please refer to the schematic diagram for more details on the available connections.

The serial baud rates supported by this CPU board are shown below. Note: these values are calculated from the frequency value of the main oscillating source fitted by default on this CPU board.

| 6MHz x 4 = 24MHz | | Asynchronous Serial Baud Rate Evaluation | | | | | | | | | | |
|------------------|-----|--|-------|-----|-------|--------|-----|-------|-------|-----|-------|-------|
| N | 0 | | | 1 | | | 2 | | | 3 | | |
| | BRR | Rate | ERR | BRR | Rate | ERR | BRR | Rate | ERR | BRR | Rate | ERR |
| 110 | | | | | | | | | | 106 | 110 | -0.44 |
| 300 | | | | | | | 155 | 300 | 0.16 | 38 | 300 | 0.16 |
| 1200 | | | | 155 | 1202 | 0.16 | 38 | 1202 | 0.16 | 9 | 1172 | -2.34 |
| 2400 | | | | 77 | 2404 | 0.16 | 19 | 2344 | -2.34 | 4 | 2344 | -2.34 |
| 4800 | 155 | 4808 | 0.16 | 38 | 4808 | 0.16 | 9 | 4688 | -2.34 | 1 | 5859 | 22.07 |
| 9600 | 77 | 9615 | 0.16 | 19 | 9375 | -2.34 | 4 | 9375 | -2.34 | 0 | 11719 | 22.07 |
| 19200 | 38 | 19231 | 0.16 | 9 | 18750 | -2.34 | 1 | 23438 | 22.07 | | | |
| 38400 | 19 | 37500 | -2.34 | 4 | 37500 | -2.34 | 0 | 46875 | 22.07 | | | |
| 57600 | 12 | 57692 | 0.16 | 2 | 62500 | 8.51 | | | | | | |
| 115200 | 6 | 107143 | -6.99 | 1 | 93750 | -18.62 | | | | | | |
| 230400 | 2 | 250000 | 8.51 | | | | | | | | | |
| 250000 | 2 | 250000 | 0.00 | | | | | | | | | |
| 375000 | 1 | 375000 | 0.00 | | | | | | | | | |
| 750000 | 0 | 750000 | 0.00 | | | | | | | | | |

Table 6-4 : BRR Settings

6.5.LCD Module

A LCD module can be connected to the connector J13. Any module that conforms to the pin connections and has a KS0066u compatible controller can be used with the tutorial code. The LCD module uses a 4bit interface to reduce the pin allocation. No contrast control is provided; this must be set on the display module.

Table 6-5 shows the pin allocation and signal names used on this connector.

The module supplied with the CPU board only supports 5V operation.

| J13 | | | | | |
|-----|---------------------------|------------|-----|------------------|------------|
| Pin | Circuit Net Name | Device Pin | Pin | Circuit Net Name | Device Pin |
| 1 | Ground | - | 2 | 5V Only | - |
| 3 | No Connection | - | 4 | DLCDRS | 51 |
| 5 | R/W (Wired to Write only) | - | 6 | DLCDE | 55 |
| 7 | No Connection | - | 8 | No connection | - |
| 9 | No Connection | - | 10 | | - |
| 11 | DLCD4 | 68 | 12 | DLCD5 | 67 |
| 13 | DLCD6 | 66 | 14 | DLCD7 | 61 |

Table 6-5 LCD Module Connections

6.6.Option Links

Table 6-6 below describes the function of the option links contained on this CPU board. The default configuration is indicated by **BOLD** text.

| Option Link Settings | | | | |
|----------------------|-------------------------|---|--|--------------------|
| Reference | Function | Fitted | Alternative (Removed) | Related To |
| R10 | Programming Serial Port | <i>Connects SCK to E8</i> | SCK disconnected from E8 | R12, R13, R14, R15 |
| R12 | Programming Serial Port | Connects E8 to Programming Serial port. | MUST be removed if R13 fitted. | R13 |
| R15 | Programming Serial Port | Connects E8 to Programming Serial port. | Should be removed if R14 fitted. | R14 |
| R13 | Programming Serial Port | Connects RS232 port to Programming SCI port | MUST be removed if R12 fitted. | R12 |
| R14 | Programming Serial Port | Connects RS232 port to Programming SCI port | Should be removed if R15 fitted. | R15 |
| R62 | RS232 Driver | Enables RS232 Serial Transceiver | MUST be removed if R18 Fitted | R18, R13, R14 |
| R18 | RS232 Driver | Disables RS232 Serial Transceiver | MUST be removed if R62 Fitted | R62, R13, R14 |
| R36 | Serial Connector | Connects Alternate serial to D connector | Disconnects Alternate serial from D connector. | R31 |
| R31 | Serial Connector | Connects Alternate serial to D connector | Disconnects Alternate serial from D connector. | R36 |
| R35 | Alternate Serial | Connects Alternate Serial to RS232 Transceiver | Should be removed if External serial device. | R37, JA6 |
| R37 | Alternate Serial | Connects Alternate Serial to RS232 Transceiver | MUST be removed if External serial device. | R35, JA6 |
| R53 | External Oscillator | Connects External Ring header pins to Microcontroller | Disconnects sensitive microcontroller signals from external pins. | R55 |
| R55 | External Oscillator | Connects External Ring header pins to Microcontroller | Disconnects sensitive microcontroller signals from external pins. | R53 |
| R46 | Power | Supply to microcontroller | Fit Low ohm resistor to measure current | R63 |
| R63 | Analogue Power | Connects 5V supply to Analogue supply | Analogue supply MUST be provided from external interface pins. | JA1 |
| R58 | SW3 | Connects SW3 to Analogue Trigger input | Disconnected | R59 |
| R59 | SW3 | Connects SW3 to IRQ input | Disconnected | R58 |

Table 6-7: 2-Pin jumpers

6.7.Oscillator Sources

A crystal oscillator is fitted on the CPU board and used to supply the main clock input to the Renesas microcontroller. Table 6-8 details the oscillators that are fitted and alternative footprints provided on this CPU board:

| Component | | | | | |
|--------------|--------|-----------------|--------------|--|---------------------------------|
| | | Value : Package | Manufacturer | | |
| Crystal (X1) | Fitted | 6MHz : HC/49U | Approved | See www.renesas.com for details | |
| | | | CPU board | Magna Frequency Components C-Mac | X6M0GCBE494SM* LFX TAL017159 |

Table 6-8: Oscillators / Resonators

Warning: When replacing the default oscillator with that of another frequency, the debugging monitor will not function unless the following are corrected:

- FDT programming kernels supplied are rebuilt for the new frequency
- The supplied HMON debugging monitor is updated for baud rate register settings.

The user is responsible for code written to support operating speeds other than the default. See the HMON User Manual for details of making the appropriate modifications in the code to accommodate different operating frequencies.

6.8.Reset Circuit

The CPU Board includes a simple latch circuit that links the mode selection and reset circuit. This provides an easy method for swapping the device between Boot Mode, User Boot Mode and User mode. This circuit is not required on customers boards as it is intended for providing easy evaluation of the operating modes of the device on the RSK. Please refer to the hardware manual for more information on the requirements of the reset circuit.

The reset circuit operates by latching the state of the boot switch on pressing the reset button. This control is subsequently used to modify the mode pin states as required.

The mode pins should change state only while the reset signal is active to avoid possible device damage.

The reset is held in the active state for a fixed period by a pair of resistors and a capacitor. Please check the reset requirements carefully to ensure the reset circuit on the user's board meets all the reset timing requirements.

Chapter 7. Modes

The CPU board supports User mode, Boot mode and User Boot mode. User mode may be used to run and debug user code, while Boot mode may only be used to program the Renesas microcontroller with program code. User Boot mode can only be used to program the User Mat (the main area of 768Kbytes of Flash ROM on the device). It does not support programming of the user boot area. User Boot mode is used to run a user supplied boot-loader program stored in the user boot MAT (the smaller area, 8Kbytes, of Flash ROM). To program the user boot MAT, the device must be in Boot mode. Further details of programming the MATs are available in the H8SX/1582 hardware manual.

When using the E8 debugger supplied with the RSK the mode transitions are executed automatically. The CPU board provides the capability of changing between User and Boot / User Boot modes using a simple latch circuit. This is only to provide a simple mode control on this board when the E8 is not in use.

To manually enter boot mode, press and hold the SW1/BOOT. The mode pins are held in their boot states while reset is pressed and released. Release the boot button. The BOOT LED will be illuminated to indicate that the microcontroller is in boot mode.

More information on the operating modes can be found in the device hardware manual.

7.1. FDT Settings

In the following sections the tables identify the FDT settings required to connect to the board using the E8Direct debugger interface. The 'A' interface is inverted on the RSK board. This is to ensure the board can function in a known state when the E8 is connected but not powered. The E8 Debugger contains the following 'pull' resistors.

| E8 Pin | Resistor |
|--------|------------------|
| A | Pull Down (100k) |
| B | Pull Up (100k) |
| C | Pull Down (100k) |
| D | Pull Up (100k) |

Table 7-1: E8 Mode Pin drives

7.1.1.Boot mode

The boot mode settings for this CPU board are shown in Table 7-2 below:

| MD1 | MD0 | LSI State after Reset End | FDT Settings | |
|-----|-----|------------------------------|--------------|---|
| | | | A | B |
| 1 | 0 | Boot Mode | 0 | 0 |

Table 7-2: Mode pin settings

The following picture shows these settings made in the E8Direct configuration dialog from HEW.

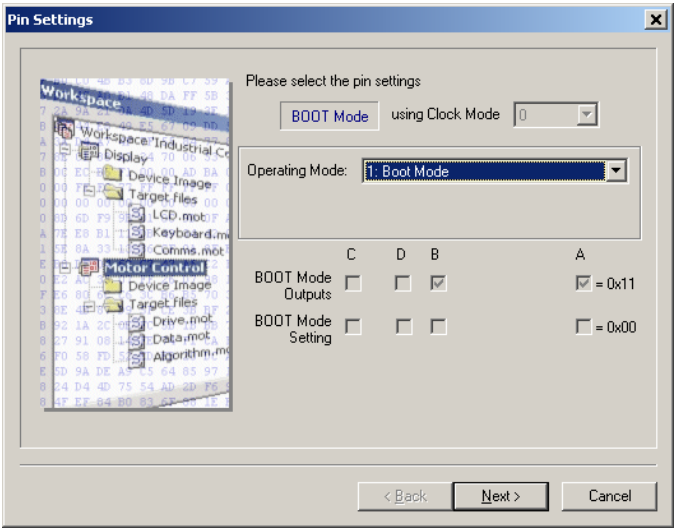


Figure 7-1: Boot Mode FDT configuration

7.1.2. User Boot mode

A Note on Mats:

The H8SX/1582 possesses two distinct areas of Flash, User MAT (768KByte) and User Boot MAT (8KByte). The User Boot MAT is a separate area of FLASH from User MAT, intended to hold user boot code.

A custom boot stub could be programmed into User Boot MAT which allows programming and erasing of the User MAT in User Mode, without erasing the contents of the User Boot MAT. Once User Boot Mode is entered, code contained in the User Boot MAT is executed. This differs to Boot mode, as Boot mode erases all User MAT and requires an auto-baud on a fixed SCI port to be performed. The existence of the User Boot Mat therefore allows an alternative communications port to be used for further code download to the User MAT. Programming of the User Boot Mat may only be performed in boot mode.

The user may place the H8SX/1582 device provided on a CPU board for the H8SX1582 board in user boot mode by fitting jumper J13. The Boot procedure must then be performed for entry into user boot mode. The Boot LED should light, suggesting a transition to user boot mode.

The user boot mode settings for this CPU board are shown in Table 7-3 below:

| MD1 | MD0 | LSI State after Reset End | FDT Settings | |
|-----|-----|---------------------------|--------------|---|
| | | | A | B |
| 0 | 1 | User Boot Mode | 1 | 1 |

Table 7-3: Mode pin settings

7.1.3. User Mode

For the device to enter User Mode, reset must be held active while the microcontroller mode pins are held in states specified for User Mode operation. 100K pull up and pull down resistors are used to set the pin states during reset.

The H8SX/1582 supports 4 user modes. The memory map in all of these modes is 16Mbyte in size. The default user mode for CPU board supporting H8SX1582 is 7.

| MD1 | MD0 | LSI State after Reset End | FDT Settings | |
|-----|-----|------------------------------|--------------|---|
| | | | A | B |
| 1 | 1 | User Mode | 0 | 1 |

Table 7-4: Mode pin settings

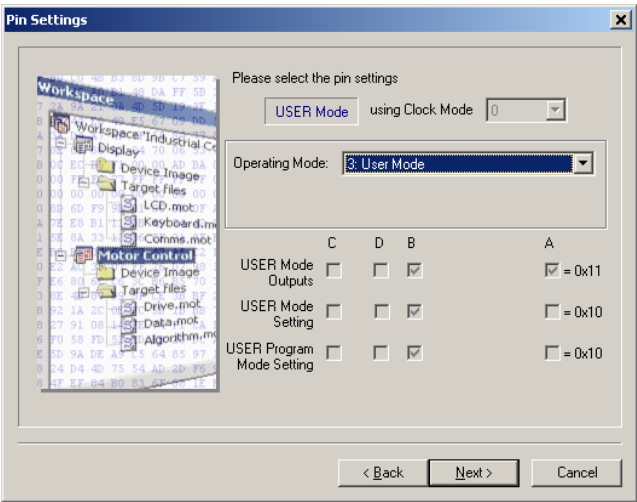


Figure 7-2: User mode FDT configuration

Chapter 8. Programming Methods

All of the Flash ROM on the device (i.e. both MATs) can be programmed when the device is in Boot mode. Once in boot mode, the boot-loader program pre-programmed into the microcontroller executes and attempts a connection with a host (for example a PC). On establishing a connection with the microcontroller, the host may then transmit program data to the microcontroller via the appropriate programming port.

Table 8-1 below shows the programming port for this Renesas Microcontroller and its associated pins

| Programming Port Table – Programming port pins and their CPU board signal names | | | |
|---|-------------|-------------|-------------|
| SCI4 | TXD4, PIN 5 | RXD4, PIN 7 | SCK4, PIN 8 |
| CPU board Signal Name | PTTX | PTRX | PTCK |

Table 8-1: Serial Port Boot Channel

8.1. Serial Port Programming

This sequence is not required when debugging using the E8 supplied with the kit.

The microcontroller must enter boot mode for programming, and the programming port must be connected to a host for program download. To execute the boot transition, and allow programs to download to the microcontroller, the user must perform the following procedure:

Connect a 1:1 serial cable between the host PC and the CPU board

Depress the BOOT switch and keep this held down

Depress the RESET switch once, and release

Release the BOOT switch

The Flash Development Toolkit (FDT) is supplied to allow programs to be loaded directly on to the board using this method.

8.2. E10A Header

This device supports an optional E10A debugging interface. The E10A provides additional debugging features including hardware breakpoints and hardware trace capability. (Check with the website at www.renesas.com or your distributor for a full feature list).

To utilise the E10A the user will need to fit a 14 way boxed header to J7. To enable the E10A functions the user should also fit a jumper link in position J6.

When J6 is fitted the microcontroller will not operate correctly unless operated via the E10A.

Chapter 9.Headers

9.1.Microcontroller Headers

Table 9-1 to Table 9-4 show the microcontroller pin headers and their corresponding microcontroller connections. The header pins connect directly to the microcontroller pin unless otherwise stated.

| J1 | | | | | |
|-----|------------------|------------|-----|------------------|------------|
| Pin | Circuit Net Name | Device Pin | Pin | Circuit Net Name | Device Pin |
| 1 | SClBbRX | 1 | 2 | SClBbCK | 2 |
| 3 | PIN3 | 3 | 4 | UC_VCC | 4 |
| 5 | PTTX | 5 | 6 | GROUND | 6 |
| 7 | PTRX | 7 | 8 | PTCK | 8 |
| 9 | TDO | 9 | 10 | PIN10 | 10 |
| 11 | TRIGb | 11 | 12 | LED3 | 12 |
| 13 | PIN13 | 13 | 14 | MO_Up | 14 |
| 15 | MO_Vp | 15 | 16 | PIN16 | 16 |
| 17 | MO_Wp | 17 | 18 | CTSRTS | 18 |
| 19 | PIN19 | 19 | 20 | PIN20 | 20 |
| 21 | PIN21 | 21 | 22 | PIN22 | 22 |
| 23 | TRISTn | 23 | 24 | GROUND | 24 |
| 25 | MO_Un | 25 | 26 | UC_VCC | 26 |
| 27 | MO_Vn | 27 | 28 | MO_UD | 28 |
| 29 | PIN29 | 29 | 30 | MO_Wn | 30 |

Table 9-1: J1

| J2 | | | | | |
|-----|------------------|------------|-----|------------------|------------|
| Pin | Circuit Net Name | Device Pin | Pin | Circuit Net Name | Device Pin |
| 1 | PIN31 | 31 | 2 | PIN32 | 32 |
| 3 | PIN33 | 33 | 4 | PIN34 | 34 |
| 5 | PIN35 | 35 | 6 | IO_0 | 36 |
| 7 | PIN37 | 37 | 8 | IO_1 | 38 |
| 9 | IO_2 | 39 | 10 | IO_3 | 40 |
| 11 | IO_4 | 41 | 12 | IO_5 | 42 |
| 13 | PIN43 | 43 | 14 | IO_6 | 44 |
| 15 | IO_7 | 45 | 16 | UC_VCC | 46 |
| 17 | IRQ0 | 47 | 18 | GROUND | 48 |
| 19 | IRQ1 | 49 | 20 | GROUND | 50 |
| 21 | DLCDRS | 51 | 22 | IRQ2 | 52 |
| 23 | IRQ3 | 53 | 24 | SCIaTX | 54 |
| 25 | SCIaRX | 55 | 26 | SCIaCK | 56 |
| 27 | ADTRG | 57 | 28 | SW1 | 58 |
| 29 | SW2 | 59 | 30 | SW3 | 60 |

Table 9-2: J2

| J3 | | | | | |
|-----|------------------|------------|-----|------------------|------------|
| Pin | Circuit Net Name | Device Pin | Pin | Circuit Net Name | Device Pin |
| 1 | DLCD7 | 61 | 2 | GROUND | 62 |
| 3 | PIN63 | 63 | 4 | UC_VCC | 64 |
| 5 | DLCDE | 65 | 6 | DLCD6 | 66 |
| 7 | DLCD5 | 67 | 8 | DLCD4 | 68 |
| 9 | TMR0 | 69 | 10 | TMR1 | 70 |
| 11 | PIN71 | 71 | 12 | PIN72 | 72 |
| 13 | PIN73 | 73 | 14 | TRSTn | 74 |
| 15 | TMS | 75 | 16 | TDI | 76 |
| 17 | TCK | 77 | 18 | PIN78 | 78 |
| 19 | RESn | 79 | 20 | NMI | 80 |
| 21 | TRIGa | 81 | 22 | UC_VCC | 82 |
| 23 | CON_XTAL | 83 | 24 | CON_EXTAL | 84 |
| 25 | GROUND | 85 | 26 | EMLE | 86 |
| 27 | SClCTX | 87 | 28 | PIN88 | 88 |
| 29 | SClCRX | 89 | 30 | SClCCK | 90 |

Table 9-3: J3

| J4 | | | | | |
|-----|------------------|------------|-----|------------------|------------|
| Pin | Circuit Net Name | Device Pin | Pin | Circuit Net Name | Device Pin |
| 1 | E8_BUSY | 91 | 2 | MD1_E8B | 92 |
| 3 | AD4 | 93 | 4 | AD5 | 94 |
| 5 | AD6 | 95 | 6 | AD7 | 96 |
| 7 | AD0 | 97 | 8 | AD1 | 98 |
| 9 | AD2 | 99 | 10 | AVcc | 100 |
| 11 | AD3 | 101 | 12 | AVss | 102 |
| 13 | AD_POT | 103 | 14 | AVcc | 104 |
| 15 | PIN105 | 105 | 16 | PIN106 | 106 |
| 17 | PIN107 | 107 | 18 | PIN108 | 108 |
| 19 | PIN109 | 109 | 20 | PIN110 | 110 |
| 21 | PIN111 | 111 | 22 | MD0_E8A | 112 |
| 23 | LED0 | 113 | 24 | IIC_SDA | 114 |
| 25 | LED1 | 115 | 26 | PIN116 | 116 |
| 27 | IIC_SCL | 117 | 28 | LED2 | 118 |
| 29 | IIC_EX | 119 | 30 | SCIbTX | 120 |

Table 9-4: J4

9.2.Application Headers

Table 9-5 and Table 9-6 below show the standard application header connections.

| JA1 | | | | | | | | | |
|-----|----------------------|--------|--------------------------|---------------|-----|----------------------------------|----|--------------------------|---------------|
| Pin | Generic Header Name | | CPU board Signal Name | Device Pin | Pin | Header Name | | CPU board Signal Name | Device Pin |
| 1 | Regulated Supply 1 | | 5V | | 2 | Regulated Supply 1 | | GROUND | |
| 3 | Regulated Supply 2 | | 3V3 | | 4 | Regulated Supply 2 | | GROUND | |
| 5 | Analogue Supply | | AVcc | 100,104 | 6 | Analogue Supply | | AVss | 102 |
| 7 | Analogue Reference | | AVref | | 8 | ADTRG | | ADTRG | 57 |
| 9 | ADC0 | I0 | AD0 | 97 | 10 | ADC1 | I1 | AD1 | 98 |
| 11 | ADC2 | I2 | AD2 | 99 | 12 | ADC3 | I3 | AD3 | 101 |
| 13 | DAC0 | | DAC0 | | 14 | DAC1 | | DAC1 | |
| 15 | IOPort | | IO_0 | 36 | 16 | IOPort | | IO_1 | 38 |
| 17 | IOPort | | IO_2 | 39 | 18 | IOPort | | IO_3 | 40 |
| 19 | IOPort | | IO_4 | 41 | 20 | IOPort | | IO_5 | 42 |
| 21 | IOPort | | IO_6 | 44 | 22 | IOPort | | IO_7 | 45 |
| 23 | Open drain | IRQAEC | IRQ3 | 53 | 24 | I ² C Bus - (3rd pin) | | IIC_EX | 119 |
| 25 | I ² C Bus | | IIC_SDA | 114 | 26 | I ² C Bus | | IIC_SCL | 117 |

Table 9-5: JA1 Standard Generic Header

| JA2 | | | | | | | | |
|-----|---------------------|-----|--------------------------|---------------|-----|-----------------------|--------------------------|---------------|
| Pin | Generic Header Name | | CPU board Signal Name | Device Pin | Pin | Header Name | CPU board Signal Name | Device Pin |
| 1 | Open drain | | RESn | 79 | 2 | External Clock Input | EXTAL | 84* |
| 3 | Open drain | | NMIIn | 80 | 4 | Regulated Supply 1 | Vss1 | |
| 5 | Open drain output | | WDT_OVF | | 6 | Serial Port | SCIaTX | 54 |
| 7 | Open drain | WUP | IRQ0 | 47 | 8 | Serial Port | SCIaRX | 55 |
| 9 | Open drain | | IRQ1 | 49 | 10 | Serial Port | SCIaCK | 56 |
| 11 | Up/down | | MO_UD | 28 | 12 | Serial Port Handshake | CTS/RTS | 18 |
| 13 | Motor control | | MO_Up | 14 | 14 | Motor control | MO_Un | 25 |
| 15 | Motor control | | MO_Vp | 15 | 16 | Motor control | MO_Vn | 27 |
| 17 | Motor control | | MO_Wp | 17 | 18 | Motor control | MO_Wn | 30 |
| 19 | Output | | TMR0 | 69 | 20 | Output | TMR1 | 70 |
| 21 | Input | | TRIGa | 81 | 22 | Input | TRIGb | 11 |
| 23 | Open drain | | IRQ2 | 52 | 24 | Tristate Control | TRSTn | 74 |
| 25 | SPARE | | - | | 26 | SPARE | - | |

Table 9-6: JA2 Standard Generic Header

| JA5 | | | | | | | | | |
|-----|---------------------|----|--------------------------|---------------|-----|-------------|----|--------------------------|---------------|
| Pin | Generic Header Name | | CPU board Signal Name | Device Pin | Pin | Header Name | | CPU board Signal Name | Device Pin |
| 1 | ADC4 | I4 | AD4 | 93 | 2 | ADC5 | I5 | AD5 | 94 |
| 3 | ADC6 | I6 | AD6 | 95 | 4 | ADC7 | I7 | AD7 | 96 |
| 5 | CAN | | CAN1TX | | 6 | CAN | | CAN1RX | |
| 7 | CAN | | CAN2TX | | 8 | CAN | | CAN2RX | |
| 9 | Reserved | | | | 10 | Reserved | | | |
| 11 | Reserved | | | | 12 | Reserved | | | |
| 13 | Reserved | | | | 14 | Reserved | | | |
| 15 | Reserved | | | | 16 | Reserved | | | |
| 17 | Reserved | | | | 18 | Reserved | | | |
| 19 | Reserved | | | | 20 | Reserved | | | |
| 21 | Reserved | | | | 22 | Reserved | | | |
| 23 | Reserved | | | | 24 | Reserved | | | |

Table 9-7: JA5 Optional Generic Header

| JA6 | | | | | | | | | |
|-----|---------------------|-------------|-----------------------------|---------------|-----|----------------------|-------------|--------------------------|---------------|
| Pin | Generic Header Name | | CPU board Signal Name | Device Pin | Pin | Header Name | | CPU board Signal Name | Device Pin |
| 1 | DMA | | DREQ | | 2 | DMA | | DACK | |
| 3 | DMA | | TEND | | 4 | Standby (Open drain) | | STBYn | |
| 5 | Host Serial | SCIdTX | RS232TX | 5* | 6 | Host Serial | SCIdRX | RS232RX | 7* |
| 7 | Serial Port | | SCIdRX | 1 | 8 | Serial Port | | SCIdTX | 120 |
| 9 | Serial Port | Synchronous | SCIdTX | 87 | 10 | Serial Port | | SCIdCK | 2 |
| 11 | Serial Port | Synchronous | SCIdCK | 90 | 12 | Serial Port | Synchronous | SCIdRX | 89 |
| 13 | Reserved | | | | 14 | Reserved | | | |
| 15 | Reserved | | | | 16 | Reserved | | | |
| 17 | Reserved | | | | 18 | Reserved | | | |
| 19 | Reserved | | | | 20 | Reserved | | | |
| 21 | Reserved | | | | 22 | Reserved | | | |
| 23 | Reserved | | | | 24 | Reserved | | | |
| 25 | Reserved | | | | 26 | Reserved | | | |

Table 9-8: JA6 Optional Generic Header

* Marked pins are affected by option links.

Chapter 10.Code Development

10.1.Overview

Note: For all code debugging using Renesas software tools, the CPU board must either be connected to a PC serial port via a serial cable or a PC USB port via an E8. An E8 is supplied with the RSK product.

The HMON embedded monitor code is modified for each specific Renesas microcontroller. HMON enables the High-performance Embedded Workshop (HEW) development environment to establish a connection to the microcontroller and control code execution. Breakpoints may be set in memory to halt code execution at a specific point.

Unlike other embedded monitors, HMon is designed to be integrated with the user code. HMon is supplied as a library file and several configuration files. When debugging is no longer required, removing the monitor files and library from the code will leave the user's code operational.

The HMON embedded monitor code must be compiled with user software and downloaded to the CPU board, allowing the users' code to be debugged within HEW.

Due to the continuous process of improvements undertaken by Renesas the user is recommended to review the information provided on the Renesas website at www.renesas.com to check for the latest updates to the Compiler and Debugger manuals.

10.2.Compiler Restrictions

The compiler supplied with this RSK is fully functional for a period of 60 days from first use. After the first 60 days of use have expired, the compiler will default to a maximum of 64k code and data. To use the compiler with programs greater than this size you will need to purchase the full tools from your distributor.

Warning: The protection software for the compiler will detect changes to the system clock. Changes to the system clock back in time may cause the trial period to expire prematurely.

10.3.Mode Support

The HMON library is built to support 16Mbyte Advanced Mode only for the H8SX family.

10.4.Breakpoint Support

The device does not include a user break controller. No breakpoints can be located in ROM code. However, code located in RAM may have multiple breakpoints limited only by the size of the On-Chip RAM. To debug with breakpoints in ROM you need to purchase the E10A-USB on-chip debugger at additional cost.

10.5.Code located in RAM

Double clicking in the breakpoint column in the HEW code window sets the breakpoint. Breakpoints will remain unless they are double clicked to remove them. (See the Tutorial Manual for more information on debugging with the HEW environment.)


10.6.HMon Code Size

HMON is built along with the user's code. Certain elements of the HMON code must remain at a fixed location in memory. The following table details the HMON components and their size and location in memory. For more information, refer to the map file when building code.

| Section | Description | Start Location | Size (H'bytes) |
|---------------|--|-------------------|-------------------|
| RESET_VECTOR | HMON Reset Vector (Vector 0) Required for Start-up of HMON | H' 0000 0000 | 0x0004 |
| SCI_VECTORS | HMON Serial Port Vectors (Vector 160, 161, 162, 163) | H'0000 0280 | 0x000C |
| PHMON | HMON Code | H'0000 3000 | 0x278C |
| CHMON | HMON Constant Data | H'0000 5730 | 0x0136 |
| BHMON | HMON Un-initialised data | Variable | 0x021F |
| UGenU | FDT Kernel. This is at a fixed location and must not be moved. Should the kernel need to be moved it must be re-compiled. | H'0000 1000 | 0xEA8 |
| CUser_Vectors | Pointer used by HMON to point to the start of user code. | H'0000 0800 | 0x0004 |

10.7.Memory Map

The memory map shown in this section visually describes the locations of program code sections related to HMON, the FDT kernels and the supporting code within the ROM/RAM memory areas of the microcontroller.

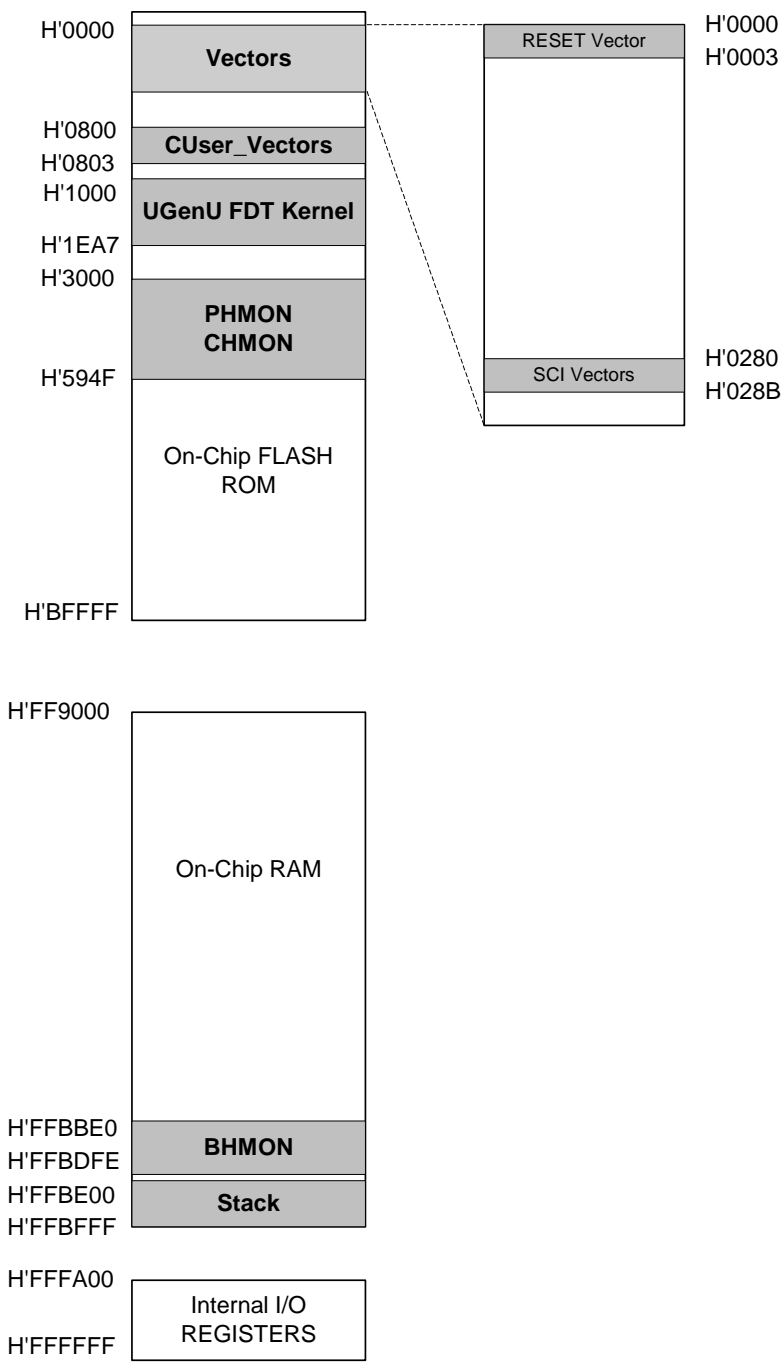


10.8.Baud Rate Setting

HMON is initially set to connect at 250000Baud. The value set in the baud rate register for the microcontroller must be altered if the user wishes to change either the serial communication baud rate of the serial port or the operating frequency of the microcontroller. This value is defined in the `hmonserialconfiguser.h` file, as `SCI_CFG_BRR` (see the Serial Port section for baud rate register setting values). The project must be re-built and the resulting code downloaded to the microcontroller once the BRR value is changed. Please refer to the HMON User Manual for further information.

10.9.Interrupt mask sections

HMON has an interrupt priority of 6. The serial port has an interrupt priority of 7. Modules using interrupts should be set to lower than this value (6 or below), so that serial communications and debugging capability is maintained.

Chapter 11. Component Placement

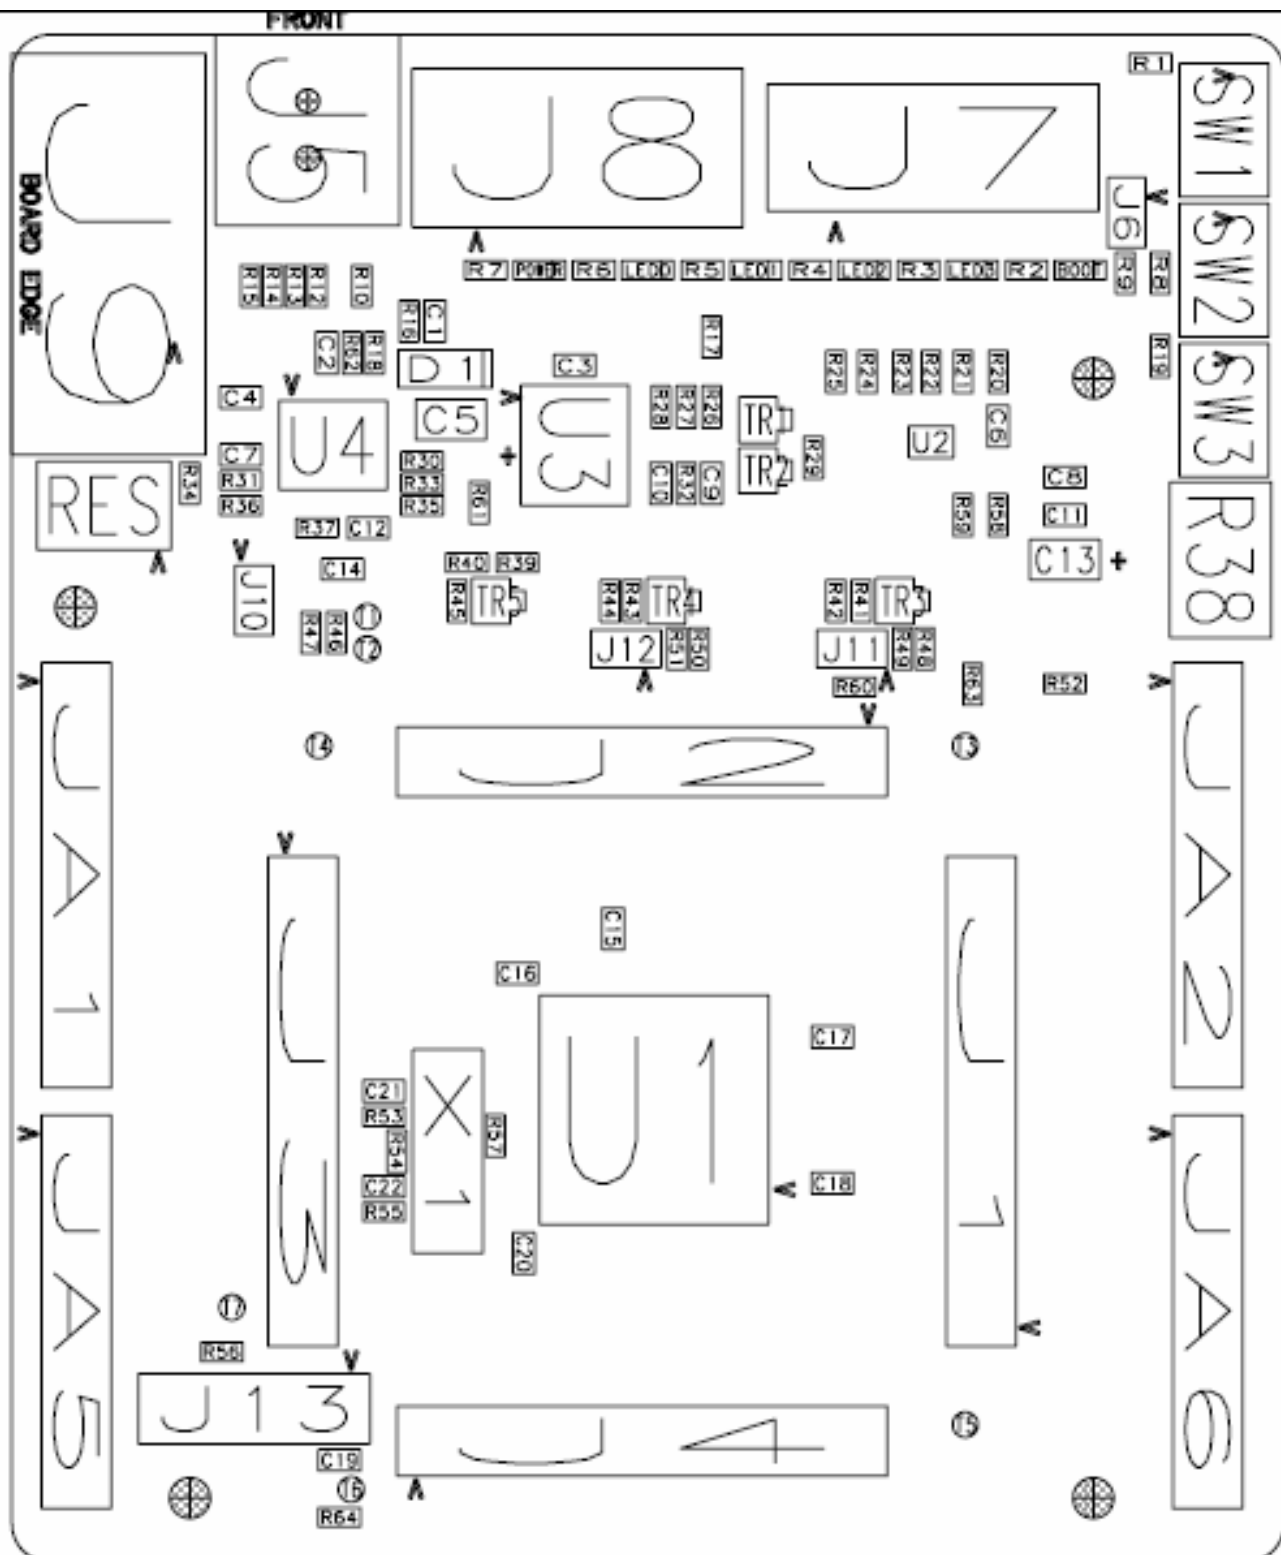

Chapter 12. Additional Information

For details on how to use High-performance Embedded Workshop (HEW), refer to the HEW manual available on the CD or installed in the Manual Navigator.

For information about the H8SX/1582 series microcontrollers refer to the *H8SX/1582 Series Hardware Manual*

For information about the H8SX/1582 assembly language, refer to the *H8 Series Programming Manual*

Further information available for this product can be found on the Renesas website at:

<http://www.renesas.com/rsk>

General information on Renesas Microcontrollers can be found on the following website.

Global: <http://www.renesas.com/>

REVISION HISTORY

| Rev. | Date | Page | Description |
|------|------------|------|---------------|
| 1 | 25.11.2005 | - | First Release |

Renesas Starter Kit for H8SX1582


User's Manual

Publication Date Rev.1.00 Nov 25, 2005

Published by: Renesas Technology Europe Ltd.

©2005 Renesas Technology Europe and Renesas Solutions Corp., All Rights Reserved.

Renesas Starter Kit for H8SX1582
User's Manual

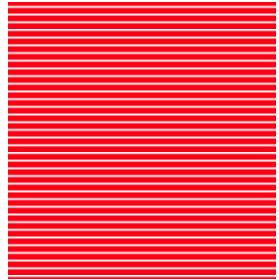

Renesas Technology Europe Ltd.

Dukes Meadow, Millboard Road, Bourne End Buckinghamshire SL8 5FH, United Kingdom