



USER MANUAL

NEPTUNE GB

Keep this manual for future reference.

TABLE OF CONTENTS

1. INTRODUCTION AND UNPACKING	1
2. SAFETY INSTRUCTIONS	1-2
3. OPERATION INSTRUCTIONS	2-3
4. MOUNTING AND INSTALLATION	3-4
5. DMX-512 CONTROL CONNECTIONS	4
6. DMX CHANNELS	5
7. KEY FEATURES	6
8. TECHNICAL SPECIFICATIONS	6
9. MAINTENANCE AND CLEANING	7

1. INTRODUCTION AND UNPACKING


Thank you for purchasing the MICROH NEPTUNE GB laser system. For your own safety and knowledge, please read this manual before installing or operating the device. This manual covers the important information on installation and applications. Please install and operate the fixture according to instructions. Meanwhile, please keep this manual for future reference.

The MICROH NEPTUNE GB laser is made of a new type of high temperature cast aluminum casing. The fixture is designed and manufactured strictly following CE standards, complying with international standard DMX512 protocol. This fixture is applicable but not limited to large-scale live performances, theater, studio, nightclubs and discos.

The MICROH NEPTUNE GB laser system uses 3 coloured laser diodes that are carefully aligned with the internal scan mirrors. Please carefully unpack it when you receive the fixture and check if it was damaged during the transportation. And please check whether the following items are included inside the box:

Fixture – One Power Cord – One Bracket Set – One User Manual – One

2. Safety Instructions

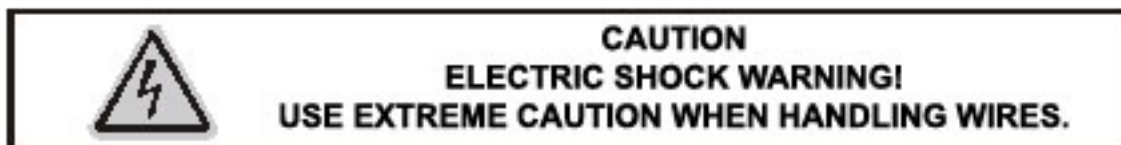

This device has left the factory in perfect condition. In order to maintain this condition and to ensure safe operation, it is absolutely necessary for the user to follow the safety instructions and warning notes written in this user manual.



Important:

Damages caused by the disregard of this user manual are not subject to warranty. The dealer will not accept liability for any resulting defects or problems.

If the device has been exposed to temperature changes, do not switch it on immediately. The arising condensation could damage the device. Leave the device switched off until it has reached room temperature, and is dry.

This device falls under protection-class I, therefore it is essential that the device be grounded. The electrical connection must be carried out by a qualified technician.

The device should only be used with rated voltage and frequency. Make sure that the available voltage is not higher than 120V as stated at the end of this manual.

Make sure the power cord is never crimped or damaged in any way, as this could cause shock and damage. If your power cord is damaged in any way, please purchase a new cable from your local MICROH dealer. Always disconnect power, when the device is not in use or before cleaning it. Never pull out the plug by tugging the power cord.

During initial start-up, some smoke or smell may arise. This is a normal process, and does not necessarily mean that the device is defective. It should decrease gradually. Please do not project the beam onto combustible substances.

Fixtures cannot be installed on or near combustible substances. Keep more than 50cm distance from wall for proper ventilation and air flow. If your fixture is or has become damaged in any way, it shall be exclusively replaced or repaired by the manufacturer to avoid any hazard.



CAUTION!

Never touch the device during operation!
The housing may heat up



CAUTION!

Never look directly into the light source,
as sensitive persons may suffer an epileptic shock.



CAUTION!

The electric connection must only be carried out by a qualified electrician.



LASER RADIATION

A Class 3B laser is hazardous to eyes, if exposed directly. Diffused reflections such as from paper or other matte surfaces are not as harmful.

3. OPERATION INSTRUCTIONS

- Do not turn on the fixture if it has been through severe temperature differences. Damage may occur to the fixture. Wait until unit is at room temperature to operate.
- The unit should be protected from any tremor or agitation during transport.
- Do not expose the fixture in any excessive heat, moisture or any environment with too much dust when installing. Do not lay any power cables on the floor. It may cause electronic shock or damage to persons or equipment.
- Make sure to attach the safety chain and ensure the screws are properly screwed in when installing the fixture.
- Make sure the lens is in good condition. It is recommended to replace the unit if there are any damages or severe scratches.
- Make sure the fixture is operated and installed by qualified personnel.
- Keep the original packaging in case of defective product.
- Any non-manufacturer additions, modifications or changes in any way will void all warranty.
- Please do not attempt to open unit. It is only to be serviced by an authorized technician. If this occurs, or is apparent, the warranty will be voided.
- The fixture's warranty will be voided if there are any malfunctions from not following the user manual or any illegal operation (shock short circuit, electronic shock, lamp broke, etc.)

DIPSWITCH CHART

DIP SWITCH CHART										
X = OFF 1=ON										FUNCTION
1	2	3	4	5	6	7	8	9	10	
X	X	X	X	X	X	X	X	X	1	Sound Active
1	X	X	X	X	X	X	X	X	1	Auto
SET DMX ADDRESS FOR DMX MODE DIP SWITCH 1-9										X DMX/Slave

DMX MODE

- Before using the DMX512 controller, the channel address should be set. It can be set 001~511. Every binary address switch has a digital number. Please refer to chart below.

No.	Digital No.	No.	Digital No.
1st	1	6th	32
2nd	2	7th	64
3rd	4	8th	128
4th	8	9th	256
5th	16	10th	Function switch

ILDA (PC CONTROL) MODE

- To run the NEPTUNE GB in ILDA mode or (PC CONTROL MODE) simply connect your ILDA signal cable to the DB25 jack located on the rear of the unit, and the unit will automatically recognize. NOTE: when ILDA is connected, it supersedes all modes.

4. MOUNTING AND INSTALLATION

Caution: For added protection, mount the fixtures in areas outside walking paths, seating areas, or in areas where the fixture might be reached by unauthorized personnel. Before mounting the fixture to any surface, make sure that the installation area can hold a minimum point load of 10 times the device's weight. Fixture installation must always be secured with a secondary safety attachment, such as an appropriate safety cable. Never stand directly below the device when mounting, removing, or servicing the fixture.

Whether installing inverted on a truss or ceiling, or set on a flat level surface (see illustration below). Be sure this fixture is kept at least 0.5m (1.5 ft) away from any flammable materials (decoration etc.). Always use and install the supplied safety cable as a safety measure to prevent accidental damage and/or injury in the event the clamp fails.

Mounting Points: Overhead mounting requires extensive experience, including calculating working load limits. A knowledge of the installation material being used, and periodic safety inspection of all installation material and the fixture are all imperative and should only be performed by a qualified technician. Improper installation can result in bodily injury and damage.


Be sure to complete all rigging and installation procedures before connecting the main power cord to the appropriate wall outlet.




Regardless of the rigging option you choose for your MICROH NEPTUNE GB laser fixture, always be sure to secure your fixture with a safety cable. The fixture provides a built-in rigging point for a safety cable on the hanging bracket as illustrated above.

5. DMX-512 CONTROL CONNECTIONS

This fixture complies with international USITT DMX standards and can be used with either a 3 pin or 5 pin DMX connector. Plug in the provided 3 pin XLR cable to the female 3-pin XLR output of your controller and the other side to the male 3-pin XLR input of the MICROH NEPTUNE GB. To connect the units to DMX, you must daisy chain the fixtures together as referred in the diagram below. Always end your DMX-512 connection with a DMX terminator.

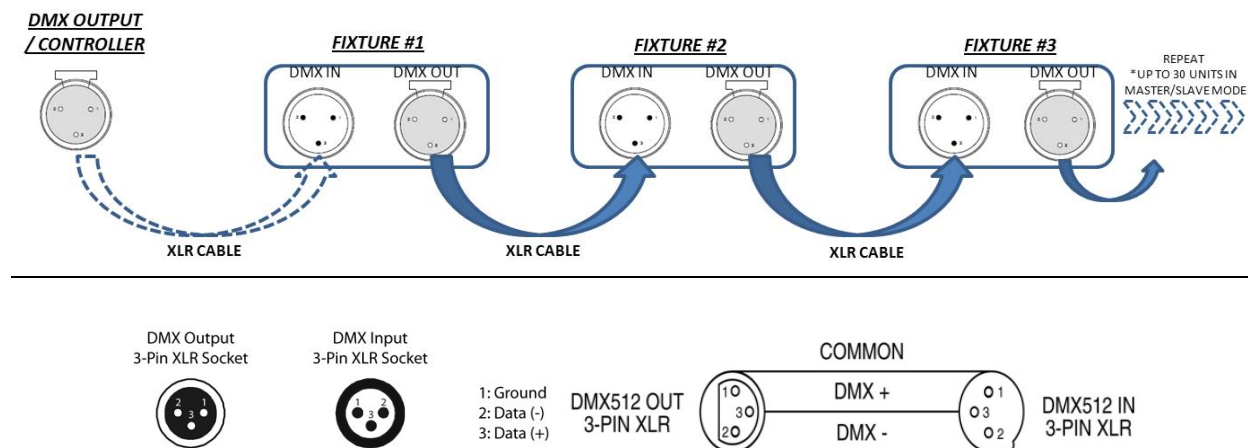

For installations where the DMX cable has to run a long distance, or is in an electrically noisy environment, it is recommended to use a DMX terminator. This helps in preventing corruption of the digital control signal by electrical noise. The DMX terminator is simply an XLR plug with a 120 Ω resistor connected between pins 2 and 3, which is then plugged into the output XLR socket of the last fixture in the chain. Please see illustrations below.

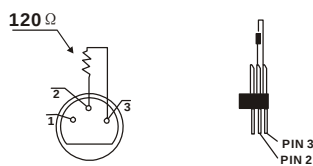

6. DMX CHANNELS

Channel No		DMX Address	Content
Channel 1	Control mode	0 - 69	No Function
		70 - 139	Sound Active Control
		140 - 209	Auto
		210 - 255	Manual
Channel 2	Pattern Selection	0 - 32	Static Pattern
		33 - 48	Dynamic Geometric pattern
		49 - 255	Small Dynamic Geometric pattern
Channel 3	Strobe	0 - 30	No Function
		31 - 255	Slow to Fast
Channel 4	Pattern Display	0 - 69	Smooth
		70 - 139	Spot & Line
		140 - 209	Line
		210 - 255	Spot
Channel 5	Horizontal Movement	1 - 160	Manual
		161 - 190	Left to Right Movement
		191 - 220	Right to Left Movement
		221 - 255	Right and Left In-phase Movement
Channel 6	Vertical Movement	1 - 160	Manual
		161 - 190	Down to Up Movement (Slow to Fast)
		191 - 220	Up to Down Movement (Slow to Fast)
		221 - 255	Up and Down In-phase Movement
Channel 7	Zoom Pattern Size (+/-)	0 - 255	Pattern Size Change/Zoom in or out
Channel 8	Colour Selection	0 - 39	Green + Blue
		40 - 79	Blue
		80 - 119	Green
		120 - 159	Blue + Green (Left)
		160 - 199	Blue + Green (Right)
		200 - 255	Sound Active
Channel 9	Motor Reset	0 - 199	No Function
		200 - 255	XY Motors Resetting
Channel 10	Axis Y Rotation	0	No Function
		1 - 150	Manual Rotation
		151 - 255	Auto Rotation
Channel 11	Axis X Rotation	0	No Function
		1 - 150	Manual Rotation
		151 - 255	Auto Rotation
Channel 12	Axis Z Rotation	0	No Function
		1 - 180	Manual Rotation
		181 - 217	Clockwise Rotation
		218 - 255	Counter-Clockwise Rotation

7. KEY FEATURES

- GB Colour Mixing DPSS Diodes (Green 532nm, Blue450nm)
- Pre-Programmed Beam Shows and Animations (64+ Laser Patterns)
- Controllable via DMX (3 Pin XLR)
- 500 mW Total Laser Output (Green 2 x 50mW [100mW total]+ Blue 400mw)
- DMX, Sound Active, Auto, Master/Slave Run Modes
- 12 DMX Channels

8. TECHNICAL SPECIFICATIONS

MODEL: NEPTUNE GB

LASER DIODE: DPSS, Green 532nm, Blue450nm

SCANNER: 1.8 High Precision Stepper Motor

SCANNING ANGLE: $\pm 30^\circ$

COOLING SYSTEM: Fan

MAX RUN TIME: Approximately 4 Hours

WARM-UP TIME: < 15 Minutes

WORKING TEMPERATURE: $10^\circ \sim 35^\circ \text{C}$

SCANNER: 1.8 High Precision Stepper Motor

VOLTAGE: 120VAC 60Hz 60W 0.5A

FUSE: 120VAC 1A


DIMENSIONS: 11.57" x 6.81" x 3.94" / 294 x 173 x 100 mm

BOX DIMENSIONS: 13.98" x 8.46" x 6.42" / 355 x 215 x 163 mm

NET WEIGHT: 6.9 lbs / 3.13 kgs

GROSS WEIGHT: 8.75 lbs / 3.97 kgs

WARRANTY: 2 Year Limited Warranty. The Laser diodes are covered under a 6 month replacement warranty.

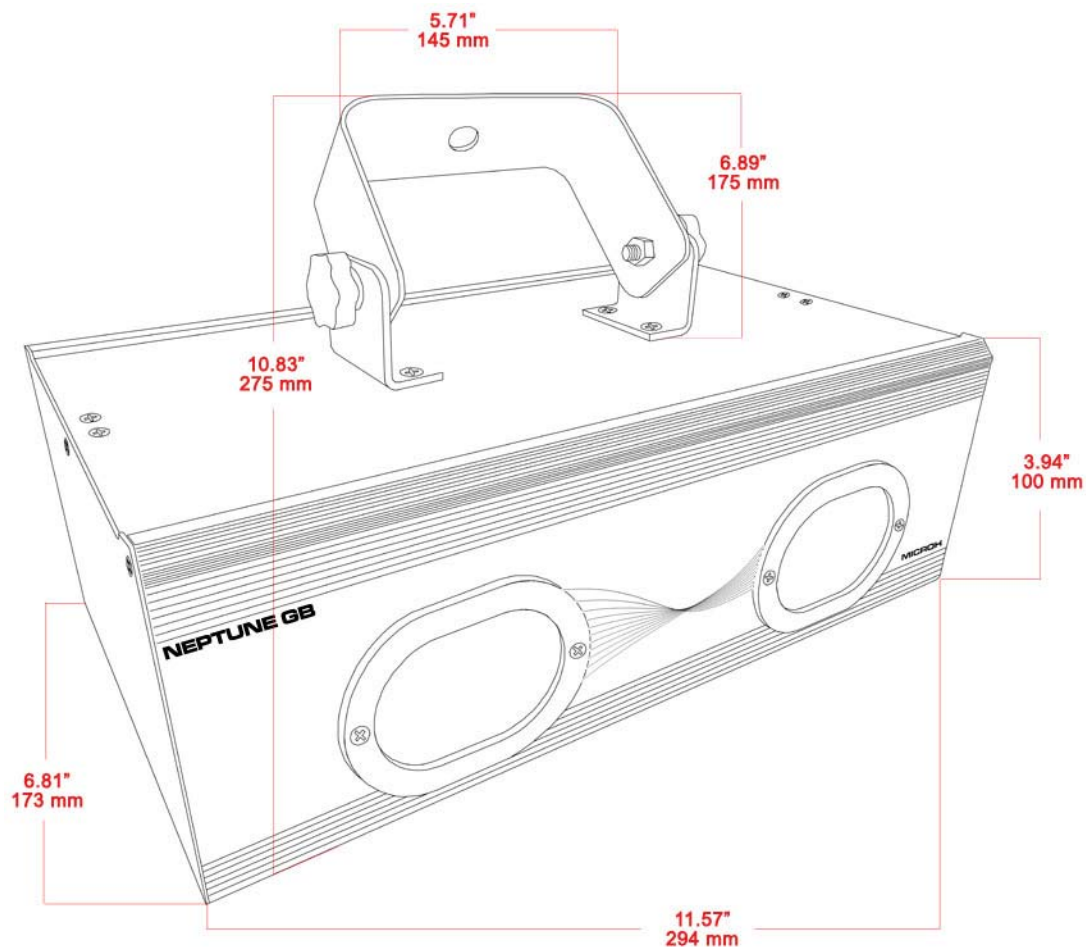

9. MAINTENANCE AND CLEANING

The following points have to be considered during the inspection:

- 1) All screws for installing the device or parts of the device must be tightly connected, and must not be corroded.
- 2) There must not be any deformations on the housing, colour lenses, fixations or installation spots (ceiling, suspension, trussing).
- 3) Mechanically moved parts must not show any traces of wearing and must not rotate with unbalances.
- 4) The electric power supply cables must not show any damage, material fatigue or sediments.

Further instructions depending on the installation spot and usage must be handled by a skilled installer or technician. Any safety issues must be resolved.



In order to keep the fixture in good condition and extend the life, we suggest regular cleaning to the fixture.

- 1) Clean the inside and outside lens each week to avoid the light output from darkening due to accumulation of dust, dirt, etc.
- 2) Clean the fan each week.
- 3) A detailed electrical check by approved technician every three months is advised. Ensure the circuit contacts are in good condition, and prevent from overheating.

We recommend a frequent cleaning of the device. Please use a moist, lint- free cloth. Never use alcohol or solvents.

There are no serviceable parts inside the device. Please refer to the instructions under "Installation instructions".

Should you need any spare parts, please order genuine MICROH parts from your local dealer.

IF YOU SHOULD EXPERIENCE ANY PROBLEMS OR ISSUES PLEASE CONTACT MICROH PROFESSIONAL PRODUCTS BY EMAIL AT info@microhpro.com

In the event that your unit is defective in any way, please contact your local dealer to obtain an RA number for service repair.

DISCLAIMER – MICROH believes that the information contained within this user manual is accurate. However, Microh is not responsible for any error or addendums to this manual. If you have any comments or general suggestions on how this manual can be improved please contact info@microhpro.com. Thank you.

MICROH
PROFESSIONAL PRODUCTS
www.microhpro.com