



UTC Fire & Security
A United Technologies Company

TruVision Megapixel IP Camera Quick Start Guide

P/N 1070143-EN • REV 2.0 • ISS 04NOV10

Copyright © 2010 UTC Fire & Security. All rights reserved.

**Trademarks and
patents** The TruVision name and logo are trademarks of
UTC Fire & Security.

GE and the GE monogram are trademarks of the
General Electric Company and are under license
to UTC Fire & Security, 9 Farm Springs Road,
Farmington, CT 06034-4065, USA

**Contact
information** For contact information, see
www.utcfireandsecurity.com.

Content

Introduction 4

Package contents 4

Installation environment 4

Cable requirements 4

Camera description 5

Setting up the camera 6

Connecting the devices 7

Accessing the camera over the internet 8

Overview of the Web browser window 9

Network and streaming configuration 10

Configuring the camera 12

1.3 megapixel camera main menu 13

2.0 megapixel camera main menu 13

Specifications 14

Introduction

This pocket guide provides basic information on setting up and using the TruVision megapixel cameras.

1.3 megapixel box cameras:

- TVC-M1120-1-N
- TVC-M1120-1-P

2.0 megapixel box cameras:

- TVC-M2110-1-N
- TVC-M2110-1-P

Package contents

The camera is shipped with the following items:

- Camera
- Multilingual Quick Start Guide
- CD with User Manual in several languages

Installation environment

Refer to the user manual for detailed information, but observe these important requirements:

- Place the camera in a secure location.
- Ensure that the camera is in a well-ventilated area.
- Do not expose the camera to rain or moisture.


Cable requirements

Cable type	Requirements
Data	For RS-485: 22 gauge (0.64 mm) shielded, two-conductor, twisted-pair (STP) cable

Cable type	Requirements
Video	75 ohm coaxial cable with BNC ends
Power	24 VAC cable


Camera description

Figure 1: Side view of 1.3 megapixel box camera

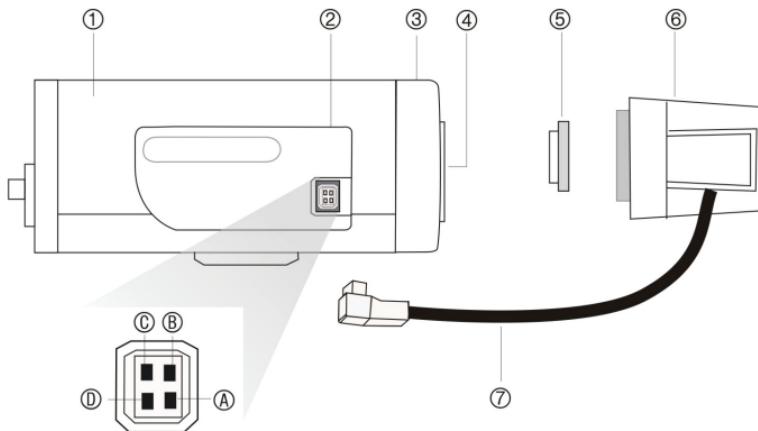

- 1. Camera
- 2. Auto iris lens connector
- Video-type auto iris lens connection:**
 - A. Power; B. NC; C. Video;
 - D. GND
- DC-type auto iris lens connection:**
 - A. Damping coil (-); B.
 - Damping coil (+); C. Driving coil (-); D. Driving coil (+)
- 3. Focus adjustment
- 4. Lens interface
- 5. C-mount adaptor (for C-mount lenses only). Not included
- 6. Lens (auto iris lens shown. Manual lens has no cable.) Not included
- 7. Auto iris lens cable. Not included

Figure 2: Side view of 2.0 megapixel box camera

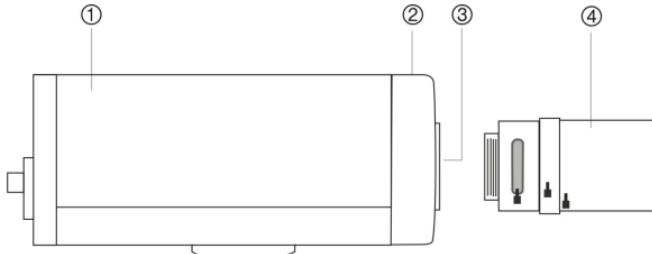

- 1. Camera
- 2. Focus adjustment
- 3. Lens interface
- 4. Lens. Not included

Setting up the camera


Note: If the light source where the camera is installed experiences rapid, wide variations in lighting, the camera may not operate as intended.

For detailed instructions, please refer to the user manual.

To quickly put the camera into operation:

1. Prepare the mounting surface.
2. Mount the camera to the wall/ceiling using the appropriate fasteners. See the user manual for further details.
3. Connect the cables to the camera. See “Connecting the devices” on page 7.
4. Set up the camera’s network and streaming parameters so that the camera can be controlled over the network. See “Accessing the camera over the internet” on page 8.
5. Program the camera to suit its location. See “Configuring the camera” on page 12.
6. Set up the connections to a DVR and configure the DVR for the camera.


Connecting the devices

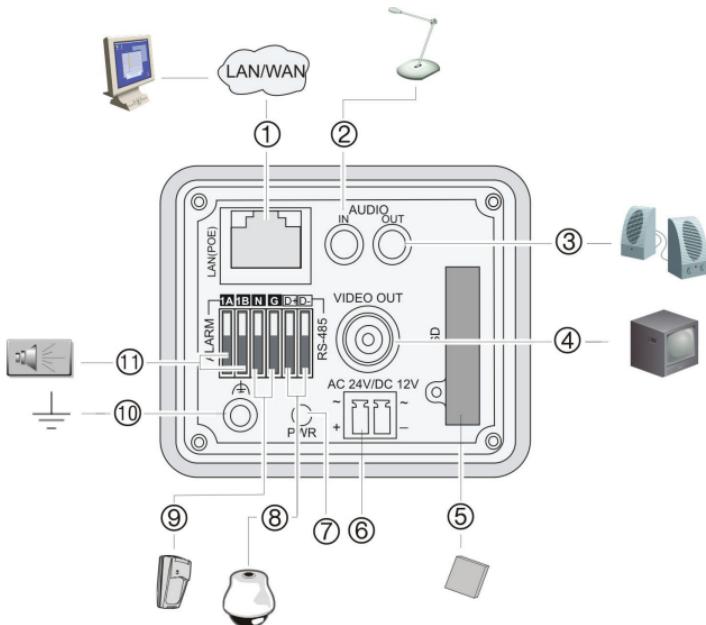

1. Ethernet RJ45 port. Connect to network devices.
2. Audio input. Connect to an audio input.
3. Audio output. Connect to an audio output.
4. Video output. Connect to a CCTV monitor.
5. SDHC card slot. Insert an 8GB or 16GB SDHC card for local storage as a backup in case of network failure, for example.
6. Power supply. Connect to 12 VDC or 24 VAC power supply.
7. Power supply LED
8. RS-485 D+, D-. Connect to an RS-485 device such as a PTZ dome camera.
9. Alarm input N, G. Connect to an alarm input device.
10. Ground. Connect to ground.

11. Alarm output 1A(+), 1B(-). Connect to an alarm output device. Connect a 12 VDC/30 mA external power supply to the alarm output. See Figure 3 below.

Figure 3: External alarm output

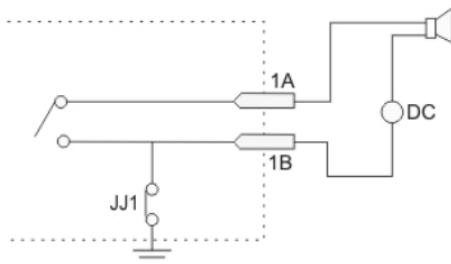

Accessing the camera over the internet

The camera Web browser lets you view, record, and play back recorded videos as well as manage the camera from any PC with Internet access.

To access the camera online:

1. In the Web browser enter the camera's IP address. Use the tool, *IP Finder*, enclosed on the CD to find the IP address of the camera.

The Login dialog box appears.

7. Enter your user name and password.

User name: *admin*

Password: *1234*

Click **OK**. The Web browser window appears in live mode. See Figure 4 on page 9.

Note: The live screen is initially blank. You must click the **Start Live View** icon on the bottom of the screen for the live mode images to appear on-screen.

Overview of the Web browser window

Figure 4: Web browser interface



1. **Menu toolbar.** Lets you do the following:



Log on and log off the system. This can only be done in live mode.



View live video.



Play back video.



Search for event logs. There are four main information types: All, Alarm, Notification and Operation.



Configure settings.

Note: The Playback and Log functions can only be used when an SDHC card is inserted in the camera.

2. **Viewer.** View live or playback video.

3. **PTZ controls.** Lets you control a PTZ camera when connected using RS-485 port. Also used to access main menu via “Preset 95” to configure the camera.
4. **Video image settings.** Adjust video image settings such as brightness, contrast, saturation, and hue.
5. **Audio setting.** Turn bi-directional audio on or off.
6. **Video function.** Lets you do the following:



Record live video.



Take a snapshot of the video.



Start live view.


7. **Camera.** View video and record video from this camera.

Network and streaming configuration

Once the camera hardware has been installed, the camera can then be configured over the network.

In the camera browser screen click the **Config** button in the menu toolbar to get the configuration screens. There are 10 folders running down the left side of the screen and each folder has a list of subfolders which display the different configuration screens. See the Figure 5 on page 11 for an example.

Figure 5: Example of a configuration screen - Device parameters

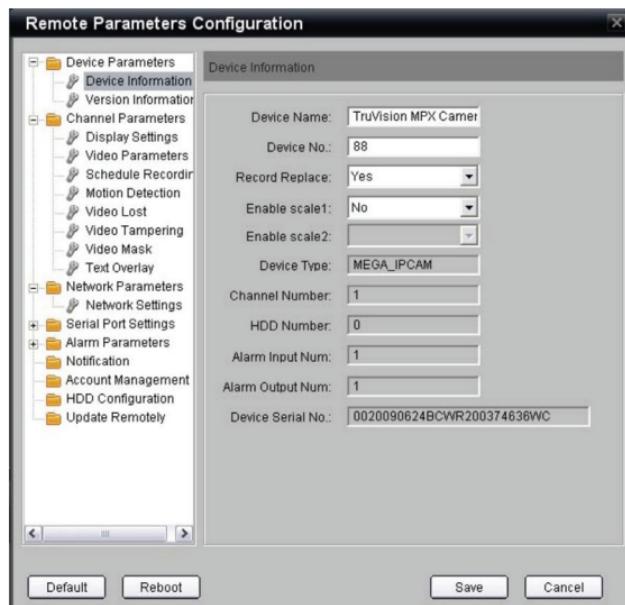

Note: The On-screen display (OSD) menus are in English only.

Table 1: Overview of the configuration parameters

Configuration folder	Description
Device information	Defines the device name and number as well as enables the overwrite and video scaler options.
Channel parameters	Defines the OSD properties of camera information, recording schedule, recording settings for alarm events, alarm response, and overlay text.
Network parameters	Defines the network parameters required to access the camera over the internet.
Serial port settings	Defines the RS485 communication settings.

Configuration folder	Description
Alarm parameters	Defines how the camera handles alarms such as input type, notification of alarms, and response schedules and duration.
Notification parameters	Defines the methods to be used to alert for internal errors in the system.
User management	Defines who can use the camera, their passwords and access privileges.
HDD configuration	Defines how to format the SDD card used in the camera.
Upgrade remotely	Defines how to upgrade the camera's firmware.

Configuring the camera

The cameras are programmed through an on-screen (OSD) menu. This main menu lets you set up the camera image to suit your installation.

To access the main menu:

1. Open the browser and enter the camera IP address to connect to the camera. Use the tool, *IP Finder*, enclosed on the CD to find the IP address of the camera.
2. Enter your user name and password in the Login box and click **OK**. The Web browser screen appears in live mode.
3. From the preset drop-down list in the PTZ control section of the Web browser screen select preset number **95**. The main menu appears.

Refer to the User Manual for detailed information on configuring the cameras.

1.3 megapixel camera main menu

<MAIN MENU>	
LANGUAGE	ENGLISH
RESOLUTION	HD(1200*720)
FRAME	25fps
LENS	AI
SHUTTER	1/25 S
AUTO GAIN	HIGH
DAY/NIGHT	DAY
◆ WHITE BALANCE	ATC
BACKLIGHT COMP	MANUAL...
MIRROR	OFF
<EXIT>	<SAVE>

2.0 megapixel camera main menu

<MAIN MENU>	
LANGUAGE	ENGLISH
◆ FLICKER CONTROL	50Hz
RESOLUTION	UXGA(1600*1200)
FRAME	12.5fps
SHUTTER	OFF
AUTO GAIN	OFF
DAY/NIGHT	DAY
WHITE BALANCE	AUTO
EFFECTS MODE	OFF
MIRROR	OFF
EPTZ	ON
<EXIT>	<SAVE>

Specifications

Operating temperature	-10 to +60 °C(14 to 140 °F)
Power supply	24 VAC ±10% / 12VDC ±10%, PoE (Power over Ethernet)
Power consumption	4 W max. (10 W max. with ICR working)
Dimensions	1.3 megapixel IP camera: 68 × 63 × 158 mm (2.71 x 2.48 x 6.25 inches) 2.0 megapixel IP camera: 65 × 63 × 158 mm (2.56 x 2.48 x 6.25 inches)
Weight	600 g (1.32 lbs)

