

Kramer Electronics, Ltd.



USER MANUAL

Model:

TP-300FW

FireWire Range Extender

Contents

1	Introduction	1
2	Getting Started	1
3	Overview	1
4	Your TP-300FW FireWire Range Extender	3
5	Using Your TP-300FW FireWire Range Extender	3
5.1	Connecting 2 FireWire Devices via 2 TP-300FW Units	4
5.2	Connecting 2 FireWire Devices via Several TP-300FW Units	5
6	Technical Specifications	6

Figures

Figure 1: TP-300FW FireWire Range Extender	3
Figure 2: Connecting 2 FireWire Devices (Standard 4.5m Range)	3
Figure 3: Connecting 2 FireWire Devices via 2 TP-300FW Units (Extended 100m Range)	4
Figure 4: Connecting 2 FireWire Devices via 3 TP-300FW Units (Extended 200m Range)	5

Tables

Table 1: TP-300FW FireWire Range Extender Features	3
Table 2: Technical Specifications of the TP-300FW FireWire Range Extender	6

This addendum clarifies that only SHIELDED CABLES should be used with the TP-300FW and the chronological order in which the TP-300FW should be connected.

Amendment to Section 3

In the following text—● Enables 1394 100Mbps signals to be transmitted and received across an extended range on unshielded twisted pair cable—the word “unshielded” is replaced by “**shielded**”.

Amendment to Section 5

To avoid interference in normal operation, be sure to follow the **correct order**.

When **connecting** the **TP-300FW FireWire Range Extender**, connect in the following order:

1. Connect to the power using the 12V power supply (provided).
2. Connect the CAT-5 cable with RJ-45 connectors at both ends.
3. Connect the FireWire cables.

When **disconnecting**¹ the **TP-300FW FireWire Range Extender**, connect in the following order:

1. Disconnect the FireWire cables.
2. Disconnect the CAT-5 cable with RJ-45 connectors at both ends.
3. Unplug the 12V power adapter.

Notes:

- Apply the same rules for both source and destination FireWire equipment (that is, first connect the power to both **TP-300FW** units and only then connect the Firewire cables).
- When reconnecting two **TP-300FW** units, first disconnect the cable, and only then reconnect them.
- Wait 5 seconds (after completing all the connections) for the picture to appear on the destination device.

If the picture fails to appear on the destination device after 5 seconds, press the **RESET** Button to reboot the setup.

Wait another 5 seconds for the picture to appear on the destination device.

- There is no need to use the Kramer **PT-1FW DV Line Protector** on the line with **TP-300FW** units because the **TP-300FW** already has this technology built-in!

¹ Disconnect in reverse order

1 Introduction

Welcome to Kramer Electronics (since 1981): a world of unique, creative and affordable solutions to the infinite range of problems that confront the video, audio and presentation professional on a daily basis. In recent years, we have redesigned and upgraded most of our line, making the best even better! Our 350-plus different models now appear in 8 Groups¹, which are clearly defined by function. Congratulations on purchasing your Kramer TOOLS **TP-300FW FireWire Range Extender**, which is ideal for:

- Digital video production, editing studios, and digital video live broadcasting
- PC FireWire port extensions and long cable drivers

The package includes the following items:

- **TP-300FW FireWire Range Extender**
- Power adapter (12V DC Input)
- This user manual² and the Kramer concise product catalog/CD

2 Getting Started

We recommend that you:

- Unpack the equipment carefully and save the original box and packaging materials for possible future shipment
- Review the contents of this user manual
- Use Kramer high performance high resolution cables³

3 Overview

The high quality Kramer TOOLS **TP-300FW FireWire Range Extender** is a truly unique product that lets you extend the standard 4.5m (13.5ft) FireWire range considerably (see Figure 2). For example, interconnecting a pair of **TP-300FW** units (see Figure 3) lets you extend the FireWire range to up to 100m (300ft), and interconnecting three **TP-300FW** units (see Figure 4) lets you extend the FireWire range to up to 200m (600ft), using an inexpensive and widely used CAT 5 cable.

1 GROUP 1: Distribution Amplifiers; GROUP 2: Video and Audio Switchers, Matrix Switchers and Controllers; GROUP 3: Video, Audio, VGA/XGA Processors; GROUP 4: Interfaces and Sync Processors; GROUP 5: Twisted Pair Interfaces; GROUP 6: Accessories and Rack Adapters; GROUP 7: Scan Converters and Scalers; and GROUP 8: Cables and Connectors

2 Download up-to-date Kramer user manuals from the Internet at this URL: <http://www.kramerelectronics.com/manuals.html>

3 The complete list of Kramer cables is on our Web site at <http://www.kramerelectronics.com> (click "Cables and Connectors" in the Products section)

The **TP-300FW** *FireWire Range Extender* is based on FireWire which:

- Is a serial bus standard¹ that enables quick universal interfacing between digital video, audio and data, and computer hardware items²
- Is simple to use and operates independently of the host system letting you connect items for extended distances
- Supports Plug and Play³, hot swapping⁴ and isochronous⁵ and asynchronous applications

In particular, the **TP-300FW**:

- Supports the provisions of the IEEE 1394a-2000 and 1394-1995 Standard for High Performance 1394 Serial Bus
- Supports the provisions of the IEEE 1394b-2002 Standard at S100 signaling rates
- Enables 1394 100Mbps signals to be transmitted and received across an extended range on unshielded twisted pair cable
- Includes built-in protection from electrostatic discharge (ESD)⁶, by suppressing all transient high voltages down to the allowed level. In particular, ESD protection for high-speed data lines to IEC 61000-4-2 (ESD) 15kV (air), 8kV (contact), IEC 61000-4-5 (Lightning) 12A (8/20us), and IEC 61000-4-4 (EFT) 40A (5/50ns)

To achieve the best performance:

- Avoid interference from neighboring electrical appliances that may adversely influence signal quality
- Position your Kramer **TP-300FW** away from moisture, excessive sunlight and dust

1 Originally developed by Apple™ and published as IEEE 1394 by the Institute of Electrical and Electronics Engineers

2 Hardware items include digital cameras, computers, printers, VCRs, CD-ROMs, hard disks, scanners and graphic cards

3 Configures automatically. Whenever a device is added or removed the 1394 bus re-enumerates

4 You can connect and disconnect inputs and outputs dynamically, without having to restart the PC or cycle power

5 Video / audio applications require constant transfer rates, which the serial bus provides by supporting isochronous transfers

6 Often when connecting a "live" DV source to a receptor, an electrical potential difference or any other element creating a high voltage (such as ESD or a live chassis) may permanently damage one or both of the connected devices. This high voltage may be seen as a spark occurring at the instant of connection, or may not be seen at all, but nevertheless can result in costly damage

4 Your TP-300FW FireWire Range Extender

Figure 1 and Table 1 define the **TP-300FW FireWire Range Extender**:

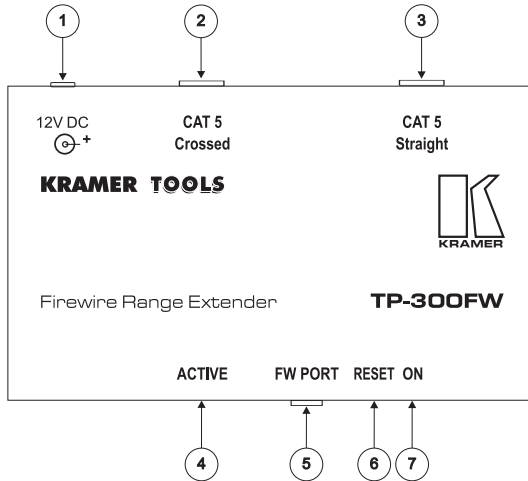


Figure 1: TP-300FW FireWire Range Extender

Table 1: TP-300FW FireWire Range Extender Features

#	Feature	Function
1	12V DC	+12V DC connector for powering the unit
2	CAT 5 Crossed RJ45 Connector	Connects to the CAT 5 Straight connector on another TP-300FW unit
3	CAT 5 Straight RJ45 Connector	Connects to the CAT 5 Crossed connector on another TP-300FW unit
4	ACTIVE (Green) LED	Lights when a powered and fully functioning FireWire device is connected
5	FW PORT	Connects to the FireWire device
6	RESET Button	Reboots the setup (without having to disconnect and reconnect the power)
7	ON (Red) LED	Illuminates when receiving power

5 Using Your TP-300FW FireWire Range Extender

The standard FireWire range between two FireWire devices is limited to 4.5m (13.5ft), as Figure 2 illustrates:

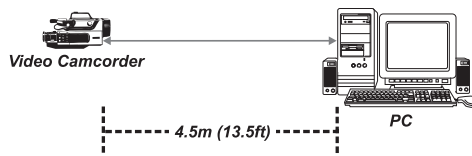


Figure 2: Connecting 2 FireWire Devices (Standard 4.5m Range)

5.1 Connecting 2 FireWire Devices via 2 TP-300FW Units

You can interconnect a pair of **TP-300FW** units to extend the FireWire range to up to 100m (300ft), as Figure 3 illustrates:

To interconnect a pair of **TP-300FW** units using twisted pair UTP/CAT 5 cable (commonly used for Ethernet connections), do the following:

1. Connect a FireWire device (for example, a video camcorder) to the FW PORT on the first **TP-300FW** unit, and a FireWire device (for example, a PC) to the FW PORT on the second **TP-300FW** unit.
2. Connect the CAT 5 Straight RJ45 connector on the first **TP-300FW** unit to the CAT 5 Crossed RJ45 connector on the second **TP-300FW** unit, **when using a straight pin to pin cable with RJ-45 connectors**¹. If you are using a **crossover cable** with RJ-45 connectors, connect the CAT 5 Straight RJ45 connector on the first **TP-300FW** unit to the CAT 5 Straight RJ45 connector on the second **TP-300FW** unit².
3. On each **TP-300FW** unit, connect the 12V DC power adapter to the power socket and connect the adapter to the mains electricity. The ON red LED lights.
4. Be sure that the power on each device is turned ON. On each **TP-300FW** unit, the ACTIVE green LED lights indicating that a cable from an external powered and fully functioning FireWire device is connected.

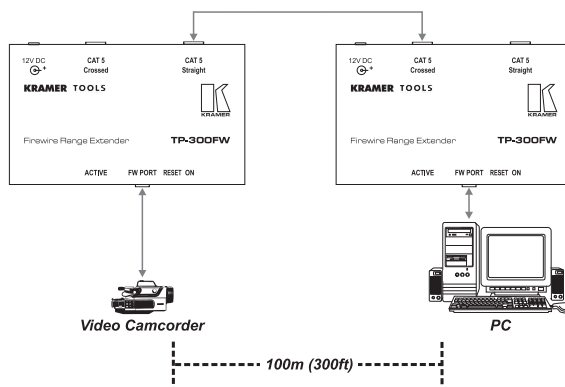


Figure 3: Connecting 2 FireWire Devices via 2 TP-300FW Units (Extended 100m Range)

1 Alternatively, connect the CAT 5 Crossed RJ45 connector on the first TP-300FW unit to the CAT 5 Straight RJ45 connector on the second TP-300FW unit

2 Alternatively, connect the CAT 5 Crossed RJ45 connector on the first TP-300FW unit to the CAT 5 Crossed RJ45 connector on the second TP-300FW unit

5.2 Connecting 2 FireWire Devices via Several TP-300FW Units

You can interconnect multiple **TP-300FW** units to extend the FireWire range. Each additional **TP-300FW** extends the range up to a further 100m. For example, Figure 4 illustrates how three **TP-300FW** units may be used to extend the FireWire range to 200m:

To interconnect three **TP-300FW** units using twisted pair UTP/CAT 5 cable (commonly used for Ethernet connections), do the following:

1. Connect a FireWire device (for example, a video camcorder) to the FW PORT on the first **TP-300FW** unit, and a FireWire device (for example, a PC) to the FW PORT on the third **TP-300FW** unit.
2. Connect the CAT 5 Straight RJ45 connector on the first **TP-300FW** unit to the CAT 5 Crossed RJ45 connector on the second **TP-300FW** unit, and connect the CAT 5 Straight RJ45 connector on the second **TP-300FW** unit to the CAT 5 Crossed RJ45 connector on the third **TP-300FW** unit¹.
3. On each **TP-300FW** unit, connect the 12V DC power adapter to the power socket and connect the adapter to the mains electricity. The ON red LED lights.
4. Be sure that the power on each device is turned ON.
On the first and third **TP-300FW** units, the ACTIVE green LED lights indicating that a cable from an external powered and fully functioning FireWire device is connected.

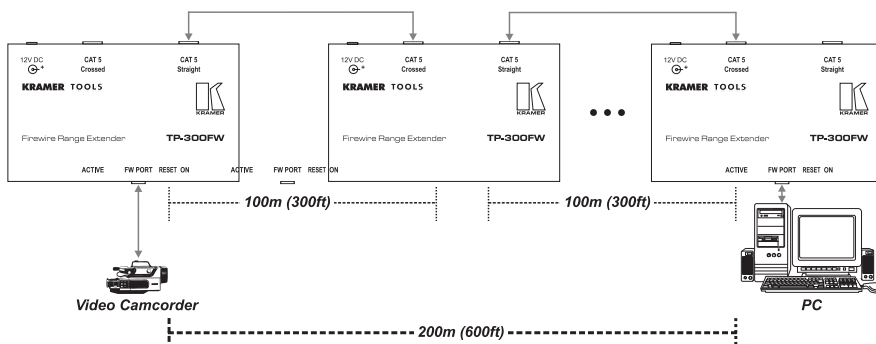


Figure 4: Connecting 2 FireWire Devices via 3 TP-300FW Units (Extended 200m Range)

¹ Alternatively, connect the CAT 5 Crossed RJ45 connector on the first TP-300FW unit to the CAT 5 Straight RJ45 connector on the second TP-300FW unit, and connect the CAT 5 Crossed RJ45 connector on the second TP-300FW unit to the CAT 5 Straight RJ45 connector on the third TP-300FW unit

6 Technical Specifications

Table 2 includes the technical specifications:

Table 2: Technical Specifications¹ of the TP-300FW FireWire Range Extender

PORT:	One 6-pin serial 1394 port 2 RJ45 CAT-5 ports
TRANSFER RATE:	100Mbps
IEEE-1394 STANDARDS:	IEEE 1394a-2000, IEEE 1394-1995, IEEE 1394b-2002 @ up to 100Mbps
ESD LINE PROTECTION:	IEC 61000-4-2 (ESD) 15kV (air), 8kV (contact), IEC 61000-4-5 (Lightning) 12A (8/20us), and IEC 61000-4-4 (EFT) 40A (5/50ns)
POWER SOURCE:	12 VDC, 60mA
DIMENSIONS:	12cm x 7.5cm x 2.5cm (4.7" x 2.95" x 0.98", W, D, H)
WEIGHT:	0.3 kg. (0.67 lbs.) approx.
ACCESSORIES:	Power supply, mounting bracket

¹ Specifications are subject to change without notice

LIMITED WARRANTY

Kramer Electronics (hereafter *Kramer*) warrants this product free from defects in material and workmanship under the following terms.

HOW LONG IS THE WARRANTY

Labor and parts are warranted for three years from the date of the first customer purchase.

WHO IS PROTECTED?

Only the first purchase customer may enforce this warranty.

WHAT IS COVERED AND WHAT IS NOT COVERED

Except as below, this warranty covers all defects in material or workmanship in this product. The following are not covered by the warranty:

1. Any product which is not distributed by Kramer, or which is not purchased from an authorized Kramer dealer. If you are uncertain as to whether a dealer is authorized, please contact Kramer at one of the agents listed in the web site www.kramerelectronics.com.
2. Any product, on which the serial number has been defaced, modified or removed.
3. Damage, deterioration or malfunction resulting from:
 - i) Accident, misuse, abuse, neglect, fire, water, lightning or other acts of nature
 - ii) Product modification, or failure to follow instructions supplied with the product
 - iii) Repair or attempted repair by anyone not authorized by Kramer
 - iv) Any shipment of the product (claims must be presented to the carrier)
 - v) Removal or installation of the product
 - vi) Any other cause, which does not relate to a product defect
 - vii) Cartons, equipment enclosures, cables or accessories used in conjunction with the product

WHAT WE WILL PAY FOR AND WHAT WE WILL NOT PAY FOR

We will pay labor and material expenses for covered items. We will not pay for the following:

1. Removal or installations charges.
2. Costs of initial technical adjustments (set-up), including adjustment of user controls or programming. These costs are the responsibility of the Kramer dealer from whom the product was purchased.
3. Shipping charges.

HOW YOU CAN GET WARRANTY SERVICE

1. To obtain service on you product, you must take or ship it prepaid to any authorized Kramer service center.
2. Whenever warranty service is required, the original dated invoice (or a copy) must be presented as proof of warranty coverage, and should be included in any shipment of the product. Please also include in any mailing a contact name, company, address, and a description of the problem(s).
3. For the name of the nearest Kramer authorized service center, consult you authorized dealer.

LIMITATION OF IMPLIED WARRANTIES

All implied warranties, including warranties of merchantability and fitness for a particular purpose, are limited in duration to the length of this warranty.

EXCLUSION OF DAMAGES

The liability of Kramer for any effective products is limited to the repair or replacement of the product at our option. Kramer shall not be liable for:

1. Damage to other property caused by defects in this product, damages based upon inconvenience, loss of use of the product, loss of time, commercial loss; or:
2. Any other damages, whether incidental, consequential or otherwise. Some countries may not allow limitations on how long an implied warranty lasts and/or do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from place to place.

NOTE: All products returned to Kramer for service must have prior approval. This may be obtained from your dealer.

This equipment has been tested to determine compliance with the requirements of:

- EN-50081: "Electromagnetic compatibility (EMC);
generic emission standard.
Part 1: Residential, commercial and light industry"
- EN-50082: "Electromagnetic compatibility (EMC) generic immunity standard.
Part 1: Residential, commercial and light industry environment".
- CFR-47: FCC Rules and Regulations:
Part 15: "Radio frequency devices
Subpart B – Unintentional radiators"

CAUTION!

- ☒ Servicing the machines can only be done by an authorized Kramer technician. Any user who makes changes or modifications to the unit without the expressed approval of the manufacturer will void user authority to operate the equipment.
- ☒ Use the supplied DC power supply to feed power to the machine.
- ☒ Please use recommended interconnection cables to connect the machine to other components.



For the latest information on our products and a list of Kramer distributors, visit our Web site: www.kramerelectronics.com.

**Updates to this user manual may be found at
<http://www.kramerelectronics.com/manuals.html>.**

We welcome your questions, comments and feedback.



Kramer Electronics, Ltd.

Web site: www.kramerelectronics.com

E-mail: info@kramerel.com

P/N: 2900-000300 REV 1