

Encoder Firmware

A1D-310-V4.12.09-NB

User's Manual

2012/06/25 A1

Table of Contents

1. Recommended PC Specification	4
2. Preparation before setup	5
Connect to device and setup IP	5
Sample screenshots to setup IP of your PC (Win XP)	7
3. Configuring the IP device	11
Login	11
Live view	13
PTZ Control Panel	15
Host	17
Date & Time	19
Network	21
IP Address Filtering	21
Port Mapping	24
ToS	26
UPnP™	27
SNMP Setting	28
RTP	29
Bonjour	30
HTTPs	31
802.1x	37
Speed & Duplex	38
IP Settings	39
Connection Type	39
DNS	39
DDNS	41
Video & Audio	42
Video	42
Audio	58
OSD/Privacy Mask	60
Event	62

Encoder Firmware V4.12.09 User's Manual

Event Server	62
Event Configuration	66
Event List	74
Manual Event	77
Local Storage Management	78
Status	79
Utilities	80
Setup	85
File Management	87
Event Handler with Local Storage	92
System	99
User Account	99
System Info	101
Factory Default	102
Firmware Upload	103
Profile Upload	104
Save & Reboot	105
Logout	105

1. Recommended PC Specification

CPU	Core2Duo 2.13GHz and above
Memory	2 GB or above
Operating System	Windows XP with SP2 or above. Windows Vista / Windows 2003 / Windows 7 Internet Explorer 6.0 SP2 / Internet Explorer 7.0 / Internet Explorer 8.0
Video Resolution	SVGA or XGA with 1024x768 resolution

2. Preparation before setup

Connect to device and setup IP

Our IP device provides access through Internet Explorer. The IP address for your PC must be within the same subnet as the IP device. You need to match the TCP/IP settings between PC and IP device before you can access it via IE.

There are two ways to add devices to the network.

With DHCP server / router:

DHCP server assigns IP addresses to devices automatically. You can find them on the network with the **IP Utility**.

Run IP Utility to start auto device search. Click on the underlined IP links to access your IP devices. You do not need to change IP.

Without DHCP server / router:

Please assign a static IP for each device and add them one by one. Connect to the first device by following steps 1 to 5 below.

Before adding more devices into the network, you need to change the current device to a new IP address so no two devices have IP conflict. (Steps 6 to 9).

For adding devices without DHCP, please see following steps.

1. Connect the PC to the Network Switch with the CAT5 cable, and change your PC's IP to 192.168.0.99 / Subnet Mask 255.255.255.0 (101 is just a sample, it may be any number from 1 to 254 except 100.)
2. Connect the device to your Network Switch. If it is a PoE enabled Switch, then the device is powered on. If it is NOT a PoE enabled Switch, please also plug in the Power Adapter.
3. Open Internet Explorer , and type in **Default IP:**


http://192.168.0.100

Encoder Firmware V4.12.09 User's Manual

- When you see the login window, please input default user and password:

Default Username: Admin Password: 123456

- After you log in, you will see the video from IP device. To go to the main menu, click the "Setup" button on the top left.
- Please go to IP settings -> Connection Type. Change the IP mode to Static and the IP address to 192.168.0.101 or any other unused IP (Avoid 192.168.0.100, the IPs of your PCs and other devices already in network.). Click "Apply" then click System -> Save & Reboot.

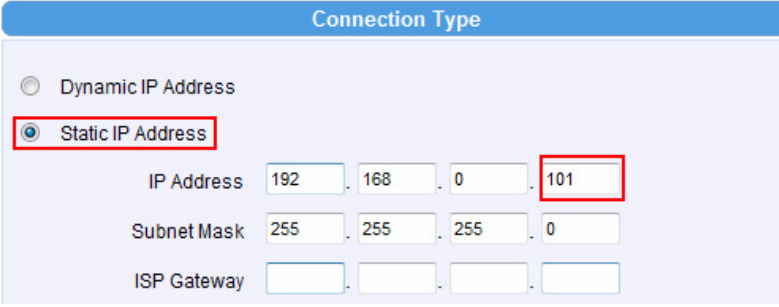

Connection Type

☐ Dynamic IP Address

☒ Static IP Address

IP Address: 192 . 168 . 0 . 101

Subnet Mask: 255 . 255 . 255 . 0

ISP Gateway:

- Internet Explorer will close after a few seconds. This is normal.
- Wait for 30 seconds and open IE again by typing in the **new IP**. (In this example, 192.168.0.101). For later device you add into the network, please choose an IP that does not is not used by any existing device.
- If you have more than one device, continue again from step 2. Assign different new IP to each camera (for instance -> 192.168.0.102, 192.168.0.103 ...). You do not need to unplug the existing devices from the switch because there is no IP conflict.

Sample screenshots to setup IP of your PC (Win XP)


The procedures below show how to setup your IP on Windows XP. If you use operating system other than Windows XP, please refer to OS manuals for proper setup procedures.

STEP1

Start up your PC.

STEP2


Click the [Start] and select the "Control Panel"

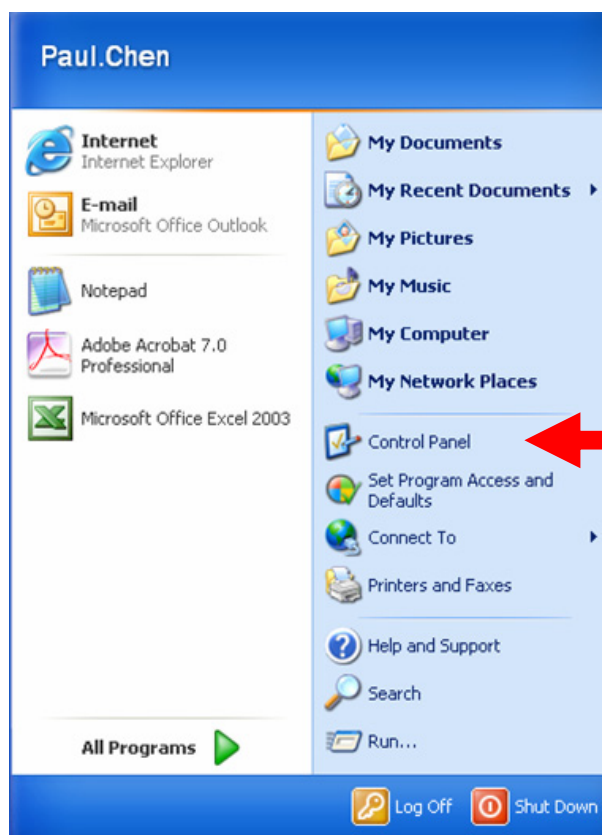

Encoder Firmware V4.12.09 User's Manual


STEP3

Double-click the "Network and Internet connections" icon.

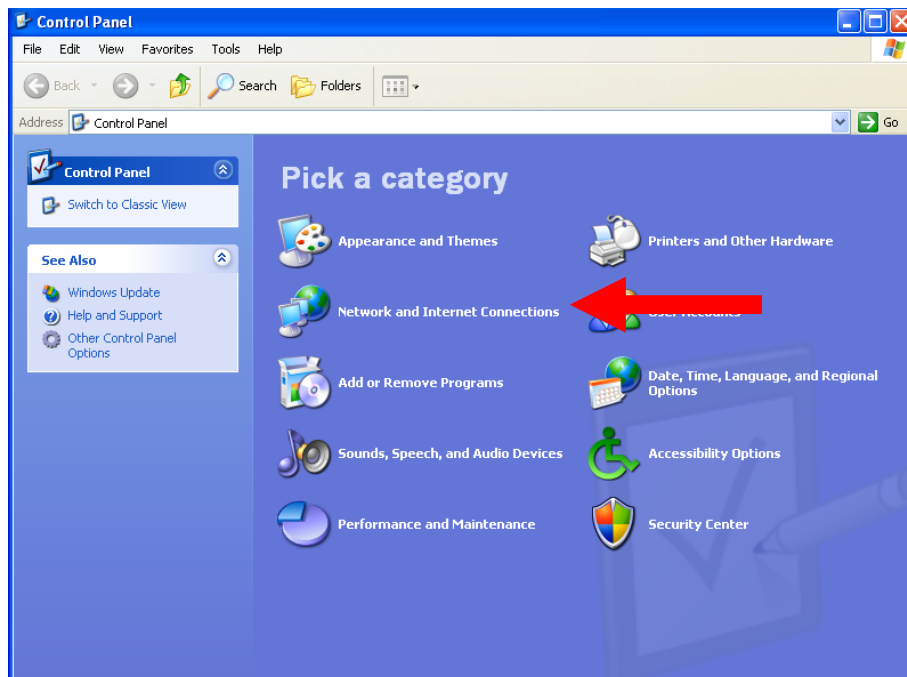

STEP4


Double-click the "Network connections" icon

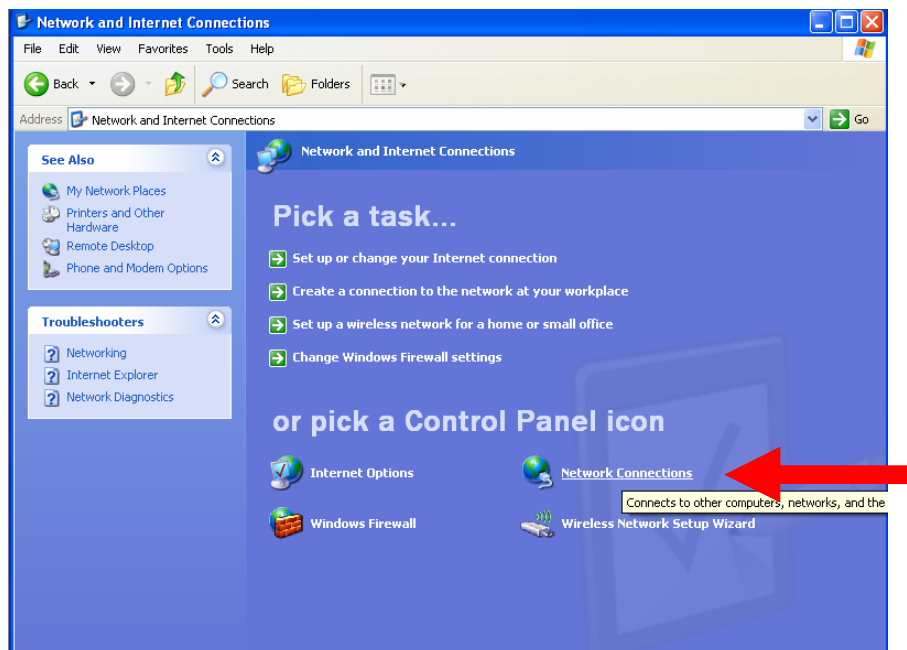

Encoder Firmware V4.12.09 User's Manual


STEP5

Click “Local Area Connections”, and then click “Change settings of this connection” in the Network Task menu.

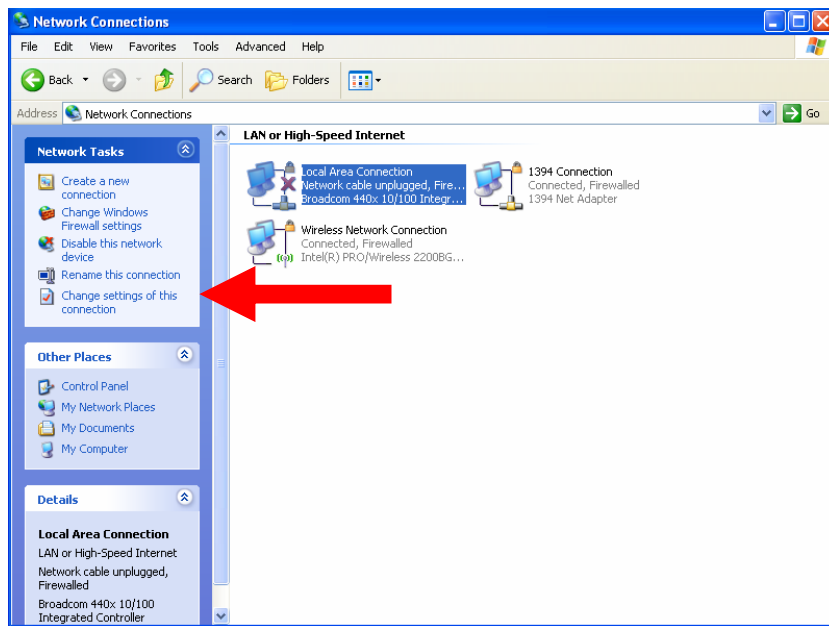

STEP6


Click “Internet Protocol (TCP/IP)”, and then click [Properties]

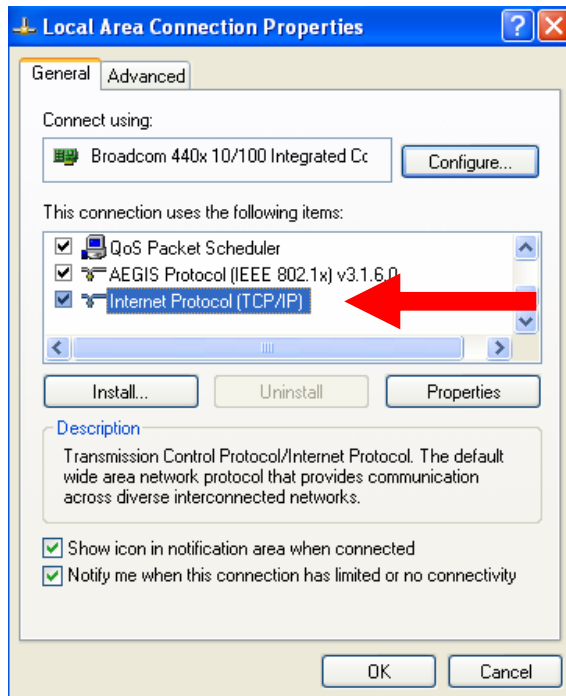

Encoder Firmware V4.12.09 User's Manual

STEP7

Click the “Use the following IP address” radio button and enter the IP address and the subnet mask.

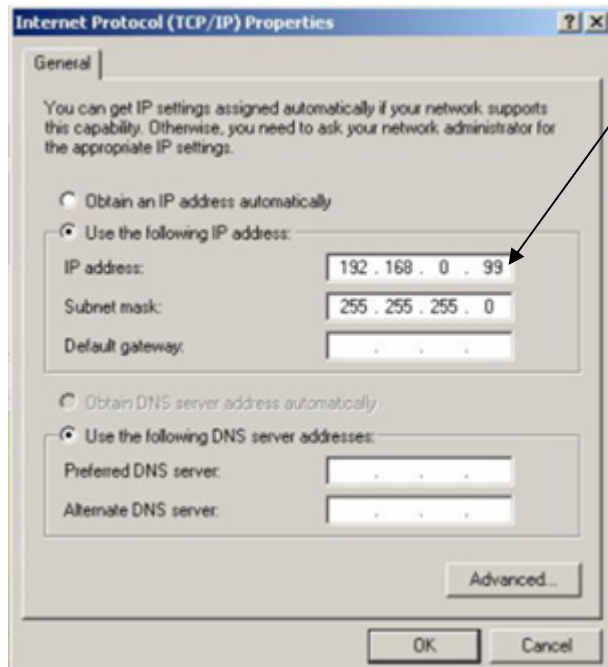

Please set the settings as below.

IP address: 192.168.0.xxx

Subnet mask: 255.255.255.0

(NOTE: xxx should be a number from 1 to 254 except 100, which is used by the IP device. Please also make sure that no two equipments use the same IP address in the same network.)

STEP8

Click the [OK] button and the window dialog box will close.

3. Configuring the IP device

This section describes how to configure the IP device. The administrator has unlimited access to all settings, while the normal user can only view live video. The IP device is configured under a standard browser (Microsoft Internet Explorer 6.0 / 7.0 / 8.0).

Login

STEP1


Open Internet Explorer 6.0 / 7.0 / 8.0. You may download the latest version from:

<http://www.microsoft.com/windows/ie/downloads/default.msp>

STEP2

Enter the IP address of the IP device and press enter to go to Login Page.

The default IP address is "192.168.0.100"

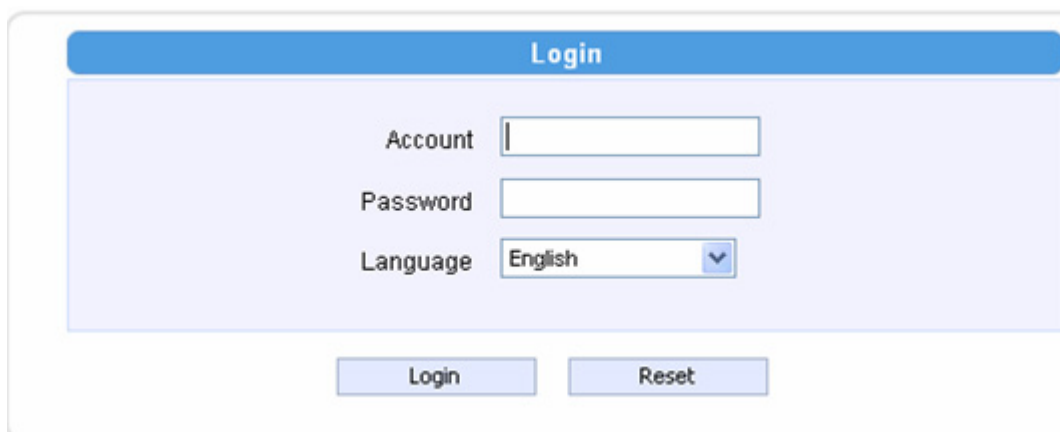

The screenshot shows a web browser window displaying the login interface. The title bar of the browser is not visible. The page has a light blue background. At the top, there is a blue horizontal bar with the word "Login" in white. Below this bar, there is a white rectangular area containing the login form. The form has three labels: "Account", "Password", and "Language". Each label is followed by an input field. The "Account" and "Password" fields are text boxes. The "Language" field is a dropdown menu with "English" selected. Below the input fields, there are two buttons: "Login" and "Reset".

STEP3

Enter the Account name and the Password

(Default Account: Admin / Password: 123456).

STEP4


Select the language of the IP device user interface.

You can select between English, Traditional Chinese, Japanese, Spanish, Italian, German, Portuguese, Greek, Russia, Turkey, Indonesia and Swedish. This user interface setting will disappear once you log out, if you want to change the default user interface language, please go to [Host] in the "Host" section under the setup tab.

Encoder Firmware V4.12.09 User's Manual


STEP5

Click the button to login or click the button to re-enter again. Once you've logged in, the "Live page" will be displayed as below.

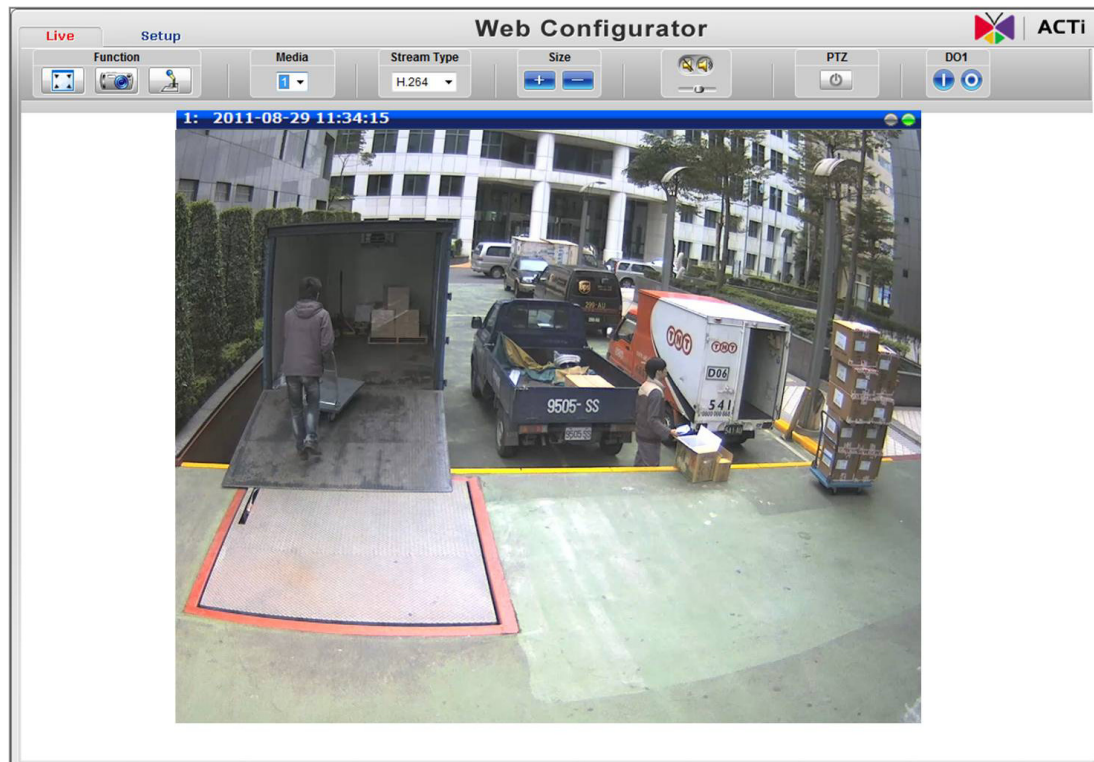


Live view


Click the **1** [Live] tab to show [Live page]. Refer to the table below for how to configure each setting.

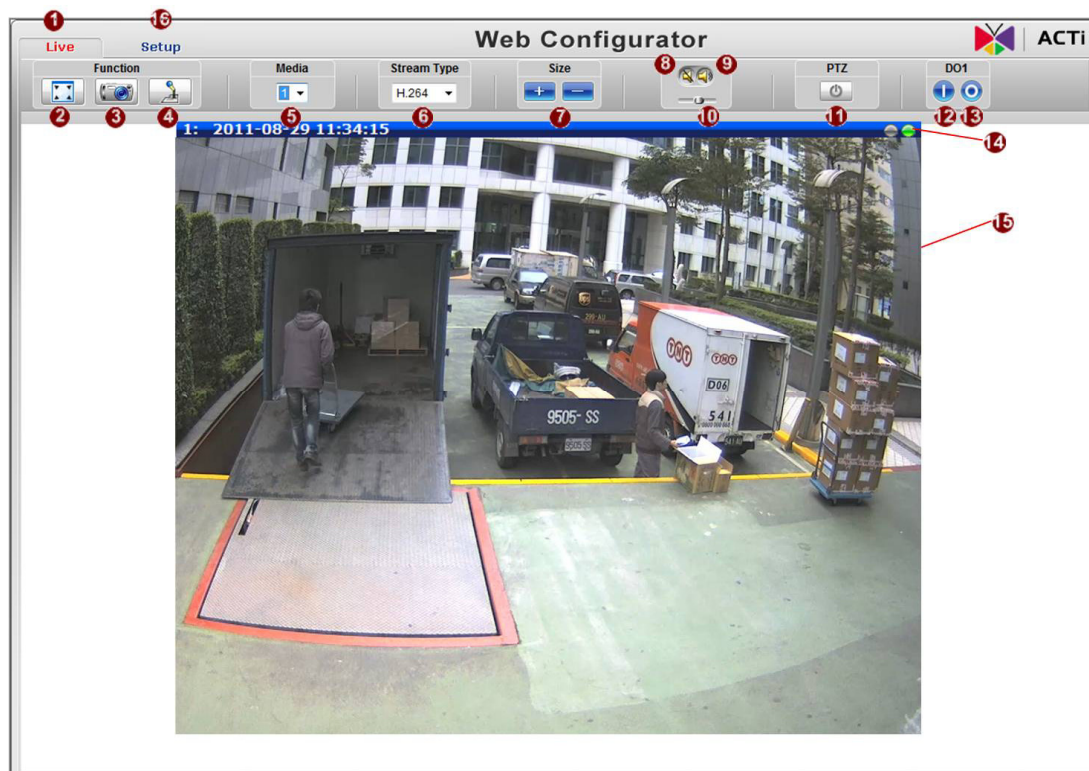

Function List

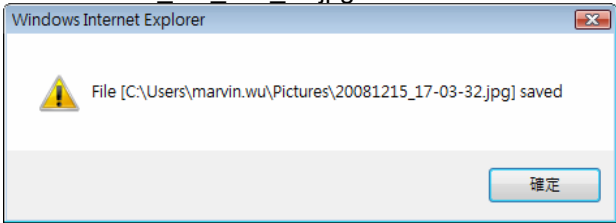Function	Description
2 Full Screen	Click the icon  to stretch the preview to full screen. You can click "Esc" button on the keyboard to return to previous display.
3 Snapshot	Click the icon  to take a snapshot. The snapshot picture will be saved to the default folder "C:\Users\"account name\"Picture", in the format of YYYYMMDD_HH_mm_ss.jpg. 
4 Audio out	Click the icon  to enable the audio out from PC to IP camera or video server. When it is enabled, your voice will be transferred to the audio out of the IP camera or video server. NOTE: you will need to have a microphone connected to your PC to do that.

Encoder Firmware V4.12.09 User's Manual

5 Media	If dual stream mode is enabled, click 5 to select which stream to display (Media 1 or 2). The default is single stream only. To change to dual stream mode, please refer to "Media 1" section under "Setup" tab
6 Encoder Type	Click 6 to select the compression codec used in video encoding. The Encoder type option includes MPEG-4, MJPEG and H.264. Once selected, the video server/IP camera will start to send video in new stream type.
7 Display size	Click  or  of 7 to adjust 15 display screen size
10 Audio in	Click the icon  8 to mute or the icon  9 to receive audio in from the video server/IP camera. Drag the volume bar  10 to adjust the volume.
11 PTZ Panel	Click on the PTZ button to pop up the PTZ Control panel, and enable Mouse PTZ at the same time. *Note: This PTZ panel is only available for PTZ Speed Dome model.
14 Network status	 Indicates the network state. If the light on the right is green, it means the network is ok. If the light is gray, it means the network is broken. The light on the left is not used
DO Setting	 Click 12  to set DO output level to High. Click 13  to set DO output level to Low. If your device has more than one DO available, each DO is controlled separately.


If you want to setup this IP camera/video server, please click the **16** [Setup] tab to switch to "Setup Page"

PTZ Control Panel

If you are using **PTZ Speed Dome camera**, this screen is available by clicking on PTZ button in the live view screen.

There are three features on PTZ control panel, PTZ, Preset and Tour

PTZ

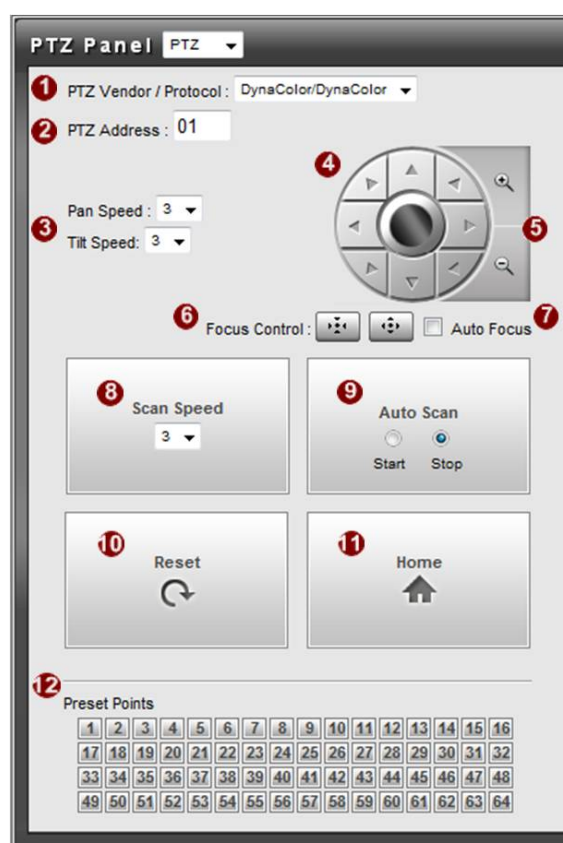

Function	Description
1 PTZ Vendor/Protocol	The communication setting between PTZ module and Camera module. The value has to be consistent with the hardware setting of PTZ Speed Dome camera in the bottom. (Please refer the hardware manual of Speed Dome.)
2 PTZ Address	
3 Pan Speed Tilt Speed	Set the Pan/Tilt speed of the control pad
4 Control Pad	Click on this wheel to control PTZ movements.
5 Zoom In/Out	Click on this button to control zoom in or out
6 Focus In/Out	Click on this button, this will shift the focus of the camera manually. Please note that if you use manual controlled focus, then auto-focus has to be disabled

Encoder Firmware V4.12.09 User's Manual

 7	Auto Focus	Enable auto focus function, camera will focus by itself via PTZ movement.
 8	Scan Speed	Set the speed of auto scan.
 9	Auto Scan	Enable (ON)/Disable (OFF) the auto scan function. You must first setup the preset point 1 and 2. The PTZ speed dome will start to scan horizontally after enable this function.
 10	Reset	Restart the video capturing module inside the IP camera.
 11	Home	Back to the default position. If you have preset point 1, it will be back to the preset point 1 while press home button.
	Preset Points	Go to a preset point. You must first setup the preset point in "Preset" feature of this PTZ panel.


Preset



Function	Description
 1 Name	Enter a name for the Preset point
 2 Set	To setup a PTZ Preset point, move the camera to your desired view angle (including pan, tilt and zoom) via the PTZ control panel. After you're satisfied with the view, please enter a name for the Preset point and click this button to save the settings.
 3 Goto	Click this button to go to the Preset point
 4 Remove	Click this button to remove this Preset point.

Tour

Encoder Firmware V4.12.09 User's Manual

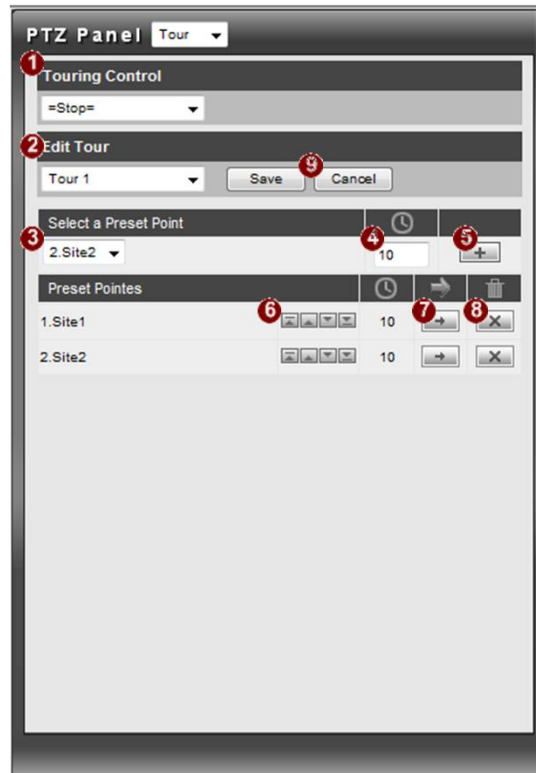

Preset Tour is a preconfigured PTZ sequence that directs the camera to cycle through multiple preset PTZ views, including where to look and how long to look at each location. You may configure the preset points to go to in the previous Preset section. Make sure you configure PTZ and PTZ Preset sections correctly before setting up Preset Tours.

Function	Description
1 Touring Control	Select the tour you want to use. Choose “Stop” to stop this tour.
2 Edit Tour	Select the tour you want to edit.
3 Select a Preset Point	Select the preset point you want to add in the tour. You may setup how long with the PTZ Speed Dome camera stay at each point by setting the 4 [Dwell Time]. Then, click 5 [Add] button to add the preset point in this tour
6 Preset Points Sequence Control.	You may rearrange the preset point sequence here. Click the buttons to move to top, move up, move down or move to bottom of list.
7 Goto	Click this button to go to the preset point
8 Remove	Click this button to remove this Preset point in this modified tour


Click the **9** [Save] button to save the settings.

Host



Encoder Firmware V4.12.09 User's Manual

Click the [Host] in Setup to enter Host settings page. Refer to the table below for how to configure each setting.

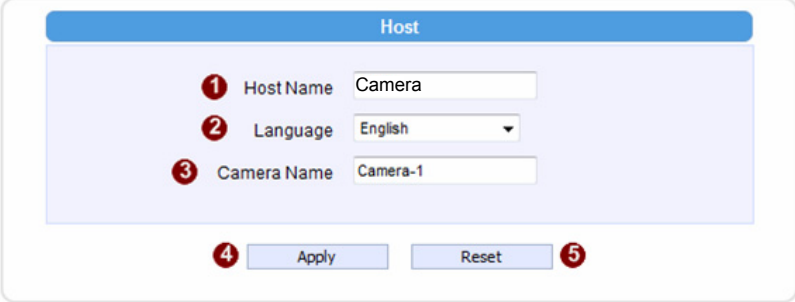

Parameters	Description
① Host name	Enter a host name, and this host name will be shown when you use the IP utility or the SDK to search for the IP device.
② Language	Select the language of default user-interface. Each user login will see the default user-interface first.
③ Camera name	The camera name is reserved for customer use.

Click the ④ [Apply] button to confirm the settings or click the ⑤ [Reset] button to re-enter the parameters.

PTZ Speed Dome model



Parameters	Description
① Serial Port Control	Select the control value of corresponding serial port.
② Serial Port Baud Rate	Select the Baud Rate of serial port.

Click the ③ [Apply] button to confirm the settings or click the ④ [Reset] button to re-enter the parameters

Date & Time

The screenshot shows the 'Web Configurator' interface. On the left, a sidebar has 'Live' and 'Setup' tabs. Under 'Setup', 'Date & Time' is selected. The main content area is titled 'Date Setting'. It has two radio buttons: 'SNTP/NTP Server' (labeled 1) and 'Set Manually' (labeled 4, which is selected). Under 'SNTP/NTP Server', there is an 'IP Address' field (labeled 2) with the value '192.168.0.2' and a 'Sync Time' dropdown (labeled 3) set to '1 Day'. Under 'Set Manually', there is a 'Date' field (labeled 5) with '2010 / 06 / 01' and a 'Time' field (labeled 6) with '00 : 00 : 00'. Below these is a 'TimeZone' dropdown (labeled 7) showing '(GMT)+00:00(Dublin,Lisbon,London,Reykjavik)'. At the bottom of the 'Set Manually' section is a 'Day Light Saving' checkbox (labeled 8) which is unchecked. It has 'Start Time' (labeled 9) and 'End Time' (labeled 11) sections. 'Start Time' has a 'Type 1' dropdown, and 'End Time' has a 'Type 1' dropdown. At the bottom of the page are 'Apply' (labeled 12) and 'Reset' (labeled 13) buttons.

Click the [Date & Time] item under Setup to see Date Setting Page. Refer to the table below for how to configure each setting. The default method is to set manually.

Date Setting

Parameters	Description
1 SNTP/NTP server	Click this to enable IP device's SNTP/NTP function. This enables this IP device to synchronize its time settings with a SNTP/NTP server. You can use this function to make sure all your IP devices' time is the same. Additionally, with our embedded digital-time-code in the streaming, you can tell the event sequence accurately. IP address: Enter the IP address of the SNTP/NTP server. 3 Sync time: Select the time interval for this IP device to synchronize its time.
4 Set manually	Click this to manually setup the date & time. 5 Date : Select the date 6 Time: Select the time
7 Time zone	Select the time zone offset for local settings


Encoder Firmware V4.12.09 User's Manual

8 Day Light Saving	Select Type 1 9 to specify daylight saving time by week number in a month; select Type 2 to specify daylight saving time by date. Start Time: Select the daylight savings start time. 11 End Time: Select the daylight savings end time.
---------------------------	---

Click the **12** [Apply] button to confirm the settings or click the **13** [Reset] button to re-enter the parameters.

Network

Click the  [Network] item on the “Setup Page”.

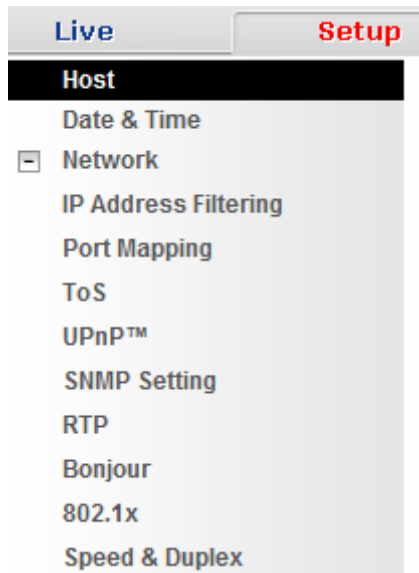

IP Address Filtering

WARNING: Please be very careful when using this function, as you may lose access to your camera if you make mistakes in setup. You may either accidentally deny yourself access, or forgot to include your own IP address in the allowed address list. You will need to perform hard reset to be able to access the device again.

Click the [IP Address Filter] item to display the “IP Address Filtering Page”. Refer to the table below for how to configure each setting.

Encoder Firmware V4.12.09 User's Manual

IP Address Filtering

1 ☒ Enabled

Set IP address

2 Blocked ▼ IP Address/Netmasks

NO.	Enabled	IP address	Netmask
1	3 ☒ 4	0 0 0 0 5	0 0 0 0
2	☐	0 0 0 0	0 0 0 0
3	☐	0 0 0 0	0 0 0 0
4	☐	0 0 0 0	0 0 0 0
5	☐	0 0 0 0	0 0 0 0
6	☐	0 0 0 0	0 0 0 0
7	☐	0 0 0 0	0 0 0 0
8	☐	0 0 0 0	0 0 0 0
9	☐	0 0 0 0	0 0 0 0
10	☐	0 0 0 0	0 0 0 0
11	☐	0 0 0 0	0 0 0 0
12	☐	0 0 0 0	0 0 0 0
13	☐	0 0 0 0	0 0 0 0
14	☐	0 0 0 0	0 0 0 0
15	☐	0 0 0 0	0 0 0 0
16	☐	0 0 0 0	0 0 0 0

6
Apply
7
Reset

Parameters	Description
1 Enable	Check this box to enable IP Address Filtering.
2 Filter Method	The filter can be set in either "Allow" mode or "Block" mode. 1. "Allow" mode will refuse access to all IP addresses except the ones listed below. 2. "Block" mode will accept all incoming access except the IP addresses listed below. Make sure you include the Netmask in your consideration.
3 Enabled	For each entry, you must check this box for it to be effective. For an entry that you no longer need but does not wish to delete, you can uncheck it, and the system will remember it for future use. If a new entry that has never been used before does not have Enable checked, then it will not be stored in memory.

Encoder Firmware V4.12.09 User's Manual

4	IP Address	The IP address you wish to allow or block. Please note that the actual range is modified by the Netmask.
5	Netmask	Using Netmask allows you to set filtering for a whole range of IP address at once, without the need to enter all of them individually. If you are not sure about the function of netmask, then you should use 255.255.255.255, and it will affect only a single IP address per line of entry, or use 255.255.255.0 to use the same setting for all IP addresses starting with the same three numbers. .
6	Apply	Click this to use the current displayed info to do IP Address filtering. If you setup correctly, it will change into a grayed out "Success" in a few seconds.
7	Reset	Click this button to re-enter the parameters.

Click the **6** [Apply] button to confirm the settings or click the **7** [Reset] button to re-enter the parameters.

Port Mapping

Click the [Port Mapping] item to display the “Port Mapping Page”. Refer to the table below for how to configure each setting.

Port Mapping

1 HTTP Port* 80

2 HTTPS Port* 443

3 Search Server Port 1 6005

4 Search Server Port 2 6006

5 Video Control Port 6001

6 Video Streaming Port 6002

7 Video Multicast Port for Media1 5000

8 Video Multicast Port for Media2 5001

9 RTSP Port 7070

10 RTP Multicast Video Port for Media1 5100

11 RTP Multicast Audio Port for Media1 5102

12 RTP Multicast Video Port for Media2 5104

Multicast Setting

13 Multicast IP 228 . 5 . 6 . 1
[224.5.0.1 ~ 239.255.255.255]

14 Multicast TTL 16 [1~255]

15 IGMP Disable

* New settings will only take effect after [Save & Reboot]

16 Apply 17 Reset

Parameters	Description
1 HTTP port	Select the port assigned for HTTP protocol access
2 HTTPS	Select the port assigned for HTTPS protocol access
3 Search server port1	Select the first port used by server search applications to detect this IP device. (e.g. IP utility)

Encoder Firmware V4.12.09 User's Manual


4 Search server port2	Select the first port used by server search applications to detect this IP device. (e.g. IP utility)
5 Video control port	Select the port used to support video control function by application programs. (e.g. NVR)
6 Video streaming port (TCP Only)	Select the port used by this IP device for Video Streaming.
7 Video Multicast Port for Media1	Select the port for the multicast video of media1
8 Video Multicast Port for Media2	Select the port for the multicast video of media2
9 RTSP port	Select the port assigned for RTSP protocol access
10 RTP Multicast Video Port for Media1	Select the port for the multicast video streaming of media1 via RTP protocol
11 RTP Multicast Audio Port for Media1	Select the port for the multicast audio streaming of media1 via RTP protocol
12 RTP Multicast Video Port for Media2	Select the port for the multicast video streaming of media2 via RTP protocol
13 Multicast IP	Select the multicast IP. Default settings is 228.5.6.1
14 Multicast TTL	Select the multicast TTL. Default setting is 255.
15 IGMP	Select video type connected to the video-in of this IP device. If you use an incorrect video type, some images might be lost.

Click the **16** [Apply] button to confirm the settings or click the **17** [Reset] button to re-enter the parameters.

Encoder Firmware V4.12.09 User's Manual

ToS

Click the [ToS] (Type of Service) item to display the "ToS Page". Refer to the table below for how to configure each setting.

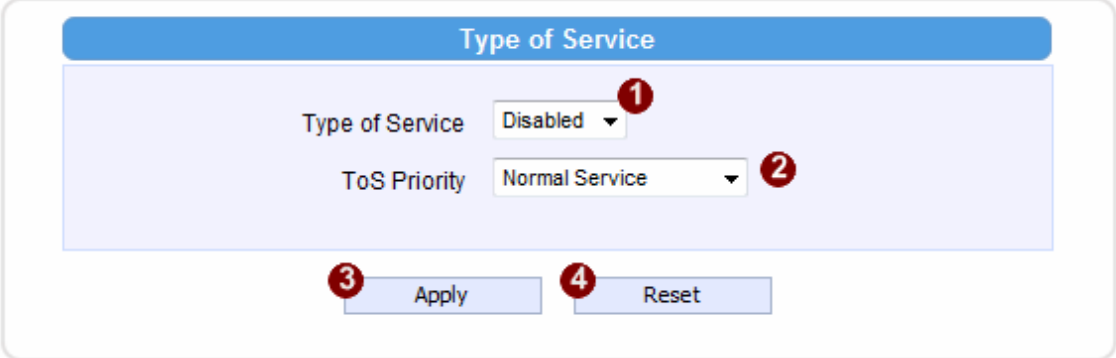


Parameters	Description
1 TOS (type of service)	Select whether to add the TOS tag onto the streaming data. Streaming data with a higher priority TOS tag will be transmitted first when compared with other data.
2 TOS priority	Select the TOS tag's priority to be added onto the streaming. You can select between 1. Minimize-Delay 2. Maximize-throughout 3. Maximize-Reliability 4. Normal-Service

Click the **3** [Apply] button to confirm the settings or click the **4** [Reset] button to re-enter the parameters.

Encoder Firmware V4.12.09 User's Manual

UPnP™

Click the [UPnP™] item to display the “UPnP™ Setting Page”.

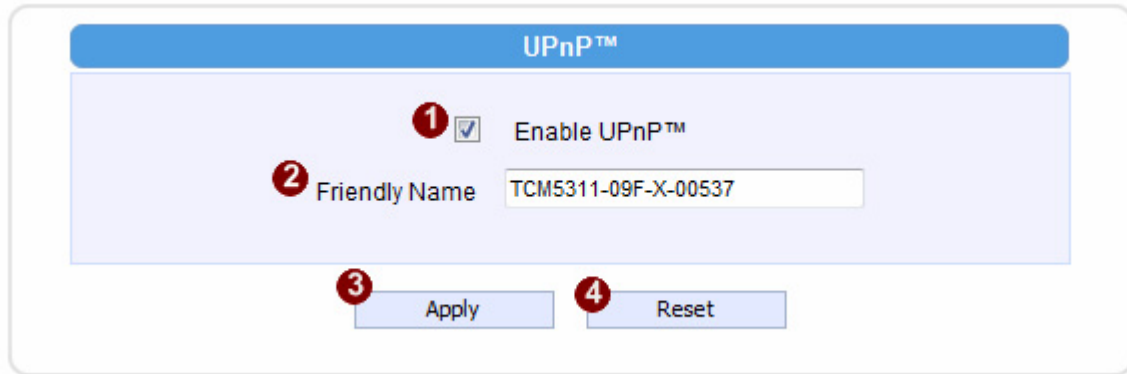

The screenshot shows the UPnP™ Setting Page. At the top is a blue header bar with the text "UPnP™". Below the header is a light blue rectangular area containing the settings. Inside this area, there is a checkbox labeled "Enable UPnP™" with a red circle containing the number "1" next to it. Below the checkbox is a text field labeled "Friendly Name" with a red circle containing the number "2" next to it; the text field contains the value "TCM5311-09F-X-00537". At the bottom of the light blue area are two buttons: "Apply" and "Reset". A red circle containing the number "3" is next to the "Apply" button, and a red circle containing the number "4" is next to the "Reset" button.

Click checkbox **1** enable or disable the UPnP™ function. Edit the UPnP Friendly Name in text field. **2**

Click the [Apply] button **3** to confirm the settings or click the [Reset] button **4** re-enter the parameters.

SNMP Setting

Click the SNMP Setting item to display the SNMP setting Page

The image shows a web-based configuration page titled "SNMP Setting". It contains several settings with numbered callouts (1-9) indicating the steps to configure them:

- 1**: A checkbox labeled "Enabled" is checked.
- 2**: A radio button labeled "SNMP V1 / V2" is selected.
- 3**: A radio button labeled "SNMP V3" is unselected.
- 4**: A checkbox labeled "Trap Enabled" is checked.
- 5**: A text input field for "Destination IP address" is shown with a placeholder "IPv4 Address".
- 6**: A text input field for "Trap Community" contains the value "public".
- 7**: Three checkboxes for "Available Traps" are shown: "Cold Start", "Warm Start", and "Authentication Failure". All are currently unchecked.
- 8**: An "Apply" button.
- 9**: A "Reset" button.

Click **1** to enable SNMP function.

Select **2** to use SNMP V1/V2 or **3** to use SNMP V3

Check the check box **4** to enable traps

Enter the Destination IP address in **5**

Enter the Trap Community used in **6**


Select the Available trap in **7**

Click the [Apply] button **8** to confirm the settings or click the [Reset] button **9** to re-enter the parameters.

Encoder Firmware V4.12.09 User's Manual

RTP

Click RTP Item to configure RTP Settings

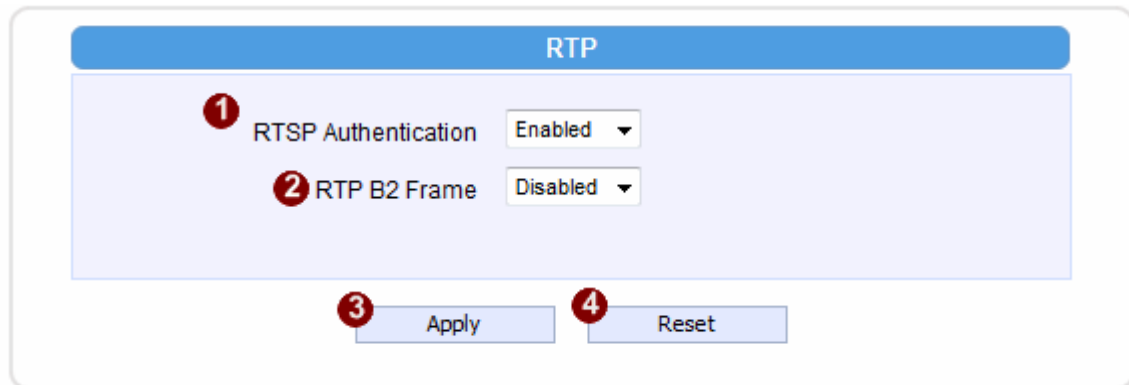

1 RTSP Authen Enable	Check box to enable RTP streaming's Account/Password authentication.
2 RTP B2 Frame Enable	Check box to enable the B2 frame in RTP streaming

Click the [Apply] button **3** to confirm the settings or click the [Reset] button **4** to re-enter the parameters.

Encoder Firmware V4.12.09 User's Manual

Bonjour

The screenshot shows a web-based configuration page for 'Bonjour'. It features a blue header bar with the title 'Bonjour'. Below the header, there is a checkbox labeled 'Enabled' with a red circle '1' next to it. Below the checkbox is a text input field labeled 'Friendly Name' with a red circle '2' next to it. At the bottom, there are two buttons: 'Apply' with a red circle '3' and 'Reset' with a red circle '4'.

Parameters	Description
1 Enable Bonjour	Check the box to enable/disable Bonjour.
2 Friendly Name	Enter the Bonjour friendly name
3 Apply Button	Apply Button: Click apply to confirm the setting.
4 Reset Button	Click reset to re-enter the paramaters.

Encoder Firmware V4.12.09 User's Manual



HTTPs

By using HTTPs it is possible to create secure connection between the remote client and the camera.

HTTPs solution has to be configured first, otherwise the HTTPs session would not start.

HTTPs Session Failure Due to Missing Configuration


This is the output on IE browser when attempting to access the camera by <https://ip:port> without configuring HTTPs first.

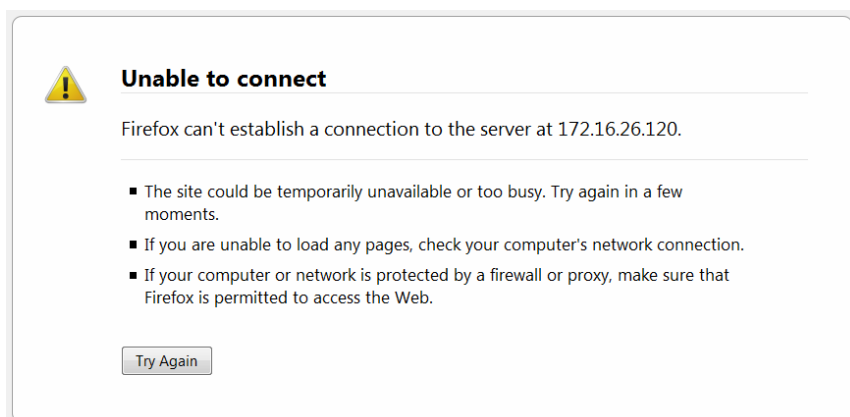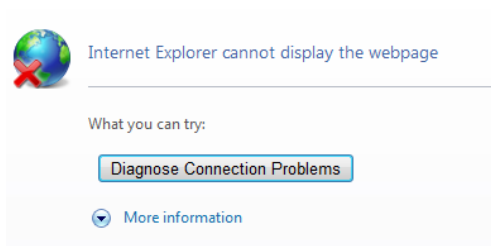

Encoder Firmware V4.12.09 User's Manual

Configure HTTPS


You can change the HTTPS port on the device if you like. The default port is 443.

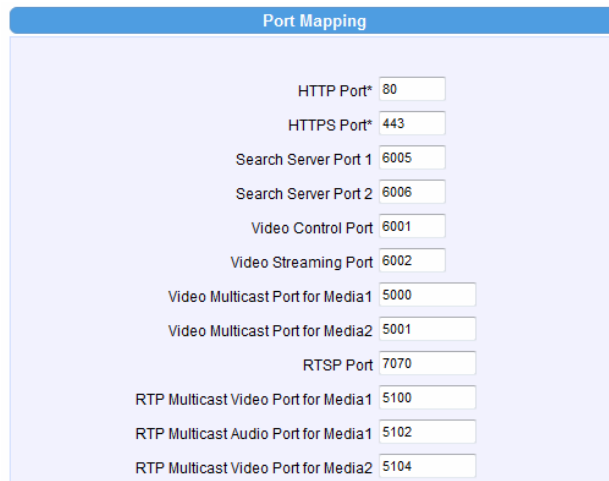

Port Mapping

HTTP Port*	80
HTTPS Port*	443
Search Server Port 1	6005
Search Server Port 2	6006
Video Control Port	6001
Video Streaming Port	6002
Video Multicast Port for Media1	5000
Video Multicast Port for Media2	5001
RTSP Port	7070
RTP Multicast Video Port for Media1	5100
RTP Multicast Audio Port for Media1	5102
RTP Multicast Video Port for Media2	5104

The Certificate is required to establish HTTPS session. Go to HTTPS page to create the Certificate Signing Request (CSR) or Self-Signed certificate.

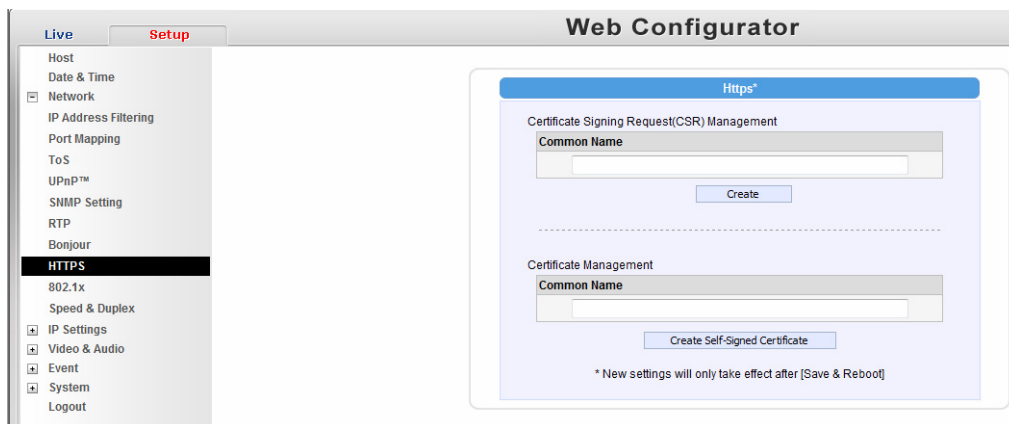

Live Setup Web Configurator

- Host
- Date & Time
- Network
 - IP Address Filtering
 - Port Mapping
 - ToS
 - UPnP™
 - SNMP Setting
 - RTP
 - Bonjour
 - HTTPS**
 - 802.1x
 - Speed & Duplex
- IP Settings
- Video & Audio
- Event
- System
- Logout

Https*

Certificate Signing Request(CSR) Management

Common Name


Create

Certificate Management

Common Name

Create Self-Signed Certificate

* New settings will only take effect after [Save & Reboot]

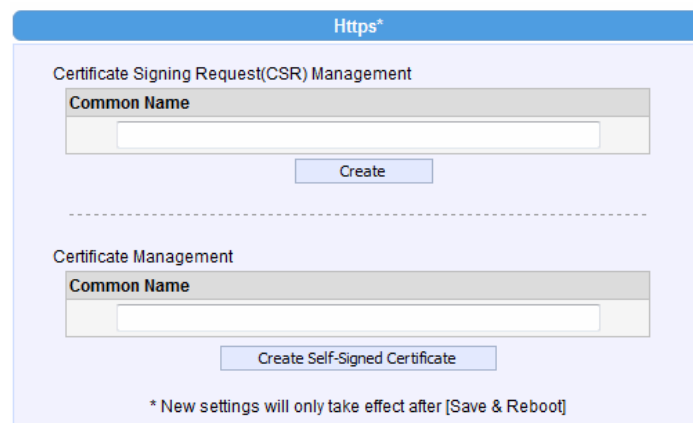

Https*

Certificate Signing Request(CSR) Management

Common Name

Create

Certificate Management

Common Name

Create Self-Signed Certificate

* New settings will only take effect after [Save & Reboot]

Encoder Firmware V4.12.09 User's Manual

The following example is based on Self-Signed certificate which is the easiest way.

Please open Web Configurator and click on HTTPs item. The press “Create Self-Signed Certificate” button there.

The screenshot shows a web form titled "Create Self-Signed Certificate". It contains several input fields with associated labels and instructions:

- Country:** A dropdown menu showing "US". Instruction: "Use the two-letter code without punctuation for country, for examp: US or CA.Refer to [ISO 3166-1](#)".
- State or Province:** A text input field containing "CA". Instruction: "do not abbreviate the state or province name, for example: California is for CA."
- Locality or City:** A text input field containing "Irvine". Instruction: "do not abbreviate the city or town name, for example: Saint Louis is for St. Louis."
- Company:** A text input field containing "ACTI". Instruction: "Comapny Name,only 0~9,a~z and A~Z are allowed".
- Organizational Unit:** A text input field containing "Product Development". Instruction: "The name of the department or orgaziation unit making the request,0~9,a~z and A~Z are allowed".
- Common Name:** A text input field containing "www.acti.com". Instruction: "The Host+Domain Name. It looks like "www.company.com" or "company.com".
- Certificate Validity:** A text input field containing "365". Instruction: "(1~9999 days). The valid period in days of certificate".
- Privacy Key Length:** A dropdown menu showing "1024" and the unit "bits".

At the bottom of the form is a "Create" button.

When done, press “Create”.


The screenshot shows a web page titled "Https*". It contains two main sections:

- Certificate Signing Request(CSR) Management:** A section with a "Common Name" label and a text input field. Below the input field is a "Create" button.
- Certificate Management:** A section with a "Common Name" label and a text input field containing "www.acti.com". Below the input field are two buttons: "Properties" and "Remove".


At the bottom of the page is a note: "* New settings will only take effect after [Save & Reboot]".

Encoder Firmware V4.12.09 User's Manual

If you press "Properties", you can see the device's certificate.

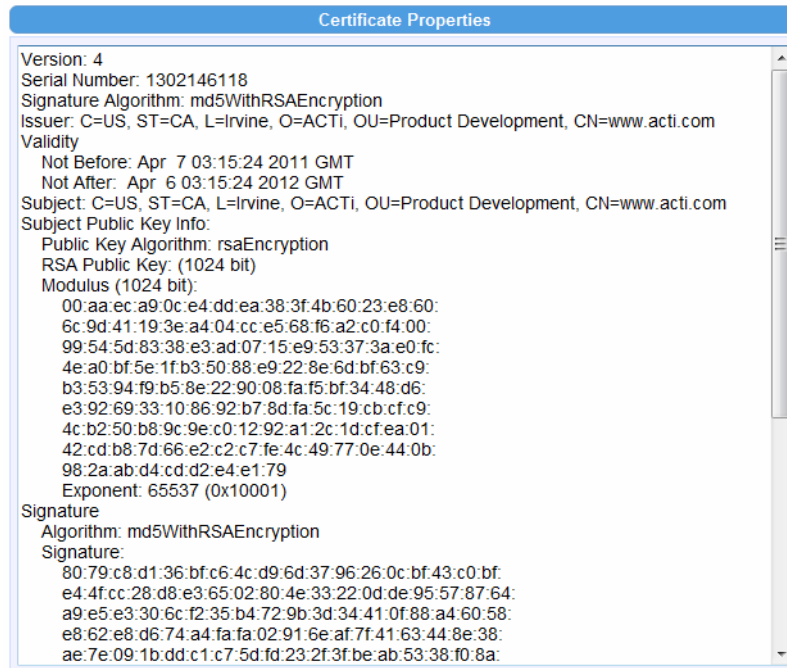

Now you can run the IE browser again and connect to camera by https://ip:port

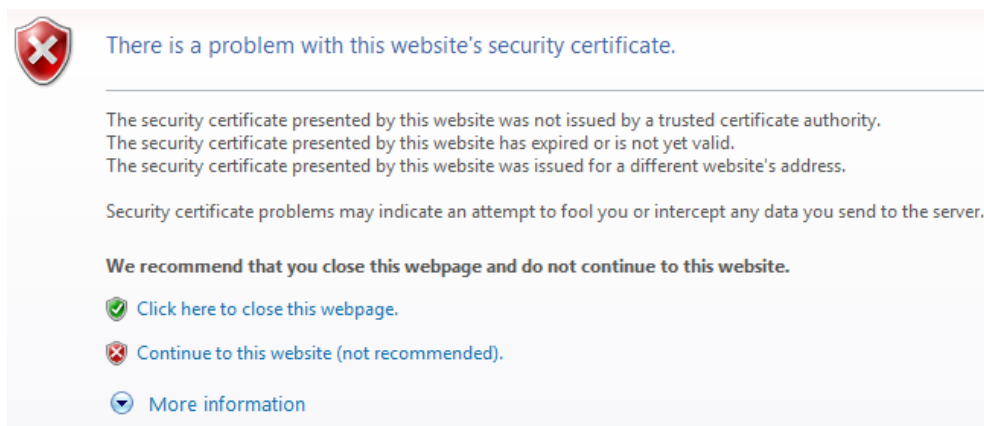


Press "Continue to this website".


You will see Certificate Error and you can accept the error.






Encoder Firmware V4.12.09 User's Manual

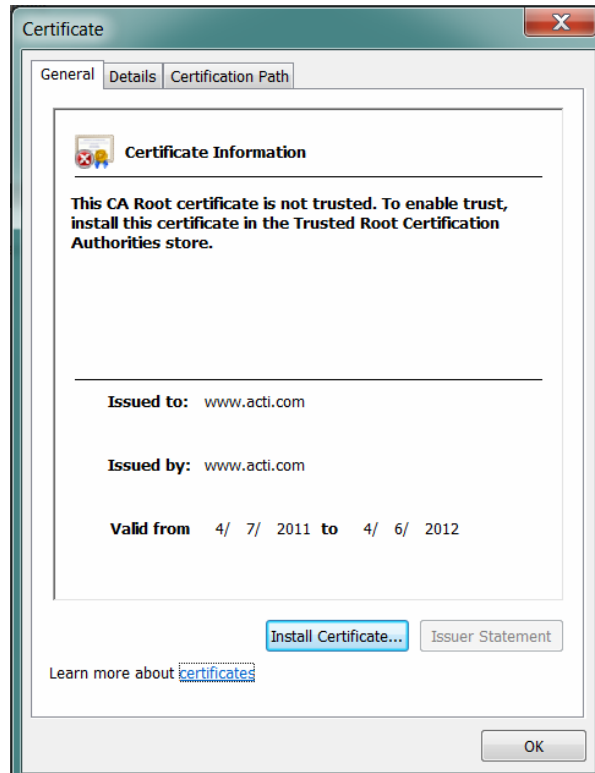

Press "Install Certificate".

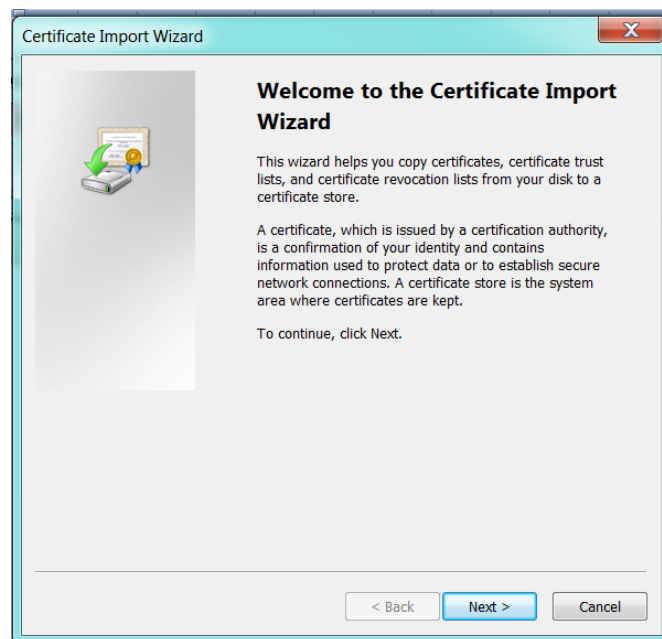

Encoder Firmware V4.12.09 User's Manual

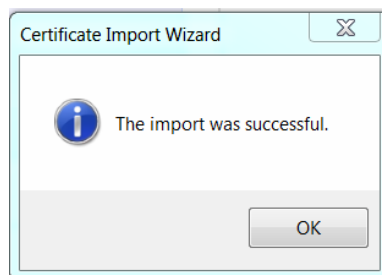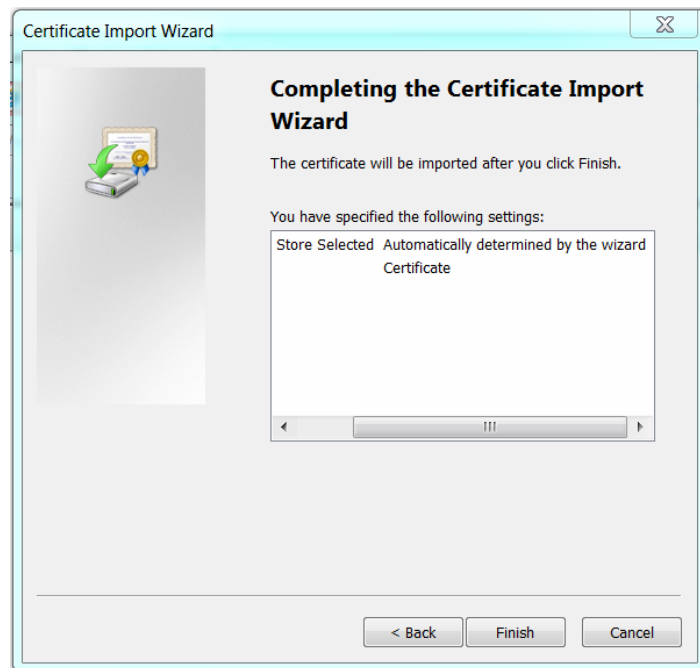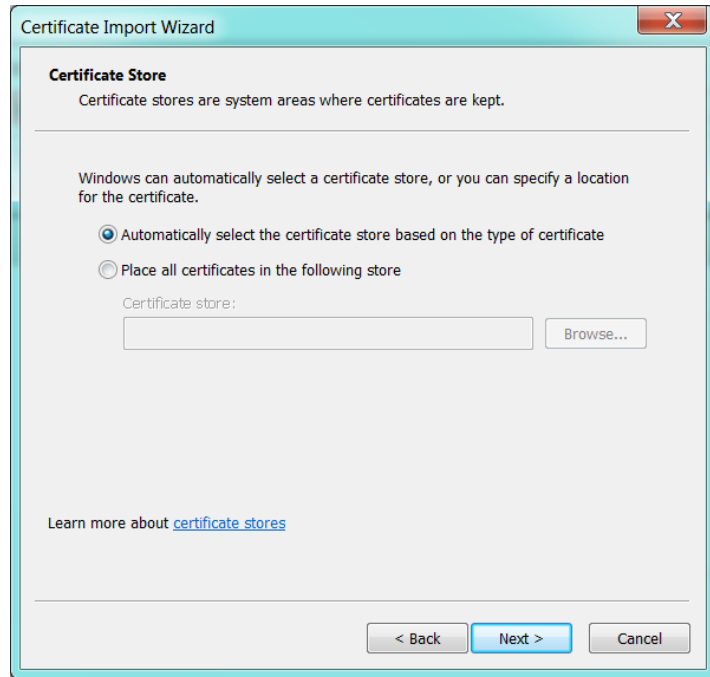

Encoder Firmware V4.12.09 User's Manual

802.1x

Please enable IEEE 802.1x and configure settings in the screen below. Note that the new setting will only take effect after “Save & Reboot”.

IEEE 802.1x*

☒ Enabled

EAPOL Version

☒ V1 ☐ V2

User Name

User Password

CA Certificate

none

Upload

User Certificate

none

Upload

User Private Key

none

Upload


* New settings will only take effect after [Save & Reboot]

Apply

Reset

Speed & Duplex

Click the [Speed & Duplex] item in the network section to display the "Speed and Duplex" Page. Refer to the table below for how to configure each setting.

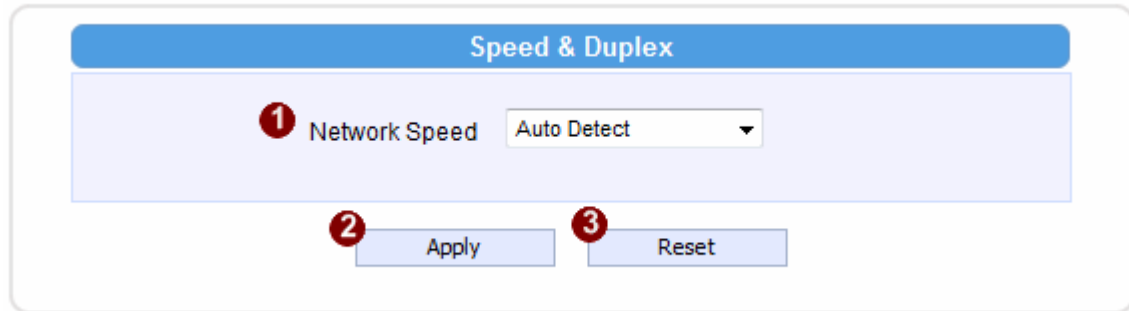

Parameters	Description
1 Network speed	This item lets you select the network transmission speed. You can select from 1. Auto detect (default setting) 2. 100Mbps / Full duplex 3. 100Mbps / Half duplex 4. 10Mbps / Full duplex 5. 10Mbps / Half duplex

Click the **2** [Apply] button to confirm the settings or click the **3** [Reset] button to re-enter the parameters.

IP Settings

Connection Type

Click the [Connection Type] item to display the “Connection Type Page”. Refer to the table below for how to configure each setting.

Parameters	Description
1 Dynamic IP address	Click this to enable IP device's DHCP function. It will acquire its WAN port IP address from a DHCP server within the same network. (You must have a DHCP server in order to enable this function.)
2 Static IP address	Click this to manually enter the IP address. 3 IP address: Enter the WAN port IP address. 4 Subnet mask: Enter the subnet mask of WAN port. If IP address is changed, adjust the subnet mask accordingly. 5 ISP gateway: Enter the IP address of the gateway (the router).
6 PPPoE	Click this when you connect IP device directly to the xDSL modem. 7 User name: Enter the user name of your xDSL account. 8 Password: Enter the password of your xDSL account. Note: You have to click the [Save & Reboot] after you click the [Apply button] to let this IP device start xDSL connections.

Click the **9** [Apply] button to confirm the settings or click the **10** [Reset] button to re-enter the parameters.

DNS

Encoder Firmware V4.12.09 User's Manual

Click the [DNS] item to display the “DNS Server Settings Page”. Refer to the table below for how to configure each setting.

The screenshot shows a web interface for DNS settings. At the top is a blue header with the text "DNS". Below this header is a light blue rectangular area containing the settings. There are two rows of input fields. The first row is labeled "1 Primary DNS Server" and has four input boxes, each containing the number "0". The second row is labeled "2 Secondary DNS Server" and also has four input boxes, each containing the number "0". Below these input fields are two buttons: "3 Apply" and "4 Reset".


Parameters	Description
1 Primary DNS server	Defines the IP address of the primary DNS server. This is used for identifying this computer by name instead of IP address.
2 Secondary DNS server	The IP address of the secondary DNS server. It will be used once the primary DNS server fails.

Click the **3** [Apply] button to confirm the settings or click the **4** [Reset] button to re-enter the parameters.

Encoder Firmware V4.12.09 User's Manual

DDNS

Click the [DDNS] item to display the “DDNS Server Setting Page”. Refer to the table below for how to configure each setting.

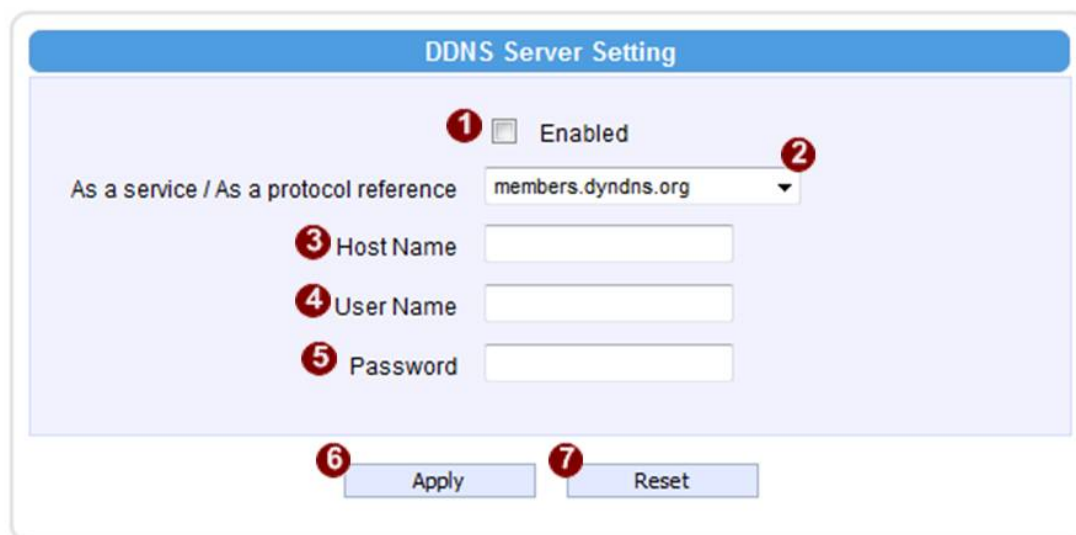

Parameters	Description
1 DDNS type	Click this to enable IP device's DDNS function. DDNS function enables user to connect to this IP device by domain name even if its IP address is not static.
2 Protocol / Service Reference	Click one of the DDNS service providers. You can visit their website to get a DDNS service account for this IP device.
3 Host name	Enter the host name of your DDNS service account. (ex: xxxx.dyndns.org)
4 User name	Enter the user name to login your DDNS service account.
5 Password	Enter the password to login your DDNS service account.

Click the **6** [Apply] button to confirm the settings or click the **7** [Reset] button to re-enter the parameters.

Video & Audio

Click the  [Video & Audio] item on the "Setup Page".


Please note that some elements may not appear on all models.

Video

Click the [Video] item to display the "Video Page". The functions here are grouped under different tabs. Starting from firmware version 4.07, there are two sets of all settings in the Video section, one for day time and one for nighttime. The camera will automatically load different profile based upon the current Day/Night status. This function allows for tailored configuration so that the camera may perform optimally under all lighting conditions.

Image (CMOS Models)

This tab concerns the general video settings. Please refer to the table below for functions.

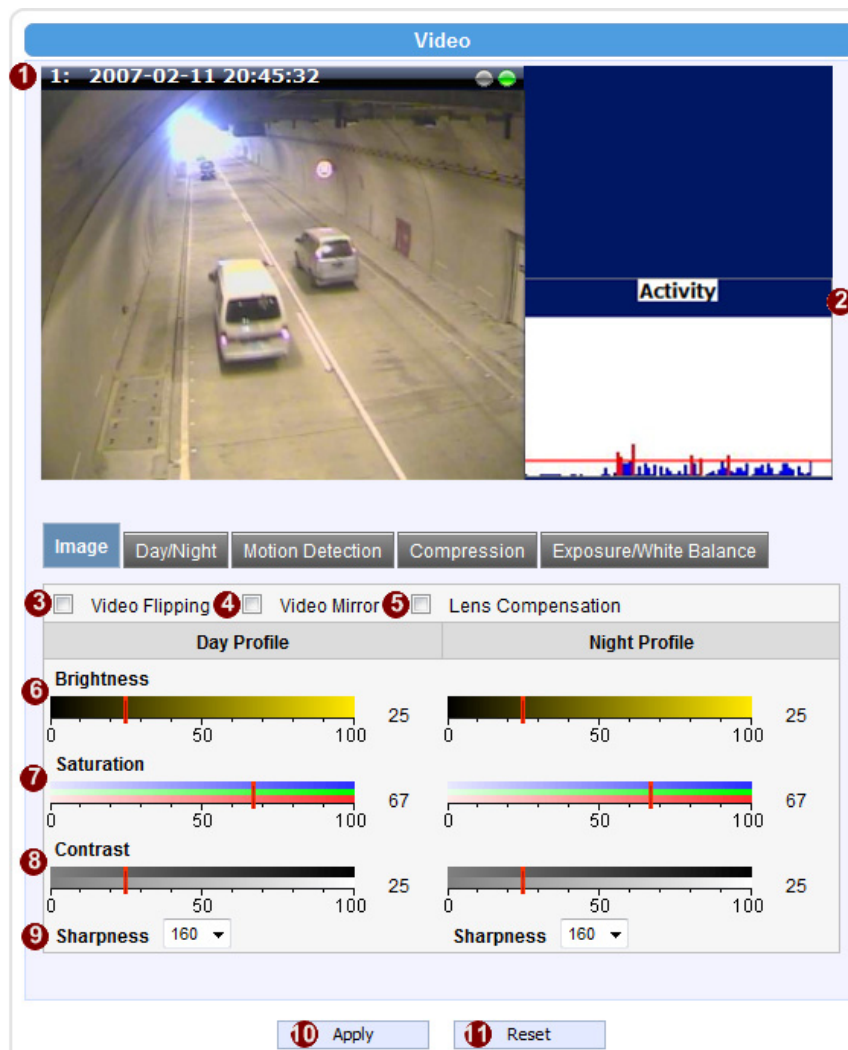

Encoder Firmware V4.12.09 User's Manual


Parameters	Description
1 Live View	Live view of the camera
2 Activity	Motion activity status
3 Video Flipping	Check this box to flip the video up-down
4 Video Mirror	Check this box to mirror the video left-right
5 Lens Compensation	Check this box to use best pre-set settings for bundled lens
6 Brightness	Select the brightness value
7 Saturation	Select the saturation value
8 Contrast	Select the contrast value
9 Sharpness	Select the Sharpness value

Click the **10** [Apply] button to confirm the settings or click the **11** [Reset] button to re-enter the parameters.

Encoder Firmware V4.12.09 User's Manual

Image (Megapixel CCD Models)

This tab concerns the general video settings. Please refer to the table below for functions.

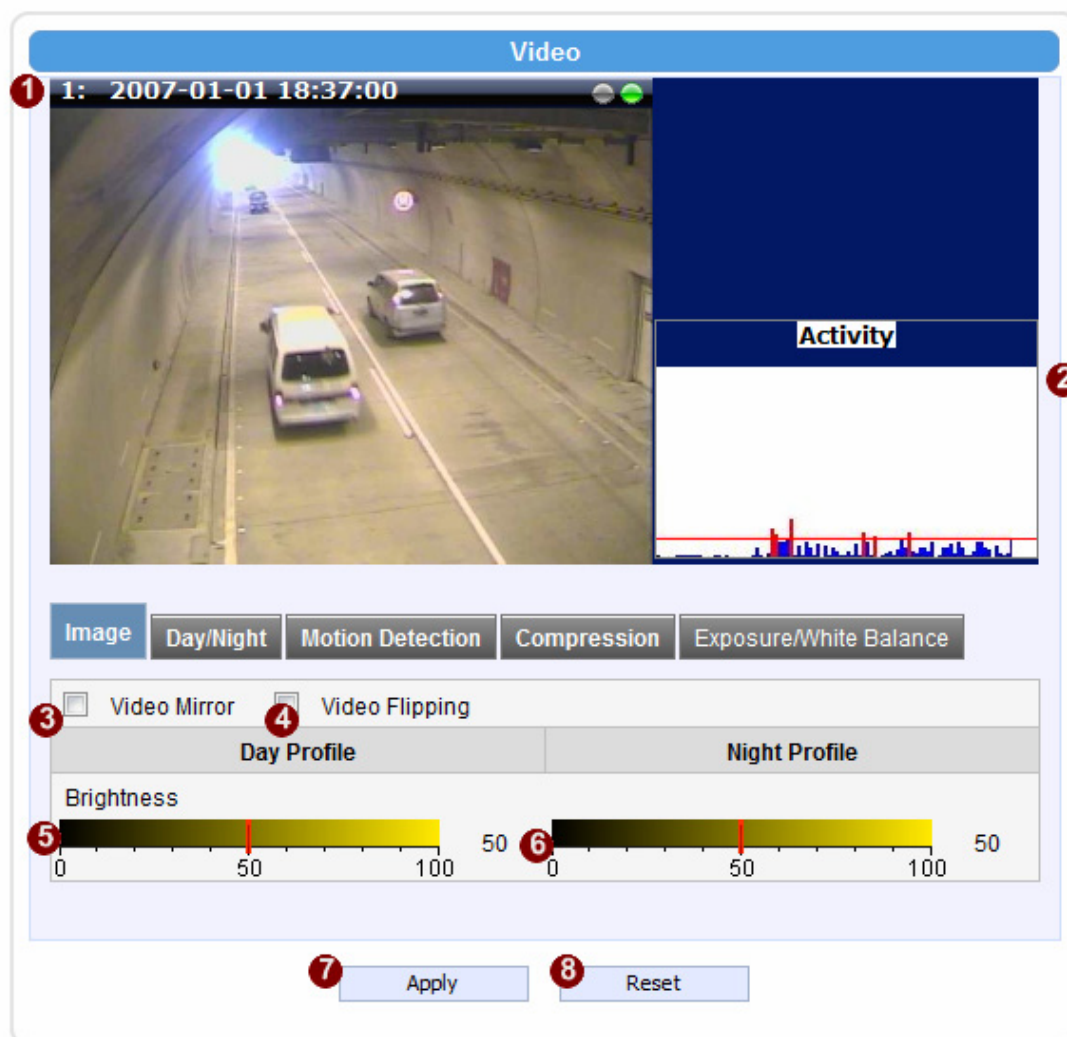


Parameters	Description
1 Live View	Live view of the camera
2 Activity	Motion activity status
3 Video Flipping	Check this box to flip the video up-down
4 Video Mirror	Check this box to mirror the video left-right
5 Brightness (Day Profile)	Select the daytime brightness value
6 Brightness (Night Profile)	Select the nighttime brightness value

Click the 7 [Apply] button to confirm the settings or click the 8 [Reset] button to re-enter the parameters.

Encoder Firmware V4.12.09 User's Manual

Image (CCD D1 Models)

This tab concerns the general video settings. Please refer to the table below for functions.

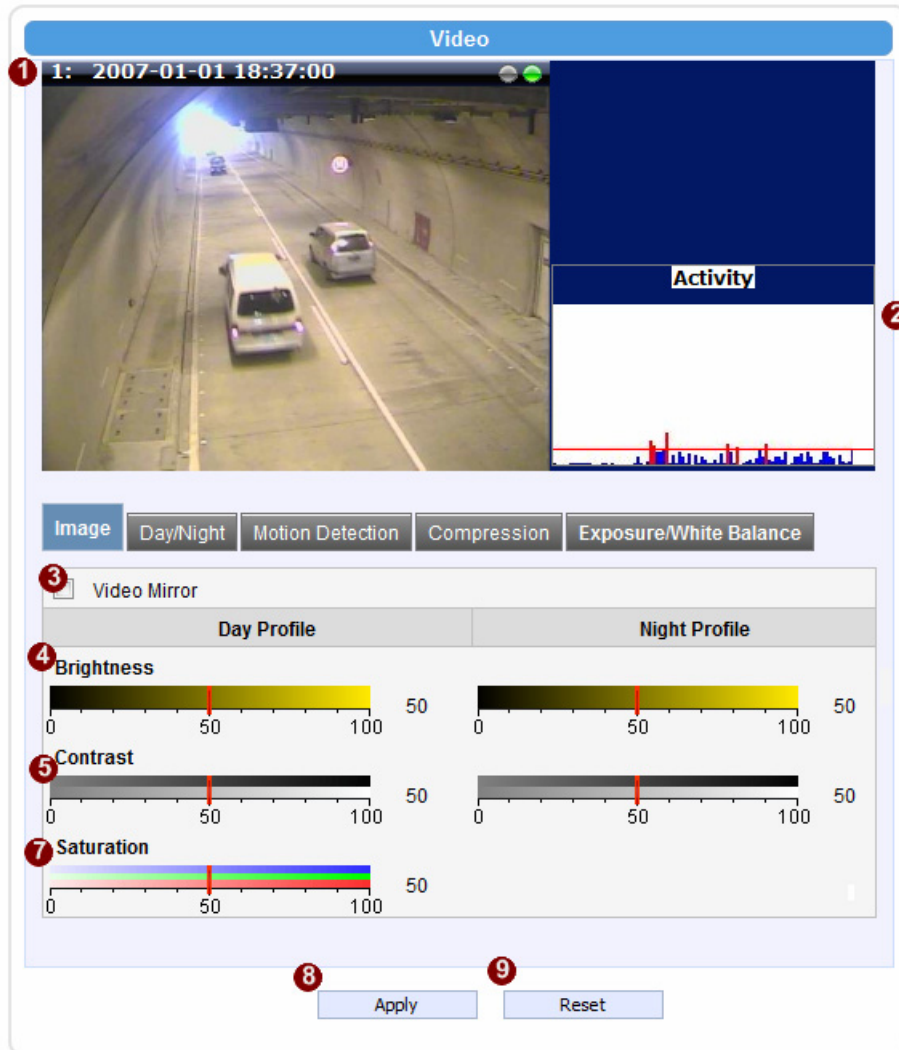


Parameters	Description
1 Live View	Live view of the camera
2 Activity	Motion activity status
3 Video Mirror	Check this box to mirror the video left-right
4 Video Mirror	Check this box to mirror the video left-right
5 Lens Compensation	Check this box to use best pre-set settings for bundled lens
6 Brightness	Select the brightness value
7 Contrast	Select the contrast value

Click the **8** [Apply] button to confirm the settings or click the **9** [Reset] button to re-enter the parameters.

Encoder Firmware V4.12.09 User's Manual

Image (PTZ Speed Dome Model)

This tab concerns the general video settings. Please refer to the table below for functions.

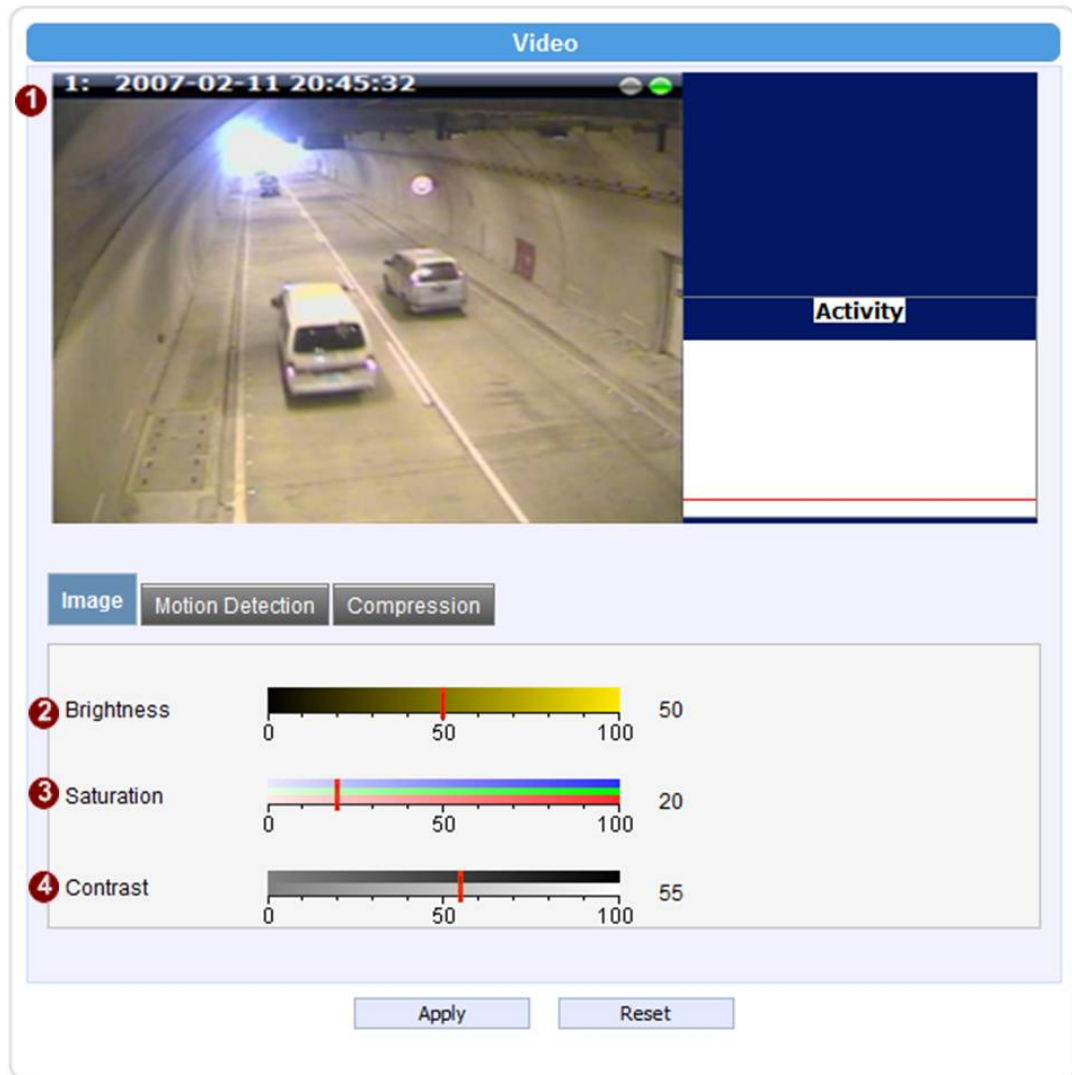

Parameters	Description
1 Live View	Live view of the camera
2 Brightness	Select the brightness value
3 Saturation	Select the saturation value
4 Contrast	Select the contrast value

Encoder Firmware V4.12.09 User's Manual

Day/Night (CMOS Non-D/N Models)

Video

1: 2007-02-11 20:46:31



Activity

Image

Day/Night

Motion Detection

Compression

Exposure/White Balance

Blue

 Switch from Day mode to Night mode

74


1

Switch if lasts more than

10

Seconds

2



3

Green

 Current Exposure Level

0

4

Get

5

Apply

6

Reset

This tab concerns the day and night switch timing for your camera. Please refer to the table below.

	Parameters	Description
1	Switch from Day mode to Night mode	This value controls the level of light where camera switches into night mode. Increasing it will make camera switch to night mode at a darker illumination level.
2	Switch if lasts more than X seconds	The camera will only switch day/night status if the illumination level stays either above or below the boundary for this much time. This is to prevent a temporary brightness change from triggering unnecessary day/night changes.
3	Brightness Meter Bar	This bar shows the illumination level at which cameras go to night or day mode (Blue bars), and shows the current detected illumination level (Green bars). Use this bar to fine tune the day/Night switch timing.
4	Get Current Exposure Level	Clicking this button will refresh the illumination level reading from the camera sensor. The larger the number, the darker the environment.

Encoder Firmware V4.12.09 User's Manual

Click the **5** [Apply] button to confirm the settings or click the **6** [Reset] button to re-enter the parameters.

Day/Night (CMOS D/N Models)

Video

1: 2007-02-11 20:46:31
● ●



Activity

Image
Day/Night
Motion Detection
Compression
Exposure/White Balance

Day/Night Mode
AUTO ❶

Day/Night Type
CDS ❷

Blue Switch from Day mode to Night mode

❸

Switch if lasts more than
 Seconds ❹

Red Switch from Night mode to Day mode

❺

Switch if lasts more than
 Seconds ❻

Day/Night IR Led
AUTO ❼

❽

Green Current Exposure Level

Get ❾

Apply ❿
Reset ⓫

Parameters	Description
1 Day/Night Mode	Select the day/night mode. Auto: The camera would switch between day and night mode automatically. It will follow Day to Night and Night to Day threshold defined by user below. Day: The camera will stay in day (Color) mode.

Encoder Firmware V4.12.09 User's Manual

	Night: The camera will stay in night (black & white) mode.
2 Day/Night Type	Select the method used by Camera to determine illumination level. It can be either CDS light sensor or through image analysis by DSP. Not every model will allow selection for this.
3 Switch from Day mode to Night mode	This value controls the level of light where camera switches from Day mode into Night mode. Increasing it will make camera switch to Night mode at a darker illumination level.
4 Switch if lasts more than X seconds	The camera will only switch day/night status if the illumination level stays either above or below the boundary for this much time. This is to prevent a temporary brightness change from triggering unnecessary day/night changes.
5 Switch from Night mode into Day Mode	This value controls the level of light where camera switches into Day mode. Increasing it will make camera switch to Day mode at a darker illumination level.
6 Switch if lasts more than X seconds	The camera will only switch day/night status if the illumination level stays either above or below the boundary for this much time. This is to prevent a temporary brightness change from triggering unnecessary day/night changes.
7 Day/Night IR LED	IR LED may be configured as AUTO or Disabled here. If it is set as AUTO, LED will turn on in night mode and turn off in day mode. If set to Disabled, LED will stay off when camera switches into night mode.
8 Brightness Meter Bar	This bar shows the illumination level at which cameras go to night or day mode (Blue / Red bars), and shows the current detected illumination level (Green bars). Use this bar to fine tune the day/Night switch timing.
9 Get Current Exposure Level	Clicking this button will refresh the illumination level reading from the camera sensor. The larger the number, the darker the environment.

Click the 10 Apply] button to confirm the settings or click the [Reset] button to re-enter the parameters.

Encoder Firmware V4.12.09 User's Manual

Day/Night (CCD D/N Models)



This tab concerns the day and night switch timing for your camera. Please refer to the table below.

Parameters	Description
1 Day/Night Mode	Select the day/night mode. Auto: The camera would switch between day and night mode automatically. It will follow Day to Night and Night to Day threshold defined by user below. Day: The camera will stay in day (Color) mode. Night: The camera will stay in night (black & white) mode.
2 Switch from Day mode to Night mode	This value controls the level of light where camera switches into night mode. Increasing it will make camera switch to night mode at a darker illumination level.
3 Switch from Night mode into Day Mode	This value controls the level of light where camera switches into Day mode. Increasing it will make camera switch to Day mode at a darker illumination level.
4 Brightness Meter Bar	This bar shows the illumination level at which cameras go to night or day mode (Blue / Red bars), and shows the current detected

Encoder Firmware V4.12.09 User's Manual

	illumination level (Green bars). Use this bar to fine tune the day/Night switch timing.
5 Get Current Exposure Level	Clicking this button will refresh the illumination level reading from the camera sensor. The larger the number, the darker the environment.

Click the **6** [Apply] button to confirm the settings or click the **7** [Reset] button to re-enter the parameters.

How it works

An important feature in this screen is that user may now customize the illumination level to perform day/night mode switches.

On the horizontal brightness meter shown here, there are three colored bars. The bar represents light amplifying levels 0 to 100, where 0 is Brightest and 100 is darkest. 0 means no digital amplification of incoming light signals, which means that the environment is bright enough for the camera to get good quality images.

When the environment gets darker, as when the sun is setting over the horizon, the environmental gets darker. To maintain proper image brightness level, the camera will attempt to digitally amplify the light signals received by the sensor. The Blue one is the level at which camera will go into night mode, and remove Mechanical IR cut filter and open IR LED if available. The red one indicates the illumination level at which the camera will consider bright enough to go back to day (Color) mode.

The Red bar should always be to the left of the blue bar. As camera go from day to night mode, more lights are allowed inside (the IR filter is removed), so the detected light signal level will increase. If the night-to-day illumination level is too close to the day-to-night level, the camera will immediately consider it bright enough to go back to day mode, which will result in continuous day/night switching.

Motion Detection

Video

1: 2007-02-11 20:32:16

Adjust Column

Adjust Square

Activity

Image Day/Night **Motion Detection** Compression Exposure/White Balance

☐ Motion Detection (Only for Media 1)

☒ Motion Enable

Region	Motion Enable	Sensitivity [0-100]	Trigger Interval [1-300 Secs]	Trigger Threshold [0-100%]
1	☒	70	1	10
2	☒	70	1	10
3	☒	70	1	10

PIR Motion Sensor Enable

Enable	Sensitivity [0-100]	Trigger Interval [1-300 Secs]
☒	80	1

Apply Reset

Click the **9** [Apply] button to confirm the settings or click the **10** [Reset] button to re-enter the parameters.

Video Motion Detection:

STEP1: Click the Plus sign **3** to expand the Motion Detection settings then Click the Motion Enable checkbox to enable motion detection.

Encoder Firmware V4.12.09 User's Manual

STEP2: Click the  checkbox to enable motion detection for each individual region.

STEP3: Click one region to start to edit its size and location. You can click the “Adjust Column” to drag motion region to your desired location. You can click the “Adjust Square” and drag to adjust motion region size. You can click the upper right button to cancel this motion region. Repeat above procedure to adjust the motion region.

STEP4: Set the  sensitivity of motion detection region.

STEP5: Set the  interval time of motion detection. After a motion event is triggered, no more events will be triggered within this time in the same region

STEP6: Set the  trigger threshold of motion detection region. The larger this value, the larger the object size needed to trigger motion detection.

STEP7: In motion activity  window, the bar shows the motion activity status. You can also see the trigger threshold (Red line). When the motion activity exceeds the trigger threshold, the bar would become red to indicate that a motion event has been triggered.

While viewing the motion activity window, you can adjust the motion sensitivity (the higher, the easier camera considers video change to be an activity) and the threshold (the higher, the larger the activity needed to trigger a motion event). If the default settings are not satisfactory for your scene, you may try our alternative recommendations of:

Sensitivity: 80, Threshold: 2~5 (for normal environment)

Sensitivity: 80, Threshold: 5~10 (for very noisy environment)

PIR (Passive Infra Red motion sensors) (Not available to all models)

PIR sensors are available for some models. For the models with PIR, there will be a PIR Motion Sensor section below the video motion detection.

You may enable PIR sensors by the checkbox  and modify the sensitivity/ trigger interval. When motion is detected via PIR sensor, a red border will show around the whole view area.

Please note that PIR sensors have a shorter range of detection than Video motion detection.

Compression

Video

1: 2007-01-01 00:16:45

Activity

Image
Day/Night
Motion Detection
Compression
Exposure/White Balance

☐ Stream 1

1 Encoder Type
H264 ▾

2 Resolution
1280x720 ▾

Day Profile		Night Profile	
3 Frame Rate	30 ▾	7 Frame Rate	15 ▾
4 Video Bit Rate Mode	Variable Bit Rate ▾	8 Video Bit Rate Mode	Constant Bit Rate ▾
5 Quality	High ▾	9 Video Max Bit Rate	UNLIMITED ▾
6 GOP 1 I-frame /	Second ▾	10 Video Bit Rate	1.5M ▾

☐ Stream 2

☒ Enabled

Encoder Type
MJPEG ▾

Resolution
640x480 ▾

Day Profile		Night Profile	
Frame Rate	11 15 ▾	Frame Rate	7 ▾
Quality	12 60 ▾	Quality	50 ▾

13 Apply
14 Reset

There are two streams output available for this network device. Click the [Stream 1] or [Stream 2] item to display the content page, Contents for both stream are identical. Refer to the table below for how to configure each setting.

54

Encoder Firmware V4.12.09 User's Manual

Parameters	Description
1 Encoder Type	Select the encoder's compression type. MPEG-4 / MJPEG / H.264
2 Resolution	Select the video resolution of the IP device.
3 Frame rate	Select the available frame rate from the drop down menu.
4 Video Bit Rate Mode	Select the video bit rate mode. Constant Bit Rate: The bit rate remains constant at all conditions. Variable Bit Rate: The video bit rate will vary based upon scene complexity and amount of movement. The quality will remain the same.
5 Quality	When encoder type is MPEG4 or H.264, and video bitrate mode is "Variable Bit Rate" Select the quality value from High / Medium / Low
6 GOP Length	When encoder type is MPEG4 or H.264. and video bitrate mode is "Variable Bit Rate". Select the Interval between two I-frames. This is also called GOP Length. (Group of Picture) . Default value is one I frame per second. The maximum length of GOP is limited to 60.
7 Frame rate	Select the available frame rate from the drop down menu. This puts a hard cap on the maximum bit rate allowed in any given second of video streaming. Assigning a limited bit rate may result in a few dropped frames rate when the stream data overflows the allowed bit rate. Doing so will also disable Bit Rate setting below.
8 Video Bit Rate Mode	Select the video bit rate mode. Constant Bit Rate: The video bit rate remains constant at all conditions. Variable Bit Rate: The video bit rate will vary based upon scene complexity and amount of movement. The quality will remain the same.
9 Video Max Bitrate	This puts a hard cap on the maximum bit rate allowed in any given second of video streaming. Assigning a limited bit rate may result in a few dropped frames rate when the stream data overflows the allowed bit rate. Doing so will also disable Bit Rate setting below.
10 Video Bitrate	This is the target bitrate that the camera will attempt to provide when using Constant Bitrate mode. The actual value will fluctuate slightly based on scene changes.
11 Frame rate (Stream2)	Select the frame rate for each profile by choosing from the drop down list. Frame rates available for stream 2 may be less than stream 1, depending upon the setting.
12 Quality	When encoder type is MJPEG: Select the quality value of MJPEG encoder type from 1 to 100.

Click the **13** [Apply] button to confirm the settings or click the **14** Reset] button to re-enter the parameters.

Encoder Firmware V4.12.09 User's Manual

Exposure / White balance

The screenshot shows the 'Exposure/White Balance' configuration window. It features a tabbed interface with 'Exposure/White Balance' selected. The window is split into two main sections: 'Day Profile' and 'Night Profile'. The 'Day Profile' section contains settings for Line Frequency (60HZ), WDR Mode (ON), WDR Level (120), Exposure Mode (MANUAL), White Balance (MANUAL), R Gain (128), B Gain (128), Exposure Gain (7), and Shutter Speed (1/30). The 'Night Profile' section contains settings for Exposure Mode (AUTO), White Balance (INDOOR1), AE Reference target (77), and Maximum Auto Shutter Speed (1/5). At the bottom of the window are 'Apply' and 'Reset' buttons.

①	Line Frequency	Change settings between 60Hz or 50Hz, depending on the AC power type of your region..
②	WDR Mode	This determines if the WDR processing is turned on or off. Turn this on only when you have very large brightness differences in a single scene. Otherwise leave it off.
③	WDR Level	The strength of image modification by WDR algorithm. Increasing this will increase the effect of WDR processor.
④	Exposure Mode	Select exposure mode to auto or manual. 1. Auto: The IP camera will adjust the exposure automatically. 2. Manual: Manually select the ⑧ Exposure Gain and ⑨ Shutter Speed below.. Day and night mode change will not operate as normal under manual Exposure.
⑤	White Balance	Select the white balance mode. After you set the parameter, you need to wait for 5~10seconds to see the final result. 1. AUTO : Auto white balance (default)

Encoder Firmware V4.12.09 User's Manual

		2. INDOOR1: Select the indoor white balance profile 1. 3. INDOOR2: Select the indoor white balance profile 2. 4. OUTDOOR1: Select the outdoor white balance profile 1. 5. OUTDOOR2: Select the outdoor white balance profile 2. 6. HOLD: Select this to let the IP camera automatically obtain a best white balance setting according to current environment. The IP camera will use this setting to adjust color. NOTE: This setting will be lost after you reboot the camera. 7. MANUAL: Select this to enable manual setting of the white balance. You will need to enter the 6 R Gain and 7 B Gain setting below.
6	R Gain (Manual White balance mode only)	Add or decrease redness to the video when under Manual White Balance mode. (This function is only available in Manual White balance mode.)
7	B Gain (Manual White balance mode only)	Add or decrease blueness to the video when under Manual White Balance mode. (This function is only available in Manual White balance mode.)
8	Exposure Gain (In Manual Exposure Mode only)	Select the exposure Gain of the IP camera. The higher the value = brighter images. (1 ~ 255)
9	Shutter Speed (In manually shutter mode only)	Increase or decrease the shutter speed. The closer the number is to 1, the better nighttime performance is, although this also causes motion blur to the video.
10	Exposure Mode	Select exposure mode to auto or manual. 1. Auto: The IP camera will adjust the exposure automatically. Manual: Manually select the 8 Exposure Gain and 9 Shutter Speed below..
11	White Balance (In Indoor/Outdoor/Auto/Hold profiles only)	Select the white balance mode. After you set the parameter, you need to wait for 5~10seconds to see the final result. 1. AUTO : Auto white balance (default) 2. INDOOR1: Select the indoor white balance profile 1. 3. INDOOR2: Select the indoor white balance profile 2. 4. OUTDOOR1: Select the outdoor white balance profile 1. 5. OUTDOOR2: Select the outdoor white balance profile 2. 6. HOLD: Select this to let the IP camera automatically obtain a best white balance

Encoder Firmware V4.12.09 User's Manual

		setting according to current environment. The IP camera will use this setting to adjust color. NOTE: This setting will be lost after you reboot the camera. For all the settings above, you will need to setup the value for 12 AE Reference Target and Maximum auto shutter speed. 7. MANUAL: Select this to enable manual setting of the white balance. You will need to enter the 6 R Gain and 7 B Gain setting below.
12	AE Reference Target	This is the desired image brightness output level. The camera will attempt to change the exposure levels or digital amplification levels to achieve this level of brightness. Increasing this may provide a brighter image, but if there are extremely dark areas, this may also create slightly more noise in the underexposed areas.
13	Maximum auto shutter speed	The maximum allowed time for the camera to take a single image.

Click the **14** [Apply] button to confirm the settings or click the **15** [Reset] button to re-enter the parameters.

Audio

Audio

1 Audio In

2 Audio In Sensitivity

3 Audio Out Volume

Enabled ▼

Hight ▼

70

050100

4 Apply

5 Reset

1	Audio In	Select to enable or disable the audio in function.
2	Audio In sensitivity	Select the sensitivity of audio microphone.
3	Audio Out Volume	Adjust the Audio Out volume.


Click the **4** [Apply] button to confirm the settings or click the **5** [Reset] button to re-enter the parameters.

Encoder Firmware V4.12.09 User's Manual

OSD/Privacy Mask

OSD (On Screen Display) and Privacy masks are configured in this section. There are four regions available. Each may be used either as a Privacy mask or an OSD text.

Privacy Mask is not available in Dual Stream mode. Please disable Stream 2 if you wish to use Privacy mask / OSD. Please go to Video & Audio -> Video -> Compression tab to configure Stream 2.

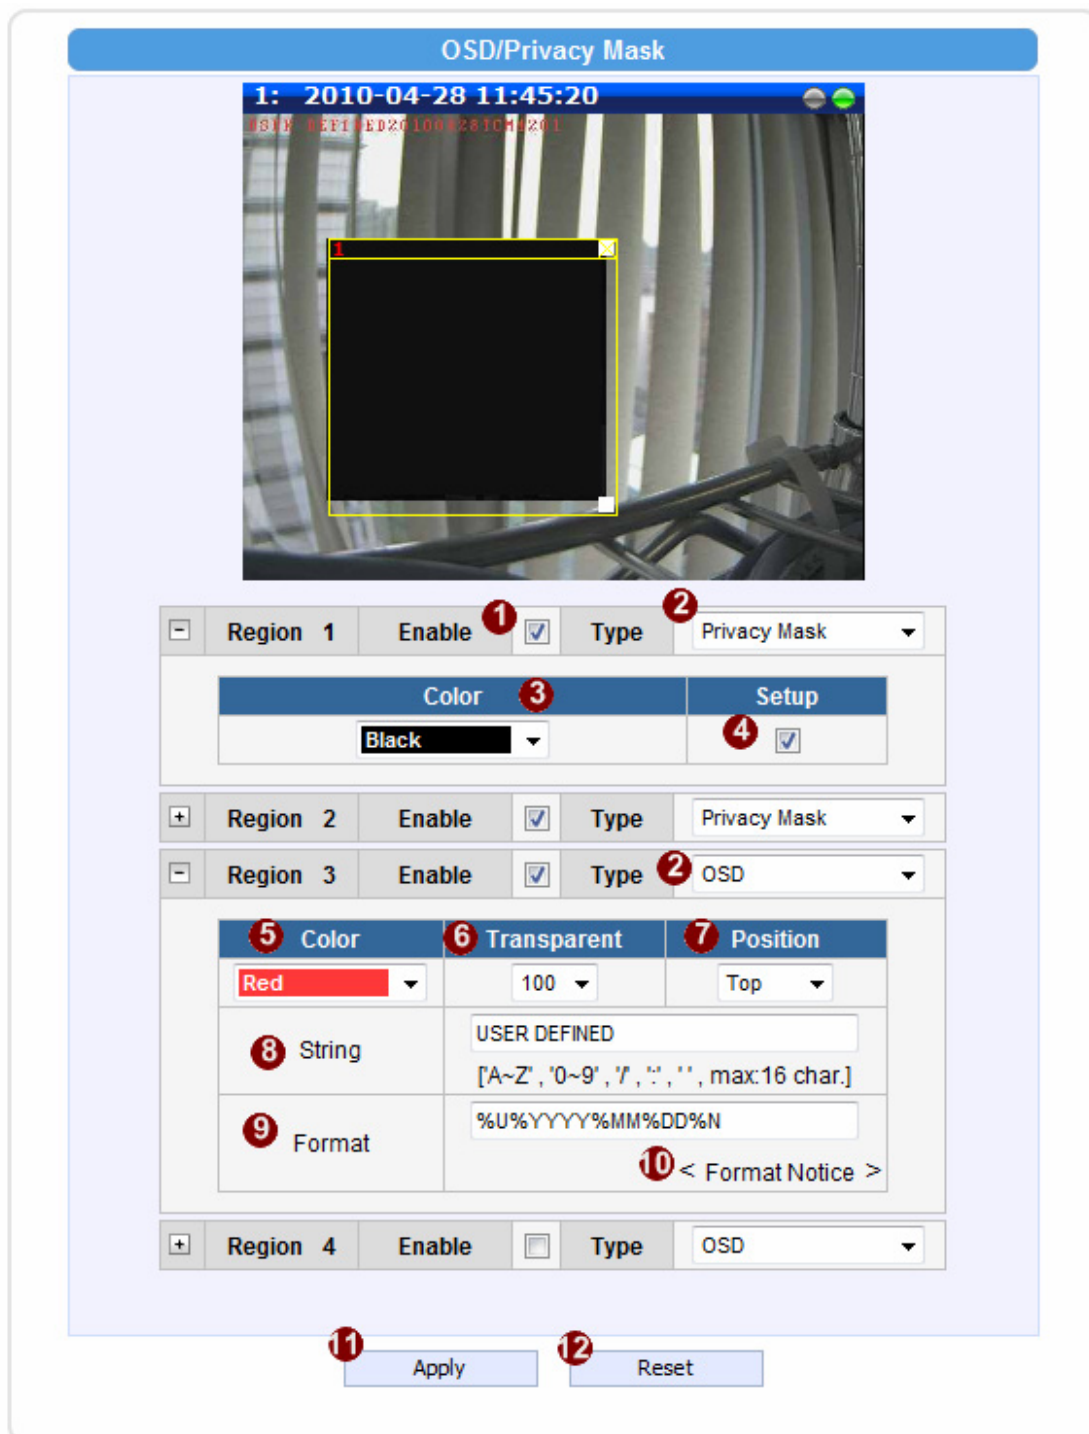

Encoder Firmware V4.12.09 User's Manual

Parameters	Description
1 Enable	Check this box to enable each OSD / Privacy mask region
2 OSD / Privacy mask	Each region can be in one of two types. OSD (On Screen Display) or Privacy mask
3 Color (Privacy mask)	This determines the color of the Privacy Mask Area. You may choose between Black, Green, Red and Blue.
4 Setup	Click this checkbox to enable Privacy mask area setup. Click and drag the adjust square at the lower right to change dimensions, click and drag the adjust column at the top to move. (Similar to Motion Detection Region)
5 Color(OSD)	This determines the color of the OSD Text. You may choose between Black, Green, Red and Blue.
6 Transparent	This number determines the level of transparency for this OSD Text. 1 means that the background between the texts will not be visible, while 100 means the background will show through the OSD text.
7 Position	Select the location where the text will appear in the image.
8 String	This is where you enter the user defined string (%U) as described in the next section. Total length cannot be more than 63 characters
9 Format	This controls what is shown in the OSD text. You can click the Format Notice to the corner for a full list of available parameters. The OSD text is primarily based upon this field.
10 Format Notice	Click here to see the syntax list of how to configure the OSD text.


Click the **11** [Apply] button to confirm the settings or click the **12** [Reset] button to re-enter the parameters.

Event

This section describes how to setup the **Event Handler**, which deals with how the IP devices respond to situations. Each IP device can have a maximum of 10 Event Rules. Each rule includes one single trigger, and one or many responses. Several types of responses are available. And there are multiple external servers for the device to interact with.

When setting up Event Handler, there are four types of settings. Event Server, Event Configuration, Event Rules and Manual Event

Click the  [Event] item on the "Setup Page".

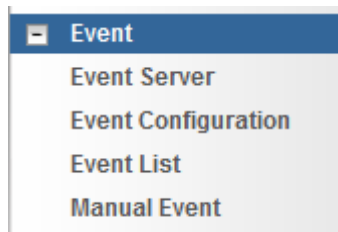

Event Server

Event servers define whom the device may interact with. They can be other servers or devices on the network, or even the camera itself. **Event Configuration** sets up a list of what to tell the other party during interaction. Event list lays down the rules and conditions about when to initiate which responses from which triggers. ***The options available for Event rules are selected from the event servers and event configurations.***

Event servers are classified as FTP servers, SMTP servers and HTTP servers

Event Server			
Type	Network Address	Ports	User Name
FTP Server Configuration	none	21	none
SMTP Server Configuration	none	none	none
HTTP Server 1 Configuration	none	80	none
HTTP Server 2 Configuration	none	80	none

Encoder Firmware V4.12.09 User's Manual

FTP Server

FTP servers can receive snapshot or video uploads that are issued as part of the response from event handlers. You may setup one FTP server.

To setup FTP servers, make sure to enter **1** the network address, **2** the Network (FTP) port, **3** the User Name, **4** Password, **5** Connection mode (Passive or Active) and **6** Connection time before timeout(in milliseconds). Click **7** [Apply] to use these settings or click **8** [Reset] to clear changes.

SMTP Server

SMTP servers can send email upon request from the IP device. The email can be a simple subject and text email, or attached with snapshot / video. You may setup two SMTP servers. The device will first attempt to send the message via the Primary email SMTP server. If the first attempt fails(after the Max connecting time), then the device will attempt to send via the secondary SMTP server. If the device sends email successfully via the primary SMTP server, then it will not use the secondary SMTP server.

Encoder Firmware V4.12.09 User's Manual

The screenshot shows the 'SMTP Server Configuration' window. It has a blue header bar with the title. Below it, the 'Primary SMTP Configurations' section contains several settings, each with a red numbered callout: 1. 'Enabled' checkbox is checked. 2. 'Authentication Type' dropdown is set to 'Login'. 3. 'User Name' text field contains 'Event@test.com'. 4. 'User Password' text field contains ten dots. 5. 'Sender Email Address' text field contains 'EventHandler@test.com'. 6. 'Network Address' text field contains 'smtp.test.com'. 7. 'Network Port' text field contains '25'. 8. 'Max. Connection Time' dropdown is set to '10' with the unit 'sec. (0~300 sec)'. Below this is the 'Secondary SMTP Configurations' section with a '+' icon. At the bottom are two buttons: 'Apply' (callout 9) and 'Reset' (callout 10).

To setup SMTP servers, make sure to **1** enable the SMTP account and **2** choose the proper Authentication type. There are many types available. The default is Login. We recommend you to use Auto Detection. Available authentication types include: Auto Detection, None, Login, Plain, Cram MD5, Digest MD5 and PoP Relay. Please also enter **3** the User Name, **4** Password, **5** the email address displayed as sender (can be different than the user name), **6** Network (SMTP server) address, **7** Network (SMTP server) Port number and **8** Max Connection time before timeout (in seconds). Click **9** [Apply] to use these settings or click **10** [Reset] to clear changes.

Encoder Firmware V4.12.09 User's Manual

HTTP Server

HTTP CGI servers are programs that run on web sites or many devices. They can be custom programmed to perform a large variety of actions based upon the input. You can define which CGI server to connect to here, and the user / password required to log into the target server. The actual message / command is setup in the Notification messages / URL commands section. You may define two separate CGI servers.

IP devices are also CGI servers. This means that IP devices can now issue commands to each other, which creates endless possibilities for highly coordinated response. The IP device can also give a loopback command to itself, in effect changing almost all possible settings dynamically. For detail on the commands used to control the cameras, please contact your customer representative.

An example will help you gain a better sense of how to utilize this unique function. Camera A is a fixed camera that looks at a corridor leading to the main hall. It has a motion detection window located near the point where the corridor arrives at the large hall. Camera B is a PTZ camera located in the hall, which is usually left on auto-tour patrol. When motion activity in the motion detection region triggers MD1 in Camera A, this then in turn activates an event rule in Camera A that gives out a command to Camera B. Camera B would then swivel to the preset point where the corridor leads into the entrance and switch to higher bit rate to temporarily provide clearer image. After the event ends, Camera B will go back to its normal routine in lower bit rate.

The screenshot shows the 'HTTP Server Configuration - 1' window. It contains the following fields and controls:

- 1** Enabled: A checkbox.
- 2** User Name: A text input field.
- 3** User Password: A text input field.
- 4** Network Address: A text input field.
- 5** Network Port: A text input field with the value '80'.
- 6** Max. Connection Time: A dropdown menu showing '10' and the text 'sec. (0~60 sec)'.
- 7** Apply: A button.
- 8** Reset: A button.


Encoder Firmware V4.12.09 User's Manual

To setup HTTP servers, make sure to **1** enable the HTTP server, **2** enter the user name, **3** the user password, **4** Network (HTTP Server) address, **5** Network (HTTP Server) port number and **6** Max connection time before timeout (in seconds). Click **7** [Apply] to use these settings or click **8** [Reset] to clear changes.

Event Configuration

Event configurations are the responses to be performed when an event is triggered. For most types of responses, you can create several different preset responses, then mix and match in event rules. Some responses are not supported in all IP devices (e.g.: DO, PTZ). Event Motion Detection profile is also a triggerable response, but the parameters are defined through the Video Adjust page, not in Event page.

The configurable responses are classified as Digital I/O ports, Notification messages, Upload Image / Snapshot, Send URL Commands and go to PTZ Presets.

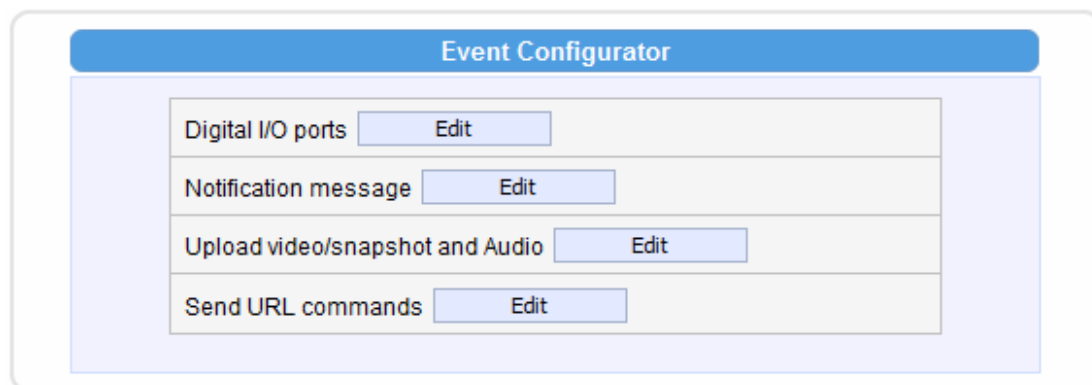


Digital I/O ports

Digital I/O ports (selected models only) read and control the voltage difference in the circuit, and respond to it. They are useful in connecting to a wide variety of devices. D/I is a trigger, while D/O is a response. Both are setup here. Both have a low voltage state and a high voltage state, noted as 0 and 1.

Encoder Firmware V4.12.09 User's Manual

Trigger Interval: How does it work?

When a motion is detected or the device receives a DI trigger, usually users want the camera to stay on high alert for a minimum duration of time before returning to normal mode. This duration is controlled by setting the **trigger interval** value. During this time, the device will NOT respond to a second trigger. The device will stay in the triggered state for as long as the trigger continues to be effective. So the Trigger interval only limits the minimum amount of time the device will spend in the triggered state. Below are sample diagrams on trigger-response mechanism.

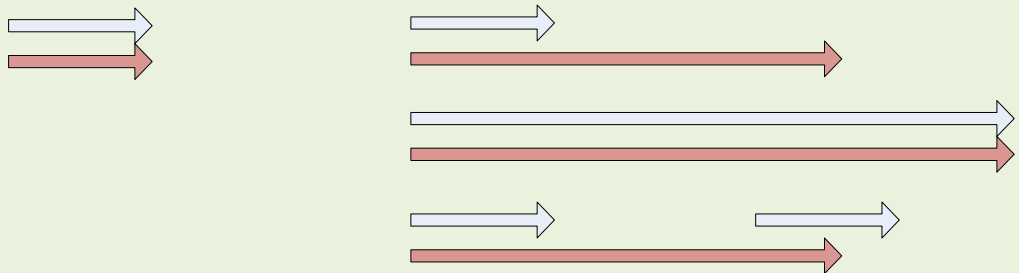

Digital I/O ports

Digital Input Port

Port	Active Level	Interval(0~86400 seconds)
DI 1	1 0 ▾	2 0

Digital Output Port

Port	Active Level	Interval*(0~86400 seconds)
DO 1	3 1 ▾	4 0

*: When 0, the digital output port stays at active level until the associated event becomes inactive

5 Apply
6 Reset

Minimum i

gger: 20s

ponse: 60s

gger: 80s

Response: 80s

DI: To setup DI, please define the 1 Active level as 0 or 1. If the active level is set as 1, then camera will consider high voltage difference a trigger, which can be used to initiate other events.

Trigger: 20s + 20s

The event will end when the DI voltage goes back to 0. 2 Interval determines the minimum delay that must pass before the IP device will accept another trigger from DI (in seconds). 0 means there is no minimum delay limit.

Response: 60s

Encoder Firmware V4.12.09 User's Manual

DO: To setup DI, please define the  Active level as 0 or 1. If the active level is set as 1, then camera will change the output voltage to high when this response is activated by an event rule.

The voltage will go back to low when the event ends.  Interval determines the minimum duration of each DO response(in seconds). DO will remain at the active level during this time, and if another event triggers DO before the end of the first DO, the second trigger will no take effect. 0 means there is no minimum duration.

Notification message

*Pre-requisites: **SMTP server / HTTP CGI server setup.**

Notification messages may be sent to either an email or a HTTP CGI server. If sent to a CGI server, it works the same as an URL command, but it does not allow a second message at end of event. You may configure up to three preset messages. You can configure a message, but disable it. This will allow you to keep the settings without using it, which will be useful in testing and troubleshooting.

Encoder Firmware V4.12.09 User's Manual

Notification messages

Enabled 1 ☒ 1

2 Send message to HTTP CGI 1 Test

3 CGI Path & Program * /cgi-bin/cmd/encoder
including path of CGI program

4 URL Command PTZ_PRESET_GO=1

5 Message * Look at Front Door

Enabled 2 ☒ 6

7 Send message to E-MAIL Test

8 E-Mail Recipients * supervisor@test.com
using ";" for multiple addresses

9 Subject * Entrance Detected

10 Message * nes through the front door

Enabled 3 ☐

* : Fields must be filled in

11 Apply 12 Reset

To setup Notification Messages, make sure to 1 enable the message, then 2 determine what type of message to send (HTTP CGI or email).

If you are sending to CGI server, you need to enter the CGI path 3, the URL command itself 4, and an optional message 5.

If you are sending email 7, please enter the recipient E-Mail address 8, the email subject 9, and the body message 10. Click 11 [Apply] to use these settings or click 12 [Reset] to clear changes.

Encoder Firmware V4.12.09 User's Manual

Upload Video/snapshot

*Pre-requisites: **SMTP server / FTP server / HTTP CGI server setup.**

IP devices may send video recording / snapshots to your chosen server upon event. Video will be in .RAW format, while snapshots will be .JPG files. You can define up to three group of settings to upload video/snapshot. Snapshots can be sent to FTP / HTTP CGI and via Email, while video can only be uploaded to FTP or HTTP CGI servers. If Audio in is enabled in device, the uploaded video will include audio.

The parameters needed to setup this function are different for each task combination (snapshot / ftp or video / HTTP... etc), and are explained below:

Enable						UI
						Enable Message 1 ☒
Upload Media Type	Snapshot			Video		Upload Media Type ☒ Snapshot ☐ Video Test
Upload Media to	Email	FTP	CGI	FTP	CGI	Upload Media To E-MAIL
Upload Period	Y	Y	Y	Y	Y	Upload Period 0 (0~86400 seconds)
Image during Upload Period	Y	Y	Y			Images during Upload Period 0 (Use 0 for maximum number of images)
Pre-Buffer Time				Y	Y	Pre-Buffer Time 0 (0~3 seconds)
Image File Name	Y	Y	Y	Y	Y	Image File Name Front_Door_%YYYY_%MM_%DD naming rule
Upload Path	*	Y	Y	Y	Y	Upload Path /Event_Snapshot naming rule
CGI Path & Program			Y		Y	CGI Path & Program
E-Mail Recipients	Y					E-Mail Recipients using "," for multiple addresses
Subject	Y					Subject Front Door Snapshot
Video Source	Y	Y	Y	Y	Y	Video Source 1

Enable Video/snapshot checkbox: this decides if this rule is in effect, or disabled. Sometimes it is useful to keep the settings, but not to enable it for troubleshooting purposes.

Upload Media to: these define the task at hand, and change the field that needs to be filled out.

Upload Period: IP device will provide video/snapshots for the number of seconds here. It will

Encoder Firmware V4.12.09 User's Manual

stop uploading video/snapshot at the end of this period. If you have video management software recording from this camera at the same time, the normal recording through NVR will not be affected, and goes on through out the event period and afterwards. But the special upload session will end as the event ends.

Image during Upload Period: This is used only by snapshots. This tells the camera how many snapshots it should attempt to capture during the Upload Time. If this value is set to 0, then the IP device will attempt to capture as many snapshots as possible. Depending upon the device loading, the number of snapshots taken may not reach the number you specified.

Pre-Buffer Time: This is only used by video. If this is set to more than 0, then the IP device will start to buffer video in its internal memory. The maximum pre buffer is 3 seconds. When an event requires video upload, the IP device will first upload the video taken right before the event then keep uploading until it reaches the upload time.

Image File Name/ Upload Path: You will need to specify rule for file names and upload paths (upload path is not needed for Email. Just put a slash "/" in the field). The rules contain flexible parameters. A sample rule and corresponding filename will look like this:

Front_Door_%YYYY_%MM_%DD@%hh%mm%ss

Front_Door_2009_10_12@195037.JPG

Upload Path folders may also be named dynamically. For the IP device to create folders on FTP and HTTP CGI servers properly, your FTP/CGI account will need to have permission to create folders. For syntax on auto naming, please see online help or the inset box at the end of this section.

The symbol "%" cannot be the first character in filename or upload path. Please use either an alphabet or a number as the starting character. For Upload Path, be sure to start and end with a backslash "\". An example will be : \Backgate%MM%DD\

CGI path & Program: Some CGI servers may require special info and settings. Please refer to CGI server designer for this section. IP devices do not allow upload of Snapshots / Video into their embedded CGI servers.

E-Mail Recipient / Subject: When uploading video/ snapshots via email, these information are required.

Video Source: Choosing the video source from video 1 or video 2.

Encoder Firmware V4.12.09 User's Manual

Auto Naming Rules for Files and Folders:

To properly track images and videos, a well thought out naming rule is necessary. There are a number of automatic variables available to design a proper naming system, which may be used both on files and folders.

Symbol	Description	Example
%YYYY	4 digits for year	2009 for year 2009
%YY	the last 2 digits of 4 digits year	09 for year 2009
%MM	two digits for month. 01~12	01 for January
%DD	two digits for date. 01~31	01 for the 1st day of a month
%hh	two digits for hour. 00~23	
%mm	two digits for minute. 00~59	
%ss	two digits for second. 00~59	
%W	a space character. ' '	' '
%N	camera name	camera-1
%Y	File serial counter. It starts from 1 in every uploading task. The counter will be increased by 1 for next uploading file.	1,2,3,4,5,...

Example

1. Entrance-%YYYY-%MM-%DD@%hh%mm%ss for time 2009/06/05 22:50:30.

The full name is Entrance-2009-06-05@225030

Send URL commands

*Pre-requisites: **HTTP CGI server setup.**

Encoder Firmware V4.12.09 User's Manual

The screenshot shows a web interface titled "Send URL commands". It contains three sections for configuring URL commands to be sent upon an event. Each section has a "Send Command X to" dropdown menu (all set to "HTTP CGI 1") and a "Test" button. The first section, "Send Command 1 to", has two sub-entries: "Command as event is triggered" with the URL `/cgi-bin/cmd/encoder?PTZ_PRESET_GO=1` and "Command as event becomes inactive" with the URL `/cgi-bin/cmd/encoder?PTZ_PRESET_GO=2`. The second section, "Send Command 2 to", has "Command as event is triggered" with the URL `in/cmd/encoder?VIDEO_BITRATE=3M&VIDEO_` and "Command as event becomes inactive" with the URL `/cgi-bin/cmd/encoder?VIDEO_BITRATE=750K&`. The third section, "Send Command 3 to", is partially visible with the dropdown set to "HTTP CGI 1". At the bottom are "Apply" and "Reset" buttons. Red numbered circles (1-8) highlight specific elements: 1 points to the first dropdown, 2 to the first triggered command URL, 3 to the first inactive command URL, 4 to the second dropdown, 5 to the second triggered command URL, 6 to the second inactive command URL, 7 to the "Apply" button, and 8 to the "Reset" button.

URL commands can be sent to HTTP CGI servers upon event. This provides the possibility of highly intelligent response upon event. IP devices and many other devices also have embedded CGI servers that may be controlled.

When Event Handler sends an URL command, it will send one set of command when the event is triggered, and another as the event becomes inactive. Depending on the CGI design, the URL commands may be able to be stringed together, and multiple commands may be issued in a single line.

An example would be when the access control device at the entrance detects an entry, this device provides a DI signal to the PTZ camera, and triggers an event. This event then sends a loopback command to the PTZ Camera itself (by setting its own IP as the HTTP CGI server). The PTZ Camera then moves to a preset location, stays until the event is over, then move back to another location. At the same time it moves to the preset location, it increases the bitrate from 750k to 3M, and the frame rate from 4 fps to 8 fps. The bitrate / fps changes are reverted at the end of event.

Event List

You may define a maximum of 10 Event rules, which will be shown in abbreviated form in the Event List panel. It will display under each Event ID, the days of the week it will be active, the start time and duration of the active period, the type of the source of trigger, and the actions used in the response. If the row is greyed out, this means the rule is currently not enabled and stays inactive.

Event Rule					
ID	Week Day	Start	Duration	Source	Action
1	1234567	00:00	24:00	NIGHT	VPROFILE
2	12345	08:00	20:00	SCH	DO1
3	1234567	00:00	24:00	NONE	NONE
4	1234567	00:00	24:00	NONE	NONE
5	1234567	00:00	24:00	NONE	NONE
6	1234567	00:00	24:00	NONE	NONE


There are several parts to the Event rule:

When is it active?

You may choose to enable the rule or not ¹. The settings will be kept in internal memory even if the event rule is disabled. Select the days in a weekly cycle ² in which this rule and schedule is active.

Determine the ³ start time and ⁴ duration of the active period. For example, a rule that lets motion detection trigger snapshot uploads to FTP would only take place after 19:00 each day for 12 hours. Outside of this time the rule will not be active.

Encoder Firmware V4.12.09 User's Manual

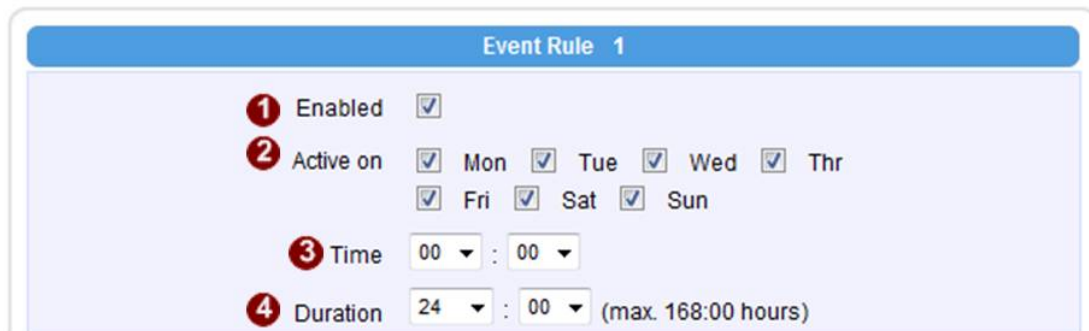

Event Rule 1

1 Enabled ☒


2 Active on ☒ Mon ☒ Tue ☒ Wed ☒ Thr
☒ Fri ☒ Sat ☒ Sun

3 Time 00 : 00

4 Duration 24 : 00 (max. 168:00 hours)

How is it triggered?

Events may be triggered by several sources:



Triggered by Switch to night mode ▼

You may also ask the event to be repeatedly triggered during this scheduled time. The interval is determined in minutes. You may use this with email / FTP upload to take snapshots at regular intervals.

DIs: For selected models only, the IP device may be triggered by Digital Input.

Motion: You may trigger the event if one or many Motion Detection regions encounter a motion trigger. Trigger from any of them will initiate the event. The duration of event will be the same as the MD trigger length, or the Trigger interval time, defined in the Motion Detection section on Video Adjust page.

Video Loss: This is available for video servers only. When the analog video in is lost, the video state will become “lost”, and return to “normal” only until device receives analog video signal. A common scenario is for Video Server to send email to administrator when video is lost, and activate DO signal to alarm that persists until the analog signal is restored.

Switch to Night mode: This is available to selected models only. When camera changes between day and night modes, the embedded event handler will notice this change, and may act upon this information.

Potential uses include changing the motion detection profile to another set of Event MD parameters. By having two sets of parameters each optimized for day and night, this provide better overall accuracy in both day and night conditions. Some night time only MD regions may


Encoder Firmware V4.12.09 User's Manual

also be activated this way. The event period will end when the camera returns to day mode, which will then reset the camera to the original settings.

Ready for service: This will trigger the event responses once the device boots up. You can use this to create a notification system that keeps record of when the device has been rebooted via email.

Service is not available: This triggers the event response when the device is shut down via web UI "Save and Reboot". Use this to keep record of when was the device setting edited. Note that this will not take effect when the device is unplugged, as this is not normal shutdown.

What responses will occur?

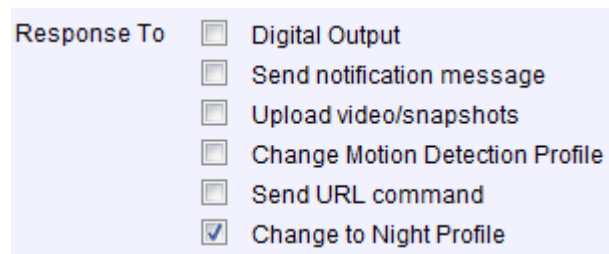

Response To	☐	Digital Output
	☐	Send notification message
	☐	Upload video/snapshots
	☐	Change Motion Detection Profile
	☐	Send URL command
	☒	Change to Night Profile

Digital Output (selected models only): This is an useful link to other devices. Click to include this in the response for this rule.

Send notification Message: Select from the three pre-defined messages which you've setup in the Event Configuration section. You may enable multiple messages at the same time. For sending Email, please limit the recipient to one per event rule. If you need to send email to more than one recipient, please use separate event rules triggered by the same trigger.

Upload video/snapshots: Select which of the event configurations to include in this response set. If you are sending email via upload video and sending notification message at the same time, the system will automatically merge the two emails into one. The subject and image will be based upon the Upload snapshot Event configuration enabled, but the message in the body text will be based upon the Notification messages.

In general, please stick to the "one email per event rule" limit for best performance.

Change Motion Detection profile: This will switch the profile of the selected Motion Detection region from Runtime profile to Event profile. The profile will return to runtime settings at the end

Encoder Firmware V4.12.09 User's Manual

of this event. You may program one motion detection region to be disabled at runtime, but enable it with event handler under some circumstances.

Send URL command: Select the URL command to include in the response set. Two different commands will be sent at the time when the event is triggered and untriggered.


Change to Night Mode (Selected models only): For some models, you may force the Camera into Night mode. The camera will return to its previous setting (whether auto or forced day/ night) upon the end of the event.

Go to a preset point: if the device is a PTZ camera, and the Go to Preset point Event Configuration is setup, then you may include this in the response section of the event rule. The camera will return to the position right before the event starts when the event is untriggered.

Be sure to do Save and Reboot after you've updated the event settings. Only then will the settings be committed to physical memory. You may lose the settings to power loss or other situations if you do not do this step.

Manual Event

You may select one event in the Manual Event area below the event list to be triggered via web UI.

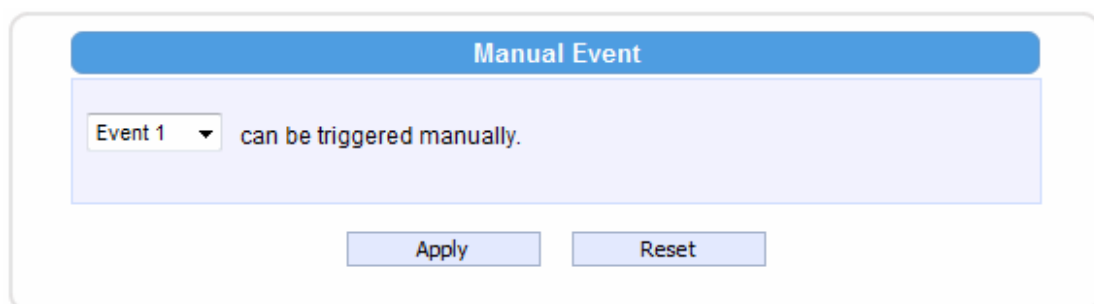

Once selected, the trigger button on the video display screen will show as clickable. Click to trigger the selected event. This is useful during event rule testing.




Local Storage Management

The TCM/TCD-Series devices that come with built-in local storage capability will have the [Local Storage] item shown in the “Setup Page” when the mass storage has been inserted into the storage drive slot of the device.

Under [Local Storage] item it is possible to manage the storage itself and the files that are stored there. In order to define the schedule or event rules that initiate or stop the recording process onto local storage, please refer to the chapter “Event Handler with Local Storage” on page 92.


Click the  [Local Storage] item on the “Setup Page”. There will be the list of 4 items – Status, Utilities, Setup and File Management. As long as the inserted mass storage has not been formatted or mounted yet, the File Management item is grayed out and cannot be accessed.

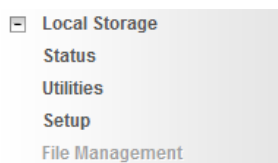

Encoder Firmware V4.12.09 User's Manual

Status


When the mass storage has not been formatted or mounted yet, the camera would not know the status of the storage, and the output would be as follows:

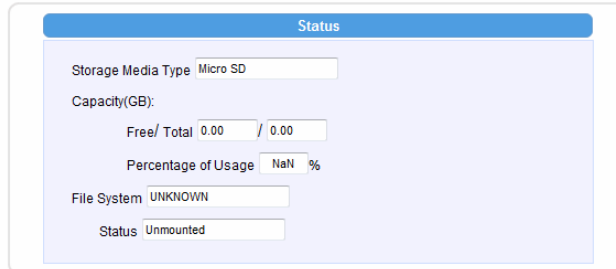

The screenshot shows a web interface titled "Status" with a light blue header. Below the header, the following information is displayed in a light blue box with white text:

Storage Media Type	Micro SD
Capacity(GB):	
Free/ Total	0.00 / 0.00
Percentage of Usage	NaN %
File System	UNKNOWN
Status	Unmounted

If the mass storage has been formatted or mounted already, the Status page will show the details of the storage:

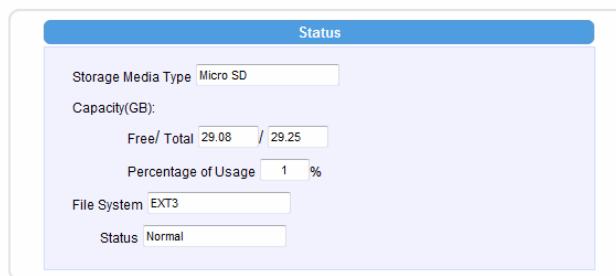

The screenshot shows a web interface titled "Status" with a light blue header. Below the header, the following information is displayed in a light blue box with white text:

Storage Media Type	Micro SD
Capacity(GB):	
Free/ Total	29.08 / 29.25
Percentage of Usage	1 %
File System	EXT3
Status	Normal

In case of IP cameras with MicroSDHC, the Storage Media Type will show "Micro SD".

In case of video encoder with 2.5" SATA hard disk, the Storage Media Type would show "HDD".


The capacity of the disk is shown in Gigabytes.

The file system is Linux based EXT3, which is different from Windows based PC file systems. If you remove the storage from the camera and plug it directly to Windows based PC, it may not be able to read its content. The chapter File Management explains the correct ways of accessing files of the local storage.

Encoder Firmware V4.12.09 User's Manual

Utilities


The “Utilities” are responsible for managing the storage itself rather than the files on the storage. There are three utilities – Mount, Format and Scan.

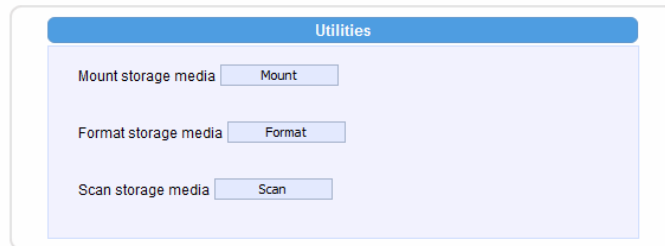

Mount

When the Mount storage media button shows “Mount” button then it means that the mass storage has been inserted to the camera, but the connection between camera and the storage has not been established yet. By pressing the “Mount” button, the storage becomes active. It is then possible to check the Status of the disk, write or read data on the disk, remotely access the storage by Web Configurator or FTP client, etc.


When pressing the “Mount” button, the mounting process will start.

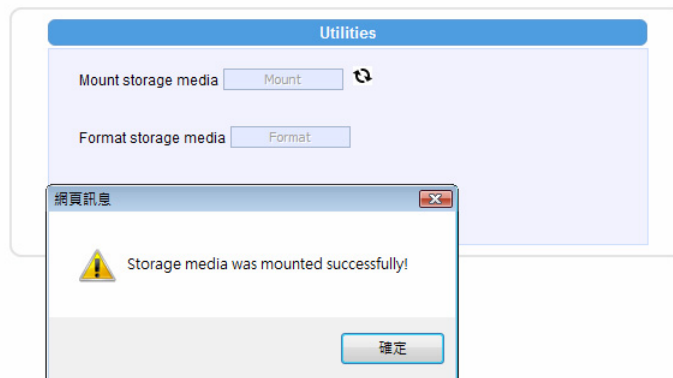

Unmount

Once the drive has been mounted, it can later be unmounted by pressing “Unmount” button, if necessary.

Encoder Firmware V4.12.09 User's Manual

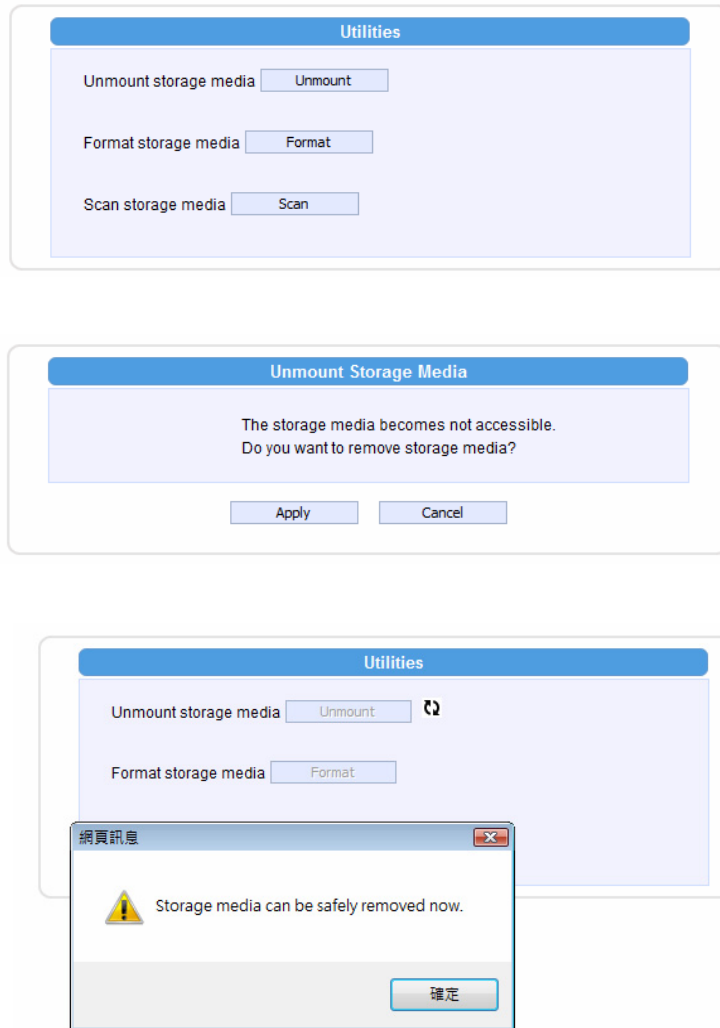


That Unmount function is used when the camera is to be shut down for maintenance or when the mass storage has to be physically removed for some reason. The purpose of unmounting is to protect the currently processed data on mass storage at the moment of removal of the storage. If the local storage is being used by camera and some videos or snapshots are being recorded to the disk, then the sudden shutdown or removal of the disk without unmounting may corrupt the file that currently being used by the camera. The rest of the files are not influenced in any way. Please note that "Save&Reboot" function of the camera also does unmounting automatically for the user.

Mount Failure

If the inserted disk's file system is not EXT3, then the Mounting would fail, as follows.


Encoder Firmware V4.12.09 User's Manual

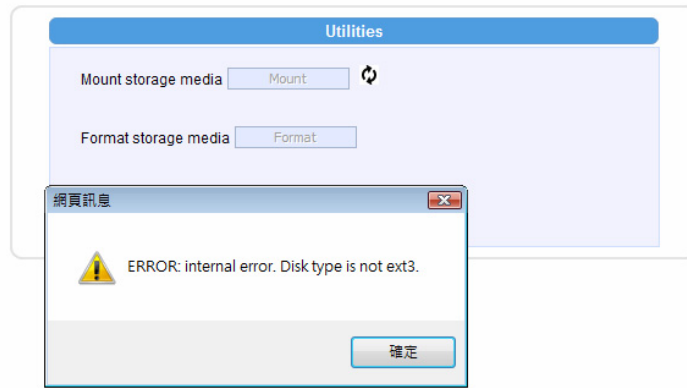


The common reason is that the disk may have previously been used in other file systems, such as Windows based PC or photo camera. If the disk does not have the right file system, then you will get the error message, such as above. In that case the disk has to be formatted first. ACTi camera provides convenient formatting function within Web Configurator.

Format

When the disk is inserted to the camera for the first time, it is recommended to format it, to make sure the file system of the disk would be compatible with camera.


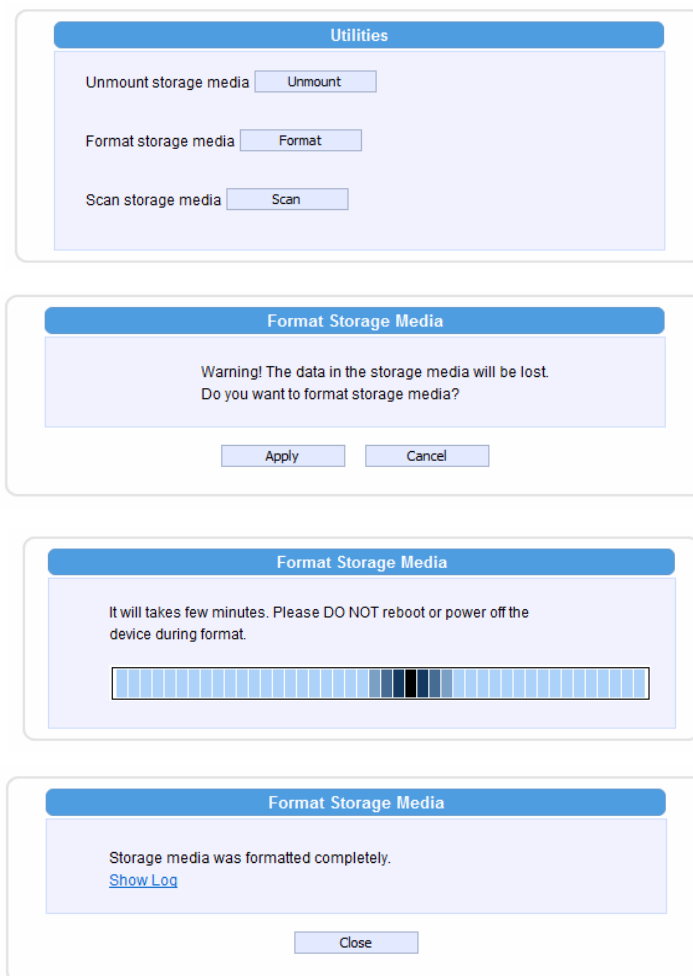


Encoder Firmware V4.12.09 User's Manual

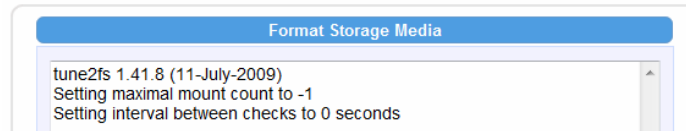




Format Failure

If the disk is damaged or it is not within the specifications of the camera, the formatting may fail. When this happens, there is no way to continue using that disk, and it has to be replaced with proper one.

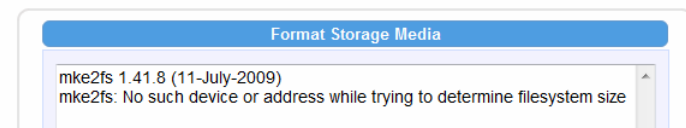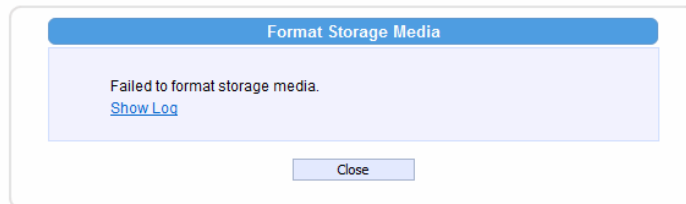


Scan

To check the “health” of the disk, it is possible to use the “Scan” function.

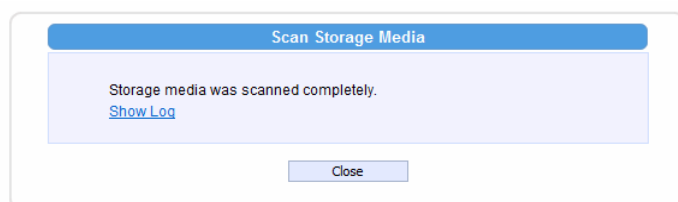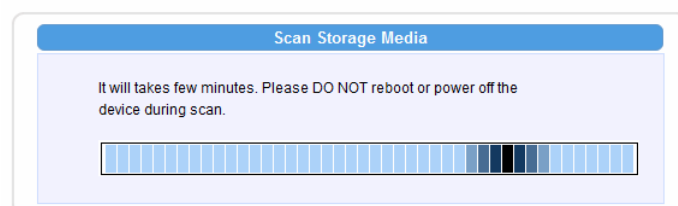
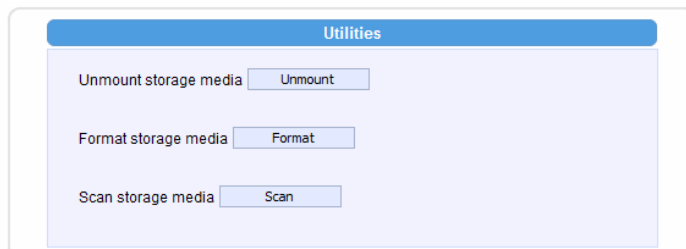


Encoder Firmware V4.12.09 User's Manual

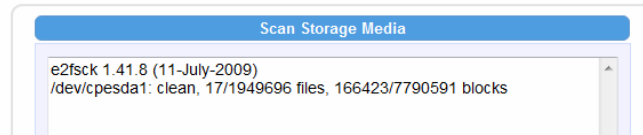


Scan Failure


The scanning would fail if the disk is not recognized by the camera. Make sure that the disk has been properly formatted and mounted to the camera.

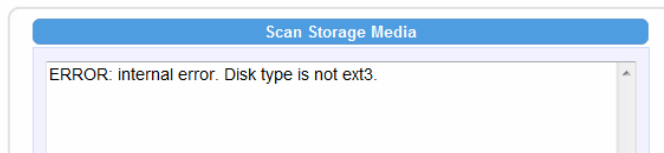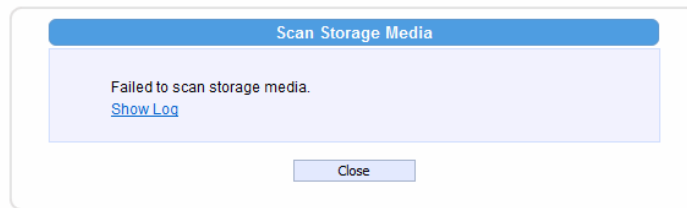

Setup

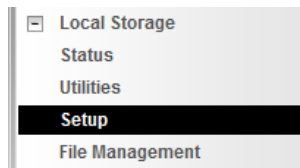


The “Setup” function provides the option to manage the file writing behavior of the camera. By default, the camera is set to “Remove old recordings when ran out of storage space automatically”. By using this mode, the camera’s recording process will not be interrupted when the disk becomes full – the oldest files will be overwritten by new recordings.

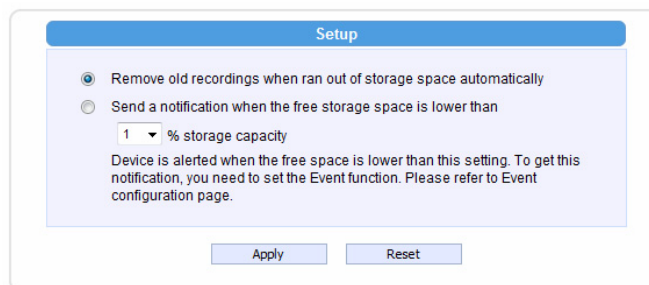

Please note that under this mode, there is a risk that important evidence may be deleted automatically over a period of time. Therefore, as long as “recycling” mode is used, the user should download the critical evidence files from the camera before they are erased by the camera.

When the “Send a notification when the free storage space is lower than...” option is chosen, then the existing files would not be overwritten by the camera and the recording process would stop when the disk is full.

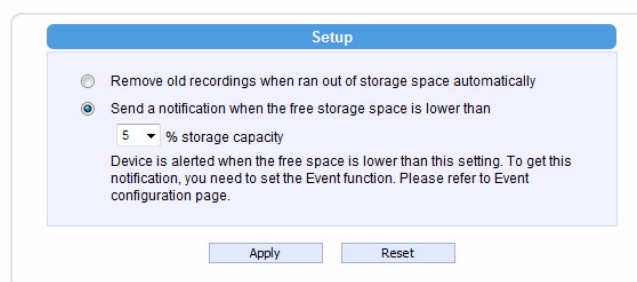


By this option, the possibility of sending notification e-mails automatically has been enabled. The % refers to the remaining size of available storage at which the camera should send a notification e-mail, in case such task has been listed in Event Handler of the camera. To actually make the e-mail notification work, please go to Event Handler (See “Event Handler with Local Storage” on page 92.) of the camera and set up the event rule where the selected trigger type is

Encoder Firmware V4.12.09 User's Manual


“disk space is low”.

Encoder Firmware V4.12.09 User's Manual


File Management

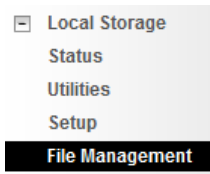

The File Management function is available only when the disk has been properly mounted to the camera. At first, the File Management page would be empty, because there are no files to be shown:

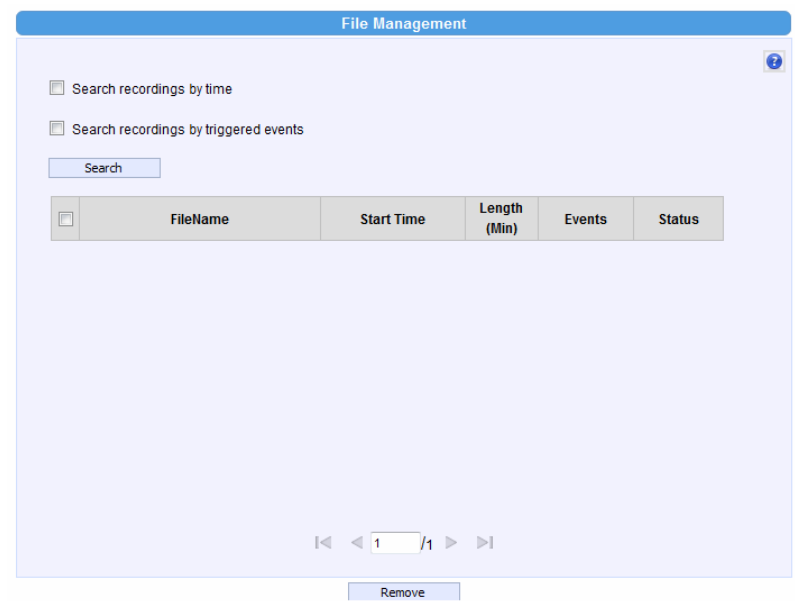

When clicking on the “?” mark on the upper right corner, the useful help message would appear:

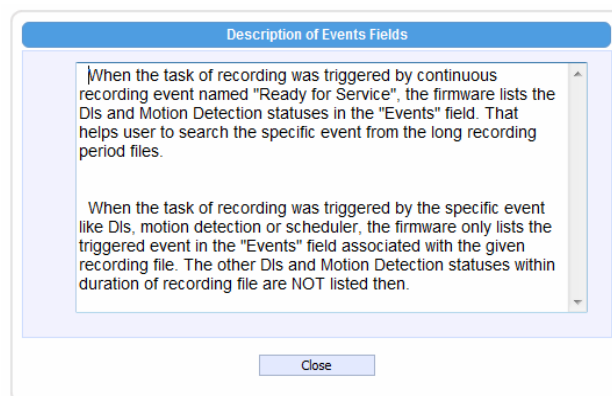

In order to let the camera record files either by event or by schedule, please go to Event Handler to set it up (“Event Handler with Local Storage” on page 92.). When the camera starts to record either videos or snapshots, you will be able to manage the files under “File Management” here.

Encoder Firmware V4.12.09 User's Manual

File Management

☐ Search recordings by time

☐ Search recordings by triggered events

Search

☐	FileName	Start Time	Length (Min)	Events	Status
☐	video_2012-06-22-08-03-11_493-frag1.raw	20120622-08:33:14	7	MD1 SCH	Writing
☐	video_2012-06-22-08-03-11_493.raw	20120622-08:03:11	31	MD1 SCH	Closed
☐	video_2012-06-22-07-56-35_818.raw	20120622-07:56:35	1	MD1	Closed
☐	video_12.06.22_07-51-45_677.raw	20120622-07:51:45	1	MD1	Closed
☐	video_074920_146_120622.raw	20120622-07:49:20	1	MD1	Closed

The largest possible recording file is approximately 30 minutes. You can see the length of each file in the file list. In case of snapshots, the length is not available.

Under continuous recording mode, the camera will make sure that the file size would not exceed 30-31 minutes – it would start writing a next file when the first file is full. There is also a way to force the continuous recording files to be with shorter length. It is explained in the Event Handler section on page 92.

The file that is currently being saved will show the status “Writing”.

Search Recordings by Time

If you are looking for the recordings of specific time period, then you may check the “Search recordings by time”, and select the starting time of the searchable range as well as the length of the time period.

☒ Search recordings by time

Date 2012 / 6 / 22 7 : 0 : 0

Time Period 60 Minutes

☐ Search recordings by triggered events

Search

☐	FileName	Start Time	Length (Min)	Events	Status
☐	video_2012-06-22-07-56-35_818.raw	20120622-07:56:35	1	MD1	Closed
☐	video_12.06.22_07-51-45_677.raw	20120622-07:51:45	1	MD1	Closed
☐	video_074920_146_120622.raw	20120622-07:49:20	1	MD1	Closed

With search settings above, only those files will be listed which were recorded between

Encoder Firmware V4.12.09 User's Manual

2012.6.22 7:00 and 2012.6.22 8:00.

Search Recordings by Triggered Events

Another convenient way of searching specific recording files is to define the events that were either the triggers of the recordings or occurred during the scheduled recording. Check the “Search recordings by triggered events” and choose one of the 4 event types – Dis, Motion, Schedule or Ready for Service. All these events can be managed under Event Handler (“Event Handler with Local Storage” on page 92.).

☐ Search recordings by time

☒ Search recordings by triggered events

☐ Dis ☒ Motion ☐ Scheduler ☐ Ready for Service

☐	FileName	Start Time	Length (Min)	Events	Status
☐	video_2012-06-22-08-03-11_493-frag1.raw	20120622-08:33:14	21	MD1 SCH	Writing
☐	video_2012-06-22-08-03-11_493.raw	20120622-08:03:11	31	MD1 SCH	Closed
☐	video_2012-06-22-07-56-35_818.raw	20120622-07:56:35	1	MD1	Closed
☐	video_12.06.22_07-51-45_677.raw	20120622-07:51:45	1	MD1	Closed
☐	video_074920_146_120622.raw	20120622-07:49:20	1	MD1	Closed

Download Recordings

You can download the files manually to remote PC by clicking on the File Name.

Delete Recordings

You can manually delete the files by filling the checkboxes and then pressing the “Remove” button.

☐	FileName	Start Time	Length (Min)	Events	Status
☐	video_2012-06-22-08-03-11_493-frag1.raw	20120622-08:33:14	12	MD1 SCH	Writing
☐	video_2012-06-22-08-03-11_493.raw	20120622-08:03:11	31	MD1 SCH	Closed
☒	video_2012-06-22-07-56-35_818.raw	20120622-07:56:35	1	MD1	Closed
☒	video_12.06.22_07-51-45_677.raw	20120622-07:51:45	1	MD1	Closed
☒	video_074920_146_120622.raw	20120622-07:49:20	1	MD1	Closed

Encoder Firmware V4.12.09 User's Manual

Search Snapshots


If the event rule of the Event Handler defines that there should be Snapshots stored on local storage instead of Video, then the snapshots will appear in File Management's file list. The extension of snapshot file is "jpg".

☐ Search recordings by time
☐ Search recordings by triggered events

☐	FileName	Start Time	Length (Min)	Events	Status
☐	snapshot_2012-06-22-09-03-42_245.jpg	20120622-09:03:42	0	MD1	Closed
☐	snapshot_2012-06-22-09-03-11_044.jpg	20120622-09:03:11	0	SCH	Closed
☐	snapshot_2012-06-22-09-02-26_708.jpg	20120622-09:02:26	0	MD1	Closed
☐	video_2012-06-22-08-03-11_493-frag1.raw	20120622-08:33:14	29	MD1 SCH	Closed
☐	video_2012-06-22-08-03-11_493.raw	20120622-08:03:11	31	MD1 SCH	Closed
☐	video_2012-06-22-07-56-35_818.raw	20120622-07:56:35	1	MD1	Closed
☐	video_12.06.22_07-51-45_677.raw	20120622-07:51:45	1	MD1	Closed
☐	video_074920_146_120622.raw	20120622-07:49:20	1	MD1	Closed

View and Download Snapshots

By clicking on the snapshot file name in file list it is possible to view the snapshot within Web Configurator. To download the snapshot, right click on the picture and save it to the computer.

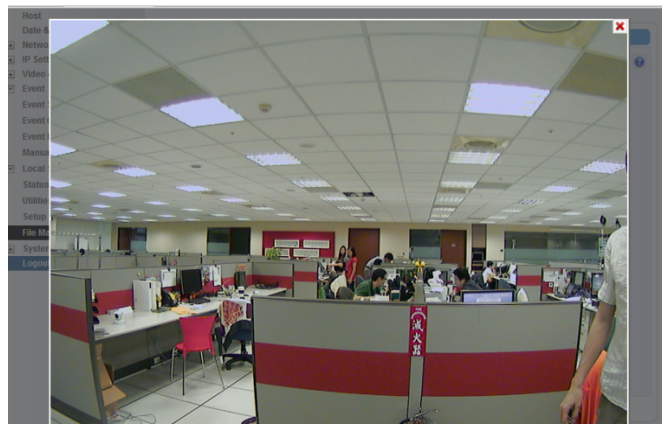

Deleting Snapshots

You can manually delete the snapshots by filling the checkboxes and then pressing the "Remove" button.

Special Rule!


When the event triggered snapshot happens during the video recording process, then the

Encoder Firmware V4.12.09 User's Manual

camera will not save the snapshot to the local storage, to avoid redundant information and waste of storage space, as the snapshot frame can be later extracted from video file instead.

Downloading Files by FTP Client

In addition to Web Configurator's File Management, it is also possible to use any of the FTP Clients to list and download the recordings from the local storage thanks to the built-in FTP Server of the camera. Use the **Error! Hyperlink reference not valid.** followed by camera's IP and then type the camera's account and password (default is Admin, 123456).

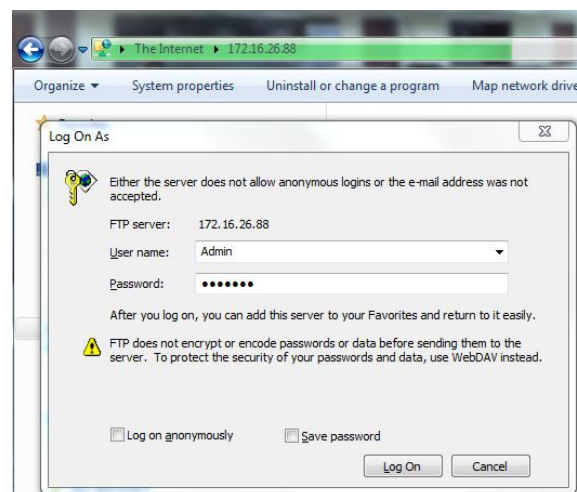

	snapshot_2012-06-22-09-02-26_708.jpg	514 KB	JPG :
	snapshot_2012-06-22-09-03-11_044.jpg	518 KB	JPG :
	snapshot_2012-06-22-09-03-42_245.jpg	512 KB	JPG :
	snapshot_2012-06-22-09-05-11_079.jpg	515 KB	JPG :
	snapshot_2012-06-22-09-05-36_497.jpg	503 KB	JPG :
	snapshot_2012-06-22-09-07-11_096.jpg	514 KB	JPG :
	snapshot_2012-06-22-09-08-22_788.jpg	498 KB	JPG :
	snapshot_2012-06-22-09-09-02_207.jpg	501 KB	JPG :
	snapshot_2012-06-22-09-09-11_065.jpg	512 KB	JPG :
	snapshot_2012-06-22-09-11-11_053.jpg	512 KB	JPG :
	snapshot_2012-06-22-09-12-30_617.jpg	510 KB	JPG :
	snapshot_2012-06-22-09-13-11_076.jpg	516 KB	JPG :
	snapshot_2012-06-22-09-13-34_260.jpg	511 KB	JPG :
	snapshot_2012-06-22-09-15-11_094.jpg	517 KB	JPG :

Notice! You may download files via FTP for your convenience, but do not delete any of the files via FTP because it would cause inconsistency between camera's file database and actual file availability.


Event Handler with Local Storage

In order to save video clips or snapshots on a local storage, there has to be a task created under Event Handler system of the camera that defines what type of files and when are they to be recorded on local storage.

Event Handler supports following Recording methods:


1. Event triggered video recording or snapshots (recommended solution)
2. Scheduled video recording (including non-stop recording) or snapshots

To set up the event handler rule, you have to configure both “Event Configuration” and “Event List”.

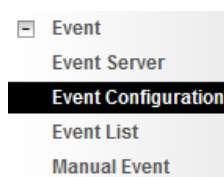

Event Triggered Video Recording

Under “Event Configuration” you can define the type of media (video, snapshot) and its properties.

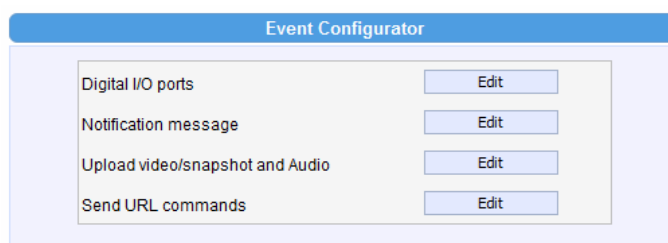

Select “Upload video/snapshot and Audio” to adjust the parameters of media.

Encoder Firmware V4.12.09 User's Manual

Upload video/snapshot1 ☒

Upload Media Type ☐ Snapshot ☒ Video

Upload Media To Local Storage

Pre-Buffer Time 3 (0~3 seconds)

Upload Period 57 (0~86400 seconds)

Image File Name video_%YYYY-%MM-%DD-%hh-%r
[naming rule](#)

Upload Path \ [naming rule](#)

Video Source 1

Upload video/snapshot2 ☐

Upload video/snapshot3 ☐

Check the “Upload Video/Snapshot1”. Please note that later on scheduler page this item will be referred to as “Image 1”. Let’s see the example of video format first – Upload Media Type shall be Video.

Upload Media To shall be “Local Storage”.

The camera has the capability to buffer up to 3 seconds of video at any time, so that we can include these 3 seconds of video to the file, to capture the moment right before the event occurred. With the settings of

Pre-Buffer Time = 3;

Upload Period = 57

the length of the video clip will be 1 minute.

You can freely decide the name of the file. Whatever name you choose, the camera will automatically append milliseconds in the end. It is recommended to include day code in file name so that later when the files are downloaded to remote computer, it is easier to pick up the right video.

For example, you may consider using following file name:

video_%YYYY-%MM-%DD-%hh-%mm-%ss

where %YYYY displays current year, %MM displays current month, %DD displays current day, %hh displays current hour, %mm displays current minute and %ss displays current second.

Notice! Please note that the camera uses its own date and time settings to write the file name, so please make sure the camera’s date and time are correct!

Encoder Firmware V4.12.09 User's Manual

Upload Path can be simply "\", which means that the files will be saved in root folder of the storage.

The video source can be either "1" or "2". If you want to have different video parameters for remote NVR recording and Local Storage recording, then you may consider adjusting camera's media 1 and media 2 settings accordingly and then choose the right video source in Event Handler page.

When done, just press "Apply" and move on to the "Event List", and pick any of the empty spots in the list of rules to create a new rule. In our example, we pick the rule 3 for setup.

Make sure to have the rule "Enabled" by filling the checkbox.

Event Rule3

Enabled ☒

Active on ☒ Mon ☒ Tue ☒ Wed ☒ Thr
☒ Fri ☒ Sat ☒ Sun

Time 00 : 00

Duration 24 : 00 (max. 168:00 hours)

Triggered by Motion

Trigger by Motion ☒ Region 1 ☐ Region 2
☐ Region 3

Response To ☐ Digital Output
☐ Send notification message
☒ Upload video/snapshots
☒ Image 1 ☐ Image 2
☐ Image 3
☐ Send URL command
☐ Change Day / Night mode

Apply Reset

By the example above, the camera will be 24/7 on guard to watch for motion events. When motion detection region 1 detects intrusion, it will trigger the response of uploading "image 1" according to the parameters defined under "Event Configuration" earlier. In other words, whenever motion occurs, the camera will record 3 seconds of video before the moment of motion detection, and 57 seconds after that. The video file can then be found under "Local Storage" -> "File Management".

Encoder Firmware V4.12.09 User's Manual

Scheduled Video Recording

Although it is not really recommended to have full-time recording for MicroSDHC due to it is not physically as capable as hard disk, the firmware still allows it to be configured for full-time recording mode.

Let's use the same media parameters as in previous example. Since the time unit of event rule is minute based, we should make sure that the media settings (in seconds) would add up as a round number in minutes. In this case, 3+57 seconds is exactly 1 minute.

The screenshot shows a configuration window titled "Upload video/snapshot". It contains the following settings:

- Upload video/snapshot1**: ☒
- Upload Media Type**: ☐ Snapshot ☒ Video
- Upload Media To**: Local Storage
- Pre-Buffer Time**: 3 (0~3 seconds)
- Upload Period**: 57 (0~86400 seconds)
- Image File Name**: video_%YYYY-%MM-%DD-%hh-%r
[naming rule](#)
- Upload Path**: \ [naming rule](#)
- Video Source**: 1

Below these settings are three checkboxes for "Upload video/snapshot2" and "Upload video/snapshot3", both of which are unchecked. At the bottom are "Apply" and "Reset" buttons.

In the event rule page, choose Trigger by "Scheduler" and choose Once Every 1 Minute. The rest of the items are the same as in previous example.

The screenshot shows a configuration window titled "Event Rule3". It contains the following settings:

- Enabled**: ☒
- Active on**: ☒ Mon ☒ Tue ☒ Wed ☒ Thr ☒ Fri ☒ Sat ☒ Sun
- Time**: 00 : 00
- Duration**: 24 : 00 (max. 168:00 hours)
- Triggered by**: Scheduler
- Once Every**: 1 Minutes
- Response To**:
 - ☐ Digital Output
 - ☐ Send notification message
 - ☒ Upload video/snapshots
 - ☒ Image 1 ☐ Image 2
 - ☐ Image 3
 - ☐ Change Motion Detection Profile
 - ☐ Send URL command
 - ☐ Change Day / Night mode

At the bottom are "Apply" and "Reset" buttons.

Encoder Firmware V4.12.09 User's Manual

As a result, the camera will be continuously recording, having each video file with the length of 1 minute.

Event Triggered Snapshots

Choose the “Upload video/snapshot” item in the “Event Configuration” page and check the Upload Media Type as “Snapshot” if you want to save images to camera’s local storage.

The screenshot shows a configuration window titled "Upload video/snapshot". It contains the following settings:

- Upload video/snapshot1**: ☒
- Upload Media Type**: ☒ Snapshot ☐ Video
- Upload Media To**: Local Storage (dropdown)
- Upload Period**: 1 (text input, range 0~86400 seconds)
- Images during Upload Period**: 1 (text input, note: Use 0 for maximum number of images)
- Image File Name**: snapshot_%YYYY-%MM-%DD-%hh (text input, with a "naming rule" link below it)
- Upload Path**: \ (text input, with a "naming rule" link below it)
- Video Source**: 1 (dropdown)
- Upload video/snapshot2**: ☐
- Upload video/snapshot3**: ☐

At the bottom are and .

With the settings above, it would create 1 snapshot within 1 second from the moment of triggered event using following file name snapshot_%YYYY-%MM-%DD-%hh-%mm-%ss .

The naming rule of the file is similar to the video files. Video Source can be either “1” or “2”, depending on customer’s requirements. If you want VGA snapshots on local storage while NVR is getting megapixel video stream, you can configure Media 2 as VGA, and set Video Source as “2”.

The event rule can be exactly the same as in case of video upload:

Encoder Firmware V4.12.09 User's Manual

Event Rule3

Enabled ☒

Active on ☒ Mon ☒ Tue ☒ Wed ☒ Thr
☒ Fri ☒ Sat ☒ Sun

Time 00 : 00

Duration 24 : 00 (max. 168:00 hours)

Triggered by Motion

Trigger by Motion ☒ Region 1 ☐ Region 2
☐ Region 3

Response To ☐ Digital Output
☐ Send notification message
☒ Upload video/snapshots
☒ Image 1 ☐ Image 2
☐ Image 3
☐ Send URL command
☐ Change Day / Night mode

Apply Reset

Scheduled Snapshots

Media configuration:

Upload video/snapshot

Upload video/snapshot1 ☒

Upload Media Type ☒ Snapshot ☐ Video Test

Upload Media To Local Storage

Upload Period 1 (0~86400 seconds)

Images during Upload Period 1
(Use 0 for maximum number of images)

Image File Name snapshot_%YYY-%MM-%DD-%h
[naming rule](#)

Upload Path /
[naming rule](#)

Video Source 1

Upload video/snapshot2 ☐

Upload video/snapshot3 ☐

Upload video/snapshot4 ☐

Apply Reset

Schedule configuration:

Encoder Firmware V4.12.09 User's Manual

Event Rule3

Enabled ☒

Active on ☒ Mon ☒ Tue ☒ Wed ☒ Thr
☒ Fri ☒ Sat ☒ Sun

Time 00 : 00

Duration 24 : 00 (max. 168:00 hours)

Triggered by Scheduler

Once Every 1 Minutes


Response To ☐ Digital Output
☐ Send notification message
☒ Upload video/snapshots
☒ Image 1 ☐ Image 2
☐ Image 3
☐ Change Motion Detection Profile
☐ Send URL command
☐ Change Day / Night mode

Apply Reset

As a result, There will be one snapshot from Media 1 stored on local storage once every minute, 24 hours a day. The snapshots can be accessible from “Local Storage” -> “File Management”


System

Click the  [System] item on the “Setup Page”.

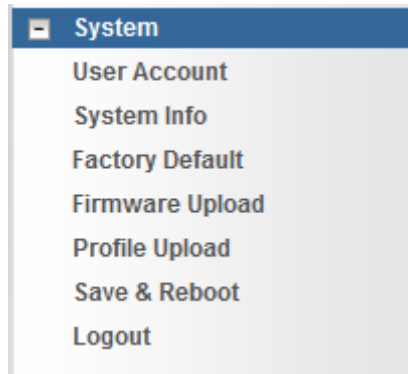

User Account

Click the [User Account Setting] item to display the “User Account Setting Page”.

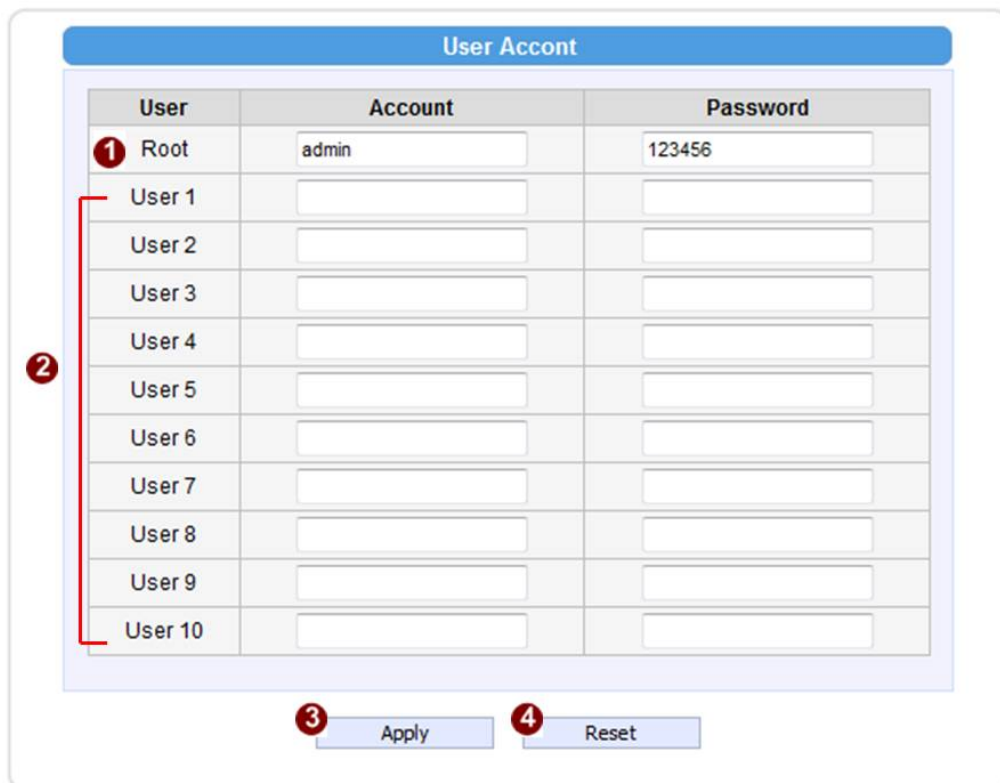A screenshot of the 'User Account' setting page. It features a table with three columns: 'User', 'Account', and 'Password'. The first row is for the 'Root' user with 'admin' as the account and '123456' as the password. This row is marked with a red circle '1'. Below it are ten rows for 'User 1' through 'User 10', each with empty input fields for account and password. A red bracket on the left side of these rows is marked with a red circle '2'. At the bottom of the table, there are two buttons: 'Apply' (marked with a red circle '3') and 'Reset' (marked with a red circle '4').

User	Account	Password
1 Root	admin	123456
User 1		
User 2		
User 3		
User 4		
User 5		
User 6		
User 7		
User 8		
User 9		
User 10		

3 Apply 4 Reset

Setup the account names and their respective passwords. There are 1 root (administrator)  account and 10 common user accounts  Administrator account allows the user to watch the

Encoder Firmware V4.12.09 User's Manual

live view and setup everything; but common user account allows user only to watch the live image.

Click the  Apply] button to confirm the settings or click the [ set] button to re-enter the parameters.

Encoder Firmware V4.12.09 User's Manual

System Info

Click the [System Info] item to display the "System Information Page". This shows details about this IP device including system information, WAN status and system log. Refer to the table below for how to configure each setting.

View the information at the 3 textboxes. This information is very useful to understand the IP device status and to resolve any problem that might occur.

System Information

1

System Information:

Firmware Version = A1D-310-V4.07.10-AC
MAC Address = 00:0F:7C:56:56:56
Production ID = TCM4201-10C-X-00001
Factory Default Type = Two Ways Audio (0x71)
Company Name = ACTi Corporation
Web Site = www.acti.com
Profile ID = MT9M131-TA2_V091211A
Sensor Board = MT9M131

2

WAN Status :

IP Address : 10.0.3.69
Netmask : 255.255.240.0
Gateway : 10.0.0.254
DNS Server : 0.0.0.0 0.0.0.0
DDNS Host :
WAN Connect Status : Disconnect
DNS Connect Status : Disconnect
DDNS Connect Status : Disconnect

3

System Log :

BootLoader Version BOOTLOADER-310-V01.12
Starting Modules Manager
Devcap Version 0x0002
Start loading Profile File ...
Initiating factory button ...
Starting loading SYS File...
Starting Streaming Core ...
Starting DNS Manager

Config file:

The unit's parameters and their current settings.

Parameter List

Always attach the server report when contacting your support channel.

Server Report

Third party software licenses.

Show Licenses

Encoder Firmware V4.12.09 User's Manual

Column	Description
1 System info	It shows the firmware version, MAC address, production ID, and factory default type of IP device.
2 WAN status	It shows the WAN port's IP address, netmask, gateway, DNS server, DDNS host and connection status.
3 System log	It shows the system event. This column is very useful to as a diagnostic tool.

Click **4** [Parameter List] where you may see all configurations of the IP device.

Click **5** [Server Report] to export related information of the IP device while reporting a support to your support channel.

Factory Default

Click the [Factory Default] item to display the "Factory Default Page".

The screenshot shows a web interface titled "Factory Default". It contains two radio button options. Option 1, labeled "1", is "Preserve network setting and HTTP/HTTPS port." and is currently selected. Option 2, labeled "2", is "Reset parameters to the original factory settings." Below these options are two buttons: "Apply" and "Reset".

If you want to keep network settings and restore other settings to factory default, please click radio box **1**. If you click **2**, all the settings would be lost. You will have to use factory default IP setting to connect to this camera. Please refer to previous login section.


If you want to reset all setting to default, click to select this radio box **2**.

Click the [Apply] button to show a warning dialog that reminds you again before restoring the device to factory default.

Encoder Firmware V4.12.09 User's Manual


Firmware Upload

Click the [Firmware Upload] item to display the “Firmware Upgrade Page”. Upgrade the IP device's firmware through this page with the following instructions. You may upgrade firmware for individual cameras with this function. To upgrade camera firmware in batches, please use IP utility, which can be freely downloaded from website. The firmware file you download from website will contain one .upg file, and one .md5 file. Uploading firmware through Web Configurator uses only the .upg file. You will need both files if you are doing multiple upgrades with IP Utility.

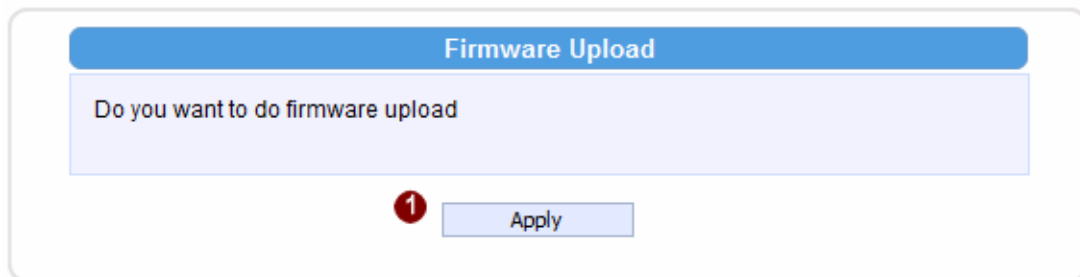

The dialog box titled "Firmware Upload" contains the text "Do you want to do firmware upload". Below the text is a red circle with the number "1" next to an "Apply" button.

Click **1** [Apply] button. The “Firmware Upgrade Page-2” will be displayed as below.

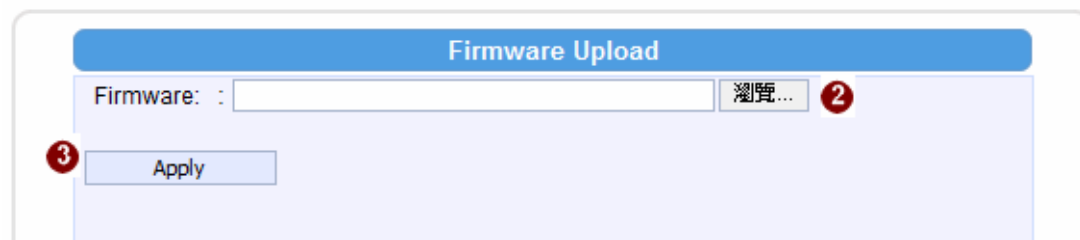


The dialog box titled "Firmware Upload" contains the text "Firmware: :". To the right of the text is a text input field and a "瀏覽..." (Browse...) button, with a red circle and the number "2" next to the button. Below the input field is a red circle with the number "3" next to an "Apply" button.


Click the **2** [Browse] to select the upgrade image file and click the [enter]. You can always get the latest version at our website.

Click the **3** [Apply] button to start upgrading

The upgrade process window will show a progress bar indicating upgrade status.

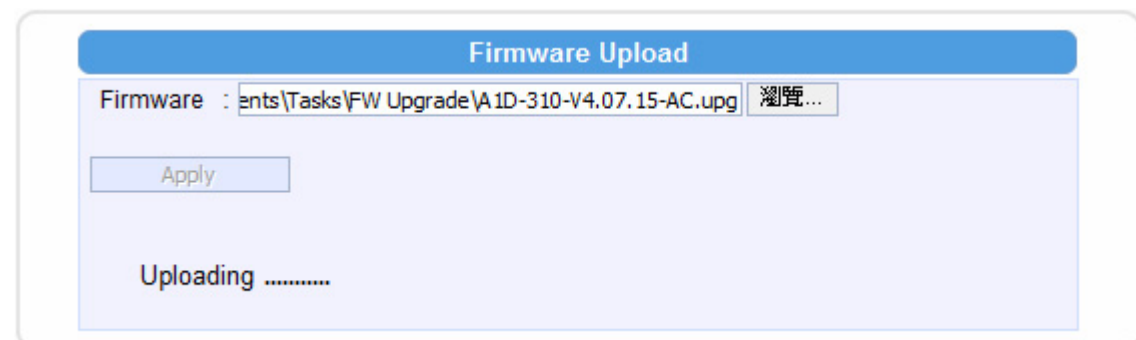

The dialog box titled "Firmware Upload" contains the text "Firmware :". To the right of the text is a text input field containing the path "ents\Tasks\FW Upgrade\A1D-310-V4.07.15-AC.upg" and a "瀏覽..." (Browse...) button. Below the input field is an "Apply" button. At the bottom of the dialog box is the text "Uploading".

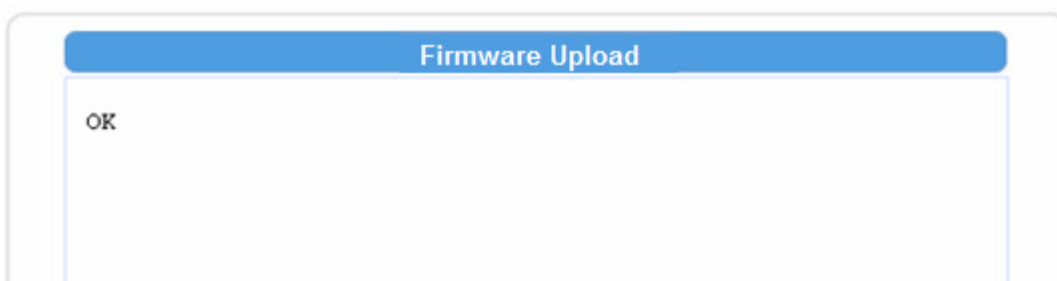

The dialog box titled "Firmware Upload" contains the text "OK".


Once the process is finished, the progress bar will show the upgrading as OK, and reboot the IP device system.

NOTE: If you cancel the firmware upgrade during upgrade process, the browser window will be closed


Profile Upload

Profiles are sets of parameters that control how the image sensor behaves. Sometimes profiles are fine-tuned again to suit a specific environment, or for generally better image. They are not updated as frequently as firmware, and a good profile can stay in use for a very long time. Occasionally, you may wish to load a new profile pack into your camera. This section tells you how to upgrade IP Camera's Profile Pack.

Click the [Profile Upload] item to display the "Profile Upload Page".

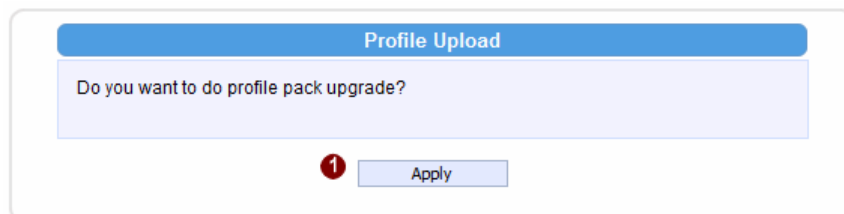

STEP1: Click **1** [Apply] button. The "Profile Pack Page-2" will be displayed as below.

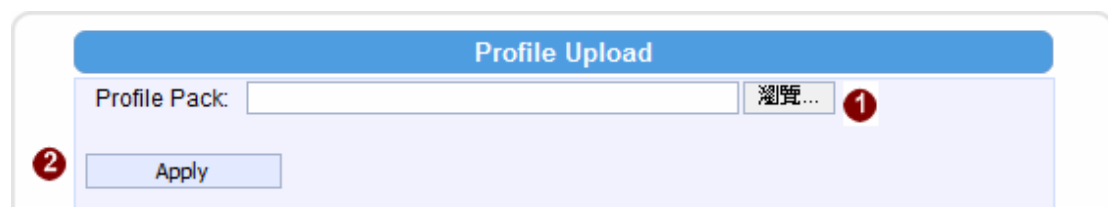

STEP2: Click the **1** [browse] to select the new profile pack and click [enter]. You can always get the latest version at our website.

STEP3: Click the **2** [Apply] button to start upgrading


Encoder Firmware V4.12.09 User's Manual

STEP5: The upgrade process window shows a progress bar indicating upgrade status.

STEP6: The system will reboot after profile upload.

Save & Reboot

This section tells you how to save all the settings and reboot this IP device. This is critical because some settings might not take effect before save and reboot. Click the [Save & Reboot] item to display the "Reboot Page".

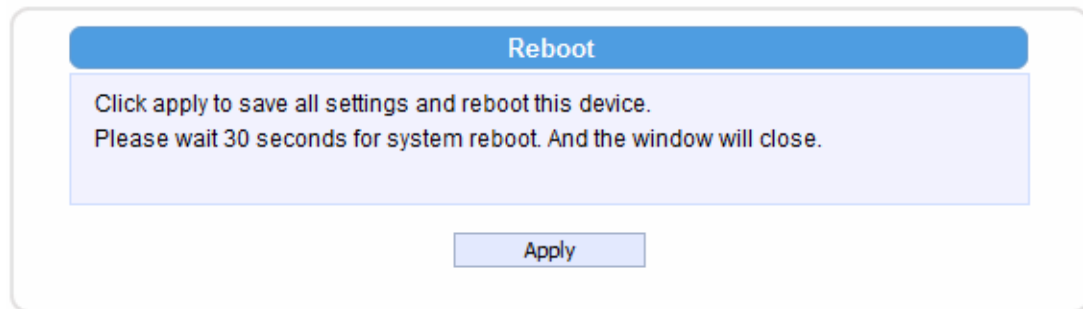

The Action LED indicator will go dark to indicate that the IP device is rebooting. After around 30 seconds, the Action LED will light up again to indicate that the reboot is completed.

Logout

Clicking this item allows you to log out of the IP device. Be sure to logout this IP device once your setting is completed.